

Instruction manual

Operating & Maintenance

4812159001_G.pdf

**Vibratory roller
CA2500/2800/3500/4000**

**Engine
Cummins QSB 4.5 (IIIA/T3)
Cummins QSB 4.5 (IIIB/T4i)**

**Serial number
10000137xxA009753 -
10000141xxA010772 -
10000145xxA009674 -
10000149xxA009649 -**

**10000138xxA010190 -
10000142xxA00xxxx -
10000146xxA010535 -
10000150xxA016902 -**



Translation of original instruction

*Reservation for changes
Printed in Sweden*



Table of Contents

| | |
|---|----|
| Introduction | 1 |
| The machine | 1 |
| Intended use | 1 |
| Warning symbols..... | 1 |
| Safety information | 1 |
| General | 2 |
| CE marking and Declaration of conformity..... | 3 |
| Safety - General instructions..... | 5 |
| Safety - when operating | 7 |
| Driving near edges | 7 |
| Work driving | 7 |
| Safety (Optional) | 9 |
| Air conditioning..... | 9 |
| Special instructions | 11 |
| Standard lubricants and other recommended oils and fluids | 11 |
| Higher ambient temperatures, above +40°C (104°F)..... | 11 |
| Temperatures | 11 |
| High pressure cleaning | 11 |
| Fire fighting | 12 |
| Roll Over Protective Structure (ROPS), ROPS approved cab | 12 |
| Welding | 12 |
| Battery handling | 12 |
| Jump starting (24V)..... | 13 |
| Technical specifications | 15 |
| Vibrations - Operator station | 15 |
| Noise level..... | 15 |
| Electrical system | 15 |
| Slopes | 15 |
| Dimensions, side view..... | 16 |
| Dimensions, top view | 17 |

| | |
|---|----|
| Weights and volumes | 18 |
| Working capacity | 18 |
| General | 24 |
| Fluid filled tires (Ballasted tires) | 24 |
| Hydraulic system | 25 |
| Air Conditioning / Automatic Climate Control (ACC) (Optional) | 25 |
| Tightening torque | 26 |
| Machine description | 27 |
| Diesel engine | 27 |
| Electrical system | 27 |
| Propulsion system/Transmission | 27 |
| Brake system | 27 |
| Steering system | 27 |
| Vibration system..... | 28 |
| Cab..... | 28 |
| FOPS and ROPS | 28 |
| Identification | 29 |
| Product and component plates | 29 |
| Product identification number on the frame | 29 |
| Machine plate..... | 30 |
| Explanation of 17PIN serial number..... | 30 |
| Engine plates | 31 |
| Decals..... | 32 |
| Location - decals | 32 |
| Safety decals..... | 33 |
| Info decals..... | 35 |
| Instruments/Controls | 36 |
| Control panel and controls | 36 |
| Function descriptions | 37 |
| Warning indication - membrane panel (Keypad)..... | 40 |

| | |
|---|----|
| Display explanations | 40 |
| Machine alarm..... | 43 |
| Dynapac Sub System (DSS)..... | 44 |
| "MAIN MENU" | 45 |
| "USER SETTINGS" | 45 |
| "SERVICE MENU" | 46 |
| "ABOUT" | 47 |
| Operator help when starting..... | 48 |
| Operator help Workmode..... | 48 |
| Display when activating choice via the button set..... | 49 |
| Instruments and controls, cab | 50 |
| Function description of instruments and controls in the cab | 51 |
| Using the cab controls..... | 52 |
| Defroster | 52 |
| Heat | 52 |
| AC/ACC | 52 |
| ACC - Control panel | 53 |
| Main display screen | 53 |
| ACC - Operation menus..... | 53 |
| Electrical system..... | 55 |
| Fuses in the main switchbox (Cummins) | 56 |
| Fuses at master switch (Cummins)..... | 56 |
| Fuse box at master switch (Cummins)..... | 57 |
| Fuses in cab..... | 57 |
| Operation | 59 |
| Before starting | 59 |
| Master switch - Switching on..... | 59 |
| Operator's seat - Adjustment..... | 59 |
| Belt reminder..... | 60 |
| Operator's seat, comfort - Adjustments..... | 60 |

| | |
|---|----|
| Control panel, adjustments | 61 |
| Parking brake | 61 |
| Display - Control..... | 62 |
| Interlock..... | 63 |
| Operator position..... | 63 |
| View | 64 |
| Starting | 65 |
| Starting the engine | 65 |
| Driving | 66 |
| Operating the roller | 66 |
| Machine with gear change in separate spring-return switch (gear position switch)..... | 66 |
| Machine with speed limiter (speed potentiometer) - Optional..... | 67 |
| Slopes | 68 |
| Machine with TC (Anti-Spin) | 69 |
| Slopes (TC (Anti-Spin))..... | 69 |
| Interlock/Emergency stop/Parking brake - Check | 70 |
| Dynapac Compaction Meter (DCM) including Active Bouncing Control (ABC) - Optional..... | 70 |
| Setting limit..... | 71 |
| Operation CMV | 72 |
| Vibration | 73 |
| Manual/Automatic vibration..... | 73 |
| Manual vibration - Switching on | 73 |
| Amplitude - Changeover | 74 |
| Adjustable (Variable) frequency - (Optional) | 74 |
| Braking | 75 |
| Normal braking..... | 75 |
| Emergency braking | 75 |
| Switching off..... | 76 |

| | |
|--|----|
| Parking | 76 |
| Chocking the drums | 76 |
| Master switch | 77 |
| Long-term parking | 79 |
| Engine | 79 |
| Battery | 79 |
| Air cleaner, exhaust pipe | 79 |
| Fuel tank | 79 |
| Hydraulic reservoir | 79 |
| Tires (All-weather) | 79 |
| Hoods, tarpaulin | 80 |
| Miscellaneous | 81 |
| Lifting | 81 |
| Locking the articulation | 81 |
| Lifting the roller | 82 |
| Lifting the roller with jack: | 82 |
| Unlocking the articulation | 83 |
| Towing/Recovering | 83 |
| Short distance towing with the engine running | 84 |
| Short distance towing when the engine is inoperative. | 85 |
| Towing the roller | 86 |
| Transport | 86 |
| Securing CA2500-CA4600 for loading | 87 |
| Operating instructions - Summary | 89 |
| Preventive maintenance | 91 |
| Acceptance and delivery inspection | 91 |
| Warranty | 91 |
| Maintenance - Lubricants and symbols | 93 |
| Maintenance symbols | 94 |
| Maintenance - Maintenance schedule | 95 |

| | |
|--|-----|
| Service and maintenance points | 95 |
| General | 95 |
| Periodic service (service message) - Optional | 96 |
| Every 10 hours of operation (Daily) | 97 |
| After the FIRST 50 hours of operation | 97 |
| Every 50 hours of operation (Weekly) | 97 |
| Every 250 / 750 / 1250 / 1750 hours of operation | 98 |
| Every 500 / 1500 hours of operation | 98 |
| Every 1000 hours of operation | 99 |
| Every 2000 hours of operation | 100 |
| Every other year | 101 |
| Service - Checklist | 102 |
| Maintenance, 10h | 103 |
| Scrapers - Check, adjustment | 103 |
| Scrapers, Pad-drum | 104 |
| Scrapers (Heavy duty), Pad drum | 104 |
| Flexible scrapers (Optional) | 105 |
| Air circulation - Check | 105 |
| Coolant level - Check | 106 |
| Diesel engine Check oil level | 106 |
| Fuel tank - Filling | 107 |
| Hydraulic reservoir - Check fluid level | 107 |
| Maintenance, first 50h | 109 |
| Hydraulic filter - Replacement | 109 |
| Drum cartridge - Oil change | 110 |
| Tires - Air pressure - Wheel nuts - Tightening | 111 |
| Rear axle differential - Oil change | 112 |
| Rear axle planetary gear - Oil change | 112 |
| Drum gearbox - Oil change | 113 |
| Steering hitch - Tightening | 113 |

| | |
|---|-----|
| Maintenance - 50h | 115 |
| Air cleaner | |
| - Check hoses and connections | 115 |
| Maintenance measures - 250 h | 117 |
| Drum cartridge - Checking the oil level | 117 |
| Rear axle differential - Check oil level..... | 118 |
| Rear axle planetary gears - Check oil level..... | 118 |
| Drum gearbox - Checking the oil level | 119 |
| Radiator - Check/Cleaning | 119 |
| Rubber elements and fastening screws - Check..... | 120 |
| Battery | |
| - Check condition | 120 |
| Air conditioning (Optional) | |
| - Inspection..... | 121 |
| Automatic Climate Control (Optional) - Inspection | 121 |
| Maintenance measures - 500 h | 123 |
| Drum cartridge - Checking the oil level | 123 |
| Air cleaner | |
| Checking - Change the main air filter | 124 |
| Backup filter - Change..... | 124 |
| Air cleaner | |
| - Cleaning..... | 125 |
| Rear axle differential - Check oil level..... | 126 |
| Rear axle planetary gears - Check oil level..... | 126 |
| Drum gearbox - Checking the oil level | 127 |
| Radiator - Check/Cleaning | 127 |
| Fuel pre-filter - Replacement..... | 128 |
| Replacing the fuel filter..... | 128 |
| Diesel engine - Oil and Filter change | 129 |
| Hood, hinges - Lubrication | 129 |
| Seat bearing - Lubrication | 130 |
| Maintenance - 1000h | 131 |

| | |
|---|-----|
| Hydraulic filter - Replacement | 131 |
| Drum cartridge - Checking the oil level | 132 |
| Air cleaner | |
| Checking - Change the main air filter | 133 |
| Backup filter - Change..... | 134 |
| Air cleaner | |
| - Cleaning..... | 134 |
| Rear axle differential - Oil change | 135 |
| Rear axle planetary gear - Oil change | 135 |
| Drum gearbox - Oil change | 136 |
| Radiator - Check/Cleaning | 136 |
| Fuel pre-filter - Replacement..... | 137 |
| Replacing the fuel filter..... | 137 |
| Diesel engine - Oil and Filter change | 138 |
| Seat bearing - Lubrication | 139 |
| Hydraulic reservoir - Draining..... | 139 |
| Fuel tank - Draining (Optional) | 140 |
| Air conditioning (Optional) | |
| Fresh air filter - Change | 140 |
| Steering hitch - Tightening | 141 |
| Maintenance - 2000h | 143 |
| Hydraulic reservoir - Oil change | 143 |
| Hydraulic filter - Replacement..... | 144 |
| Drum cartridge - Oil change | 145 |
| Air cleaner | |
| Checking - Change the main air filter | 145 |
| Backup filter - Change..... | 146 |
| Air cleaner | |
| - Cleaning..... | 147 |
| Rear axle planetary gear - Oil change | 147 |
| Rear axle differential - Oil change | 148 |
| Drum gearbox - Oil change | 149 |

| | |
|---|-----|
| Radiator - Check/Cleaning | 149 |
| Fuel pre-filter - Replacement..... | 150 |
| Replacing the fuel filter..... | 150 |
| Diesel engine - Oil and Filter change | 151 |
| Seat bearing - Lubrication | 152 |
| Hydraulic reservoir - Draining..... | 152 |
| Fuel tank - Draining (Optional) | 153 |
| Air conditioning (Optional) | |
| Fresh air filter - Change | 153 |
| Automatic Climate Control (Optional) | |
| - Overhaul | 154 |
| Drying filter - Check..... | 154 |
| Steering hitch - Tightening | 155 |

Introduction

The machine

CA2500/2800/3500/4000 are models of Dynapac's medium-heavy soil compaction rollers. They are available in a D (smooth drum) and PD (padfoot) version.

Intended use

All types of base courses and subbase courses can be compacted. The PD version enables the use of either D or PD drums, which ensures greater flexibility for a wider range of applications.

The cab and safety-related accessories are described in this manual. Other accessories, such as tachograph, "Optimizer" (DCO) and "Analyzer" (DCA) are described in separate instructions.

Warning symbols



WARNING ! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.



CAUTION ! Marks a danger or hazardous procedure that can result in damage to the machine or property if the warning is ignored.

Safety information



It is recommended to at least train operators in handling and daily maintenance of the machine in accordance with the instruction manual. Passengers are not allowed on the machine, and you must sit in the seat when operating the machine.



The safety manual supplied with the machine must be read by all roller operators. Always follow the safety instructions. Do not remove the manual from the machine.



We recommend that the operator reads the safety instructions in this manual carefully. Always follow the safety instructions. Ensure that this manual is always easily accessible.



Read the entire manual before starting the machine and before carrying out any maintenance.



Ensure good ventilation (extraction of air by fan) where the engine is run indoors.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

General

This manual contains instructions for machine operation and maintenance.

The machine must be correctly maintained for maximal performance.

The machine should be kept clean so that any leakages, loose bolts and loose connections are discovered at as early a point in time as possible.

Inspect the machine every day, before starting. Inspect the entire machine so that any leakages or other faults are detected.

Check the ground under the machine. Leakages are more easily detected on the ground than on the machine itself.



THINK ENVIRONMENT ! Do not release oil, fuel and other environmentally hazardous substances into the environment. Always send used filters, drain oil and fuel remnants to environmentally correct disposal.

This manual contains instructions for periodic maintenance, where maintenance after every 10 and 50 hours of operation can be performed by the machine operator. Other maintenance intervals must be carried out by accredited (Dynapac) service personnel.



Additional instructions for the engine can be found in the manufacturer's engine manual.

Specific maintenance and checks on diesel engines must be carried out by the engine supplier's certified personnel.

CE marking and Declaration of conformity

(Applies to machines marketed in EU/EEC)

This machine is CE marked. This shows that on delivery it complies with the basic health and safety directives applicable for the machine in accordance with machinery directive 2006/42/EC and that it also complies with other regulations and directives applicable for this machine.

A "Declaration of conformity" is supplied with this machine, which specifies the applicable regulations and directives with supplements, as well as the harmonized standards and other regulations that are applied and according to the regulations must be declared in writing.

Safety - General instructions

(Also read the safety manual)



1. The operator must be familiar with the contents of the OPERATION section before starting the roller.
2. Ensure that all instructions in the MAINTENANCE section are followed.
3. Only trained and/or experienced operators are to operate the roller. Passengers are not permitted on the roller. Remain seated at all times when operating the roller.
4. Never use the roller if it is in need of adjustment or repair.
5. Only mount and dismount the roller when it is stationary. Use the intended footsteps, grips and rails. Always use the three-point grip (both feet and one hand, or one foot and both hands) when mounting or dismounting the machine. Never jump down from the machine.
6. The ROPS (Roll Over Protective Structure) should always be used when the machine is operated on unsafe ground.
7. Drive slowly in sharp bends.
8. Avoid driving across slopes. Drive straight up or straight down the slope.
9. Never operate with roller outside the edge, if the substrate does not have full bearing strength or is close to a slope. Avoid operating close to edges and ditches and the like as well as on poor ground conditions that influence the bearing strength and capacity to support the roller.
10. Make sure that there are no obstacles in the direction of travel, on the ground, in front of or behind the roller, or overhead.
11. Drive particularly carefully on uneven ground.
12. Use the safety equipment provided. The seat belt must be worn on machines fitted with ROPS/ROPS-cab.
13. Keep the roller clean. Clean any dirt or grease that accumulates on the operator platform immediately. Keep all signs and decals clean and legible.
14. Safety measures before refueling:
 - Stop the engine
 - Do not smoke.
 - No naked flames in the vicinity of the roller.
 - Earth the filling equipment nozzle to the tank opening to avoid sparks.
15. Before repairs or service:
 - Chock the drums/wheels.
 - Lock the articulation if necessary.
 - Place blocks under overhanging equipment, such as strike-off blade and chip spreader.

16. **Hearing protection is recommended if the noise level exceeds 85 dB(A). The noise level can vary depending on the equipment on the machine and the surface the machine is being used on.**
17. **Do not make any changes or modifications to the roller that could affect safety. Changes are only to be made after written approval has been given by Dynapac.**
18. **Avoid using the roller before the hydraulic fluid has reached its normal working temperature. Braking distances can be longer than normal when the fluid is cold. See instructions in the STOP section.**
19. **For your own protection always wear:**
 - helmet
 - working boots with steel toecaps
 - ear protectors
 - reflecting clothing/high visibility jacket
 - working gloves

Safety - when operating



Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines. The operator may allow a person to remain in the risk zone, however he/she must be attentive and operate the machine only when the person is fully visible or has given a clear indication of where he or she is.



Avoid driving across a slope. Drive straight up and down sloping ground.

Driving near edges



Never operate with roller outside the edge, if the substrate does not have full bearing strength or is close to a slope.



Keep in mind that the machine's center of gravity moves outwards when steering. For example, the center of gravity moves to the right when you steer to the left.

Work driving

Avoid operating close to edges and ditches and the like as well as on poor ground conditions that influence the bearing strength and capacity to support the roller. Pay attention to potential obstacles above the machine, such as overhead cables and the branches of trees etc.

Pay particular attention to the stability of the substrate when compacting close to edges and holes. Do not compact with a large overlap from the previous track in order to maintain roller stability. Consider other compaction methods such as remote-control or a walk-behind roller close to steep slopes or where the bearing strength of the substrate is unknown.



To exit the cab in an emergency, release the hammer on the rear right post and break the rear window.



It is recommended that ROPS (Roll Over Protective Structure) or a ROPS-approved cab is always used when driving on slopes or unsafe ground. Always wear a seat belt.

Safety (Optional)

Air conditioning

The system described in this manual is an AC/ACC type (Automatic climate control)

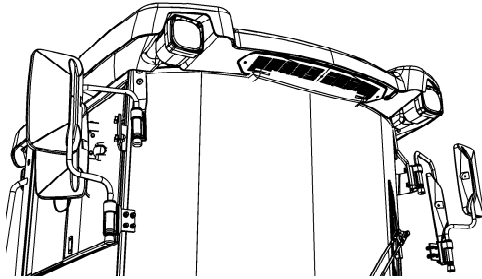


Fig. Cab



The system contains pressurized refrigerant. It is forbidden to release refrigerants into the atmosphere.



The cooling system is pressurized. Incorrect handling can result in serious personal injury. Do not disconnect or undo the hose couplings.



The system must be recharged with approved refrigerant as required by authorized personnel.

The refrigerant contains a tracing agent, enabling leak-tracing to be performed using UV light.

The condenser is located together with other radiators, and the drying filter is located on the right-hand side of the radiator stand.

Special instructions

Standard lubricants and other recommended oils and fluids

Before leaving the factory, the systems and components are filled with the oils and fluids specified in the lubricant specification. These are suitable for ambient temperatures in the range -15°C to +40°C (5°F - 105°F).



The maximum ambient temperature for biological hydraulic fluid is +35°C (95°F).

Higher ambient temperatures, above +40°C (104°F)

For operation of the machine at higher ambient temperatures, however maximum +50°C (122°F), the following recommendations apply:

The diesel engine and hydraulic system can be run at this temperature using normal oil, but in other components that use transmission oil, Shell Spirax S3 AX85W/140, API GL-5 or equivalent must be used.

Temperatures

The temperature limits apply to standard versions of rollers.

Rollers equipped with additional equipment, such as noise suppression, may need to be more carefully monitored in the higher temperature ranges.

High pressure cleaning

Do not spray directly onto electrical components.



Do not use a high-pressure water jet on the instrument panel/display.



Detergent that can destroy electrical parts, or which is conductive, must not be used.



In certain cases there is an electrical control lever and associated electronic control unit (ECU) in the engine compartment, which must not be washed with a high-pressure jet or with any water at all. It is sufficient to wipe these off. The same applies to the engine electronic control unit (engine ECU).

Place a plastic bag over the fuel filler cap and secure

with a rubber band. This is to avoid high pressure water entering the vent hole in the filler cap. This could cause malfunctions, such as the blocking of filters.

Place a plastic bag over the exhaust pipe and secure with a rubber band to avoid water in the muffler.



Never aim the water jet directly at the fuel tank cap, or into exhaust pipe. This is particularly important when using a high-pressure cleaner.

Fire fighting

If the machine catches fire, use an ABC-class powder fire extinguisher.

A BE-class carbon dioxide fire extinguisher can also be used.

Roll Over Protective Structure (ROPS), ROPS approved cab



If the machine is fitted with a Roll Over Protective Structure (ROPS, or ROPS approved cab) never carry out any welding or drilling in the structure or cab.



Never attempt to repair a damaged ROPS structure or cab. These must be replaced with new ROPS structure or cabs.

Welding



When carrying out welding on the machine, the battery must be disconnected and the electronics disconnected from the electrical system.

If possible, remove the part(s) to be welded from the machine.

Battery handling



When removing batteries, always disconnect the negative cable first.



When fitting batteries, always connect the positive cable first.



Dispose of old batteries in an environmentally friendly way. Batteries contain toxic lead.



Do not use a quick-charger for charging the battery. This may shorten battery life.

Jump starting (24V)



Do not connect the negative cable to the negative terminal on the dead battery. A spark can ignite the oxy-hydrogen gas formed around the battery.



Check that the battery used for jump starting has the same voltage as the dead battery.

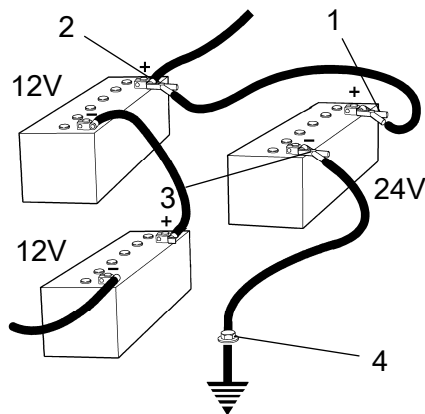


Fig. Jump starting

Turn the ignition and all power consuming equipment off. Switch off the engine on the machine which is providing jump start power.

Jump leads must have 24V.

First connect the jump start battery's positive terminal (1) to the flat battery's positive terminal (2). Then connect the jump start battery's negative terminal (3) to, for example, a bolt (4) or the lifting eye on the machine with the flat battery.

Start the engine on the power providing machine. Let it run for a while. Now try to start the other machine. Disconnect the cables in the reverse order.

Technical specifications

Vibrations - Operator station (ISO 2631)

The vibration levels are measured in accordance with the operational cycle described in EU directive 2000/14/EC on machines equipped for the EU market, with vibration switched on, on soft polymer material and with the operator's seat in the transport position.

Measured whole-body vibrations are below the action value of 0.5 m/s^2 as specified in Directive 2002/44/EC. (Limit is 1.15 m/s^2)

Measured hand/arm vibrations also were below the action level of 2.5 m/s^2 specified in the same directive. (Limit is 5 m/s^2)

Noise level

The noise level is measured in accordance with the operational cycle described in EU directive 2000/14/EC on machines equipped for the EU market, on soft polymer material with vibration switched on and the operator's seat in the transport position.

| | | |
|--|-----------------------|---------------------------|
| Guaranteed sound power level, L_{WA} | (IIIB/T4i) | 103 dB (A) |
| | CA2500-3500 (IIIA/T3) | 106 dB (A) |
| | CA4000 (IIIA/T3) | 104 dB (A) |
| Sound pressure level at the driver's ear (platform/ROPS), L_{pA} | | XX dB (A) |
| Sound pressure level at the operator's ear (cab), L_{pA} | | $72 \pm 3 \text{ dB (A)}$ |

Electrical system

Machines are EMC tested in accordance with EN 13309:2000 'Construction machinery'



Max 20° or 36%


Slopes

This angle has been measured on a hard, flat surface with the machine stationary.

The steering angle was zero, the vibration was switched OFF and all tanks were full.


Always take into consideration that loose ground, steering the machine, vibration on, machine speed across the ground and raising the center of gravity can all cause the machine to topple at smaller slope angles than those specified here.

Dimensions, side view

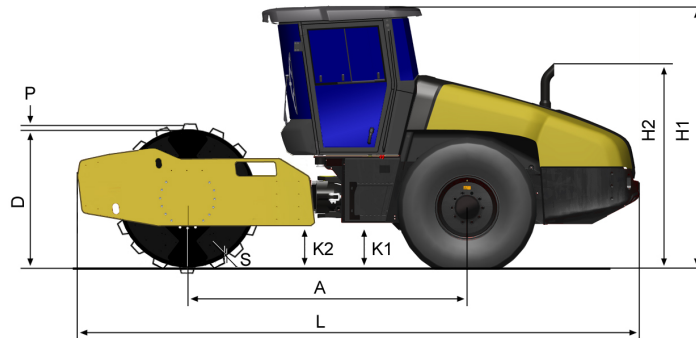

| | Dimensions | mm | in |
|----|---|-----------|-----------|
| A | Wheelbase, drum and wheel | 2990 | 118 |
| L | Length, standard equipped roller | 6000 | 236 |
| H1 | Height, with ROPS/cab | 2870 | 113 |
| H2 | Height, without ROPS | 2297 | 90.5 |
| D | Diameter, drum (D) | | |
| | CA2500/2800 | 1498 | 59 |
| | CA3500/4000 | 1518 | 60 |
| D | Diameter, drum (PD) | | |
| | CA2500 | 1490 | 58.5 |
| | CA3500/4000 | 1498 | 59 |
| S | Thickness, drum amplitude, Nominal (D) | | |
| | CA2500/2800 | 25 | 1.0 |
| | CA3500/4000 | 35 | 1.4 |
| S | Thickness, drum amplitude, Nominal (PD) | | |
| | CA2500 | 20 | 0.8 |
| | CA3500/4000 | 25 | 1.0 |
| P | Height, pads (PD) | 102 | 4.0 |
| K1 | Clearance, tractor frame | 450 | 18 |
| K2 | Clearance, drum frame | 450 | 18 |

Dimensions, top view

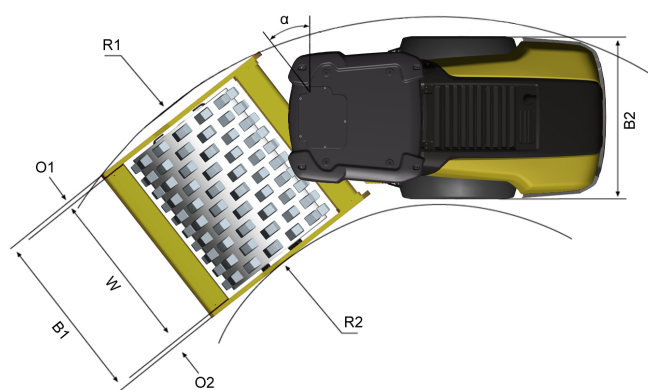

| | Dimensions | mm | in |
|----|---------------------------------|-----------|-----------|
| B | Width, standard equipped roller | 2304 | 91 |
| O1 | Overhang, left frame side | 87 | 3.4 |
| O2 | Overhang, right frame side | 87 | 3.4 |
| R1 | Turn radius, external | 5600 | 220 |
| R2 | Turning radius, inner | 3380 | 133 |
| W1 | Width, tractor section | 2130 | 84 |
| W2 | Width, drum | 2130 | 84 |

Weights and volumes

Weights

| Service weight | | ROPS | Cab |
|----------------|-------|-----------------|-----------------|
| CA2500D | (kg) | 10 100 / 10 800 | 10 300 / 11 000 |
| | (lbs) | 22 270 / 23 810 | 22 710 / 25 260 |
| CA2500PD | (kg) | 11 000 | 11 200 |
| | (lbs) | 24 250 | 24 700 |
| CA2800D | (kg) | 12 000 | 12 200 |
| | (lbs) | 26 460 | 26 900 |
| CA3500D/PD | (kg) | 11 900 | 12 100 |
| | (lbs) | 26 240 | 26 680 |
| CA4000D | (kg) | 13 100 / 14 200 | 13 300 / 14 400 |
| | (lbs) | 28 880 / 31 310 | 29 330 / 31 750 |
| CA4000PD | (kg) | 13 100 | 13 300 |
| | (lbs) | 28 880 | 29 330 |

Fluid volumes

| | | |
|-----------|------------|--------|
| Fuel tank | 272 liters | 72 gal |
|-----------|------------|--------|

Working capacity

Compaction data

Static linear load

| | | |
|------------|-----------------|---------------|
| CA2500D | 26 / 30 (kg/cm) | Std / Medium |
| | 146 / 168 (pli) | |
| CA2500PD | 30 (kg/cm) | |
| | 168 (pli) | |
| CA2800D | 35 (kg/cm) | |
| | 196 (pli) | |
| CA3500D/PD | 35 (kg/cm) | |
| | 196 (pli) | |
| CA4000D | 40 / 45 (kg/cm) | Medium / High |
| | 224 / 252 (pli) | |
| CA4000PD | 45 (kg/cm) | |
| | 252 (pli) | |

Technical specifications

| Amplitude | High | Low | Compaction data |
|---------------|--------------|------------------|-----------------|
| CA2500D/2800D | 1,8 | 0,9 (mm) | |
| | 0.07 | 0.035 (in) | |
| CA2500PD | 2,0 | 1,1 (mm) | |
| | 0.08 | 0.043 (in) | |
| CA3500D | 1,9 / 2,0 | 0,9 / 0,8 (mm) | Std / High |
| | 0.075 / 0.08 | 0.04 / 0.03 (in) | |
| CA3500PD | 1,8 / 2,0 | 1,0 / 1,0 (mm) | Std / High |
| | 0.07 / 0.08 | 0.04 / 0.04 (in) | |
| CA4000D | 2,0 / 2,1 | 0,8 / 1,0 (mm) | High / VM4 |
| | 0.08 / | 0.03 / 0.04 (in) | |
| CA4000PD | 2,0 | 1,0 (mm) | |
| | 0.08 | 0.04 (in) | |

| Vibration frequency | High amplitude | Low amplitude | Compaction data |
|---------------------|----------------|---------------------|-----------------|
| CA2500D/2800D | 33 | 34 (Hz) | |
| | 1 980 | 2 040 (vpm) | |
| CA3500D | 31 / 30 | 34 / 30 (Hz) | Std / High |
| | 1 860 / 1800 | 2 040 / 1 800 (vpm) | |
| CA2500PD/3500PD | 30 | 30 (Hz) | |
| | 1 800 | 1 800 (vpm) | |
| CA4000D/PD | 30 | 30 (Hz) | |
| | 1 800 | 1 800 (vpm) | |

| Centrifugal force | High amplitude | Low amplitude | Compaction data |
|-------------------|-----------------|----------------------|-----------------|
| CA2500D/2800D | 250 | 130 (kN) | |
| | 56 250 | 29 250 (lb) | |
| CA2500PD | 260 | 150 (kN) | |
| | 58 500 | 33 750 (lb) | |
| CA3500D | 280 / 270 | 170 / 120 (kN) | Std / High |
| | 63 000 / 60 750 | 38 250 / 27 000 (lb) | |
| CA3500PD | 260 / 280 | 150 (kN) | Std / High |
| | 58 500 / 63 000 | 33 750 (lb) | |
| CA4000D | 270 / 280 | 120 / 150 (kN) | High / VM4 |
| | 60 750 / 63 000 | 27 000 / 33 750 (lb) | |
| CA4000PD | 280 | 150 (kN) | |
| | 63 000 | 33 750 (lb) | |

Technical specifications

| Propulsion | CA2500 | D | PD |
|---|------------|--------------|--------------|
| ATC (AntiSpin) | | | |
| Speed range | km/h (mph) | 0-12 (0-7.5) | 0-12 (0-7.5) |
| Speed (max.) | | | |
| TC - Limited Slip Rear axle | | | |
| 1st gear | km/h (mph) | 5,5 (3.5) | 5 (3) |
| 2nd gear | km/h (mph) | 8 (5) | 6,5 (4) |
| 3rd gear | km/h (mph) | 7,5 (4.5) | 7,5 (4.5) |
| 4th gear | km/h (mph) | 11,5 (7) | 12,5 (8) |
| TC - NoSpin Rear axle | | | |
| 1st gear | km/h (mph) | 4,5 (3) | 4 (2.5) |
| 2nd gear | km/h (mph) | 6 (3.5) | 7 (4.5) |
| 3rd gear | km/h (mph) | 6,5 (4) | 8 (5) |
| 4th gear | km/h (mph) | 9,5 (6) | 12,5 (8) |
| Dual speed | | | |
| 1st gear | km/h (mph) | 6 (3.5) | 5 (3) |
| 2nd gear | km/h (mph) | 7,5 (4.5) | 8 (5) |
| Climbing capacity (theoretical) without vibration | % | 59 | 58 |

| Propulsion | CA2800 | D |
|---|------------|--------------|
| ATC (AntiSpin) | | |
| Speed range | km/h (mph) | 0-12 (0-7.5) |
| Speed (max.) | | |
| TC - Limited Slip Rear axle | | |
| 1st gear | km/h (mph) | 4,5 (3) |
| 2nd gear | km/h (mph) | 6 (3.5) |
| 3rd gear | km/h (mph) | 7,5 (4.5) |
| 4th gear | km/h (mph) | 12 (7.5) |
| TC - NoSpin Rear axle | | |
| 1st gear | km/h (mph) | 4 (2.5) |
| 2nd gear | km/h (mph) | 5,5 (3.5) |
| 3rd gear | km/h (mph) | 6 (3.5) |
| 4th gear | km/h (mph) | 10 (6) |
| Dual speed | | |
| 1st gear | km/h (mph) | 5 (3) |
| 2nd gear | km/h (mph) | 8 (5) |
| Climbing capacity (theoretical) without vibration | % | 56 |

| Propulsion | CA3500 | D | PD |
|---|------------|--------------|--------------|
| ATC (AntiSpin) | | | |
| Speed range | km/h (mph) | 0-12 (0-7.5) | 0-12.5 (0-8) |
| Speed (max.) | | | |
| TC - Limited Slip Rear axle | | | |
| 1st gear | km/h (mph) | 4,5 (3) | 5 (3) |
| 2nd gear | km/h (mph) | 6 (3.5) | 6,5 (4) |
| 3rd gear | km/h (mph) | 7,5 (4.5) | 7,5 (4.5) |
| 4th gear | km/h (mph) | 12 (7.5) | 12,5 (8) |
| TC - NoSpin Rear axle | | | |
| 1st gear | km/h (mph) | 4 (2.5) | 4 (2.5) |
| 2nd gear | km/h (mph) | 5,5 (3.5) | 6 (3.5) |
| 3rd gear | km/h (mph) | 6 (3.5) | 6 (3.5) |
| 4th gear | km/h (mph) | 10 (6) | 10 (6) |
| Dual speed | | | |
| 1st gear | km/h (mph) | 5 (3) | 5 (3) |
| 2nd gear | km/h (mph) | 8 (5) | 8 (5) |
| Climbing capacity (theoretical) without vibration | % | 55 | 51 |

| Propulsion | CA4000 | D | PD |
|---|------------|--------------|--------------|
| ATC (AntiSpin) | | | |
| Speed range | km/h (mph) | 0-12 (0-7.5) | 0-12.5 (0-8) |
| Speed (max.) | | | |
| TC - Limited Slip Rear axle | | | |
| 1st gear | km/h (mph) | 5 (3) | 5 (3) |
| 2nd gear | km/h (mph) | 6 (3.5) | 6,5 (4) |
| 3rd gear | km/h (mph) | 7,5 (4.5) | 7,5 (4.5) |
| 4th gear | km/h (mph) | 12 (7.5) | 12,5 (8) |
| TC - NoSpin Rear axle | | | |
| 1st gear | km/h (mph) | 4 (2.5) | 4 (2.5) |
| 2nd gear | km/h (mph) | 5,5 (3.5) | 6 (3.5) |
| 3rd gear | km/h (mph) | 6 (3.5) | 6 (3.5) |
| 4th gear | km/h (mph) | 10 (6) | 10 (6) |
| Dual speed | | | |
| 1st gear | km/h (mph) | 5 (3) | 5 (3) |
| 2nd gear | km/h (mph) | 8 (5) | 8 (5) |
| Climbing capacity (theoretical) without vibration | % | 45 | 46 |

General

Engine

| | | |
|------------------------------------|-----------------|---------------------------|
| Manufacturer/Model | Cummins QSB 4.5 | Water-cooled turbo diesel |
| Power output (SAE J1995), 2200 rpm | 82kW | 110 hp |
| | 97kW | 132 hp |
| | 119kW | 162 hp |
| Engine speed | | |
| - idling | 900 rpm | |
| - loading/unloading | 1600 rpm | |
| - work/transport | 2 200 rpm | |



Tier 4i/Stage IIIB Cummins engines require the use of Ultra Low Sulphur Diesel (ULSD) fuel, which has a sulphur content of 15 ppm (parts per million) or less. A higher sulphur content will cause operating problems and put the useful life of components at risk, which can lead to engine trouble.

Tire

Tire dimensions

Tire pressure

| | | |
|--------------|---------------------|------------------------------|
| Std type | 23.1 x 26.0 - 8 ply | 110 kPa (1.1 kp/cm) (16 psi) |
| Tractor type | 23.1 x 26.0 - 8 ply | 110 kPa (1.1 kp/cm) (16 psi) |

Fluid filled tires (Ballasted tires)

Fluid filled tires can be used on machines as extra equipment.



Liquid-filled tires (extra weight up to 500 kg/tyre, 1100 lbs/tyre). When servicing, bear this extra weight in mind. (Anti-freeze to -30°C (-22°F))

Electrical system

| | | |
|------------|------------|---|
| Battery | | 24V (2x12V 74Ah) |
| Alternator | (IIIB/T4i) | 24V 70A |
| | (IIIA/T3) | 24V 40A |
| Fuses | | See the Electrical system section - fuses |

Hydraulic system

| Opening pressure | MPa |
|----------------------|-----|
| Drive system | 42 |
| Supply system | 2.2 |
| Vibration system | 42 |
| Control systems | 20 |
| Brake release | 1.7 |
| Hydraulic fan system | 19 |

Air Conditioning / Automatic Climate Control (ACC) (Optional)

The system described in this manual is an AC/ACC type (Automatic Climate Control). ACC is a system that maintains the set temperature in the cab, provided windows and doors are kept closed.

The system contains fluorinated greenhouse gases.

Coolant designation: HFC-134a

Coolant weight when full: 1.350 kg

CO₂-equivalent: 1.930 ton

GWP: 1430

Tightening torque

Tightening torque in Nm for oiled or dry bolts tightened with a torque wrench.

Metric coarse screw thread, bright galvanized (fzb):

STRENGTH CLASS:

| M - thread | 8.8, Oiled | 8.8, Dry | 10.9, Oiled | 10.9, Dry | 12.9, Oiled | 12.9, Dry |
|------------|------------|----------|-------------|-----------|-------------|-----------|
| M6 | 8,4 | 9,4 | 12 | 13,4 | 14,6 | 16,3 |
| M8 | 21 | 23 | 28 | 32 | 34 | 38 |
| M10 | 40 | 45 | 56 | 62 | 68 | 76 |
| M12 | 70 | 78 | 98 | 110 | 117 | 131 |
| M14 | 110 | 123 | 156 | 174 | 187 | 208 |
| M16 | 169 | 190 | 240 | 270 | 290 | 320 |
| M20 | 330 | 370 | 470 | 520 | 560 | 620 |
| M22 | 446 | 497 | 626 | 699 | 752 | 839 |
| M24 | 570 | 640 | 800 | 900 | 960 | 1080 |
| M30 | 1130 | 1260 | 1580 | 1770 | 1900 | 2100 |

Metric coarse thread, zinc-treated (Dacromet/GEOMET):

STRENGTH CLASS:

| M - thread | 10.9, Oiled | 10.9, Dry | 12.9, Oiled | 12.9, Dry |
|------------|-------------|-----------|-------------|-----------|
| M6 | 12,0 | 15,0 | 14,6 | 18,3 |
| M8 | 28 | 36 | 34 | 43 |
| M10 | 56 | 70 | 68 | 86 |
| M12 | 98 | 124 | 117 | 147 |
| M14 | 156 | 196 | 187 | 234 |
| M16 | 240 | 304 | 290 | 360 |
| M20 | 470 | 585 | 560 | 698 |
| M22 | 626 | 786 | 752 | 944 |
| M24 | 800 | 1010 | 960 | 1215 |
| M30 | 1580 | 1990 | 1900 | 2360 |

Machine description

Diesel engine

The machine is equipped with a water-cooled, straight four cylinder, four-stroke, turbocharged diesel engine with direct injection and a charge air cooler.

(IIIB/T4i)

The engine is also equipped with cooled exhaust gas recirculation (CEGR) and electronically controlled exhaust gas recirculation valves (EGR) together with a Cummins® diesel oxidation catalysator (DOC) system for exhaust after-treatment.

Electrical system

The machine has the following control units (ECU, Electronic Control Unit) and electronic units.

- Main ECU (for the machine)
- Diesel engine control unit (ECM)
- I/O board (Control board)
- Display

Propulsion system/Transmission

The propulsion system is a hydrostatic system with a hydraulic pump supplying two motors connected in parallel, one for the rear axle and one for the drum.

The speed of the machine is proportional to the angle of the control lever (the deflection of the forward/reverse lever regulates the speed). A speed selector and anti-spin system are available as options.

Brake system

The brake system comprises a service brake, secondary brake and parking brake. The service brake system produces retardation of the propulsion system, i.e. hydrostatic braking.

Secondary/Parking brake

The secondary and parking brake system comprises sprung disc brakes on the rear axle and the drum gear which are disengaged by hydraulic pressure.

Steering system

The steering system is a load-sensing hydrostatic system. The control valve on the steering column distributes the flow to the steering cylinders at the articulated joint. The steering angle is proportional to the amount the steering wheel is turned.

On certain markets, the machine is also equipped with an emergency steering system.

Vibration system

The vibration system is a hydrostatic system in which a hydraulic motor drives the eccentric shaft, which generates the drum's vibrations.

High amplitude or low amplitude are determined by the hydraulic motor's direction of rotation. Optional systems for variable amplitude or variable frequency are available.

Cab

The cab has a heating and ventilation system, with defrosters for all windows. Air conditioning is available as an accessory.

Emergency exit

The cab has two emergency exits: the door and the rear cab window, which can be broken with the emergency hammer located in the cab.

FOPS and ROPS

FOPS is the abbreviation for "Falling Object Protective Structure" (roof protection) and ROPS is the abbreviation for "Roll Over Protective Structure".


The cab is approved as a protective cab in accordance with the FOPS and ROPS standards.

If any part of the cab's or the FOPS/ROPS structure's protective construction displays plastic deformation or cracks, the cab or the FOPS/ROPS structure must be replaced immediately.

Never perform unauthorized modifications on the cab or FOPS/ROPS structure without first having discussed the modification with Dynapac's production unit. Dynapac determines whether the modification could result in the approval according to the FOPS/ROPS standards becoming invalid.

Identification

Product and component plates

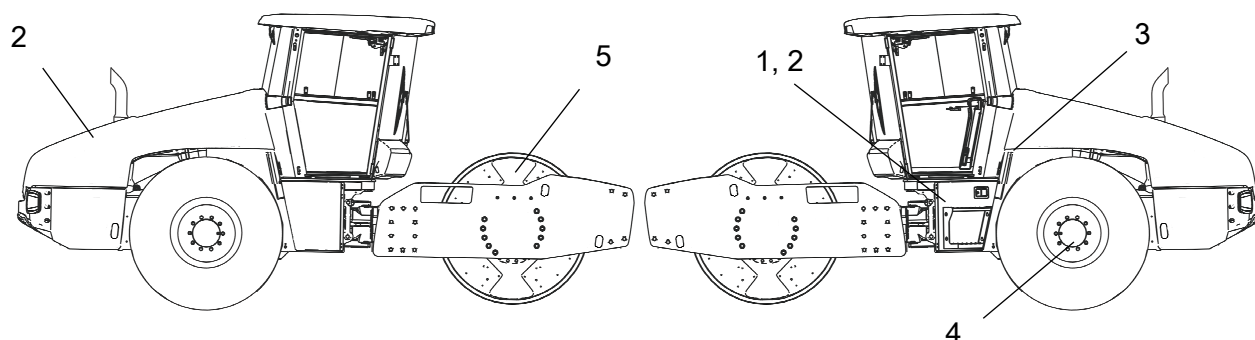

1. Product plate - Product Identification Number (PIN), model/type designation
2. Engine plate - Type description, product and serial numbers
3. Cab/ROPS plate - Certification, product and serial numbers
4. Component plate, rear axle - Product and serial numbers
5. Component plate, drum - Product and serial numbers

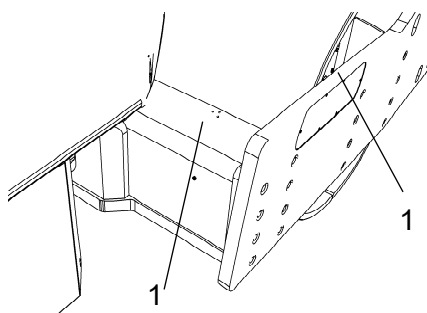


Fig. Front frame
1. PIN

Product identification number on the frame

The machine PIN (product identification number) (1) is punched on the right edge of the front frame or the upper edge of the right frameside.

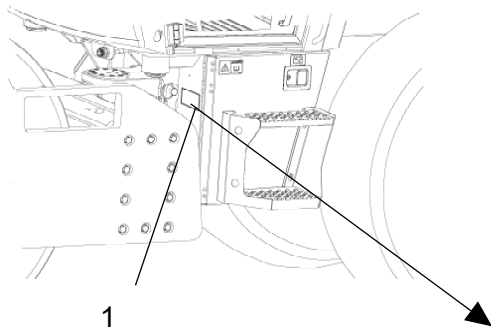




Fig. Operator's platform
1. Machine plate

Machine plate

The machine type plate (1) is attached to the front left side of the frame, beside the steering joint.

The plate specifies the manufacturer's name and address, the type of machine, the PIN product identification number (serial number), service weight, engine power and year of manufacture. (If the machine is delivered outside the EU there are no CE markings, and on some machines the year of manufacture may not be specified.)

| | | | | |
|---|----------------|---|----------------------------|---|
|  | | Dynapac Compaction Equipment AB Box 504, SE-371 23 Karlskrona Sweden | |  |
| Product Identification Number | | | | |
| Designation | Type | Rated Power | Max axle load front / rear | |
| | | kW | kg | |
| Gross machinery mass | Operating mass | Max ballast | Year of Mfg | |
| kg | kg | kg | | |
| Made in Sweden | | | | |
| 4811 0021 22 | | | | |

Please state the machine's PIN when ordering spares.

| | | | | | |
|-----|-------|---|---|---|--------|
| 100 | 00123 | V | x | A | 123456 |
| A | B | C | F | | |

Explanation of 17PIN serial number

A= Manufacturer

B= Family/Model

C= Check letter

F= Serial number


Engine plates

The engine type plates (1) are affixed to the top and on the right side of the engine.

The plates specify the type of engine, serial number and the engine specification.

Please specify the engine serial number when ordering spares. Refer also to the engine manual.

On certain machines there may be an engine plate along with the machine plate, if the original plate on the engine is covered with extra equipment/accessories.

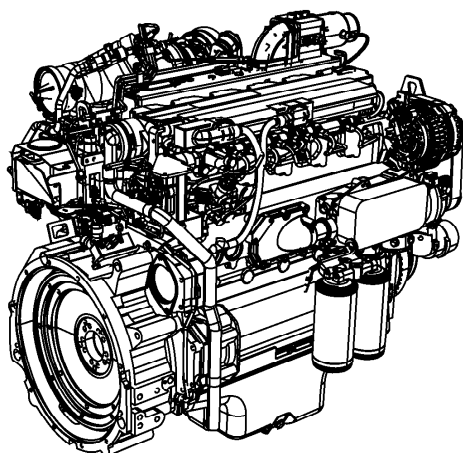

Decals

Location - decals

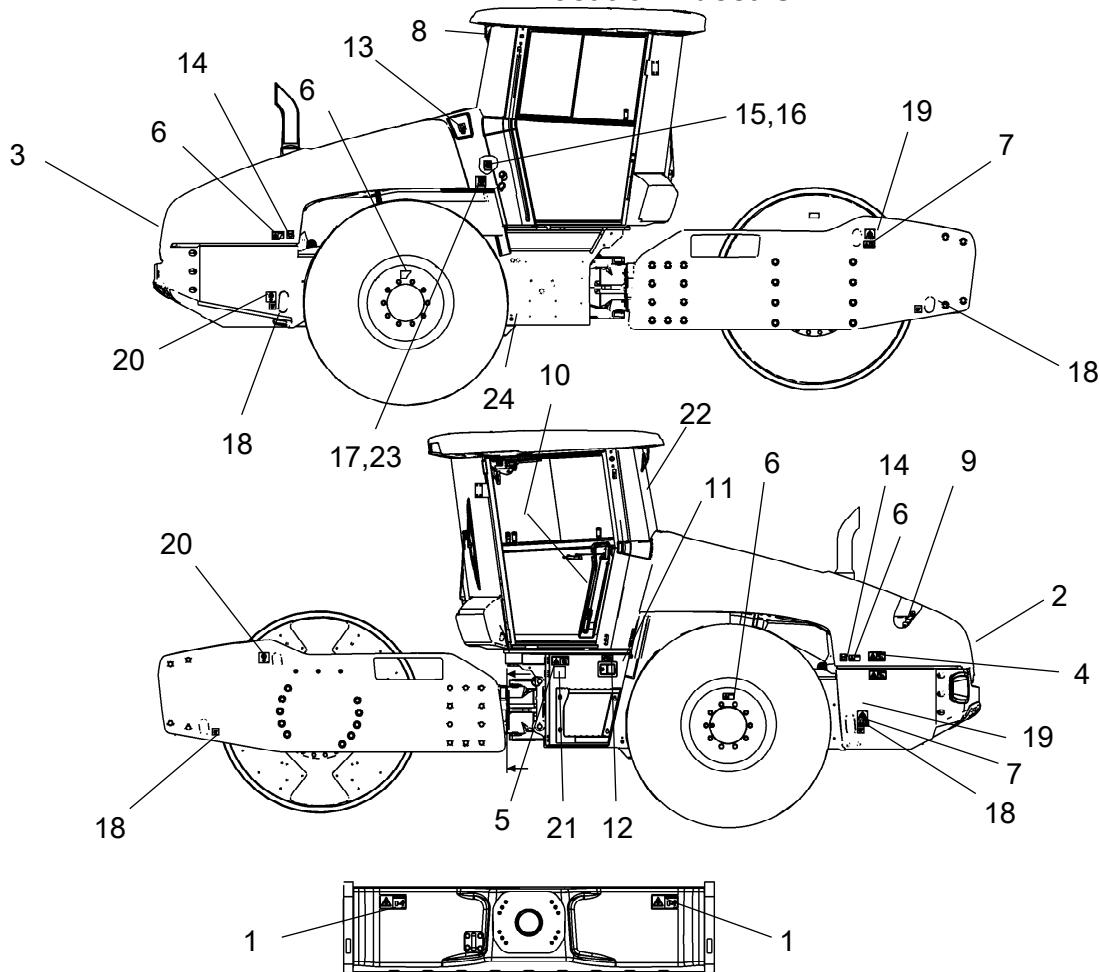


Fig. Location, decals and signs


| | | | |
|--|--------------------------|---|----------------------------|
| 1. Warning, Crush zone | 4700903422 | 12. Master switch | 4700904835 |
| 2. Warning, Rotating engine components | 4700903423 | 13. Coolant | 4700388449 |
| 3. Warning, Hot surfaces | 4700903424 | 14. Air pressure | 4700385080 |
| 4. Warning, Brake release | 4700904895 | 15. Hydraulic fluid level | 4700272373 |
| 5. Warning, Instruction manual | 4700903459 | 16. Hydraulic fluid Biological hydraulic fluid | 4700272372 4700792772 |
| 6. Warning, Ballasted tires | 4700903985 | 17. Diesel fuel | 4700991658* |
| 7. Warning, Locking | 4700908229 4812125363 | 18. Fixing point | 4811000345** 4700382751 |
| 8. Warning, Toxic gas | 4700904165 | 19. Hoisting plate | 4700904870 |
| 9. Warning, Starting gas | 4700791642 | 20. Lifting point | 4700588176 |
| 10. Handbook compartment | 4700903425 | 21. Sound power level | 4700791273/74/76 |
| 11. Battery voltage | 4700393959 | 22. Emergency exit | 4700903590 |
| | | 23. Fuel with ultra low sulphur content | 4811000344** |
| | | 24. Draining fuel | 4811000443 |

* (IIIA/T3)

** (IIIB/T4i)

Safety decals


Always make sure that all safety decals are completely legible, and remove dirt or order new decals if they have become illegible. Use the part number specified on each decal.

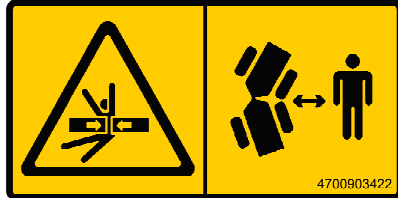

4700903422

Warning - Crush zone, articulation/drum.


Maintain a safe distance from the crush zone.

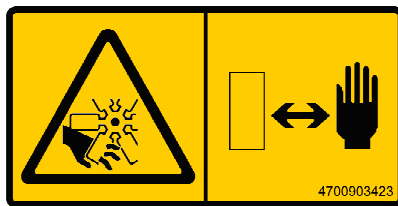

4700903423

Warning - Rotating engine components.


Keep your hands at a safe distance.

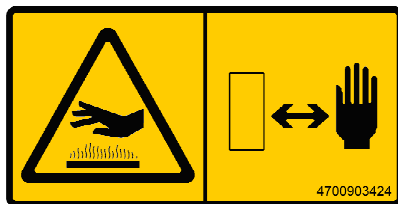

4700903424

Warning - Hot surfaces in the engine compartment.

Keep your hands at a safe distance.

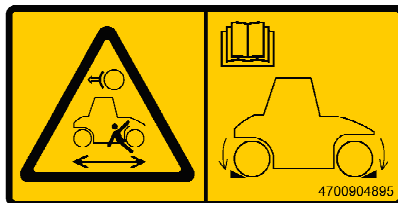


4700904895

Warning - Brake disengagement

Study the towing chapter before disengaging the brakes.

Danger of being crushed.

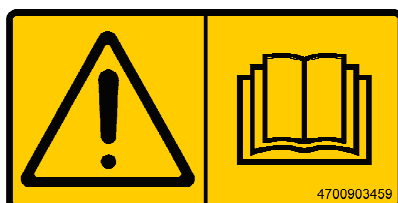

4700903459

Warning - Instruction manual

The operator must read the safety, operation and maintenance instructions before operating the machine.



4700903985

Warning - Ballasted tire.

Read the instruction manual.

More information in section in Technical specifications.




4700908229

Warning - Risk of crushing

The articulation must be locked when lifting.

Read the instruction manual.

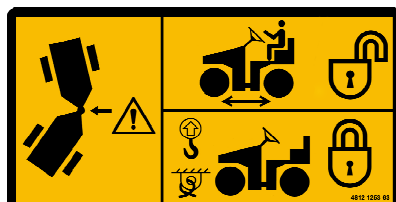


4812125363

Warning - Locking

The articulation must be locked during transport.

Read the instruction manual.

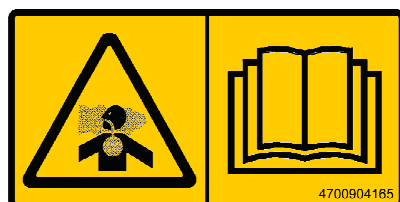

4700904165

Warning - Toxic gas (option, ACC)

Read the instruction manual.






4700903590


-Emergency exit

Info decals


Sound power level

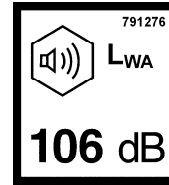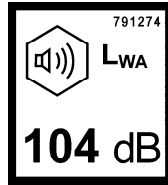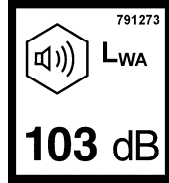


Hoisting plate

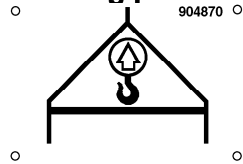


Handbook compartment

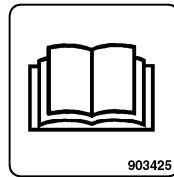


Master switch

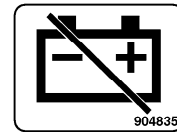


Hydraulic fluid

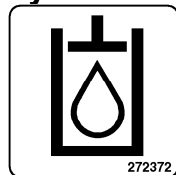


Biological hydraulic fluid

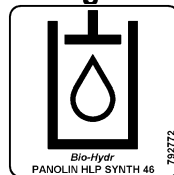


Securing point

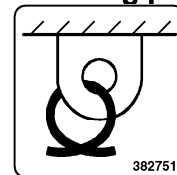

Lifting point

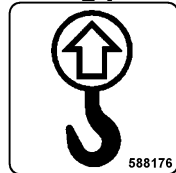

Tire pressure

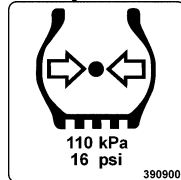

Battery voltage




Diesel fuel



Fuel with ultra low sulphur content




(IIIB/T4i)

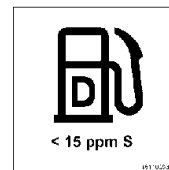

Instruments/Controls



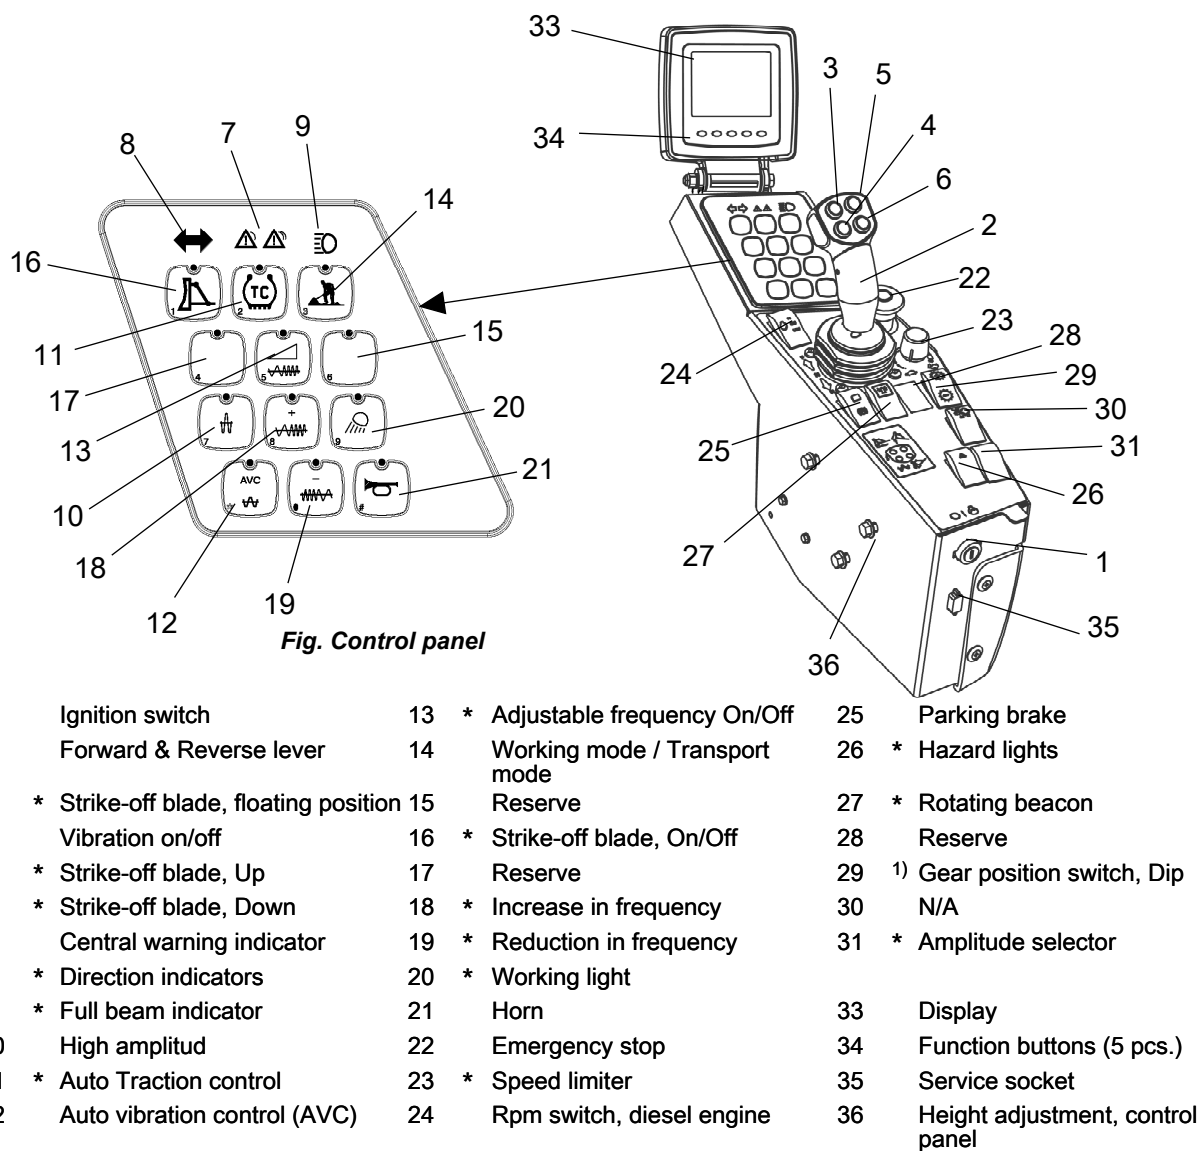












Control panel and controls





 
 








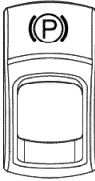

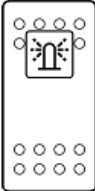
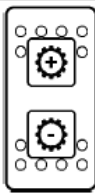






* Optional

1) Not valid with Auto Traction Control (11)

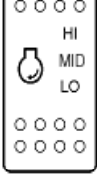Function descriptions

| No | Designation | Symbol | Function |
|----|--|---|---|
| 1 | Ignition key |  | The electric circuit is broken. |
| | |  | All instruments and electric controls are supplied with power. |
| | |  | Starter motor activation. |
| | | | To start: Turn ignition key to the right until the display LIGHTS UP, and wait until the displayed roller GOES OFF and changes to the status image. |
| 2 | Forward/Reverse lever |  | NB! When starting the machine, the lever must be in neutral. The engine cannot be started if the forward/reverse lever is in any other position. The forward/reverse lever controls both the roller's driving direction and speed. When the lever is moved forward, the roller moves forward; when the lever is move backward, the roller moves backward. The roller's speed is proportional to the distance the lever is from the neutral position. The further the lever is from the neutral position, the higher the speed. |
| 3 | Strike-off blade, floating position (Optional) |  | The float mode is activated by pressing and holding the button for 2 seconds while the machine is in Working mode (14) and Strike-off blade (16) is activated. |
| 4 | Vibration on/off |  | First push will start vibrations, second push will stop vibrations. |
| 5 | Strike-off blade, up (Optional) |  | Raises the strike-off blade when Strike-off blade (16) is activated. |
| 6 | Strike-off blade, down (Optional) |  | Lowers the strike-off blade when Working mode (14) and Strike-off blade (16) on the machine are activated. |
| 7 | Central warning indication |  | General fault indication. See the display (33) for description of the fault. For detailed information about the fault indication, see the table "Warning indication - membrane panel". |
| | |  | Yellow warning light - "less serious fault" |
| | |  | Warning lights red - "serious fault" |
| 8 | Direction indicator (Optional) |  | Shows direction indicators activated (Activated via the steering column switch). |
| 9 | Main beam indicator (Optional) |  | Shows main beam activated (Activated via the steering column switch). |
| 10 | Amplitude selector, high amplitude |  | Activation produces high amplitude. (Low amplitude is the basic mode if the button is not activated.) |
| 11 | Auto traction control, TC (Anti-spin) (Optional) |  | If the machine is equipped with TC (Anti-spin), this is activated when starting up. (TC can be disengaged). The speed limiter (23) is used to set the maximum speed at full deflection of the forward/reverse lever. |

| No | Designation | Symbol | Function |
|----|--|---|---|
| 12 | Automatic vibration control (AVC) |  | When activated, the vibration is switched on automatically when the roller's speed is ≥ 1.8 km/h (1.1 mph) and disengaged at a speed of 1.5 km/h (0.9 mph). |
| 13 | Adjustable frequency On/Off (Optional) |  | Activates adjustable frequency, see also buttons 18 and 19. Deactivated (LED off) produces fixed set vibration frequencies for the machine. |
| 14 | Working mode / Transport mode |  | Activates working mode, which makes it possible to use vibration and lower the strike-off blade (optional). The roller always starts in transport mode. |
| 15 | Reserve | | |
| 16 | Strike-off blade On/Off (Optional) |  | Activates the strike-off blade and its functions, also requires working mode (14) to be activated. |
| 17 | Reserve | | |
| 18 | Frequency, increase (Optional) |  | Increases vibration frequency |
| 19 | Frequency, decrease (Optional) |  | Decreases vibration frequency |
| 20 | Working lights (Optional) |  | By activating the working lights will turn ON. |
| 21 | Horn |  | Press to sound the horn. |
| 22 | Emergency stop |  | Brakes the roller and switches off the engine. The power supply goes off. NB! When starting the machine, the emergency stop must be inactive. |
| 23 | Speed limiter (Optional) |  | Limitation of the machine's max. speed (max. speed is obtained with full deflection of the F/R lever). Set the knob to the position for the desired max. speed. |
| 24 | Rpm switch, diesel engine |  | Three-position switch for idling (LO), intermediate speed (MID) and working speed (HI). NOTE: The lever must be in neutral (LO) when starting the machine. The engine also runs at low speed when stationary, more than approx. 10 seconds if the F&R lever is in neutral. If the F&R lever is moved out of neutral the speed will increase to the set speed again. If the machine has a fuel optimization system, MID is replaced by ECO (and the switch is green). |
| 25 | Parking brake |  | When pressed, the parking brake is activated. To release the brakes, slide the red part back (towards you) and change the position of the switch. NOTE: When starting the machine, the parking brake must be activated. |
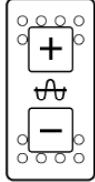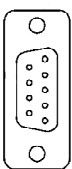
| No | Designation | Symbol | Function |
|----|------------------------------|---|---|
| | |  | To activate the brakes, press the top of the switch to change the position of the switch. To release the brakes, press down the red part at the same time as the switch and change the position of the switch. NOTE: When starting the machine, the parking brake must be activated. |
| 26 | Hazard indicators (Optional) |  | Activate the hazard warning light by depressing the button. |
| 27 | Rotating beacon (Optional) |  | Activate the rotating beacon by pressing the switch. (If the machine has two rotating beacons, both are activated) |
| 28 | Reserve | | |
| 29 | Gear position switch, Dip |  | Activates the four different gear positions. (1) Hare, (2) Drum spin, (3) Wheelspin and (4) Tortoise. The current gear position is shown in the display by means of the following figures. |
| | |  | 1: Transport mode |
| | |  | 2: Used if the drum is slipping. |
| | |  | 3: Used if the rear tires are slipping. |
| | |  | 4: Working mode. |
| 30 | Reserve | | |
| 31 | Amplitude selector (DCO) |  | Only for machine equipped with "Compaction Optimizer". |
| 35 | Service socket |  | Diagnostic socket. Gateway is connected here to read the CAN-Open system. |

Warning indication - membrane panel (Keypad)

"Yellow" - Warning

- The engine has an alarm in category yellow (Alarm image shown in the display)
- Communication with the display is interrupted
- The fuel level is below <10%
- Charging absent

"Red" - Warning

- The engine has an alarm in category red (Alarm code shown in the display)
- Communication with the engine is interrupted
- The engine temperature is too high
- Low oil pressure in the engine
- The air filter is clogged
- The hydraulic fluid temperature is too high
- The hydraulic fluid filter is clogged

Flashes red continuously

(Alarm code shown in the display)

Display explanations



Fig. Start screen

When the ignition key is activated to position I, a start screen is visible in display. This is shown for a few seconds and then switches over to the status screen.

Before activating the starter motor, wait until the start image has changed to the status image (the machine is performing a system check while the start image is being displayed).

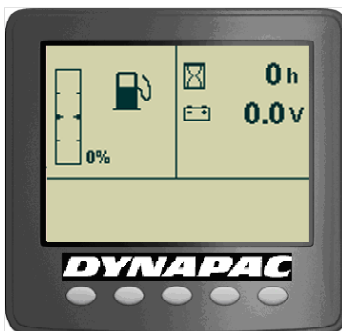


Fig. Status screen

The status image provides information on the fuel level, machine hours and voltage level. The fuel level is indicated as a percentage (%).

This screen is active until the Diesel engine is started or an active screen choice is made via the function buttons below the display.



Fig. Main screen/Working screen

If the engine is started before any active screen choice is made the display will switch over to main screen.

This screen gives an overview and is kept during work:

- The speed is shown in the middle of the display. (km/h or mph)
- Engine speed, vibration frequency (optional), CMV value for compaction meter (optional) and slope as a % (optional) are shown in the corners.



Fig. Main screen/Working screen with menu selection buttons (1)

A menu field is shown by pressing one of the menu select buttons. The field is visible for a short while, if no selection is made the field fades out. Menu field will appear again upon pressing either one of the selection buttons (1).

Example of menu field.








| | |
|---|---|
|   | Scroll/Selection buttons to choose between available functions. |
|  | Alarm log button to display engine and machine alarms. |
|  | Settings/Button select menu, which opens the main menu. Settings can be changed in the main menu. |
|  | Exit/Return button returns 1 step at once. Pressing the button (approx. 2 sec.) displays the main menu again. |



Fig. Temperature screen

The temperature screen shows the temperature of the engine (top of display) and hydraulic fluid (bottom of display). The values are shown in Celsius or Fahrenheit, depending on the choice of unit system.



Fig. Compaction meter display (CMV display)

A display for the compaction value (CMV value) can also be shown when the compaction meter (Option) is installed on the machine. Further information on this accessory is given in the Chapter "Operation".



When an engine alarm is activated, the alarm is shown on the display.

The engine alarm is sent out from the engine ECM, which handles the monitoring of the engine functions.

The message, which consists of an SPN and FMI code, can be interpreted via the engine supplier error code list.



 



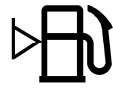




The alarm message shown is acknowledged by pressing the "OK" button on the display.



When a machine alarm is activated the alarm is shown on the display, plus a warning text that describes the alarm.

The alarm message shown is acknowledged by pressing the "OK" button on the display.

Machine alarm

| Symbol | Designation | Function |
|---|--|---|
|  | Warning symbol, hydraulic fluid filter | If the symbol is shown when the diesel engine is running at full speed, the hydraulic fluid filter must be changed. |
|  | Warning symbol, clogged air filter | If this symbol is shown when the engine is running at full speed, the air filter must be checked/replaced. |
|  | Warning symbol, battery charging | If the symbol is shown when the engine is running, then the alternator is not charging. Switch off the engine and locate the fault. |
|  | Warning symbol, engine temperature | If this symbol is shown, the engine is too hot. Stop the engine immediately and locate the fault. Refer also to the engine manual. |
|  | Warning symbol, hydraulic fluid temperature | This symbol is shown when the hydraulic fluid is too hot. Do not drive the roller; allow the fluid to cool by running the engine on idle, and then locate the fault. |
|  | Warning symbol, hydraulic fluid temperature (cold) | This symbol is shown when the hydraulic fluid is too cold for the use of vibrations at full speed. (The oil must over 5 degrees (C)) Is the optional ECO chosen you can vibrate in ECO mode even if the oil has not reached 5 degrees (C). |
|  | Warning symbol, low fuel level | If this symbol is shown, there is less than 10% of the fuel left. |
|  | Warning symbol, low oil pressure, diesel engine | If this symbol is shown, the engine's oil pressure is too low. Switch off the engine immediately. |
|  | Warning symbol, low coolant level | If this symbol is shown, fill with coolant/glycol and search for leaks. |
|  | Warning symbol, water in the fuel | If this symbol is shown, the engine must be stopped and the fuel pre-filter drained of water. |
|  | Warning symbol, low hydraulic fluid level | If this symbol is shown, fill with hydraulic fluid to the correct level and search for leaks. |

Dynapac Sub System (DSS)

| DSS code | Description | Note |
|----------|---------------------------|--|
| 1 | Speed sensor, front | Optional |
| 2 | Speed sensor, rear | |
| 3 | Inclination sensor | Optional |
| 4 | DCM | Optional |
| 5 | IO-Card | |
| 6 | Cooling fan speed sensor | |
| 7 | Vibration frequency meter | Supervision only active if Adjustable frequency or ECO available. Optional |
| 8 | Power group 1 | see Fuse 3 |
| 9 | Power group 2 | see Fuse 4 |
| 10 | Power group 3 | see Fuse 5 |
| 11 | Power group 4 | see Fuse 6 |
| 12 | DCO | Com Error Optional |
| 13 | Hydraulic temp sensor | Sensor data out of range |



Alarms received are logged and can be seen by selecting Display alarms.

Inactive faults disappear from the log when you restart the ignition.



Selection of Display alarms.

"ENGINE ALARM"

Logged engine alarms.

Stored in the engine ECU.





"MACHINE ALARM"

Logged machine alarms. These alarms come from the other systems on the machine.



"MAIN MENU"

In the main menu it is also possible to change some user and machine settings, access the service menu for calibration purposes (special service personnel only, requires pin code), and to see the version of installed software.




"USER SETTINGS"

Users can change the light settings, choose between the Metric or Imperial system, and set warning sounds On/Off.



Adjustment of the light and contrast settings on the display, including brightness of the panel light.

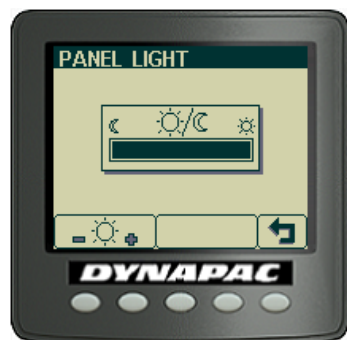

"SERVICE MENU"

The service menu is also accessible via the main menu for adjustments.

"ADJUSTMENTS"

"TESTMODES" - Installation personnel only, requires pin code.






"CALIBRATION" - service personnel only, requires password.

"EDC Calibration" used to calibrate the joystick and speed potentiometer.

"TX Program" only used to change software in the display and requires special equipment and know-how.

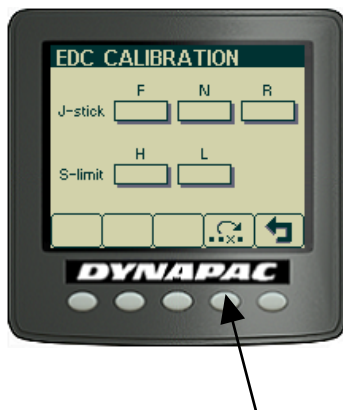

"EDC CALIBRATION"

To calibrate, move the joystick fully forward (F) and press in both black buttons on the top of the joystick. (See also manual W3025)

Continue in the same way with the other positions for the joystick (N), (R) and the speed potentiometer.

Press the disk button to save the values.



"ABOUT"

It is also possible to see the version of the installed software.



Operator help when starting

When trying to start the machine without having set one, two or three of the conditions required to start machine, the missing conditions are shown in the display.

The missing conditions must be set before it is possible to start the machine.

Conditions that must be set:

- Activated P-brake
- Selector lever in neutral
- Speed selector for diesel engine in low (Low = idling) (not all models)

Operator help Workmode

When attempting to activate


- Vibration
- Strike-off blade (Optional)

with the machine in Transport mode the display will show "Workmode" for a few seconds.



To activate the above functions it is necessary to make sure that the machine's Workmode is activated.

Display when activating choice via the button set.

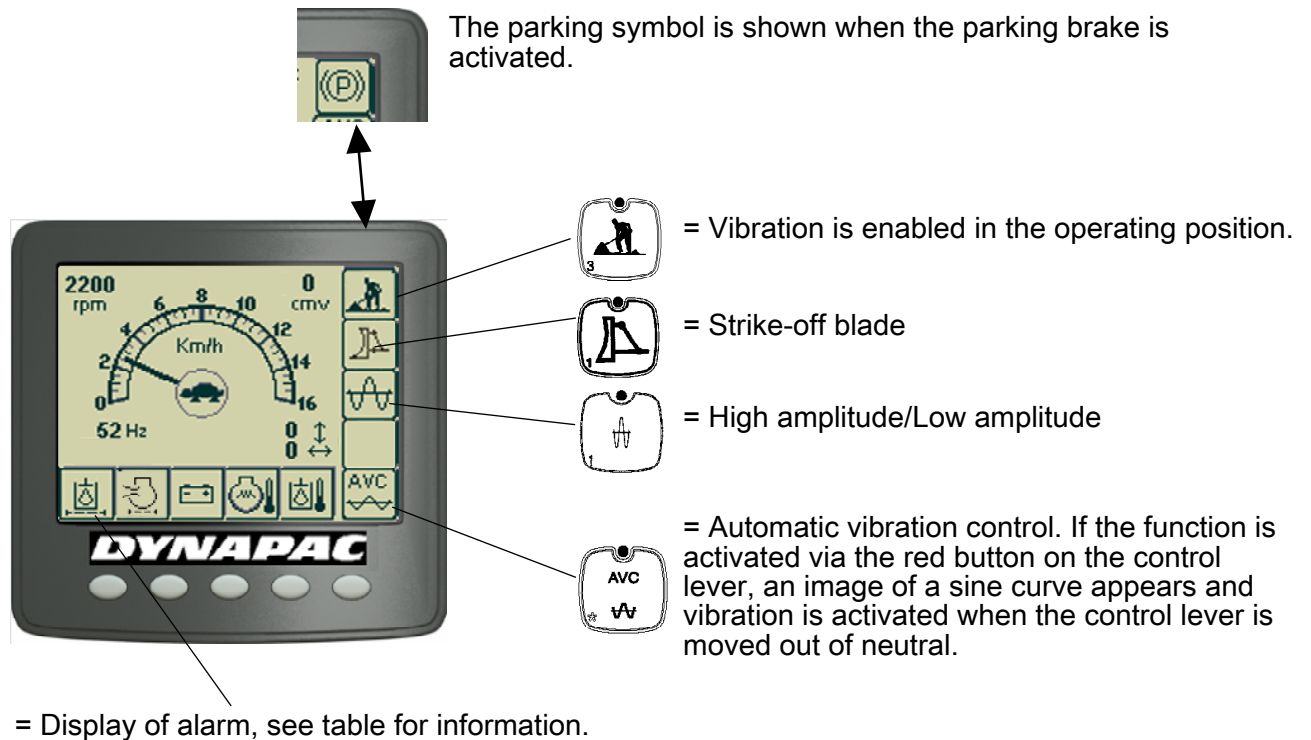

Instruments and controls, cab











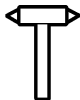


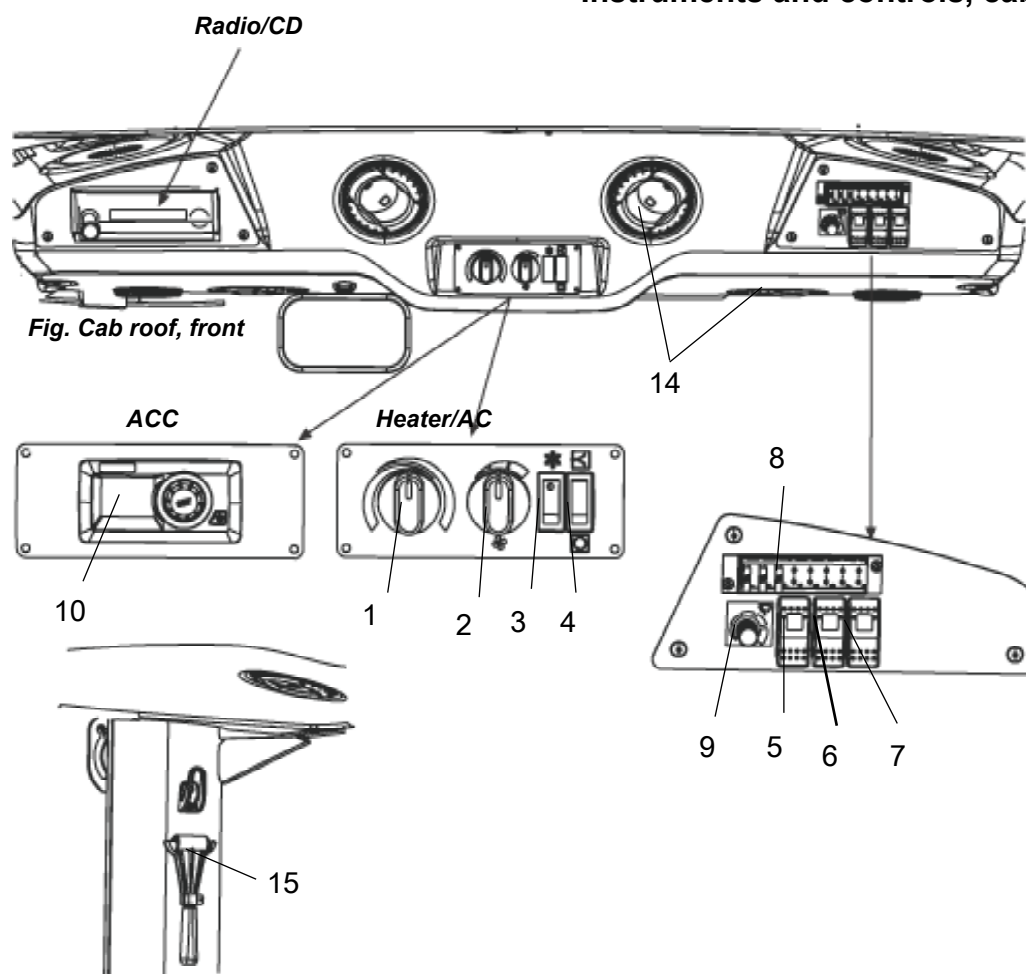Fig. Right rear cab post
15. Hammer for emergency exit

Function description of instruments and controls in the cab

| No | Designation | Symbol | Function |
|----|--|--|---|
| 1 | Heater control |  | Turn to the right to increase heating. Turn to the left to reduce heating. |
| 2 | Ventilation fan, switch |  | In the left position, the fan is off. Turning the knob to the right increases the volume of air entering the cab. |
| 3 | Air conditioning, switch |  | Starts and stops the air conditioning. |
| 4 | Cab air recirculation, switch |   | Pressing the top opens the air damper so that fresh air comes into the cab. Pressing the bottom closes the damper so that the air recirculates inside the cab. |
| 5 | Front wiper, switch |  | Press to operate the front screen wiper. |
| 6 | Rear wiper, switch |  | Press to operate the rear screen wiper. |
| 7 | Front and rear window screen washers, switch |  | Press the upper edge to activate the front screen washers. Press the lower edge to activate the rear screen washers. |
| 8 | Fuse box |  | Contains fuses for the electrical system in the cab. |
| 9 | Front wiper, intermittent | | Intermittent function for front wiper. |
| 10 | Automatic Climate Control (ACC) (micro ECC) | | Automatic control of the air conditioning. |
| 14 | Defroster nozzle | | Turn the nozzle to direct the flow of air. |
| 15 | Hammer for emergency exit |  | To escape from the cab in an emergency, release the hammer and break the opening windows on the right-hand side. |


Using the cab controls

Defroster

To quickly remove ice or mist, make sure that only the front and rear air nozzles are open.

Turn the heater and fan dial (1 and 2) to max.

Adjust the nozzle so that it blows on the window to be de-iced, or to remove mist.

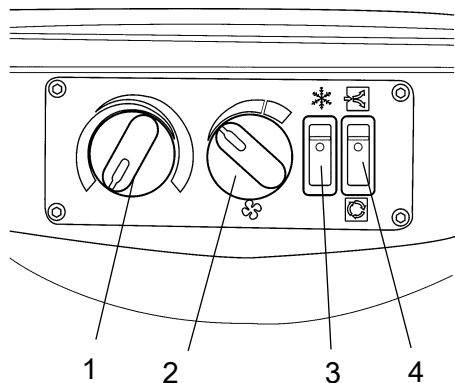

AC

Heat

If the cab is cold, open the lower nozzle on the front columns and the middle nozzles just over the controls for the heater and fan.

Turn to max heat and max fan speed.

When the required temperature has been reached, open the other nozzles and if necessary turn down the heat and fan speed.

AC/ACC

NOTE: When using AC/ACC all the windows must be closed for the system to work efficiently.

To quickly reduce the temperature in the cab, adjust the following settings on the control panel.


Turn on AC (3) and set the fresh air (4) in the lower position to switch off the fresh air valve.

Set the heater control (1) to minimum and turn up the fan speed (2). Keep only the front middle nozzles in the ceiling open.

When the temperature has dropped to a comfortable level, adjust the required temperature on the heater control (1) and reduce the fan speed (2).

Now open the remaining nozzles in the roof to achieve a comfortable temperature in the cab.

Reset the fresh air button (4) to the upper position for fresh air.

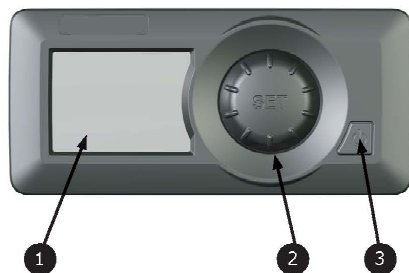

ACC - Control panel

1. LCD Display

During normal operation, the set-point temperature, blower speed, operation mode and fresh/re-circulated air selection are displayed.


2. SET / SELECT Button

Under normal operation button is used for selecting between modes.

(Also used in Test / diagnostics mode for different choices)

3. Power Button

Device ON/OFF.

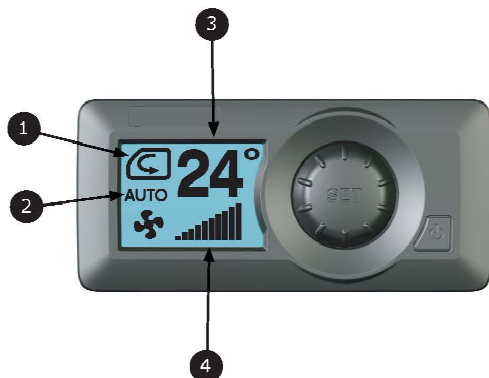

Main display screen

1. Air mix control

The air mix can be set to full fresh air or full re-circulated air.

2. Mode

Displays the mode, "Automatic", "Heat", "Cool" and "Defrost"

3. Temperature Set-point

Displays current inside set-point temperature.

4. Blower speed

Displays current blower speed setting.



ACC - Operation menus

Main screen

When the unit is turned on, the main screen will appear. Current set-point temperature, climat control mode, air-circulation and blower speed are displayed.

A small warning icon appears if there is something wrong with the system.



Blower speed settings:

Press SET / SELECT button until the blower icon appears, then turn clockwise to increase blower speed and counterclockwise to decrease blower speed with 5% increments.

The blower speed can not be adjusted in defrost mode (Defrost).



Climate Control mode settings:

Press SET / SELECT button until the climate control mode icon appears, and then turn the button until the required mode is displayed.



AUTO

The system runs automatically to keep the temperature that is selected (set-point temperature).



Cool

A / C compressor is running to cool the interior temperature. Heating valve is turned off while cooling ("Cool") is selected.



Heat

Interior temperature warms up with the electronic heater valve. A / C compressor is turned off while warming ("Heat") is selected.



Defrost

When defrosting ("Defrost") is activated, the A / C compressor is turned on, the blower is turned on full speed and the heater valve is fully open.



Air circulation setting:

Press the SET button until the air circulation mode icon appears.



Turn the knob clockwise to fully recirculated air



or counterclockwise full fresh air.



Display settings:

To adjust the display settings and the temperature scale, press the SET button until the display settings screen appears, then turn the SET button clockwise or counterclockwise to adjust the settings.



Turning HVAC system OFF:

In the main screen, press the Power button to turn off the HVAC system. When the system is turned off, the backlight will turn off and the interior temperature will be displayed on the screen.

To turn off the HVAC system from Defrost mode, press the Power button until the HVAC system returns to the AUTO mode, then press the Power button again to turn off the HVAC unit.



Diesel Heat mode (if diesel heater is installed):

When a Diesel heat mode signal is received, the backlight will be turned off, the blower will run at 15%, the heater valve will be fully opened and the air circulation will switch to fresh air until the after coil temperature is above 20 °C (78 °F). When the after coil temperature is above 20 °C (78 °F), the blower will run at a preset speed. No other function is allowed.

Electrical system

The machine's main switchbox (1) is located on the rear left of the operator's platform. There is a plastic cover over the distribution box and fuses.

On the plastic cover there is a 24V socket (X96) and a 12V socket (X98)(optional).


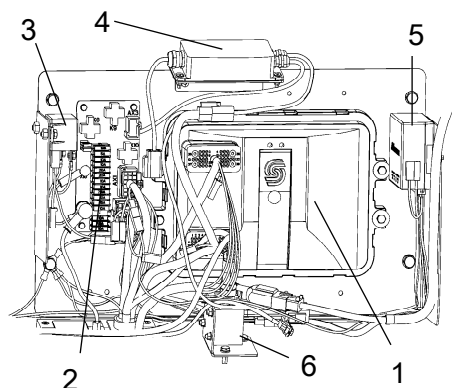


Fig. Main switchbox


1. Control unit (ECU)(A7)
2. Fuse card (A6)
3. Main relay (K2)
4. Power supply (A10), compaction meter(DCM) (Optional)
5. Power converter 24/12V DC (T1)
6. Tilt sensor (B14) (Optional)

Fuses in the main switchbox (Cummins)

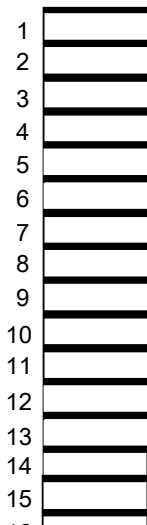

The figure shows the position of the fuses.

 The table below gives fuse amperage and function. All fuses are flat pin fuses.



| | | | | | |
|----|--|-----|-----|----------------------------|------|
| 1. | Main relay, 24V outlet engine compartment | 10A | 9. | Reserve | |
| 2. | ECU, Outlet boot loading, I/O board, display | 5A | 10. | Reserve | |
| 3. | ECU PWR1, Speed sensor | 10A | 11. | 12V outlet, Radio/CD | 10A |
| 4. | ECU PWR2, Forward/Reverse lever | 10A | 12. | GPS, DCM, DCO, tilt sensor | 10A |
| 5. | ECU PWR 3 | 20A | 13. | Reserve | |
| 6. | ECU PWR 4 | 20A | 14. | DCA | 10A |
| 7. | 24V outlet operator's station, Tachograph | 10A | 15. | Indicator relay | 7.5A |
| 8. | Hydraulic/Fuel sensor, Engine | 10A | 16. | Driving lights | 10A |

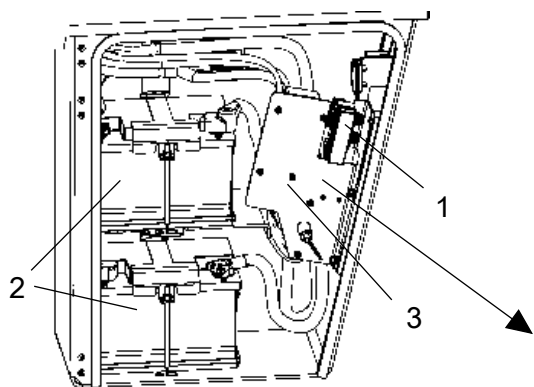
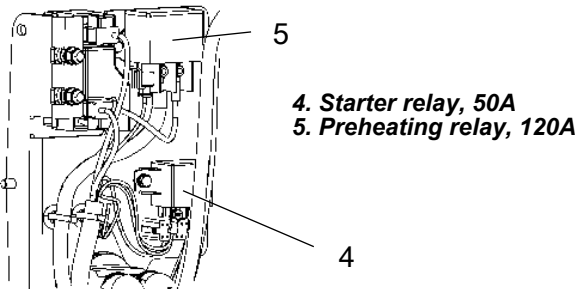


Fig. Cover, left side
1. Fuse box
2. Batteries (x2)
3. Battery disconnecter plate

Fuses at master switch (Cummins)

The fuse box (1) is located inside the cover by the steps on the left-hand side of the roller.

This is also where the batteries (2) are, and the starter relay (4) and preheating relay (5) are placed behind the battery disconnecter plate (3).



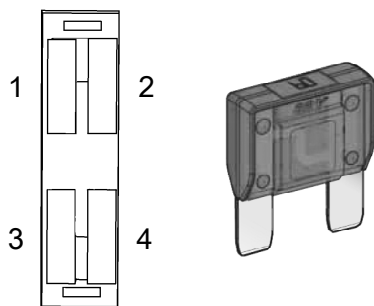


Fig. Fuse box, battery disconnect switch

Fuse box at master switch (Cummins)

The figure shows the position of the fuses.

The amperage and function of the fuses are shown below. All fuses are flat pin fuses.

| | | | |
|----|-------------------|-----|------------|
| 1. | Main fuse | 50A | |
| 2. | Cab | 30A | |
| 3. | Diesel engine ECU | 30A | (IIIA/T3) |
| | | 60A | (IIIB/T4i) |
| 4. | Grid heater | 40A | |

 


Fig. Cab roof fuse box (F7)

Fuses in cab

The electrical system in the cab has a separate fuse box located on the front right side of the cab roof.

The figure shows fuse amperage and function.

All fuses are flat pin fuses.

| | | |
|----|--------------------------|-----|
| 1. | Interior lighting | 10A |
| 2. | Windscreen wiper/washers | 10A |
| 3. | Cab fan | 15A |
| 4. | Reserve | |
| 5. | Reserve | |
| 6. | Reserve | |
| 7. | Reserve | |
| 8. | Reserve | |

Operation

Before starting

Master switch - Switching on

Remember to carry out daily maintenance. Refer to the maintenance instructions.

The battery disconnecter switch is located inside the cover by the steps on the left-hand side of the roller. Turn the key (1) to the On position. The roller is now supplied with power.



The cover must be unlocked when operating, so that the battery can be quickly disconnected if necessary.

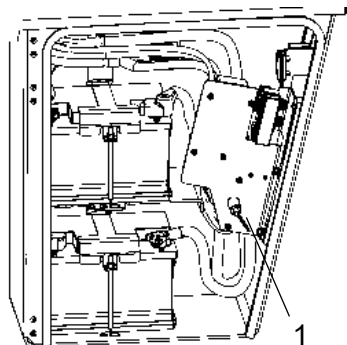


Fig. Cover, left side
1. Battery disconnecter switch

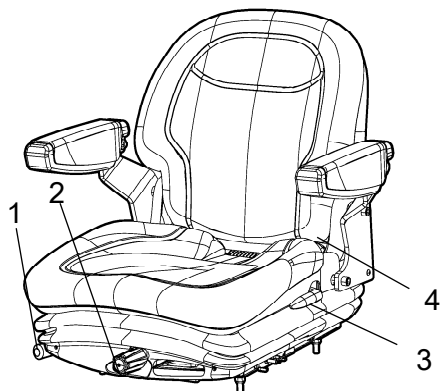


Fig. Operator's seat
1. Lock pack- Length adjustment
2. Weight adjustment
3. Back support angle
4. Seat belt

Operator's seat - Adjustment

Adjust the operator's seat so that the position is comfortable and so that the controls are within easy reach.

The seat can be adjusted as follows.

- Length adjustment (1)
- Weight adjustment (2)
- Back support angle (3)



Always make sure that the seat is secure before beginning operation.



Do not forget to use the seatbelt (4).

Belt reminder

The machine can be equipped with seat belt with belt reminder.

Unless the seat belt is used, a warning image appear in the display and a warning buzzer sounds to alert the driver to use the seat belt.



Operator's seat, comfort - Adjustments

Adjust the operator's seat so that the position is comfortable and so that the controls are within easy reach.

The seat can be adjusted as follows:

- Length adjustment (1)
- Height adjustment (2)
- Seat-cushion inclination (3)
- Backrest inclination (4)
- Armrest inclination (5)
- Lumbar support adjustment (6)

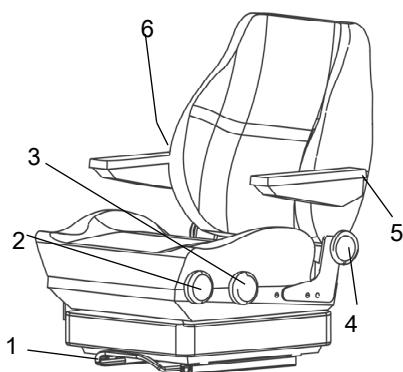


Fig. Operator's seat

1. Lever - length adjustment
2. Wheel - height adjustment
3. Wheel - seat cushion inclination
4. Wheel - backrest inclination
5. Wheel - armrest inclination
6. Wheel - lumbar support adjustment



Always ensure that the seat is locked in position before operating the roller.

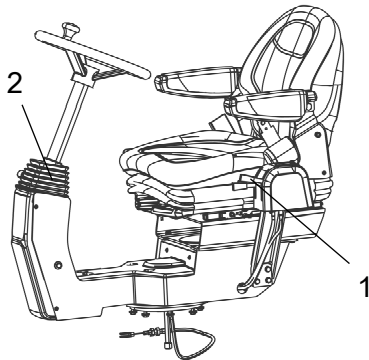


Fig. Operator's station
1. Locking lever - rotation
2. Locking lever - steering column angle

Control panel, adjustments

The control unit has two adjustment options, rotation and steering column angle.

For rotation, lift the lever (1).

Ensure that the control unit locks in position before operating the machine.

Release locking lever (2) to adjust the steering column angle. Lock the steering column in the new position.

To adjust the operator's seat, see the section for basic/comfort seat.



Adjust all settings when the machine is stationary.



Always ensure that the seat is in locked position before operating the roller.

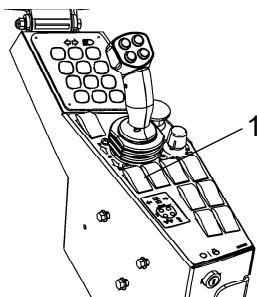


Fig. Control panel
1. Parking brake

Parking brake



Ensure that the parking brake (1) is definitely switched on.

Brake is always activated in Neutral position. (automatic 1.5 sec.)

The parking brake must be activated to start the machine!

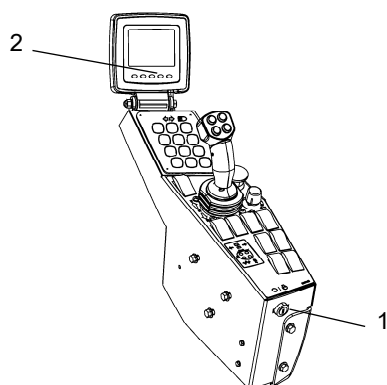


Fig. Control panel
1. Ignition key
2. Status screen

Display - Control

Sit down for all operations.

Turn the ignition key (1) to position I, the start screen will be shown in display.

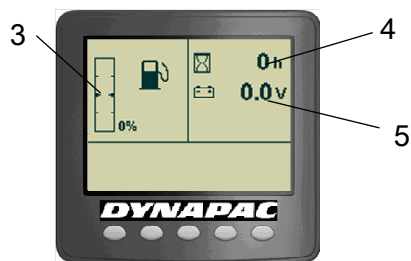


Fig. Status image
3. Fuel level
4. Hourmeter
5. Voltmeter

Check that the voltmeter (5) reads at least 24 volts, and that the fuel gauge (3) show a reading.

The hourmeter (4) registers and shows the total number of hours the engine has run.

Interlock

The roller is equipped with Interlock.

The diesel engine will switch off after 7 seconds if the operator gets off the seat when going forwards/backwards.

If the control is in neutral when the operator stands up a buzzer will go on until the parking brake is activated.

If the parking brake is activated, the diesel engine will not stop if the forward/reverse lever is moved out of neutral.

The diesel engine will switch off immediately if for any reason the forward/reverse lever is moved out of neutral when the operator is not sitting down and the parking brake has not been activated.



Sit down for all operations!

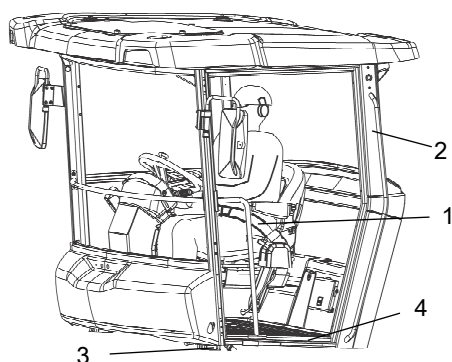


Fig. Operator's station

- 1. Seat belt
- 2. ROPS structure
- 3. Rubber element
- 4. Anti-slip



Replace the seat belt (1) if it shows signs of wear or has been subjected to high levels of force.



Check that rubber elements (3) on the platform are intact. Worn elements will impair comfort.



Ensure that the anti-slip (4) on the platform is in good condition. Replace where anti-slip friction is poor.



If the machine is fitted with a cab, make sure that the door is closed when in motion.

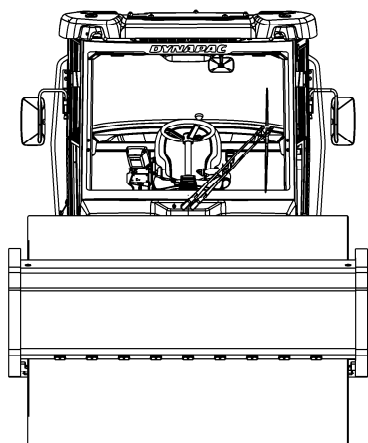


Fig. view

View

Before starting, make sure that the view forwards and backwards is unobstructed.

All cab windows should be clean and the rear view mirrors should be correctly adjusted.

Starting

Starting the engine

Make sure that the emergency stop is OFF and the parking brake ON.

Set the forward/reverse lever (1) in neutral position, and set the speed selector (2) in the idling position (LO) or (ECO) if that option is installed on the machine.

The diesel engine cannot be started in any other position of the controls.

Turn the ignition key (3) right to position I and then engage the starter by turning it full right. Release back to I as soon as the engine starts.

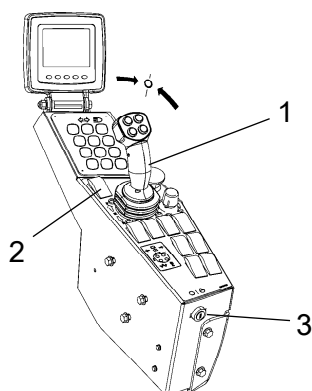


Fig. Control panel

1. F/R lever
2. Rpm switch
3. Ignition key



Do not run the starter motor for too long (max. 30 seconds). If the engine will not start, wait a minute before trying again.

At the start of the diesel engine when the ambient temperature is below +10 °C (50 °F), it must be warmed up at idle (low speed) until the hydraulic oil temperature exceeds +10 °C (50 °F).



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.

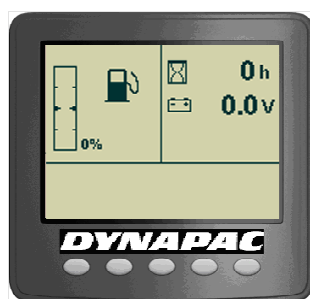


Figure. Display - Status image

While the engine is warming up, check that the fuel indicator shows the level and that the charge shows at least 24V.



When starting and driving a machine that is cold, remember that the hydraulic fluid is also cold and that braking distances can be longer than normal until the machine reaches the working temperature.



The machine always starts in Transport mode and without the option of vibration.

Driving

Operating the roller



Under no circumstances is the machine to be operated from the ground. The operator must be seated inside the machine during all operation.

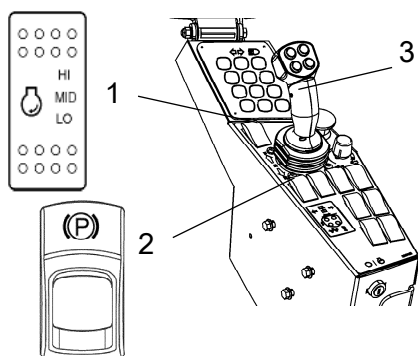


Fig. Control panel
1. Speed selector
2. Parking brake
3. Forward/Reverse lever

Activate working speed (1) = HI or ECO if available.

In ECO, the machine automatically regulates the engine speed according to requirements.

If the machine is only to be transported, MID or ECO should be selected instead.

Check that the steering is working correctly by turning the steering wheel once to the right and once to the left while the roller is stationary.



Make sure that the area in front of and behind the roller is clear.



Release the parking brake (2).

Machine with gear change in separate spring-return switch (gear position switch)

Switch (1) is a spring-return gear position switch, where gear change is performed by advancing through the four different gear positions: Hare, Drum spin, Wheelspin and Tortoise.

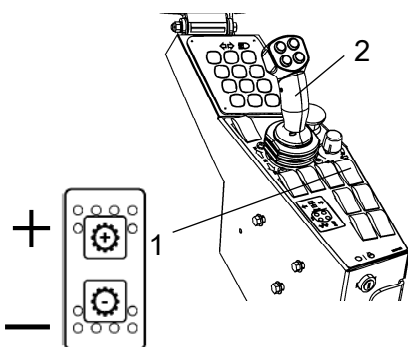


Fig. Control panel
1. Gear position switch
2. Forward/Reverse lever

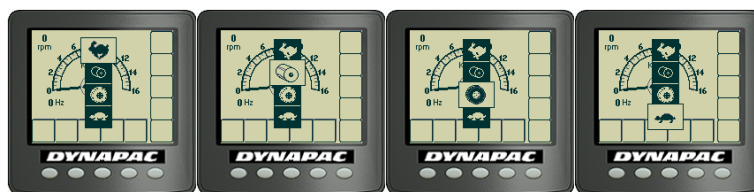








Fig. The display shows the selection in the middle (tortoise, drum spin, wheelspin or hare).

The machine's gear position is shown in the center of the speedometer; select the gear/speed for the task.

The machine does not need to be stopped to change gear position.

| | | | |
|--|------------------|-------------------------|---------|
|  | = Rabbit (4) | Max. speed 11,5 km/h | 7 mph |
|  | = Drum spin (2) | 8 km/h | 5 mph |
|  | = Wheel spin (3) | 7,5 km/h | 4.5 mph |
|  | = Tortoise (1) | 5,5 km/h | 3.5 mph |

Example is CA2500D, TC - Limited Slip Rear Axle (for other alternatives see table in section for Technical data)

Carefully move the forward/reverse lever (2) forwards or backwards, depending on which direction of travel is required.

The speed increases as the lever is moved away from the neutral position.

Machine with speed limiter (speed potentiometer) - Optional.

Set the potentiometer (1) for variable speed setting in the required mode.

The machine's gear position is shown in the center of the speedometer. Select the gear/speed for the task.

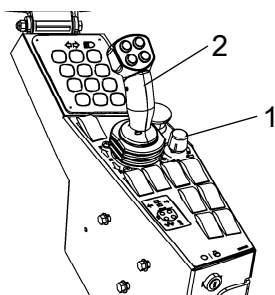


Fig. Control panel
1. Potentiometer (speed limiter)
2. Forward/Reverse lever



Fig. The display shows the selection in the middle (tortoise, drum spin, wheelspin or hare).

Carefully move the forward/reverse lever (2) forwards or backwards, depending on which direction of travel is required.

Speed increases as the lever is moved away from the neutral position.

Driving on difficult surfaces

If the machine should get stuck, select the gear position that is most suitable for the situation using the gear position switch.


- Drum slipping - select Drum spin mode (gear position 2)
- Rear tires slipping - select Wheelspin mode (gear position 3)

Reset to the original position when the machine has regained traction.

Slopes

To optimize available pulling force and protect the machine's engine against over-revving while working or during transport driving on steep slopes (>10%), you must select **low gear**.

Never drive with a higher gear/at a faster speed that the machine requires to climb up the same slope!

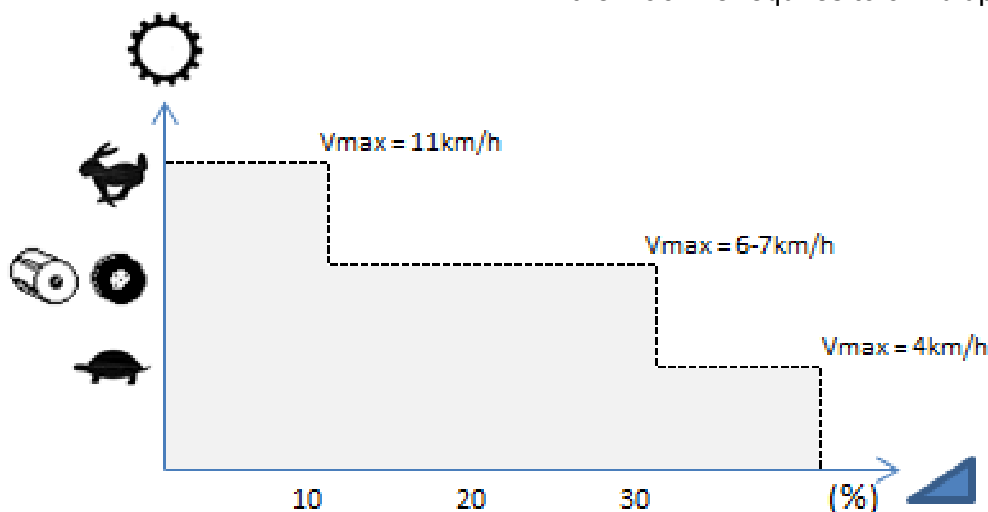

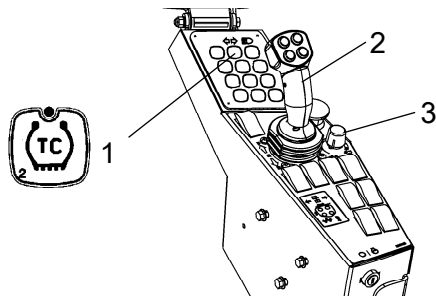


Fig. Control panel
 1. TC (Anti-spin)
 2. Forward/Reverse lever
 3. Potentiometer (speed limiter)



Fig. The display shows whether TC (Anti-Spin) is activated or disengaged

Machine with TC (Anti-Spin)

TC (Anti-Spin) (1) is activated by default (LED lit).

Position the speed control (3) in suitable position.

TC (Anti-Spin) activated/disengaged is shown in the center of the speedometer.


Carefully move the forward/reverse lever (2) forwards or backwards, depending on which direction of travel is required.

Speed increases as the lever is moved away from the neutral position.

Slopes (TC (Anti-Spin))

To optimize available pulling force and protect the machine's engine against over-revving while working or during transport driving on steep slopes (>10%), you must select **low setting on the speed limiter (potentiometer)**.

Never drive with a higher gear/at a faster speed that the machine requires to climb up the same slope!

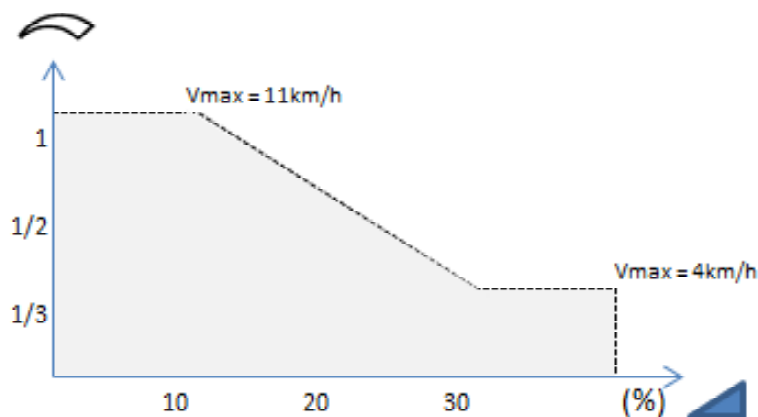

Interlock/Emergency stop/Parking brake - Check



The interlock, emergency stop and parking brake must be checked daily before operating. A function check of the interlock and emergency stop requires a restart.



The interlock function is checked by the operator standing up from the seat when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel firmly and brace yourself for a sudden stop. A buzzer goes on and after 7 seconds the engine switches off and the brakes are activated.



Check the function of the emergency stop by pressing the emergency stop button.



Check the function of the parking brake by activating the parking brake when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel and brace yourself for a sudden stop when the brakes are activated. The engine does not switch off.

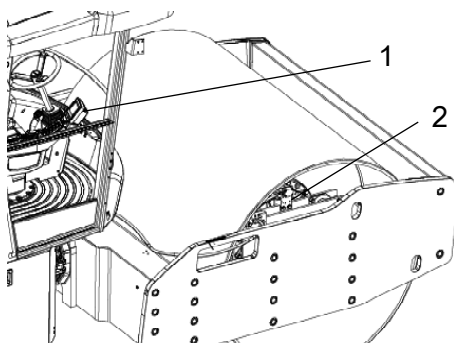


Fig. Principal components
1. Display with CMV view
2. Sensor/Processor unit

Dynapac Compaction Meter (DCM) including Active Bouncing Control (ABC) - Optional

The Compaction Meter is an accessory used to ensure the compaction result and enables optimal material processing. If the Compaction Meter is mounted on the machine a separate view in the machine display indicates the stiffness of the surface as CMV (Compaction Meter Value).

The Active Bouncing Control is always integrated in the Compaction Meter and after a certain warning time shuts off vibration if the machine is run in double-jump (bouncing). This is to save both machine and material as well as the operator from damages when the machine starts to double-jump.

The Compaction Meter is available for both D and PD machines but as the ground contact area varies a lot on PD the readings may not give any sure conclusions but the ABC is still active. The ABC is only possible to disable via the service tool




Setting limit

The CMV view in display will give the operator all information needed during compaction; engine rpm, gear position, speed, frequency and inclinations are in display together with actual CMV and the limit set in brackets. Use the buttons underneath the display to set the limit. The scale will switch automatically between 0-75 and 0-250 depending on the CMV reading.

If double-jump occurs the operator will first get a warning (!).

Secondly the ABC will shut off vibrations and give a message to the operator to continue compaction with a lower vibration amplitude setting or if variable frequency is available reduce the vibration frequency.

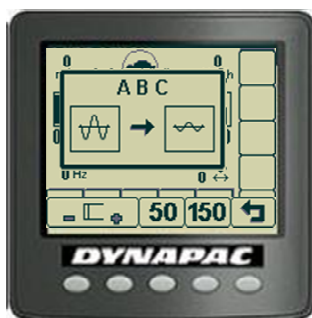

The sensor is fitted on the mounting plate of the main bearing and it senses the vibrating motion of the drum. The information is transmitted to the processor unit where it is analyzed.

The analyzed information is presented in the display as a digital value expressed in CMV (Compaction Meter Value). High or low measuring range is automatically selected and viewed in the display. The resulting numerical value is a relative measure of the ground stiffness achieved.

Operation CMV

The Compaction Meter is measuring the dynamic stiffness of the ground. The CMV is influenced by the rolling speed, rolling direction (forward or reverse), amplitude setting and vibration frequency. DCM is less sensitive to small variation in vibration frequency.

Some reference CMV for some compacted materials:

| Material | CMV |
|-----------|----------|
| rock fill | 40 - 200 |
| gravel | 25 - 100 |
| sand | 20 - 60 |
| silt | 5 - 30 |
| clay | 0 - 80 |

The water content in the compacted soil, not rock fill, has a large influence on stiffness, wet soil will result in low CMV and dry soil will result in higher CMV.

When double-jump occur CMV will be reduced and this lower CMV should not be used for determine if compaction is ready or not.

NOTE: The operator shall always keep an eye on where they are driving and not focus too much on the CMV display, due to safety.

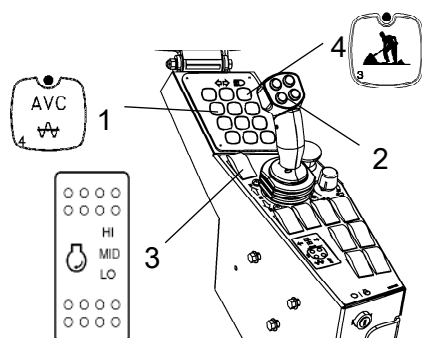


Fig. Control panel
1. Automatic vibration control (AVC)
2. Switch, vibration On/Off
3. Rpm switch
4. Working mode

Vibration

Manual/Automatic vibration

Activate the button for the Working mode (4).

Manual or automatic vibration activation/deactivation is selected using button (1).

In the manual position, the operator activates vibration using the switch (2) on the forward/reverse lever.

In automatic mode (AVC), vibration is activated when the speed is ≥ 1.5 km/h (0.9 mph) and turns off at a speed of 1.2 km/h (0.75 mph)

Activation of vibration for the first time, as well as disconnection of automatic vibration, are performed with the switch (2) on the forward/reverse lever.

Note that vibration can only be activated when the working mode (4) is activated, and when the speed selector (3) for the engine is in high (HI) or Eco mode (ECO). After 10 seconds in neutral, the vibration is switched off and the machine drops to low speed.

Manual vibration - Switching on



Never activate vibration when the roller is stationary. This can damage both the surface and the machine.

Engage and disengage vibration using the switch (1) on the front of the forward/reverse lever.

Always switch off vibration before the roller comes to a standstill.

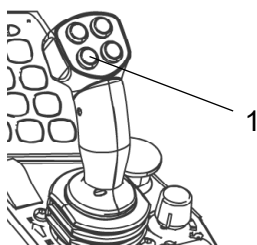


Fig. F/R lever
1. Vibration ON/OFF

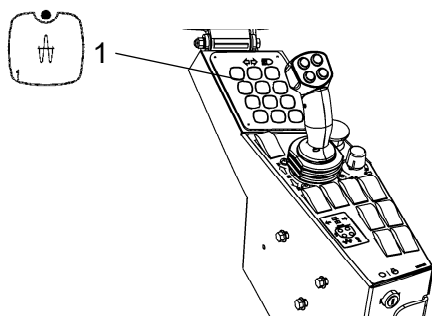


Fig. Control panel
1. High amplitude

Amplitude - Changeover



The amplitude setting must not be change when vibration is in operation
Switch the vibration off and wait until vibration stops before changing amplitude.

By pressing button (1) high amplitude is achieved.

Adjustable (Variable) frequency - (Optional)

Optimum vibration speed depends on the soil type that is to be compacted and the chosen vibration amplitude.

If double jumps occur, reduce the vibration frequency if possible as an initial measure.

If this does not help, select a lower amplitude instead, if possible.

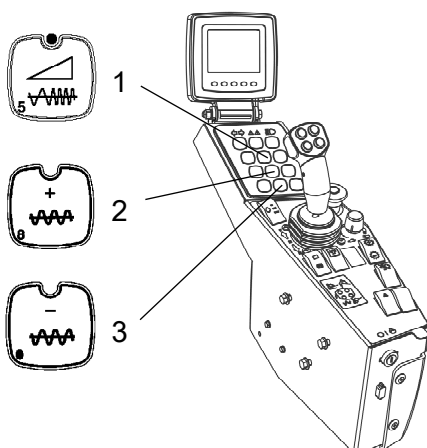


Fig. Function keys
1. Adjustable (Variable) frequency
2. Frequency, increase
3. Frequency, decrease

| Soil type(s) | High amplitude | Low amplitude |
|---------------------------------------|----------------|---------------|
| Fine grade soils (clay and silt) | 24 - 26 Hz | 28 - 30 Hz |
| Mixed grade soils (loamy and silty) | 24 - 26 Hz | 29 - 31 Hz |
| Coarse grade soils (sand and gravel) | 26 - 28 Hz | 31 - 33 Hz |
| Rock fill (crushed rock and rockfill) | 24 - 26 Hz | 31 - 33 Hz |

Braking

Normal braking

Press the switch (1) to switch off the vibration.

Move the forward/reverse lever (2) to the neutral position to stop the roller.

Always activate the parking brake (3), before leaving the operator platform.



When starting and driving a machine that is cold, remember that the hydraulic fluid is also cold and that braking distances can be longer than normal until the machine reaches the working temperature.

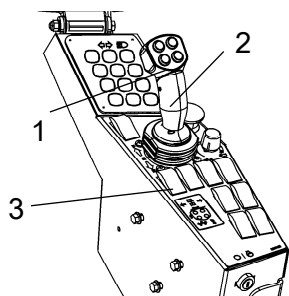


Fig. Control panel
1. Vibration On/Off switch
2. Forward/Reverse lever
3. Parking brake

If the forward/reverse lever is moved quickly (forwards or backwards) toward/past neutral, the system switches to a rapid braking Mode and the machine stops.

Activate normal driving Mode again by moving the forward/reverse lever back to neutral.

Emergency braking

Braking is normally activated using the forward/reverse lever. The hydrostatic transmission retards and slows the roller when the lever is moved towards the neutral position.

A disc brake in each drum motor/drum gear and the rear axle also acts a secondary brake when in motion, and as a parking brake when stationary. Activated with the parking brake (2).



For emergency braking, press the emergency stop (1), hold the steering wheel firmly and be prepared for a sudden stop. The engine stops.

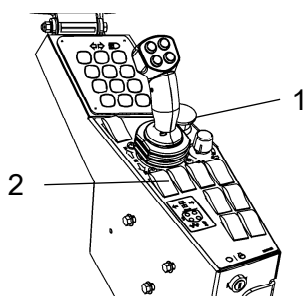


Fig. Control panel
1. Emergency stop
2. Parking brake

The Diesel engine will stop and must be restarted.

After emergency braking, return the forward/reverse lever to neutral and deactivate the emergency stop.

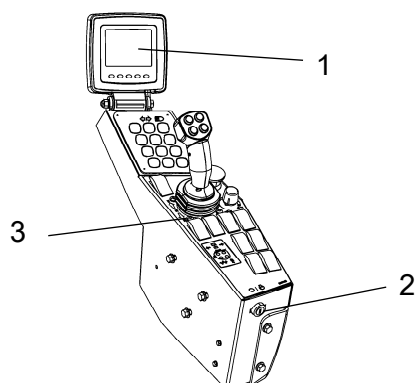


Fig. Control panel
1. Display
2. Ignition lock
3. Parking brake

Switching off

Set the speed control in idling position and allow the engine to idle for a few minutes to cool down.

Check the display to see if any faults are indicated. Switch off all lights and other electrical functions.

Activate the parking brake (3) and then turn the ignition lock (2) to the left to the off position.

Fit the instrument cover on the display and top of the control box (on rollers without cab), and lock it.

Parking

Chocking the drums



Never disembark from the machine when the engine is running, unless the parking brake is activated.



Make sure that the roller is parked in a safe place with respect to other road users. Chock the drums if the roller is parked on sloping ground.

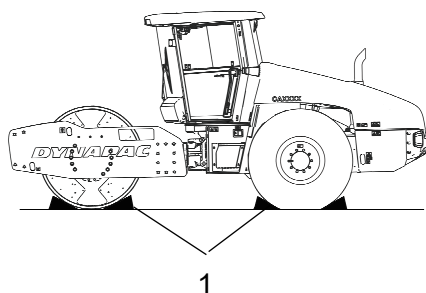


Fig. Positioning
1. Chocks



Remember the risk of freezing during the winter. Fill the engine cooling system and the screenwash bottle in the cab with suitable anti-freeze mixtures. See also the maintenance instructions.

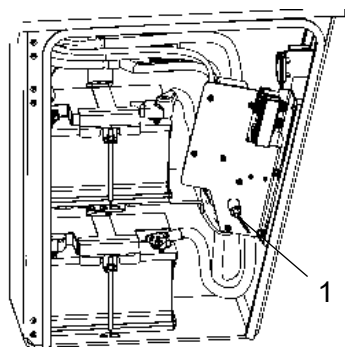


Fig. Cover, left side
1. Master switch

Master switch

Before leaving the roller for the day, switch the master switch (1) to the disconnected position and remove the handle.



Before switching off the battery isolation switch, wait for at least 30 seconds after the ignition lock has been switched off, in order to avoid the engine's electronic control unit (ECU) sustaining damage.

This will prevent battery discharging and will also make it difficult for unauthorized persons to start and operate the machine. Also lock the hood to the engine compartment.

Long-term parking



The following instructions should be followed when long term parking (more than one month).

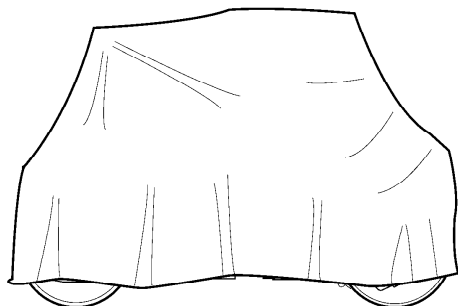


Fig. Roller weather protection

These measures apply when parking for a period of up to 6 months.

Before re-commissioning the roller, the points marked with an asterisk * must be returned to the pre-storage state.

Wash the machine and touch up the paint finish to avoid rusting.

Treat exposed parts with anti-rust agent, lubricate the machine thoroughly and apply grease to unpainted surfaces.

Engine

* Refer to the manufacturer's instructions in the engine manual that is supplied with the roller.

Battery

* Dismantle the battery/batteries from the machine, clean the outside and maintenance charge.

Air cleaner, exhaust pipe

* Cover the air cleaner or its opening with plastic or tape. Also cover the exhaust pipe opening. This is to avoid moisture entering the engine.

Fuel tank

Fill the fuel tank completely full to prevent condensation.

Hydraulic reservoir

Fill the hydraulic reservoir to the uppermost level mark (see under the heading 'Every 10 hours of operation.')

Tires (All-weather)

Check that tire pressure is 110 kPa (1.1 kp/cm²), (16 psi).

Hoods, tarpaulin

- * Lower the instrument cover over the instrument panel.
- * Cover the entire roller with a tarpaulin. A gap must be left between the tarpaulin and the ground.
- * If possible, store the roller indoors and ideally in a building where the temperature is constant.

Miscellaneous

Lifting

Locking the articulation



Articulation must be locked to prevent inadvertent turning before lifting the roller.

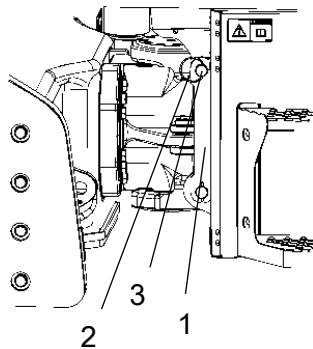


Fig. Steering joint lock
1. Locking arm
2. Locking pin
3. Locking dowel

Turn the steering wheel to the straight ahead position.
 Activate the parking brake.

Pull out the upper locking pin (2) fitted with a wire, and pull out the locking dowel (3) fitted with a wire.

Fold down the locking arm (1) so that it rests against the drum frame.

Reinstall the locking dowel (3) in the uppermost locking lug, and secure the dowel in position with the locking pin (2).

Locking the articulation



Articulation must be locked to prevent inadvertent turning before lifting the roller.

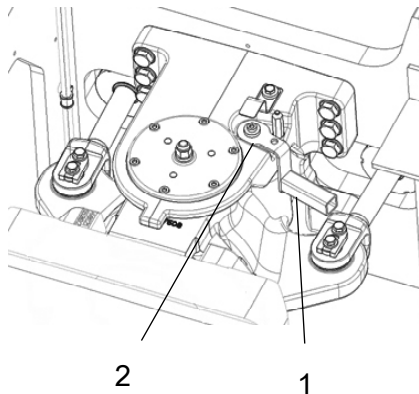


Fig. Steering joint lock, locked
1. Lock handle
2. Locking dowel

Turn the steering wheel to the straight ahead position.
 Activate the parking brake.

Front frame shall be in line with the rear frame.

Lift lock in the handle (1) while it is turned clockwise.

Make sure dowel (2) gets in position as illustrated.
 Arm must be in contact with the surface of the molded holder.

If this is not done, it's likely that the machine halves are out of line, steer then the machine so this is happening.

Weight: refer to the hoisting plate on the roller

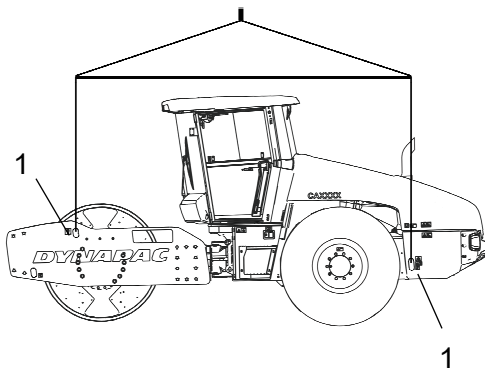


Fig. Roller prepared for lifting
1. Lifting plate

Lifting the roller



The machine's gross weight is specified on the hoisting plate (1). Refer also to the Technical specifications.



Lifting equipment such as chains, steel wires, straps and lifting hooks must be dimensioned in accordance with the relevant safety regulations for the lifting equipment.



Stand well clear of the hoisted machine! Make sure that the lifting hooks are properly secured.

Weight: refer to the hoisting plate on the roller

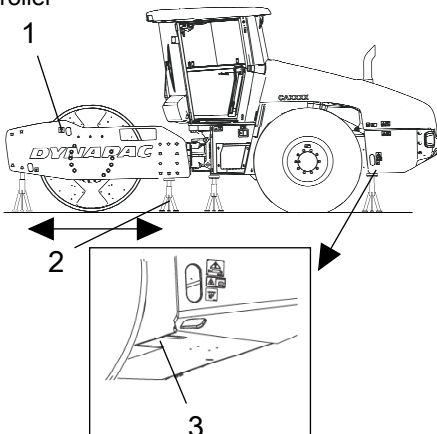


Figure. Roller lifted with jack
1. Lifting plate
2. Jack
3. Marking

Lifting the roller with jack:



The machine's gross weight is specified on the hoisting plate (1). Refer also to the Technical specifications.



The lifting device such as a jack (2), or equivalent, must be dimensioned according to the safety regulations for lifting devices.



Do not go under a lifted load! Make sure that the lifting device is secure in its position, and on a level and stable surface.

You are **recommended to lift** the machine with a jack or similar positioned **at the marking (3)** and/or at alternative locations as illustrated. Lifting at any other place can result in damage to the machine or personal injury.

Regarding the drum frame, axle stands can be placed along the entire side plates and cross members if necessary.

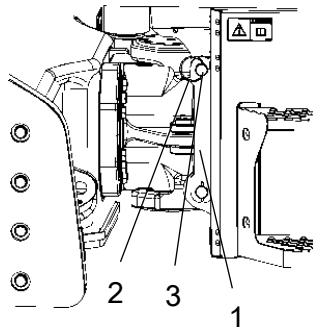


Fig. Steering joint lock
1. Locking arm
2. Locking pin
3. Locking dowel

Unlocking the articulation



Remember to restore the steering joint lock on the steering joint to open before operating.

Fold up the locking arm (1) and secure it in upper the locking lug with the locking dowel (3). Insert the locking pin (2) to secure the locking dowel (3).

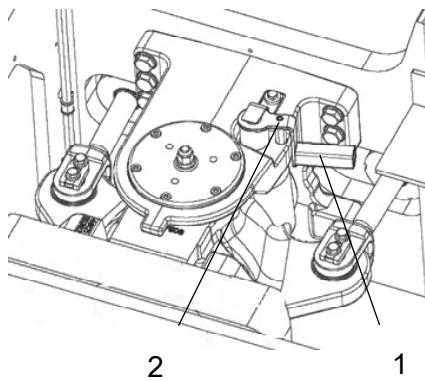


Fig. Steering joint lock, open
1. Lock handle
2. Locking dowel

Unlocking the articulation



Remember to restore the steering joint lock on the steering joint to open before operating.

Lift lock in the handle while turning it counterclockwise.

Make sure lock gets in position on the dowel by trying to turn the handle clockwise or counterclockwise without lifting the lock.

Towing/Recovering

The roller can be moved up to 300 meters (330 yards) using the instructions below.

Short distance towing with the engine running



Activate the parking brake, and temporarily stop the engine. Chock the wheels to prevent the roller from moving.

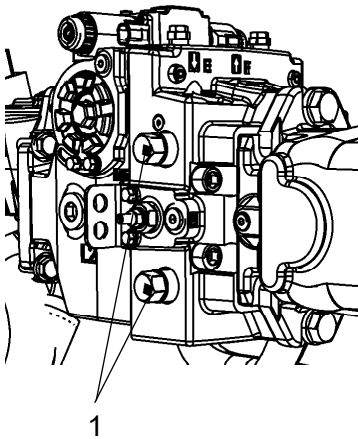


Fig. Propulsion pump
1. By-pass valves

Open the hood and make sure that the propulsion pump is accessible.

On the pump there are two by-pass valves (1) (hex screws), which should be turned three turns anticlockwise to put the system in by-pass mode.

This function enables a machine to be moved.

Start the engine and allow it to idle.

Place the Forward/Reverse lever in the forward or reverse position. If the lever is in neutral, the brakes in the hydraulic motors are activated.

The roller can now be towed and can also be steered if the steering system is otherwise functioning.

To disengage the by-pass mode, turn back the by-pass valves (1) three turns clockwise.



The machine must not be moved at a speed higher than 3 km/h (2 mph), and no more than 300 meters (330 yards). Otherwise there is a risk of damaging the drives. Be sure to reset the towing valves (by turning them three turns clockwise) after towing.

Short distance towing when the engine is inoperative.



Chock the wheels to prevent the roller from moving when the brakes are hydraulically disengaged.

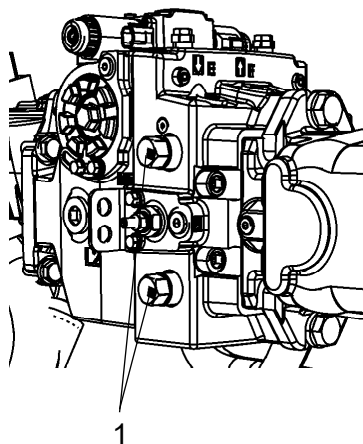


Fig. Propulsion pump
1. By-pass valve

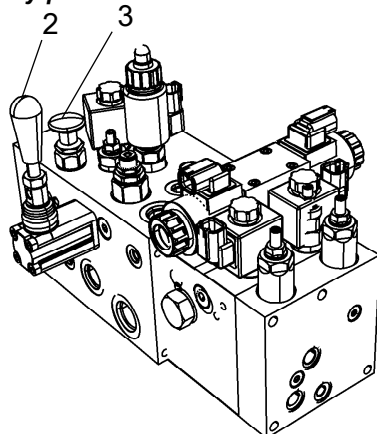


Fig. Valve block, engine compartment
2. Pump arm
3. Brake release button

Open the hood and make sure that the propulsion pump is accessible.

On the pump there are two by-pass valves (1) (hex screws), which should be turned three turns anticlockwise to put the system in by-pass mode.

This function enables a machine to be moved.

The release pump for the brakes is located on the valve block, which is positioned in the rear of the engine compartment.

Press the break release button (3).

Pump with the arm (2) until the brakes are released.

The roller can now be towed.

After towing, pull the brake release button (3) up.

To disengage the by-pass mode, turn back the hex screws (1) three turns clockwise.



The machine must not be moved at a speed higher than 3 km/h (2 mph), and no more than 300 meters (330 yards). Otherwise there is a risk of damaging the drives. Be sure to reset the towing valves (by turning them three turns clockwise) after towing.

Towing the roller



When towing/recovering, the roller must be braked by the towing vehicle. A towing bar must be used as the roller has no brakes.



The roller must be towed slowly, max. 3 km/h (2 mph) and only towed short distances, max. 300 m (330 yards).

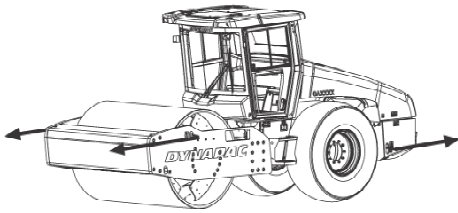


Fig. Towing

When towing/retrieving a machine, the towing device must be connected to both lifting holes. The pulling force must act longitudinally on the machine as shown in the figure. Maximum gross pulling force 200 kN (44 960 lbf).



Reverse the towing preparations according to alternative 1 or 2 in the preceding section.

Transport

Tie-down and secure the machine according to the Cargo Securing Certificate for the specific machine if this is available and applicable.

If not, tie down and secure the machine according to the cargo securing rules that are valid for the country where the transport takes place.




Never lash over the machine's articulated joint, nor over the machine's operator platform.

Before securing the machine ensure that :

- the parking brake is applied and in good working condition
- the articulated joint is in closed position
- the machine is centered laterally on the platform
- the lashings are in good condition and fulfills the corresponding rules for transport securing.

Securing CA2500-CA4600 for loading

Securing the CA2500-4600D/PD vibratory roller from Dynapac for transport.

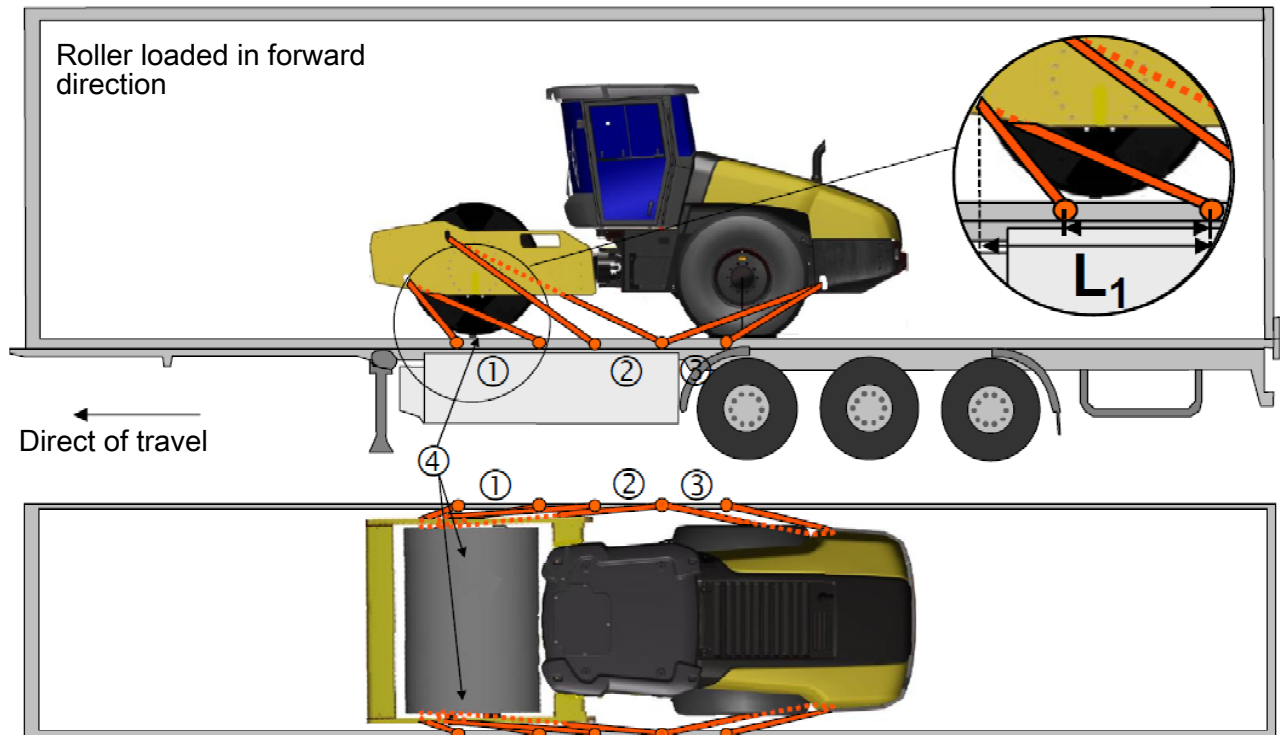

- 1 - 3 = double lashings, i.e. one lashing with two parts secured to two different lashing mounts, symmetrically located on the right and left sides.
 4 = rubber

| The lashings' permitted distance interval in meters | | |
|--|-----------------------|-----------------------|
| (1 - 3: Double lashings, LC at least 1.7 tonnes (1700 daN), S _{TF} 300 kg (300daN)) | | |
| Double L ₁ | Double L ₂ | Double L ₃ |
| 0,9 - 2,5 | 0,9 - 2,5 | 0,1 - 2,5 |

For lashing 1 is L_1 the distance between the lashing point on the edge of the platform and the point directly sideways from the lashing point on the roller perpendicular to the platform edge. The relationship for lashings L_2 and L_3 is the same.

Load carrier

- When loaded, the vibratory roller is centered laterally on the platform (± 5 cm).
- The parking brake is applied and in good working condition, and the articulated joint lock is closed.
- The drum is placed on a rubber liner, so that the static friction between the surfaces is at least 0.6.
- The contact surfaces must be clean, wet or dry, and free from frost, ice and snow.
- The lashing mounts on the load carrier have LC/MSL at least 2 tonnes.

Lashings

- The lashings comprise a lashing strap or chain with a permitted load (LC/MSL) of at least 1.7 tonnes (1,700 daN) and a pre-tension S_{TF} of at least 300 kg (300 daN). The lashings are re-tightened as required.
- Each of lashings 1-3 is either a double or two single lashings. A double lashing runs in a sling through a lashing point or around a machine part and down into two different mounts on the platform.
- Lashings in the same direction are placed in different lashing mounts on the trailer. Lashings that are pulled in opposite directions may be placed in the same lashing mount, however.
- The lashings are as short as possible.
- The lashing hooks must not lose grip if the lashings become slack.
- The lashings are protected against sharp edges and corners.
- The lashings are located symmetrically in pairs on the right and left sides.

Operating instructions - Summary



1. **Follow the SAFETY INSTRUCTIONS specified in the Safety Manual.**
2. Ensure that all instructions in the MAINTENANCE section are followed and the steering hitch lock is unlocked.
3. Turn the master switch to the ON position.
4. Move the forward/reverse lever to the NEUTRAL position. Sit down in the seat.
5. Activate the parking brake.
6. Disengage the emergency stop.
7. Set the engine speed switch to idle (LO).
8. Start the engine and allow it to warm up.
9. Set the engine speed switch to Mid/working mode.
10. Deactivate the parking brake.



11. **Drive the roller. Operate the F/R lever with care.**



12. **Test the brakes. Remember that the braking distance will be longer if the hydraulic fluid is cold.**

13. Set the transportation/working mode button in position working mode.
14. Use vibration only when the roller is in motion.



15. **IN AN EMERGENCY:**
 - Press the **EMERGENCY STOP**.
 - Hold the steering wheel firmly.
 - Brace yourself for a sudden stop.
16. When parking:
 - Activate the parking brake.
 - Switch off the engine and block the drum and wheels if the roller is on an inclined surface.
17. When lifting: - Refer to the relevant section in the Instruction Manual.
18. When towing: - Refer to the relevant section in the Instruction Manual.
19. When transporting: - Refer to the relevant section in the Instruction Manual.
20. When recovering - Refer to the relevant section in the Instruction Manual.

Preventive maintenance

Complete maintenance is necessary for the machine to function satisfactorily and at the lowest possible cost.

The Maintenance section includes the periodic maintenance that must be carried out on the machine.

The recommended maintenance intervals assume that the machine is used in a normal environment and working conditions.

Acceptance and delivery inspection

The machine is tested and adjusted before it leaves the factory.

On arrival, before delivery to the customer, delivery inspection must be conducted as per the check list in the warranty document.

Any transport damage must be reported immediately to the transport company, as this is not covered by the product warranty.

Warranty

The warranty is only valid if the stipulated delivery inspection and the separate service inspection have been completed as per the warranty document, and when the machine has been registered for starting under the warranty.

The warranty is not valid if damage has been caused by inadequate service, incorrect use of the machine, the use of lubricants and hydraulic fluids other than those specified in the manual, or if any other adjustments have been made without the requisite authorisation.

Maintenance - Lubricants and symbols





Always use high-quality lubricants and the amounts recommended. Too much grease or oil can cause overheating, resulting in rapid wear.

Fluid volumes







| | | |
|-----------------------------------|-----------------|--------------|
| Rear axle | | |
| - Differential | 16,5 liters | 17.4 qts |
| - Planetary gear | 1,7 liters/side | 1.8 qts/side |
| Rear axle (No-Spin), (optional) | | |
| - Differential | 12,5 liters | 13.2 qts |
| - Planetary gear | 1,9 liters/side | 2.0 qts/side |
| Drum | | |
| - Drum gear | 2,5 liter | 2.6 qts |
| - Drum cartridge | 2,2 liters/side | 2.3 qts/side |
| Hydraulic reservoir | 41 liters | 10.8 gal |
| Oil in hydraulic system | 80 liters | 21.1 gal |
| Diesel engine | | |
| - Lubricating oil | 11 liter | 11.6 qts |
| - Coolant, without cab (IIIA/T3) | 24 liters | 25.4 qts |
| - Coolant, without cab (IIIB/T4i) | 26 liters | 27.5 qts |
| - Coolant, with cab (IIIA/T3) | 26,2 liters | 27.7 qts |
| - Coolant, with cab (IIIB/T4i) | 28,2 liters | 29.8 qts |







 






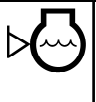

Other fuel and lubricants are required when operating in areas with extremely high or extremely low ambient temperatures. See the 'Special instructions' chapter, or consult Dynapac.

| | | | | |
|---|-----------------|--|---------------------------------|--|
|  | ENGINE OIL | Air temperature -15°C - +50°C (5°F-122°F) | PAROIL E GREEN | P/N 1630047100 (5 liters), P/N 1630047200 (20 liters) |
|  | HYDRAULIC FLUID | Air temperature -15°C - +50°C (5°F-122°F) | AtlasCopco Hydraulic 300 | P/N 9106230330 (20 liters), P/N 9106230331 (209 liters) |
| | | Ambient air temperature above +40°C (104°F) | Shell Tellus S2 V100 | |

Maintenance - Lubricants and symbols
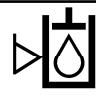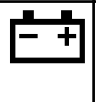
| | | | |
|---|-------------------------------------|---|---|
|  | BIOLOGICAL HYDRAULIC FLUID, PANOLIN | Air temperature -10°C - +35°C (14°F-95°F) When it leaves the factory, the machine may be filled with biologically degradable fluid. The same type of fluid must be used when changing or topping up. | PANOLIN HLP Synth 46 (www.panolin.com) |
|  | DRUM OIL | Air temperature -15°C - +40°C (5°F-104°F) | AtlasCopco Drum Oil 1000 P/N 4812156456 (5 liters) |
|  | GREASE | | Dynapac Roller Grease (0.4kg), P/N 4812030095 |
|  | FUEL | See engine manual. | - |
|  | TRANSMISSION OIL | Air temperature -15°C - +40°C (5°F-104°F) | AC Fluid Gearbox 100 P/N 4812008274 (5 liters), P/N 4812008275 (20 liters) |
| | | Air temperature 0°C (32°F) - above +40°C (104°F) | Shell Spirax S3 AX 85W-140, API GL-5 or equivalent. |
|  | COOLANT | Anti-freeze protection down to about -37°C (-34.6°F) | GlycoShell/Carcoolant 774C (mixed 50/50 with water) |

Maintenance symbols

| | | | |
|---|----------------------------|---|----------------|
|  | Engine, oil level |  | Tyre pressure |
|  | Engine, oil filter |  | Air filter |
|  | Hydraulic reservoir, level |  | Battery |
|  | Hydraulic fluid, filter |  | Recycling |
|  | Transmission, oil level |  | Fuel filter |
|  | Drum, oil level |  | Coolant, level |
|  | Oil for lubrication | | |

Maintenance - Maintenance schedule

Service and maintenance points

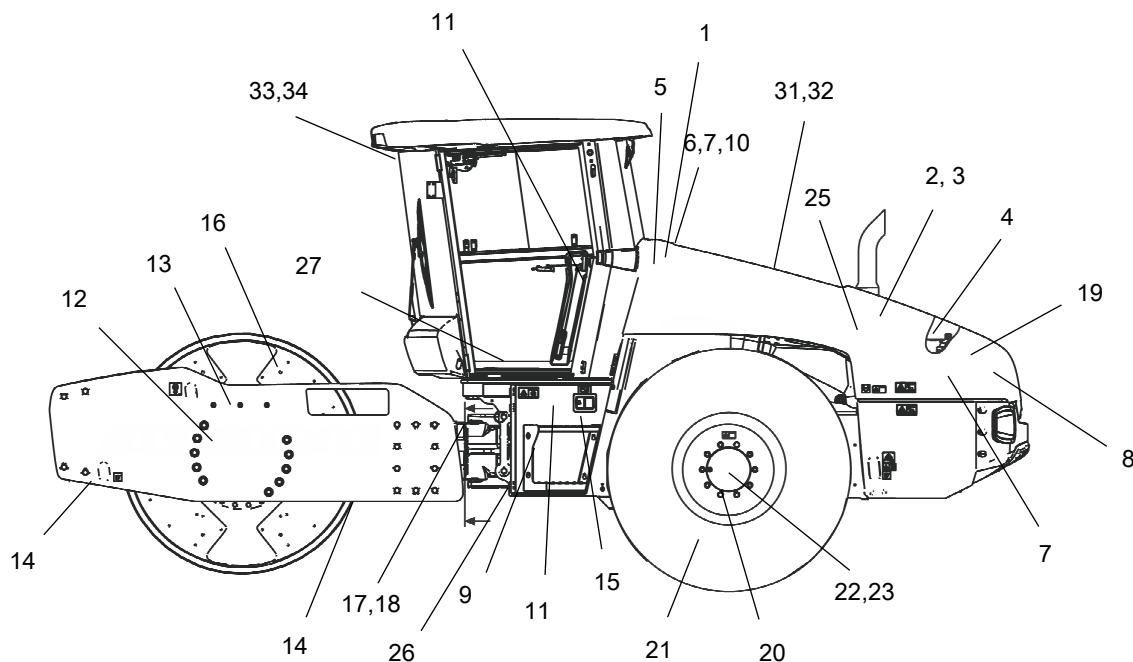


Fig. Service and maintenance points

- | | | |
|--|--|----------------------------|
| 1. Diesel fuel, filling | 14. Scrapers | 27. Seat bearing * |
| 2. Oil level, diesel engine | 15. Battery | 28. Steering chain * |
| 3. Fuel filter, fuel pre-filter | 16. Rubber elements and fastening screws | |
| 4. Air filter | 17. Steering hitch | |
| 5. Engine cover, hinges | 18. Steering cylinders, x2 | 31. Water cooler |
| 6. Hydraulic reservoir, sight glass | 19. Drive belts | 32. Hydraulic fluid cooler |
| 7. Bleeding filter | 20. Wheel nuts | 33. Fresh air filter * |
| 8. Hydraulic fluid filter, x1 | 21. Tires, pressure | 34. Air conditioning * |
| 9. Drainage, hydraulic fluid reservoir | 22. Rear axle, differential | |
| 10. Hydraulic fluid, filling | 23. Rear axle, planetary gears, 2 pcs. | |
| 11. Fuse box(es), main fuses | | |
| 12. Drum cartridge, filling, 2 fillers | 25. Oil filter, diesel engine | |
| 13. Drum gearbox | 26. Draining, fuel tank * | |

* Optional equipment

General

Periodic maintenance should be carried out after the number of hours specified. Use the daily, weekly etc. periods where number of hours cannot be used.

Maintenance - Maintenance schedule



Remove all dirt before filling, when checking oils and fuel and when lubricating using oil or grease.



The manufacturer's instructions found in the engine manual also apply.

Specific maintenance and checks on diesel engines must be carried out by the engine supplier's certified personnel.



Periodic service (service message) - Optional

A Service message (Periodic Service) is shown in the display 15 hours before First Service (50h).

For Periodic Service (250h-1000h) a Service message is shown in the same way but with the difference that it is shown 30 hours before the Periodic service interval.

| Service interval | Display start |
|---|---------------|
| 50h | 35h |
| 250h | 220h |
| 500h | 470h |
| 750h | 720h |
| 1000h | 970h |
| The message continues to be displayed for 15 engine starts or until it is reset by the Service tool. | |



The alarm message shown is acknowledged by pressing the "OK" button on the display.

A Service symbol is now visible at the bottom of the display screen.

Maintenance - Maintenance schedule

Every 10 hours of operation (Daily)

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|--|----------------------------|
| | Before starting up for the first time on that day | |
| 14 | Check the scraper setting | |
| | Check for free circulation of cooling air | |
| 31 | Check coolant level | Refer to the engine manual |
| 2 | Check the engine oil level | Refer to the engine manual |
| 1 | Refuel | |
| 6 | Check fluid level in hydraulic reservoir | |
| | Test the brakes | |

After the FIRST 50 hours of operation

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|---|--------------------------------------|
| 8 | Change the hydraulic fluid filter | |
| 12 | Change the drum cartridge oil | |
| 20 | Check the wheel-nuts are tightened | |
| 21 | Check the tire pressure | |
| 22 | Change oil in rear axle differential | |
| 23 | Change oil in the rear axle planetary gearing | |
| 13 | Change the oil in the drum gearbox | Only for machines with drum gearbox. |
| 17 | Steering hitch - Tightening | |

Every 50 hours of operation (Weekly)

Refer to the contents to find the page number of the sections referred to!

| Pos. in fig | Action | Comment |
|-------------|--|---------|
| | Check that hoses and couplings are not leaking | |

Maintenance - Maintenance schedule

Every 250 / 750 / 1250 / 1750 hours of operation

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|--|----------|
| 12 | Check the oil level in drum cartridges | |
| 23,22 | Check the oil level in rear axle/planetary gears | |
| 13 | Check the oil level in drum gearbox | |
| 32,31 | Clean the coolers | |
| 16 | Check rubber elements and bolted joints | |
| 15 | Check batteries | |
| 34 | Check the AC | Optional |

Every 500 / 1500 hours of operation

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|--|---|
| 4 | Inspect the filter element in the air cleaner | Replace as required |
| 32,31 | Clean the coolers | |
| 12 | Check the oil level in drum cartridges | |
| 23,22 | Check the oil level in rear axle/planetary gears | |
| 13 | Check the oil level in drum gearbox | |
| 2,25 | Change the engine oil and oil filter. *) | Refer to the engine manual *) 500h or once every 6 months. |
| 3 | Replace the fuel filter | Refer to the engine manual |
| 3 | Replace the fuel pre-filter | Refer to the engine manual |
| 5 | Lubricate controls and joints | |
| 27,28 | Lubricate seat bearing/steering chain | Optional |
| | Check the engine's valve clearance (after the first 500 h) | Refer to the engine manual |

Every 1000 hours of operation

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|---|---|
| 8 | Change the hydraulic fluid filter | |
| 12 | Check the oil level in drum cartridges | |
| 4 | Inspect the filter element in the air cleaner | Replace as required |
| 22 | Change oil in rear axle differential | |
| 23 | Change oil in the rear axle planetary gearing | |
| 13 | Change the oil in drum gearbox | |
| 32,31 | Clean the coolers | |
| 3 | Replace the fuel filter | Refer to the engine manual |
| 3 | Replace the fuel pre-filter | Refer to the engine manual |
| 2,25 | Change the engine oil and oil filter. *) | Refer to the engine manual*) 500h or once every 6 months. |
| 7 | Check bleeder filter on hydraulic reservoir | |
| 9 | Drain the condensate from hydraulic reservoir | |
| 26 | Drain condensate from fuel tank | Optional |
| 33 | Replace the fresh air filter in the cab | Optional |
| 19 | Check belt tension in the drive belt system | Refer to the engine manual |
| 17 | Steering hitch - Tightening | |

Maintenance - Maintenance schedule

Every 2000 hours of operation

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|--|---|
| 6,10 | Change the hydraulic fluid | |
| 8 | Change the hydraulic fluid filter | |
| 12 | Change the oil in the drum cartridges | |
| 4 | Inspect the filter element in the air cleaner | Replace as required |
| 22 | Change oil in rear axle differential | |
| 23 | Change oil in the rear axle planetary gearing | |
| 13 | Change the oil in the drum gearbox | |
| 32,31 | Clean the coolers | |
| 3 | Replace the fuel filter | Refer to the engine manual |
| 3 | Replace the fuel pre-filter | Refer to the engine manual |
| 2,25 | Change the engine oil and oil filter. *) | See the engine's instruction manual *) 500 h or once every 6 months. |
| 27,28 | Grease the steering bearing / steering chain | Optional |
| 7 | Check bleeder filter on hydraulic reservoir | |
| 9 | Drain the condensate from hydraulic reservoir | |
| 26 | Drain condensate from fuel tank | Optional |
| 34 | Overhaul air conditioning | Optional |
| | Check engine's valve clearances | Refer to the engine manual |
| 19 | Check belt tension in the drive belt system | Refer to the engine manual |
| | Replace the ventilation filter in the crankcase *) | Refer to the engine manual *) only applies to Stage IIIB/Tier 4i |
| 17 | Steering hitch - Tightening | |

Every other year

Refer to the contents to find the page number of the sections referred to !

| Pos. in fig | Action | Comment |
|-------------|---|----------------------------------|
| 31 | Change the coolant (glycol) | |
| 10 | Change the fluid in the hydraulic reservoir *) | *) not for PANOLIN hydraulic oil |
| 12 | Change the oil in drum cartridges | |
| 4 | Inspect the filter element in the air cleaner | Replace as required |
| 22 | Check the oil level in the rear axle's differential | |
| 23 | Check oil level in rear axle's planetary gearing | |
| 13 | Change the oil in drum gearbox | |
| 16 | Check rubber elements and bolted joints | |
| 9 | Drain the condensate from hydraulic reservoir | |
| 26 | Drain condensate from fuel tank | Optional |
| 19 | Check belt tension in the drive belt system | Refer to the engine manual |

Service - Checklist

| Pos | Action | Every 10 hours of operation (Daily) | Every 50 hours of operation (Weekly) | Every 250 hours of operation | Every 500 hours of operation | Every 750 hours of operation | Every 1000 hours of operation | Every 1250 hours of operation | Every 1500 hours of operation | Every 1750 hours of operation | Every 2000 hours of operation | Every 246 month | NOTE |
|-------|---|-------------------------------------|--------------------------------------|------------------------------|------------------------------|------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-----------------|------------------------------------|
| 14 | Check the scraper setting | ○ | | | | | | | | | | | |
| | Check for free circulation of cooling air | ○ | | | | | | | | | | | |
| 31 | Check/Change coolant level | ○ | | | | | | | | | ● | | |
| 2 | Check the engine oil level | ○ | | | | | | | | | | | |
| 1 | Refuel | ○ | | | | | | | | | | | |
| 6/10 | Check/Change fluid level in hydraulic reservoir | ○ | | | | | | | | | | | |
| | Test the brakes | ○ | | | | | | | | | | | |
| 8 | Change the hydraulic fluid filter | | ● | | | | | | | | | | |
| 12 | Check/Change the drum cartridge oil | | ● | | | | | | | | | | |
| | Check that hoses and couplings are not leaking | | ○ | | | | | | | | | | |
| 4 | Inspect/Change the filter element in the air cleaner | | | | | | | | | | | | |
| 20 | Check the wheel-nuts are tightened | ○ | | | | | | | | | | | |
| 21 | Check the tire pressure | ○ | | | | | | | | | | | |
| 23/22 | Check/Change the oil level in rear axle/planetary gears | | | | | | | | | | | | |
| 13 | Check/Change the oil level in drum gearbox | ● | | | | | | | | | | | |
| 32/31 | Clean the coolers | | | | | | | | | | | | |
| 16 | Check the rubber elements | | | | | | | | | | | | |
| 15 | Check batteries | | | | | | | | | | | | |
| 34 | Check the Air Condition | | | | | | | | | | | | |
| 3 | Replace the fuel filter | | | | | | | | | | | | Optional |
| 5 | Lubricate controls and joints | | | | | | | | | | | | |
| 2/25 | Change the engine oil and oil filter | | | | | | | | | | | | 2) 500 h or once every six months |
| 27/28 | Grease the chair bearing/steering chain | | | | | | | | | | | | Optional |
| 7 | Check bleeder filter on hydraulic reservoir | | | | | | | | | | | | |
| 9 | Drain the condensate from hydraulic reservoir | | | | | | | | | | | | |
| 26 | Drain condensate from fuel tank | | | | | | | | | | | | Optional |
| 33 | Replace the fresh air filter in the cab | | | | | | | | | | | | Optional |
| | Check/adjust the engine's valve clearance | | | | | | | | | | | | 1) First 500h and then every 2000h |
| 19 | Check/Change belt tension/drive belt system | | | | | | | | | | | | |

○ Check ● Change

Maintenance, 10h

Every 10 hours of operation (Daily)



***Park the roller on a level surface.
The engine must be switched off and the
parking brake activated when checking or
adjusting the roller, unless otherwise specified.***



***Ensure that there is good ventilation (air
extraction) if the engine is run indoors. Risk of
carbon monoxide poisoning.***

Scrapers - Check, adjustment



It is important to consider movement of the drum when the machine turns, i.e., the scrapers can be damaged or wear of the drum may increase if adjustment is made closer than the values stated.

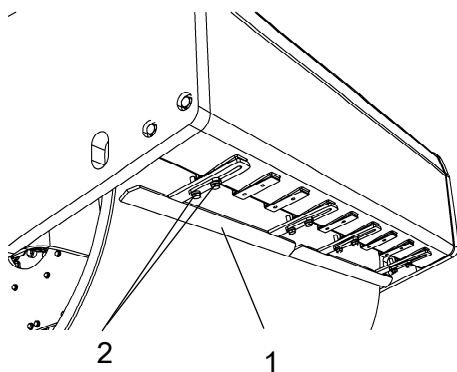


Fig. Scrapers
1. Scraper blade (x 4)
2. Screws

If necessary, adjust distance to the drum as follows:

Loosen the screws (2) on the scraper attachment.

Then adjust the scraper blade (1) to 25 mm (1 in) from the drum.

Tighten the screws (2).

Repeat the procedure for the other scraper blades (x4).

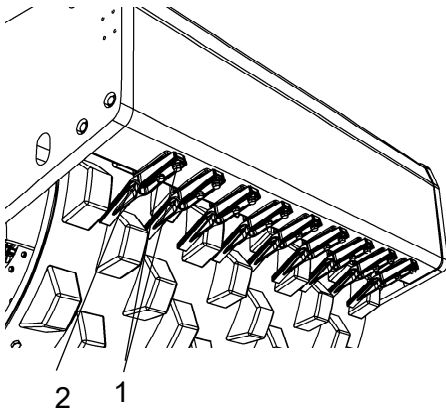


Fig. Scrapers
1. Screws
2. Scraper teeth (x 18)

Scrapers, Pad-drum

Undo the screws (1), then adjust each scraper tooth (2) to 25 mm (1.0 in) between scraper tooth and drum.

Center each scraper tooth (2) between the pads.

Tighten the screws (1).

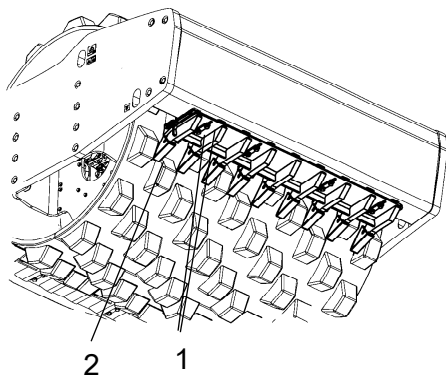


Fig. Scrapers
1. Screws
2. Scraper teeth

Scrapers (Heavy duty), Pad drum

Undo the screws (1), then adjust/center 25 mm (1.0 in) between the scraper teeth (2) and drum.

Center each scraper tooth (2) between the pads.

Tighten the screws (1).

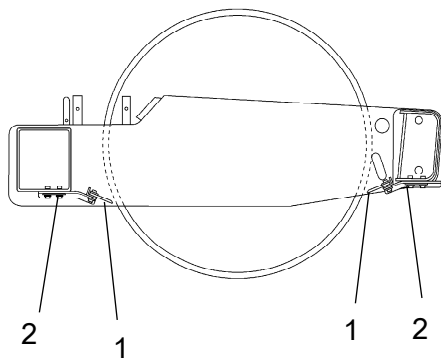


Fig. Scrapers
 1. Scraper blade
 2. Screws

Flexible scrapers (Optional)

Loosen the screws (2).

Then, adjust the scraper blade (1) so that it lightly touches the drum.

Tighten the screws (2).

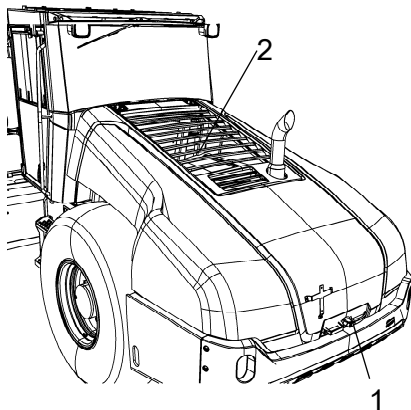


Fig. Engine hood
 1. Hood lock
 2. Protective grille

Air circulation - Check

Ensure that the engine has free circulation of cooling air through the protective grille in the hood.

To open the engine hood, turn the lock handle (1) upward. Raise the hood to its fully open position, checking that the red safety catch on the left gas spring is latched.



If the gas-springs for the hood are loosend and the hood is raised to its upper position - block the hood so that it cannot fall.



Coolant level - Check

Place the roller on a flat surface and check the level of the coolant (2). Top up with coolant if the level is too low.



Take great caution if the radiator cap must be opened while the engine is hot. Wear protective gloves and goggles.

Fill with a mixture of 50% water and 50% anti freeze. See the lubrication specifications in these instructions and in the engine manual.



Flush the system every other year and change the coolant. Make sure also that the air flow through the cooler is unobstructed.

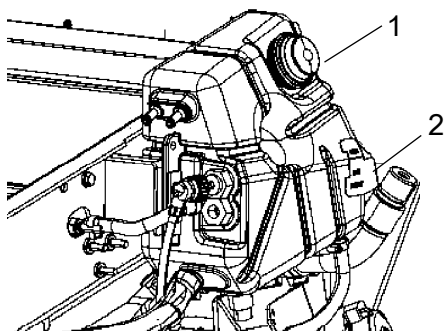


Fig. Expansion tank
1. Filler cap
2. Level indicator



Diesel engine Check oil level



Take care not to touch any hot parts of the engine or the radiator when removing the dipstick. Risk for burns.

The dipstick is located beside the engine's oil and fuel filter.

Pull up the dipstick (1) and check that the oil level is between the upper and lower marks. For further details, refer to the engine's instruction manual.

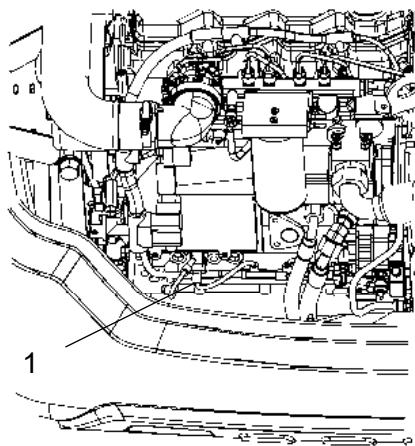


Fig. Engine compartment
1. Dipstick



Fuel tank - Filling

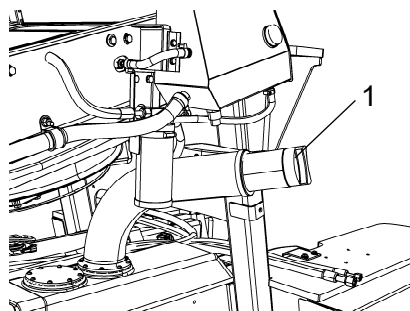


Fig. Fuel tank
1. Filler pipe

Top up the fuel tank every day. Follow the engine manufacturer's specifications for diesel fuel.



Tier 4i/Stage IIIB Cummins engines require the use of Ultra Low Sulphur Diesel (ULSD) fuel, which has a sulphur content of 15 ppm (parts per million) or less. A higher sulphur content will cause operating problems and put the useful life of components at risk, which can lead to engine trouble.



Stop the engine. Short-circuit (press) the filler gun against a non-insulated part of the roller before refuelling, and against the filler pipe (1) while refuelling.



Never refuel while the engine is running. Do not smoke and avoid spilling fuel.



Hydraulic reservoir - Check fluid level

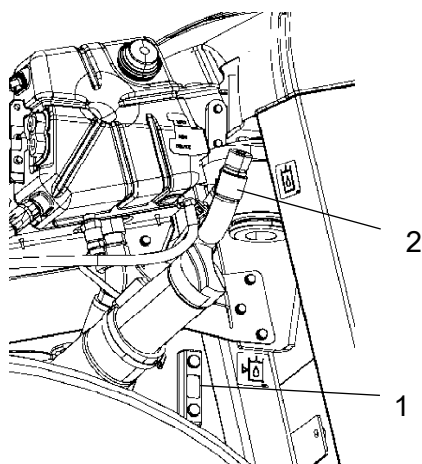


Fig. Hydraulic reservoir
1. Sight glass
2. Filler pipe

Place the roller on a level surface and check that the oil level in the sight glass (1) is between the max and min markings.

Top up with the type of hydraulic fluid specified in the lubricant specification, if the level is too low.

The volume between the min. and max. lines is approx. 4 liters (4.2 qts).

Maintenance, first 50h



**Park the roller on a level surface.
The engine must be switched off and the parking brake activated when checking or adjusting the roller, unless otherwise specified.**



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Hydraulic filter - Replacement

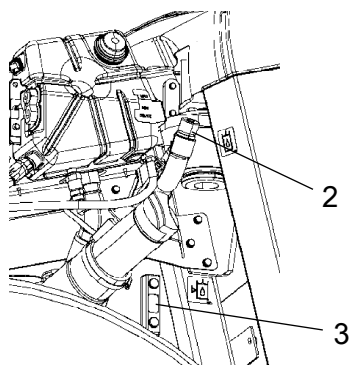


Fig. Hydraulic reservoir
2. Filler cap/Bleeding filter
3. Sight glass

Undo the filler cap/bleeder filter (2) on top of the reservoir so that over-pressure inside the reservoir can be eliminated.

Make sure that the bleeding filter (2) is not clogged, air must have unobstructed passage through the cap in both directions.

If passage in either direction is blocked, clean the filter with a little diesel oil and blow through with compressed air until the block is removed, or replace the cap with a new one.



Wear protective goggles when working with compressed air.

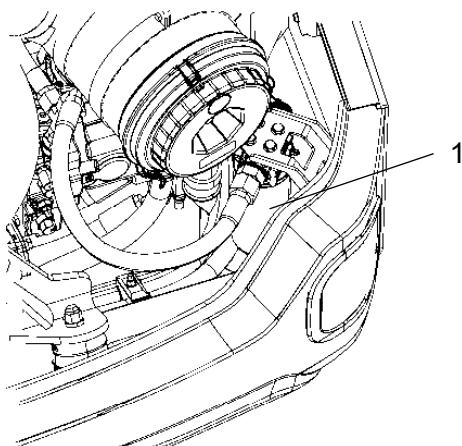


Fig. Engine compartment
1. Hydraulic fluid filter (x1).

Clean thoroughly around the oil filter.



Remove the oil filter (1) and hand in to an environment-friendly waste disposal station. This is a single-use filter and cannot be cleaned.



Make sure that the old sealing ring is not left on the filter holder, Otherwise, this could cause leakage between the new seal and the old one.

Thoroughly clean the filter holder's sealing surfaces.

Apply a thin coat of fresh hydraulic fluid on the new filter seal. Screw tight the filter by hand.



First tighten the filter until its seal is in contact with the filter attachment. Then turn an additional half revolution. Do not tighten the filter too hard as this could damage the gasket.

Start the engine and check that there is no leakage of hydraulic fluid from the filter. Check level of fluid in the sight glass (3) and top up as required.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Drum cartridge - Oil change

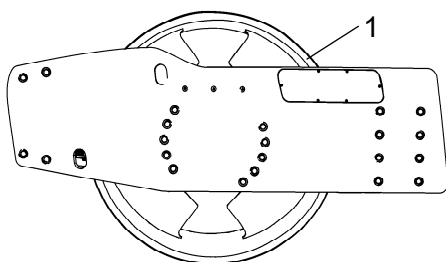


Fig. Left drum side
1. Groove

Position the roller on a flat surface with the groove (1) on the inside of the drum aligned with the top of the drum frame.

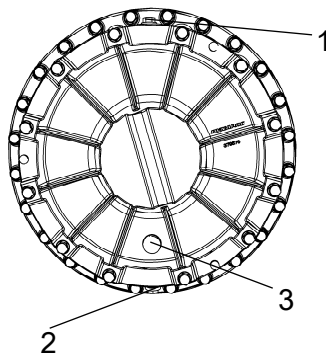


Fig. Left drum side

- 1. Filler plug
- 2. Drain plug
- 3. Sight glass

Place a receptacle for about 5 liters (1.32 gal) underneath the drain plug (2).



Observe care when draining drum oil/hot drum oil. Wear protective gloves and goggles.



Save the oil and hand in to an environment-friendly waste disposal station.

Clean and unscrew the filler plug (1) and the drain plug (2).

Allow all the oil to run out. Fit the drain plug and fill with new synthetic oil in accordance with the instructions under "Drum cartridge - checking the oil level".



Ensure that only AtlasCopco Drum Oil 1000 is used in the cartridges.

Repeat the procedure on the opposite side.



Tires - Air pressure - Wheel nuts - Tightening

Check the tire pressures using a pressure gauge.

If the tires are filled with fluid, the air valve (1) must be in the "12 o'clock" position during pumping.

Recommended pressure: See Technical Specifications.

Check the tire pressure.



When changing the tires it is important that both of them have the same rolling radius. This is necessary to ensure proper functioning of the anti-slip in the rear axle.

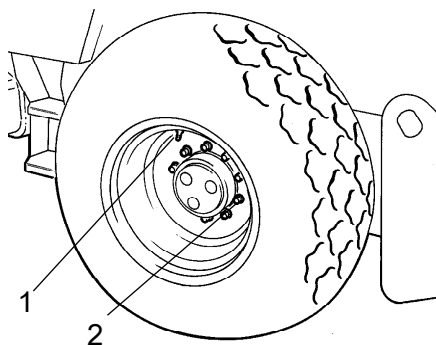


Fig. Wheels

- 1. Air valve
- 2. Wheel nut

Check the tightening torque of the wheel nuts (2) at 630 Nm (465 lbf.ft).

Check both wheels and all nuts. (This only applies to a new machine or newly fitted wheels).



Check the safety manual that accompanies the roller before filling the tires with air.



Rear axle differential - Oil change



Never work under the roller when the engine is running. Park on a level surface. Block the wheels securely.

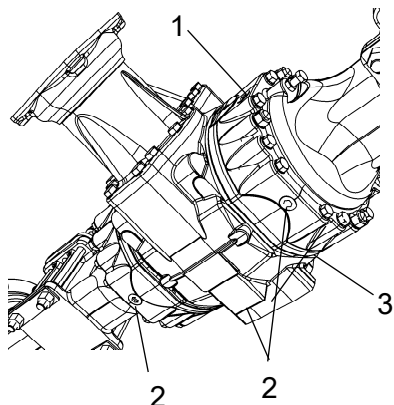


Fig. Rear axle, underside
 1. Level/Filler plugs (x 3)
 2. Drain plugs (x 3)
 3. Filler plugs (x x)

Wipe clean and remove the three level/filler plugs (1) and (3) and all three drain plugs (2). The level/filler plugs are located on the front and rear of the axle, and the drain plugs are located on the underside and rear. Drain the oil into a container. The volume is approx. 12.5 litres (13.2 qts).



Deliver the drain oil to environmentally correct handling.

Refit the drainage plugs and top up with fresh oil until the correct level is reached. Refit the level/filler plugs. Use transmission oil, see Lubricant Specification.



Rear axle planetary gear - Oil change

Position the roller with the plug (1) at its lowest position.

Wipe clean, unscrew the plug (1) and drain the oil into a suitable receptacle. The volume is approximately 1.85 liters (1.95 qts).



Oil should be taken to your local waste disposal station.

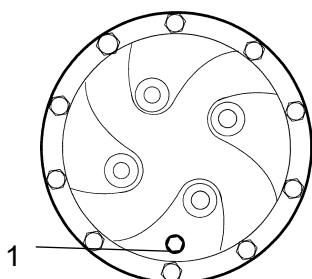


Fig. Planetary gear/drainage position
 1. Plug

Position the roller so that the plug (1) in the planetary gear is at "9 o'clock" or "3 o'clock".

Fill with oil to lower edge of level hole. Use transmission oil. See the lubrication specification.

Clean and refit the plug.

Check the fluid level in the same way on the rear axle's other planetary gear.

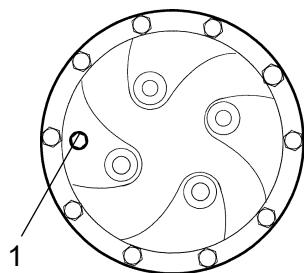


Fig. Planetary gear/filling position
 1. Plug



Drum gearbox - Oil change

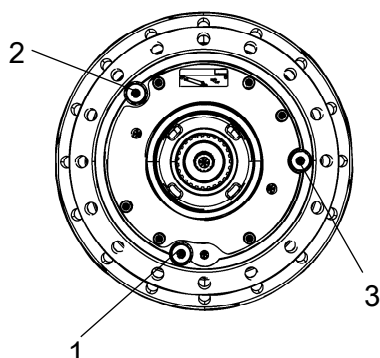


Fig. Drum gearbox

- 1. Drain plug
- 2. Filler plug
- 3. Level plug

Wipe clean, unscrew the plugs (1, 2 and 3) and drain the oil into a suitable receptacle, capacity about 5.0 liters (5,3 qts.).

Refit the drain plug (1) and fill with oil up to the level plug (3), according to "Drum gearbox - Checking the oil level".

Use transmission oil according to the lubricant specification.

Clean and refit the level plug (3) and filler plug (2).

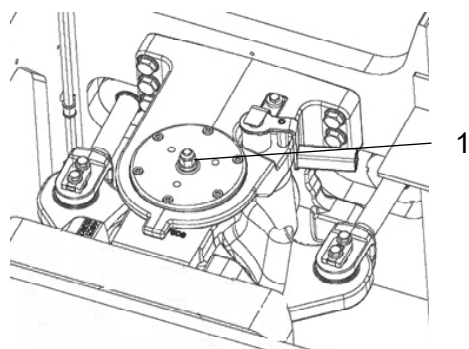


Fig. Steering hitch

- 1. Nut

Steering hitch - Tightening



Nobody must be allowed near the steering joint when the engine is running. Risk of being crushed when the steering is operated. Switch off the engine and activate the parking brake before lubricating.

The easiest way to identify if you have this type of steering hitch is that it has a new type of nut (1) at the top, as shown.

Actual torque (Nm) should be when the machine's position is straight ahead.

| | |
|-----|--------|
| M14 | 174 Nm |
| M16 | 270 Nm |

Maintenance - 50h

Every 50 hours of operation (Weekly)



***Park the roller on a level surface.
The engine must be switched off and the
parking brake activated when checking or
adjusting the roller, unless otherwise specified.***



***Ensure that there is good ventilation (air
extraction) if the engine is run indoors. Risk of
carbon monoxide poisoning.***




Air cleaner

- Check hoses and connections



Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.

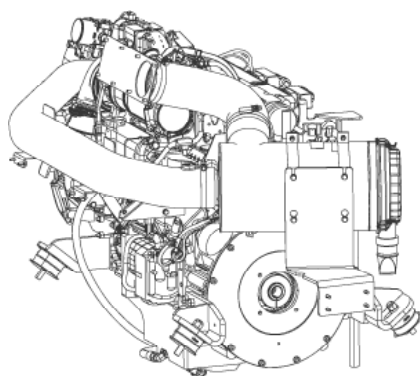

Replace if necessary, as damage to hoses/hose clamps can seriously damage the engine

Maintenance measures - 250 h

Every 250/750/1250/1750..... hours of operation (every 3 months)



Park the roller on a level surface. The engine must be switched off and the parking brake activated when checking or adjusting the roller, unless otherwise specified.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Drum cartridge - Checking the oil level

Position the roller on a flat surface with the groove (1) on the inside of the drum aligned with the top of the drum frame.

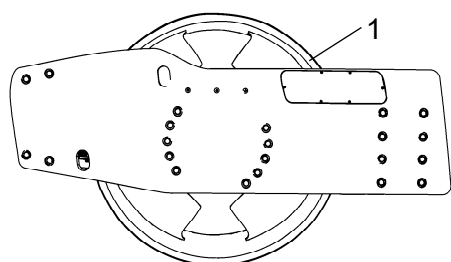


Fig. Left drum side
1. Groove

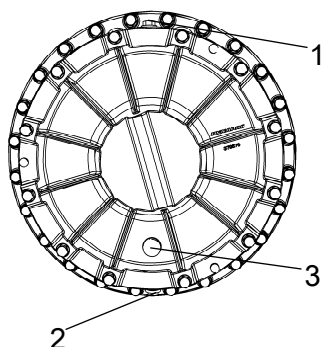


Fig. Left drum side
1. Filler plug
2. Drain plug
3. Sight glass

The oil should now come up to the sight glass (3).

If necessary, release the filler plug (1) and fill to half the sight glass (3).

Clean the magnetic filler plug (1) of any metallic residue, before refitting the plug.



Ensure that only AtlasCopco Drum Oil 1000 is used in the cartridges.



Do not overfill with oil - risk for overheating.

Now repeat the procedure on the opposite side of the drum.



Rear axle differential - Check oil level



Never work under the roller when the engine is running. Park on a level surface. Block the wheels securely.

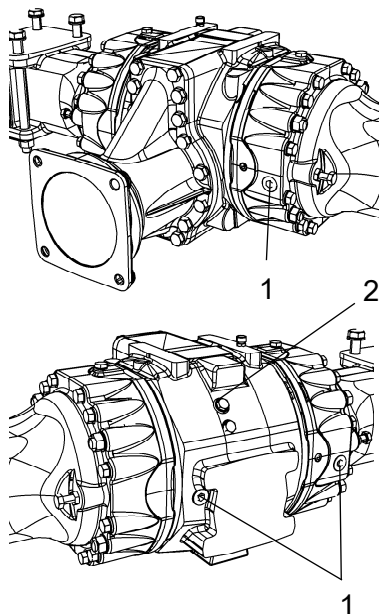


Fig. Level control - differential housing
1. Level plugs (x 3)
2. Filler plug

Wipe clean and remove the level plugs (1) and check that the oil level reaches the lower edge of the plug holes. The plugs can be found at the front or rear of the rear axle.

At a low level, remove the filler plug (2) and top up with oil to the correct level. Use transmission oil, see lubricant specifications.

Clean and refit the plug.



Rear axle planetary gears - Check oil level

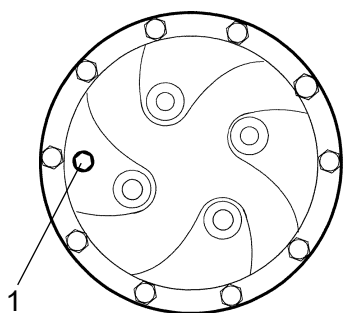


Fig. Level check - planetary gear
1. Level/Filler plug

Position the roller so that the level plug (1) in the planetary gear is at "9 o'clock" or "3 o'clock".

Wipe clean and remove the level plug (1) and check that the oil level reaches the lower edge of the plug hole. Top off with oil to the right level if the level is low. Use transmission oil. See lubrication specification.

Clean and refit the plug.

Check the fluid level in the same way on the rear axle's other planetary gear.



Drum gearbox - Checking the oil level

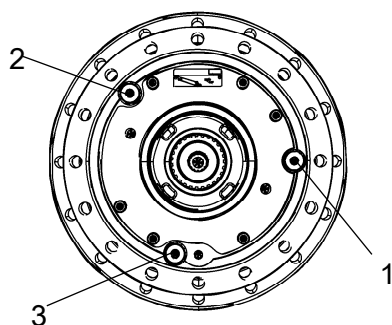


Fig. Oil level check - drum gearbox

- 1. Level plug
- 2. Filler plug
- 3. Drain plug

Wipe clean the area around the level plug (1) and then undo the plug.

Ensure that the oil level reaches up to the lower edge of the plug hole.

Top off with oil to the right level if the level is low. Use transmission oil according to the lubricant specification.

Clean and refit the plugs.

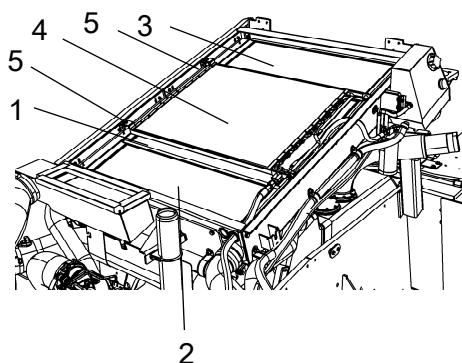


Fig. Engine compartment

- 1. Water cooler
- 2. Charge air cooler
- 3. Hydraulic fluid cooler
- 4. Condenser element AC (Optional)
- 5. Screws (x 2)

Radiator - Check/Cleaning

Check that air can pass unobstructed through the radiators (1), (2) and (3).

Clean a dirty radiator using compressed air or a high-pressure water jet.

Undo the two screws (5) and tilt the condenser element upwards.

Blow air or direct water through the cooler in the opposite direction to that of the cooling air.



Be careful when using a high-pressure washer - do not place the nozzle too close to the radiator.



Wear protective goggles when working with compressed air or high-pressure water jets.

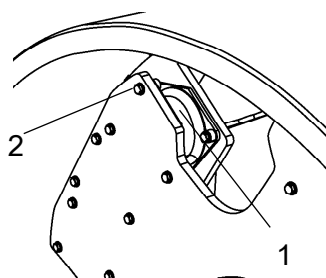


Fig. Drum, drive side
1. Rubber element
2. Attachment screws

Rubber elements and fastening screws - Check

Check all rubber elements (1), replace all of the elements if more than 25% of them on one side of the drum are cracked deeper than 10-15 mm (0.4-0.6 in).

Check using a knife blade or pointed object.

Check also that the screw fasteners (2) are tightened.



Battery

- Check condition

The batteries are sealed and maintenance-free.



Make sure there is no open flame in the vicinity when checking the electrolyte level. Explosive gas is formed when the alternator charges the battery.



When disconnecting the battery, always disconnect the negative cable first. When connecting the battery, always connect the positive cable first.

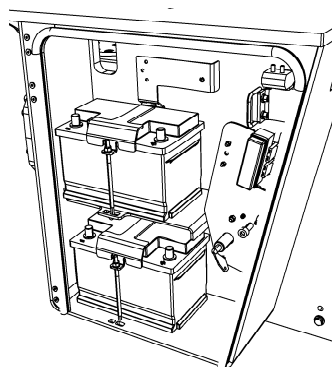


Figure. Batteries

The cable shoes should be clean and tightened. Corroded cable shoes should be cleaned and greased with acid-proof Vaseline.

Wipe the top of the battery.

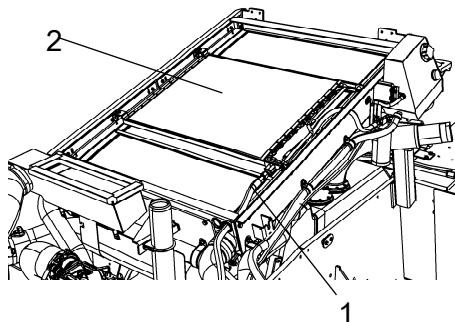


Fig. Air conditioning
1. Refrigerant hoses
2. Condenser element

Air conditioning (Optional)

- Inspection

Inspect refrigerant hoses and connections and make sure that there are no signs of an oil film that can indicate a refrigerant leakage.

The refrigerant contains tracing liquid, which makes it possible to detect leaks with the aid of a UV lamp. If the areas around the connections are strongly coloured, this is an indication of a leak.

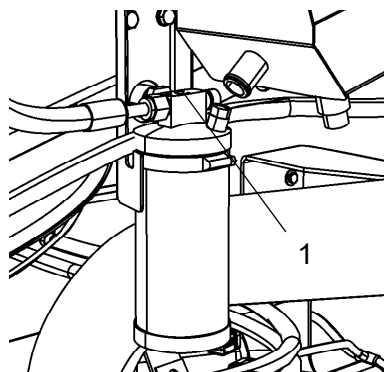


Fig. Drying filter
1. Sight glass

Automatic Climate Control (Optional) - Inspection

With the unit in operation, open the engine hood and check using the sight glass (1) that bubbles are not visible on the drying filter.

The filter is located on the right-hand side at the front edge of the engine compartment. If bubbles are visible through the sight glass, this is a sign that the refrigerant level is too low. If so, stop the unit. The unit may be damaged if it is run with insufficient refrigerant.

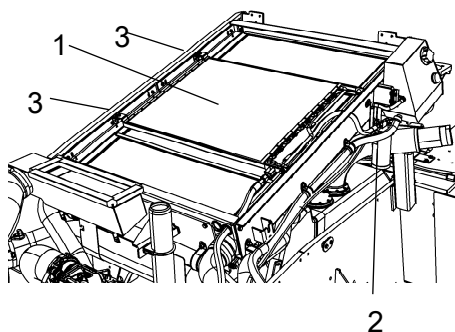


Fig. Engine compartment
1. Condenser element
2. Drying filter
3. Screws (x 2)

If there is a significant loss of cooling capacity, clean the condenser element (1) located above the coolers in the engine compartment.

Undo the two screws (3) and tilt the condenser element (1) upwards.

Also clean the cooling unit in the cab. See under the heading 2000 hours, air conditioning - overhaul.

Maintenance measures - 500 h

Every 500/1500..... hours of operation (every six months)



Park the roller on a level surface. The engine must be switched off and the parking brake activated when checking or adjusting the roller, unless otherwise specified.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Drum cartridge - Checking the oil level

Position the roller on a flat surface with the groove (1) on the inside of the drum aligned with the top of the drum frame.

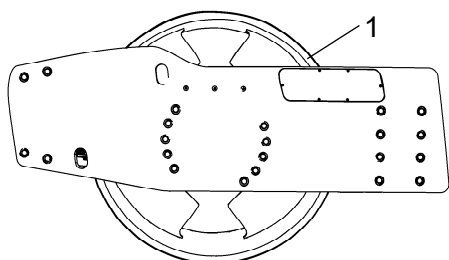


Fig. Left drum side
1. Groove

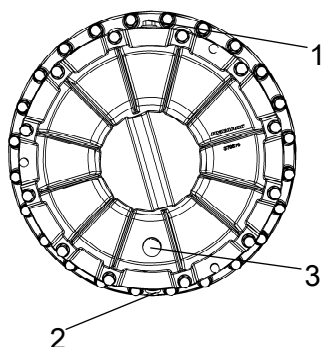


Fig. Left drum side
1. Filler plug
2. Drain plug
3. Sight glass

The oil should now come up to the sight glass (3).

If necessary, release the filler plug (1) and fill to half the sight glass (3).

Clean the magnetic filler plug (1) of any metallic residue, before refitting the plug.



Ensure that only AtlasCopco Drum Oil 1000 is used in the cartridges.



Do not overfill with oil - risk for overheating.

Now repeat the procedure on the opposite side of the drum.



Air cleaner

Checking - Change the main air filter



Change the air cleaner's main filter when the warning lamp on the display lights when the diesel engine is operating at full speed.

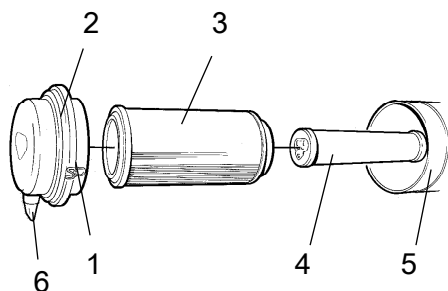


Fig. Air cleaner

- 1. Clips
- 2. Cover
- 3. Main filter
- 4. Backup filter
- 5. Filter housing
- 6. Dust valve

Release the clips (1), pull off the cover (2), and pull out the main filter (3).

Do not remove the backup filter (4).

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.

When replacing the main filter (3), insert a new filter and refit the air cleaner in the reverse order.

Check the condition of the dust valve (6); replace if necessary.

When refitting the cover, make sure that the dust valve is positioned downwards.



Backup filter - Change

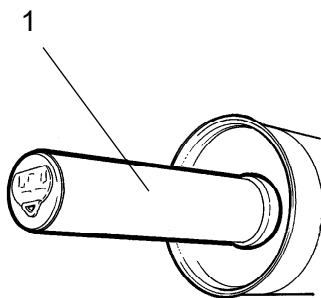


Fig. Air filter

- 1. Backup filter

Change the backup filter with a new filter after every second replacement of the main filter.


To change the backup filter (1), pull the old filter out of its holder, insert a new filter and reassemble the air cleaner in the reverse order.

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.




Air cleaner - Cleaning

Wipe clean on both sides of the outlet pipe.

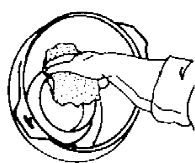


Inner edge of outlet pipe.

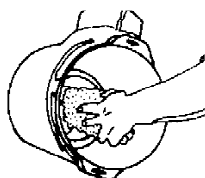

Outer edge of outlet pipe.

Wipe clean the inside of the cover (2) and the filter housing (5). See the previous illustration.

Wipe also both surfaces for the outlet pipe; see adjacent figure.

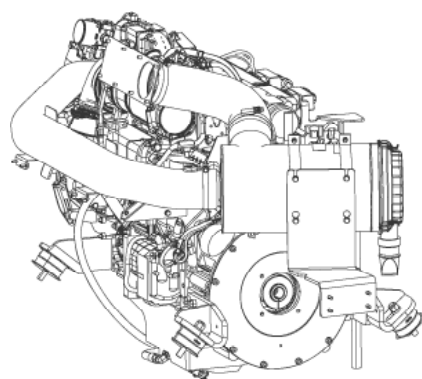

Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.



Rear axle differential - Check oil level



Never work under the roller when the engine is running. Park on a level surface. Block the wheels securely.

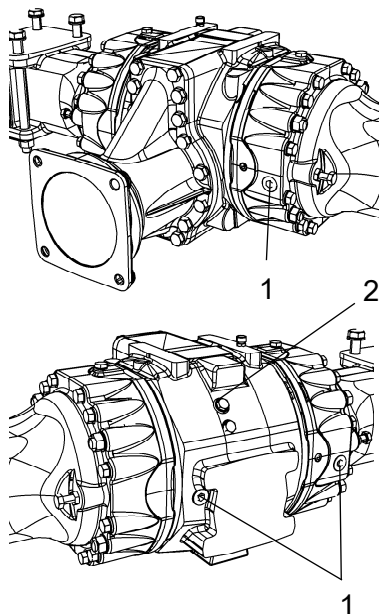


Fig. Level control - differential housing
1. Level plugs (x 3)
2. Filler plug

Wipe clean and remove the level plugs (1) and check that the oil level reaches the lower edge of the plug holes. The plugs can be found at the front or rear of the rear axle.

At a low level, remove the filler plug (2) and top up with oil to the correct level. Use transmission oil, see lubricant specifications.

Clean and refit the plug.



Rear axle planetary gears - Check oil level

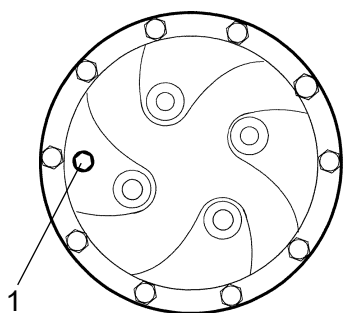


Fig. Level check - planetary gear
1. Level/Filler plug

Position the roller so that the level plug (1) in the planetary gear is at "9 o'clock" or "3 o'clock".

Wipe clean and remove the level plug (1) and check that the oil level reaches the lower edge of the plug hole. Top off with oil to the right level if the level is low. Use transmission oil. See lubrication specification.

Clean and refit the plug.

Check the fluid level in the same way on the rear axle's other planetary gear.



Drum gearbox - Checking the oil level

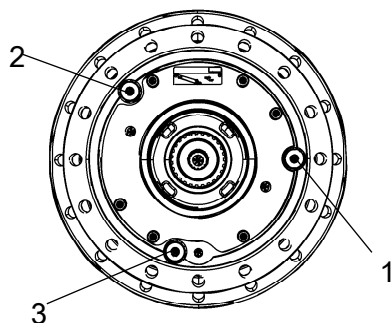


Fig. Oil level check - drum gearbox

- 1. Level plug
- 2. Filler plug
- 3. Drain plug

Wipe clean the area around the level plug (1) and then undo the plug.

Ensure that the oil level reaches up to the lower edge of the plug hole.

Top off with oil to the right level if the level is low. Use transmission oil according to the lubricant specification.

Clean and refit the plugs.

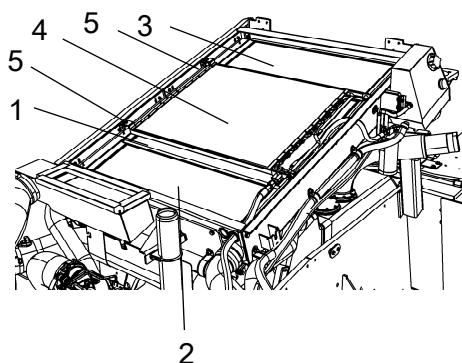


Fig. Engine compartment

- 1. Water cooler
- 2. Charge air cooler
- 3. Hydraulic fluid cooler
- 4. Condenser element AC (Optional)
- 5. Screws (x 2)

Radiator - Check/Cleaning

Check that air can pass unobstructed through the radiators (1), (2) and (3).

Clean a dirty radiator using compressed air or a high-pressure water jet.

Undo the two screws (5) and tilt the condenser element upwards.

Blow air or direct water through the cooler in the opposite direction to that of the cooling air.



Be careful when using a high-pressure washer - do not place the nozzle too close to the radiator.



Wear protective goggles when working with compressed air or high-pressure water jets.



Fuel pre-filter - Replacement



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

See the engine's instruction manual for filter replacement, in the Fuel system chapter.

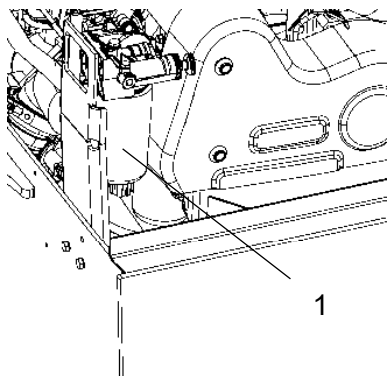


Fig. Engine compartment
1. Fuel prefilter



Replacing the fuel filter

Place a container underneath to collect fuel that runs out when the filter is released.

Screw off the fuel filter (1). The filter is of the disposable type and cannot be cleaned. Hand in to environment-friendly station.



Deliver the drain oil to environmentally correct handling.



Refer to the engine manual for detailed instructions when replacing the fuel filter.

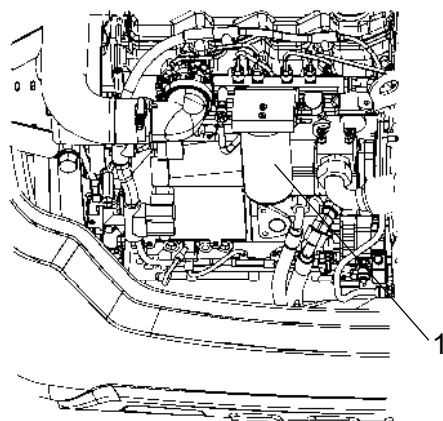


Fig. Engine compartment
1. Fuel filter

Start the engine and check that the fuel filter is tight.



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

NOTE! The new fuel filters must not under any circumstances be pre-filled with fuel due to the purity requirements of the fuel system.



Diesel engine - Oil and Filter change

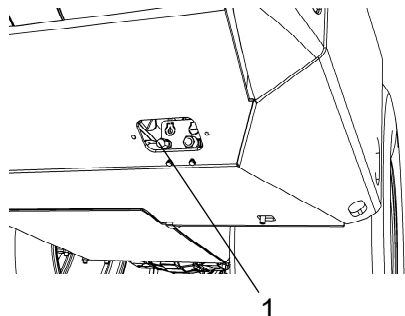


Fig. Tractor frame
1. Drain plug

The oil drain plug (1) can be accessed most easily from the right rear underside of the tractor frame, and is installed with a hose in the engine.

Drain the oil when the engine is warm. Place a receptacle that holds 19 liters (5 gal) under the drain plug.

Replace the engine oil filter (2) at the same time. Refer to the engine manual.

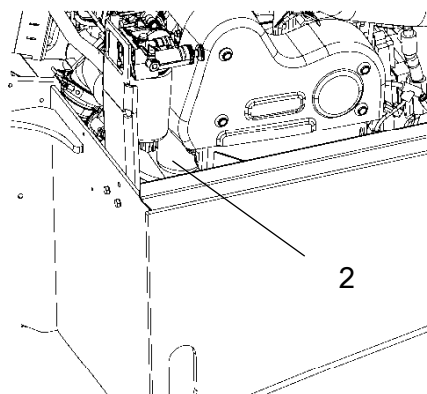


Fig. Engine compartment
2. Oil filter



Take great care when draining warm fluid and oil.
Wear protective gloves and goggles.



Hand in the drained oil and filter to an environment-friendly waste disposal station.



Hood, hinges - Lubrication


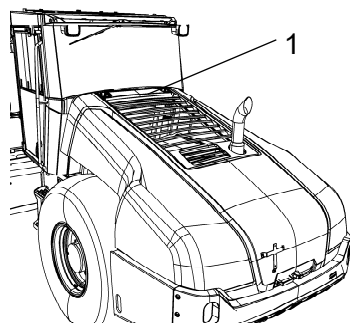


Fig. Hood
1. Hinge

 Lubricate engine hood hinges (1) and the slide rails of the operator's seat with grease, other joints and controls with oil. Lubricate the cab hinges with grease. See the lubrication specification.



Seat bearing - Lubrication



Keep in mind that the chain is a vital part of the steering mechanism.

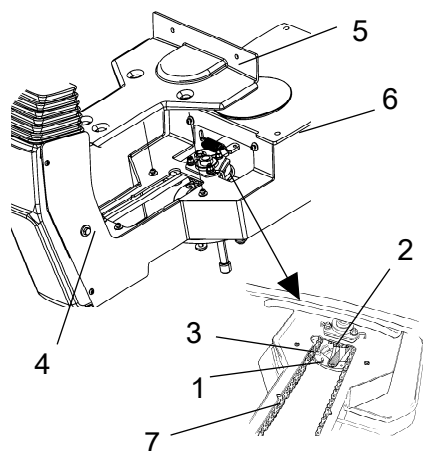


Figure. Seat bearing

- 1. Grease nipple
- 2. Gearwheel
- 3. Steering chain
- 4. Adjusting screw
- 5. Cover
- 6. Slide rails
- 7. Marking

Remove the cover (5) to access the lubrication nipple (1). Lubricate the operator seat slew bearing with three strokes of a hand-operated grease gun.

Clean and grease the chain (3) between the seat and the steering column.

Also grease the seat slide rails (6).

If the chain is slack on the sprocket (2), loosen the screws (4) and move the steering column forward. Tighten the screws and check chain tension.

Do not tension the chain too tightly. It should be possible to move the chain about 10 mm (0.4 in) to the side with a forefinger/thumb at the marking (7) in seat frame. Fit the chain lock at the bottom.



If the seat starts to be stiff when adjusting, it should be lubricated more often than specified here.

Maintenance - 1000h

Performed after 1000 operating hours (each year)



**Park the roller on a level surface.
The engine must be switched off and the parking brake activated when checking or adjusting the roller, unless otherwise specified.**



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Hydraulic filter - Replacement

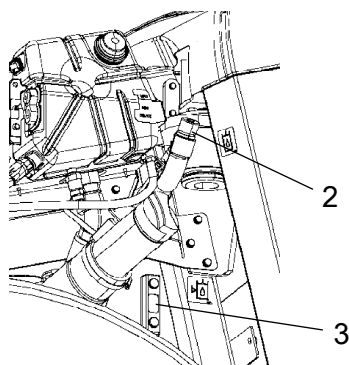


Fig. Hydraulic reservoir
2. Filler cap/Bleeding filter
3. Sight glass

Undo the filler cap/bleeder filter (2) on top of the reservoir so that over-pressure inside the reservoir can be eliminated.

Make sure that the bleeding filter (2) is not clogged, air must have unobstructed passage through the cap in both directions.

If passage in either direction is blocked, clean the filter with a little diesel oil and blow through with compressed air until the block is removed, or replace the cap with a new one.



Wear protective goggles when working with compressed air.

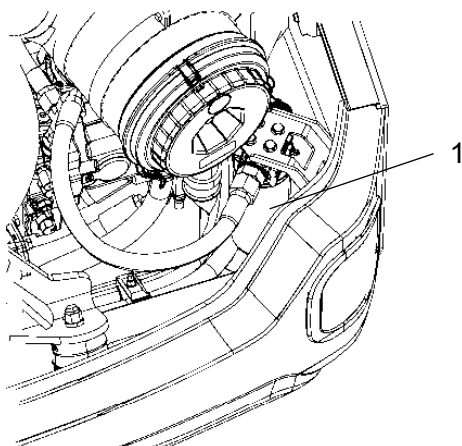


Fig. Engine compartment
1. Hydraulic fluid filter (x1).

Clean thoroughly around the oil filter.



Remove the oil filter (1) and hand in to an environment-friendly waste disposal station. This is a single-use filter and cannot be cleaned.



Make sure that the old sealing ring is not left on the filter holder, Otherwise, this could cause leakage between the new seal and the old one.

Thoroughly clean the filter holder's sealing surfaces.

Apply a thin coat of fresh hydraulic fluid on the new filter seal. Screw tight the filter by hand.



First tighten the filter until its seal is in contact with the filter attachment. Then turn an additional half revolution. Do not tighten the filter too hard as this could damage the gasket.

Start the engine and check that there is no leakage of hydraulic fluid from the filter. Check level of fluid in the sight glass (3) and top up as required.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Drum cartridge - Checking the oil level

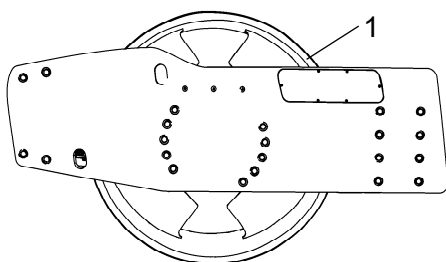


Fig. Left drum side
1. Groove

Position the roller on a flat surface with the groove (1) on the inside of the drum aligned with the top of the drum frame.

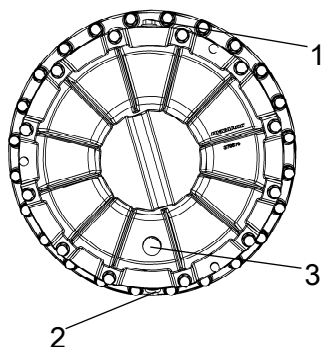


Fig. Left drum side

- 1. Filler plug
- 2. Drain plug
- 3. Sight glass



The oil should now come up to the sight glass (3).

If necessary, release the filler plug (1) and fill to half the sight glass (3).

Clean the magnetic filler plug (1) of any metallic residue, before refitting the plug.



Ensure that only AtlasCopco Drum Oil 1000 is used in the cartridges.



Do not overfill with oil - risk for overheating.

Now repeat the procedure on the opposite side of the drum.

Air cleaner

Checking - Change the main air filter



Change the air cleaner's main filter when the warning lamp on the display lights when the diesel engine is operating at full speed.

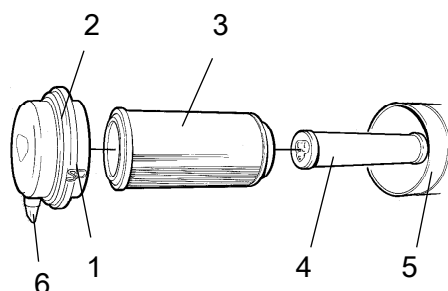


Fig. Air cleaner

- 1. Clips
- 2. Cover
- 3. Main filter
- 4. Backup filter
- 5. Filter housing
- 6. Dust valve

Release the clips (1), pull off the cover (2), and pull out the main filter (3).

Do not remove the backup filter (4).

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.

When replacing the main filter (3), insert a new filter and refit the air cleaner in the reverse order.

Check the condition of the dust valve (6); replace if necessary.

When refitting the cover, make sure that the dust valve is positioned downwards.



Backup filter - Change

Change the backup filter with a new filter after every second replacement of the main filter.

To change the backup filter (1), pull the old filter out of its holder, insert a new filter and reassemble the air cleaner in the reverse order.

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.

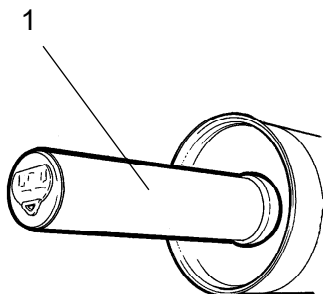



Fig. Air filter
1. Backup filter



Air cleaner - Cleaning

Wipe clean on both sides of the outlet pipe.


Wipe clean the inside of the cover (2) and the filter housing (5). See the previous illustration.

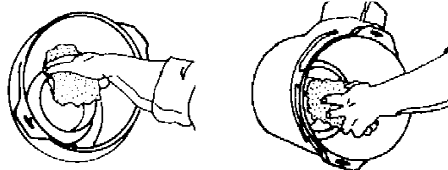

Inner edge of outlet pipe.

Outer edge of outlet pipe.

Wipe also both surfaces for the outlet pipe; see adjacent figure.

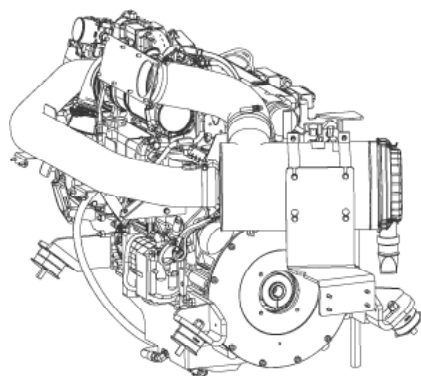

Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.



Rear axle differential - Oil change



Never work under the roller when the engine is running. Park on a level surface. Block the wheels securely.

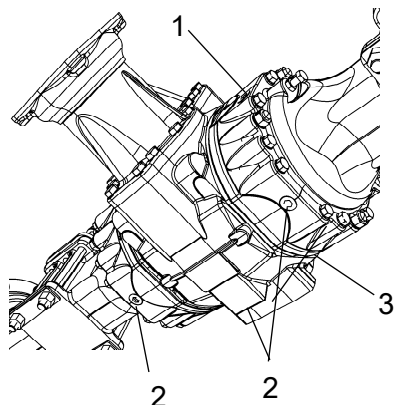


Fig. Rear axle, underside
1. Level/Filler plugs (x 3)
2. Drain plugs (x 3)
3. Filler plugs (x 3)

Wipe clean and remove the three level/filler plugs (1) and (3) and all three drain plugs (2). The level/filler plugs are located on the front and rear of the axle, and the drain plugs are located on the underside and rear. Drain the oil into a container. The volume is approx. 12.5 litres (13.2 qts).



Deliver the drain oil to environmentally correct handling.

Refit the drainage plugs and top up with fresh oil until the correct level is reached. Refit the level/filler plugs. Use transmission oil, see Lubricant Specification.



Rear axle planetary gear - Oil change

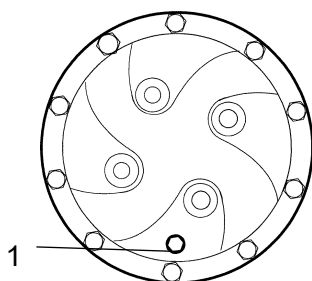


Fig. Planetary gear/drainage position
1. Plug

Position the roller with the plug (1) at its lowest position.

Wipe clean, unscrew the plug (1) and drain the oil into a suitable receptacle. The volume is approximately 1.85 liters (1.95 qts).



Oil should be taken to your local waste disposal station.

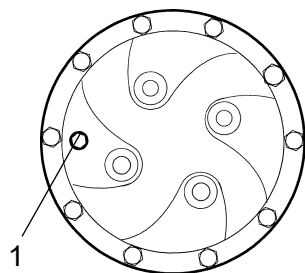


Fig. Planetary gear/filling position
1. Plug

Position the roller so that the plug (1) in the planetary gear is at "9 o'clock" or "3 o'clock".

Fill with oil to lower edge of level hole. Use transmission oil. See the lubrication specification.

Clean and refit the plug.

Check the fluid level in the same way on the rear axle's other planetary gear.



Drum gearbox - Oil change

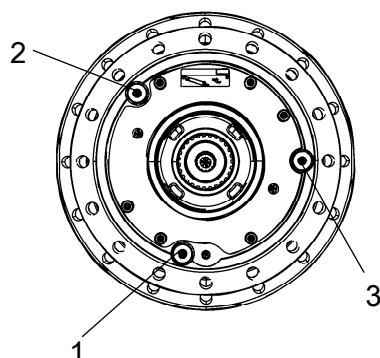


Fig. Drum gearbox
 1. Drain plug
 2. Filler plug
 3. Level plug

Wipe clean, unscrew the plugs (1, 2 and 3) and drain the oil into a suitable receptacle, capacity about 5.0 liters (5,3 qts.).

Refit the drain plug (1) and fill with oil up to the level plug (3), according to "Drum gearbox - Checking the oil level".

Use transmission oil according to the lubricant specification.

Clean and refit the level plug (3) and filler plug (2).

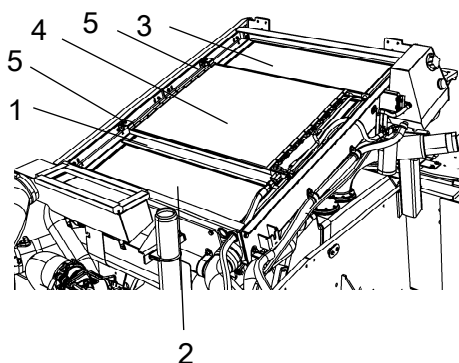


Fig. Engine compartment
 1. Water cooler
 2. Charge air cooler
 3. Hydraulic fluid cooler
 4. Condenser element AC (Optional)
 5. Screws (x 2)

Radiator - Check/Cleaning

Check that air can pass unobstructed through the radiators (1), (2) and (3).

Clean a dirty radiator using compressed air or a high-pressure water jet.

Undo the two screws (5) and tilt the condenser element upwards.

Blow air or direct water through the cooler in the opposite direction to that of the cooling air.



Be careful when using a high-pressure washer - do not place the nozzle too close to the radiator.



Wear protective goggles when working with compressed air or high-pressure water jets.



Fuel pre-filter - Replacement



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

See the engine's instruction manual for filter replacement, in the Fuel system chapter.

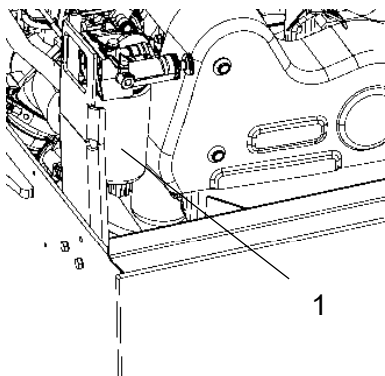


Fig. Engine compartment
1. Fuel prefilter



Replacing the fuel filter

Place a container underneath to collect fuel that runs out when the filter is released.

Screw off the fuel filter (1). The filter is of the disposable type and cannot be cleaned. Hand in to environment-friendly station.



Deliver the drain oil to environmentally correct handling.



Refer to the engine manual for detailed instructions when replacing the fuel filter.

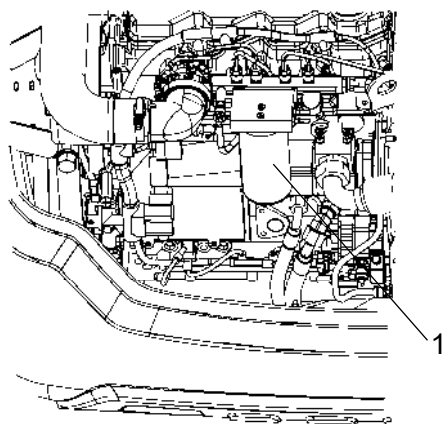


Fig. Engine compartment
1. Fuel filter

Start the engine and check that the fuel filter is tight.



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

NOTE! The new fuel filters must not under any circumstances be pre-filled with fuel due to the purity requirements of the fuel system.



Diesel engine - Oil and Filter change

The oil drain plug (1) can be accessed most easily from the right rear underside of the tractor frame, and is installed with a hose in the engine.

Drain the oil when the engine is warm. Place a receptacle that holds 19 liters (5 gal) under the drain plug.

Replace the engine oil filter (2) at the same time. Refer to the engine manual.

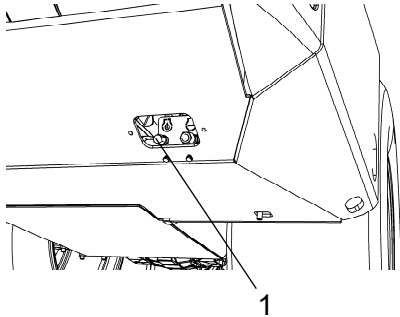


Fig. Tractor frame
1. Drain plug

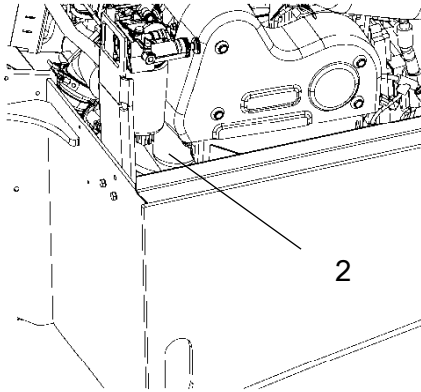



Fig. Engine compartment
2. Oil filter



***Take great care when draining warm fluid and oil.
Wear protective gloves and goggles.***



 Hand in the drained oil and filter to an environment-friendly waste disposal station.



Seat bearing - Lubrication



Keep in mind that the chain is a vital part of the steering mechanism.

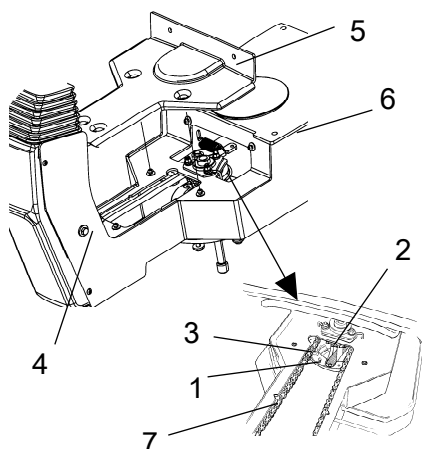


Figure. Seat bearing

1. Grease nipple
2. Gearwheel
3. Steering chain
4. Adjusting screw
5. Cover
6. Slide rails
7. Marking

Remove the cover (5) to access the lubrication nipple (1). Lubricate the operator seat slew bearing with three strokes of a hand-operated grease gun.

Clean and grease the chain (3) between the seat and the steering column.

Also grease the seat slide rails (6).

If the chain is slack on the sprocket (2), loosen the screws (4) and move the steering column forward. Tighten the screws and check chain tension.

Do not tension the chain too tightly. It should be possible to move the chain about 10 mm (0.4 in) to the side with a forefinger/thumb at the marking (7) in seat frame. Fit the chain lock at the bottom.



If the seat starts to be stiff when adjusting, it should be lubricated more often than specified here.



Hydraulic reservoir - Draining

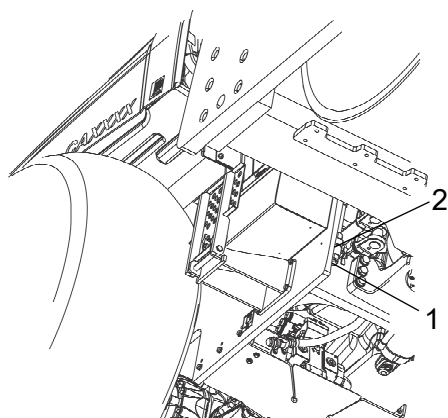


Fig. Machine's right underside

1. Drain cock
2. Plug

The condensate from the hydraulic reservoir is drained through the drainage tap (1).

Drain the roller after it has been stationary for a long time, e.g. after standing overnight. Drain as follows:

Remove the plug (2).

Place a container under the tap.

Open the tap (1) and let any trapped condensate run out.

Shut the drainage tap.

Refit the plug.



Fuel tank - Draining (Optional)

Water and sediment in the fuel tank are removed via the drainage plug in the bottom of the fuel tank.



Be very careful during draining. Do not drop the plug or else all the fuel will flow out.

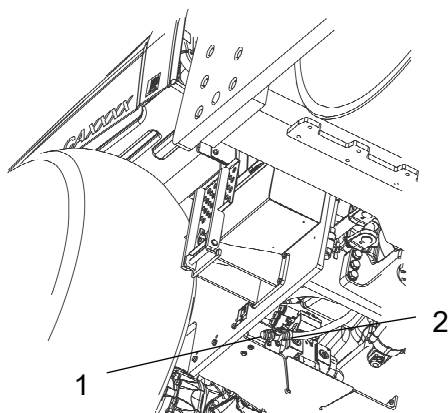


Fig. Machine's right underside
1. Drain plug
2. Drain cock

Drain the roller after it has been stationary for a long time, e.g. after standing overnight. The fuel level should be as low as possible.

The roller should preferably have been standing with this side somewhat lower, so that water and sediment will gather near the drainage plug (1). Drain as follows:

Place a container under the plug (1).

Loosen the drain plug (1). Then open the drain cock (2) and drain out water and sediment until only pure diesel fuel emerges at the plug. Close the drain cock and screw in the plug again.



Air conditioning (Optional)

Fresh air filter - Change



Use a step ladder to reach the filter (1). The filter can also be accessed via the right cab window.

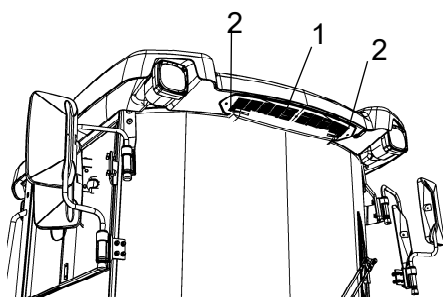


Fig. Cab
1. Fresh air filter (x 2)
2. Screws (x 3)

There is a fresh air filter (1), located at the front of the cab.

Undo the three screws (2) and remove the protective cover.

Remove the two air filter inserts and replace with new ones.

It may be necessary to change the filters more often if the machine is working in a dusty environment.

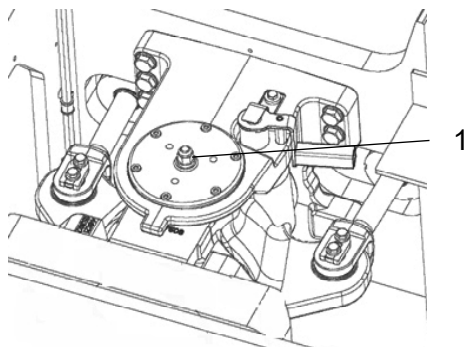


Fig. Steering hitch
1. Nut

Steering hitch - Tightening



Nobody must be allowed near the steering joint when the engine is running. Risk of being crushed when the steering is operated. Switch off the engine and activate the parking brake before lubricating.

The easiest way to identify if you have this type of steering hitch is that it has a new type of nut (1) at the top, as shown.

Actual torque (Nm) should be when the machine's position is straight ahead.

| | |
|-----|--------|
| M14 | 174 Nm |
| M16 | 270 Nm |

Maintenance - 2000h

Performed after 2000 operating hours (every two years)



Park the roller on a level surface. The engine must be switched off and the parking brake activated when checking or adjusting the roller, unless otherwise specified.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Hydraulic reservoir - Oil change

Obtain a container for collecting the used fluid. The container should be able to hold at least 60 liters (16 gal).



Observe care when draining hot hydraulic fluid. Wear protective gloves and goggles.

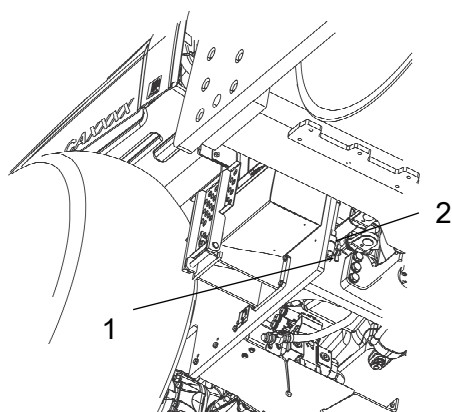


Fig. Machine's right underside
1. Drain cock
2. Plug

A suitable receptacle may be an empty oil drum or similar item which is placed beside the roller. The oil then runs from the drain cock (1) to the receptacle, after the plug (2) has been removed and the cock opened.



Save the oil and hand in to an environment-friendly waste disposal station.

Fill up with fresh hydraulic fluid as per the instructions under the heading "Hydraulic reservoir - Check fluid level". Replace the hydraulic fluid filters at the same time.

Start the diesel engine and operate the various hydraulic functions.

Check the fluid level and top up if necessary.



Hydraulic filter - Replacement

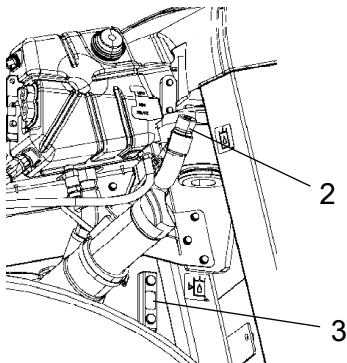


Fig. Hydraulic reservoir
2. Filler cap/Bleeding filter
3. Sight glass

Undo the filler cap/bleeder filter (2) on top of the reservoir so that over-pressure inside the reservoir can be eliminated.

Make sure that the bleeding filter (2) is not clogged, air must have unobstructed passage through the cap in both directions.

If passage in either direction is blocked, clean the filter with a little diesel oil and blow through with compressed air until the block is removed, or replace the cap with a new one.



Wear protective goggles when working with compressed air.

Clean thoroughly around the oil filter.



Remove the oil filter (1) and hand in to an environment-friendly waste disposal station. This is a single-use filter and cannot be cleaned.



Make sure that the old sealing ring is not left on the filter holder, Otherwise, this could cause leakage between the new seal and the old one.

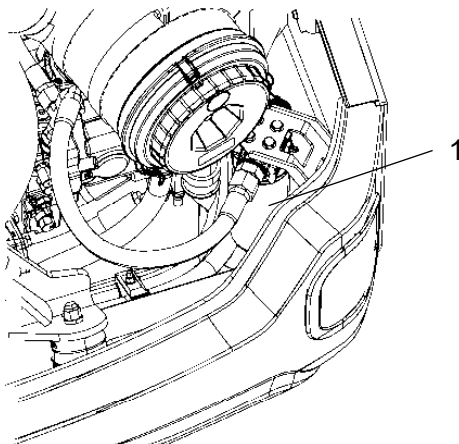


Fig. Engine compartment
1. Hydraulic fluid filter (x1).

Thoroughly clean the filter holder's sealing surfaces.

Apply a thin coat of fresh hydraulic fluid on the new filter seal. Screw tight the filter by hand.



First tighten the filter until its seal is in contact with the filter attachment. Then turn an additional half revolution. Do not tighten the filter too hard as this could damage the gasket.

Start the engine and check that there is no leakage of hydraulic fluid from the filter. Check level of fluid in the sight glass (3) and top up as required.



Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Drum cartridge - Oil change

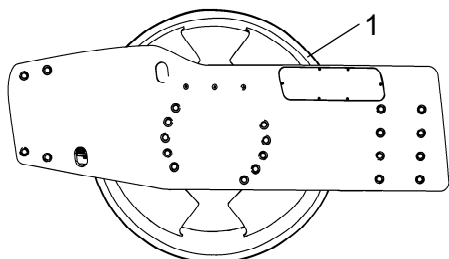


Fig. Left drum side
1. Groove

Position the roller on a flat surface with the groove (1) on the inside of the drum aligned with the top of the drum frame.

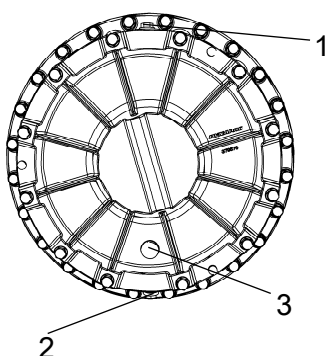


Fig. Left drum side
1. Filler plug
2. Drain plug
3. Sight glass

Place a receptacle for about 5 liters (1.32 gal) underneath the drain plug (2).



Observe care when draining drum oil/hot drum oil. Wear protective gloves and goggles.



Save the oil and hand in to an environment-friendly waste disposal station.

Clean and unscrew the filler plug (1) and the drain plug (2).

Allow all the oil to run out. Fit the drain plug and fill with new synthetic oil in accordance with the instructions under "Drum cartridge - checking the oil level".



Ensure that only AtlasCopco Drum Oil 1000 is used in the cartridges.

Repeat the procedure on the opposite side.



Air cleaner

Checking - Change the main air filter



Change the air cleaner's main filter when the warning lamp on the display lights when the diesel engine is operating at full speed.

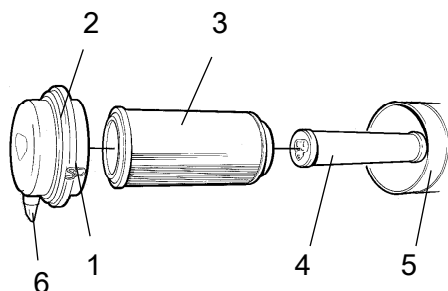


Fig. Air cleaner
 1. Clips
 2. Cover
 3. Main filter
 4. Backup filter
 5. Filter housing
 6. Dust valve

Release the clips (1), pull off the cover (2), and pull out the main filter (3).

Do not remove the backup filter (4).

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.

When replacing the main filter (3), insert a new filter and refit the air cleaner in the reverse order.

Check the condition of the dust valve (6); replace if necessary.

When refitting the cover, make sure that the dust valve is positioned downwards.



Backup filter - Change

Change the backup filter with a new filter after every second replacement of the main filter.

To change the backup filter (1), pull the old filter out of its holder, insert a new filter and reassemble the air cleaner in the reverse order.

Clean the air cleaner if necessary, see section Air cleaner - Cleaning.


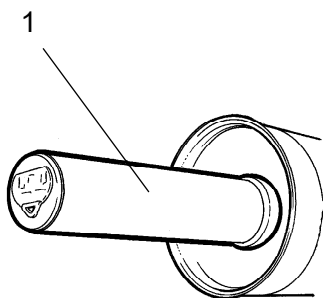


Fig. Air filter
 1. Backup filter




Air cleaner - Cleaning

Wipe clean on both sides of the outlet pipe.

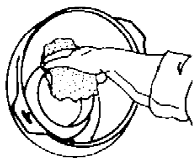


Inner edge of outlet pipe.

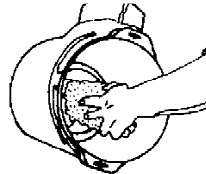

Outer edge of outlet pipe.

Wipe clean the inside of the cover (2) and the filter housing (5). See the previous illustration.

Wipe also both surfaces for the outlet pipe; see adjacent figure.

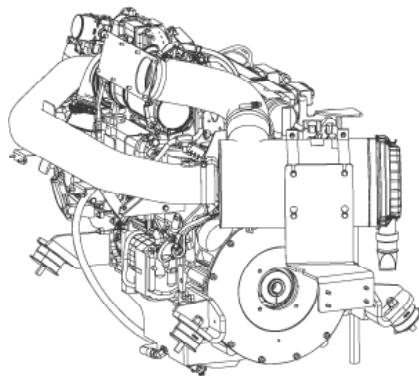

Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.



Rear axle planetary gear - Oil change

Position the roller with the plug (1) at its lowest position.

Wipe clean, unscrew the plug (1) and drain the oil into a suitable receptacle. The volume is approximately 1.85 liters (1.95 qts).



Oil should be taken to your local waste disposal station.

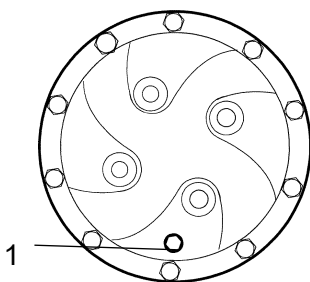


Fig. Planetary gear/drainage position
1. Plug

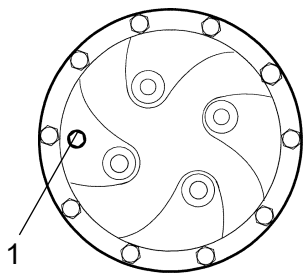


Fig. Planetary gear/filling position
1. Plug

Position the roller so that the plug (1) in the planetary gear is at "9 o'clock" or "3 o'clock".

Fill with oil to lower edge of level hole. Use transmission oil. See the lubrication specification.

Clean and refit the plug.

Check the fluid level in the same way on the rear axle's other planetary gear.



Rear axle differential - Oil change



Never work under the roller when the engine is running. Park on a level surface. Block the wheels securely.

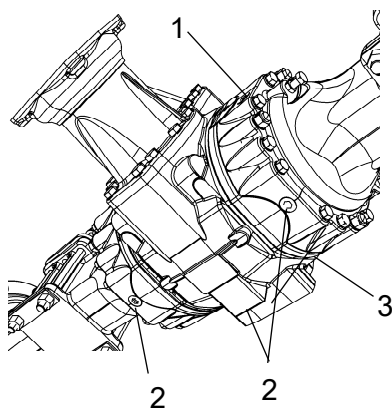


Fig. Rear axle, underside
1. Level/Filler plugs (x 3)
2. Drain plugs (x 3)
3. Filler plugs (x x)

Wipe clean and remove the three level/filler plugs (1) and (3) and all three drain plugs (2). The level/filler plugs are located on the front and rear of the axle, and the drain plugs are located on the underside and rear. Drain the oil into a container. The volume is approx. 12.5 litres (13.2 qts).



Deliver the drain oil to environmentally correct handling.

Refit the drainage plugs and top up with fresh oil until the correct level is reached. Refit the level/filler plugs. Use transmission oil, see Lubricant Specification.



Drum gearbox - Oil change

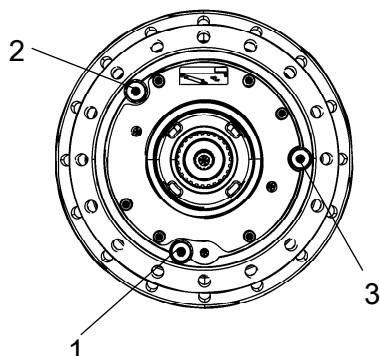


Fig. Drum gearbox

- 1. Drain plug
- 2. Filler plug
- 3. Level plug

Wipe clean, unscrew the plugs (1, 2 and 3) and drain the oil into a suitable receptacle, capacity about 5.0 liters (5,3 qts.).

Refit the drain plug (1) and fill with oil up to the level plug (3), according to "Drum gearbox - Checking the oil level".

Use transmission oil according to the lubricant specification.

Clean and refit the level plug (3) and filler plug (2).

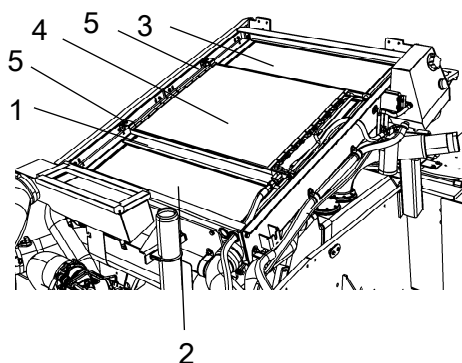


Fig. Engine compartment

- 1. Water cooler
- 2. Charge air cooler
- 3. Hydraulic fluid cooler
- 4. Condenser element AC (Optional)
- 5. Screws (x 2)

Radiator - Check/Cleaning

Check that air can pass unobstructed through the radiators (1), (2) and (3).

Clean a dirty radiator using compressed air or a high-pressure water jet.

Undo the two screws (5) and tilt the condenser element upwards.

Blow air or direct water through the cooler in the opposite direction to that of the cooling air.



Be careful when using a high-pressure washer - do not place the nozzle too close to the radiator.



Wear protective goggles when working with compressed air or high-pressure water jets.



Fuel pre-filter - Replacement



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

See the engine's instruction manual for filter replacement, in the Fuel system chapter.

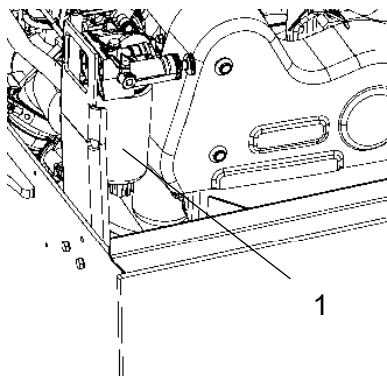


Fig. Engine compartment
1. Fuel prefilter



Replacing the fuel filter

Place a container underneath to collect fuel that runs out when the filter is released.

Screw off the fuel filter (1). The filter is of the disposable type and cannot be cleaned. Hand in to environment-friendly station.



Deliver the drain oil to environmentally correct handling.



Refer to the engine manual for detailed instructions when replacing the fuel filter.

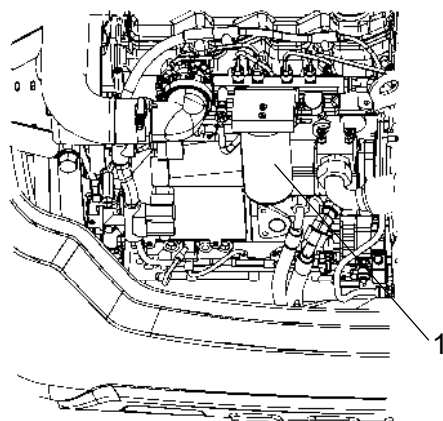


Fig. Engine compartment
1. Fuel filter

Start the engine and check that the fuel filter is tight.



Ensure good ventilation (air extraction) if the diesel engine is run indoors. Risk of carbon monoxide poisoning.

NOTE! The new fuel filters must not under any circumstances be pre-filled with fuel due to the purity requirements of the fuel system.



Diesel engine - Oil and Filter change

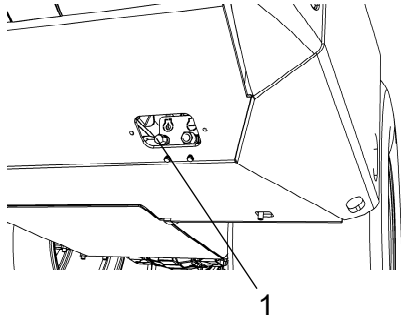


Fig. Tractor frame
1. Drain plug

The oil drain plug (1) can be accessed most easily from the right rear underside of the tractor frame, and is installed with a hose in the engine.

Drain the oil when the engine is warm. Place a receptacle that holds 19 liters (5 gal) under the drain plug.

Replace the engine oil filter (2) at the same time. Refer to the engine manual.

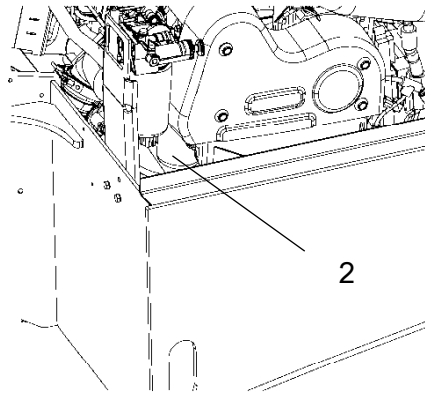



Fig. Engine compartment
2. Oil filter



Take great care when draining warm fluid and oil.
Wear protective gloves and goggles.



 Hand in the drained oil and filter to an environment-friendly waste disposal station.



Seat bearing - Lubrication



Keep in mind that the chain is a vital part of the steering mechanism.

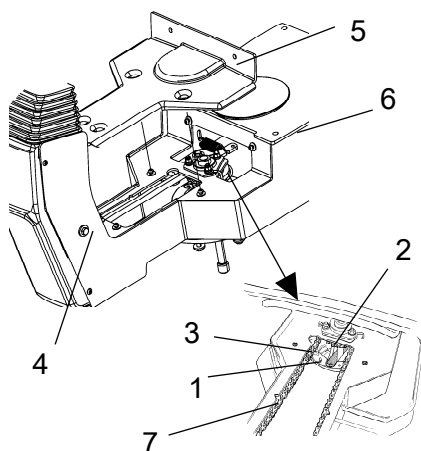


Figure. Seat bearing

- 1. Grease nipple
- 2. Gearwheel
- 3. Steering chain
- 4. Adjusting screw
- 5. Cover
- 6. Slide rails
- 7. Marking

Remove the cover (5) to access the lubrication nipple (1). Lubricate the operator seat slew bearing with three strokes of a hand-operated grease gun.

Clean and grease the chain (3) between the seat and the steering column.

Also grease the seat slide rails (6).

If the chain is slack on the sprocket (2), loosen the screws (4) and move the steering column forward. Tighten the screws and check chain tension.

Do not tension the chain too tightly. It should be possible to move the chain about 10 mm (0.4 in) to the side with a forefinger/thumb at the marking (7) in seat frame. Fit the chain lock at the bottom.



If the seat starts to be stiff when adjusting, it should be lubricated more often than specified here.



Hydraulic reservoir - Draining

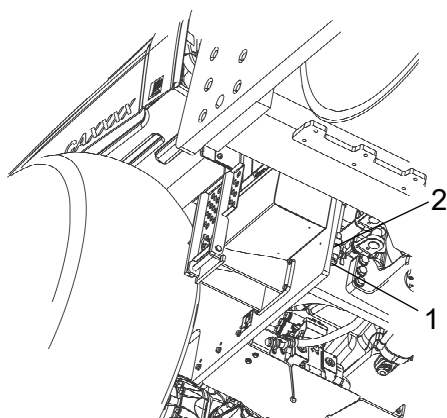


Fig. Machine's right underside

- 1. Drain cock
- 2. Plug

The condensate from the hydraulic reservoir is drained through the drainage tap (1).

Drain the roller after it has been stationary for a long time, e.g. after standing overnight. Drain as follows:

Remove the plug (2).

Place a container under the tap.

Open the tap (1) and let any trapped condensate run out.

Shut the drainage tap.

Refit the plug.



Fuel tank - Draining (Optional)

Water and sediment in the fuel tank are removed via the drainage plug in the bottom of the fuel tank.



Be very careful during draining. Do not drop the plug or else all the fuel will flow out.

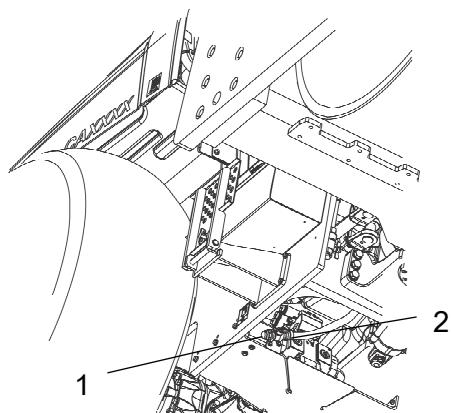


Fig. Machine's right underside
1. Drain plug
2. Drain cock

Drain the roller after it has been stationary for a long time, e.g. after standing overnight. The fuel level should be as low as possible.

The roller should preferably have been standing with this side somewhat lower, so that water and sediment will gather near the drainage plug (1). Drain as follows:

Place a container under the plug (1).

Loosen the drain plug (1). Then open the drain cock (2) and drain out water and sediment until only pure diesel fuel emerges at the plug. Close the drain cock and screw in the plug again.



Air conditioning (Optional) Fresh air filter - Change



Use a step ladder to reach the filter (1). The filter can also be accessed via the right cab window.

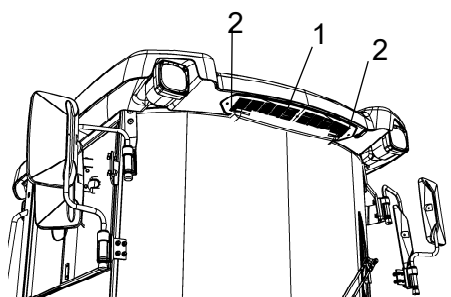


Fig. Cab
1. Fresh air filter (x 2)
2. Screws (x 3)

There is a fresh air filter (1), located at the front of the cab.

Undo the three screws (2) and remove the protective cover.

Remove the two air filter inserts and replace with new ones.

It may be necessary to change the filters more often if the machine is working in a dusty environment.

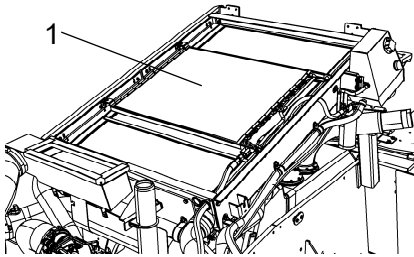


Fig. Engine compartment
1. Code element

Automatic Climate Control (Optional) - Overhaul

Regular inspection and maintenance are necessary to ensure satisfactory long-term operation.

Clean all dust from the condenser element (1) using compressed air. Blow from underneath.



The air jet can damage the element flanges if it is too powerful.



Wear protective goggles when working with compressed air.

Inspect the condenser element attachment.

Drying filter - Check

With the unit in operation, open the engine hood and check using the sight glass (1) that bubbles are not visible on the drying filter. If bubbles are visible through the sight glass, it is a sign that the refrigerant level is too low. If so, stop the unit. The unit may be damaged if it is run with insufficient refrigerant.

Check the moisture indicator (2). It should be blue. If it is beige, the dryer cartridge should be changed by an authorized service company.



The compressor will be damaged if the unit is run with too little refrigerant.



Do not disconnect or undo the hose couplings.



The cooling system is pressurized. Incorrect handling can result in serious personal injury.



The system contains pressurized refrigerant. It is forbidden to release refrigerants into the atmosphere. Work on the refrigerant circuit is only to be carried out by authorized companies.

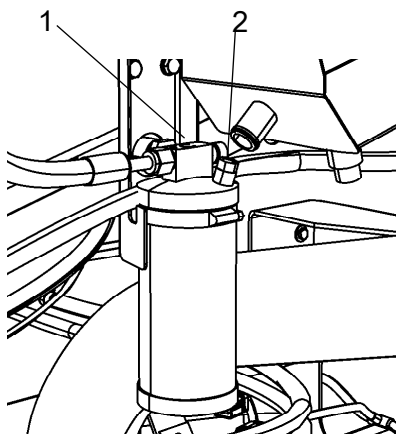


Fig. Drying filter in engine compartment
1. Sight glass
2. Moisture indicator

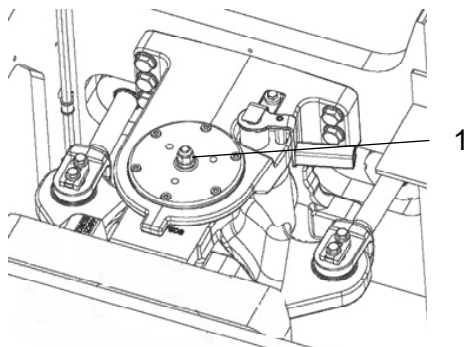


Fig. Steering hitch
1. Nut

Steering hitch - Tightening



Nobody must be allowed near the steering joint when the engine is running. Risk of being crushed when the steering is operated. Switch off the engine and activate the parking brake before lubricating.

The easiest way to identify if you have this type of steering hitch is that it has a new type of nut (1) at the top, as shown.

Actual torque (Nm) should be when the machine's position is straight ahead.

| | |
|-----|--------|
| M14 | 174 Nm |
| M16 | 270 Nm |



Atlas Copco Road Construction Equipment

Dynapac Compaction Equipment AB
Box 504, SE 371 23 Karlskrona, Sweden

www.dynapac.com