

# **Instructions** manual

# **Operating & Maintenance**

# 4812273203.pdf

Rubber wheel roller CP275 (IIIA/T3)

Diesel engine Cummins QSB4.5-C130

Serial number 10000509x0C003425 -



Original instructions. Reservation for changes Printed in China

# Table of contents

struction1
The machine1
Intended use1
Warning symbols1
Safety information
General3
fety – General instructions
ifety – when operating7
Slopes7
Driving near edges
ifety (Optional)
Air conditioning (Optional)
pecial instructions
Special instructions11
Standard lubricants and other recommended oil and fluids11
Standard lubricants and other recommended oil and fluids11 High ambient temperatures, above +40°C (104°F)11
High ambient temperatures, above +40°C (104°F)11
High ambient temperatures, above +40°C (104°F)11 Lower ambient temperature – Freeze risk11
High ambient temperatures, above +40°C (104°F)
High ambient temperatures, above +40°C (104°F).       11         Lower ambient temperature – Freeze risk.       11         Temperatures.       11         High pressure cleaning       12
High ambient temperatures, above +40°C (104°F)       11         Lower ambient temperature – Freeze risk       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12
High ambient temperatures, above +40°C (104°F)       11         Lower ambient temperature – Freeze risk       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12         Roll Over Protective Structure (ROPS), ROPS approved cab       12
High ambient temperatures, above +40°C (104°F).       11         Lower ambient temperature – Freeze risk.       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12         Roll Over Protective Structure (ROPS), ROPS approved cab       12         Jumping starting (24V)       14
High ambient temperatures, above +40°C (104°F)       11         Lower ambient temperature – Freeze risk       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12         Roll Over Protective Structure (ROPS), ROPS approved cab       12         Jumping starting (24V)       14         chnical specifications       15
High ambient temperatures, above +40°C (104°F)       11         Lower ambient temperature – Freeze risk       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12         Roll Over Protective Structure (ROPS), ROPS approved cab       12         Jumping starting (24V)       14         chnical specifications       15         Technical specifications       15
High ambient temperatures, above +40°C (104°F)       11         Lower ambient temperature – Freeze risk       11         Temperatures       11         High pressure cleaning       12         Fire fighting       12         Roll Over Protective Structure (ROPS), ROPS approved cab       12         Jumping starting (24V)       14         chnical specifications       15         Technical specifications       15         Noise level       15

General	18
Tightening torques	19
Machine description	21
Identification	21
Product identification number on the frame	21
Machine plate	21
Explanation of 17PIN serial number	22
Engine plate	22
Safety decals	24
Locations – Control panel and controls	27
Locations & control, cab	28
Function description of instruments and controls in the cab	29
Using the cab controls	
Defroster	
Heat	
AC	
Electrical system	31
Fuse	32
Cab, fuse	32
Operation	
Before starting	33
Master switch – Switching on	33
Before starting	34
1. Control panel and lights - Check	34
2. Forward and backward lever - Check	34
3. Parking brake - Check	35
View	35
Operator position	36
Interlock	36
Operating the roller	

Speed selecting	37
Operating on a slope	38
Checking the treads on the tires	
Variable tire pressure (air-on-the-run) (Option)	39
Ballast box	40
Driving (Ground Pressure)	41
Ground pressure	41
Low tire pressure – 380kPa (55 psi)	42
Normal tire pressure – 510kPa (70 psi)	43
High tire pressure – 780kPa (78 psi)	43
Interlock/Emergency stop/Parking brake - Check	44
Normal braking	44
Emergency braking	45
Switching off	45
Chocking the wheels	45
Master switch	46
Long-term parking	47
Miscellaneous	49
Lifting	49
Lifting the roller	49
Lifting the roller with jack	49
Roller prepare for transport	50
Towing the roller	52
Operating instructions - Summary	53
Preventive maintenance	55
Maintenance – Lubricants and symbols	57
Maintenance – Maintenance schedules	59
Service and maintenance points	59
General	60
Every 10 hours of operation (Daily)	60

After the FIRST 50 hours of operation	61
Every 50 hours of operation (Weekly)	61
Every 250 hours of operation (Monthly)	62
Every 500 hours of operation (Every three months)	62
Every 1000 hours of operation (Every six months)	63
Every 2000 hours of operation (Yearly)	64
Maintenance – 10h	65
Diesel engine – Check oil level	65
Hydraulic reservoir – Check fluid level	66
Coolant level – Check	66
Fuel tank – Refueling	67
Wheel scrapers – Control	68
Removing the scrapers	68
Water tank, std – Filling	69
Sprinkler system – Check	69
Sprinkler system	70
Cleaning of sprinkler nozzle	70
Sprinkler system - Check	70
Sprinkler system – Freeze risk	71
Freeze protection	71
Brake fluid level – Check	72
Tires - Tire pressure	72
Maintenance – 50h	73
Air cleaner – Cleaning	73
Hydraulic fluid cooler – Checking – Cleaning	74
Fuel filter – Draining	75
Air conditioning (Optional) – Drying filter – Inspection	76
Air conditioning (Optional) - Cleaning	76
Air conditioning (Optional) - Overhaul	77
Air conditioner compressor belt – Check	77

	78
Draining of air reservoir	79
Tires – Tire pressure	80
Maintenance – 250h	81
Fuel filter – Replacing	81
Diesel engine – Oil change	82
The engine fuel filter – Changing/cleaning	83
Diesel engine – Replacing oil filter	83
Oil – Water separator – Draining	84
Oil – Water separator – Replace	84
Battery – Check condition	85
Driven chain maintenance	86
Driving gear – Check oil level	87
Maintenance – 500h	
Hydraulic reservoir – Check	89
Maintenance – 1000h	91
Air cleaner – Checking – Change the main air filter	91
Hydraulic filter – Change	92
Cab – Fresh air filter - Replacing	93
Wheel gear – Oil change	93
Drive gear – Replenishing the oil	94
Propulsion pump filter – Replace	94
Propulsion pump filter – Replace Maintenance – 2000h	
	95
Maintenance – 2000h	<b>95</b> 95
Maintenance – 2000h Engine – Replace the coolant	95 95 96
Maintenance – 2000h Engine – Replace the coolant Hydraulic reservoir – Fluid change	
Maintenance – 2000h Engine – Replace the coolant Hydraulic reservoir – Fluid change Water tank – Cleaning.	
Maintenance – 2000h Engine – Replace the coolant Hydraulic reservoir – Fluid change Water tank – Cleaning Cab – Fresh air filter - Replacing	

	Oil spray system (Optional)	.101
	Spray volume – Adjustment	.102
	Maintenance – Oil spray system (Optional)	.102
	Temporary cleaning	.102
	Air on the run (Optional)	.103
	Air charge and discharge	.104
	Maintenance – Air on the run (Optional)	.104
C	Disposal	107

# Introduction

#### The machine

Dynapac CP275 is a heavy rubber wheel roller in the 27 tones class, with a working width of 2370 mm.

It has five guide wheels at the front, and four drive wheels at the back. The hydrostatic drives, flexible ballast solution, and a wide range of optional equipment mean that the machine is available in many different configurations.

#### Intended use

CP275 is mainly used together with other asphalt rollers for surface sealing. Thanks to its weight, it is also suitable for soil compaction.

The attachment or installation of additional devices, which are used to intervene in the function of the machine or with which its function are supplement, is only permitted with the written approval of the manufacturer.

If necessary, approval should be sought from local authorities.

Consent from the authorities is however no substitute for approval from the manufacturer.

#### Warning symbols

WARNING ! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.

**CAUTION!** Marks a danger or hazardous procedure that can result in damage to the machine or property if the warning is ignored.



#### Safety information

*It is recommended to at least train operators in handling and daily maintenance of the machine in accordance with the instruction manual.* 

Passengers are not allowed on the machine, and you must sit in the seat when operating the machine.

The safety manual supplied with the machine must be read by all roller operators. Always follow the safety instructions. Do not remove the manual from the machine.

We recommend that the operator reads the safety instructions in this manual carefully. Always follow the safety instructions. Ensure that this manual is always easily accessible.

**A** Read the entire manual before starting the machine and before carrying out any maintenance.

**A** Replace immediately the instruction manuals if lost, damaged or unreadable.

**A** Ensure good ventilation (extraction of air by fan) where the engine is run indoors.

Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines.

The operator may allow a person to remain in the danger area, but should then observe caution and operate the machine only when the person is visible or has given clear indications of where he or she is.

#### General

This manual contains instructions for machine operation and maintenance.

The machine must be correctly maintained for maximal performance.

The machine should be kept clean so that any leakages, loose bolts and loose connections are discovered at as early a point in time as possible.

Inspect the machine every day, before starting. Inspect the entire machine so that any leakages or other faults are detected.

Check the ground under the machine. Leakages are more easily detected on the ground than on the machine itself.

THINK ENVIROMENT! Do not release oil, fuel and other environmentally hazardous substances into the environment. Always send used filters, drain oil and fuel remnants to environmentally correct disposal.

This manual contains instructions for periodic maintenance normally carried out by the operator.

Additional instructions for the engine can be found in the manufacture's engine manual.





# Safety - General instructions (Also read the safety manual)

A

1. The operator must be familiar with the contents of the OPERATION section before starting the roller.

2. Ensure that all instructions in the MAINTENANCE section are followed.

3. Only trained and/or experienced operators are to operate the roller. Passengers are not permitted on the roller. Remain seated at all times when operating the roller.

4. Never use the roller if it is in need of adjustment or repair.

5. Only mount and dismount the roller when it is stationary. Use the intended grips and rails. Always use the three-point grip (both feet and one hand, or one foot and both hands) when mounting or dismounting the machine. Never jump down from the machine.

6. The ROPS (Roll Over Protective Structure) should always be used when the machine is operated on unsafe ground.

7. Drive slowly in sharp bends.

8. Avoid driving across slopes. Drive straight up or straight down the slope.

9. Make sure that there are no obstacles in the direction of travel, on the ground, in front of or behind the roller, or overhead

10. Drive particularly carefully on uneven ground.

11. Use the safety equipment provided. The seat belt must be worn on machines fitted with ROPS.

12. Keep the roller clean. Clean any dirt or grease that accumulates on the operator platform immediately. Keep all signs and decals clean and legible.

- 13. Safety measures before refueling:
- Shut off the engine
- Do not smoke
- No naked flame in the vicinity of the machine
- Ground the filling device nozzle to the tank to avoid sparks
- 14. Before repairs or service:
- Chock the wheels.
- Lock the hitch system when necessary.

15. Hearing protection is recommended if the noise level exceeds 85 dB(A). The noise level can vary depending on the equipment on the machine and the surface the machine is being used on.



16. Do not make any changes or modifications to the roller that could affect safety. Changes are only to be made after written approval has been given by Dynapac.

17. Avoid using the roller before the hydraulic fluid has reached its normal working temperature. Braking distances can be longer than normal when the fluid is cold. Refer to the operating instruction in the STOP section.

- 18. For your own protection always wear:
- Helmet
- working boots with steel toecaps
- ear protectors
- reflecting clothing/high visibility jacket
- working gloves

#### Safety – When operating

Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines. The operator may allow a person to remain in the danger area, but should then observe caution and operate the machine only when the person is visible or has given clear indications of where he or she is.

#### Slopes

This angle has been measured on a hard, flat surface with the machine stationary.

The steering angle is zero, the tires have normal air pressure and all the tanks are full.


Always take into consideration that loose ground, the steering of the machine, different tire pressures, the operating speed and that an increase in the center of gravity can all cause the machine to topple even on slopes with lesser gradients than those specified here.

**A** To exit the cab in an emergency, release the hammer on the rear right post and break the right opening side-windows.

It is recommended that ROPS (Roll Over Protective Structure) or a ROPS approved cab, is always used when driving on slopes or unsafe ground.


Always use the lowest gear when operating on slopes.

Where possible, avoid driving across slopes. Drive instead straight up and down sloping ground.

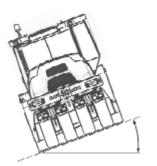

Max. 15° or 27% *Fig. Operating on slopes* 



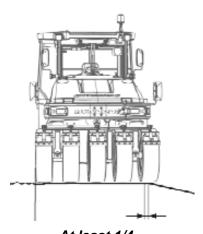

# Driving near edges

When driving close to edges or holes, make sure that at least 1/4 of the outer tires are on the previously compacted material.

At least 1/4

Fig. Position of wheels when driving near an edge

# Safety (Optional)


# Air conditioning (Optional)

The system contains pressurized refrigerant. It is forbidden to release refrigerants into the atmosphere.

Work on the refrigerant circuit is only to be carried out by authorized companies.

The cooling system is pressurized. Incorrect handling can result in serious personal injury. Do not disconnect or undo the hose couplings.

The system must be re-filled with an approved refrigerant by authorized personnel when necessary. See decal on or in the vicinity of the installation.

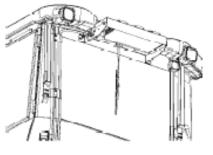

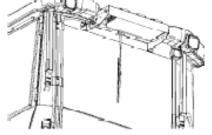


Fig. Operating on slopes







# Special instructions

# Standard lubricants and other recommended oils and fluids

Before leaving the factory, the systems and components are filled with the oils and fluids specified in the lubricant specification. These are suitable for ambient temperatures in the range  $-15^{\circ}$ C to  $+40^{\circ}$ C -  $105^{\circ}$ F).

#### Higher ambient temperatures, above +40°C (104°F)

For operation of the machine at higher ambient temperatures, however maximum +50°C (122°F), the following recommendations apply:

The diesel engine can be run at this temperature using normal oil. However, the following fluids must be used for other components:

Hydraulic system - mineral oil Shell Tellus T100 or similar.

#### Lower ambient temperature - Freeze risk

Make sure that the watering system is empty/drained of water (sprinkler, hoses, tank/s) or that anti-freeze has been added, to prevent the system freezing.

#### Temperatures

The temperature limits apply to standard versions of rollers.

Rollers equipped with additional equipment, such as noise suppression, may need to be more carefully monitored in the higher temperature ranges.



#### High pressure cleaning

Do not spray water directly onto electrical components or the instrument panels.

Place a plastic bag over the fuel filler cap and secure with a rubber band. This is to avoid high pressure water entering the vent hole in the filler cap. This could cause malfunctions, such as the blocking of filters.

#### **Fire fighting**

If the machine catches fire, use an ABC-class powder fire extinguisher.

A BE-class carbon dioxide fire extinguisher can also be used.

Roll Over Protective Structure (ROPS), ROPS approved cab

If the machine is fitted with a Roll Over Protective Structure (ROPS, or ROPS approved cab) never carry out any welding or drilling in the structure or cab.

**A** Never attempt to repair a damaged ROPS structure or cab. These must be replaced with new ROPS structure or cabs.

#### **Battery handling**

When removing batteries, always disconnect the negative cable first.



When fitting batteries, always connect the positive cable first.

Dispose of old batteries in an environmentally friendly way. Batteries contain toxic lead.

Do not use a quick-charger for charging the battery. This may shorten battery life.



Jump starting (24V)

**A** Do not connect the negative cable to the negative terminal on the dead battery. A spark can ignite the oxy-hydrogen gas formed around the battery.


**Check** that the battery used for jump starting has the same voltage as the dead battery.

Turn the ignition and all power consuming equipment off. Switch off the engine on the machine which is providing jump start power.

#### Jump leads must have 24V

First connect the plus terminal (1) on the auxiliary battery to the plus terminal (2) on the flat battery, then connect the minus terminal (3) to a suitable earth point (4) on the machine.

Start the engine on the power providing machine. Let it run for a while. Now try to start the other machine. Disconnect the cables in the reverse order.

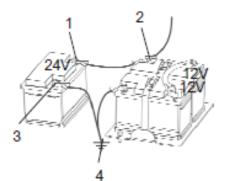




## **Technical specifications**

#### Noise level

The noise levels are measured in accordance with the operational cycle described in GB16710 with operator seat in transport position.

Guaranteed sound power level, LwA	108dB(A)
Sound pressure level at the operator's ear (cab), LpA	89dB(A)

# Technical specifications – Dimensions Dimensions

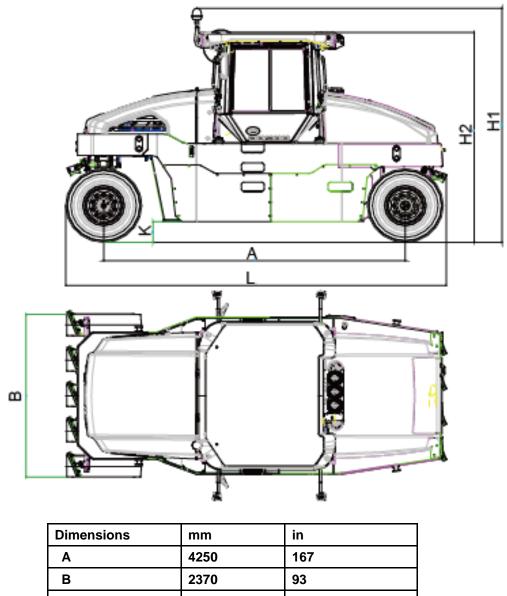

~	4230	107
В	2370	93
H1	3408	134
H2	3100	122
К	360	14.2
L	5310	209

# Weights and volumes

Weights		
Weight without ballast	15100kg	33290lbs
Weight with max ballast	30000kg	66139lbs
Fluid volumes		
Hydraulic reservoir	80Liters	70.4Quart
Diesel engine oil	9Liters	7.9Quart
Coolant, diesel engine	20Liters	17.6Quart
Fuel tank	320Liters	281.7Quart
Rear axle	20Liters	17.6Quart
Water tank	600Liters	528.2Quart
Air condition system		
Coolant designation:	HFC-R134:A	
Coolant weight when full:	1350 gram (2.98	lbs)
Mixed ballast - max	11.8tonnes	14.2tonnes
	The machine can use 4 st steel blocks as ballast in the Yellow type blocks are mou type blocks are mounted on Use a suitable combination The roller's service weight of The roller plus the weight of Thicker layers require compaction, while thinner la heavy roller.	e lower of the frame. unted on the front; black the rear. to achieve max ballast. consists of the weight of the ballast. a heavier roller for

#### Working capacity

#### **Compaction data**

Load:			
- Without ballast	1677kg	3697lbs	
- With max ballast	3333.3kg	7349lbs	

#### General

Engine		
Manufacturer/Model	Cummins QSB4.5-C130	
Rated power (SEA J1995)	97kW	130hp
Engine speed	2200 rpm	

#### Electric system

Battery	24V (2x12V 74Ah)
Alternator	28V 70A
Fuses	See the Electrical system section - fuses

Bulbs (if mounted)	Watt	Socket
Drive lights, front	75/50	P43t (H4)
Direction lights, front	21	BA 15s Si
Brake-Position lights	21	BA 15s
Direction lights, rear	21	BA
Working lights	70	PK22s (H3)
Cab lights	5	C5W

#### Tightening torque

Tightening torque in Nm (lbf.ft) for oiled or dry bolts tightened with a torque wrench.

	I	I	1	1	1	1
M - thread	8.8, Oiled	8.8, Dry	10.9, Oiled	10.9, Dry	12.9, Oiled	12.9, Dry
M6	8,4	9,4	12	13,4	14,6	16,3
M8	21	23	28	32	34	38
M10	40	45	56	62	68	76
M12	70	78	98	110	117	131
M14	110	123	156	174	187	208
M16	169	190	240	270	290	320
M20	30	370	470	520	560	620
M22	446	497	626	699	752	839
M24	570	640	800	900	960	1080
M30	1130	1260	1580	1770	1900	2100

#### Metric coarse screw thread, bright galvanized (fzb): STRENGTH CLASS:

# Metric coarse thread, zinc-treated (Dacromet/GEOMET):

#### STRENGTH CLASS:

M - thread	10.9, Oiled	10.9, Dry	12.9, Oiled	12.9, Dry
M6	12,0	15,0	14,6	18,3
M8	28	36	34	43
M10	56	70	68	86
M12	98	124	117	147
M14	156	196	187	234
M16	240	304	290	360
M20	470	585	560	698
M22	626	786	752	944
M24	800	1010	960	1215
M30	1580	1990	1900	2360

#### **ROPS - bolts**

Bolt dimensions:	M22 (PN 4812266655)
Strength class:	10.9
Tightening torque:	786 Nm

#### Hydraulic system

Opening pressure	Мра
Drive system	42,0
Charge system	2,5
Control system	16,0
Fan drive	12,5
Brake release	2,5



 


Fig. Front frame 1. PIN

# **Machine description**

#### Identification

#### Production identification number on the frame

The machine's PIN (product identification number) is punched on the right edge of the frame (1). This number is the same number as the machine plate's PIN (serial number).



#### Machine plate

The machine plate (1) is fixed on the top step, on the left side of the operator platform.

The plate specifies the manufacturer's name and address, the type of machine, the PIN number (serial number), service weight, engine power and year of manufacture. (On machines supplied outside the EU, there are no CE markings and in some cases no year of manufacture.).

		Compaction ad. Wurging High				
Product Ide	ntification	Number				
• .		Type-	Rated	Power-	Max axle lo	ad front / rear-
				KW/		ki ki
Gross machine	ry mass-	Operating mass	-		allast	Year of Mg-

Please state the machine's PIN when ordering spares.

100	00123	۷	0	Α	123456
Α	В	С	D	Ε	F

#### Explanation of 17PIN serial number

A= Manufacturer B= Family/Model C= Check letter D= No coding E= Production unit F= Serial number

D, E, F would be useful when ordering spare parts or check the machine information.

#### Engine plate

The engine's type plate is located under the engine hood and is accessible when the hood is opened.


The plate specifies the type of engine, its serial number and the engine specification. Please specify the engine serial number when ordering spares. Refer also to the engine manual.

AAAMARAAAAAAA Jaraha Jamma Kata Jan	AND A CONTRACTOR OF A CONTRACTOR OF A CONTRACTOR OF A CONTRACTOR A CON	en la co local de nom con i condi la com antes i nom na travis, travella n al com antes i nom na contes cont n al contes contes contes cont na contes contes de la contes de la contes
Inter solars 10	TYPE	CM2150
ECM型号 ECM零件号 ECM生产厂家 ECM生产序号	P/N MFG S/N D/C	4988820 Continental 49601 2013.11.21
ECM标定日期 ECM标定代码 ECM标定软件 发动机序列号	E/C SC ESN	x042052.00 87595576 5254856



Fig. Engine



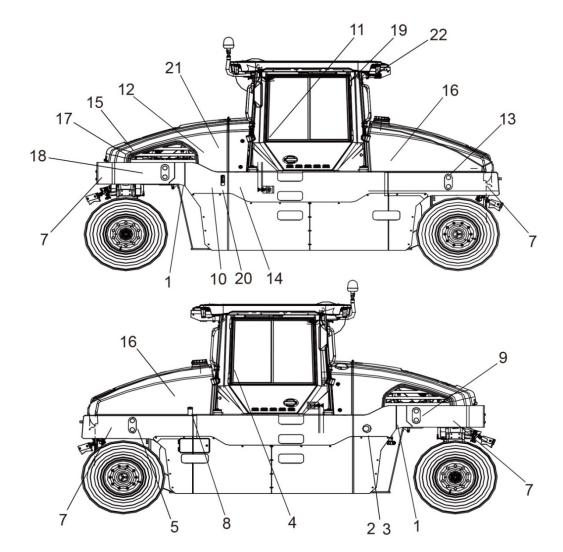

1	Warning, crush zone	4700903422			
2	Warning, rotating engine	4700903423			
2	components	4700303423			
3	Warning, burning hot surface	4700903424	14	Battery voltage	4700393959
4	Warning, instruction manual	4700903459	15	Water tank	4700991657
6	Hoisting plate	4700904870	16	Warning, high pressure fluid	4700397286
7	Tire pressure	4700374765	17	Warning, starting gas	4700791642
8	Diesel fuel	4700991658	18	Emergency exit (cab only)	4700903590
9	Fixing point	4700357587			
10	Hydraulic fluid	4700272372			
11	Handbook compartment	4700903425	19	Coolant	4700388449
12	Battery disconnector	4700904835	20	Warning, toxic gas	4700904185
13	Fixing point	4700382751			

#### Safety decals

Always make sure that all safety decals are completely legible, and remove dirt or order new decals if they have become illegible. Use the part number specified on each decal.



4700903422 Warning - Crush zone, wheel. Maintain a safe distance from the crush zone.



4700903423 Warning - Rotating engine components. Keep your hands at a safe distance from the danger zone.



111

#### 4700903424

Warning - Hot surfaces in the engine compartment.

Keep your hands at a safe distance from the danger zone.



Warning - Brake disengagement Study the towing chapter before disengaging the brakes. Danger of being crushed.

### 4700903459

Warning - Instruction manual The operator must read the safety, operation and maintenance instructions before operating the machine.

4700791642 Warning - Starting gas Starting gas is not to be used.





4700904165 Warning - Toxic gas

Read the instruction manual.

#### 4700397286

Warning - High pressure fluid

Make sure to drain the pressure in the accumulators before opening the hydraulic system.











#### Emergency exit (cab only)





0



0






Handbook compartment







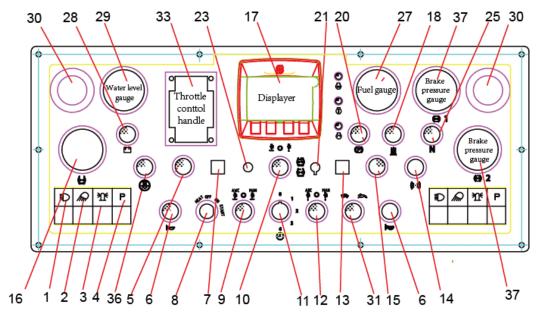


#### Locations - Control panel and controls



2

5

8

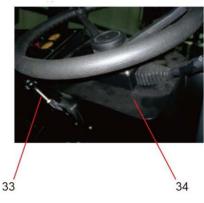



#### 32 Driving lights switch

1


- 4 Parking brake 7 Steering indicator (Left) 10 Water/Oil sprinkler selector Direction indicator (Right) 13 Tire barometer (Optional) 16 20 Parking indicator 25 Neutral position indicator Water level gauge (water 29 tank) Forward/Reverse lever 32
- 35 Brake pedal
- Working lights switch Control indicator (left) Start switch 11 Oil/Water sprinkle time control Hazard warning lights 14 17 Display Centralized air filling pressure 21 control button 27 Fuel gauge 30 Emergency stop switch
- 33 Throttle control handle
- Air filter blockage alarm lamp 36

- 3 Rotation beacon switch
- 6 Horn

9

- Manual/Automatic water sprinkler
- 12 Manual/Automatic oil sprinkler
- 15 Control indicator (Right)
- 18 Oil filter blockage alarm indicator
- 23 Left/Right control panel button
- 28 Charging indicator
- 31 Speed selector
- 34 Direction control switch (Left/Right)
- 37 Brake presage gauge



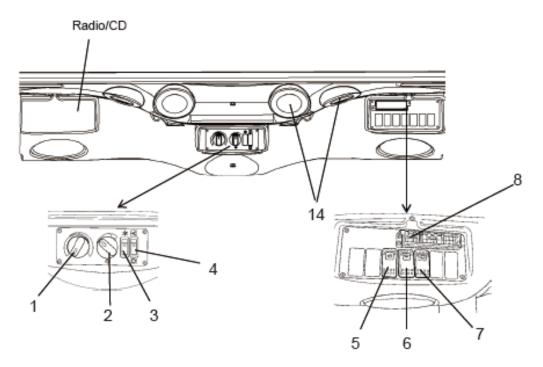

#### Location & control, cab

Fig. Cab roof, front

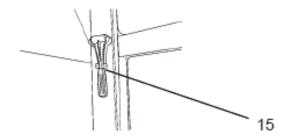


Fig. Rear right cab post



# Function description of instruments and controls in the cab

No	Designation	Symbol	Function
1	Heater control	$\Diamond$	Turn to the right to increase heating. Turn to the left to reduce heating.
2	Ventilation fan, switch	<b>3</b> 6	In the left position, the fan is off. Turning the knob to the right increases the volume of air entering the cab.
3	Air conditioning, switch	**	Starts and stops the air conditioning.
4	Cab air recirculation,		Pressing the top opens the air damper so that fresh air comes into the cab.
4	switch	$\bigcirc$	Pressing the bottom closes the damper so that the air recirculates inside the cab.
5	Front wiper, switch	$\mathcal{P}$	Press to operate the front screen wiper.
6	Front and rear window screen washers, switch	$\langle D \rangle$	Press the upper edge to activate the front screen washers. Press the lower edge to activate the rear screen washers.
7	Rear wiper, switch	$\Box$	Press to operate the rear screen wiper.
8	Fuse box		Contains fuses for the electrical system in the cab.
14	Defroster nozzle		Turn the nozzle to direct the flow of air.
15	Hammer for emergency exit	ſ	To escape from the cab in an emergency, release the hammer and break the opening windows on the right-hand side.

## Using the cab controls

## Defroster

To quickly remove ice or mist, make sure that only the front and rear air nozzles are open. Turn the heater and fan dial (1 and 2) to max. Adjust the nozzle so that it blows on the window to be be-iced, or to remove mist.

#### Heat

If the cab is cold, open the lower nozzle on the front columns and the middle nozzles just over the controls for the heater and fan.

Turn to max heat and max fan speed.

When the required temperature has been reached, open the other nozzles and if necessary turn down the heat and fan speed.

#### AC

**NOTE:** When using AC all the windows must be closed for the system to work efficiently.

To quickly reduce the temperature in the cab, adjust the following settings on the control panel.


Turn on AC (3) and set the fresh air (4) in the lower position to switch off the fresh air valve.

Set the heater control (1) to minimum and turn up the fan speed (2). Keep only the front middle nozzles in the ceiling open.


When the temperature has dropped to a comfortable level, adjust the required temperature on the heater control (1) and reduce the fan speed (2).

Now open the remaining nozzles in the roof to achieve a comfortable temperature in the cab.

Reset the fresh air button (4) to the upper position for fresh air.

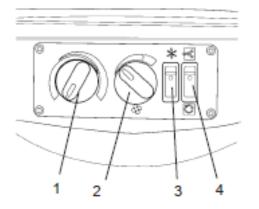



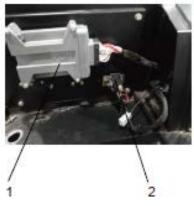

## **Electrical system**

The machine's main switchbox (fig1.) is located on the rear of the operator platform. There is a plastic cover over the switchbox and fuses.

On the plastic cover there is a 24V socket.



Fig1. Main switch box

- 1. Control unit (ECU)
- 2. Main relay
- 3. Fuse

 


The roller is equipped with 24 V electrical system and an AC alternator.

**Connect the correct polarities (ground)** to the battery. The cable between the battery and the alternator must not be disconnected when the engine is running.


# **Machine description**

## Fuse



The figure shows the position of the fuses. The table in below gives fuse amperage and function.

Fig. Fuse panel

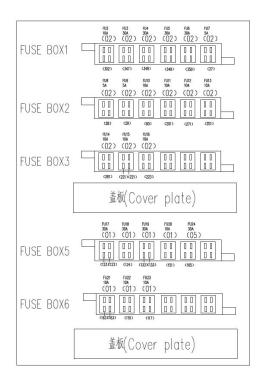

FUSE BOX1FUSFU2: Power supply ECUFU8:FU3: Power supply ECUFU9:FU4: Power supply ECUFU10SwitcFU5: Power supply ECUFU6: Power supply ECUFU12

FUSE BOX3 FU14: Oil pump FU15: Instrument FU16: Emergency stop

FU7: Pump neutral position

FUSE BOX6 FU21: Horn FU22: Stop lighting FU23: Radio FM/AM FUSE BOX2 FU8: Sprinkler shift FU9: Oil/water sprinkler speec FU10: Seat switch/High speec switch FU11: Warning lighting FU12: Backup alarm FU13: Water pump

FUSE BOX5 FU17: Driving lighting FU18: Cab lighting FU19: Working lighting FU20: Turning lighting FU24: Heat

 


Fig. Cab roof fuse box

The figure shows the position of the fuses. The table in below gives fuses amperage and function. All fuses are flat pin fuses.

	Fuse box F7				
1	Interior lighting	10A	4	Heater fan	15A
2	CD/Radio	10A	5	Windscreen wiper/washers, front/rear	10A

Cab fuse



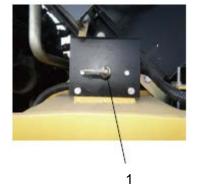


Fig1. Engine compartment
1. Battery disconnector

# Driver seat - Adjustment

2



Fig2. Driver seat

1. Locking lever – Length adjustment

1

2. Backrest angle

# Operation

## **Before starting**

#### Master switch – Switching on

Remember to carry out daily maintenance. Refer to the maintenance instructions.

The battery disconnector is located in the engine compartment, on the right side of engine parts. Open the engine hood, turn the key (1) to the On position. The roller is now supplied with power.

If the main battery/master switch is covered, the engine hood must be unlocked driving operation, to be able to reach the switch in an emergency.

**A** Do not run the starter motor for too long(max. 30 seconds). If the engine will not start, wait two minutes before trying again.

Adjust the operator's seat so that the position is comfortable and so that the controls are within easy reach.

The seat can be adjusted as follows.


- Length adjustment (1).
- Back support angle (2).

Always make sure that the seat is secure before beginning operation.



## **Before starting**

1. Control panel and lights - Check

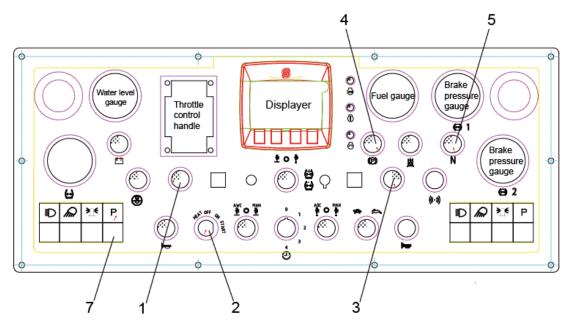

Turn the ignition key (2) to "ON" position, neutral position indicator (5), parking indicator (4) and control indicator (1) or (3) on operator side are all activated. Make sure the parking brake button (7) is on "pressed" condition.

Make sure the emergency stop button is on "unpressed" condition.

Make sure the fuel gauge, water level gauge have readings, oil pressure alarm is "on".

#### 2. Forward and backward lever - Check




To start the machine the forward/backward lever must be in neutral position, in the middle.



## 3. Parking brake - Check



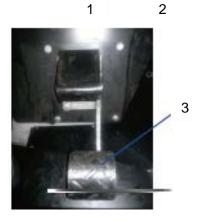

#### Parking brake – Check

Check tire pressure for all tires ensure the pressure accuracy.

Check the "tire pressure gauge" (2) (option) on the control panel, move the manual pressure control valve (1) in the middle, move it upward to increase pressure, downward to decrease pressure.

Or check each tire's pressure by using tire pressure gauge.

# **A** Test the brake valve function; ensure the normalcy of this function is essential for normal operating the machine.

Test through pressing the brake pedal (3), the brake pressure indicator will be activated.



Fig. View

#### View

Before starting, make sure that the view ahead, to the rear, and to the sides is unobstructed.

All cab windows should be clean and the rear view mirrors should be correctly adjusted.



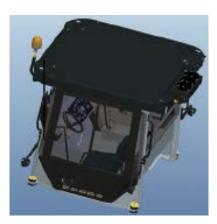


Fig. Driver seat

#### **Operator position**

If a ROPS (Roll Over Protective Structure) or a cab is fitted to the roller, always wear the seat belt provided and wear a protective helmet.

**A** Replace the seat belt if it shows signs of wear or has been subjected to high levels of force.

If the machine is fitted with a cab, make sure that the door is closed when in motion.

#### Interlock

The roller is equipped with Interlock.

The diesel engine switches off after 7 seconds if the operator rises from the seat when going forwards/backwards.

If the Forward/Reverse lever is in neutral, when the operator stands up a buzzer will be activated until parking switch is activated.

The engine does not stop if the parking brake is activated.


The engine will switch off immediately if for any reason the Forward/Reverse lever is moved out of neutral when the operator is not sitting down in the seat.



Sit down for all operations!



## Operating the roller

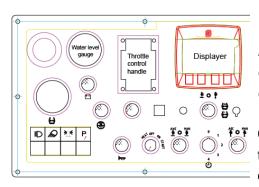

Under no circumstances is the machine to be operated from the ground. The operator must be seated inside the machine during all operation.

Check that the steering is working correctly by turning the steering wheel once to the right and once to the left while the roller is stationary.

When compacting asphalt, remember to turn on the sprinkler system.

# Make sure that the area in front of and behind the roller is clear.

In below there are some speed recommendation according to different working conditions: First gear speed (tortoise): Used for variety different material session Used for climbing working condition

Second gear speed (rabbit): Used for transportation

## Speed selecting



While roller is stationary, change the direction or change gears.

When the tire temperature is low, from time to time to check tire surface to ensure whether asphalt mixture stuck to the tire, sprinkle water or oil on the tire could effectively prevent this problem.

Fig 1. Speed selector



## Operating on a slope

Under no circumstances is the machine to be operated from the ground. The operator must be seated inside the machine during all operation.

When transporting on steep ground (downward slope > 5%) make sure not to exceed the maximum speed for the roller.

Selecting low speed increases the efficiency of the engine brake and prolongs the brake life.

Low speed should **always** be selected when working and transporting on steep slopes (>15%).

The driving and braking rear wheels should also **always** be pointing down the slope, i.e. the roller is driven forwards up the slope and reversed down the slope.

Make sure that the area in front of and behind the roller is clear.



## Checking the treads on the tires

Inspect the tire treads from time to time to ensure no asphalt has stuck to the tires. This can occur before the tires are sufficiently warm.

Mixing 2-4% cutting fluid to the tire sprinkler water can prevent this problem.

#### Variable tire pressure (air-on-the-run) (Option)

The operator can vary the pressure while work is in progress with the air pressure control on the roller.

The pressure is variably by adjusting the keys (fig1) on the keypad. Pressure adjusting interval is between maximum 780kPa (110psi) and minimum 380kPa (55psi). Push the key to upward position (1) to increase the pressure; push the key downward (2) to reduce the pressure.

The pressure level of the tire is shown on the pressure gauge on the top left corner of the instrument board.

The tire pressure should not be lower than 380 kPa, otherwise it would impair the service life of the tire.



Fig1. Control panel1. Tire pressure (+)2. Tire pressure (-)



**Ballast box** 

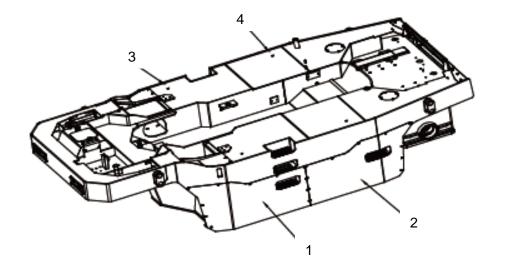


Fig. Ballast box cover

- 1. Top left cover
- 2. Rear left cover
- 3. Top right cover
- 4. Rear right cover



Increase ballast from both side of the frame


Remove the top left cover (1), rear left cover (2), top right cover (3), and the rear right cover (4).

The machine can use 12 steel blocks of 6 types of steel blocks as ballast in the lower of the frame. Red type blocks are mounted on the front; black type blocks are mounted on the rear.

Use a suitable combination to achieve max ballast.

The roller's service weight consists of the weight of the roller plus the weight of the ballast.



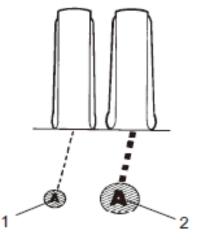

## **Driving (Ground Pressure)**

#### **Ground pressure**

The contact surface of the tire can be changed by means of tire pressure.

High tire pressure gives a smaller contact surface (1).

Low tire pressure gives a larger contact surface (2).

The total service weight divided by the number of tires give the pressure per wheel. See Table.

The ground contact surface of the tire is relevant for the compaction result.

Fig. Ground contact surface

- 1. Contact surface at high tire pressure
- 2. Contact surface at low tire pressure



Onerating			T	ire inflation	pressure/kP	a	
Operating	kg/tire	300	400	500	600	700	800
mass			Av	erage contac			
14000	1550	327	350	373	397	420	445
18000	2020	357.5	381	406	430	452.5	475
22500	2500	377.5	410	437.5	462.5	487.5	510
27000	3000	405	438	468	496	520	544
30000	3300	418	455	487.5	515	542	565

## Low tire pressure – 380 kPa (55 psi)

The lower the tire pressure, the lower the pressure on the contact surface due to larger contact surface.

Is used on lots of loose material.

Fig. Low ground pressure, larger area



## Normal tire pressure – 510 kPa (70 psi)

Used for degradation session.



Fig. Normal ground pressure



#### High tire pressure – 780 kPa (110 psi)

The higher the tire pressure, the greater the pressure on the contact surface due to smaller contact surface.

Used for thick layers and finishing sessions.

Fig. High ground pressure, smaller area



Interlock/Emergency stop/Parking brake – Check

The interlock, emergency stop and parking brake must be checked daily before operating. A function check of the interlock and emergency stop requires a restart.

The interlock function is checked by the operator standing up from the seat when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel firmly and brace yourself for a sudden stop. A buzzer goes on and after 7 seconds the engine switches off and the brakes are activated.

Check the function of the emergency stop by pressing the emergency stop button when the roller is moving slowly forwards/backwards. (Check in both directions). Hold the steering wheel firmly and brace yourself for a sudden stop. The engine switches off and the brakes are activated.

Check the function of the parking brake by activating the parking brake when the roller is moving very slowly forwards/backwards. (Check in both directions). Hold the steering wheel and brace yourself for a sudden stop when the brakes are activated. The engine does not switch off.

## Normal braking

Set the Forward/Reverse lever to "N" position.



Fig. Forward/Reverse lever





Fig. Emergency braking

#### **Emergency braking**

The brake pedal is normally used to emergency brake.

When Forward/Reverse lever back to Neutral position, apply the brake pedal for emergency brake; When Forward/Reverse lever does not back to Neutral position, then apply the brake pedal would lead Diesel engine stop. If the Diesel engine stops, it must be restarted.

## Switching off

Allow the engine to low idle for a few minutes to cool down.

Switch off all lights and other electrical functions. Push in the parking brake switch.

Turn the ignition switch to the left to the shut off position.

Fit the instrument cover on the display and top of the control box (on roller without cab), and lock it.

## Chocking the wheels

Never leave the roller when the engine is running, unless the parking brake is activated.

Make sure that the roller is parked in a safe area, free from traffic. Chock the wheels if the roller is parked on sloping ground.

Keep in mind that there is a risk of freezing during the winter. Drain the water tanks and water lines.

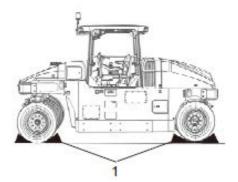


Fig. Chocking the wheels 1. Chocks



#### Master switch



Fig. Engine compartment1. Battery disconnector

Before leaving the roller for the day, switch the master switch (1) to the disconnected position and remove the handle.

This will prevent battery discharging and will also make it difficult for unauthorized persons to start and operate the machine. Lock the service doors/covers.



# Long-term parking



Fig. Roller weather protection

The following instructions should be followed when long term parking (more than one month).

These measures apply when parking for a period of up to 6 months.

Before re-commissioning the roller, the points marked with an asterisk \* must be returned to the pre-storage state.

Wash the machine and touch up the paint finish to avoid rusting.

Treat exposed parts with anti-rust agent, lubricate the machine thoroughly and apply grease to unpainted surfaces.

#### Engine

\* Refer to the manufacturer's instructions in the engine manual that is supplied with the roller.

#### Battery

\* Remove the battery/batteries from the machine, clean the outside and trickle charge once a month.

#### Air cleaner, exhaust pipe

\* Cover the air cleaner (see under the heading 'Every 50 hours of operation' or 'Every 1000 hours of operation') or its opening with plastic or tape. Also cover the exhaust pipe opening. This is to avoid moisture entering the engine.



#### Watering system

\* Empty the water tank and all hoses of water. Empty the filter housing and the water pump. Undo all sprinkler nozzles.

See maintenance sections for "Watering system – draining".

#### Fuel tank

Fill the fuel tank completely full to prevent condensation.

#### Hydraulic reservoir

Fill the hydraulic reservoir to the uppermost level mark (see under the heading 'Every 10 hours of operation.')

#### Tires

Make sure that tire pressures are at least 380 kPa (55 psi).

#### Steering cylinder, hinges, etc.

Grease the steering cylinder piston with conservation grease.

Grease the hinges on the doors to the engine compartment and the cab.

#### Hoods, tarpaulin

\* Lower the instrument cover over the instrument panel.

\* Cover the entire roller with a tarpaulin. A gap must be left between the tarpaulin and the ground.

\* If possible, store the roller indoors and ideally in a building where the temperature is constant.



## Miscellaneous

Lifting the roller

when lifting.

frame before the roller is lifted.

Lifting

Weight: refer to the hoisting plate on the roller

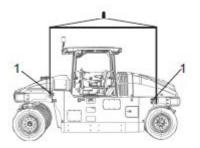


Fig. Roller prepared for lifting 1. Hoisting plate

Tech

Place the lifting chains in the lifting eyes and make sure that no parts are damaged by the chains

Ensure that the front wheels are parallel with the

The machine's gross weight is specified on the hoisting plate (1). Refer also to the Technical specifications.

Lifting equipment such as chains, steel wires, straps and lifting hooks must be dimensioned in accordance with the relevant safety regulations for the lifting equipment.

**A** Stand well clear of the hoisted machine! Make sure that the lifting hooks are properly secured.

Lifting the roller with jack:

The machine's gross weight is specified on the hoisting plate (1). Refer also to the Technical specifications.

The lifting device such as a jack (2), or equivalent, must be dimensioned according to the safety regulations for the lifting devices.

The machine's gross weight is specified on the hoisting plate (1). Refer also to the Technical specifications.

Weight: refer to the hoisting plate on the roller

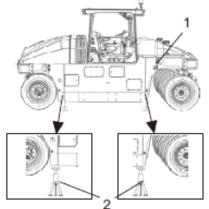


Fig. Roller lifted with jack

- 1. Lifting plate
- 2. Jack

The machine **must only be lifted** with a jack, or the like, positioned as per the markings. The frame is reinforced at these points to withstand the tension.

Lifting at any other place can result in damage to the machine or personal injury.

## Roller prepared for transport

Activate the parking brake.

Make sure that the machine is in a neutral position, i.e. that the front tires are pointing forwards.

Chock the tiers (1) and secure the chocks to the transport vehicle. The chock should have an angle of 37° and minimum height of 25 cm (9.9 inches). The tiers should be chocked both forwards and backwards.

Block under the frame (2) to ensure tensioned chains if the air goes out of the tires. Block up the machine as shown in figure

Secure the roller with chains in all four corners. The attachment points are shown on the decals. Place the chains in symmetrical pairs crossing each other.

Make sure that the chains, blocks and attachments in the transport vehicle are approved and have the requisite breaking strain. Check at regular intervals that the chains are not slack.

4812273203.pdf


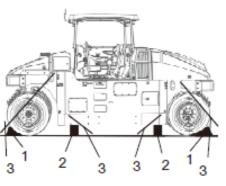



Fig. Positioning

- 1. Chocks
- 2. Blocks
- 3. Straps

50



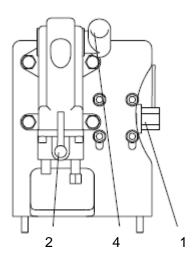

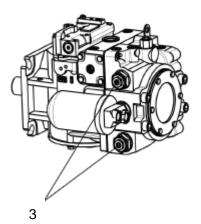

- 1. Ball valve
- 2. Hand pump handle
- 3. Multi-function valve
- 4. Hand pump handle

When engine or pump damage could not be repaired, roller need to be towed by towing vehicle park to safe place waiting for repairing.

Firstly, rotate the ball valve (1) handle clockwise 90°C, switch the oil-way, then rotate the hand pump handle (2) to hydraulic oil output (the handle rotation direction is the same as hydraulic pipeline connections); enter the cab, open the cover you could see the propulsion multi-function valve (3), turn the bypass nut on up & down multi-function valve (3) counterclockwise to startup the multi-function bypass valve; Fluctuate hand pump's handle (4) until feels heave; after finishing all those actions, machine could be towed.

The machine must not be moved at a speed higher than 5 km/h, and no more than 300 meters. Otherwise there is a risk of damaging the machine. Make sure to reset the towing valves to brake status after towing.

Still cannot release the brake, perform the following steps:

Loose the screw of the hand pump; Fill in more hydraulic oil;

Operate the handle of hand pump until feels load on hand.



## Towing the roller

When towing/recovering, the roller must be braked by the towing vehicle. A towing bar must be used as the roller has no brakes.

The roller must be towed slowly, max. 5 km/h (3mph) and only towed a short distance, max. 300 m (1,000ft).

When towing/retrieving a machine, the towing device must be connected to both lifting holes in the diagram.

Pulling forces should act parallel to the machine's longitudinal axis, as illustrated. See table below for maximum permitted pulling force for machine model.

Model	kN	lbf
CP275	412	92,700

Reverse the towing preparations made to the hydraulic pump and/or the motor.

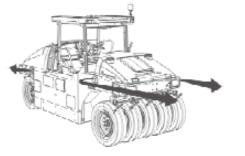


Fig. Towing



Atlas Cop



1. Follow the SAFETY INSTRUCTIONS specified in the Safety Manual.

2. Make sure that all instructions in the MAINTENANCE section are followed.

3. Turn the master switch to the ON position.

4. .Move the forward/reverse lever to NEUTRAL position, stop the machine.

5. Set the Emergency stop in the pulled-out position. The machine always starts in Highspeed mode.

6. Start the engine and allow it to warm up.

7. Move the forward/reverse lever to the NEUTRAL position.



8. Operate the roller. The Forward/Reverse lever gives the required direction of travel. Use the accelerator carefully.



9. Test the brakes. Remember that the braking distance will be longer if the hydraulic fluid is cold.

10. Check that the tires are thoroughly sprinkled when this is necessary.

11. IN

11. IN AN EMERGENCY:

- .Activate the brake pedal.
- Press the EMERGENCY STOP.
- Hold the steering wheel firmly.
- Brace yourself for a sudden stop.

12. When parking:

- Move the forward/reverse lever to position "N".

- Stop the engine and chock the wheels.

13. When lifting: - Refer to the relevant section in the Instruction Manual.

14. When towing: - Refer to the relevant section in the Instruction Manual.

15. When transporting: - Refer to the relevant section in the Instruction Manual.

16. When recovering - Refer to the relevant section in the Instruction Manual.



# Preventive maintenance

Complete maintenance is necessary for the machine to function satisfactorily and at the lowest possible cost.

The Maintenance section includes the periodic maintenance that must be carried out on the machine.

The recommended maintenance intervals assume that the machine is used in a normal environment and working conditions.

## Acceptance and delivery inspection

The machine is tested and adjusted before it leaves the factory.

On arrival, before delivery to the customer, delivery inspection must be conducted as per the check list in the warranty document.

Any transport damage must be immediately reported to the transport company.

## Warranty

The warranty is only valid if the stipulated delivery inspection and the separate service inspection have been completed as per the warranty document, and when the machine has been registered for starting under the warranty.

The warranty is not valid if damage has been caused by inadequate service, incorrect use of the machine, the use of lubricants and hydraulic fluids other than those specified in the manual, or if any other adjustments have been made without the requisite authorization.





# Maintenance – Lubricants and symbols

Always use high-quality lubricants and the amounts recommended. Too much grease or oil can cause overheating, resulting in rapid wear.

囚	ENGINE OIL	Air temperature -15°C - + 50°C (5°F - 122°F)	
0		Atlas Copco Engine 100 or equivalent	
		Air temperature -15°C - + 40°C (5°F - 104°F)	
너지	HYDRAULIC FLUID	Hydraulic 300 or equivalent	
0		Air temperature over + 40°C (104°F)	
		Shell Tellus T100 or equivalent	
ļ	GREASE	Shell Retinax LX2, or equivalent	
1	TRANSMISSION OIL	Air temperature 0°C - + 40°C (32°F - 104°F)	
Å.	TRANSINISSION OIL	Dynapac Gear Oil 300 or equivalent	
副	FUEL	See engine manual	
(50)	COOLANT	GlycoShell or equivalent (mixed 50/50 with water)	
9	COOLANT	Prevents freezing to around -37°C	
$\bigcirc$	BRAKE CIRCUIT OIL	Mobil DOT 3 or equivalent	

Other fuel and lubricants are required when operating in areas with extremely high or extremely low ambient temperatures. See the 'Special instructions' chapters, or consult Dynapac.




⊳⊘	Engine, oil level	<u>S</u>	Air filter
$\underline{0}$	Engine, oil filter	- +	Battery
ÞQ	Hydraulic fluid tank, level		Sprinkler
<u>d</u>	Hydraulic fluid, filter	٢	Sprinkler water
P	Lubricating oil		Recycling
$\succ$	Coolant level	Ē	Fuel filter
(2.4)	Air pressure	ÞØ	Transmission, oil level
			Sprinkler

# Maintenance symbols

## **Maintenance - Maintenance schedule**

## Service and maintenance points

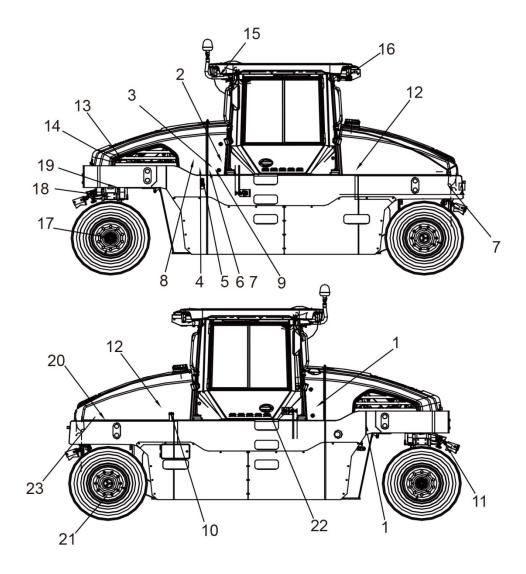

- 1 Engine oil
- 2 Oil filter
- 3 Fuel filter
- Hydraulic filter 4
- 5 Hydraulic fluid level
- 6 Hydraulic fluid, filling
- 7 Hydraulic tank cap
- 8 Coolant

- Air cleaner Refueling
- 10 Scraper 11

9

15

16

- 12
- Water tank, filling 13 Sprinkler system
- 14 Battery
  - Cab, air filter
  - Cab, AC

- Lower pivot bearing
- Upper pivot bearing
- **Pivot bearing**
- Driving axle
- 21 Oil pan

17

18

19

20

22

- Propulsion pump filter
- 23 Drive chain

## General

Periodic maintenance should be carried out after the number of hours specified. Use the daily, weekly etc. periods where number of hours cannot be used.

Remove all dirt before filling, when checking oils and fuel and when lubricating using oil or grease.

**LL** The manufacturer's instructions found in the engine manual also apply.

#### Every 10 hours of operation (Daily)

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
	Before starting up for the first time to start	
	that day	
1	Check the engine oil level	Refer to the engine manual
5	Check hydraulic oil level	
8	Check the engine coolant level	Refer to the engine manual
10	Refuel	
11	Check the scraper setting	
12	Fill the water tanks	
13	Check the sprinkler system	
13	Sprinkler system - Freeze risk/protection	
	Check brake fluid level	
	Check the tire pressure	
	Test brake	

## After the FIRST 50 hours of operation

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
1, 2	Change the engine oil and oil filter	Refer to the engine manual
3	Change the fuel filter	Refer to the engine manual
4	Change the hydraulic oil filter	
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
20	Change the oil in the rear axle	

## Every 50 hours of operation (Weekly)

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
9	Clean the air cleaner	Refer to the engine manual
	Clean cooler	
	Drain the fuel prefilter	Refer to the engine manual
16	Inspect the air conditioning	Optional
	Check the air conditioner compressor belt	Optional
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
	Drain air tank	
	Check tire pressure	
	Retighten wheel nuts	

## Every 250 hours of operation (Monthly)

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
-	Change the appring all and all filter	Defer to the engine menual
1, 2	Change the engine oil and oil filter	Refer to the engine manual
3	Change the fuel filter	Refer to the engine manual
	Cleaner cooler	
	Drain fuel water seperator	Refer to the engine manual
	Check the engine belt drive system	Refer to the engine manual
14	Check the battery condition	
16	Inspect the air conditioning	Optional
	Check the air conditioner compressor belt	Optional
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
20	Check the oil level in the rear axle	
23	Drive chain maintenance	
	Drain air tank	
	Retighten wheel nuts	
	Check bolted joints	
	Lubricate the steering chain	

## Every 500 hours of operation (Every three months) Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
1, 2	Change the engine oil and oil filter	Refer to the engine manual
3	Change the fuel filter	Refer to the engine manual
	Cleaner cooler	
	Change the fuel prefilter	Refer to the engine manual
7	Check hydraulic oil tank cap	
9	Clean the air cleaner	
	Check the engine belt drive system	Refer to the engine manual
14	Check the battery condition	
16	Inspect the air conditioning	
	Check the air conditioner compressor belt	Optional
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
20	Check the oil level in the rear axle	
23	Drive chain maintenance	



D	Drain air tank	
R	Retighten wheel nuts	
C	Check bolted joints	

## Every 1000 hours of operation (Every six months)

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
1, 2	Change the engine oil and oil filter	Refer to the engine manual
3	Change the fuel filter	Refer to the engine manual
4	Change the hydraulic oil filter	
	Cleaner cooler	Refer to the engine manual
	Change the fuel prefilter	Refer to the engine manual
7	Check hydraulic oil tank cap	
9	Change main air filter element	Refer to the engine manual
	Check the engine belt drive system	Refer to the engine manual
14	Check the battery condition	
15	Replace the air cleaner filter in the cab	
16	Inspect the air conditioning	Optional
	Check air conditioner dry filter	
	Check the air conditioner compressor belt	
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
20	Change the oil in the rear axle	
22	Change propulsion pump filter	
23	Drive chain maintenance	
	Drain air tank	
	Retighten wheel nuts	
	Check bolted joints	



## Every 2000 hours of operation (Yearly)

Refer to the contents to find the page number of the sections referred to!

Pos. in fig	Action	Comment
1, 2	Change the engine oil and oil filter	Refer to the engine manual
	Change the coolant	Refer to the engine manual
3	Change the fuel filter	Refer to the engine manual
4	Change the hydraulic oil filter	
	Cleaner cooler	
	Change the fuel prefilter	Refer to the engine manual
9	Change main air filter element	Refer to the engine manual
	Check the engine belt drive system	Refer to the engine manual
	Change hydraulic oil	
12	Drain and clean the water tank	
14	Check the battery condition	
15	Replace the air cleaner filter in the cab	
16	Inspect the air conditioning	Optional
	Check air conditioner dry filter	
	Check the air conditioner compressor belt	
17	Lubricate lower pivot bearing	
18	Lubricate upper pivot bearing	
20	Check the oil level in the wheel gear	
20	Change the oil in the wheel gear	
22	Change propulsion pump filter	
23	Drive chain maintenance	
23	Adjust drive chain	
	Drain air tank	
	Retighten wheel nuts	
	Check bolted joints	
	Change brake oil	
	Lubricate the steering chain	

# Maintenance – 10h

A Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Diesel engine – Check oil level

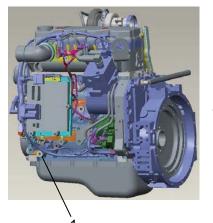


Fig. Engine compartment 1. Dipstick The dipstick is located under the engine hood. Take care not to touch any hot parts of the engine or radiator when removing the dipstick. Risk of burns.


The dipstick is located down on the left side of the engine.

- Pull out the dipstick (1);
- Wipe the dipstick (1);
- Put the dipstick (1) in engine compartment;
- Pull the dipstick (1) out again, and then check the oil level through it.

For further details, refer to the engine's instruction manual.



Fig. Hydraulic reservoir

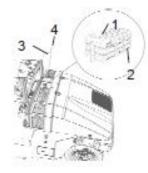

#### Fig. Expansion tank

- 1. Filler cap
- 2. Level marking
- 3. Protective plate
- 4. Bolt



The filler pipe and sight glass are on the left side of the fan cover in the engine compartment.

Place the roller on a level surface and check that the oil level is between the max and min markings. Top up with the type of hydraulic fluid specified in the lubricant specification, if the level is too low.



The expansion tank is placed in the middle, between the operator platform and the engine compartment. Refilling takes place from over the black cover between the operator platform and the hood.

To access the expansion tank you have to remove the protective plate (3) via two bolts (4).

Check that the coolant level is between the max. and min. marks (2).

**A** Observe great caution if the cap has to be opened while the engine is hot. Wear protective gloves and goggles.

Fill with a mixture of 50% water and 50% anti freeze. See the lubrication specification in these instructions and the engine manual.

Flush the system every year and change the coolant. Also check that the air has unobstructed passage through the reservoir.

For further details, refer to the engine's instruction manual.



Fuel tank – Refueling



Fig. Fuel tank

- 1. Tank cap
- 2. Filler pipe

**A** Never refuel while the engine is running. Do not smoke and avoid spilling fuel.

The filler pipe and tank cap are behind the operator platform on the left side of the frame.

Refuel the tank every day before starting work, or fill the tank at end of work. Unscrew the lockable tank cap (1) and fill fuel up to the lower edge of the filler pipe.

The tank holds 320 liters of fuel. Refer to the engine manual for information on diesel grade.





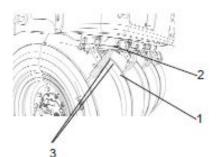


Fig. Tire scrapers 1-2mm

- 1. Scraper blades
- 2. Locking hook
- 3. Adjusting screw

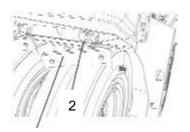

- Fig. Tire scrapers
- 1. Scraper blades
- . 2. Locking hook

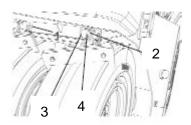

#### Fig. Scrapers

- 1. Pin
- 2. Hairpin
- 3. Locking hook
- 4. Scraper attachment

# Wheel scrapers Control

Check that the tires and scrapers are worn evenly.

If there is uneven wear on the scraper, release the adjusting screw (3) on the back of the scraper attachment.

Pull down the scraper blade (1) so that it is flush with the tire.

Tighten the screws (3) again after adjusting.

The scrapers must hang free from the tires during transportation.

Lift up the scraper blades (1) and make sure that they are locked in raised position by the locking hooks (2).

To lower down the scrapers, lift the scraper slightly while pressing in the locking hook.

#### Removing the scrapers

The scrapers can easily be removed for cleaning and inspection.

First secure the scraper in the locking hook (3), placed on the scraper attachment (4), to prevent the scraper dropping onto the ground.

Release the pin (1) on the hook-up axle by removing the hairpins (2) on each side of the pin. Grip the up-hook axle and pull it straight out.

When refitting after inspection etc., the scraper must first be hooked in the locking hook before the hook-up axle is put in position.

Refit the pin (1) and make sure that it is well secured by the hairpins (2).





1

Fig 1. Tank cap

1. Water tank

2. Sprinkler nozzle



Water tank, Std – Filling


There are two filler caps on the top of the tank.

Unscrew the tank cap (1) and fill with clean water. Do not remover the strainer.

Fill the water tank; it holds 600 liters.

**Gamma** Only additive: A small amount of environment-friendly antifreeze.

# Sprinkler system – Check

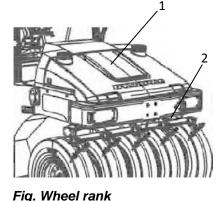

Fill the tank with emulsion fluid, e.g. water mixed with 2% cutting fluid. Check that the sprinkler nozzles (2) are not blocked, and if necessary clean them and the filter. See under Sprinkler system, Check – Cleaning, for detailed instructions.

Inspect the tire treads from time to time to ensure that no asphalt has stuck to the tires. This can happen before the tires have warmed up.

Fluids that are flammable or detrimental to the environment must not be used in the emulsion tank.

2016-05-15

 


Fig. Nozzle

1. Sleeve, nozzle, filter

2. Packing

# Sprinkler system

# Cleaning of sprinkler nozzle

Dismantle the blocked nozzle by hand.

Blow the nozzle and fine filter (1) clean using compressed air. Alternatively, fit replacement parts and clean the blocked parts later on.

Nozzle	Colour	Ø (mm)	l/min	gal/min
			(2.0 bar)	(40 psi)
Standard	yellow	0.8	0.63	0.2
Option	blue	1	1	0.31
Option	red	1.2	1.25	0.39
Option	brown	1.3	1.63	0.5

After inspecting and carrying out any necessary cleaning, start the system and check that it works.


Unscrew the tank cap (1) and fill with clean water. Do not remover the strainer.

Fill the water tank; it holds 600 liters.



Wear protective goggles when working with compressed air.



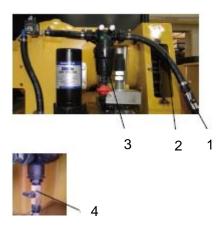

#### Fig. Sprinkler pump

- 1. Valve
- 2. Hose
- 3. Coarse filter
- 4. Valve

### Sprinkler system – Freeze risk

Preventive measures when there is a risk of freezing.

#### Draining the system

- Close the valve (1).
- Separate the hose (2).
- Open the coarse filter (3).
- Loosen the intake to the pump by moving the plastic clamp to the left and pulling the white plastic adapter from the pump housing.
- Open the valves in the ends (4) of the sprinkler pipes.
- Allow the fluid to run out and run the sprinkler pump for about 10 seconds.

#### **Freeze protection**

Freeze protection can also be achieved by connecting a separate container, after dividing the hose, with water mixed with glycol and running approx. 2 liters in the system.





Fig. Brake fluid container



Check every day that the fluid level is between the max/min marks.

Open the containers, which positioned on both front and rear of the frame.

Top up with brake fluid to the max mark on the container if the level is below the min mark.




Check the tire pressure with a pressure gauge.

Make sure that the tires have the same pressure.

Recommended pressure: See Technical Specifications.

The figure shows the position of the air valve on the outer tires.

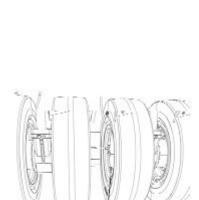

1

Fig. Inner wheels 1. Air valve The figure shows the position of the air valve on the inner tires.

**A** Check the Safety Manual that accompanies the roller before filling the tires with air.

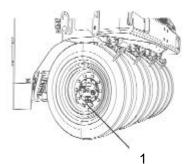


Fig. Outer wheels 1. Air valve

# Maintenance – 50h

Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Wipe clean on both sides of the outlet pipe





Inner edge of outlet pipe.

Outer edge of outlet pipe.

Wipe clean the inside of the cover (2) and the filter housing (5). See the previous illustration.

Wipe also both surfaces for the outlet pipe; see adjacent figure.

Check that the hose clamps between the filter housing and the suction hose are tight and that the hoses are intact. Inspect the entire hose system, all the way to the engine.





Fig. Cooler

Hydraulic fluid cooler - Checking - Cleaning

The water and hydraulic fluid coolers are accessible when the cooler grill is removed.

Make sure that the air flow through the cooler is unobstructed. Dirty coolers are blown clean with compressed air or washed clean using a high-pressure water cleaner.

Take care when using a high-pressure water jet. Do not hold the nozzle too near the cooler.

Wear protective goggles when working with compressed air or high-pressure water jets.





1



Fig. Fuel filter 1. Drain plug

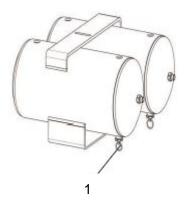


Fig. Drain valve



Unscrew the drain plug (1) at the bottom of the fuel filter.

With the aid of the secondary hand-operated pump, make certain that all sediment comes out. See Cummins service manual.

Tighten the drain plug as soon as uncontaminated fuel runs out.

Place in a suitable container and hand in to environment-friendly waste disposal station.

The air tank could also contain water due to condensation.

The condensation water removes by the drain valve (1), which resets automatically when loosening drain valve.

If a lot of water is drained, the system must be inspected and faulty parts should be replaced.



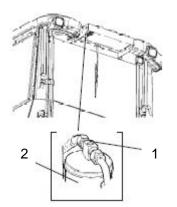


Fig. Drying filter 1. Sight glass 2. Filter holder Air conditioning (Optional) – Drying

filter - Inspection

Park the roller on a level surface, chock the wheels and the set the Forward/Reverse lever in the Neutral position.

With the unit in operation, check using the sight glass (1) that bubbles are not visible on the drying filter.

**Make sure the Forward/Reverse lever is** always in the Neutral position.

The filter is located on the top of the rear part of the cab roof. If bubbles are visible through the sight glass, this is a sign that the refrigerant level is too low. Stop the unit to avoid risking damage. Fill up with refrigerant.

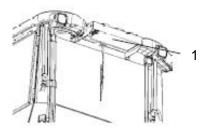


Fig. Cab 1. Condenser element



If there is a significant loss of cooling capacity, clean the condenser element (1) on the rear edge of the cab roof.



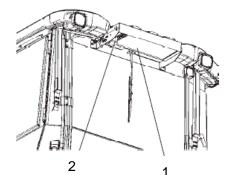


Fig. 1. Cab

3. Drying filter

2. Condenser element

Regular inspection and maintenance is necessary to ensure satisfactory long-term operation.

Air conditioning (Optional) – Overhaul

Clean all dust from the condenser element (1) using compressed air. Blow from above downwards.

The air jet can damage the element flanges if it is too powerful.

Wear protective goggles when working with compressed air.

Inspect the condenser element attachment.

Check the system hoses for chafing. Making sure that drainage from the cooling unit is unobstructed so that condensation does not accumulate inside the unit.

#### Air conditioner compressor belt - Check

Check the condition of compressor belt. Retighten if necessary.


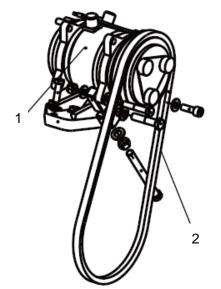


Fig. 1. Compressor 2.Belt






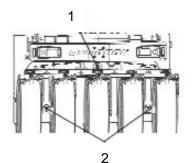

Lubricate nipple (1) on upper pivot bearing and nipples (2) on lower pivot bearing with five pump stokes from hand-operated grease gun.

 Use grease as specified in the lubricant specification.



- 1. Lubrication nipple x 1 Upper pivot bearing
- 2. Lubrication nipple x 2 Lower pivot bearing





## Draining of air reservoir

When the machine works in humid environment, the air reservoirs (2) need to drain every day.

Press the drainage valve (3) upwards until there is no water in the air reservoirs (2).

Fig. 1. Draining decal 2.Air reservoir 3.Drainage valve



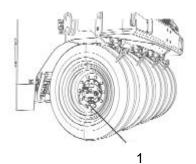


Fig. Outer wheels 1. Air valve



Check the tire pressure with a pressure gauge.

Make sure that the tires have the same pressure.

Recommended pressure: See Technical Specifications.

The figure shows the position of the air valve on the outer tires.

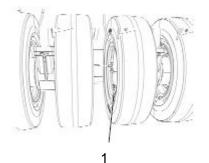


Fig. Inner wheels 1. Air valve

The figure shows the position of the air valve on the inner tires.

**A** Check the Safety Manual that accompanies the roller before filling the tires with air.



# Maintenance – 250h

Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Replace the fuel filter every 250 hours operation



Fig. Fuel filter

Place in a suitable container and hand in to environment-friendly waste disposal station.



Diesel engine – Oil change



Fig. Drain plugs

The engine's oil drain plug is delivered under the rotatory support on the front of the frame through the rubber tube.

Unscrew the drain plug the engine oil could be changed.

Drain the oil when the engine is warm. Place a receptacle that holds at least 10 liters (11 qts) under the drain plugs.

Take great care when draining engine oil. Wear protective gloves and goggles.

Release the oil drain plug, and open the filler cap, allow all the oil to run out into a container.

Retighten the drain plug as soon as the engine oil runs out.



Gereal Gereal Gereal Gereal Contract and Co

Fill with fresh engine oil; see Lubricant specification or the engine manual for the correct grade of oil.

Fill with the requisite volume of engine oil. See technical specifications before starting the machine.







Fig. Filter unit Pre filter + Fuel filter

Fuel filter is located on the left side in the engine compartment.

Unscrew the old one with special spanner, and then replace with the new one.

Start the engine and check that the filter is well sealed.



Fig. Engine compartment Oil filter



The oil filter (1) is located on the right side in the engine compartment.

See the engine manual for information about replacing the filter.





Fig. Oil-water separator 1. Drain plug

# Oil – water separator – Draining

Unscrew the drain plug (1) at the bottom of the oil-water separator.

Tighten the drain plug as soon as uncontaminated fuel runs out.

Place in a suitable container and hand in to environment-friendly waste disposal station.

#### Oil – water separator – Replace

The oil-water separator is located at left side in the engine compartment.


Unscrew the old one with special spanner, and then replace the new one.

With help of hand pump, evacuate air in the filter.





 Fig. Batteries



The batteries are sealed and maintenance-free.


Make sure there is no open flame in the vicinity when checking the electrolyte level. Explosive gas in formed when the alternator charges the battery.


When disconnecting the battery, always disconnect the negative cable first. When connecting the battery, always connect the positive cable first.

The cable shoes should be clean and tightened. Corroded cable shoes should be cleaned and greased with acid-proof Vaseline.

Wipe the top of the battery.



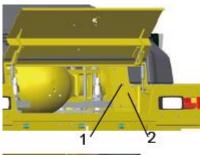

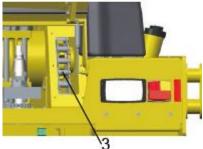

#### Driven chain maintenance

Normally, when the machine has worked over 250 hours, the driven chain needs maintaining.

Loosen the bolts (1) and remove the cover (2), use the oilcan to instill gear oil on the driven chain (3); When the machine moves forward one third circle of the wheel, stop and instill again.

Repeat above steps until the whole driven chain (3) has been lubricated completely.

Repeat the procedure on the other side.

**Don't keep too much residual oil in the bottom of the chain box.** 

Fig. 1. Bolts 2.Covers 3.Dirven chain





3 Fig. Level check – driving gear 3. Level plug

# Driving gear – Check oil level

Move the machine so that the level plug (3) is in horizontal position.

Wipe clean the area around the level plug (3) and then undo the plug.

Ensure that the oil level reaches up to the lower edge of the plug hole.

Replenish the oil to the right level if the level is low. Use transmission oil, see lubricant specifications.

Clean and refit the plugs.





# Maintenance – 500h

Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



1

Fig. Left side of frame

1.Tank cap

Hydraulic reservoir – Check

Unscrew and make sure that the reservoir cap is not clogged. Air must have unobstructed passage through the cap in both directions.

If passage in either direction is blocked, clean the filter with a little diesel oil and blow through with compressed air until the block is removed, or replace the cap with a new one.

Wear protective goggles when working with compressed air or high-pressure water jets.



# Maintenance – 1000h


A Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



Air cleaner

Checking – Change the main air filter

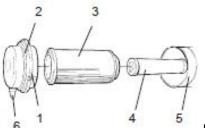

Change the air cleaner main filter when the warning lamp on the control panel comes on when the engine is running at maximum speed.

Release the clips (1), pull off the cover (2), and pull out the main filter (3).

Do not remove the backup filter (4).

Clean the air cleaner if necessary, see section Air cleaner – Cleaning.

When replacing the main filter (3) insert a new filter and refit the air cleaner in the reverse order.

Check the condition of the dust valve (6); replace if necessary.

When refitting the cover, make sure that the dust valve is positioned downwards.

#### Fig. Air cleaner

- 1. Clips
- 2. Cover
- 3. Main filter
- 4. Backup filter
- 5. Filter housing
- 6. Dust valve



Fig. Hydraulic fluid filter



The hydraulic filters are located on the left side in the engine compartment, behind the battery disconnector.

Remove the filter and hand in to waste disposal station. This is a disposable filter and cannot be cleaned.

Thoroughly clean the filter holder sealing surface.

Apply a thin coat of fresh hydraulic fluid to the rubber gasket on the new filter.

Screw the filter on by hand, firstly until the filter gasket makes contact with the filter base. Then rotate a further ½ turn.



Fig. Rear axle

Check the hydraulic fluid level in the sight glass (1) and top off as required. See under the heading 'Every 10 hours of operation' for more information.

Start the engine and check that the filter does not leak.



වී <sub>Cab</sub>

Fresh air filter - Replacing

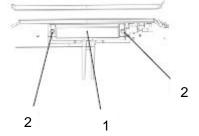


Fig. Cab, front

- 1. Fresh air filter (x1)
- 2. Screw (x2)

There is one fresh air filter (1), placed on the front of the cab.

Remove the protective cover.

Undo the screws (2) and remove the complete holder. Remove the filter insert and replace with a new filter.

The filter may need to be changed more often if the machine is operated in a dusty environment.

 




Fig. Wheel gear

- 1. Drain plug
- 2. Filler plug

**W** Take great care when draining the fluid. Wear protective gloves and goggles.


**A**Note: When filling and draining the gear oil and checking the level of gear oil, always park the roller on a level surface.

Place a receptacle that holds at least 20 liters (5.3 gal) under the drain plug.

Unscrew the drain plug (1) and filler plug (2) to evacuate air. Allow all the oil to drain out and refit the plug.

Deliver the drain oil to environmentally correct handling.



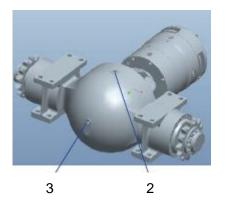

### Driving gear - Replenishing the oil

Move the machine so that the filler hole is correctly positioned. The hole should be just over the horizontal position to simplify filling.

Unscrew the filler plug (2). Unscrew the level plug (3) as well to evacuate air. Oil is filled from the filler well.

Fig. Driving gearbox – Replenishing tra oil 2.Filler plug 3. Level plug

Fill up with approx. 20 I (21 qts) of new oil. Use transmission oil, see lubricant specifications.


Move the machine so that the level plug (3) is in horizontal position.

Ensure that the oil level reaches up to the lower edge of the plug hole.

Clean and refit the plugs.

#### **Propulsion pump filter – Replace**

Check the propulsion pump filter, replace of necessary.

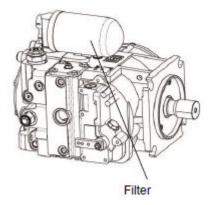

# Maintenance – 2000h

Park the roller on a level surface. When checking and making adjustments to the roller, switch the engine off and make sure the Forward/Reverse lever is in the Neutral position.

Ensure that there is good ventilation (air extraction) if the engine is run indoors. Risk of carbon monoxide poisoning.



The drain plug for the coolant is located at the back on the right side of the machine. The drain plug can be accessed by opening the panel in front of the exhaust pipe.

Drain the coolant when the engine is warm. Place a container that holds at least 14 liters (15gts) under the drain plugs.

Observe caution when draining the coolant. Wear protective gloves and goggles.

Release the hex nut (1) as shown (2).

Pull out the hose (3) and release the drain plug (4) for the coolant. Allow all the coolant to run out into a container.

To refit, secure the plug (4) as shown and push in the hose.


Secure as shown and then tighten the hex nut (1).



1

Hand in the drained coolant to an

environment-friendly waste disposal station.

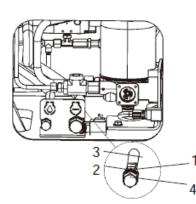

#### Fig. Drain plugs

- 1. Hex nut
- 2. Bulkhead elbow
- 3. Hose
- 4. Drain plug



Fig. Hydraulic reservoir drain plug

# Hydraulic reservoir - Fluid change

Take great care when draining the hydraulic fluid. Wear protective gloves and goggles.

 
Hydraulic reservoir's drain plug is located on the left front side of the frame, under the hydraulic reservoir. Open the drain plug to run out oil inside the hydraulic reservoir.

Place a receptacle that holds at least 80 liters (21 gal) under the engine compartment.

Remove the plug on the end of the hose.

Allow all the oil to run out. Reset by refitting the drain plug.





#### correct handling.

Fill with fresh hydraulic fluid. Refer to the lubricants specification for grade information.

Replace the hydraulic filter. See section "Maintenance – 1000 hours".

Start the engine and operate the hydraulic functions. Check the level in the reservoir and top off as required.



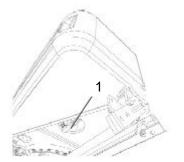


Fig. Water tank 1.Drain cock



Clean the tank with water and a suitable detergent for plastic surfaces.

Close the drain cock (1), fill with water and check for leaks.



The water tank is made of plastic (polyethylene) and can be recycled.



 


Fig. Cab, front 1.Fresh air filter (x1) 2.Screw (x2)



There is one fresh air filter (1), placed on the front of the cab.

Remove the protective cover.

Undo the screws (2) and remove the complete holder. Remove the filter insert and replace with a new filter.

The filter may need to be changed more often if the machine is operated in a dusty environment.

#### Hydraulic oil change (2000 hours or 1 year)

- 1. Open the air filter cap (1), drain the oil.
- 2. Add hydraulic oil (Hydraulic 300) to about 2/3 place of the level gauge (1).
- 3. Retighten the air filter cap (1).


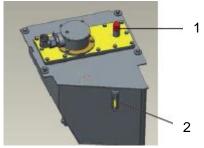


Fig. 1. Air filter cap 2.Level gauge



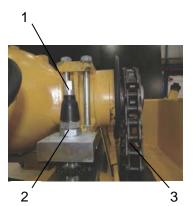

- 1. Adjusting bolt
- 2. Lock nut
- 3. Drive chain

#### **Drive chain - Adjustment**

When the machine working over 2000 hours, it needs to adjust the drive chain so that the rear wheels can rotate freely.

Loosen the lock nuts (2) on the adjusting bolt (1). Turn the adjusting bolt (1) while rotating the wheel until the increase in tension slows the wheel down. Check the distance: When pressing drive chain (3) by hand, it has 10 mm movement distance to obtain the right chain tension.

Tighten the lock nuts on the adjusting bolt (1).

Repeat the procedure on the other side.





### Oil spray system

#### **Before starting**




1

Check the oil level of the tank, if the oil level warning LED is on please fill the "plant oil"

Check the distance between the cover and tire's surface (1) no less than 20 mm.

Check the distance between the oil spray nozzle and tire's surface is about 150mm;

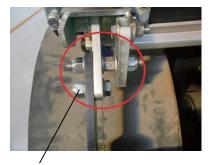


2

The distance can be adjusted easily by through the fixing bolts (2) of the bracket to avoid over spraying beyond tire or missing spray.

**CAUTION:** The system must keep clean, use relatively high solidifying plant oil, such as soybean oil. In cold season, check oil by place the oil outdoor at night; if oil has been frozen, stop using the oil. Make sure only use unfrozen oil.

#### Starting

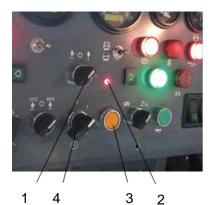

Switch on the battery switch;

Ignition switch on, if the oil level is less than the low limit, the LED is on;

Water/oil select switch turns to oil spray;

Oil sprinkle time control. The position switch has

0~3 four positions. It means spray lasting 3s.6s.9s.12s.depends on which position is pre-selected;

Press the oil spray switch.

Fig. 1.Water/oil select switch 2.Oil level warning LED 3.Oil spray switch 4.Water/oil sprinkle time control

#### Spray volume – Adjustment



1

Fig. 1.Valve

Oil spray volume can be adjusted through the valve (1).

- Tighten to increase the volume;
- Unscrew to decrease the volume.

Since the oil viscosity has a big changing with temperature, If the viscosity change, should adjust the valve to keep the suitable volume.

#### Maintenance – Oil spray system (Optional)

Every 10h	Action			
Check the nozzles	If nozzle block, clean the nozzle; replace if necessary; If one of nozzles is blocked during working, the oil spray volume is on a			
	normal level, clean the blocked nozzle during work break.			
Every 50h	Action			
Clean the filters	Remove the filters, clean the filters using plant oil cleanser; assemble the filter after the filter drying			
1       3       Image: Constraint of the straint of the strain				
Every 250h	Action			
Clean the oil tank	Remove the cover, clean the tank using plant oil cleanser, then wash the tank using normal plant oil.			
	Drain the water of the oil tank.			

#### **Temporary cleaning**

Clean the system after a long-term parking. Clean the system when any place block in working, if necessary, change the filter or pipe. Check the block place through the transparent pipe.

Long-term parking

• Empty the system before long-term parking



### Air on the run (Optional)

Check the air valve status:

#### **Before starting**



Check the air pressure from the air gauge on instrument panel, it should be in 380kPa – 780kPa. (fig1).

Fig 1. Instrument panel – Air gauge



In general, the air valves are closed when the roller is shipped out from factory. So if use the air on the run system, open the gas valve first on each tires. Fig 2, Fig 3

Fig 2.



Fig 3.



How to open / close the air valve Open the air valve - Loosen the lock nut of the air valve using a wrench; Fig 4

- Loosen the lock nut of the air valve using a flat screw

Fig 4. 1. Lock nut; 2. Valve element 3. Valve body



Fig 5.

driver; Fig 5





Fig 6

- Tighten the lock nut. Fig 6.

Close the gas valve.

Loosen the lock nut of the air valve using a wrench, screw out the valve element about 10mm with a screw driver, and tighten the lock nut.

Fig 7



Fig 8

Fig 9

#### Air charge and discharge

Air charge or discharge is control by the toggle switch on instrument panel; Push up is air charging and push down is air discharging, The neutral position is off. Fig 7, Fig 8

Before operating the system, make sure the air pressure is normal and all the air valves are opened. Usually keep the nine tire's pressure as the same about 600kPa, it will get the better compaction performance.

#### Maintenance - Air on the run (Optional)

#### Every day / 10 hours

Check the air pressure from the air gauge on instrument panel, it should be in 380kPa~780kPa.

#### Every week / 50 hours

Water drain of air tank; Fig 9.

**Caution:** In the case of the temperature is low, the water drain valve may be damaged by the water iced! Please drain the water more often.



#### Every 3 months / 250 hours

Check the air pipes of the system; Check the air valve.

#### Long-term parking

When long-term parking (more than one week), please to close the air valve, avoid leaking and damaging the tires!.



# Disposal

Correctly sorted disposal must be carried out after replacing wear and spare parts and after the machine has been withdraw from service (scrapped).

The materials must be sorted correctly according to metal, plastic, electronic scrap, various operating substances etc.

Any oil greasy parts (hydraulic hoses, lube pipes etc.) must be treated separated.

Electric devices, accessories and packaging should be recycled in an environment–friendly manner.

Always observe the local regulations.



#### Dynapac (China) Compaction & Paving Equipment Co., Ltd.

Atlas Copco Construction Technique Product Company China No. 38, QuanWang Road, WuQing High Tech Industrial Park, 301700, Tianjin, China

www.atlascopco.com