


**DYNAPAC**

Part of the Atlas Copco Group

# OPERATION & MAINTENANCE

## Paver Finisher F2500W

Type 896

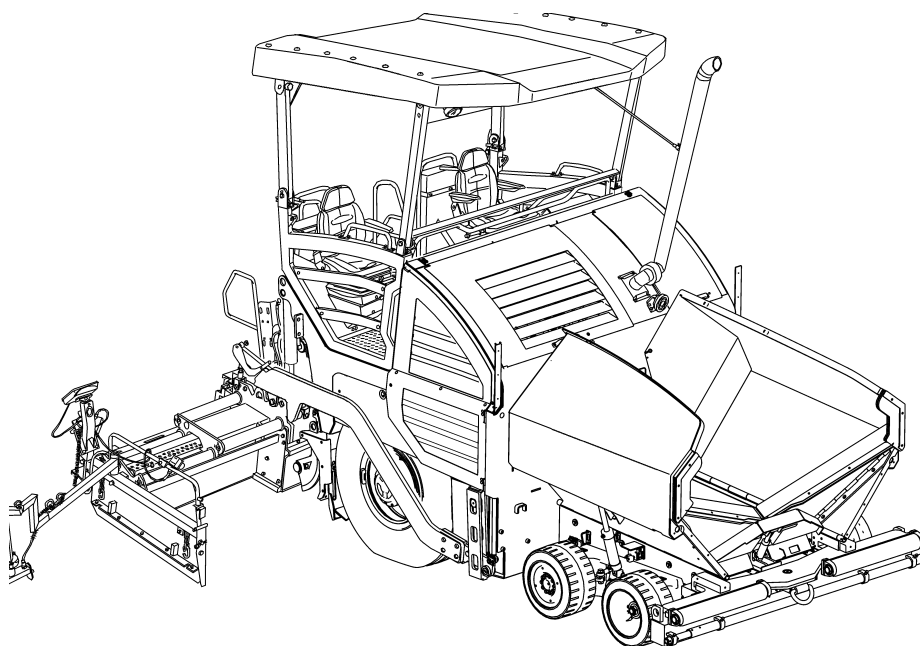

Keep for later use in document compartment

Article No. for this handbook: 4812037947 (A5) / 4812037952 (A4)

01-0111

EN

Valid for:

\_\_\_\_\_ to \_\_\_\_\_  
\_\_\_\_\_ to \_\_\_\_\_

***DYNAPAC***

Part of the Atlas Copco Group

**Original spare parts only  
Everything from one  
source**

Your authorised Dynapac dealer:

# Table of contents

|          |   |          |
|----------|---|----------|
| <b>V</b> | <b>Preface .....</b>  | <b>1</b> |
| 1        | General safety instructions .....                               | 2        |
| 1.1      | Laws, guidelines, accident prevention regulations .....         | 2        |
| 1.2      | Warnings .....  | 2        |
| 1.3      | Prohibitive symbols .....                                       | 4        |
| 1.4      | Protective equipment .....                                      | 5        |
| 1.5      | Environmental protection .....                                  | 6        |
| 1.6      | Fire prevention .....   | 6        |
| 1.7      | Additional information .....                                    | 7        |
| 2        | CE identification and Declaration of Conformity .....           | 8        |
| 3        | Guarantee conditions .....                                      | 8        |
| 4        | Residual risks .....  | 9        |
| 5        | Sensibly predictable incorrect usage .....                      | 10       |
| <b>A</b> | <b>Correct use and application .....</b>                        | <b>1</b> |
| <b>B</b> | <b>Vehicle description .....</b>                                | <b>1</b> |
| 1        | Application .....   | 1        |
| 2        | Description of assemblies and functions .....                   | 2        |
| 2.1      | Vehicle .....   | 3        |
|          | Construction .....  | 3        |
| 3        | Danger zones .....  | 7        |
| 4        | Safety devices .....  | 8        |
| 5        | Technical data, standard configuration .....                    | 10       |
| 5.1      | Dimensions (all dimensions in mm) .....                         | 10       |
| 5.2      | Allowed angle of rise and slope .....                           | 11       |
| 5.3      | Permissible approach angle .....                                | 11       |
| 5.4      | Turning circle .....  | 11       |
| 5.5      | Weights F2500W (all weights in t) .....                         | 12       |
| 5.6      | Performance data F2500W .....                                   | 13       |
| 5.7      | Travel drive/traction unit .....                                | 14       |
| 5.8      | Engine F2500W .....   | 14       |
| 5.9      | Hydraulic system .....  | 14       |
| 5.10     | Material compartment (hopper) .....                             | 15       |
| 5.11     | Material transfer .....   | 15       |
| 5.12     | Material distribution .....                                     | 15       |
| 5.13     | Screed lifting device .....                                     | 16       |
| 5.14     | Electrical system .....   | 16       |
| 5.15     | Permissible temperature ranges .....                            | 16       |
| 6        | Location of instruction labels and identification plates .....  | 17       |
| 6.1      | Warning signs .....   | 19       |
| 6.2      | Information signs .....   | 22       |
| 6.3      | CE marking .....  | 24       |
| 6.4      | Instructive symbols, prohibitive symbols, warning symbols ..... | 25       |
| 6.5      | Danger symbols .....  | 26       |
| 6.6      | Further warnings and operating instructions .....               | 27       |
| 6.7      | Identification label for the paver finisher (41) .....          | 29       |
| 7        | EN standards .....  | 30       |

|     |  |    |
|-----|--|----|
| 7.1 | Continuous sound pressure F2500W, Cummins QSB 6.7-C173 ..... | 30 |
| 7.2 | Operating conditions during measurement .....                | 30 |
| 7.3 | Measuring point configuration .....                          | 30 |
| 7.4 | Vibration acting on the entire body .....                    | 31 |
| 7.5 | Vibrations acting on hands and arms .....                    | 31 |
| 7.6 | Electromagnetic compatibility (EMC) .....                    | 31 |

## **C12    Transportation..... 1**

|     |  |    |
|-----|--|----|
| 1   | Safety regulations for transportation .....                    | 1  |
| 2   | Transportation on low-bed trailers .....                       | 2  |
| 2.1 | Preparations .....   | 2  |
| 3   | Securing the load .....  | 4  |
| 3.1 | Prepare the low-bed trailer .....                              | 4  |
| 3.2 | Driving onto the low-bed trailer .....                         | 5  |
| 3.3 | Lashing equipment .....  | 6  |
| 3.4 | Loading .....  | 7  |
| 3.5 | Preparing the machine .....                                    | 8  |
| 4   | Securing the load .....  | 9  |
| 4.1 | Securing at the front and at the sides .....                   | 9  |
|     | Step 1: fasten lashing chains at the front .....               | 9  |
|     | Step 2: fasten lashing chains at the side .....                | 9  |
| 4.2 | Securing at the rear - screed with side board .....            | 10 |
| 4.3 | Securing at the rear - screed without side board .....         | 11 |
|     | Step 1: fasten lashing straps .....                            | 11 |
|     | Step 2: fasten lashing chains .....                            | 11 |
| 4.4 | After transportation .....                                     | 12 |
| 5   | Protective roof (o) .....                                      | 13 |
| 6   | Transportation .....   | 14 |
| 6.1 | Preparations .....   | 14 |
| 6.2 | Driving mode .....   | 16 |
| 7   | Loading by crane .....   | 17 |
| 8   | Towing .....   | 19 |
| 9   | Safely parking the vehicle .....                               | 21 |
| 9.1 | Lifting the vehicle with hydraulic lifts, lifting points ..... | 22 |

## **D12    Operation ..... 1**

|     |                          |    |
|-----|--------------------------|----|
| 1   | Safety regulations ..... | 1  |
| 2   | Controls .....           | 2  |
| 2.1 | Operating panel .....    | 2  |
| 3   | Remote control .....     | 34 |

## **D31    Operation ..... 1**

|     |  |   |
|-----|--|---|
| 1   | Operating elements on the paver finisher .....           | 1 |
| 1.1 | Control elements on the operator's control station ..... | 1 |
|     | Protective roof (o) .....                                | 1 |
|     | Protective cabin (o) .....                               | 2 |
|     | Windscreen wiper .....                                   | 2 |
|     | Control panel, rigid .....                               | 3 |
|     | Operating panel, moveable .....                          | 3 |
|     | Control platform, moveable (o) .....                     | 4 |



|  |    |
|--|----|
| Operating panel, moveable .....  | 5  |
| Operating panel, swivelling (o) .....  | 5  |
| Control platform lock (o) .....  | 5  |
| .Emergency actuation control platform, movable .....                             | 6  |
| Seat console, swivelling (o) .....   | 7  |
| Seat console storage compartment .....   | 7  |
| Driver's seat, type I .....  | 8  |
| Driver's seat, type II .....   | 9  |
| Service brake ("foot brake") (o) .....   | 10 |
| Fuse box .....   | 11 |
| Batteries .....  | 12 |
| Main battery switch .....  | 12 |
| Hopper transport safeguard .....   | 13 |
| Screed lock, mechanical (o) .....  | 13 |
| Screed lock, hydraulic (o) .....   | 14 |
| Paving thickness indicator .....   | 15 |
| Auger lighting (o) .....   | 16 |
| Engine compartment lighting (o) .....  | 16 |
| Xenon working light (o) .....  | 17 |
| LED working light (o) .....  | 17 |
| 500 watt spotlight (o) .....   | 18 |
| Camera (o) .....   | 18 |
| Auger height adjustment ratchet (o) .....  | 19 |
| Auger height indicators .....  | 19 |
| Sensor rod / sensor rod extension .....  | 20 |
| Manual separator fluid spray (o) .....   | 22 |
| Separator fluid spraying system (o) .....  | 23 |
| Conveyor limit switches - PLC version .....                                      | 24 |
| Conveyor limit switches - conventional version .....                             | 25 |
| Ultrasonic auger limit switches<br>(left and right) - PLC version .....          | 26 |
| Ultrasonic auger limit switches<br>(left and right) - conventional version ..... | 27 |
| 24 volt / 12 volt sockets (o) .....  | 28 |
| Pressure control valve for screed charging/relieving .....                       | 29 |
| Pressure control valve for paving stop with relieving .....                      | 29 |
| Manometer for screed charging/relieving .....                                    | 29 |
| Central lubrication system (o) .....   | 30 |
| Screed eccentric adjustment .....  | 31 |
| Push roller crossbar, adjustable .....   | 32 |
| Storage box .....  | 33 |
| Fire extinguisher (o) .....  | 33 |
| Rotary beacon (o) .....  | 34 |
| Fuelling pump (o) .....  | 35 |
| Power moon (o) .....   | 36 |

|            |  |          |
|------------|--|----------|
| <b>D42</b> | <b>Operation .....</b>   | <b>1</b> |
| 1          | Preparing for operation .....  | 1        |
|            | Required devices and aids .....  | 1        |
|            | Before starting work (in the morning or when starting paving) .....  | 2        |
|            | Check list for the machine operator .....  | 2        |
| 1.1        | Starting the paver finisher .....  | 5        |
|            | Before starting the paver finisher .....   | 5        |
|            | "Normal" starting .....  | 5        |
|            | External starting (starting aid) .....   | 7        |
|            | After starting .....   | 9        |
|            | Observe indicator lamps .....  | 11       |
|            | Engine coolant temperature check (1) .....   | 11       |
|            | Battery charge indicator (2) .....   | 11       |
|            | Oil pressure indicator lamp for the diesel engine (3) .....  | 11       |
| 1.2        | Preparation for transportation .....   | 13       |
|            | Driving and stopping the paver finisher .....  | 15       |
| 1.3        | Preparations for paving .....  | 16       |
|            | Separator fluid .....  | 16       |
|            | Screed heater system .....   | 16       |
|            | Direction marks .....  | 17       |
|            | Loading/conveying material .....   | 19       |
| 1.4        | Starting for paving .....  | 21       |
| 1.5        | Checks during paving .....   | 22       |
|            | Paver function .....   | 22       |
|            | Quality of the layer .....   | 22       |
| 1.6        | Paving with "screed control at paver finisher stop" and "screed<br>charging/relieving" .....                           | 23       |
|            | General .....  | 23       |
|            | Screed charging/relieving .....  | 25       |
|            | Screed control with paver finisher stop / in paving operation<br>(screed stop / floating stop / floating paving) ..... | 25       |
|            | Screed control with paver finisher stop - floating stop with relief .....  | 27       |
|            | Adjusting the pressure .....   | 27       |
|            | Set pressure for screed charging or relieving .....  | 27       |
|            | Setting pressure for screed control with paver finisher stop - floating stop<br>with relief .....                      | 29       |
| 1.7        | Interrupting/terminating operation .....   | 31       |
|            | During breaks (e.g. the material supply truck is late) .....   | 31       |
|            | During longer breaks (e.g. lunch break) .....  | 31       |
|            | When work is finished .....  | 33       |
| 2          | Malfunctions .....   | 34       |
| 2.1        | Error code query for engine .....  | 34       |
|            | Output of numerical code .....   | 36       |
| 2.2        | Error codes .....  | 38       |
| 2.3        | Problems during paving .....   | 45       |
| 2.4        | Malfunctions on the paver finisher or screed .....   | 47       |

|            |   |          |
|------------|---|----------|
| <b>E12</b> | <b>Set-up and modification</b>  | <b>1</b> |
| 1          | Special notes on safety   | 1        |
| 2          | Distribution auger  | 2        |
| 2.1        | Height adjustment   | 2        |
|            | Grain sizes up to 16 mm   | 2        |
|            | Grain sizes > 16 mm   | 2        |
| 2.2        | Mechanical height adjustment of the auger                                 | 3        |
| 3          | Auger extension   | 4        |
| 3.1        | Mounting extension parts  | 5        |
|            | Mounting the material shaft and auger extension                           | 5        |
|            | Mounting the outer auger bearing  | 6        |
|            | Mounting the auger end bearing  | 7        |
| 3.2        | Auger extension chart   | 8        |
|            | Auger upgrading, working width 3.14m                                      | 10       |
|            | Auger upgrading, working width 3.78m                                      | 10       |
|            | Auger upgrading, working width 4.42m                                      | 10       |
|            | Auger upgrading, working width 5.06m                                      | 11       |
|            | Auger upgrading, working width 5.70m                                      | 11       |
| 3.3        | Material shaft, hinged  | 12       |
| 3.4        | Hopper scraper  | 13       |
| 4          | Offsetting the screed   | 14       |
| 5          | Levelling   | 15       |
| 5.1        | Slope controller  | 15       |
| 5.2        | Mounting the sensor arm   | 16       |
| 5.3        | Mounting the grade control system   | 16       |
| 5.4        | Setting up the sensor arm   | 17       |
| 5.5        | Big ski 9 m, big ski 13 m   | 18       |
|            | Mounting the big ski bracket on the crossbeam                             | 20       |
|            | Mounting the swivel arms  | 21       |
|            | Mounting the centre element   | 22       |
|            | Extending the big ski   | 23       |
|            | Mounting the sensor bracket   | 24       |
|            | Mounting and aligning the sensors   | 25       |
|            | Mounting the distributor box  | 26       |
|            | Connection diagram  | 27       |
| 6          | Limit switch  | 28       |
| 6.1        | Auger limit switches (left and right) - mounting the conventional version | 28       |
| 7          | Screed  | 29       |
| 8          | Electrical connections  | 29       |
| 8.1        | Machine operation without remote control / side board                     | 30       |
| <b>F10</b> | <b>Maintenance</b>  | <b>1</b> |
| 1          | Notes regarding safety  | 1        |
| <b>F23</b> | <b>Maintenance review</b>   | <b>1</b> |
| 1          | Maintenance review  | 1        |

|            |  |          |
|------------|--|----------|
| <b>F32</b> | <b>Maintenance - conveyor .....</b>                              | <b>1</b> |
| 1          | Maintenance - conveyor .....                                     | 1        |
| 1.1        | Maintenance intervals .....                                      | 2        |
| 1.2        | Points of maintenance .....                                      | 3        |
|            | Chain tension, conveyor (1) .....                                | 3        |
|            | Conveyor drive - drive chains (2) .....                          | 5        |
|            | Conveyor deflectors / conveyor plates (3) .....                  | 6        |
| <b>F40</b> | <b>Maintenance - auger assembly .....</b>                        | <b>1</b> |
| 1          | Maintenance - auger assembly .....                               | 1        |
| 1.1        | Maintenance intervals .....                                      | 2        |
| 1.2        | Points of maintenance .....                                      | 4        |
|            | Outer auger bearing (1) .....                                    | 4        |
|            | Auger planetary gear (2) .....                                   | 5        |
|            | Drive chains of the augers (3) .....                             | 6        |
|            | Auger box (4) .....  | 7        |
|            | Seals and sealing rings (5) .....                                | 8        |
|            | Gearbox bolts Check tightening (6) .....                         | 9        |
|            | Mounting screws - Outer auger bearing Check tightening (7) ..... | 9        |
|            | Auger blade (8) .....  | 10       |
| <b>F51</b> | <b>Maintenance - engine assembly .....</b>                       | <b>1</b> |
| 1          | Maintenance - engine assembly .....                              | 1        |
| 1.1        | Maintenance intervals .....                                      | 2        |
| 1.2        | Points of maintenance .....                                      | 5        |
|            | Engine fuel tank (1) .....                                       | 5        |
|            | Engine lube oil system (2) .....                                 | 6        |
|            | Engine fuel system (3) .....                                     | 8        |
|            | Engine air filter (4) .....                                      | 10       |
|            | Engine cooling system (5) .....                                  | 12       |
|            | Engine drive belt (6) .....                                      | 14       |
| <b>F60</b> | <b>Maintenance - hydraulic system .....</b>                      | <b>1</b> |
| 1          | Maintenance - hydraulic system .....                             | 1        |
| 1.1        | Maintenance intervals .....                                      | 2        |
| 1.2        | Points of maintenance .....                                      | 4        |
|            | Hydraulic oil tank (1) .....                                     | 4        |
|            | Suction/return flow hydraulic filter (2) .....                   | 6        |
|            | Bleeding the filter .....  | 7        |
|            | High-pressure filter (3) .....                                   | 8        |
|            | Pump distribution gear (4) .....                                 | 9        |
|            | Bleeder .....  | 10       |
|            | Hydraulic hoses (5) .....  | 11       |
|            | Marking hydraulic hoses / storage period, period of use .....    | 13       |
|            | Auxiliary flow filter (6) .....                                  | 14       |

|             |  |          |
|-------------|--|----------|
| <b>F72</b>  | <b>Maintenance - travel drive, steering .....</b>          | <b>1</b> |
| 1           | Maintenance - travel drive, steering .....                 | 1        |
| 1.1         | Maintenance intervals .....                                | 2        |
| 1.2         | Points of maintenance .....                                | 4        |
|             | Planetary gear (1) .....                                   | 4        |
|             | Drive wheels (2) .....                                     | 5        |
|             | Replacing/dismantling and installing the wheels .....      | 6        |
|             | Air pressure table .....                                   | 8        |
|             | Pressures for equipment Bandag on Michelin XHA .....       | 8        |
|             | Pressures for equipment Michelin XGC / Techking ETGC ..... | 8        |
|             | Lubrication points (3) .....                               | 10       |
|             | Steering .....   | 10       |
| <b>F82</b>  | <b>Maintenance - electrical system .....</b>               | <b>1</b> |
| 1           | Maintenance - electrical system .....                      | 1        |
| 1.1         | Maintenance intervals .....                                | 2        |
| 1.2         | Points of maintenance .....                                | 3        |
|             | Batteries (1) .....  | 3        |
|             | Electrical fuses / relays (3) .....                        | 4        |
|             | Fuses in terminal box (B) .....                            | 5        |
|             | Relays in terminal box (C) .....                           | 7        |
|             | Relays in operating panel (D) .....                        | 9        |
|             | Relays in the engine compartment (E) .....                 | 10       |
| <b>F90</b>  | <b>Maintenance - lubricating points .....</b>              | <b>1</b> |
| 1           | Maintenance - lubricating points .....                     | 1        |
| 1.1         | Maintenance intervals .....                                | 2        |
| 1.2         | Points of maintenance .....                                | 3        |
|             | Central lubrication system (1) .....                       | 3        |
|             | Bearing points (2) .....                                   | 7        |
| <b>F100</b> | <b>Tests, stopping .....</b>                               | <b>1</b> |
| 1           | Tests, checks, cleaning, stopping .....                    | 1        |
| 1.1         | Maintenance intervals .....                                | 2        |
| 2           | General visual inspection .....                            | 3        |
| 3           | Inspection by an expert .....                              | 3        |
| 4           | Cleaning .....   | 4        |
| 4.1         | Cleaning the hopper .....                                  | 5        |
| 4.2         | Cleaning the conveyor and auger .....                      | 5        |
| 5           | Preserving the paver finisher .....                        | 6        |
| 5.1         | Shutdowns for up to 6 months .....                         | 6        |
| 5.2         | Shutdowns lasting from 6 months to 1 year .....            | 6        |
| 5.3         | Recommissioning the machine .....                          | 6        |
| 6           | Environmental protection, disposal .....                   | 7        |
| 6.1         | Environmental protection .....                             | 7        |
| 6.2         | Disposal .....   | 7        |

## **F111 Lubricants and operating substances ..... 1**

|      |   |   |
|------|---|---|
| 1    | Lubricants and operating substances ..... | 1 |
| 2    | Optional assemblies .....                 | 2 |
| 2.1  | Capacities .....                          | 4 |
| 3    | Lubricant specifications .....            | 5 |
| 3.1  | Engine .....                              | 5 |
| 3.2  | Cooling system .....                      | 5 |
| 3.3  | Hydraulic system .....                    | 5 |
| 3.4  | Pump distribution gear .....              | 5 |
| 3.5  | Travel drive planetary gear .....         | 6 |
| 3.6  | Auger drive planetary gear type A .....   | 6 |
| 3.7  | Auger box type A .....                    | 6 |
| 3.8  | Auger bevel gear type B .....             | 6 |
| 3.9  | Grease .....                              | 6 |
| 3.10 | Hydraulic oil .....                       | 7 |

# V Preface

Translation of the original operating instructions.

If the vehicle is to be operated safely, the information provided in these operating instructions will be required. The information is provided in a concise, clearly structured form. The individual chapters are arranged in alphabetical order, and every chapter starts with page 1. The individual pages are identified by the chapter letter and the page number.

Example: Page B 2 is the second page of chapter B.

These operating instructions cover various vehicle options. Make sure that during operation and maintenance work the description appropriate to the vehicle option is used.

Safety instructions and important notes are identified by the following pictograms:



Precedes safety instructions that must be observed in order to prevent danger to personnel.



Precedes notes that must be observed to prevent damage to equipment.



Precedes general notes and explanations.

- Used to indicate standard equipment.
- Used to indicate optional equipment.





In the interest of continued development, the manufacturer reserves the right to make changes to the vehicle (which will not, however, change the essential features of the type of vehicle described) without updating the present operating instructions at the same time.

Dynapac GmbH  
Wardenburg

Ammerländer Strasse 93  
D-26203 Wardenburg / Germany  
Telephone: +49 / (0)4407 / 972-0  
Fax: +49 / (0)4407 / 972-228  
[www.dynapac.com](http://www.dynapac.com)

## 1 General safety instructions

### 1.1 Laws, guidelines, accident prevention regulations

-  The locally applicable laws, guidelines and accident prevention regulations must always be observed, even if these are not expressly named here.  
The user himself/herself is responsible for compliance with the resulting regulations and measures!
-  The following warnings, prohibitive symbols and instructive symbols indicate dangers for persons, the vehicle and the environment due to residual risks when operating the vehicle.
-  Failure to observe this information, prohibitions and instructions can result in life-threatening injuries!
-  The "Guidelines for the Correct Use and Application of Paver Finishers" compiled by Dynapac must also be observed!

### 1.2 Warnings

Warning on a dangerous area or hazard!

Failure to observe the warnings can result in life-threatening injuries!



Warning on danger of being pulled in!



In this working area/on this element there is a danger of being pulled in by rotating or conveying elements!  
Only carry out activities with elements switched off!



Warning on dangerous electrical voltage!



All maintenance and repair work on the screed's electrical system must always be carried out by an electrician!



Warning on suspended loads!



Never stand under suspended loads!





Warning on danger of crushing!



There is a danger of crushing when certain components are operated, or certain functions or vehicle movements are carried out. Always make sure that there are no persons within the endangered areas!



Warning on hand injuries!



Warning on hot surfaces or hot liquids!



Warning on danger of falling!



Warning on dangers posed by batteries!



Warning on hazardous or irritating substances!



Warning on substances which constitute a fire hazard!



Warning on gas bottles!



### 1.3 Prohibitive symbols

Opening/walking on/reaching in/carrying out/setting up are prohibited during operation or while the drive engine is running!



Do not start engine/drive!  
Maintenance and repair work may only be carried out with the diesel engine shut down!



Spraying with water is prohibited!



Extinguishing with water is prohibited!



Unauthorised maintenance is prohibited!  
Only qualified experts may conduct maintenance!



Consult the Dynapac Service Department

Fire!, naked flames and smoking are prohibited!



Do not switch!



## 1.4 Protective equipment



Locally applicable regulations may require the wearing of various safety equipment!  
Always observe these regulations!

Wear safety goggles to protect your eyes!



Wear suitable head protection!



Wear suitable hearing protection to protect your hearing!



Wear suitable safety gloves to protect your hands!



Wear safety shoes to protect your feet!



Always wear close-fitting work clothing!

Wear a warning vest to be seen in time to avoid accidents!



Wear respiratory equipment if breathing air is contaminated!



## 1.5 Environmental protection



The locally applicable laws, guidelines and accident prevention regulations for the proper recycling and disposal of waste must always be observed, even if these are not expressly named here.

Water-endangering substances like:

- Lubricants (oil, grease)
- Hydraulic oil
- Diesel fuel
- Coolant
- Cleaning liquids

must not get into the soil or sewer system during cleaning, maintenance and repair work!

Substances must be caught, stored, transported and brought to professional disposal sites in suitable containers!



Environmentally hazardous substance!



## 1.6 Fire prevention



Locally applicable regulations may require suitable extinguishing agents to be carried on the vehicle!

Always observe these regulations!

Fire extinguisher!  
(optional equipment)



## 1.7 Additional information





Also observe the manufacturer's documentation and additional documentation!




For example, the maintenance instructions of the engine manufacturer



Description / depiction applicable when equipped with gas heater!

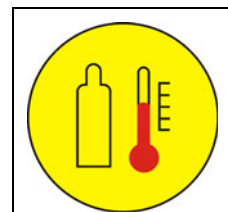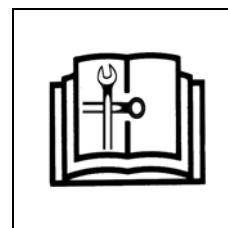

Description / depiction applicable when equipped with electric heater!

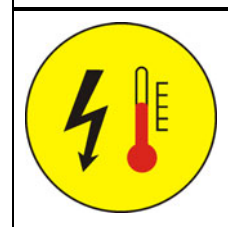

## **2 CE identification and Declaration of Conformity**

(only applies to machines sold in the EU/EEC)

This machine has CE identification. This identification says that the machine fulfils the basic health and safety requirements pursuant to the Machinery Directive 2006/42/EC together with all other valid regulations. The scope of supply of the machine includes a Declaration of Conformity as specified in the valid regulations and amendments together with harmonised standards and other valid provisions.

## **3 Guarantee conditions**



The guarantee conditions are included in the scope of supply of the machine. This contains a complete specification of the valid conditions.

### **The guarantee becomes null and void if**

- damage occurs through malfunctions caused by improper use and incorrect operation.
- repairs or manipulations are carried out by persons who are neither trained nor authorised accordingly.
- accessories or spare parts are used that cause damage and which are not approved by Dynapac.

## **4 Residual risks**

These are risks that remain even if all possible measures and safety precautions have been taken to help minimise dangers (risks) or to reduce their probability and scope to zero.

### **Residual risks in the form of**

- **Danger to life and limb of persons at the machine**
- **Danger to the environment posed by the machine**
- **Damage to property and restricted output and functionality of the machine**
- **Damage to property in the operating range of the machine**

### **caused by:**

- wrong or improper use of the machine
- defective or missing safety devices
- use of the machine by untrained, uninstructed staff
- defective or damaged parts
- incorrect transport of the machine
- incorrect maintenance or repairs
- leaking operating substances
- emission of noise and vibrations
- impermissible operating substances

### **Existing residual risks can be avoided by complying and implementing the following:**

- warnings at the machine
- warnings and instructions in the safety manual for paver finishers and in the operating instructions of the paver finisher
- Operating instructions of the machine operator

## **5 Sensibly predictable incorrect usage**

Every kind of sensibly predictable incorrect usage of the machine constitutes misuse. Incorrect usage makes the manufacturer's warranty null and void: the operator bears sole responsibility.

Sensibly predictable incorrect usage of the machine includes:

- presence in the danger zone of the machine
- transporting persons
- leaving the operator's platform while the machine is operating
- removing protection or safety devices
- starting and using the machine outside the operator's platform
- operating the machine with the screed walkway plate hinged up
- failing to comply with the maintenance instructions
- omission or incorrect execution of maintenance or repair work
- spraying the machine with high pressure cleaners



---

# A Correct use and application



The Dynapac "Guideline for the correct and proper use of feeders" is included in the scope of delivery of this device. The guidelines are part of the present operating instructions and must always be heeded. National regulations are fully applicable.

The vehicle described in these operating instructions is a feeder which is used as a transportation and conveyor system for paving materials for paver finishers and which forwards material accepted from transport vehicles to paver finishers.

Roll-down or lean-mixed concrete, track-laying ballast and unbound mineral aggregates for paving foundations are suitable paving materials.

The feeder must be used, operated and maintained according to the specifications in these operating instructions. Any other use is regarded as improper and can cause injury to persons or damage to the feeder or other assets.

Any use going beyond the range of applications described above is regarded as improper use and is expressly forbidden! Especially in those cases where the feeder is to be operated on inclines or where it is to be used for special purposes (construction of dumps, dams), it is absolutely necessary to contact the manufacturer.

**Duties of the operator:** An operator within the meaning of these operating instructions is defined as any natural or legal person who either uses the feeder himself or on whose behalf it is used. In special cases (e.g. leasing or renting), the operator is considered to be the person who, in accordance with existing contractual agreements between the owner and the user of the feeder, is charged with the observance of the operating duties.

The operator must ensure that the feeder is only used in the proper manner and that all danger to the life and limb of the user or third parties is avoided. In addition to this, it must be ensured that the relevant accident prevention regulations and other safety-related provisions as well as the operating, servicing and maintenance guidelines are observed. The operator must also ensure that all persons operating the feeder have read and understood the present operating instructions.

**Mounting of attachments:** The feeder can only be operated with paver finishers and paving materials that have been approved by the manufacturer. Mounting or installation of additional facilities that interfere with or supplement the functions of the feeder are only permissible after written approval has been obtained from the manufacturer. If necessary, approval must be obtained from local authorities.


Any approval obtained from local authorities does not, however, make approval by the manufacturer unnecessary.




## B Vehicle description

### 1 Application

The Dynapac paver finisher F2500W is a wheeled paver finisher which is used for paving bituminous mixed material, roll-down or lean-mixed concrete, track-laying ballast and unbound mineral aggregates for foundations for paving.

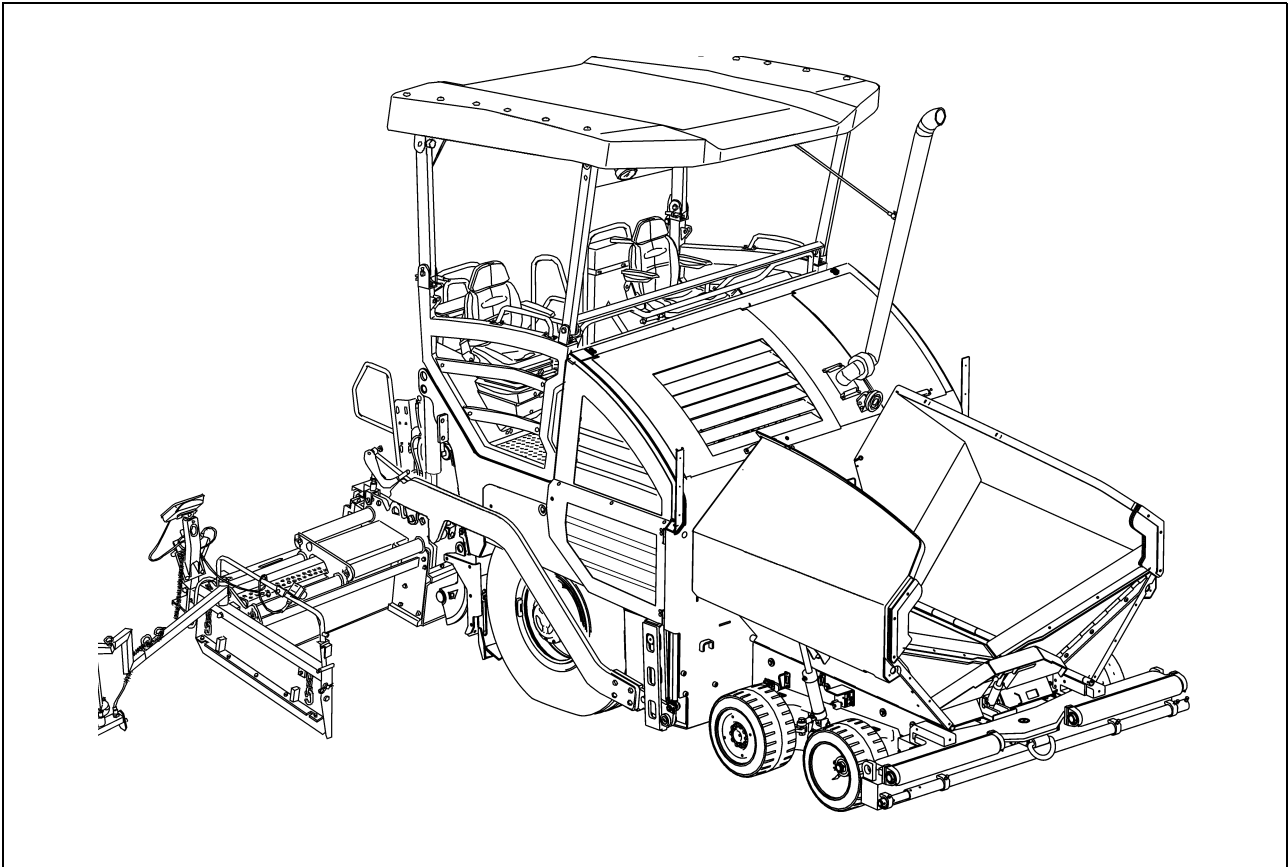

## 2 Description of assemblies and functions

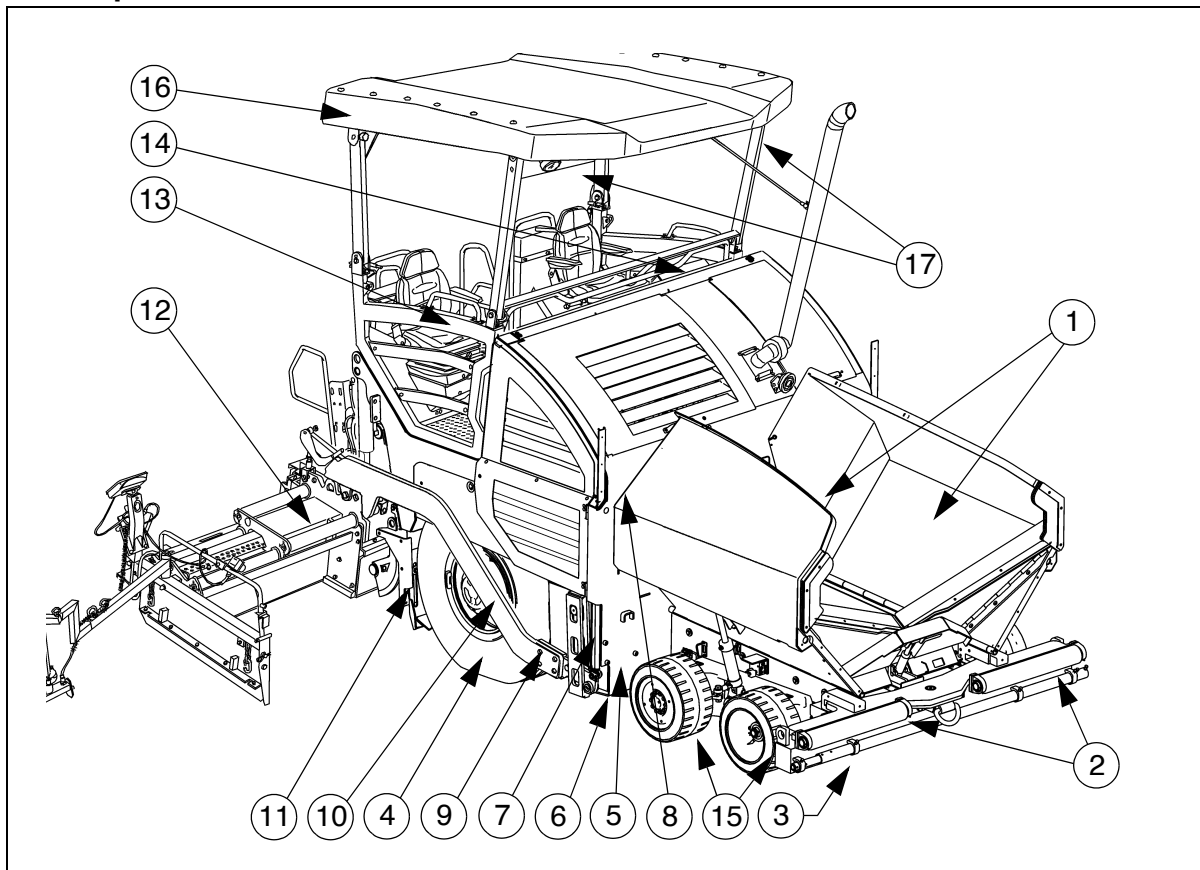

| Item |   | Designation   |
|------|---|---|
| 1    | ● | Material compartment (hopper)   |
| 2    | ● | Truck push rollers  |
| 3    | ● | Tube for sensor rod (direction indicator) and holder for levelling shoe |
| 4    | ● | Rear wheels   |
| 5    | ● | Levelling cylinder for paving thickness                                 |
| 6    | ● | Traction roller   |
| 7    | ● | Crossbeam pull bar  |
| 8    | ● | Paving thickness indicator  |
| 9    | ● | Crossbeam   |
| 10   | ● | Travel drive  |
| 11   | ● | Auger   |
| 12   | ● | Screed  |
| 13   | ● | Operator's platform   |
| 14   | ● | Operating panel (can be moved to either side)                           |
| 15   | ● | Tandem front axle   |
| 16   | ○ | Protective roof   |
| 17   | ○ | Working lights  |

● = Standard equipment

○ = Optional equipment

## **2.1 Vehicle**

### **Construction**

The paver finisher has a welded steel frame on which the individual components are mounted.

The large drive wheels and the tandem front axle compensate uneven areas on the ground; the suspension of the attached screed also warrants high paving precision. The fully variable hydrostatic travel drive allows the speed of the paver finisher to be matched to all work conditions.

The operation of the paver finisher is considerably facilitated by the automatic material handling system, the independent travel drives and the clearly structured operating components and controls.

The following extra equipment (option) is available:

- Automatic levelling/slope control system
- Additional cut-off shoe
- Larger working widths
- Protective roof
- Additional headlights, warning lamps
- Emulsion spraying system
- Further equipment and upgrade options on request

**Engine:** The paver finisher is driven by a water cooled diesel engine. For further details see the technical data and the engine's instruction manual.

**Traction unit:** The front axle is a tandem swing axle. As the wheels are not mounted on non-uniform lifting arms, the second front wheel is subject to a heavier load on the shorter lifting arm.

This solution provides increased steering and load-bearing capabilities, especially on soft grounds. The tyres are solid rubber tyres at the front axle and large, tubeless, pneumatic tyres at the rear axle.

**Hydraulic system:** The diesel engine drives the hydraulic pumps for all main paver finisher drives via the attached distribution gear and its auxiliary drive shafts.

**Travel drive:** The continuously adjustable travel drive pumps are connected to the travel drive engines by means of high pressure hydraulic hoses.

These oil engines drive the drive wheels via planetary gears.

The multi-stage planetary gear covers the various driving ranges and the braking function.

**Steering system/operator's platform:** The fully hydraulic steering system ensures easy manoeuvrability.

The small turning radius permits quick and easy manoeuvring.

The movable operating panel can be locked in several positions along the control platform.

**Push roller crossbar:** The push rollers for material trucks are fastened to a cross bar that is pivoted at its centre. The paver finisher thus deviates less from its course and paving in curves is made easier.

For adaptation to various truck design types, the push roller crossbar can be shifted to two positions.

**Material compartment (hopper):** The hopper inlet is equipped with a conveyor system that empties the hopper and transfers the material to the auger.

The hopper can hold approx. 12.0 t.

To facilitate emptying and to improve material transport, each of the lateral covers of the hopper can be hydraulically moved.

**Material transfer:** The paver finisher is equipped with two conveyors driven separately that transfer the material from the hopper to the augers.

By scanning the filling height during the paving procedure, the transfer amount is regulated fully automatically.

**Augers:** The augers are driven and actuated independently from the conveyors. The left-hand and the right-hand half of the auger can be controlled separately. The drive system is fully hydraulic.

The conveying direction can be changed towards the centre or towards the outside. This ensures that there is always a sufficient supply of material even if an excessive amount of material is required at one side. The auger speed is continuously controlled by sensors that monitor the material flow.

**Height adjustment and extension of augers:** Height adjustment and extension of augers ensure optimum adaptation to a wide range of paving thicknesses and widths.

The height of the auger is adjusted by means of barrel nuts on the rear wall.

Auger segments of different lengths can be attached to easily adapt to the different paving widths.

**Levelling/slope control system:** The slope control system (○) can be used to regulate the traction point on the left-hand or the right-hand side with a defined difference to the opposite side.

To determine the actual value, the two traction crossbeams are linked with a slope control rod.

The slope control system always operates in conjunction with the screed height adjustment of the opposite side.

By adjusting the height of the traction point of the crossbeam (traction roller), the paving thickness of the material or the laying height of the screed can be controlled.

Actuation occurs electro-hydraulically on both sides and can be controlled manually by means of toggle switches or automatically by means of an electronic grade control system.

**Crossbeams / screed lifting device:** The screed lifting device is used to lift the screed during transportation. The screed's approach angle can be changed using the eccentric adjustment facility on the crossbeam.

Depending on the paving condition requirements, the crossbeam can be moved backwards or forwards. This adjustment enlarges the material space between the auger and screed.

**Automatic paving stop and screed charging/relieving:** The automatic paving stop prevents the formation of any screed marks caused by a stopped screed. When the paver finisher stops (during a truck change), the screed remains in floating position and relief pressure is applied, thus preventing the screed from sinking while stationary.

The screed relieving device puts a higher load on the traction unit, thus increasing the traction.


Activating the screed charging device can improve the compacting result under different paving conditions.



### 3 Danger zones



In these vehicle working areas, there may be a risk of drawing in or crushing during normal operation caused by rotating and conveying elements, or by components in motion.

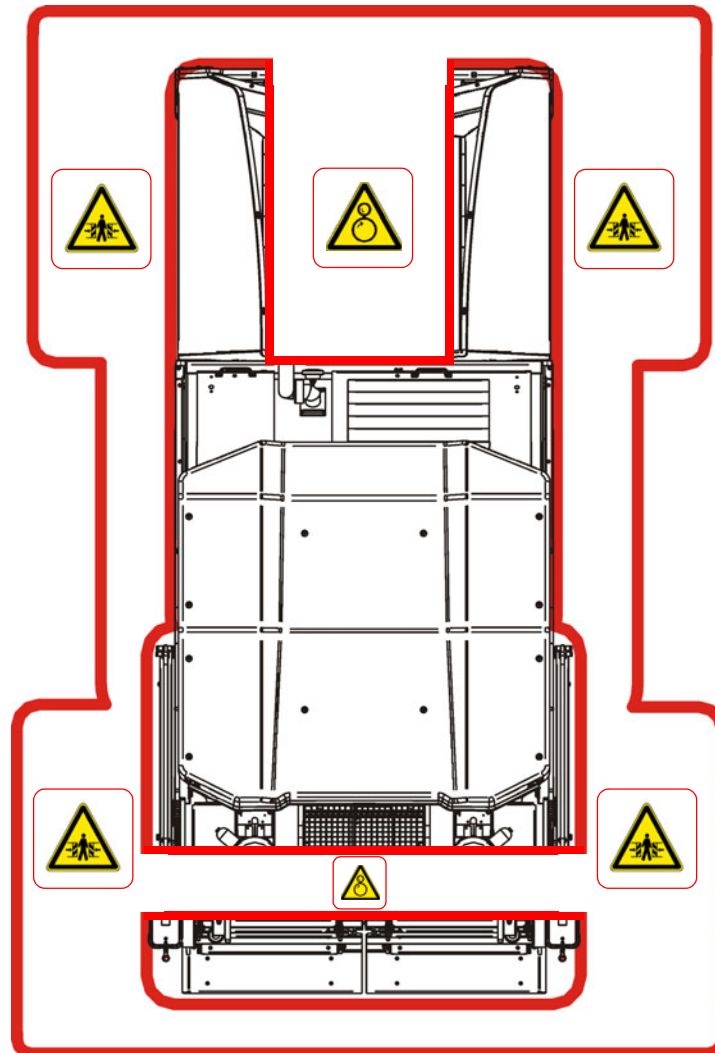


**Danger of being pulled in!**



**Danger of crushing!**

## 4 Safety devices

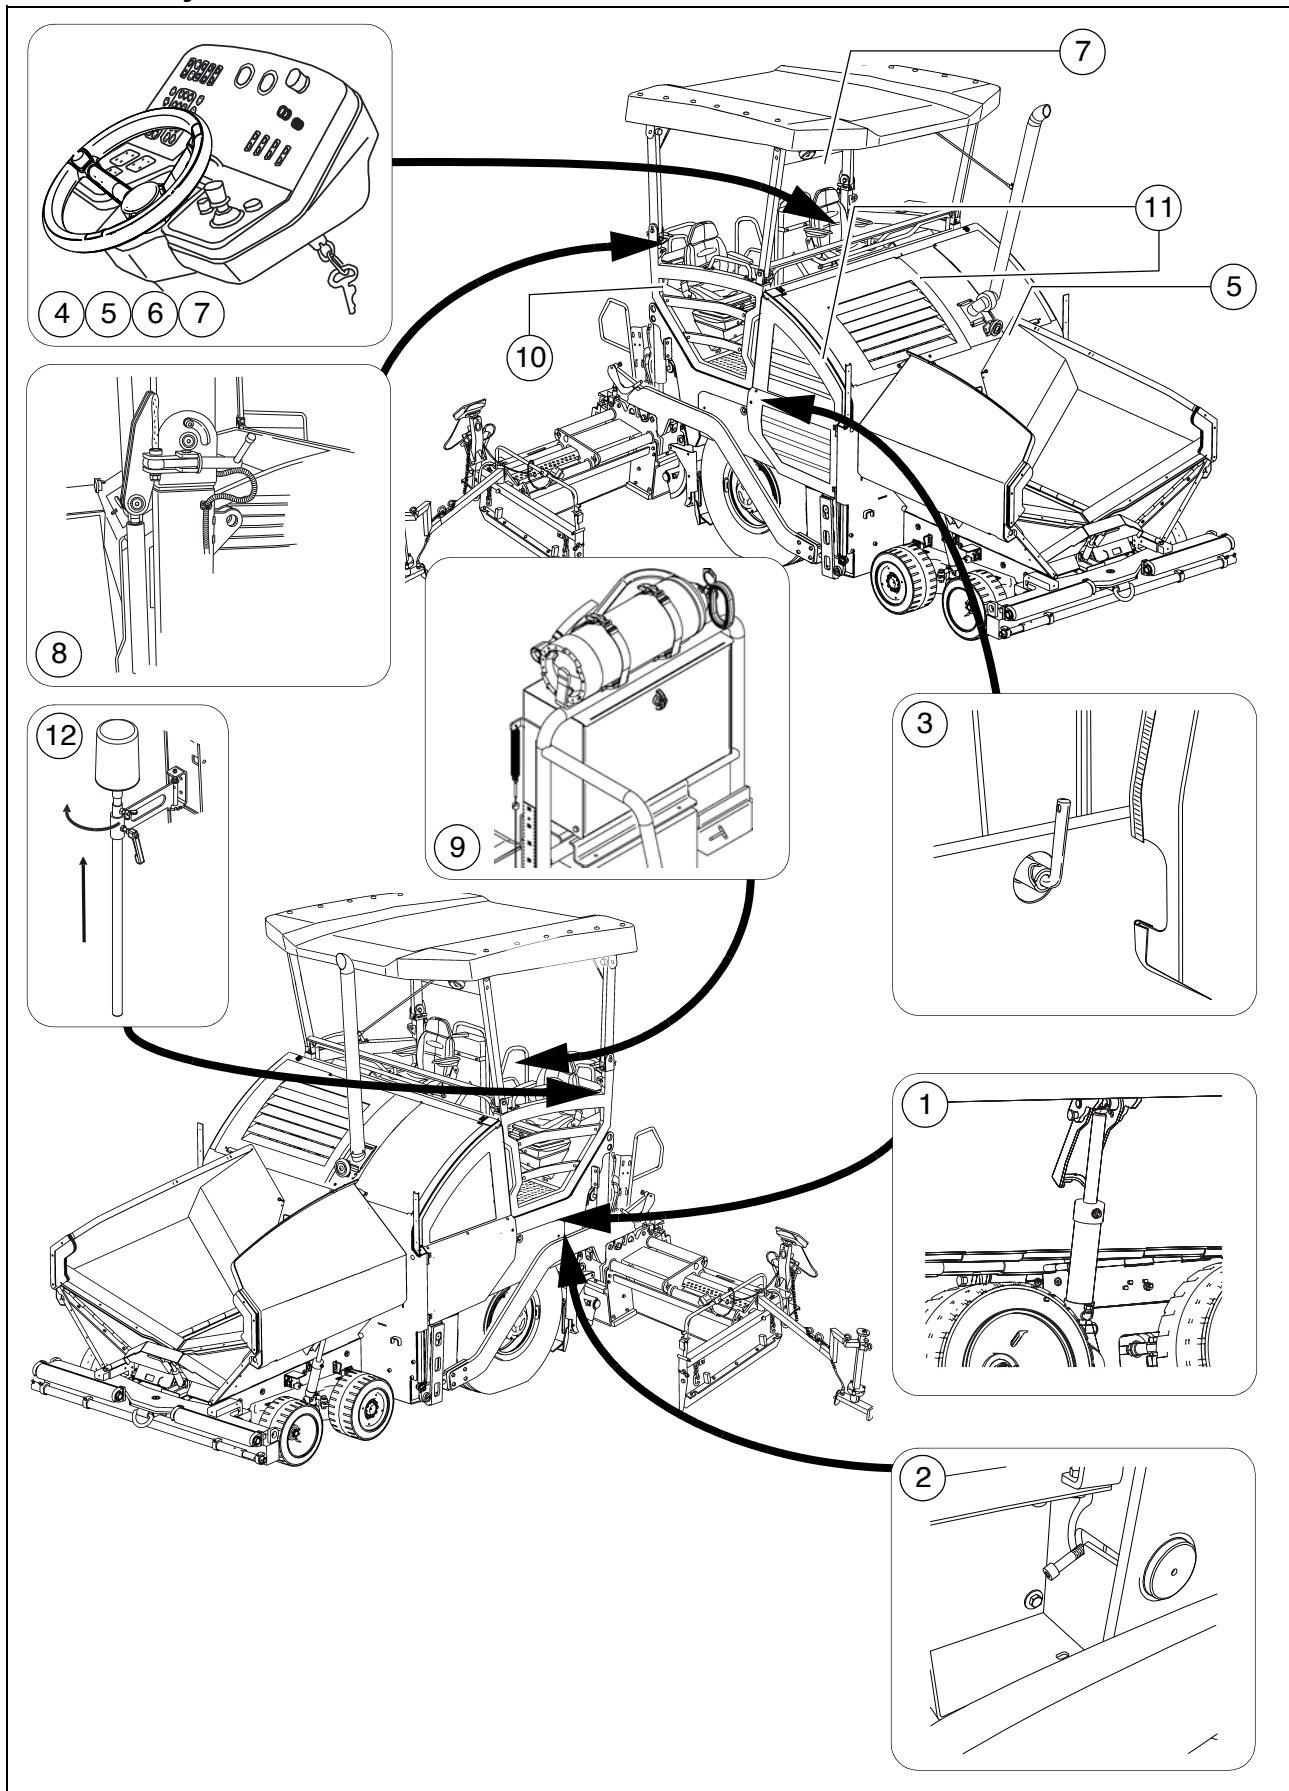

| Item | Designation                             |    |
|------|---|----|
| 1    | Hopper transport safeguard              | ** |
| 2    | Screed lock, mechanical / hydraulic (○) | ** |
| 3    | Main switch                             |    |
| 4    | Emergency stop button                   |    |
| 5    | Horn                                    |    |
| 6    | Ignition key                            |    |
| 7    | Lights                                  | ** |
| 8    | Protective roof latch (○)               | ** |
| 9    | Fire extinguisher (○)                   |    |
| 10   | Screed warning light (○)                | ** |
| 11   | Covers, lateral flaps, coverings        | ** |
| 12   | Rotary beacon (○)                       |    |

\*\* Located on both sides of the vehicle



Safe operation is only possible if the control and safety devices are functioning perfectly and if the protective equipment is fitted correctly.




Check the function of these devices at regular intervals.




Functional descriptions for the individual safety facilities can be found in the following chapters.




## 5.2 Allowed angle of rise and slope

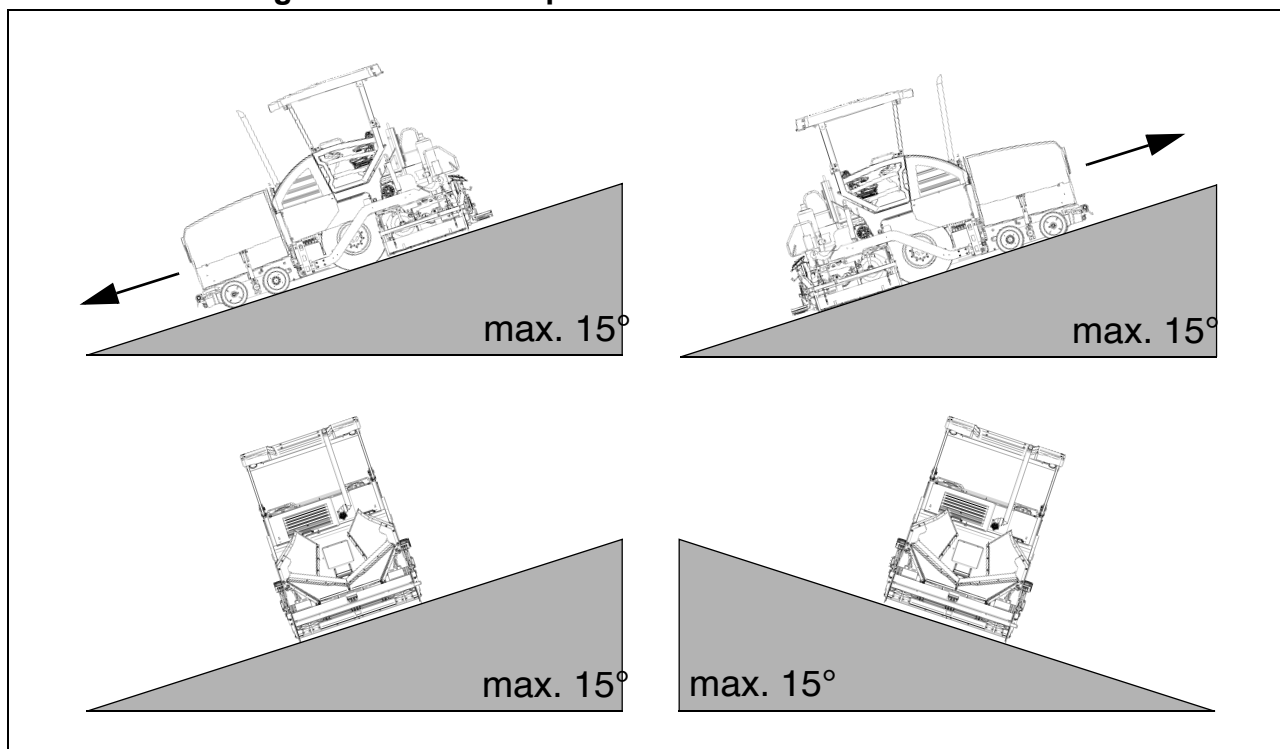

 Before operating your vehicle in an inclined position (gradient, slope, lateral inclination) which is above the specified limit value, please consult the customer service department for your vehicle!

## 5.3 Permissible approach angle

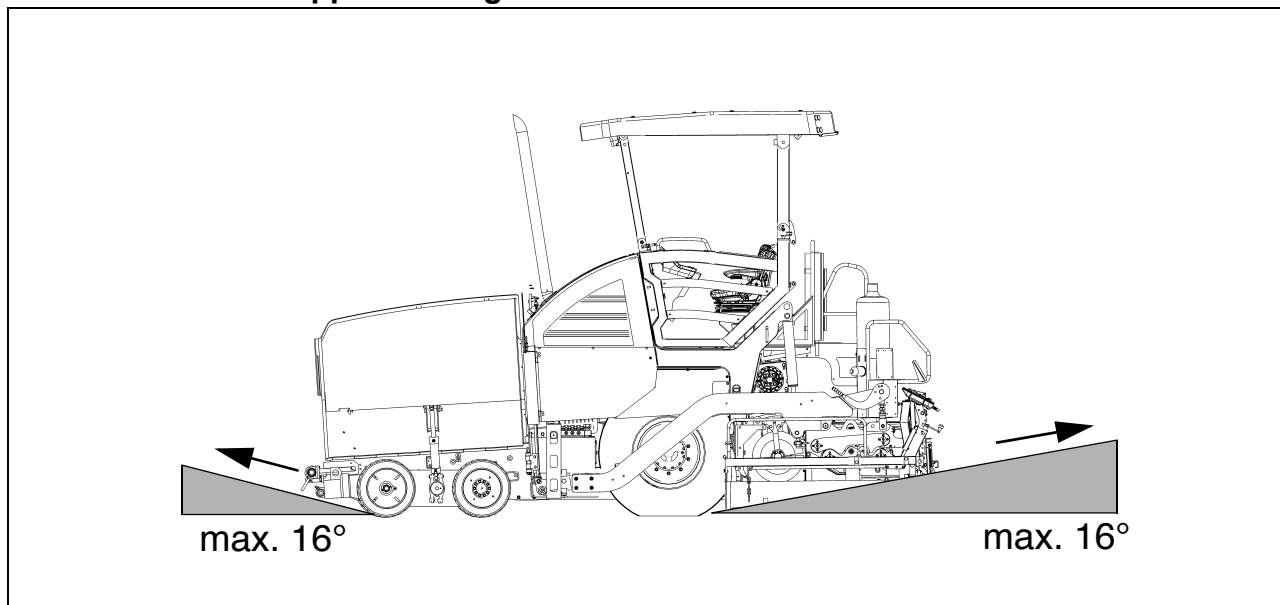

## 5.4 Turning circle

|                         |        |
|-------------------------|--------|
| Internal turning circle | 2.47 m |
| External turning circle | 6.06 m |

## 5.5 Weights F2500W (all weights in t)

|  |                     |
|--|---------------------|
| Paver finisher without screed                                      | approx. 13,2 - 14,2 |
| Paver finisher with screed:<br>- V5100                             | approx. 16,5 - 17,5 |
| With extension parts for max.<br>working width, additionally max.: |                     |
| With filled hopper<br>additionally max.                            | approx. 13.0        |



For the weights of the screed and the screed attachments, see the operating instructions for the screed.

## 5.6 Performance data F2500W

| Screed used | Basic width<br>(without cut-off shoes) | minimum paving width<br>(with cut-off shoe) | continuously hydraulically<br>adjustable up to | maximum paving widths<br>(with extension parts) |   |
|-------------|--|---|--|---|---|
| V5100TV     | 2.55                                   | 2.00  | 5.10   | 6.60  | m |

|                                |            |       |
|--------------------------------|------------|-------|
| Transport speed                | 0 - 15     | km/h  |
| Transport speed - reversing    | 0 - 15     | km/h  |
| Operating speed                | 3 - 30     | m/min |
| Paving height                  | -100 - 300 | mm    |
| Max. grain size                | 40         | mm    |
| Theoretical paving performance | 650        | t/h   |

## 5.7 Travel drive/traction unit

|                |  |
|----------------|--|
| Drive          | Hydrostatic drive with pump and motor, continuously adjustable |
| Transmission   | Planetary gear   |
| Speeds         | (see above)  |
| Drive wheels   | 2 x 445/80R25 (pneumatic tyres)                                |
| Steered wheels | 4 x 560 / 300 - 390 (elastic solid rubber tyres)               |
| Brakes         | Travel drive brake, hydraulic parking brake                    |

## 5.8 Engine F2500W

|  |   |
|--|---|
| Make/type                                  | Cummins QSB 6.7-C173                    |
| Version                                    | 6-cylinder diesel engine (water-cooled) |
| Performance                                | 110 kW / 150 hp (at 2200 rpm)           |
| Pollutant emissions in co-ordination with: | EU 3A / Tier 3                          |
| Fuel consumption, full load                | 19.9 l/h                                |
| Fuel consumption, 2/3 load                 | 29.8 l/h                                |
| Fuel tank capacity                         | (See chapter F)                         |

## 5.9 Hydraulic system

|                                  |  |
|----------------------------------|--|
| Pressure generation              | Hydraulic pumps via distribution gear (directly flanged to the engine)   |
| Pressure distribution            | Hydraulic circuits for: <ul style="list-style-type: none"> <li>- Travel drive</li> <li>- Auger</li> <li>- Conveyor</li> <li>- Tamper / vibration</li> <li>- Operating functions</li> <li>- Fan</li> <li>- Separate hydraulic circuits for options</li> </ul> |
| Hydraulic oil reservoir - volume | (See chapter F)  |



**5.10 Material compartment (hopper)**

|                               |   |
|-------------------------------|---|
| Volume                        | Approx. 6.0 m <sup>3</sup> = approx. 13.0 t |
| Minimum inlet height, centre  | 575 mm                                      |
| Minimum inlet height, outside | 585 mm                                      |
| Hopper width, outside, open   | 3,460 mm                                    |

**5.11 Material transfer**

|                             |   |
|-----------------------------|---|
| Type                        | Dual conveyor belt                                |
| Width                       | 2 x 580mm   |
| Conveyors                   | Left and right auger separately controllable      |
| Drive                       | Hydrostatic, 0 / 1                                |
| Conveying volume controller | Fully automatic via configurable switching points |

**5.12 Material distribution**

|                             |   |
|-----------------------------|---|
| Auger diameter              | 380 mm  |
| Drive                       | Hydrostatic central drive, continuously controllable independently of the conveyor<br>Auger halves can be switched to opposite directions<br>Reversible direction of rotation |
| Conveying volume controller | Fully automatic via configurable switching points   |
| Auger height adjustment     | - Mechanically  |
| Auger extension             | With extension parts (see auger extension chart)  |

### 5.13 Screed lifting device

|                   |   |
|-------------------|---|
| Special functions | <p>At standstill:</p> <ul style="list-style-type: none"> <li>- Screed stop</li> <li>- Screed stop with pretensioning (max. pressure 50 bar)</li> </ul> <p>During paving:</p> <ul style="list-style-type: none"> <li>- Screed charging</li> <li>- Screed relieving (max. pressure 50 bar)</li> </ul> |
| Levelling system  | <p>Mechanical grade control</p> <p>Optional systems with and without</p> <p>Slope control system</p>  |


### 5.14 Electrical system


|                  |                 |
|------------------|-----------------|
| On-board voltage | 24 V            |
| Batteries        | 2 x 12 V, 88 Ah |

### 5.15 Permissible temperature ranges



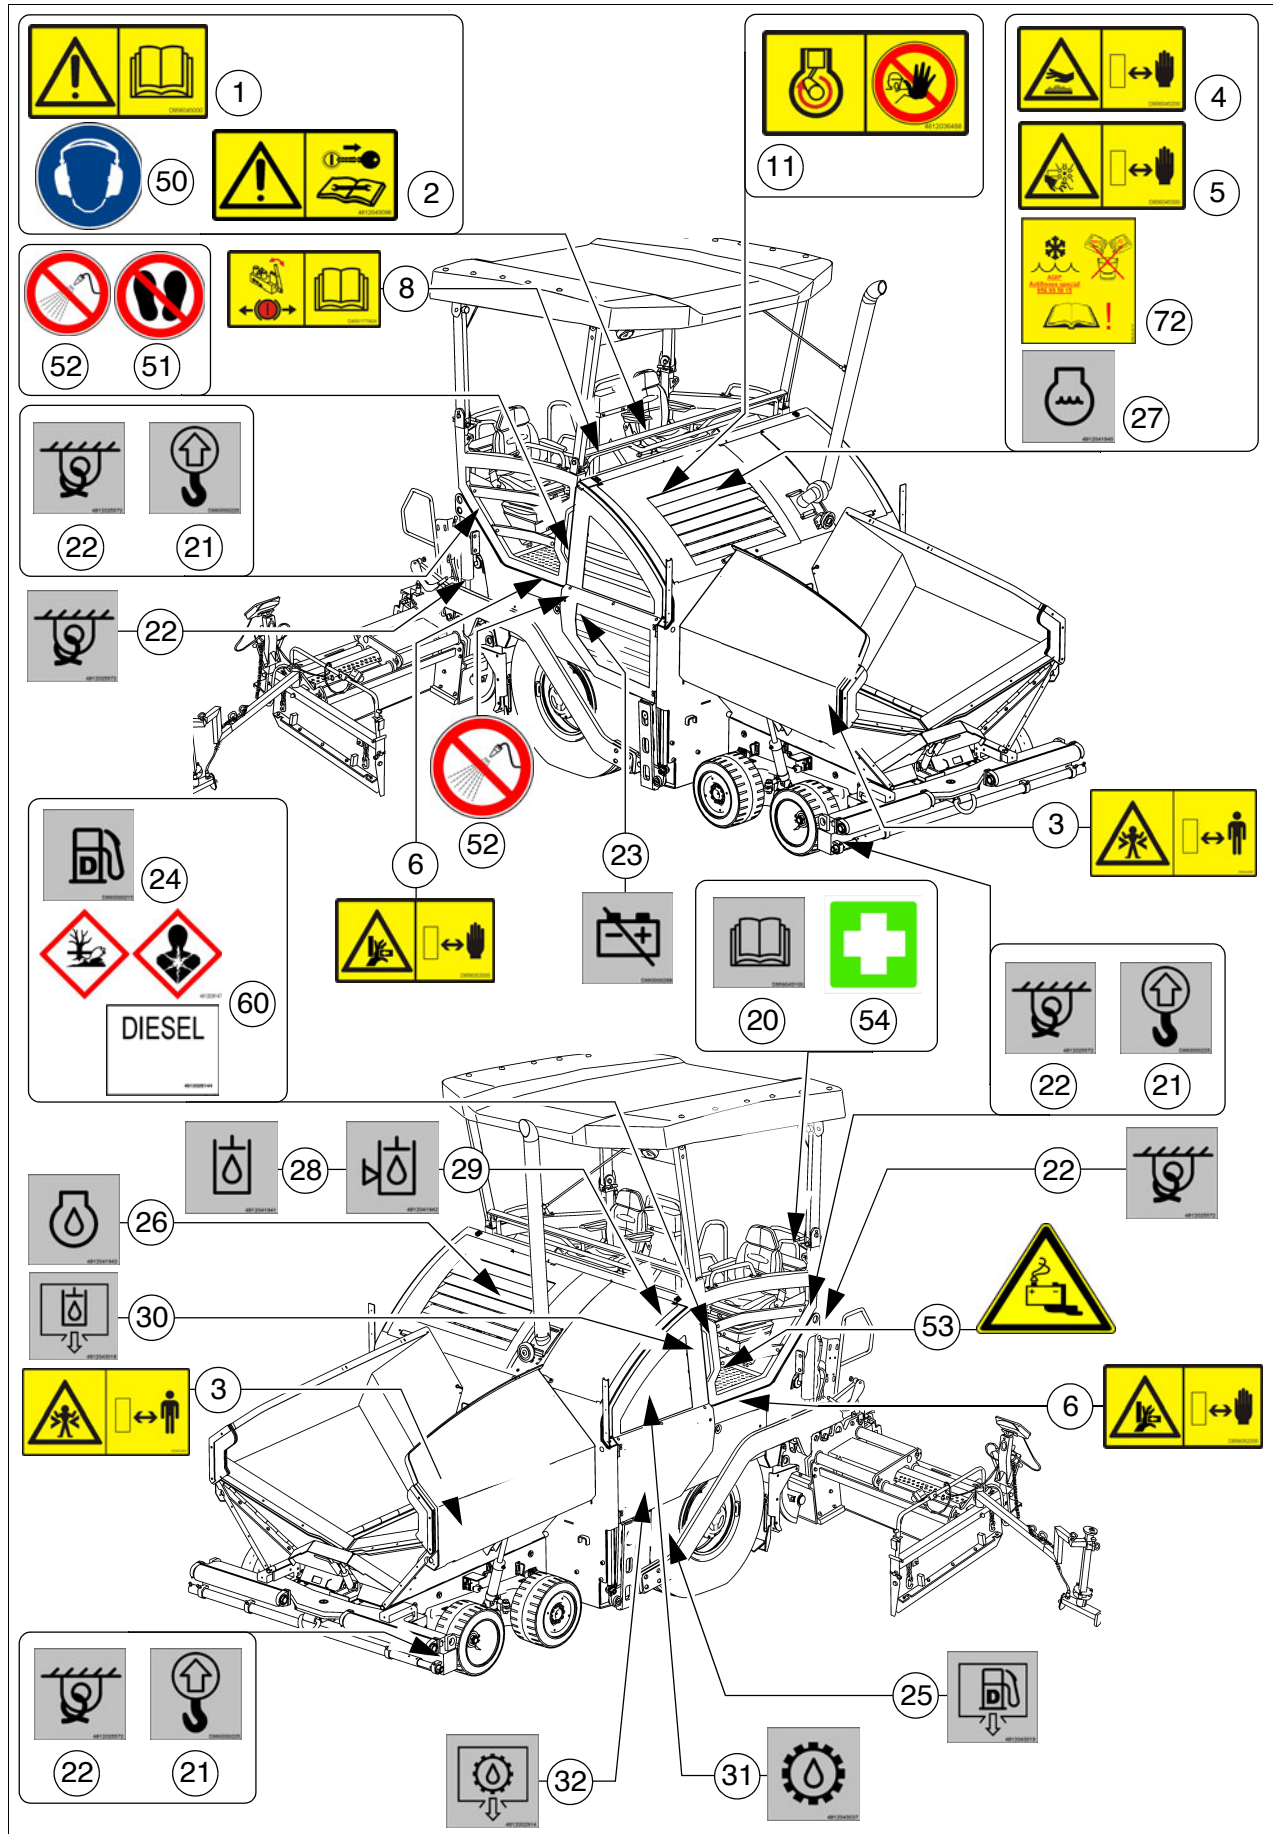


|           |              |
|-----------|--------------|
| Operation | -5°C / +45°C |
| Storage   | -5°C / +45°C |




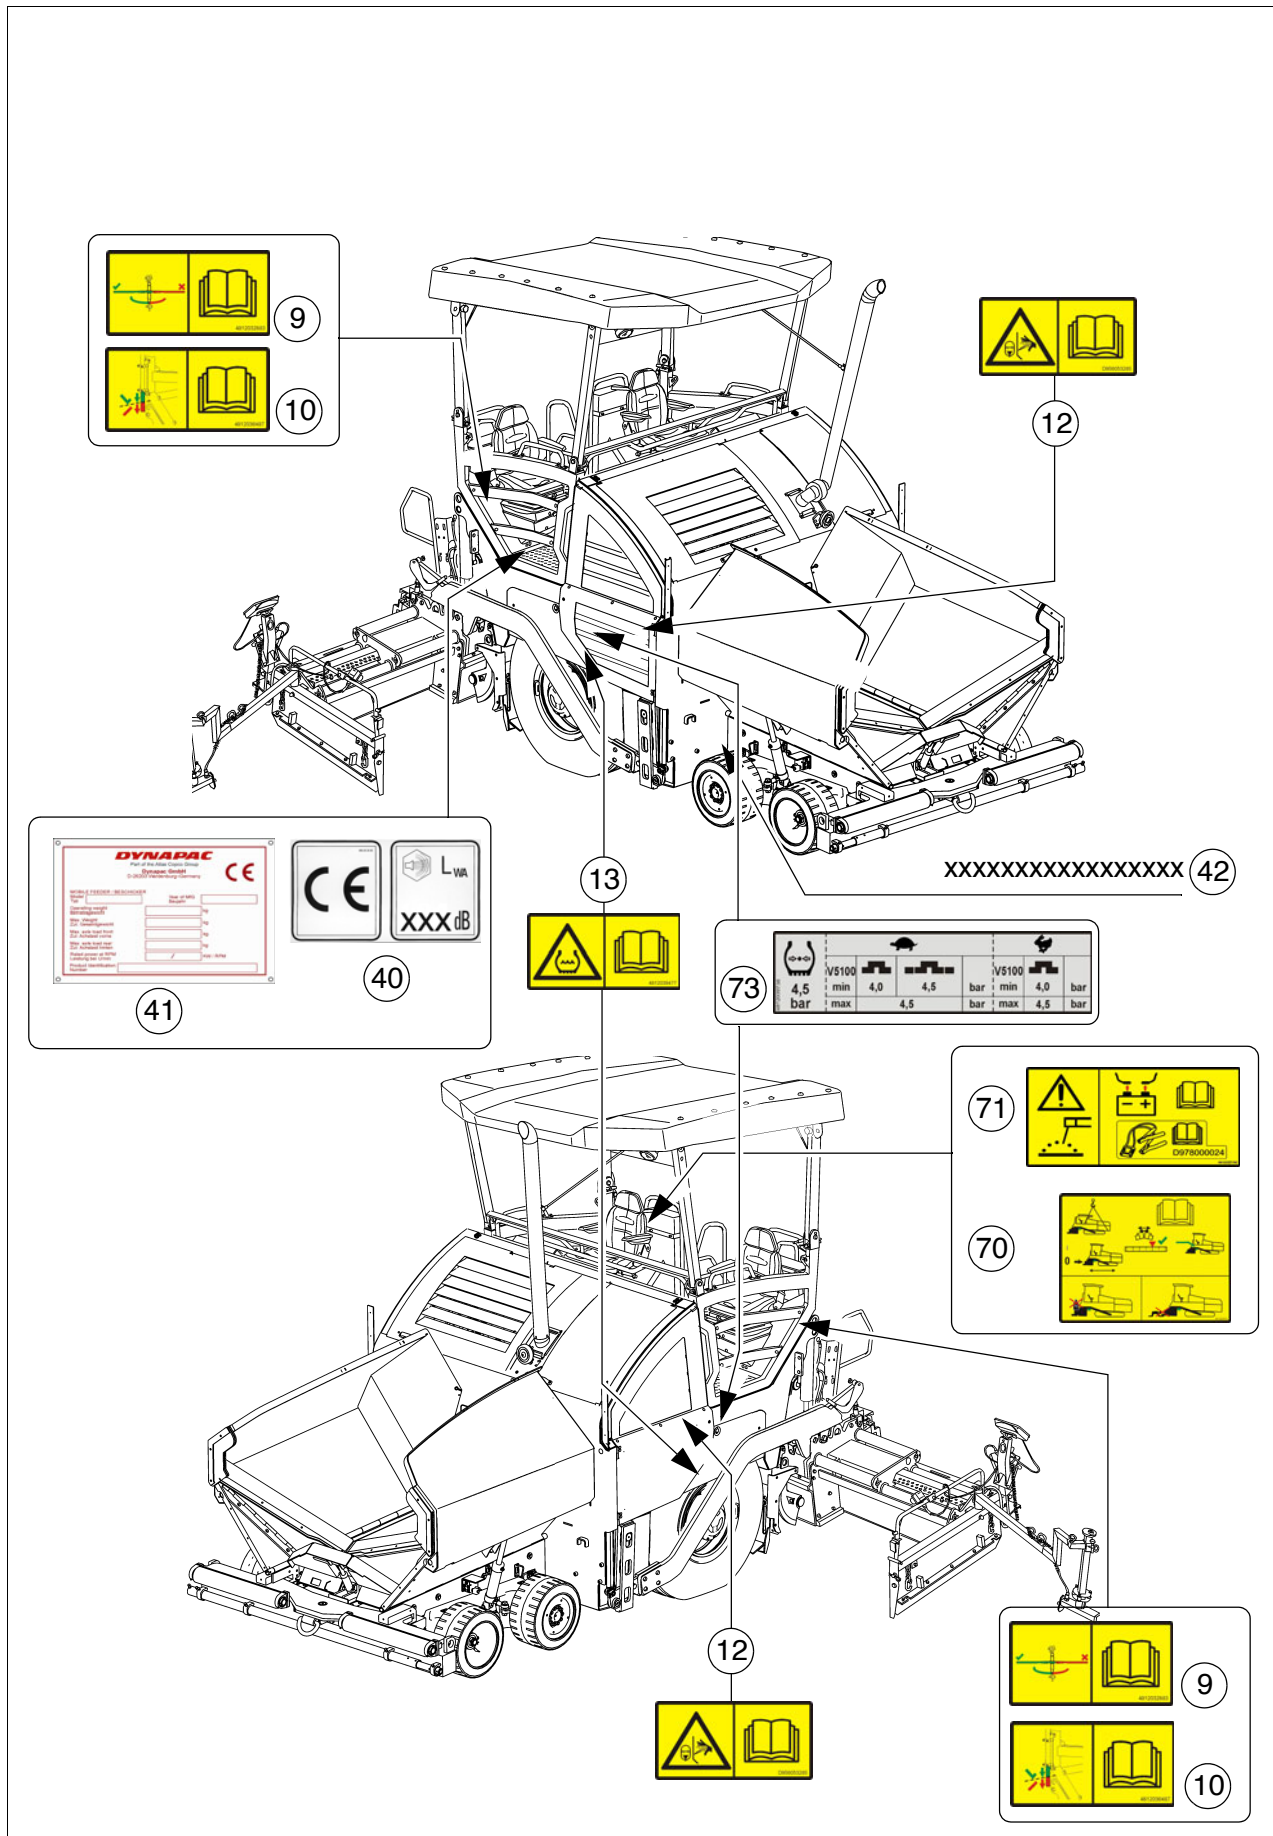

## 6 Location of instruction labels and identification plates





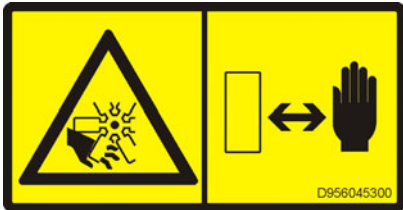

## 6.1 Warning signs

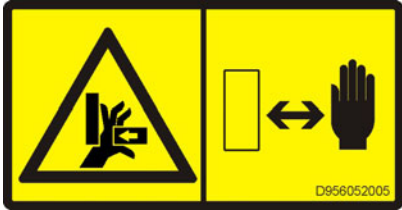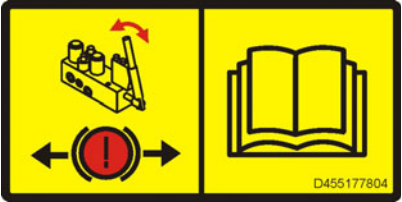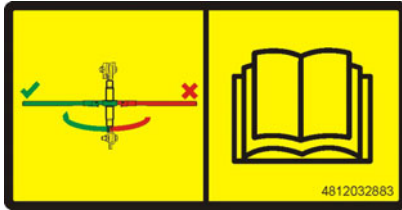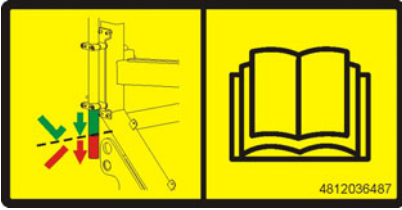
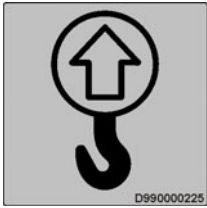



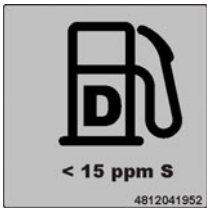
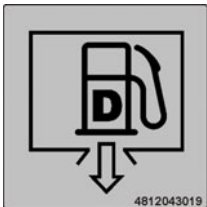
| No. | Pictogram   | Meaning  |
|-----|---|--|
| 1   |    | <ul style="list-style-type: none"> <li>- <b>Warning - Operating instructions!</b><br/>Danger due to improper operation. The machine personnel must have read and understood the safety, operating and maintenance instructions for the machine before the machine is put into operation! Failure to comply with the operating and warning instructions can cause severe or fatal injuries. Always replace lost operating instructions immediately! It is your personal responsibility to take due care and attention!</li> </ul> |
| 2   |   | <ul style="list-style-type: none"> <li>- <b>Warning - Switch off the engine and remove the ignition key before performing any maintenance and repair work!</b><br/>If the drive engine is left running or functions are switched on, this can cause severe or fatal injuries!<br/>Switch the engine off and remove the ignition key.</li> </ul>  |
| 3   |  | <ul style="list-style-type: none"> <li>- <b>Warning - Danger of crushing!</b><br/>Crushing points can cause severe or fatal injuries!<br/>Maintain a safe distance from the danger area!</li> </ul>  |
| 4   |  | <ul style="list-style-type: none"> <li>- <b>Warning - Hot surface - Danger of burning!</b><br/>Hot surfaces can cause severe injuries!<br/>Keep your hands at a safe distance from the danger area! Use protective clothing or protective equipment!</li> </ul>  |
| 5   |  | <ul style="list-style-type: none"> <li>- <b>Warning - Danger from fan!</b><br/>Rotating fans can cause severe injuries from cutting or severing fingers and hands.<br/>Keep your hands at a safe distance from the danger area!</li> </ul>   |

| No. | Pictogram   | Meaning  |
|-----|---|--|
| 6   |    | <ul style="list-style-type: none"> <li>- <b>Warning - Danger of crushing fingers and hands with moving, accessible machine parts!</b><br/>Crushing points can cause severe injuries with the loss of parts of the fingers or hand.<br/>Keep your hands at a safe distance from the danger area!</li> </ul> |
| 8   |    | <ul style="list-style-type: none"> <li>- <b>Caution - Danger from incorrect towing!</b><br/>Movements of the machine can cause severe or fatal injuries.<br/>The traction system brakes must be released before towing.<br/>Always observe the operating instructions!</li> </ul>                          |
| 9   |   | <ul style="list-style-type: none"> <li>- <b>Caution - Possible collision of parts!</b><br/>The ratchet lever must always be swivelled in.<br/>Always observe the operating instructions!</li> </ul>  |
| 10  |  | <ul style="list-style-type: none"> <li>- <b>Caution - Possible collision of parts!</b><br/>The Powermoon tripod must be mounted correctly.<br/>Always observe the operating instructions!</li> </ul>   |
| 11  |  | <ul style="list-style-type: none"> <li>- <b>Warning - Danger from running engine!</b><br/>If the drive engine is left running, this can cause severe or fatal injuries.<br/>Never open the engine hood while the engine is running!</li> </ul>   |








| No. | Pictogram   | Meaning   |
|-----|---|---|
| 12  |  | <ul style="list-style-type: none"><li>- <b>Warning - Hazard from hydraulic reservoir and from hydraulic oil under pressure!</b><br/>Escaping hydraulic oil under pressure can pierce the skin and enter into the body, causing severe or fatal injuries. Always observe the operating instructions!</li></ul> |
| 13  |  | <ul style="list-style-type: none"><li>- <b>Warning - Danger from tyres filled with water!</b><br/>Handling tyres filled with water incorrectly can cause severe to fatal injuries. Always observe the operating instructions!</li></ul>   |





## 6.2 Information signs


| No. | Pictogram   | Meaning  |
|-----|---|--|
| 20  | <br>D956045100   | - <b>Operating Instructions</b><br>Position of the storage compartment.                          |
| 21  | <br>D990000225   | - <b>Lifting point</b><br>Lifting the machine is only permitted at these lifting points!         |
| 22  | <br>4812025572  | - <b>Lashing point</b><br>Lashing the machine is only permitted at these points!                 |
| 23  | <br>D990000268 | - <b>Main battery switch</b><br>Position of the main battery switch.                             |
| 24  | <br>D990000215 | - <b>Diesel fuel</b><br>Position of the filling point.   |
| 24  | <br>4812041952 | - <b>Diesel fuel, sulphur level &lt; 15 ppm</b><br>Position of the filling point, specification. |
| 25  | <br>4812043019 | - <b>Fuel drainage point</b><br>Position of the drainage point.                                  |



| No. | Pictogram   | Meaning   |
|-----|---|---|
| 26  |    | - <b>Engine oil</b><br>Position of the filling and control point.     |
| 27  |    | - <b>Engine coolant</b><br>Position of the filling and control point. |
| 28  |   | - <b>Hydraulic oil</b><br>Position of the filling point.              |
| 29  |  | - <b>Hydraulic oil level</b><br>Position of the control point.        |
| 30  |  | - <b>Engine oil drainage point</b><br>Position of the drainage point. |
| 31  |  | - <b>Gearbox oil</b><br>Position of the filling and control point.    |
| 32  |  | - <b>Gear oil drainage point</b><br>Position of the drainage point.   |

| No. | Pictogram   | Meaning   |
|-----|---|---|
| 33  |  | - <b>Tamper speed adjuster</b><br>Position of the speed adjuster.     |
| 34  |  | - <b>Vibration, speed adjuster</b><br>Position of the speed adjuster. |


### 6.3 CE marking
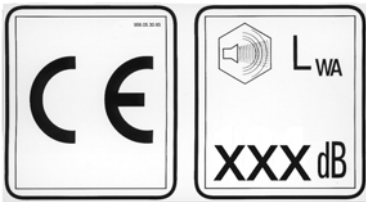
| No. | Pictogram   | Meaning                  |
|-----|---|--------------------------|
| 40  |  | - CE, sound output level |

## 6.4 Instructive symbols, prohibitive symbols, warning symbols

| No | Pictogram   | Meaning                                     |
|----|---|---|
| 50 |    | - Wear ear protection devices               |
| 51 |    | - Do not enter the area!                    |
| 52 |   | - Do not spray the area or part with water! |
| 53 |  | - Warning on dangers posed by batteries!    |
| 54 |  | - First aid kit                             |

## 6.5 Danger symbols
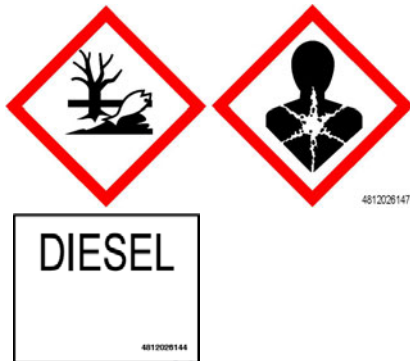
| No. | Pictogram   | Meaning | No.  |
|-----|---|---------|--|
| 60  |  |         | <p>- <b>XN: Danger to health!</b> This substance can damage your health when absorbed in the body!<br/>Substance irritating to skin, eyes and respiratory system; can cause inflammations.<br/>Avoid contact with the human body, also avoid inhaling the vapours and seek medical advice if feeling unwell.</p> <p>- <b>N: Environmentally hazardous substance!</b> May cause immediate or delayed danger to the eco-system when released into the environment.<br/>Do not release into the sewage system, ground or environment, depending on hazard potential. Comply with special disposal regulations!</p> <p>- Diesel fuel complies with EN590</p> |

## 6.6 Further warnings and operating instructions

| No. | Pictogram | Meaning  |
|-----|-----------|--|
| 70  |           | <ul style="list-style-type: none"> <li>- <b>Warning - Hazard from unsupported screed!</b><br/>If the screed sags, this can cause severe or fatal injuries! Insert screed lock only at crown adjustment "zero". Screed lock only for transportation! Do not enter or work under screed only secured with screed lock for transportation!</li> </ul> |
| 71  |           | <ul style="list-style-type: none"> <li>- <b>Caution - Danger of high voltage in vehicle electrical system!</b><br/>Disconnect batteries and electronics during welding work or when charging the batteries, or use a service watchdog D978000024 in accordance with the corresponding instruction manual.</li> </ul>                               |
| 72  |           | <ul style="list-style-type: none"> <li>- <b>Important!</b><br/>Only use approved radiator anti-freeze. Never mix different grades of radiator anti-freeze. Always observe the operating instructions!</li> </ul>   |

| No.   | Pictogram  | Meaning |     |     |     |     |     |     |  |   |     |     |     |     |     |     |  |   |
|-------|--|---------|-----|-----|-----|-----|-----|-----|--|---|-----|-----|-----|-----|-----|-----|--|---|
| 73    | <table border="1"><tr><td rowspan="2">V5100</td><td>min</td><td>4,0</td><td>4,5</td><td rowspan="2">bar</td></tr><tr><td>max</td><td colspan="2">4,5</td></tr></table>   | V5100   | min | 4,0 | 4,5 | bar | max | 4,5 |  | - Overview "Tyre pressure / working width / speed preselection" |     |     |     |     |     |     |  |   |
| V5100 | min  |         | 4,0 | 4,5 | bar |     |     |     |  |   |     |     |     |     |     |     |  |   |
|       | max  | 4,5     |     |     |     |     |     |     |  |   |     |     |     |     |     |     |  |   |
| 73    | <table border="1"><tr><td rowspan="2">V5100</td><td>min</td><td>3,0</td><td>4,5</td><td rowspan="2">bar</td></tr><tr><td>max</td><td colspan="2">7,0</td></tr><tr><td rowspan="2">V6000</td><td>min</td><td>3,0</td><td>4,5</td><td rowspan="2">bar</td></tr><tr><td>max</td><td colspan="2">7,0</td></tr></table> | V5100   | min | 3,0 | 4,5 | bar | max | 7,0 |  | V6000   | min | 3,0 | 4,5 | bar | max | 7,0 |  | - Overview "Tyre pressure / working width / speed preselection" |
| V5100 | min  |         | 3,0 | 4,5 | bar |     |     |     |  |   |     |     |     |     |     |     |  |   |
|       | max  | 7,0     |     |     |     |     |     |     |  |   |     |     |     |     |     |     |  |   |
| V6000 | min  | 3,0     | 4,5 | bar |     |     |     |     |  |   |     |     |     |     |     |     |  |   |
|       | max  | 7,0     |     |     |     |     |     |     |  |   |     |     |     |     |     |     |  |   |

## 6.7 Identification label for the paver finisher (41)

| Item | Designation  |
|------|--|
| 1    | Paver finisher type                                |
| 2    | Year of construction                               |
| 3    | Operating weight, incl. all extension parts, in kg |
| 4    | Maximum permitted total weight in kg               |
| 5    | Max. permissible load on the front axle, in kg     |
| 6    | Max. permissible load on the rear axle, in kg      |
| 7    | Rated performance in kW                            |
| 8    | Product identification number (PIN)                |
| 9    | Serial number (empty)                              |



The punched vehicle identification number (VIN) on the paver finisher must match the product identification number (8).

## 7 EN standards

### 7.1 Continuous sound pressure F2500W, Cummins QSB 6.7-C173



The operator always must use ear protection. The emission value at the ear of the driver varies depending on the materials used for paving and may even rise above 85 dB(A). If no ear protection devices are used, hearing can be impaired. The sound emission level of the paver finisher was measured under free-field conditions according to EN 500-6:2006 and ISO 4872.

**Sound pressure level at the operator's position  
(at head height):**

$L_{AF} = 84.9$  dB(A)

**Sound capacity level:**

$L_{WA} = 109.4$  dB(A)

**Sound pressure level at the vehicle**

| Measuring point                            | 2    | 4    | 6    | 8    | 10   | 12   |
|--|------|------|------|------|------|------|
| Sound pressure level $L_{AFeq}$<br>(dB(A)) | 77.1 | 74.6 | 76.1 | 78.3 | 73.8 | 77.0 |


### 7.2 Operating conditions during measurement

The diesel engine was running at maximum speed. The screed was lowered into working position. Tamper and vibration unit were operated at min. 50%, while the augers were operated at a minimum of 40% and the conveyors were operated at a minimum of 10% of their maximum speed.

### 7.3 Measuring point configuration

Hemispherical measuring surface with a radius of 16 m. The machine was at the centre. The measuring points had been assigned the following coordinates:

|              | Measuring points 2, 4, 6, 8 |       |     | Measuring points 10, 12 |                |                |
|--------------|-----------------------------|-------|-----|-------------------------|----------------|----------------|
| Co-ordinates | X                           | Y     | Z   | X                       | Y              | Z              |
|              | ±11.2                       | ±11.2 | 1.5 | - 4.32<br>+4.32         | +10.4<br>-10.4 | 11.36<br>11.36 |

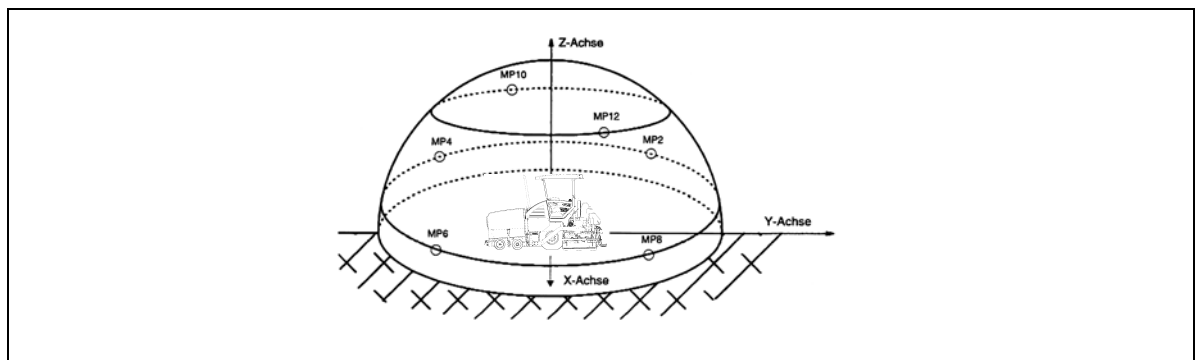



#### **7.4 Vibration acting on the entire body**

When the machine is used properly, the weighted effective acceleration values at the driver's seat of  $a_w = 0.5 \text{ m/s}^2$  according to DIN EN 1032 are not exceeded.

#### **7.5 Vibrations acting on hands and arms**

When the machine is used properly, the weighted effective acceleration values at the driver's seat of  $a_w = 2.5 \text{ m/s}^2$  according to DIN EN ISO 20643 are not exceeded.

#### **7.6 Electromagnetic compatibility (EMC)**

The following limit values are observed according to the stipulations of the EMC directive 2004/108 CE:

- Interference emission according to DIN EN 13309:
  - < 35 dB  $\mu\text{V/m}$  for frequencies of 30 MHz - 1 GHz measured at a distance of 10 m
  - < 45 dB  $\mu\text{V/m}$  for frequencies of 30 MHz - 1 GHz measured at a distance of 10 m
- Interference immunity against electrostatic discharge according to DIN EN 13309 CE (ESD):
  - The paver finisher did not show any discernible reactions to contact discharges of  $\pm 4 \text{ KV}$  and to air discharges of  $\pm 4 \text{ KV}$ .
  - The modifications according to test criterion „A“ are being met, i.e. the paver finisher continues to work without malfunction during the test.



Electrical or electronic components and their arrangement may only be modified after written approval by the manufacturer has been obtained.



## C 12 Transportation

### 1 Safety regulations for transportation



Accidents can happen when the paver finisher and the screed are not properly prepared for transportation or when transportation is carried out improperly!

Reduce both the paver finisher and the screed to their basic widths. Remove all protruding parts (such as the automatic levelling system, auger limit switches, aprons, etc.). When transporting under a special permit, secure these parts!

Close the hopper lids and engage the hopper transport safeguards. Lift the screed and engage the screed transport safeguards. Convert the protective roof and engage the latch.

Pack all parts that are not permanently fixed to the paver finisher and the screed into the appropriate boxes and into the hopper.  
Close all coverings and check that they are securely seated.

In Germany, gas bottles must not be transported on the paver finisher or on the screed.

Disconnect the gas bottles from the gas system and protect them with their caps. Use a separate vehicle to transport them.

When loading via ramps, there is a risk that the machine will slip, tilt or overturn. Drive carefully! Keep people away from the danger area!

#### **Additional stipulations for transportation on public roads:**



Comply with the local road traffic regulations!



On the screed, remove the floorboards and place them in the hopper.  
Hinged side shields must be swivelled behind the screed and secured correctly.

The operator must be in the possession of a valid permit for vehicles of this type.

The driver's seat must be positioned on the side facing on-coming traffic.  
The driving lights must be properly adjusted.

Only accessories and extension parts may be transported in the hopper, no material or gas bottles!

If necessary, the operator must be assisted by a second person when driving on public roads – especially at road crossings and junctions.

## 2 Transportation on low-bed trailers



Reduce the paver finisher and the screed to their basic widths; also remove any attached side plates.

The maximum approach angle is indicated in the section entitled "Technical data"!



Check the fill level of the operating substances so that these do not escape when driving on an incline.



Attachment and loading equipment must meet the conditions of the applicable accident prevention regulations!



The weight of the paver finisher must be taken into consideration when selecting the attachment and loading equipment!

### 2.1 Preparations

- Prepare the paver finisher for transportation (see chapter D).
- Remove all overlaying or loose parts from finisher and screed (see also Operating instructions for the screed). Store these parts in a safe place.







Move the auger to the uppermost position to avoid collisions!



When the screed is operated with the optional gas heating system:





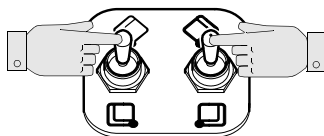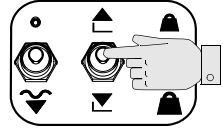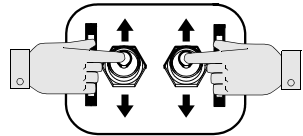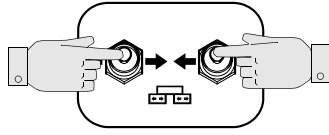


- Remove the gas bottles for the screed heating system:
  - Close the main shut-off valves and the bottle valves.
  - Turn off the valves on the bottles and remove the gas bottles from the screed.
- Transport the gas bottles on a second vehicle; heed all applicable safety regulations.




| Operation  | Travelling direction  |
|--|---|
| - Close the hopper lids.   |    |
| - Engage both hopper transport safeguards.   |   |
| - Lift the screed.   |    |
| - Engage screed transport safeguards.  |   |
| - Extend levelling cylinders completely.   |  |
| - Retract the screed parts until the screed matches the basic width of the paver finisher. |  |




### 3 Securing the load

-  The following instructions for securing the load on the low-bed trailer consist merely in examples of how to secure the load correctly.
-  Always comply with the local regulations for securing the load and for correct use of load securing equipment.
-  Normal driving mode also includes emergency braking, evasive manoeuvres and poor road surfaces.
-  Use should be made of the different methods available for securing loads (positive fit, force connection, diagonal lashing, etc.) in accordance with the specific transport vehicle.
-  The low-bed trailer must have the necessary number of lashing points with lashing strength of LC 4,000 daN.
-  The total height and total width must not exceed the maximum permissible dimensions.
-  The ends of lashing chains and straps must be secured to prevent them working loose and falling down unintentionally!

#### 3.1 Prepare the low-bed trailer

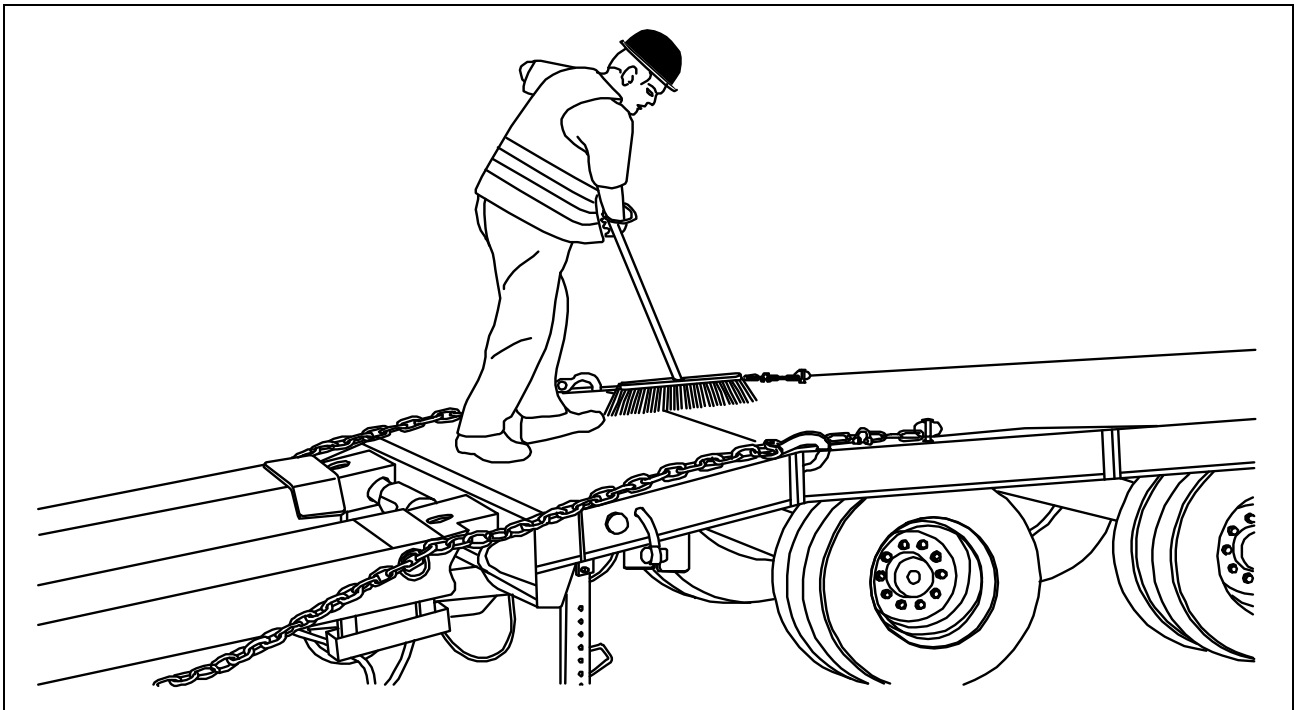


-  The floor of the loading space must always be undamaged, free of oil and mud, dry (residual moisture is permitted without accumulations of water) and swept clean!

### 3.2 Driving onto the low-bed trailer



Make sure that there are no persons in the danger area during loading.

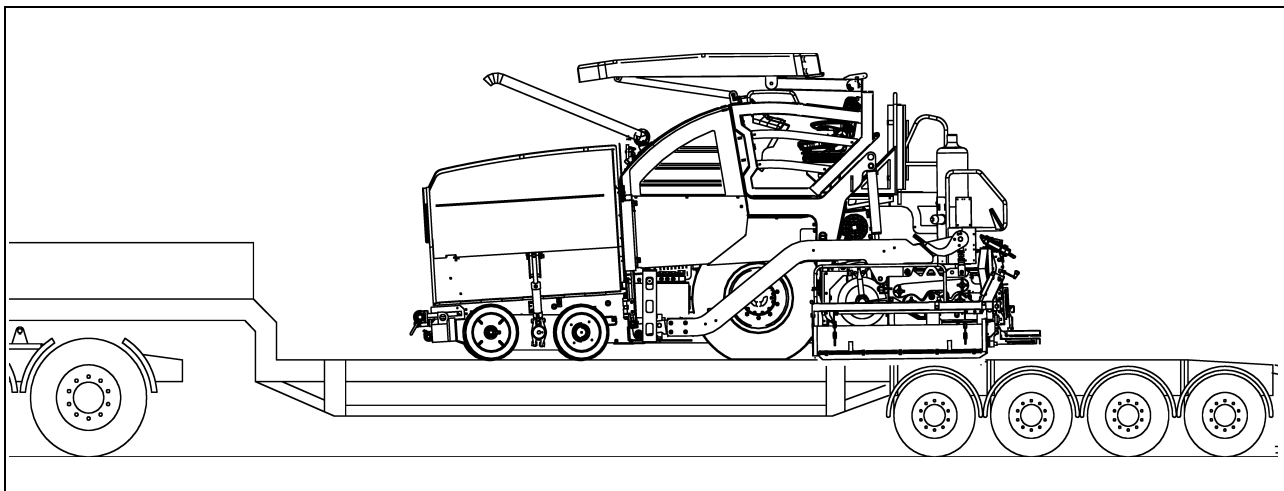

- Use the work gear and low engine speeds to drive onto the low-bed trailer.

### 3.3 Lashing equipment







Use the load securing equipment, lashing straps and chains belonging to the vehicle. Additional shackles, eyebolts, edge safeguards and non-slip mats may be needed, depending on the type of load securing equipment.



Always comply with the stated values for permitted lashing force and load rating!



Always tighten the lashing chains and straps handtight (100-150daN).

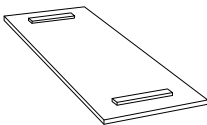
|  |   |
|--|---|
|  |   |
| - Lashing chain<br>permissible lashing force LC 4,000 daN  |     |
| - Lashing straps<br>permissible lashing force LC 2,500 daN |   |
| - Shackles<br>Load rating 4,000 daN                        |  |
| - Eyebolts<br>Load rating 2,500 daN                        |  |
| - Edge safeguards for lashing straps                       |  |
| - Non-slip mats  |  |



Lashing equipment must be checked by the user for any signs of damage before use. On detecting any signs of damage that impact on safety, the lashing equipment must be withdrawn from any further use.



### 3.4 Loading

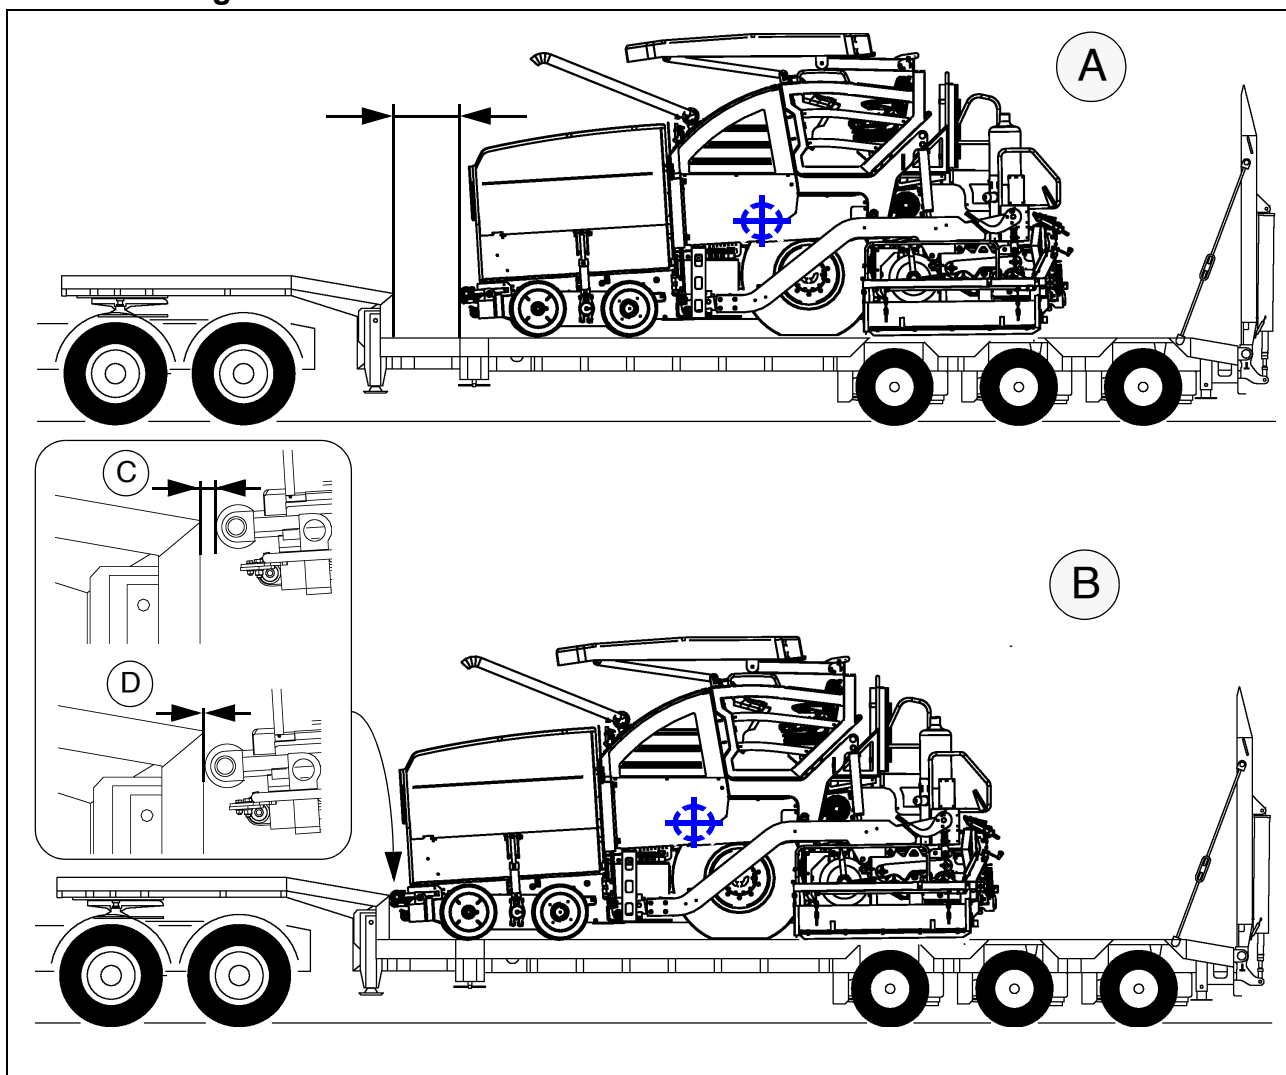

**Pay attention to load distribution during loading!**


In some vehicles, the kingpin load is too low so that the load has to be positioned further to the back of the vehicle (A).

Always heed the details regarding load distribution stipulated for the vehicle together with the centre of gravity of the paver finisher.

Comply with the following if the paver finisher has to be placed in the front section of the low-bed trailer (B) for load distribution reasons or on account of the length of the paver finisher:

- The paver finisher must stand freely if the push rollers would only touch the gooseneck half way up (C).
- There must be a positive fit between the paver finisher push rollers and the low-bed trailer if the push rollers are in full contact with the low-bed trailer (D).

### 3.5 Preparing the machine

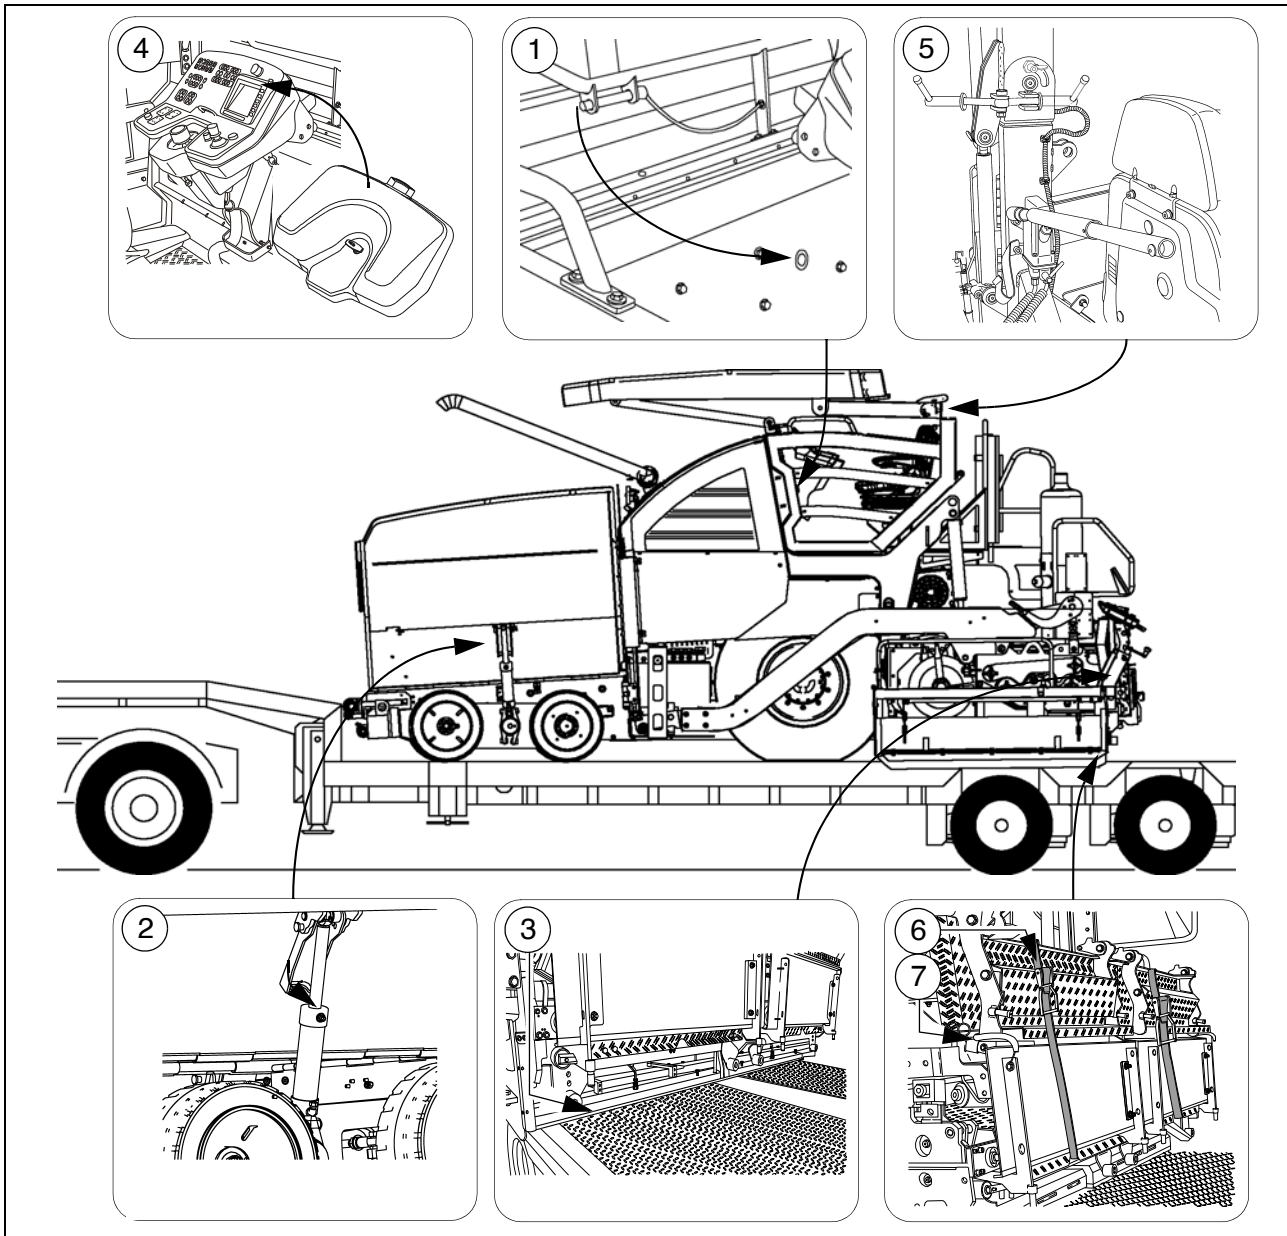


After the machine has been positioned on the low-bed trailer, the following preparations must be carried out:

- For movable platform: Set the retaining bolt properly (1).
- Close the hopper and set the hopper transport safeguards (2) on both sides.
- Position the non-slip mats under the screed across the whole width of the vehicle (3) and lower the screed.
- Switch off the paver finisher.
- Attach and secure the protective hood (4) to protect the operating panel.
- Lower the roof and set the retainers (5) properly on both sides.
  - For machines without roof: remove the exhaust extension pipe after it has cooled down.
- Fold up the walkway plates of the screed and fasten on both sides using lashing straps (6) and any possibly existing hook springs (7).

## 4 Securing the load

### 4.1 Securing at the front and at the sides


#### Step 1: fasten lashing chains at the front

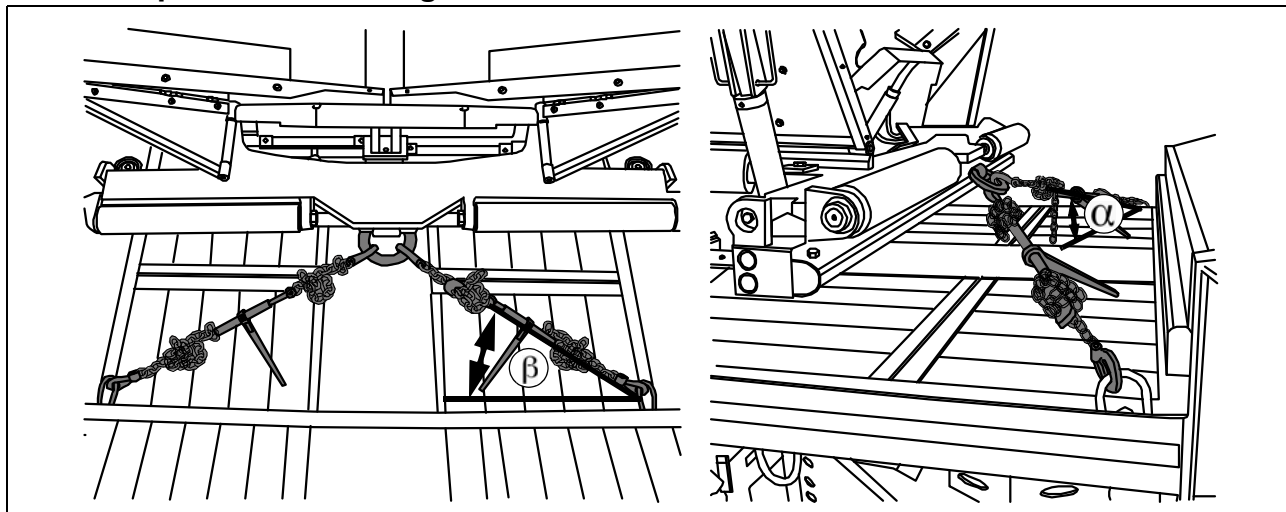

⚠ Diagonal lashing secures the paver finisher at the front using the lashing points on the paver finisher and on the low-load trailer. Fasten the lashing chains as shown.


⚠ The lashing angles should be "β" between 6°-55° and "α" between 20°-65°!


#### Step 2: fasten lashing chains at the side

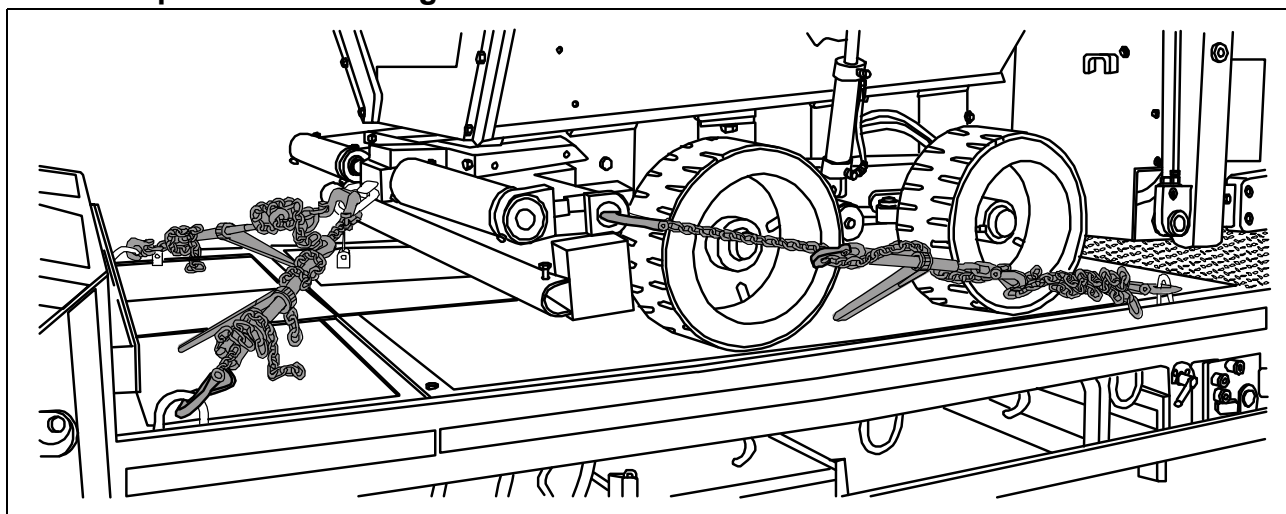



⚠ Diagonal lashing secures the wheeled paver at the front and sides using the lashing points on the paver finisher and on the low-load trailer. Fasten the lashing chains as shown.

## 4.2 Securing at the rear - screed with side board

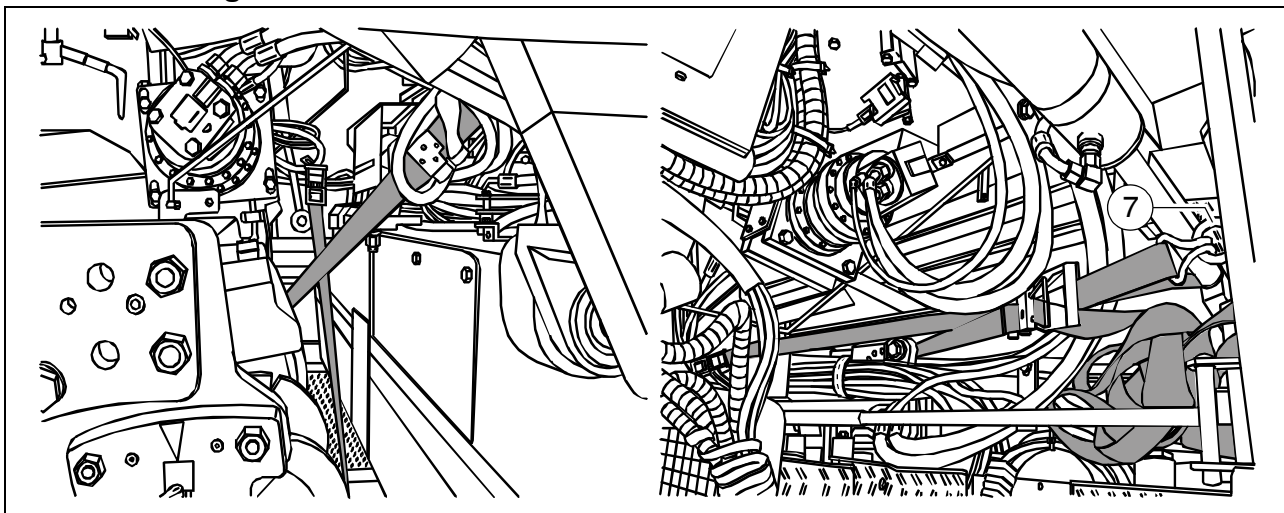


-  Diagonal lashing secures the paver finisher at the rear, at right angles to the direction of travel using the lashing points on the paver finisher (eyebolts) and on the low-load trailer. Fasten the lashing straps as shown. Screw the supplied eyebolts (7) first of all in the holes provided in the arms.

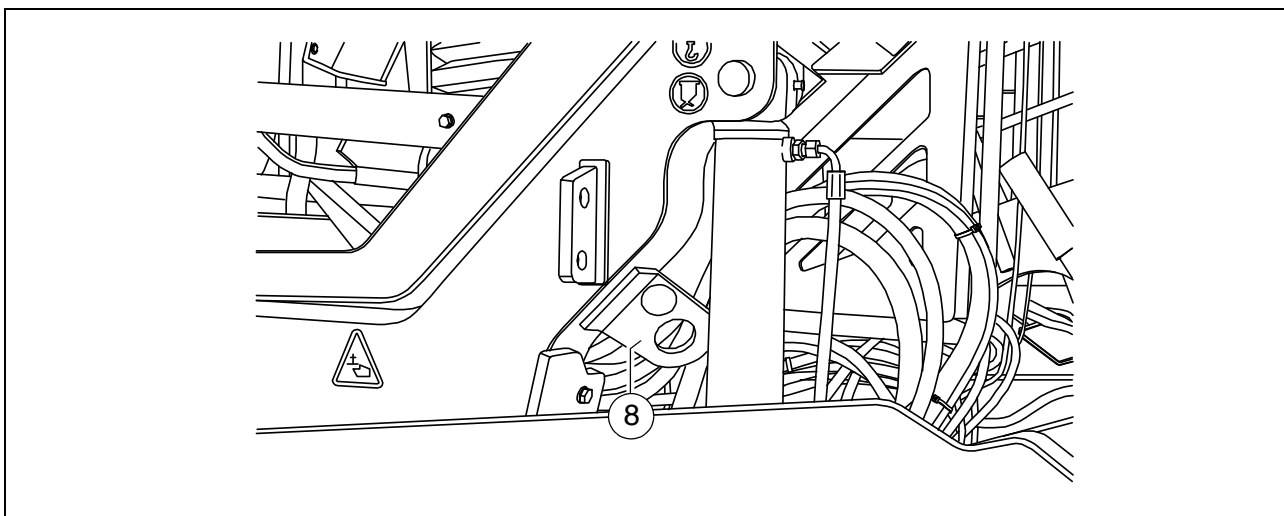


-  Alternatively, additional lashing points (8) are provided on the chassis at the rear. These should be used preferably for transports without screed / without arms.


### 4.3 Securing at the rear - screed without side board


#### Step 1: fasten lashing straps

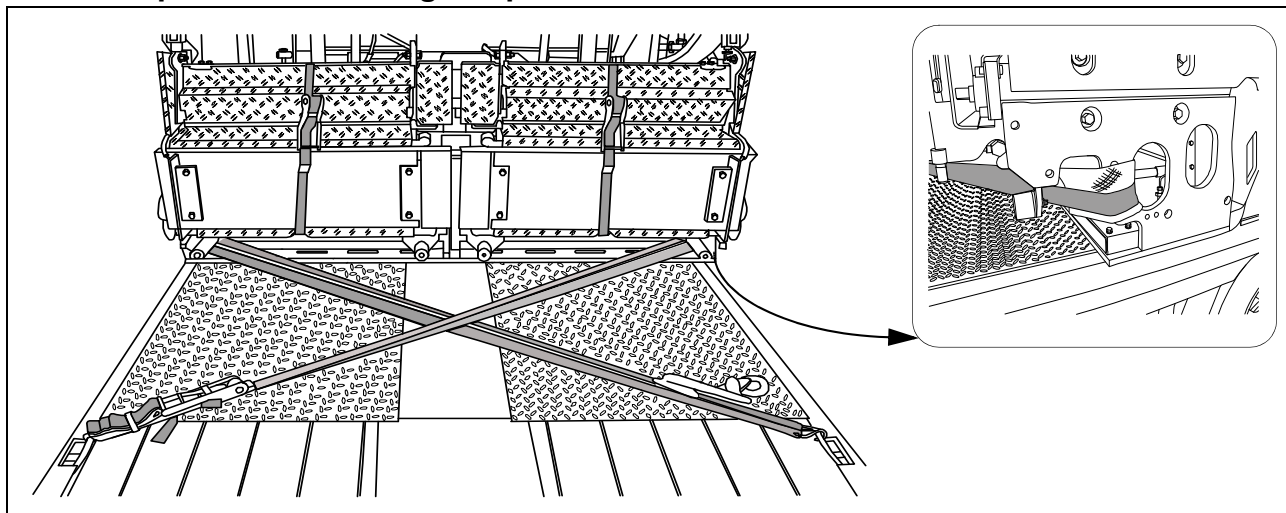

-  Diagonal lashing secures the paver finisher at the rear using the lashing points on the paver finisher and on the low-load trailer. Fasten the lashing straps as shown.

#### Step 2: fasten lashing chains

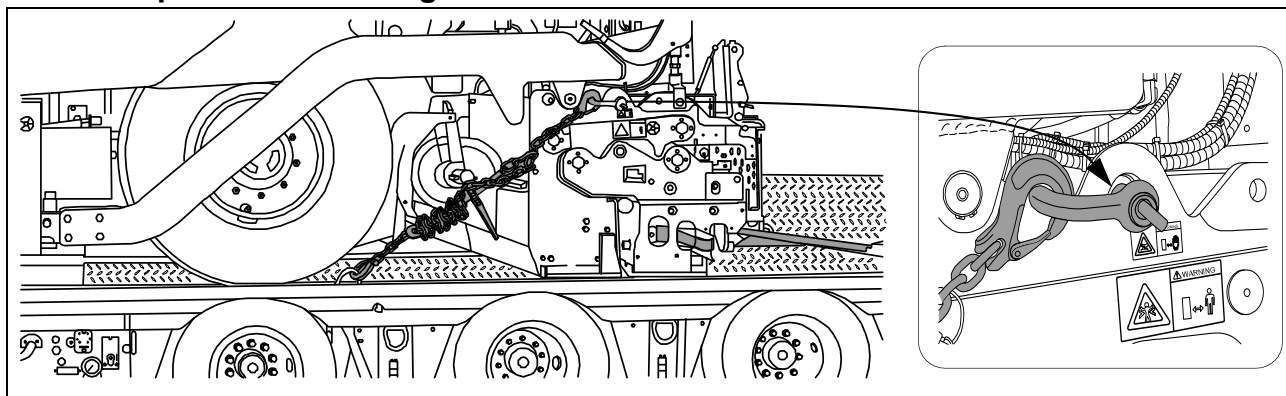

-  Diagonal lashing secures the paver finisher at the rear using the lashing points on the paver finisher and on the low-load trailer. Fasten the lashing chains as shown.

#### **4.4 After transportation**

- Remove the attachment devices.
- Raise the protective roof (○):



See section entitled "Protective roof"

For a paver finisher without roof:

- Mount the exhaust extension pipe.
- Lift the screed to the transportation position.
- Start the engine and drive from the trailer at a low engine/traction speed.
- Park the paver finisher in a secure spot, lower the screed and switch off the engine.
- Remove the key and/or cover the operating panel with the protective hood and secure it.




## 5 Protective roof (○)

The protective roof can be raised and lowered with a manual hydraulic pump.



The exhaust pipe is lowered or raised together with the roof.

- Remove the lower section of the pump lever (1) from the storage compartment, and connect to the upper section using a pipe (2).
- Lower the roof: The locks (3) on both sides of the roof must be released.#
- Raise the roof: The locks (4) on both sides of the roof must be released.
- Set the adjustment lever (5) to the "Raise" or "Lower" position.
- Raise the roof: The lever points forwards.
- Lower the roof: The lever points backwards.
- Operate the pump lever (1) until the roof has reached the upper or lower limit position.
  - Roof in uppermost position: Set the locks (3) on both sides of the roof.
  - Roof lowered: Set the lock (4) on both sides of the roof.

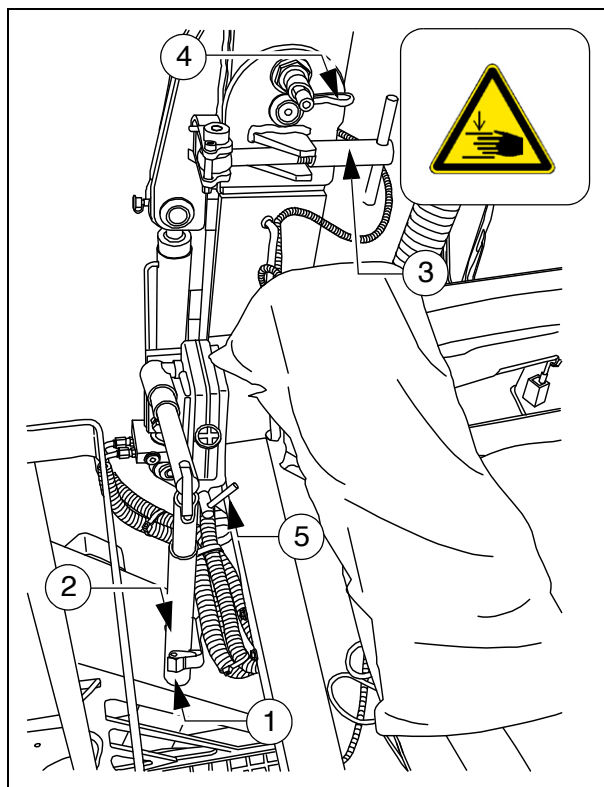

If the vehicle is equipped with a protective roof, the engine hood must be closed before lowering the roof!

## 6 Transportation



Reduce the paver finisher and the screed to their basic widths; also remove any attached side plates.

### 6.1 Preparations

- Prepare the paver finisher for transportation (see chapter D).
- Remove all overlaying or loose parts from finisher and screed (see also Operating instructions for the screed). Store these parts in a safe place.







When the screed is operated with the optional gas heating system:

- Remove the gas bottles for the screed heating system:
  - Close main shut-off valves and bottle valves.
  - Turn off the valves on the bottles and remove the gas bottles from the screed.
  - Transport the gas bottles on a second vehicle; heed all applicable safety regulations.









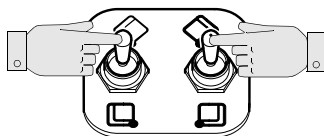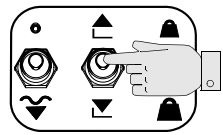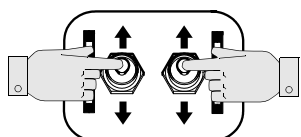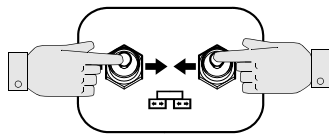

| Operation  | Travelling direction  |
|--|---|
| - Close the hopper lids.   |    |
| - Engage both hopper transport safeguards.   |   |
| - Lift the screed.   |    |
| - Engage screed transport safeguards.  |   |
| - Extend levelling cylinders completely.   |   |
| - Retract the screed parts until the screed matches the basic width of the paver finisher. |  |

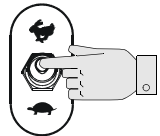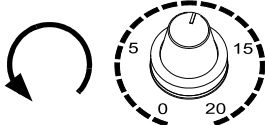

## 6.2 Driving mode
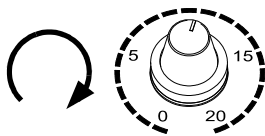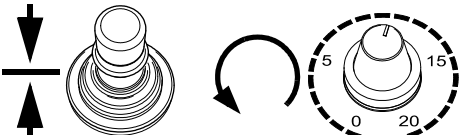
| Operation  | Travelling direction  |
|--|---|
| <ul style="list-style-type: none"> <li>- Set the fast/slow switch to "Hare" if necessary.</li> </ul>   |  |
| <ul style="list-style-type: none"> <li>- Turn the preselector to "zero".</li> </ul>  |  |
| <ul style="list-style-type: none"> <li>- Swivel the drive lever to maximum.<br/>  The machine already advances slightly on deflecting the drive lever!</li> </ul> |   |
| <ul style="list-style-type: none"> <li>- Adjust required vehicle speed with the preselector.</li> </ul>  |  |
| <ul style="list-style-type: none"> <li>- To stop the machine, swivel the drive lever to the middle setting and set the preselector to "zero".</li> </ul>   |  |




Press the emergency stop button when a dangerous situation arises!

## 7 Loading by crane

- ⚠ Use only lifting gear that can bear the load.  
(See chapter B for weights and dimensions).
- ⚠ Attachment and loading equipment must meet the conditions of the applicable accident prevention regulations!
- ⚠ The vehicle's centre of gravity is dependent on the screed which is mounted.

Example:

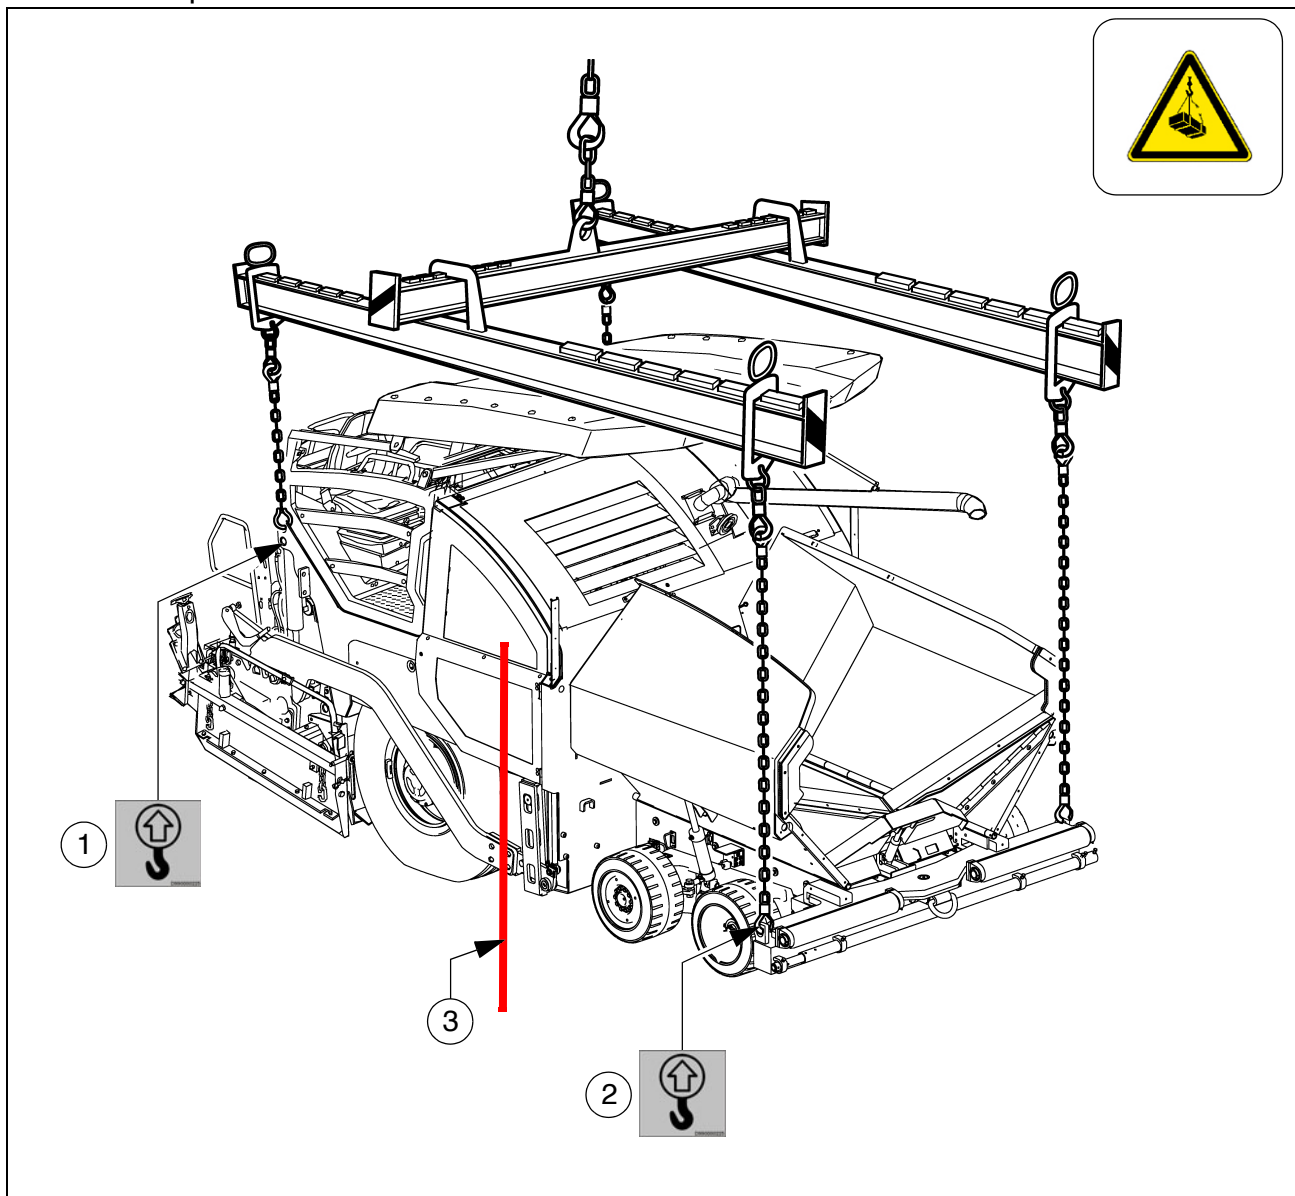



Four lifting eyes (1, 2) are provided for loading the vehicle with a crane.



Depending on the type of screed which is used, the paver finisher's centre of gravity, with the screed mounted, is located in the area of the front edge (3) of the rear wheel.

- Secure vehicle wherever it is parked up.
- Engage the transport safeguards.
- Remove any attachments and extension parts from the paver finisher and the screed until the basic width has been attained.
- Take off all protruding or loose parts and the gas bottles of the screed heater (see chapters E and D).
- Lower the protective roof (○):



See section entitled "Protective roof"

- Attach lifting gear to the four attachment points (1, 2).



The max. permissible attachment point load is 73.5 kN.



The permissible load applies in the vertical direction!



Make sure that the paver finisher remains in a horizontal position during transportation!

## 8 Towing



Heed all regulations and apply all safety measures applicable for towing heavy construction machines.



The towing vehicle must be capable of securing the paver finisher, even on slopes.

Use only approved tow bars!

If necessary, remove any attachments and accessories from the paver finisher and the screed until the basic width has been attained.



A hand pump (1) is located under the central control platform floor panel; it must be actuated to be able to tow the machine.

Pressure for releasing the traction system brakes is built up with the hand pump.


- Release lock nut (2), screw threaded dowel (3) into pump as far as possible and secure with lock nut.
- Actuate lever (4) of hand pump until sufficient pressure has been built up and traction system brakes have been released.



On completion of the towing process, restore the initial status.



Only release the traction system brakes when the machine is sufficiently secured against accidental rolling or is already properly connected to the towing vehicle.

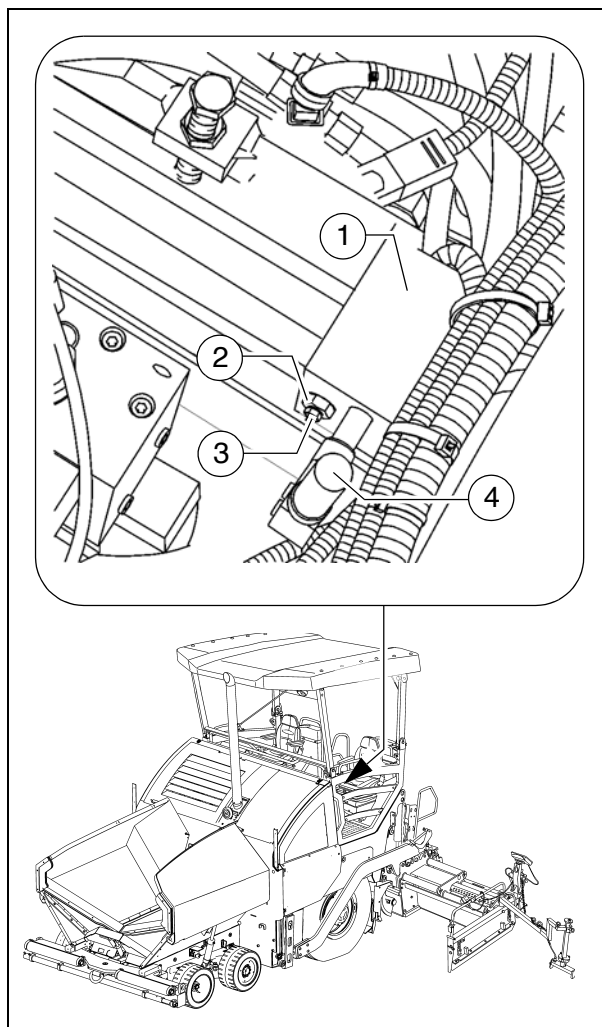



Two high-pressure cartridges (6) are located on both of the travel drive pumps (5).  
The following activities must be carried out to activate the towing function:

- Loosen lock nut (7) half a turn.
- Screw in the bolt (8) until increased resistance occurs. Then screw the bolt a further half turn into the high-pressure cartridge.
- Tighten the lock nut (7) to a torque of 22 Nm.



On completion of the towing process, restore the initial status.

- Attach the tow bar to the coupling (9) located in the bumper.



Now carefully and slowly tow the paver finisher out of the construction area.




Only ever tow the shortest distance to the means of transport or the next parking possibility.



The max. permissible towing speed is 10 m/min!  
In hazardous situations, a towing speed of 15 m/min is only permitted temporarily.



The max. permissible towing eye (9) load is: 200 kN


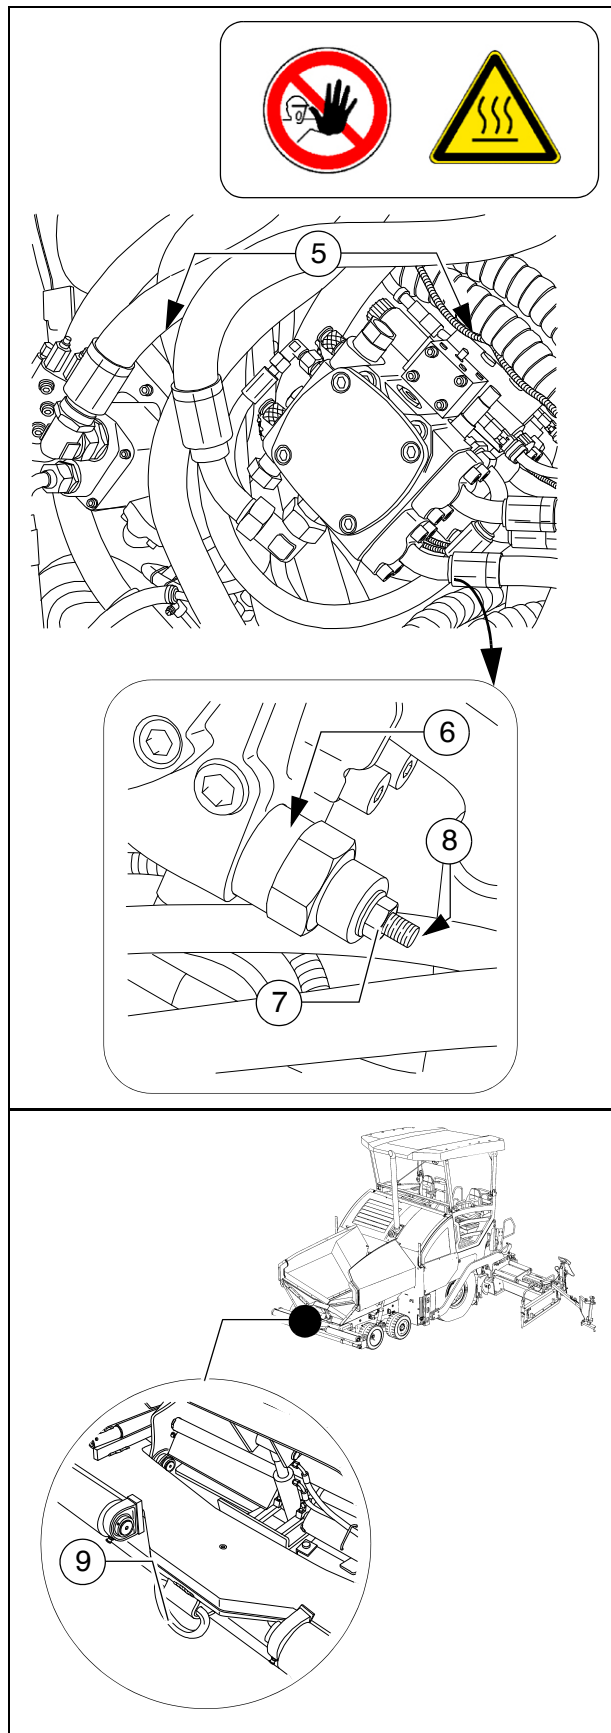


## 9 Safely parking the vehicle




When the paver finisher is parked at a location accessible to the public, it must be secured in such a way that unauthorised persons or playing children cannot damage the vehicle.

- Pull off the ignition key and the main switch (1) and take it with you – do not hide them somewhere on the machine.
- Protect the operating panel with the dust cover (2) and lock it.
- Store loose parts and accessories in a safe place.

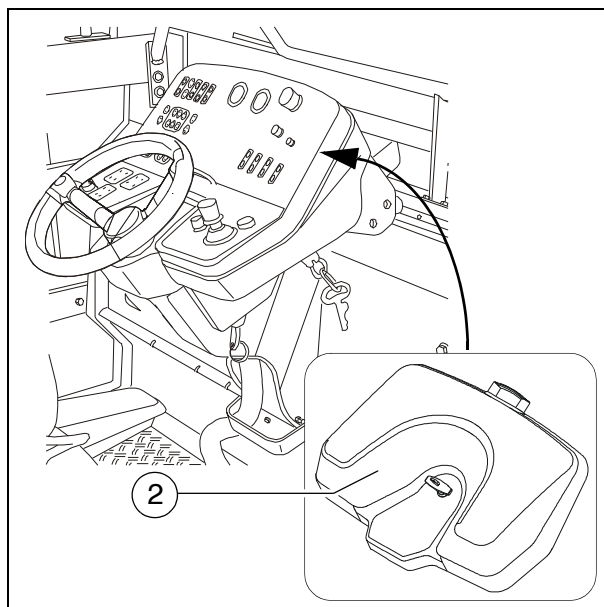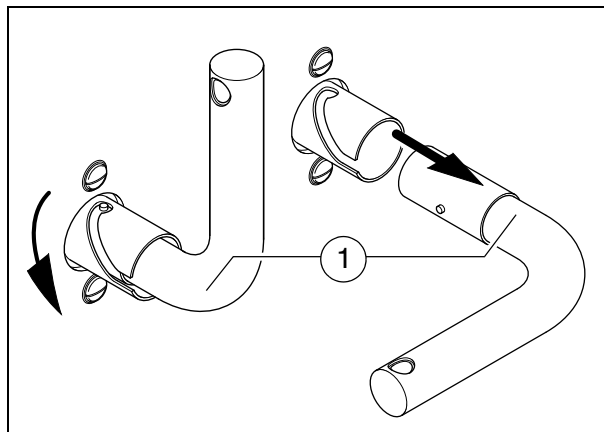

## 9.1 Lifting the vehicle with hydraulic lifts, lifting points

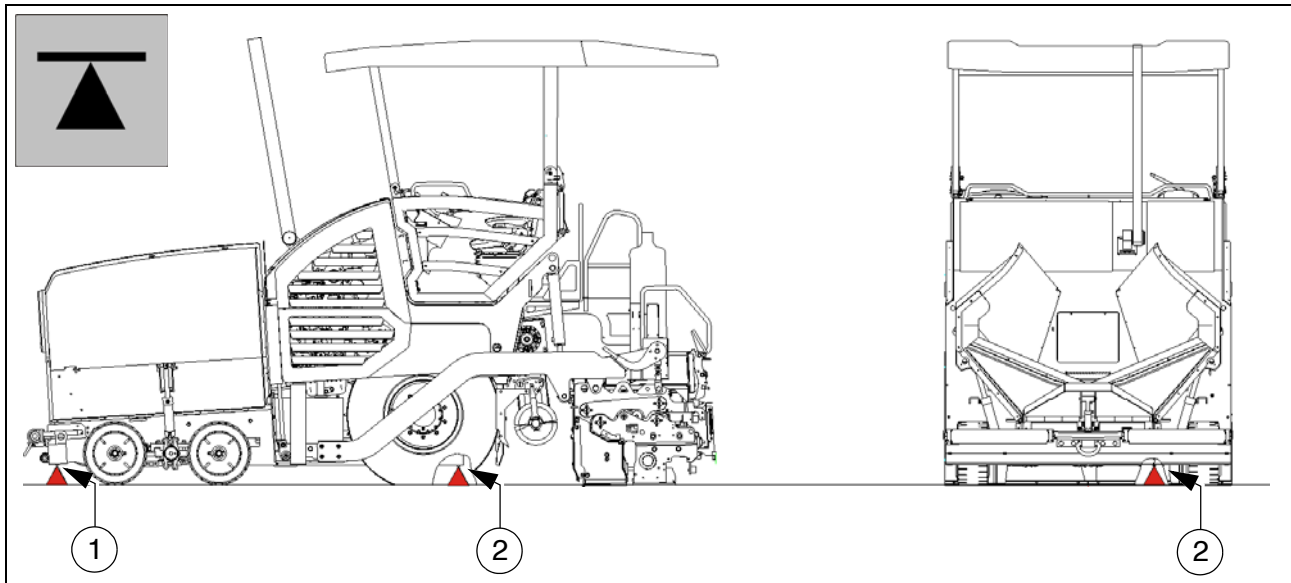

The hydraulic lift must be rated for at least 10t.



Always choose a horizontal surface with adequate load rating as installation surface for the hydraulic lift!



Make sure that the hydraulic lift is securely and correctly positioned!



The hydraulic lift is only intended to lift a load and not as a support. Work should only be performed to and under raised vehicles when they have been secured and correctly supported to prevent them from tilting over and rolling or sliding away.



Roller-type jacks must not be moved when under load.



Chocks or supporting beams positioned so that they cannot be shifted or tilted must be adequately dimensioned and be able to take the corresponding weight.



There must not be anyone on the vehicle while it is being lifted.



All raising and lowering work must be carried out uniformly with all hydraulic lifts in use! Always check and observe horizontal alignment of the load!



Always carry out raising and lowering work with several people together, with an additional person monitoring progress!



Only positions (1) and (2) in the left and right side of the vehicle are permissible lifting points!



# D 12      Operation

## 1      Safety regulations



Starting the engine, the travel drive, the conveyor, the auger, the screed or the lifting devices can cause injuries or even the death of persons.

Make sure before starting any of these devices that no-one is working at, in or beneath the paver finisher or within its danger area!

- Do not start the engine or do not actuate any controls when this is expressly forbidden!  
Unless otherwise specified, the controls may only be actuated when the engine is running!



Never crawl into the auger tunnel or step into the hopper or onto the conveyor. Danger to life and limb!


- Always make sure during work that no-one is endangered by the vehicle!
- Ensure that all protective covers and hoods are fitted and secured accordingly!
- Immediately rectify damage which has been ascertained! Operation must not be continued when the vehicle is defective!
- Do not let any persons ride on the paver finisher or the screed!
- Remove obstacles from the road and the work area!
- Always try to choose a driver's position that is opposite to the flowing traffic! Lock the operating panel and the driver's seat.
- Maintain sufficient safety clearance from overhanging objects, other vehicles and points of danger!
- Be careful when travelling on rough terrain to keep the paver finisher from slipping, tipping or turning over.



Always be the master over the vehicle; never try to use it beyond its capacities!

## 2 Controls

### 2.1 Operating panel

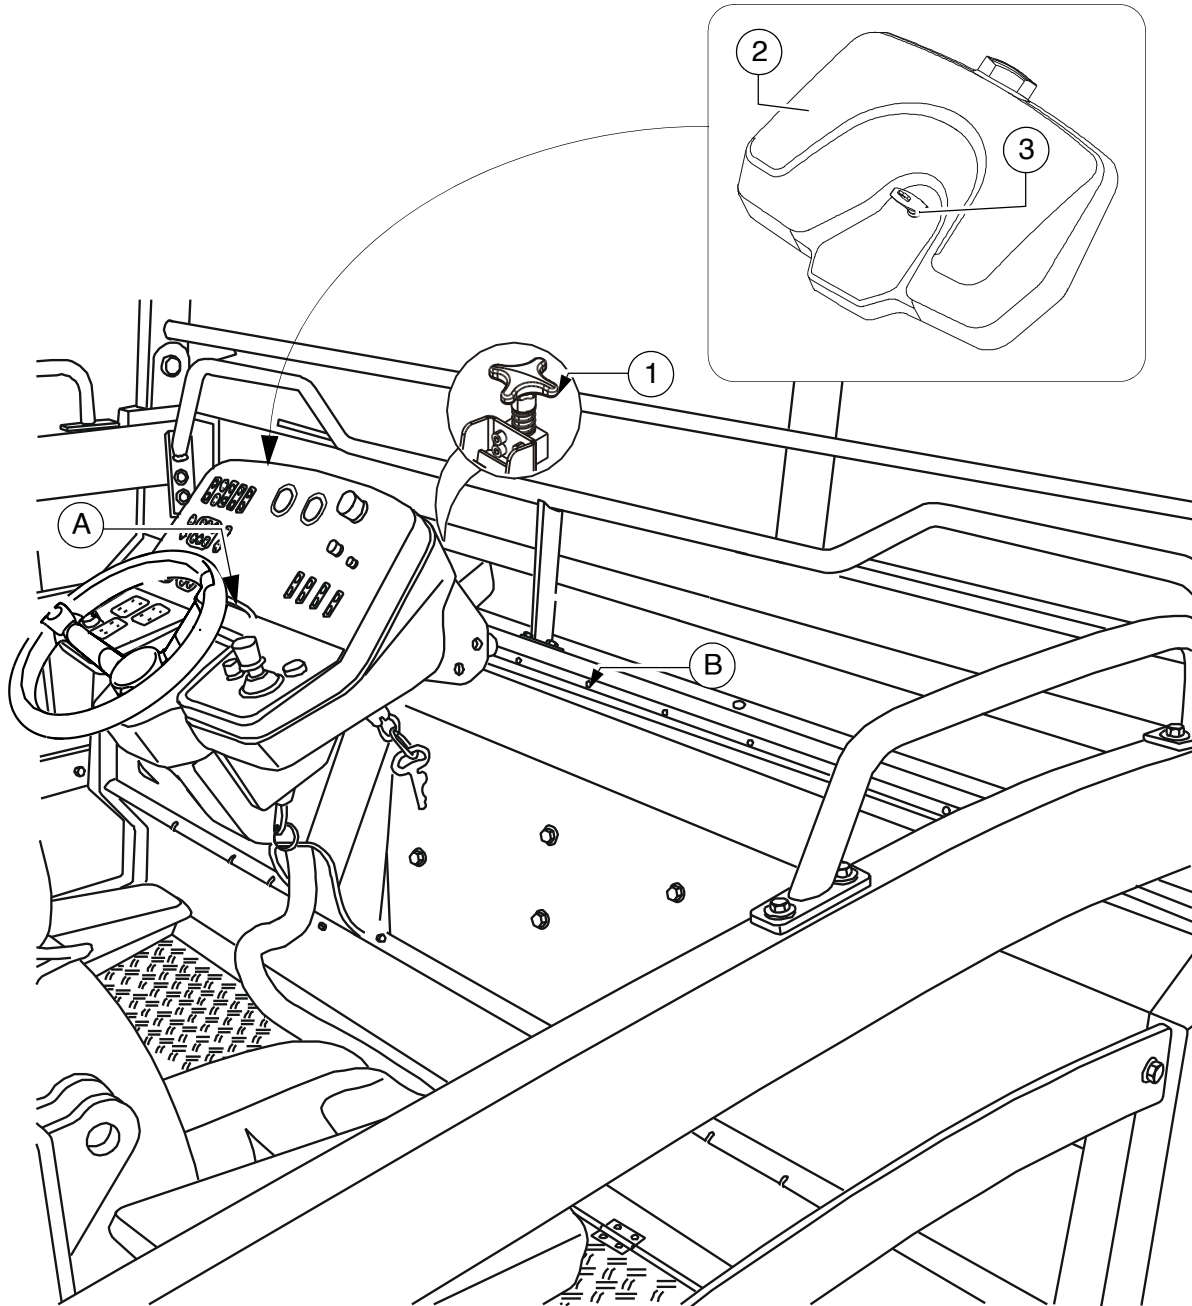








## General notes on adherence to CE regulations


All detent switch functions which may pose a risk on starting the diesel engine (auger and conveyor conveying function) are set to the STOP function in the case of EMERGENCY STOP or restarting the control system. If settings are changed when the diesel engine is stopped ("AUTO" or "MANUAL"), these are reset to "STOP" on starting the diesel engine.



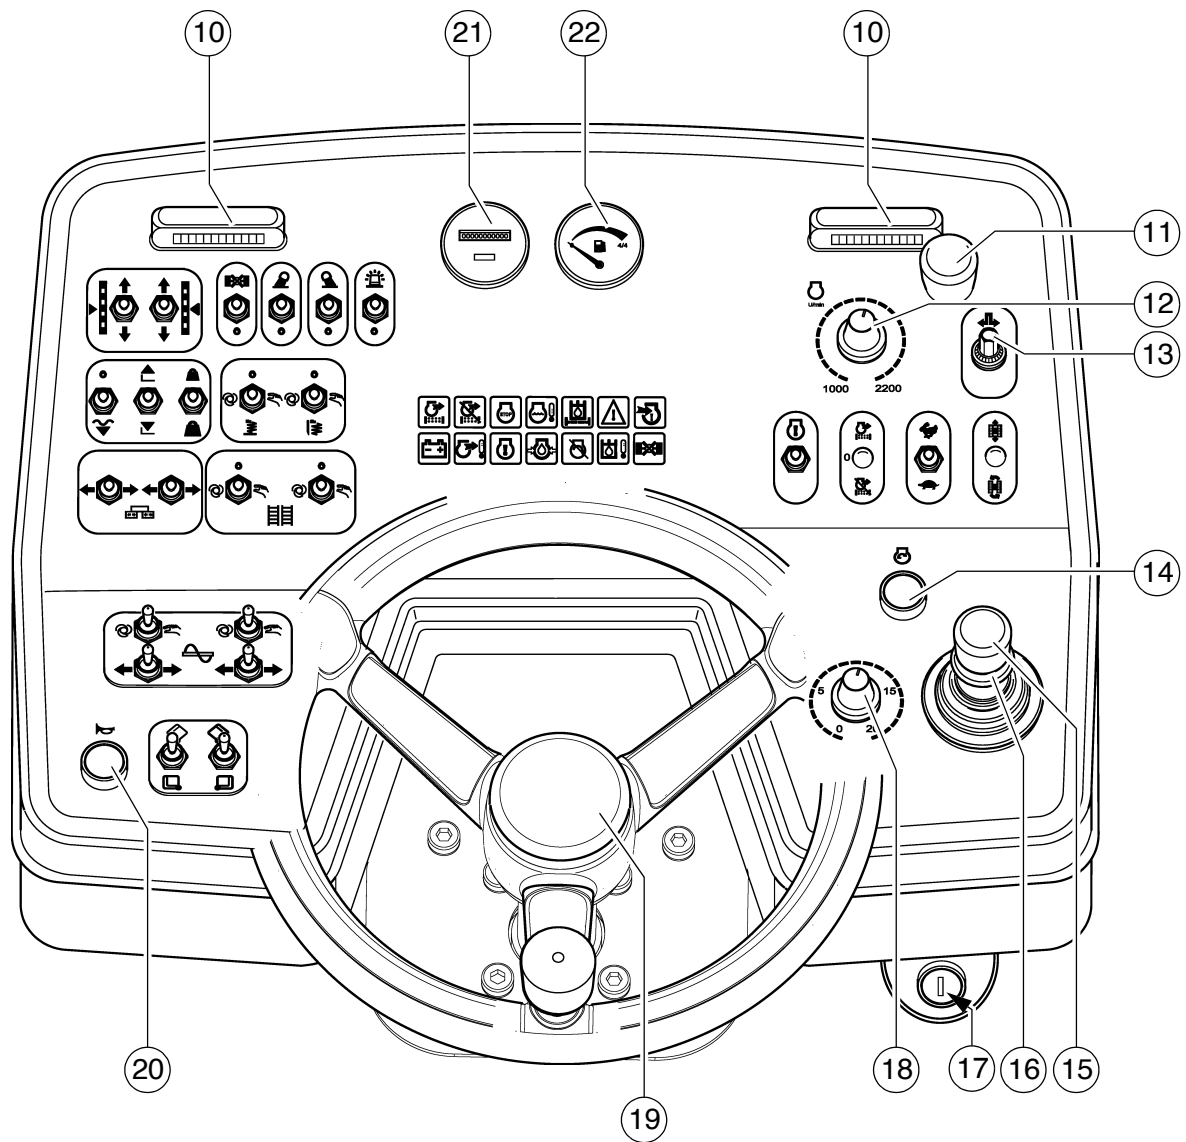

The "Turning on the spot" function is reset to "Straight-ahead travel".


| Item | Designation                       | Brief description  |
|------|-----------------------------------|--|
| 1    | Latch<br>Operating panel<br>shift | <p>The operating panel can be shifted to several positions on the left- and right-hand sides of the vehicle.</p> <ul style="list-style-type: none"> <li>- Release the panel latch (1) and slide the panel console to the desired position using the handle (A).</li> <li>- Insert panel latch (1) into one of the detent positions (B).</li> </ul> <p> Make sure it is latched properly!</p> <p> Only adjust the operating position whilst the vehicle is stationary!</p> |
| 2    | Vandalism protection facility     | On completion of work, secure the operating panel with the vandalism protection facility.  |
| 3    | Lock                              | <p>To lock the vandalism protection facility.</p> <ul style="list-style-type: none"> <li>- Turn the handle to the locking position and lock.</li> </ul>  |

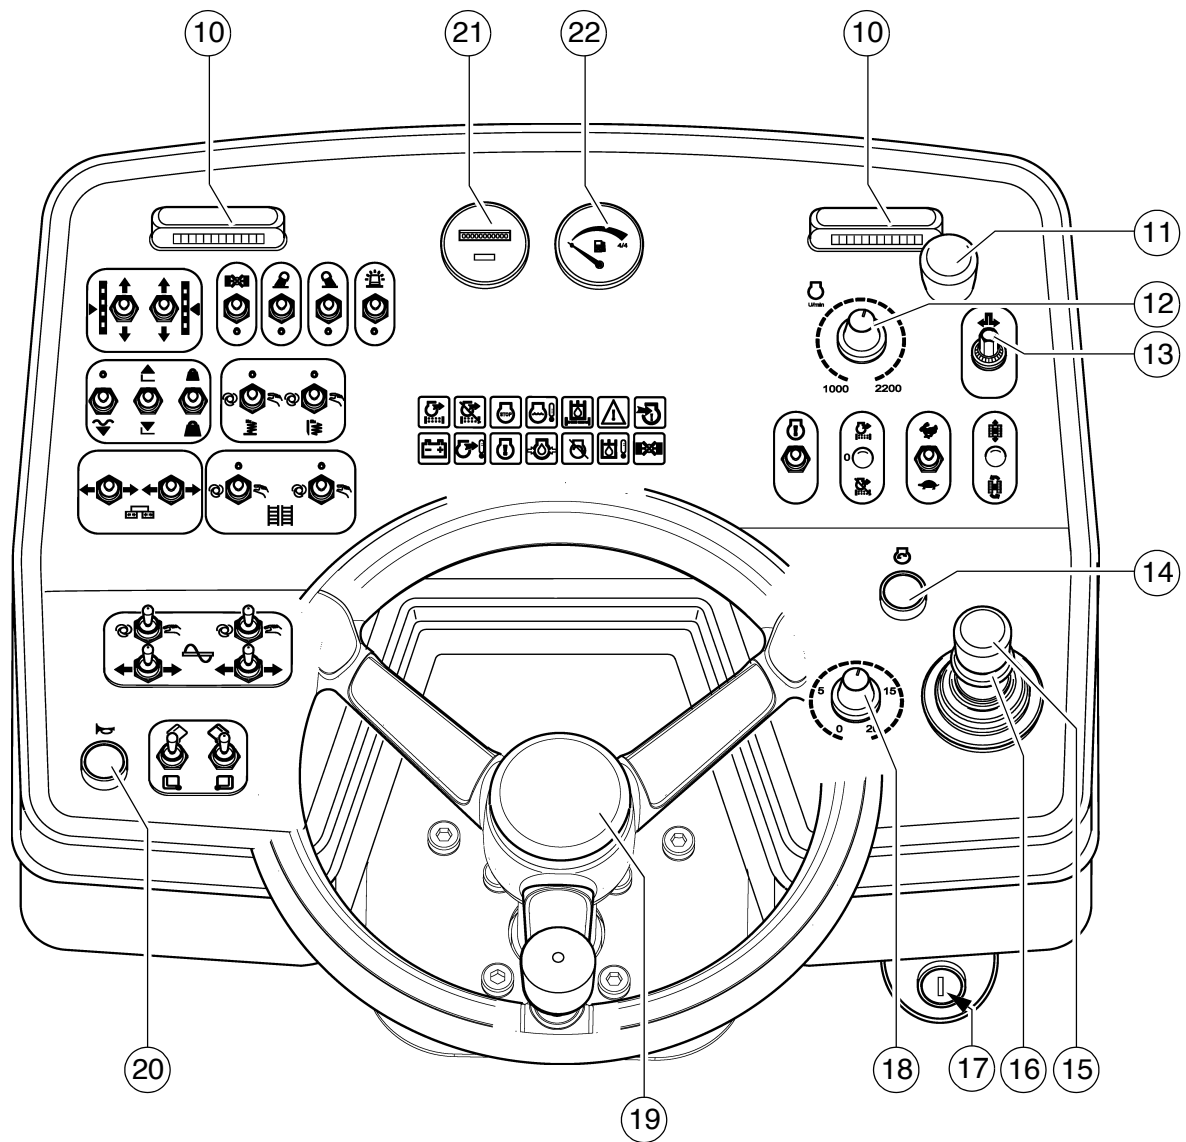







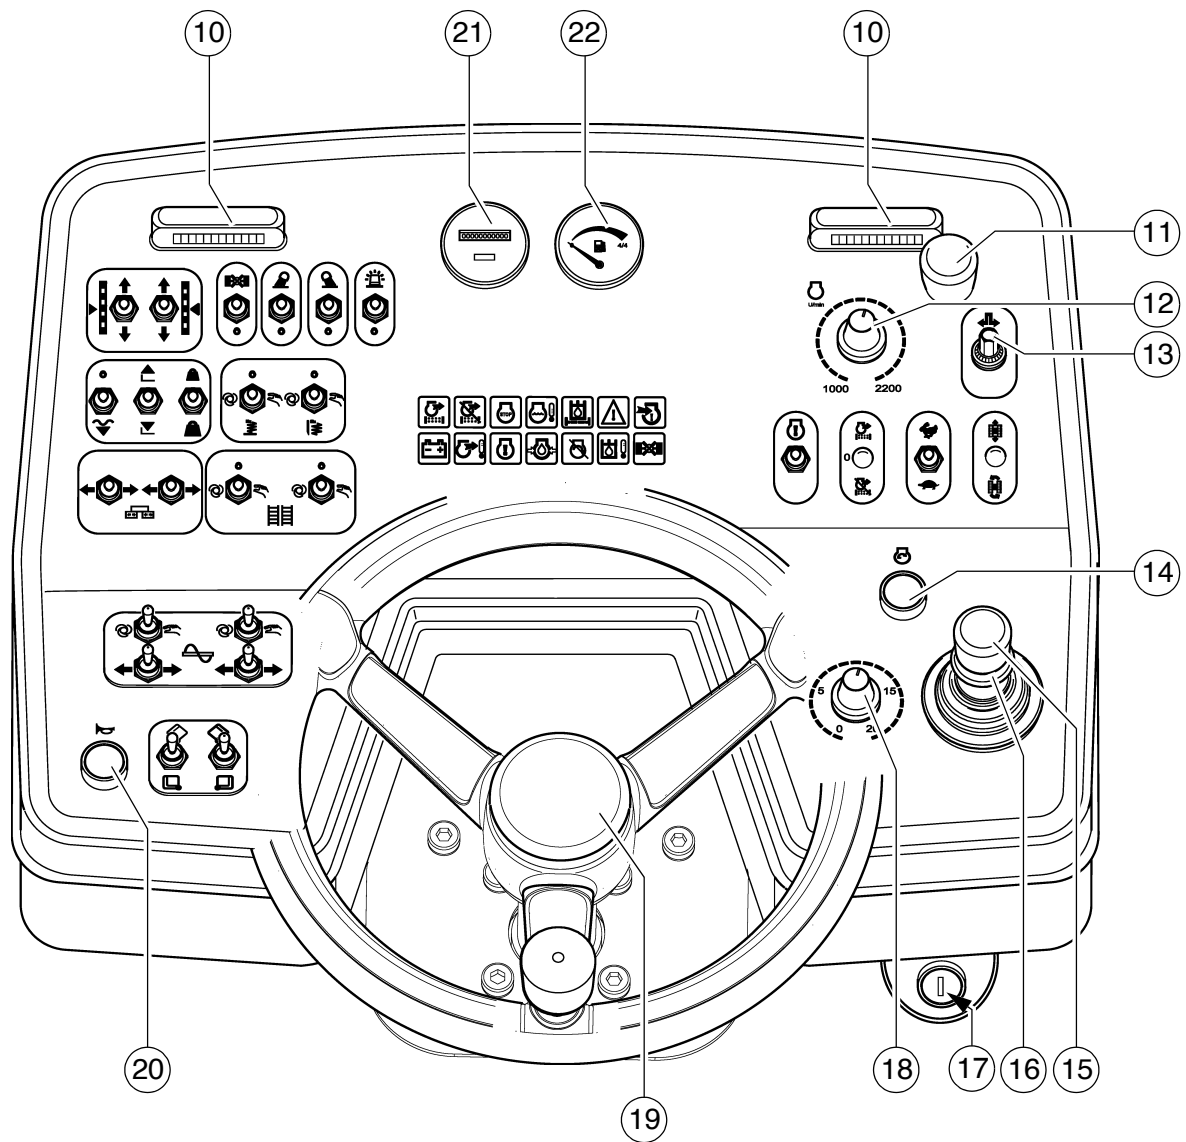

| Item | Designation   | Brief description  |
|------|---|--|
| 10   | Lights  | Lights up instrument panel A/B when the parking light is switched on   |
| 11   | Emergency stop button   | <p>In the case of an emergency (danger to persons, possible collision, etc.), press in the button!</p> <ul style="list-style-type: none"> <li>- Pressing the emergency stop button switches the engine, the drives and the steering system off. Making way, lifting the screed or other actions are then no longer possible! Danger of accidents!</li> <li>- The emergency stop button does not shut off the gas heater system. Close the main shut-off valve and the valves on the bottles by hand!</li> <li>- To restart the engine, the button must be pulled out again.</li> </ul> |
| 12   | Engine speed adjuster   | <p>Continuously variable engine speed setting (if drive lever is extended).<br/>Min. setting: Idling speed<br/>Max. position: Nominal speed</p> <p> For paving, select the rated speed; reduce the speed for transportation.</p> <p> The automatic speed control keeps the set speed constant even under a load.</p>   |
| 13   | Straight-ahead travel synchronisation with active differential lock | <p>This potentiometer adjusts straight-ahead travel with active differential lock while driving:</p> <ul style="list-style-type: none"> <li>- Set the steering to position "0" / straight-ahead; then adjust the potentiometer until the paver finisher is travelling straight ahead.</li> </ul>   |







| Item          | Designation               | Brief description   |
|---------------|---------------------------|---|
| 14            | Starter                   | Starting is only possible when the drive lever is in the centre position. All emergency stop buttons (on the operating panel and the remote controls) must be pulled out.   |
| 15<br>/<br>16 | Drive lever<br>(traction) | <p>For switching on the paver finisher functions and for continuously regulating the road speed – forward or reverse.<br/>Zero position: Engine in neutral; no travel drive;</p> <ul style="list-style-type: none"> <li>- To swivel the drive lever out, release by pulling the handle (16) up.</li> </ul> <p>Depending on the position of the drive lever, the following functions can be activated:</p> <p>1. position:</p> <ul style="list-style-type: none"> <li>- Conveyor and auger on.</li> </ul> <p>2. position:</p> <ul style="list-style-type: none"> <li>- Screed motion (tamper/vibration) on; travel drive on; increase speed until the stop is reached.</li> </ul> <p> Use the preselector to set the maximum speed.</p> <p> Even if the travel drive preselector is set to "zero", the machine already advances slightly when the drive lever is deflected!</p> <p> If the engine is started with the drive lever pivoted out, the travel drive is inhibited.<br/>To start the travel drive, first the drive lever must be returned to the centre position.</p> <p> When changing over between forwards and reverse travel, the drive lever must remain briefly in neutral.</p> |







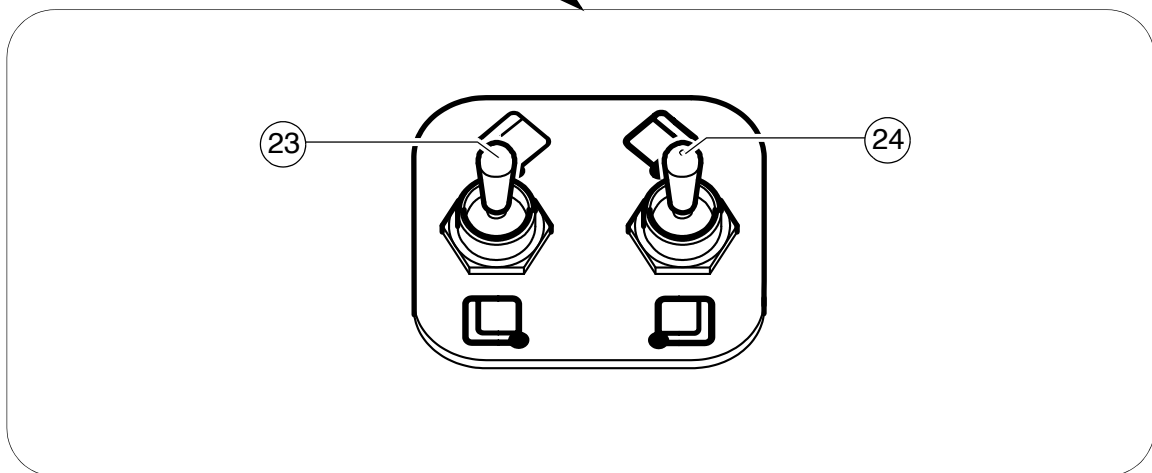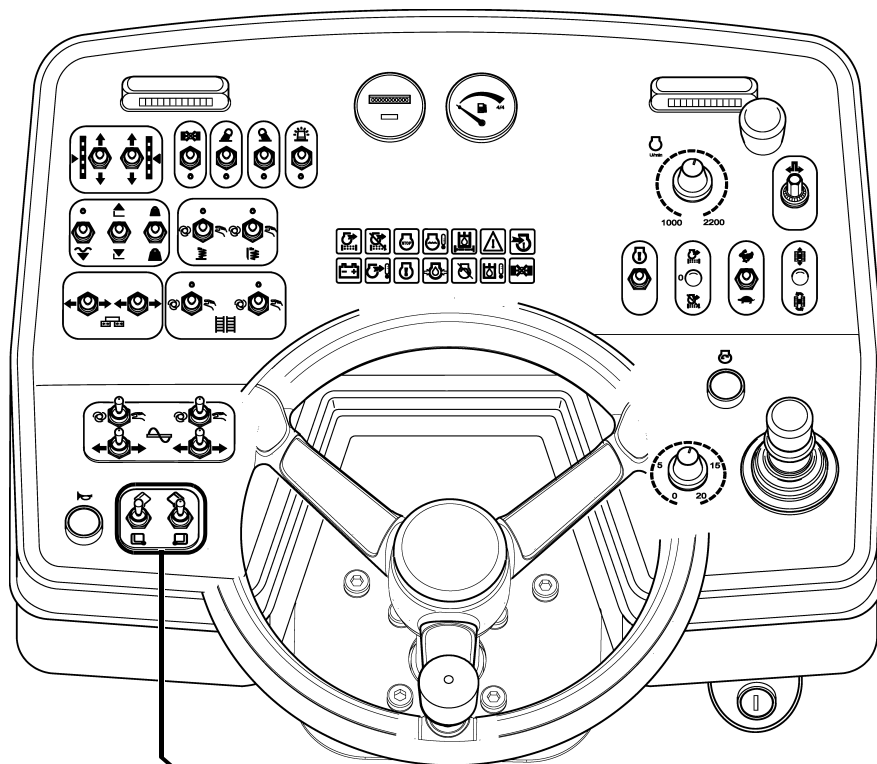



| Item | Designation              | Brief description   |
|------|--------------------------|---|
| 17   | Ignition lock            | <p>To activate the ignition voltage by turning the key.<br/>- Switch off by turning the key back to its starting position.</p> <p> On shutting off the vehicle, first switch off the ignition, then deactivate the main switch.</p> <p> Before the main battery switch is deactivated, a period of at least 10 seconds must elapse after switching off the vehicle.</p>                 |
| 18   | Travel drive preselector | <p>For setting the maximum speed that can be reached when the drive lever is at its stop.</p> <p> The scale roughly matches the speed in m/min (during paving).</p> <p> Even if the travel drive preselector is set to "zero", the machine already advances slightly when the drive lever is deflected!</p>   |
| 19   | Steering wheel           | <p>The steering wheel movement is transferred hydraulically to the front wheels.</p> <p> Take the special steering ratio into consideration when transporting the machine through tight curves (approx. 3 turns for a full steering lock). Danger of accidents!</p> <p> For precise adjustments (position "0" = straight-ahead), see the straight-ahead travel synchronisation.</p> |
| 20   | Horn                     | <p>Press in the case of emergencies and to indicate when the vehicle starts to move!</p> <p> The horn can also be used to communicate acoustically with the truck driver for material loading!</p>   |
| 21   | Operating hours counter  | <p>The operating hours are only counted while the engine is running.<br/>Heed the maintenance intervals (see chapter F).</p>  |
| 22   | Fuel gauge               | <p>Always heed the fuel gauge.</p> <p> Do not completely empty the diesel tank! Otherwise, the entire fuel system must be bled.</p>  |



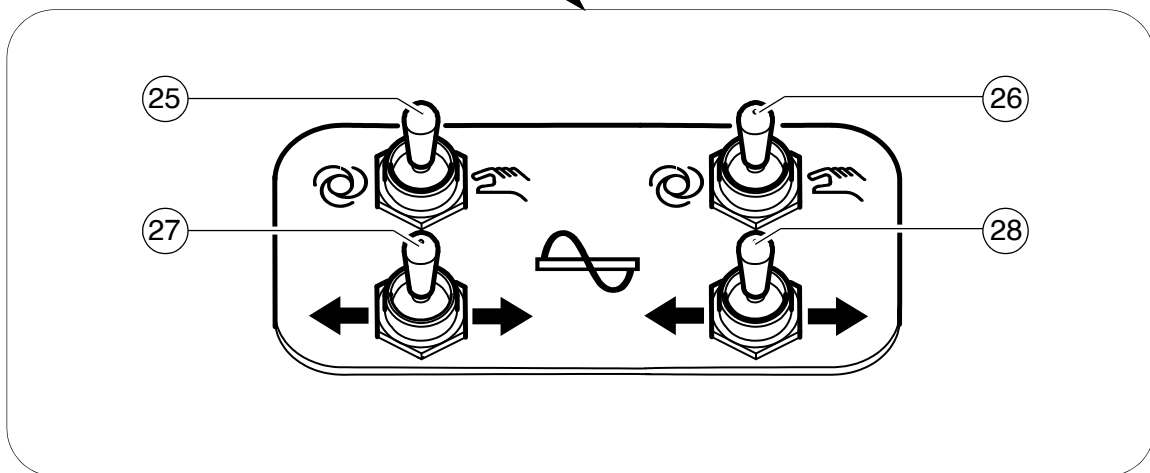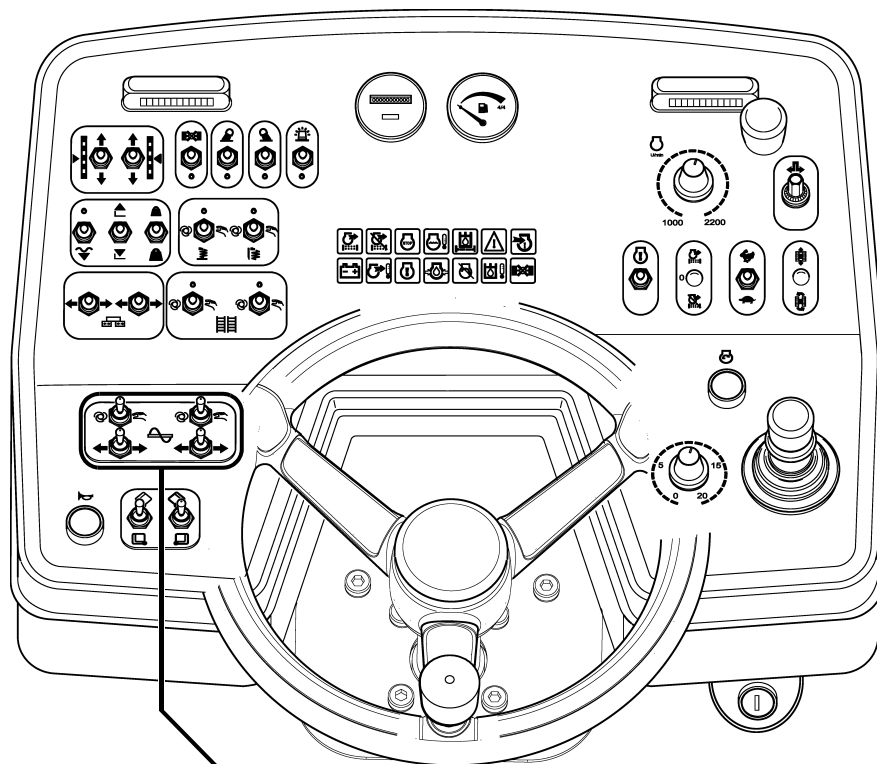



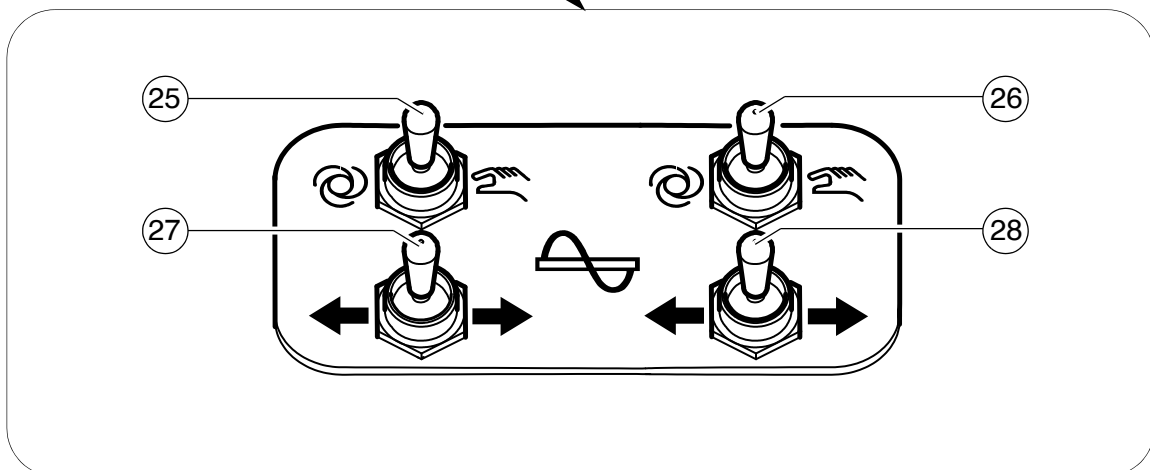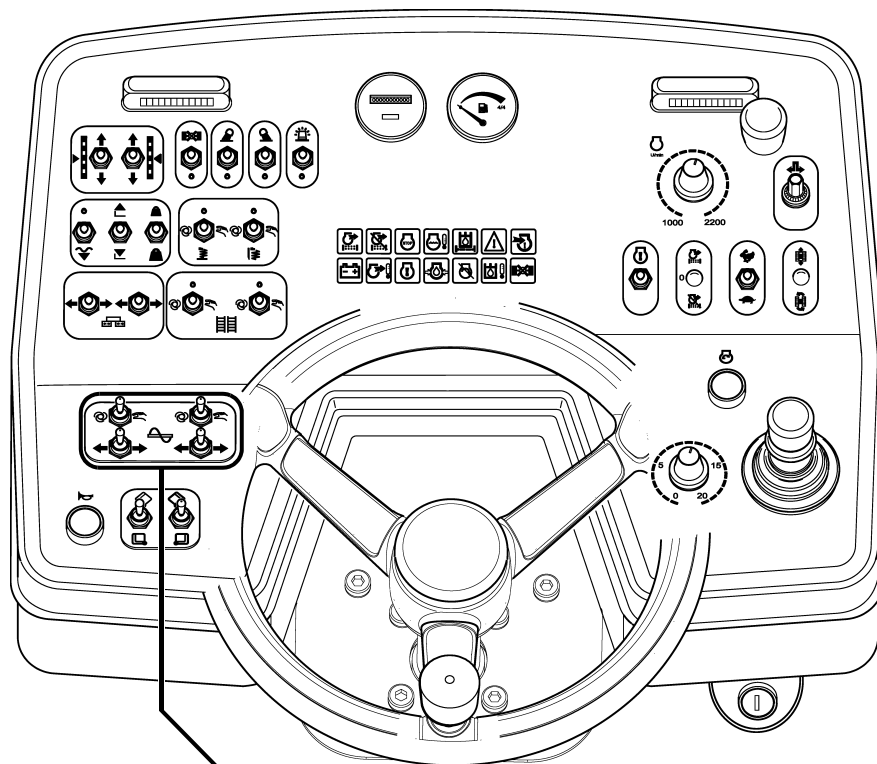



| Item | Designation             | Brief description   |
|------|-------------------------|---|
| 23   | Left hopper open/close  | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Upper switch position:<br/>Close left half of hopper.</li><li>- Lower switch position:<br/>Open left half of hopper.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>   |
| 24   | Right hopper open/close | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Upper switch position:<br/>Close right half of hopper.</li><li>- Lower switch position:<br/>Open right half of hopper.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |





| Item | Designation  | Brief description  |
|------|--|--|
| 25   | Left auger -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL"  | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>operating mode "AUTO": The conveying function of the left half of the auger is switched on when the drive lever is swivelled out and is continuously controlled via the material limit switches.</li> <li>- Switch position, central:<br/>operating mode "OFF": The conveying function of the left half of the auger is switched off.</li> <li>- Right switch position:<br/>operating mode "MANUAL": The conveying function of the left half of the auger is switched on continuously with full delivery capacity, without material control via the limit switches.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>      |
| 26   | Right auger -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL" | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>operating mode "AUTO": The conveying function of the right half of the auger is switched on when the drive lever is swivelled out and is continuously controlled via the material limit switches.</li> <li>- Switch position, central:<br/>operating mode "OFF": The conveying function of the right half of the auger is switched off.</li> <li>- Right switch position:<br/>operating mode "MANUAL": The conveying function of the right half of the auger is switched on continuously with full delivery capacity, without material control via the limit switches.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |





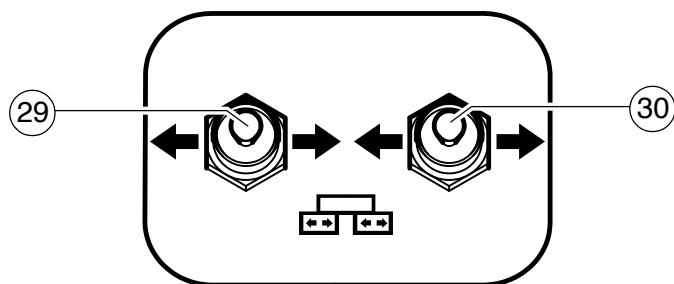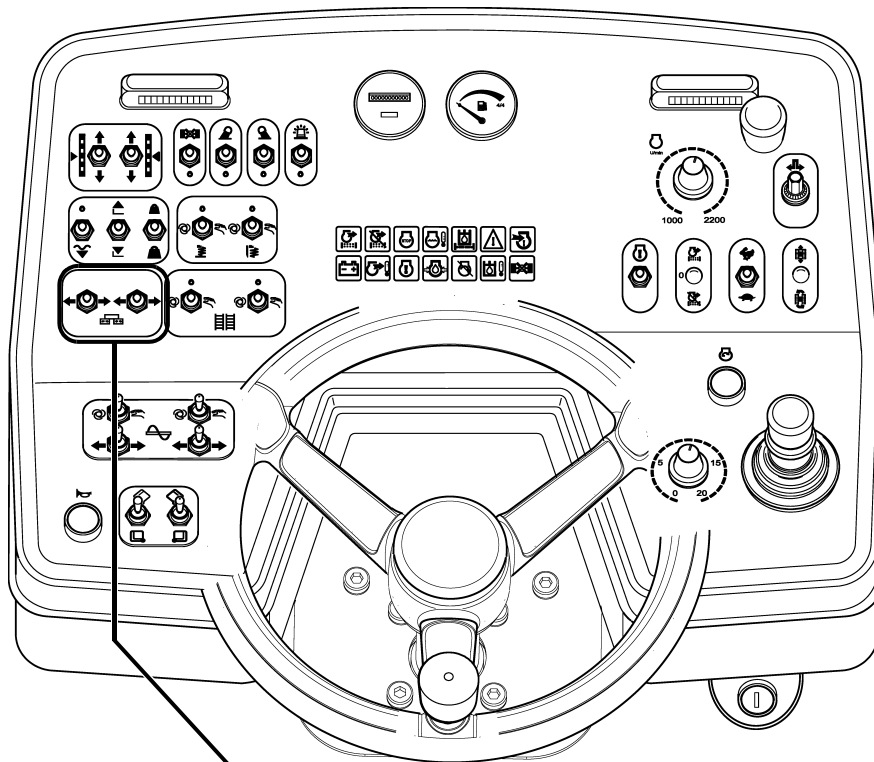

| Item | Designation  | Brief description   |
|------|--|---|
| 27   | Left auger<br>"MANUAL"<br>conveying direction<br>outwards / inwards  | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>Manual start of the conveying function,<br/>Conveying direction outwards.</li> <li>- Right switch position:<br/>Manual start of the conveying function,<br/>Conveying direction inwards.</li> </ul> <p> For manual triggering, the auger function must be switched to "AUTO" or "MANUAL"</p> <p> On manual triggering, the automatic function is overridden with reduced delivery capacity.</p> <p> On actuation, note danger zones of moving parts of the vehicle!</p>       |
| 28   | Right auger<br>"MANUAL"<br>conveying direction<br>outwards / inwards | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>Manual start of the conveying function,<br/>Conveying direction inwards.</li> <li>- Right switch position:<br/>Manual start of the conveying function,<br/>Conveying direction outwards.</li> </ul> <p> For manual triggering, the auger function must be switched to "AUTO" or "MANUAL"</p> <p> On manual triggering, the automatic function is overridden with reduced delivery capacity.</p> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |







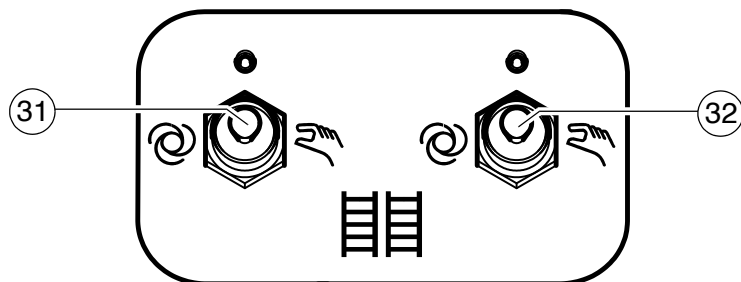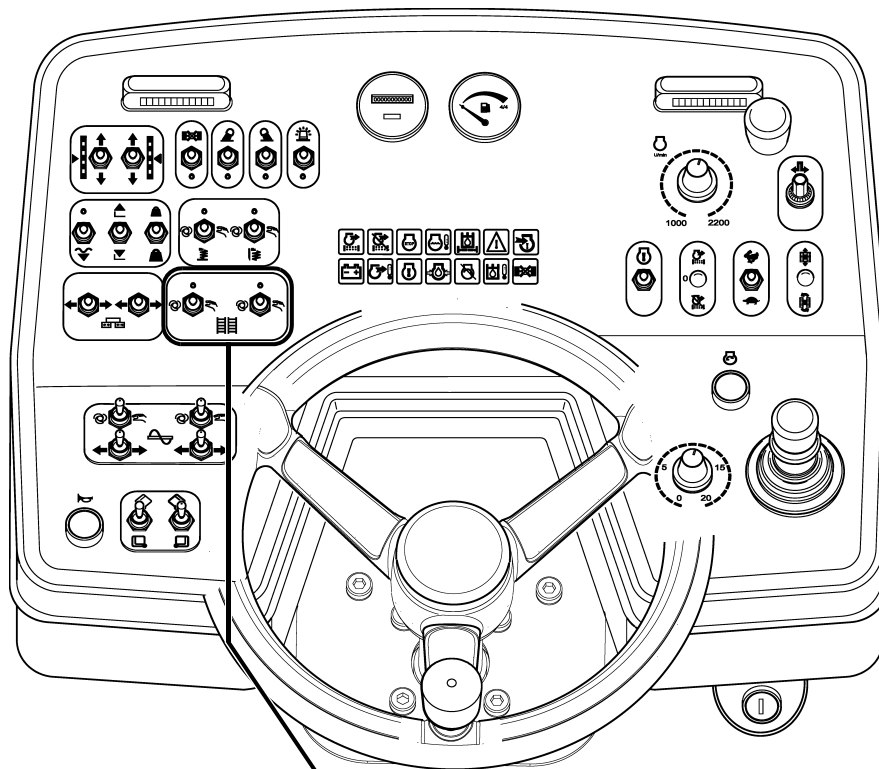



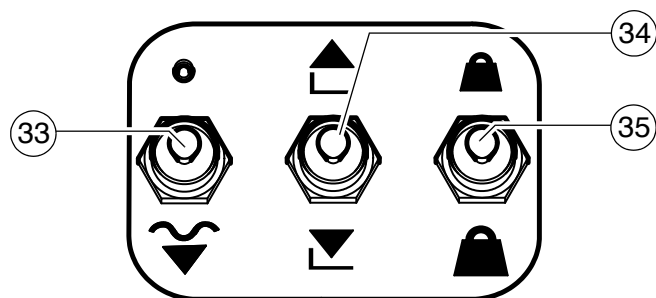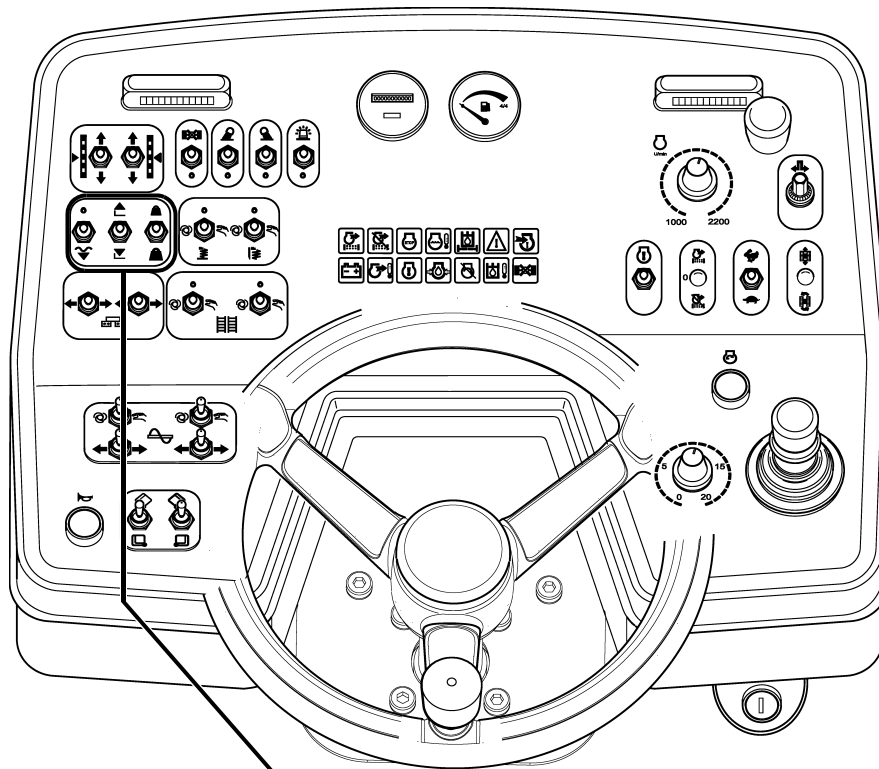


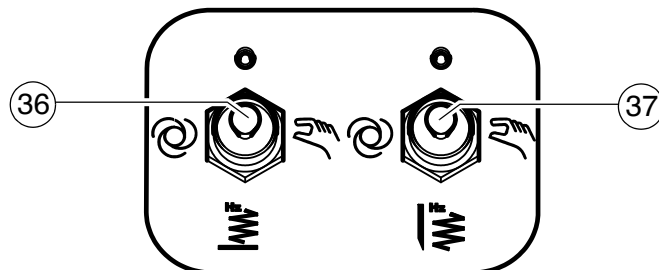
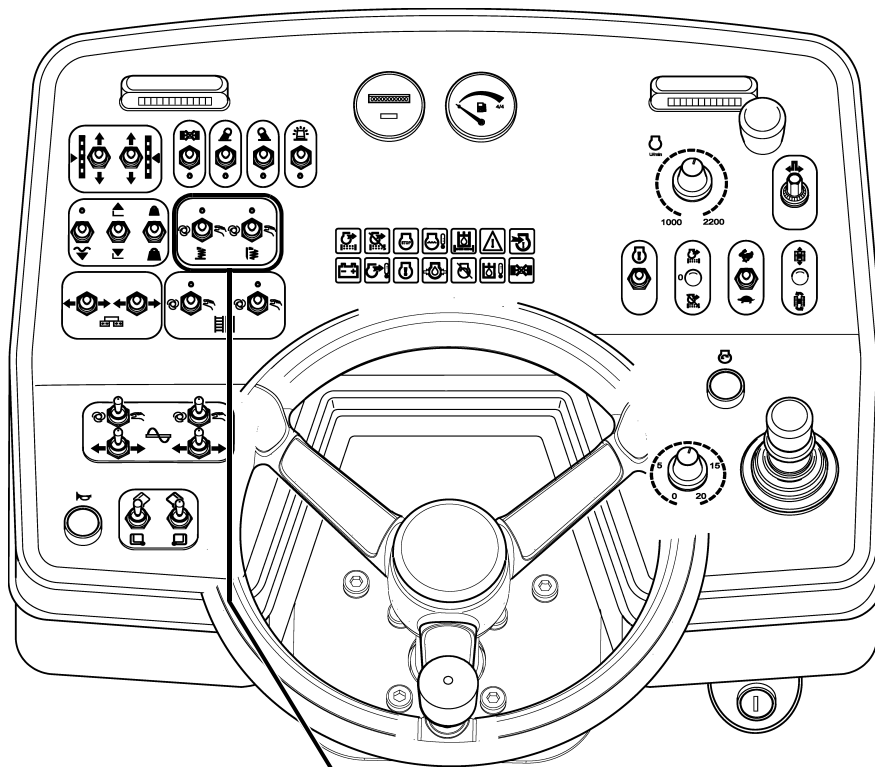
| Item | Designation                      | Brief description  |
|------|----------------------------------|--|
| 29   | Left screed<br>extend / retract  | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Left switch position:<br/>Extend left half of screed.</li><li>- Right switch position:<br/>Retract left half of screed.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>   |
| 30   | Right screed<br>extend / retract | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Left switch position:<br/>Retract right half of screed.</li><li>- Right switch position:<br/>Extend right half of screed.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |





| Item | Designation   | Brief description   |
|------|---|---|
| 31   | Left conveyor -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL"  | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>operating mode "AUTO": The conveying function of the left conveyor is switched on when the drive lever is swivelled out and is continuously controlled via the material limit switches.</li> <li>- Switch position, central:<br/>operating mode "OFF": The conveying function of the left conveyor is switched off.</li> <li>- Right switch position:<br/>operating mode "MANUAL": The conveying function of the left conveyor is switched on continuously with full delivery rate, without material control via the limit switches.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>      |
| 32   | Right conveyor -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL" | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>operating mode "AUTO": The conveying function of the right conveyor is switched on when the drive lever is swivelled out and is continuously controlled via the material limit switches.</li> <li>- Switch position, central:<br/>operating mode "OFF": The conveying function of the right conveyor is switched off.</li> <li>- Right switch position:<br/>operating mode "MANUAL": The conveying function of the right conveyor is switched on continuously with full delivery rate, without material control via the limit switches.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |





| Item | Designation  | Brief description  |
|------|--|--|
| 33   | Screed stop (floating position OFF) / lower screed + floating position | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Screed stop (floating position OFF): Screed is hydraulically locked in position.</li> <li>- Lower switch position:<br/>Lower screed + floating position: Screed is lowered and held in the floating position when the drive lever is swivelled out.</li> </ul> <p> To prevent the screed from lowering during an intermediate stop (drive lever in centre position), the screed is hydraulically held in position via relief pressure and the counter pressure of the material.</p> <p> Check whether the screed transport safeguard is inserted!</p> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |
| 34   | Screed lifting / lowering  | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Lift screed.</li> </ul> <p> Switch (33) must be deactivated for this function, as the screed otherwise lowers again!</p> <ul style="list-style-type: none"> <li>- Lower switch position:<br/>Lower screed.</li> </ul> <p> Check whether the screed transport safeguard is inserted!</p> <p> On actuation, note danger zones of moving parts of the vehicle!</p>   |
| 35   | Screed charging/relieving device                                       | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Screed relieving: For hydraulically relieving the screed to influence the traction force and compaction.</li> <li>- Switch position, central:<br/>Function OFF.</li> <li>- Lower switch position:<br/>Screed charging: For hydraulically charging the screed to influence the traction force and compaction.</li> </ul> <p> The relevant pressure control valve can be used to set the level of charging/relieving.</p>  |





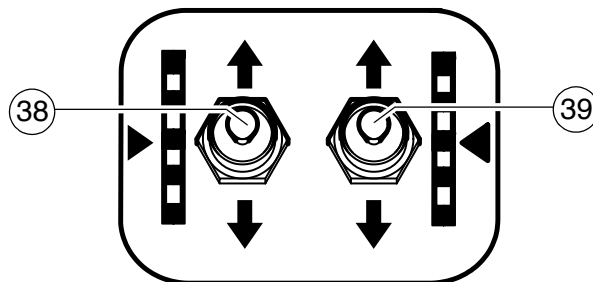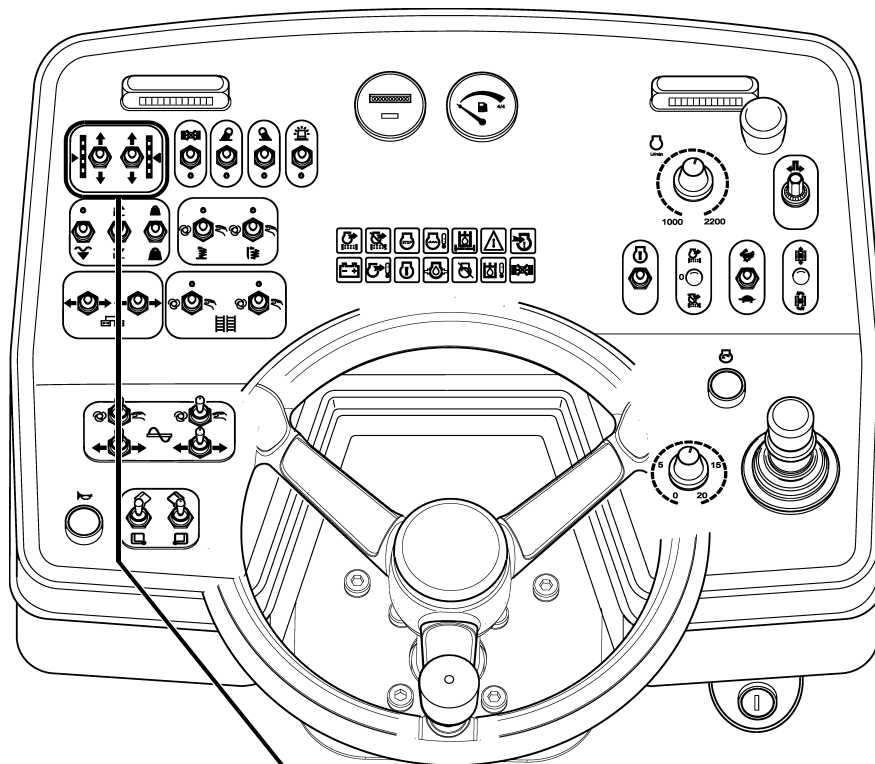



| Item | Designation  | Brief description  |
|------|--|--|
| 36   | Vibration -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL" | Detent switch function: <ul style="list-style-type: none"><li>- Left switch position:<br/>operating mode "AUTO": Screed vibration is switched on when the drive lever is swivelled out.</li><li>- Switch position, central:<br/>operating mode "OFF": Screed vibration is switched off.</li><li>- Right switch position:<br/>operating mode "MANUAL": Screed vibration is switched on constantly.</li></ul>    |
| 37   | Tamper -<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL"    | Detent switch function: <ul style="list-style-type: none"><li>- Left switch position:<br/>operating mode "AUTO": The screed tamper is switched on when the drive lever is swivelled out.</li><li>- Switch position, central:<br/>operating mode "OFF": The screed tamper is switched off.</li><li>- Right switch position:<br/>operating mode "MANUAL": The screed tamper is switched on constantly.</li></ul> |





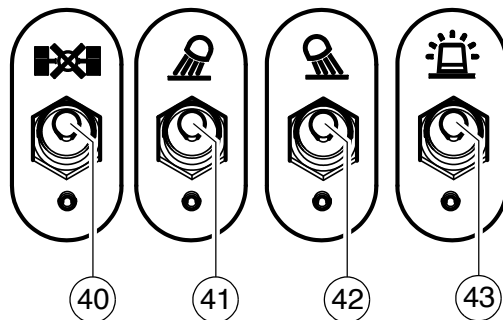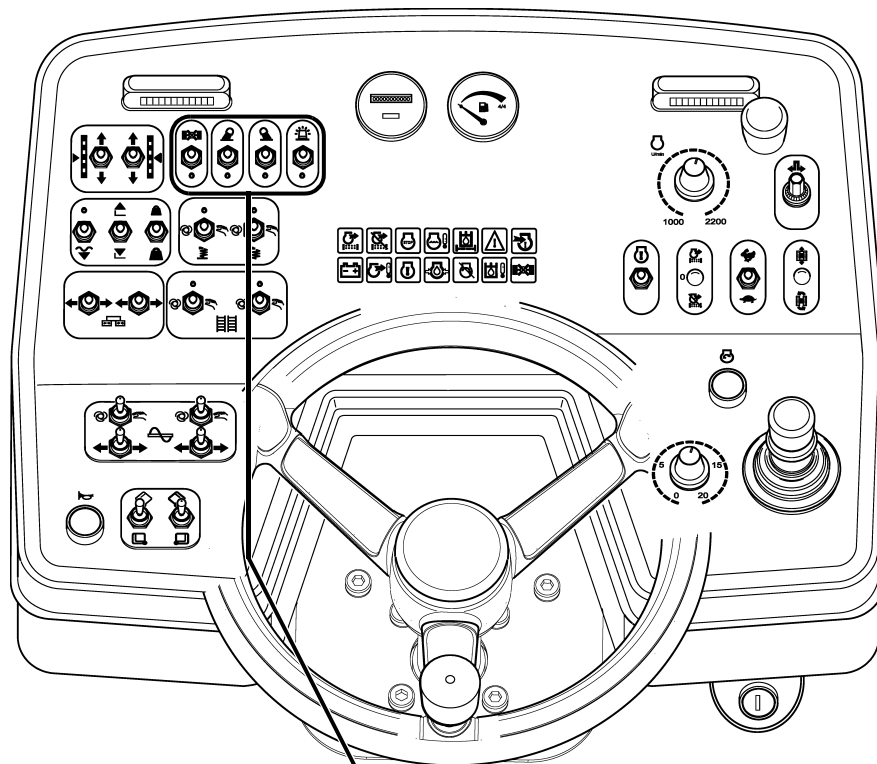





| Item | Designation                                  | Brief description   |
|------|--|---|
| 38   | Left levelling cylinder<br>extend / retract  | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Upper switch position:<br/>Retract left levelling cylinder.</li><li>- Lower switch position:<br/>Extend left levelling cylinder.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>   |
| 39   | Right levelling cylinder<br>extend / retract | <p>Pushbutton function:</p> <ul style="list-style-type: none"><li>- Upper switch position:<br/>Retract right levelling cylinder.</li><li>- Lower switch position:<br/>Extend right levelling cylinder.</li></ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |



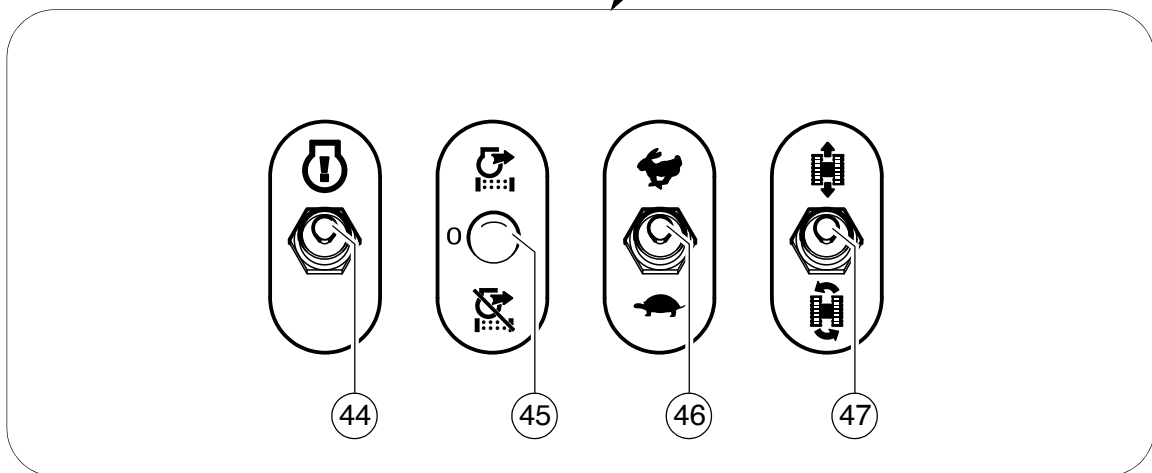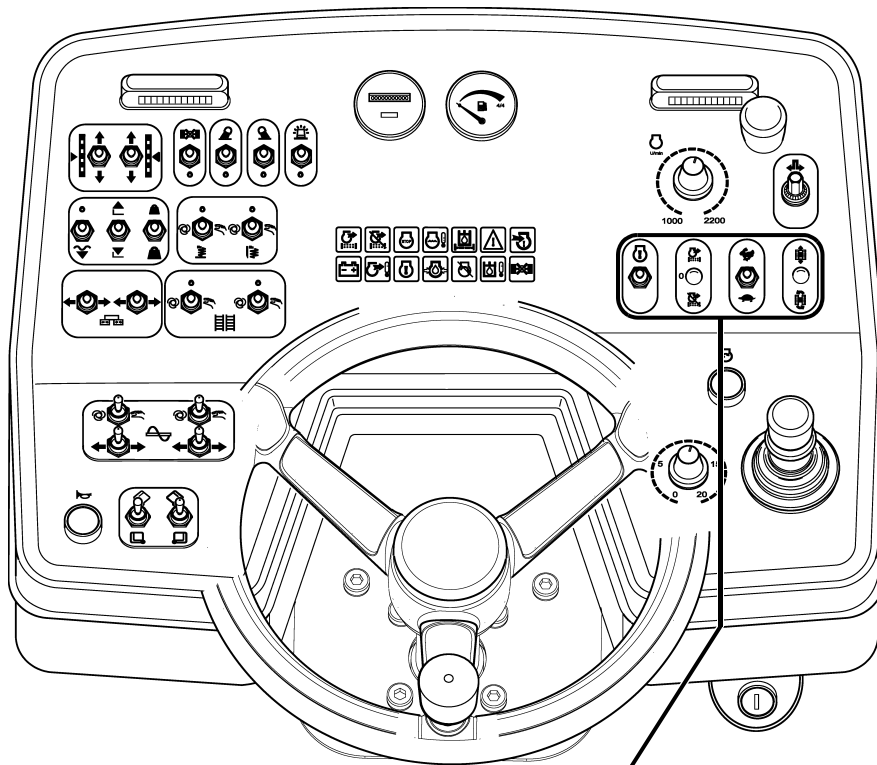




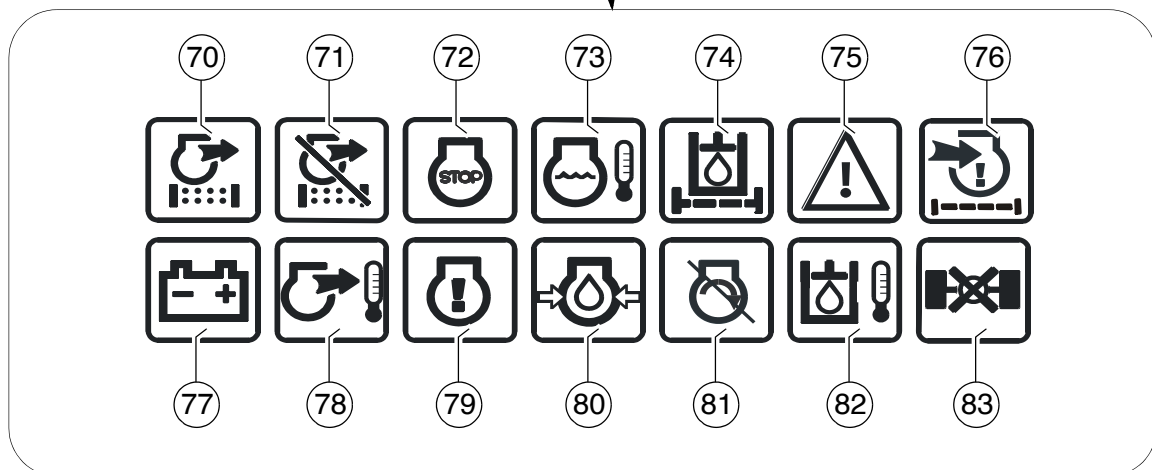
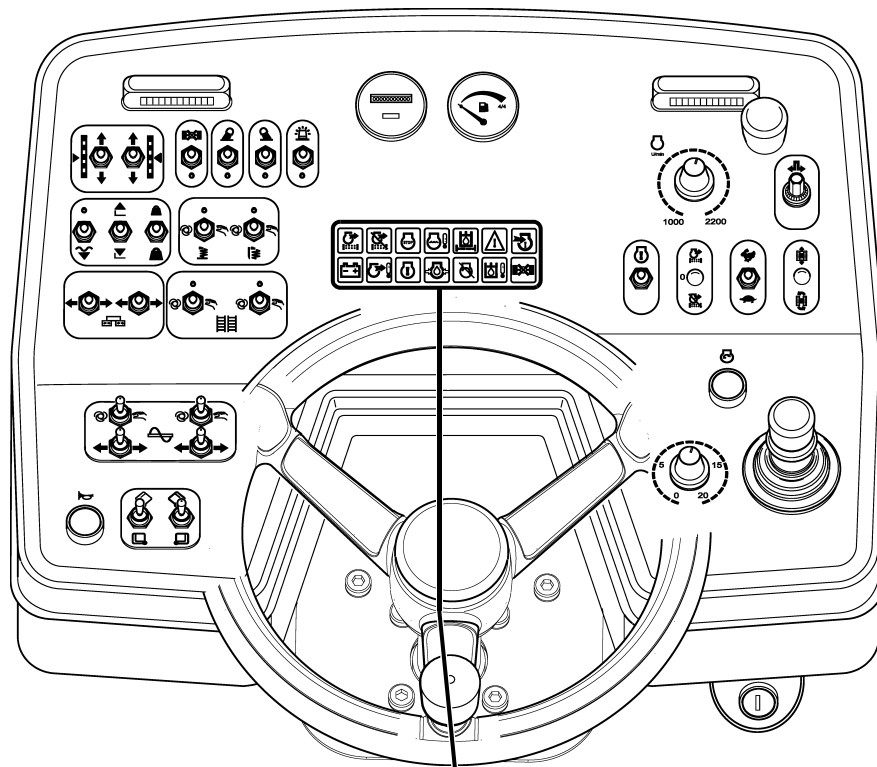
| Item | Designation                             | Brief description  |
|------|---|--|
| 40   | Differential lock<br>ON / OFF           | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Differential lock ON</li> <li>- Lower switch position:<br/>Differential lock OFF</li> </ul> <p> The differential lock is used in the event of traction problems (loose ground). It can be switched on while operating in the operating gear.</p> |
| 41   | Working<br>lights, front<br>ON / OFF    | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Front working lights ON.</li> <li>- Lower switch position:<br/>Front working lights OFF.</li> </ul> <p> Avoid dazzling other road users!</p>   |
| 42   | Working<br>lights, rear<br>ON / OFF (○) | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Rear working lights ON.</li> <li>- Lower switch position:<br/>Rear working lights OFF.</li> </ul> <p> Avoid dazzling other road users!</p>   |
| 43   | Rotary beacon<br>ON / OFF (○)           | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Rotary beacon ON.</li> <li>- Lower switch position:<br/>Rotary beacon OFF.</li> </ul> <p> Switch on for safety on roads and in the construction site area</p>  |

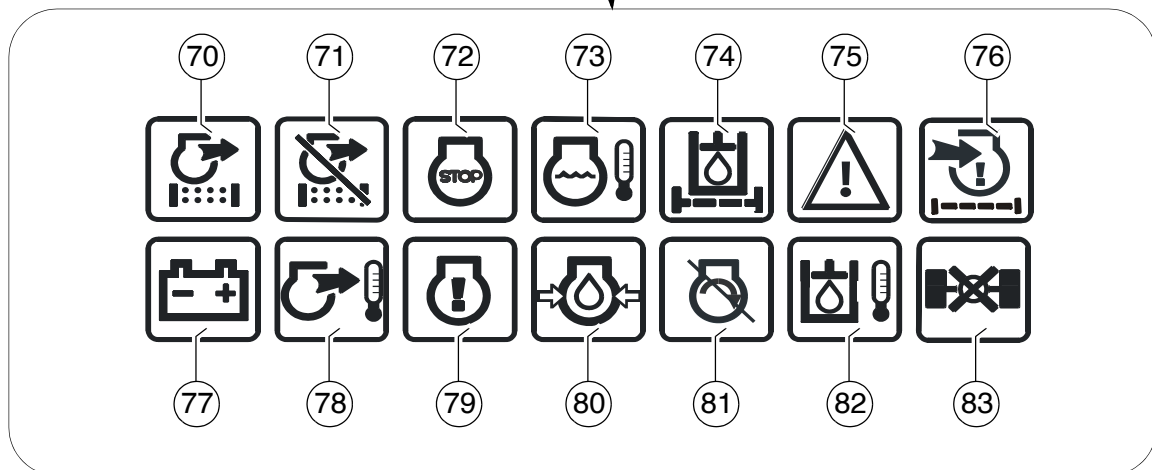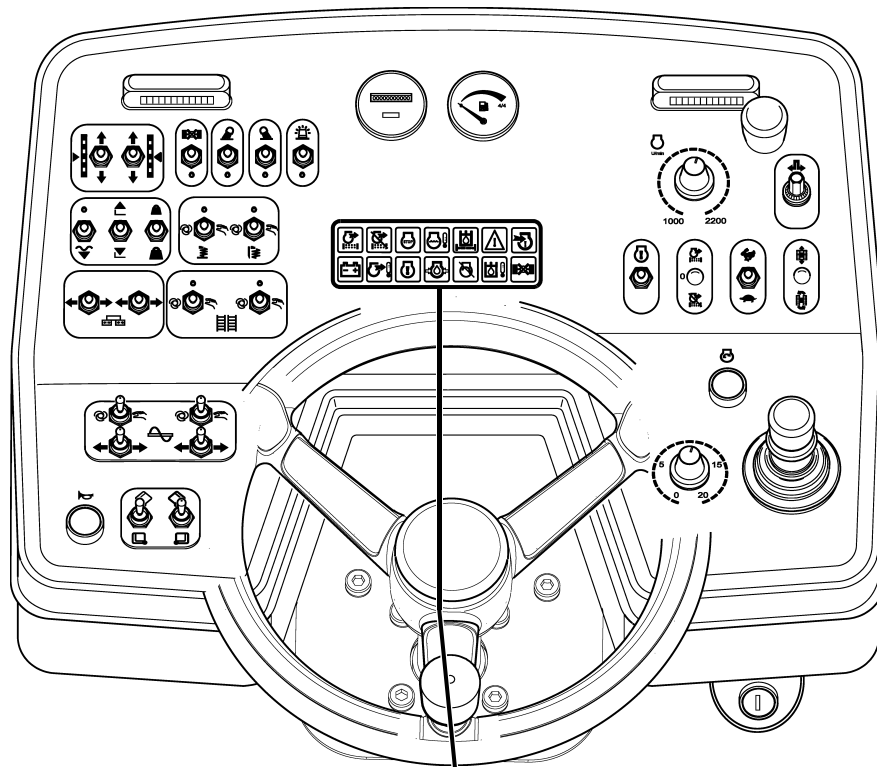




| Item | Designation                       | Brief description   |
|------|-----------------------------------|---|
| 44   | Error / malfunction interrogation | <p>If a fault discovered on the drive engine is indicated by one of the warning lamps, a code assigned to a defined defect can be called up.</p> <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Call the fault code.</li> </ul> <p> Press the switch until the three-digit code has been output by the warning lamp.</p> <p> Refer to the "Malfunctions" section for calling up error codes!</p> |
| 45   | not used                          |   |
| 46   | Travel drive fast/slow            | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Upper switch position:<br/>Preselection of the speed level - transportation speed (fast).</li> <li>- Lower switch position:<br/>Preselection of the speed level - operating speed (slow).</li> </ul>   |
| 47   | not used                          |   |




| Item | Designation                          | Brief description   |
|------|--------------------------------------|---|
| 70   | not used                             |   |
| 71   | not used                             |   |
| 72   | Error message with engine stop (red) | <p>Lights up when a serious error has occurred on the engine. The engine is automatically shut down for safety.</p> <p> The error code can be called up using the switch "Call up error / malfunction".</p> <p> Lights up for a few seconds once the ignition has been switched on for checking purposes.</p> |
| 73   | not used                             |   |
| 74   | Indicator lamp hydraulic filter      | <p>Lights up when the hydraulic filter needs replacing.</p> <p> Replace filter element acc. to maintenance instructions!</p>   |
| 75   | Travel drive error message           | <p>Lights up if there is a fault in the travel drive or if an actuated emergency stop button prevents the machine from starting.</p> <p> Warning lamp goes out as soon as the error was repaired.</p>  |
| 76   | Indicator lamp Air filter            | <p>Lights up if the air filter needs replacing.</p> <p> Replace filter element acc. to Maintenance Instructions!</p>   |





| Item | Designation                              | Brief description   |
|------|--|---|
| 77   | Battery charge indicator (red)           | Must go out after starting when the engine revs up.<br>- If the light does not go out, switch off the engine  |
| 78   | not used                                 |   |
| 79   | Error message (yellow)                   | <p>Indicates that there is a drive engine fault. Depending on the type of fault, the vehicle can temporarily continue to be operated or, in the case of serious faults, should be shut down immediately to prevent further damage from occurring. Each fault should be rectified as soon as possible!</p> <p> The error code can be called up using the switch "Call up error / malfunction".</p> <p> Lights up for a few seconds once the ignition has been switched on for checking purposes.</p> |
| 80   | not used                                 |   |
| 81   | Start inhibit                            | Indicates that an enabled function stops the machine from starting.   |
| 82   | Indicator lamp Hydraulic oil temperature | <p> Lights up if the hydraulic oil temperature is too high. Stop the paver finisher when if the temperature is too high (drive lever in centre position), let the engine cool down while idling. Determine the cause and correct it if necessary.</p>  |
| 83   | Differential lock control                | Lights up when the differential lock is switched on.  |

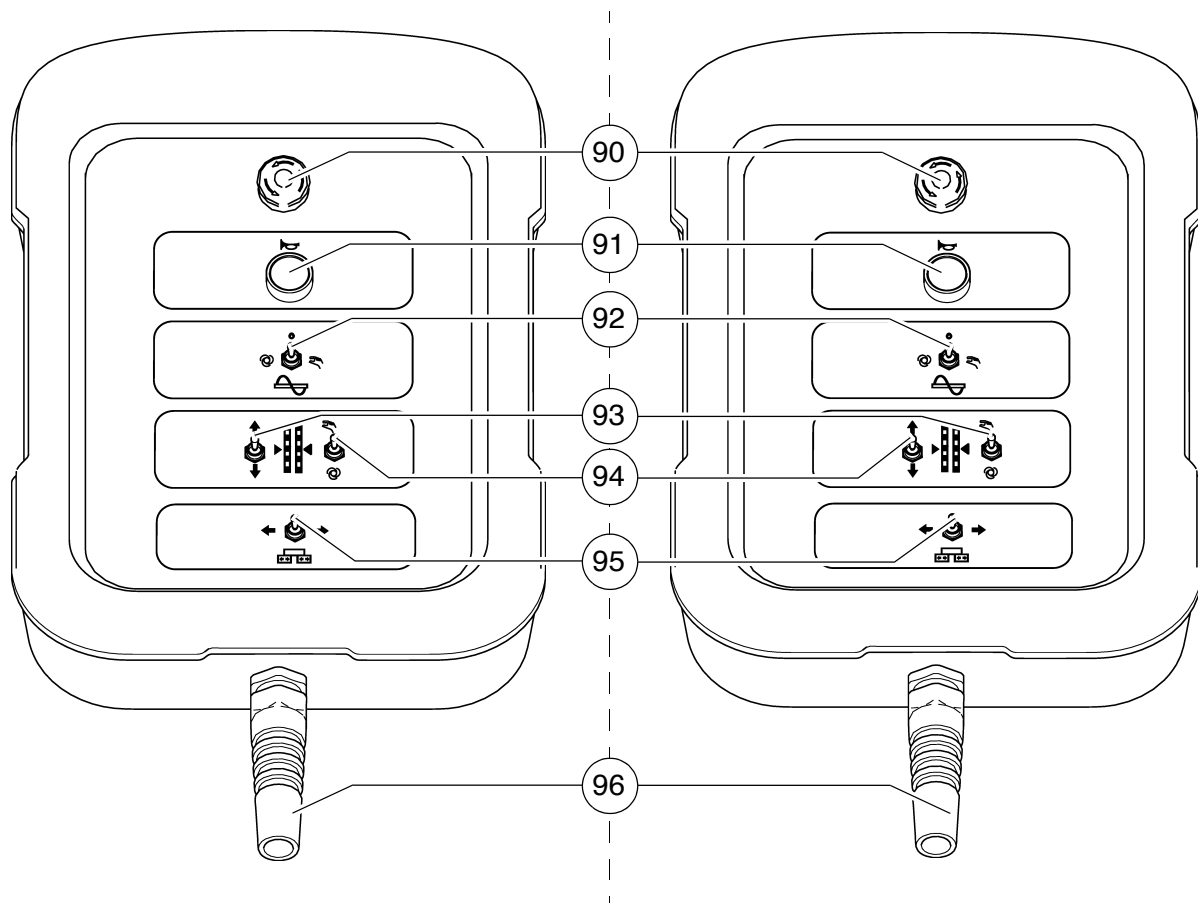

### 3 Remote control







Depending on the side of the machine (left/right), the function switches only control the corresponding function on the particular side of the machine.



**Important!** Do not disconnect remote controls with emergency stop button (○) during operation! This causes the paver finisher to be shut down!
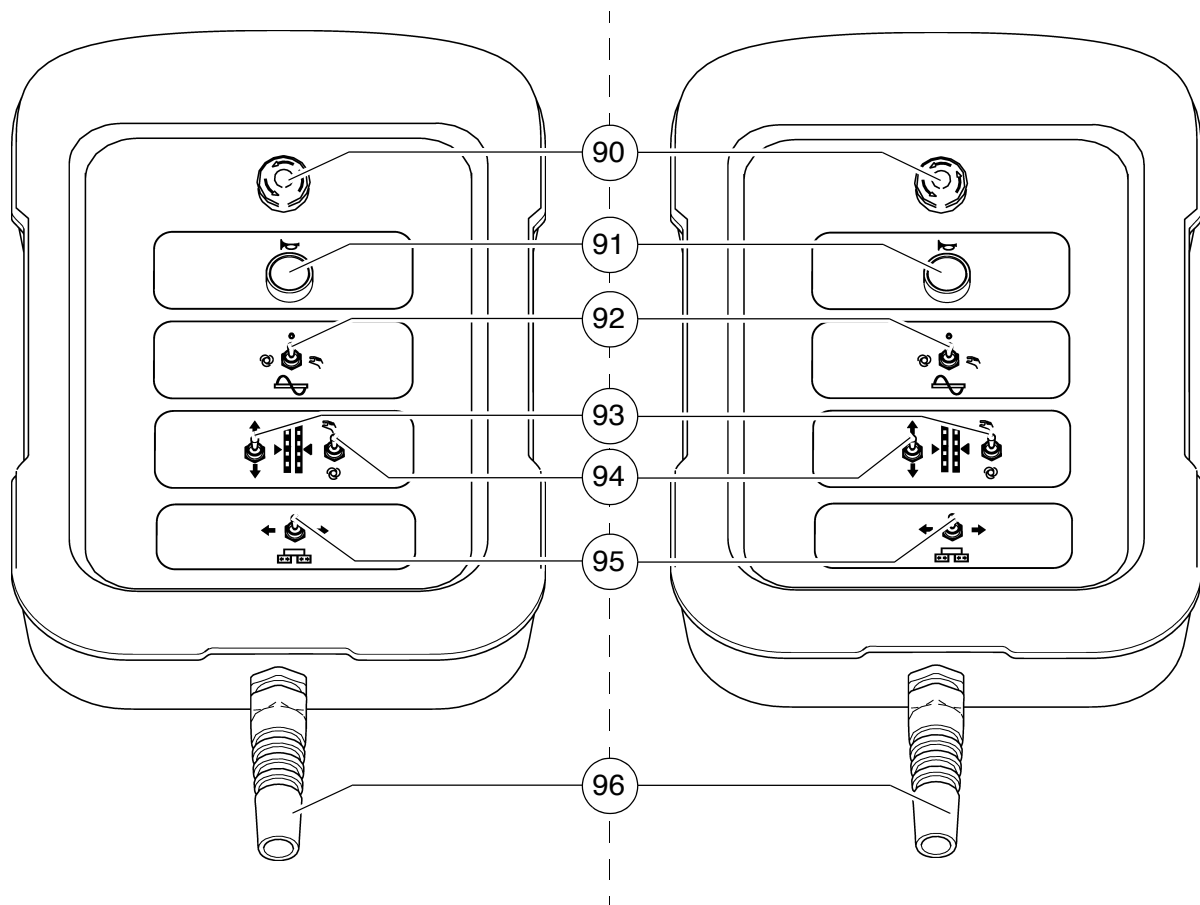
| Item | Designation   | Brief description   |
|------|---|---|
| 90   | Emergency stop button   | <p>In the case of an emergency (danger to persons, possible collision, etc.), press in the button!</p> <ul style="list-style-type: none"> <li>- Pressing the emergency stop button switches the engine, the drives and the steering system off. Making way, lifting the screed or other actions are then no longer possible! Danger of accidents!</li> <li>- The emergency stop button does not shut off the gas heater system. Close the main shut-off valve and the valves on the bottles by hand!</li> <li>- To restart the engine, the button must be pulled out again.</li> </ul>  |
| 91   | Horn  | <p>Press in the case of emergencies and to indicate when the vehicle starts to move!</p> <p> The horn can also be used to communicate acoustically with the truck driver for material loading!</p>   |
| 92   | Auger left/right<br>Operating mode<br>"AUTO" /<br>"OFF" /<br>"MANUAL" | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Left switch position:<br/>operating mode "AUTO": The conveying function of the left / right half of the auger is switched on when the drive lever is swivelled out and is continuously controlled via the material limit switches.</li> <li>- Switch position, central:<br/>operating mode "OFF": The conveying function of the left / right half of the auger is switched off.</li> <li>- Right switch position:<br/>operating mode "MANUAL": The conveying function of the left / right half of the auger is switched on continuously with full delivery capacity, without material control via the limit switches.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p> |



| Item | Designation                                    | Brief description   |
|------|--|---|
| 93   | Levelling cylinder left/right extend / retract | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Upper switch position: Retract left / right levelling cylinder.</li> <li>- Lower switch position: Extend left / right levelling cylinder.</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>                      |
| 94   | Levelling operating mode "AUTO" / "MANUAL"     | <p>Detent switch function:</p> <ul style="list-style-type: none"> <li>- Upper switch position: operating mode "MANUAL": height adjustment is carried out using the corresponding function switches on the remote control or operating panel.</li> <li>- Lower switch position: operating mode "AUTO": height adjustment is carried out automatically via the connected grade control system.</li> </ul> |
| 95   | Screed left/right extend / retract             | <p>Pushbutton function:</p> <ul style="list-style-type: none"> <li>- Switch position in the corresponding direction: extend or retract left / right screed half</li> </ul> <p> On actuation, note danger zones of moving parts of the vehicle!</p>   |
| 96   | Connection cable                               | <p> For connection to the paver finisher's corresponding socket.</p>   |



## D 31 Operation

### 1 Operating elements on the paver finisher

#### 1.1 Control elements on the operator's control station


##### Protective roof (○)

The protective roof can be raised and lowered with a manual hydraulic pump.



The exhaust pipe is lowered or raised together with the roof.

- Remove the lower section of the pump lever (1) from the storage compartment, and connect to the upper section using a pipe (2).
- Lower the roof: The locks (3) on both sides of the roof must be released.
- Raise the roof: The locks (4) on both sides of the roof must be released.
- Set the adjustment lever (5) to the "Raise" or "Lower" position.
- Raise the roof: The lever points forwards.
- Lower the roof: The lever points backwards.
- Operate the pump lever (1) until the roof has reached the upper or lower limit position.
- Roof in uppermost position: Set the locks (3) on both sides of the roof.
- Roof lowered: Set the lock (4) on both sides of the roof.

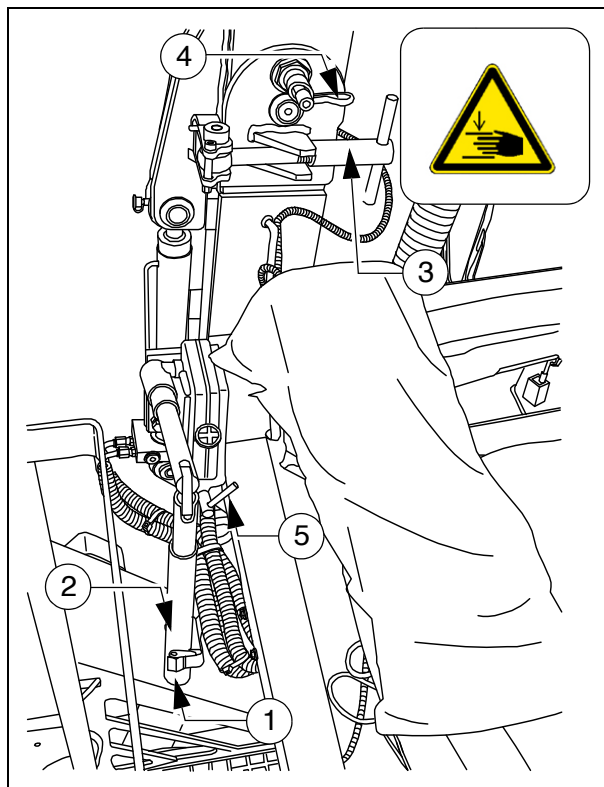

If the vehicle is equipped with a protective roof, the engine hood must be closed before lowering the roof!

## Protective cabin (○)

The protective roof is equipped with an additional front window and two side windows.

- The side windows can be swivelled out to the side at the bracket (1). Press the lock (2) to unlock.

## Windscreen wiper


- Activate the windscreen wiper (3) / screen wash on the operating panel if necessary.



Ensure that the washer fluid tank (4) is always adequately filled.




Replace worn wiper blades immediately.

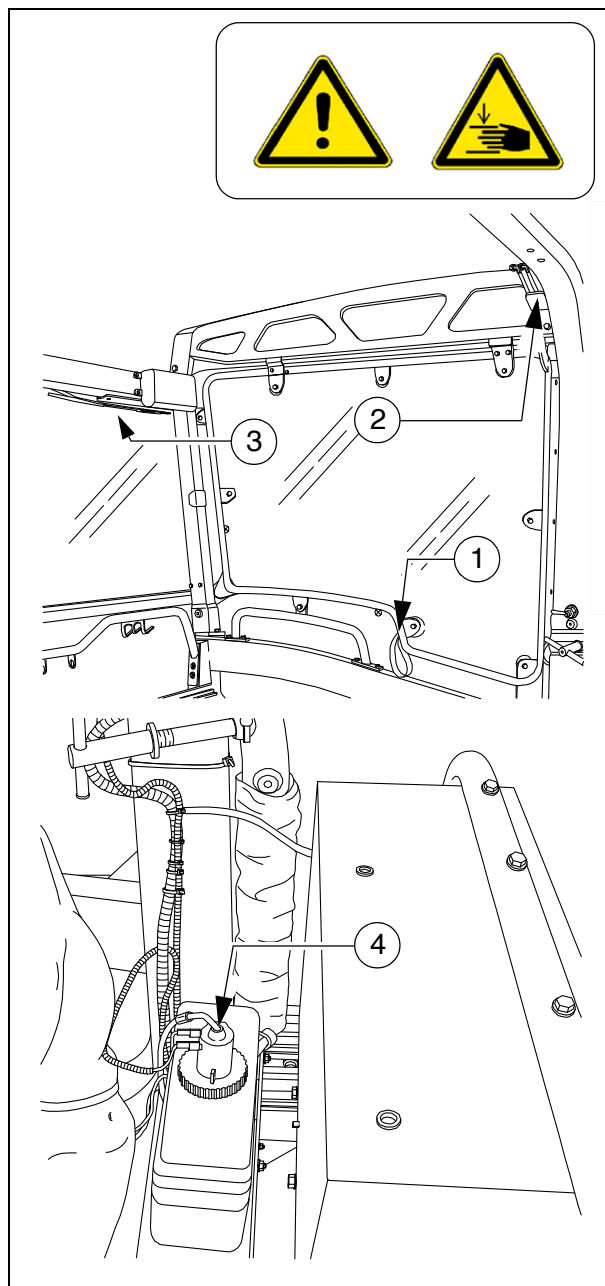



### Control panel, rigid

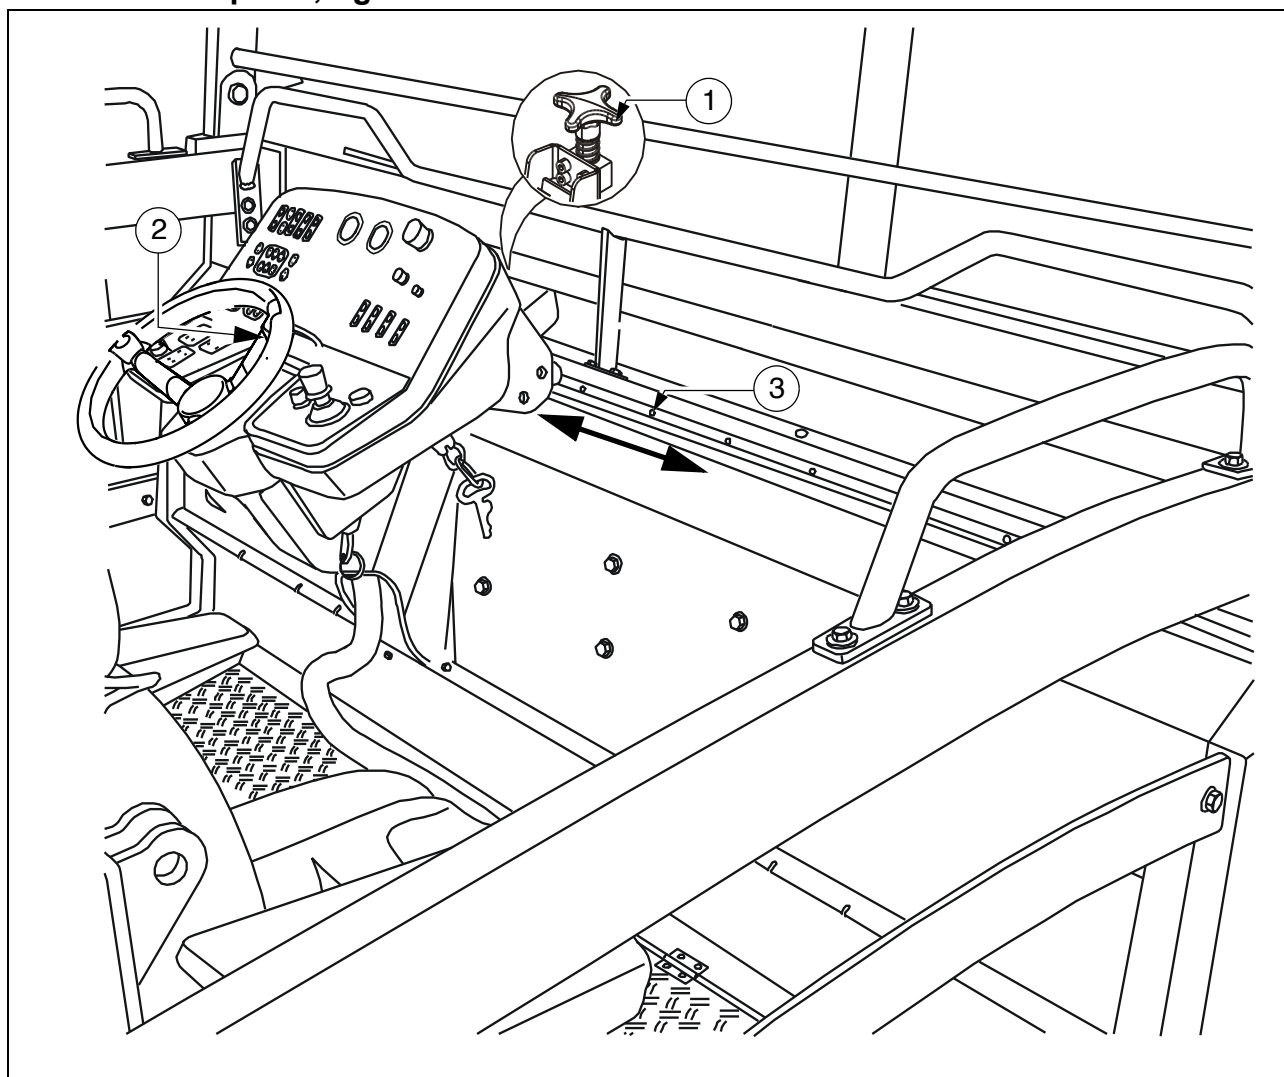

### Operating panel, moveable

The operating panel can be shifted to several positions on the left- and right-hand sides of the vehicle.

- Release panel latch (1) and slide panel console to the desired position using the handle (2).
- Insert panel latch (1) into one of the detent positions (3).




Make sure it is latched properly!



Only adjust the operating position whilst the vehicle is stationary!

## Control platform, moveable (○)

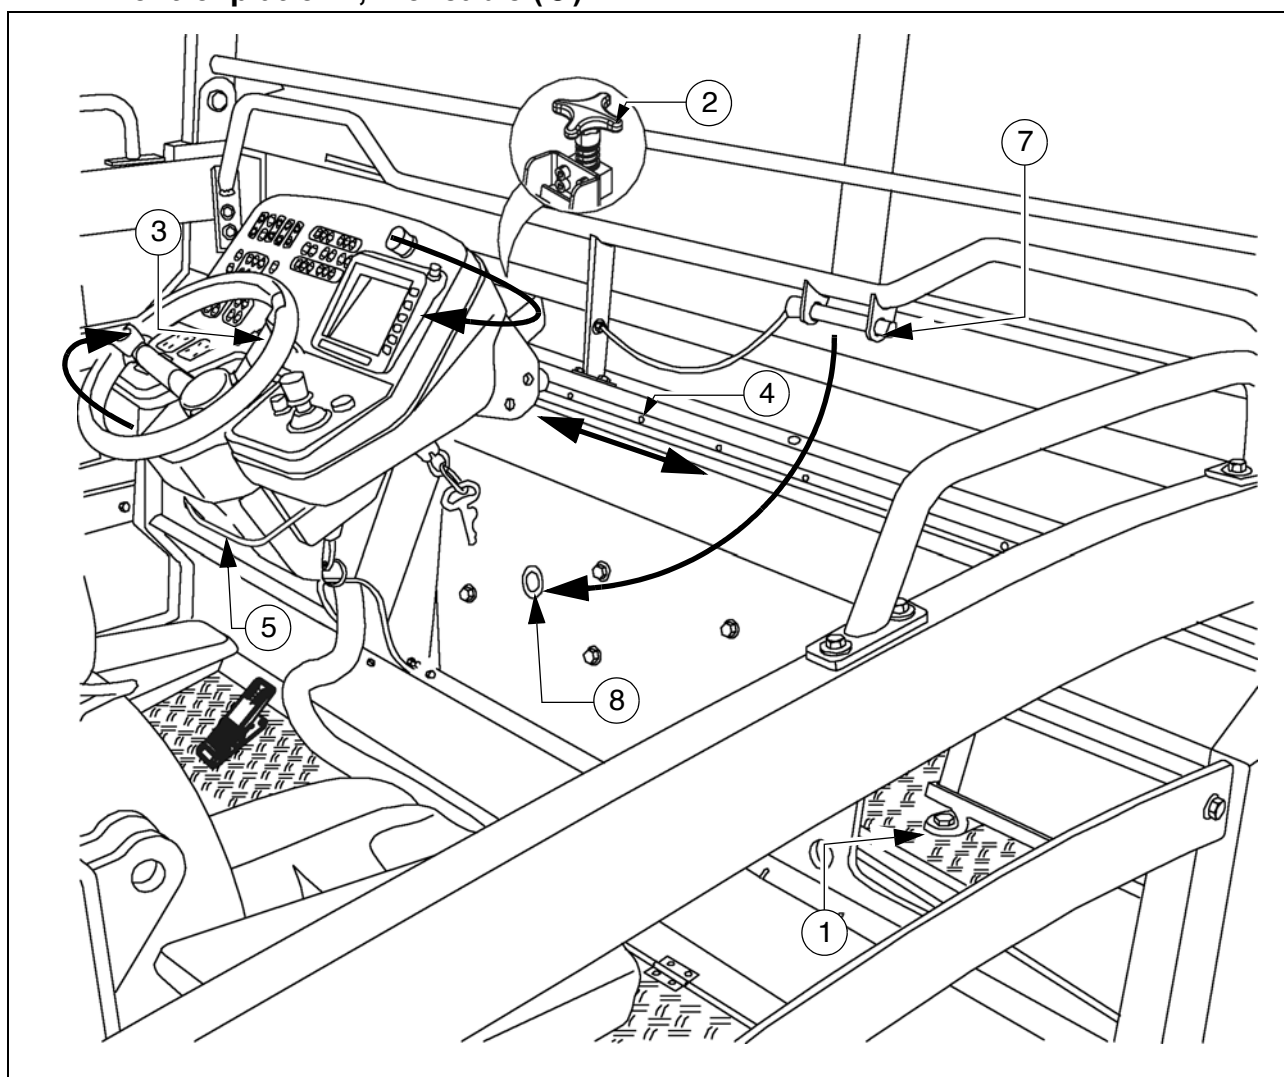

The control platform can be hydraulically shifted beyond the left/right outer edge of the vehicle, providing the driver with a better view of the paving area in this position.

- When the control platform has been moved, the windows (1) additionally offer a good view of the paving area.



Refer to the operating panel for actuation of the platform movement function.



Shifting the platform increases the basic width of the paver finisher.



If the platform is moved, ensure that there is no one in the vehicle's danger area!



Only adjust the operating position whilst the vehicle is stationary!

### **Operating panel, moveable**

The operating panel can be shifted to several positions on the left- and right-hand sides of the vehicle.

- Release panel latch (2) and slide panel console to the desired position using the handle (3).
- Insert panel latch (2) into one of the detent positions (4).



Make sure it is latched properly!



Only adjust the operating position whilst the vehicle is stationary!

### **Operating panel, swivelling (○)**

The entire operating panel can be swivelled for operation beyond the outer edge of the vehicle.

- Press latch (5), swivel operating panel to the required position using the handle (3) and allow latch to engage again in one of the intended detent positions.



Make sure it is latched properly!



Only adjust the operating position whilst the vehicle is stationary!

### **Control platform lock (○)**



During transportation in road traffic and when transporting the vehicle on transporters, the control panel must be secured in the central position!

- Remove the locking pin (7) from its storage compartment (press pushbutton) and insert into locking aperture (8).



To be able to set the lock, the panel must be positioned centrally above the machine frame.


**.Emergency actuation control  
platform, movable**

If the control platform cannot be moved hydraulically, it can be pushed back to its central position by hand.

- Remove the screw cap (1) (next to the right footwell window).
- Remove screw (2).



This undoes the connection between the platform and the frame so that the platform can be moved.

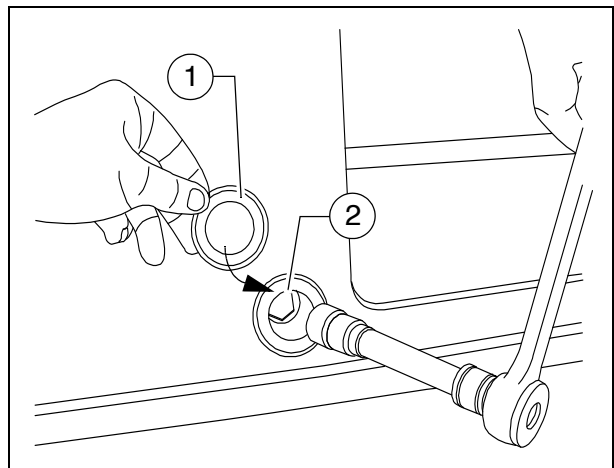

- Restore the original status after eliminating the fault.

### Seat console, swivelling (○)

The seat consoles can be swivelled for operation beyond the outer edge of the vehicle.


- Press latch (1), swivel seat console to the desired position and allow latch to engage again.



Make sure it is latched properly!



Only adjust the operating position whilst the vehicle is stationary!

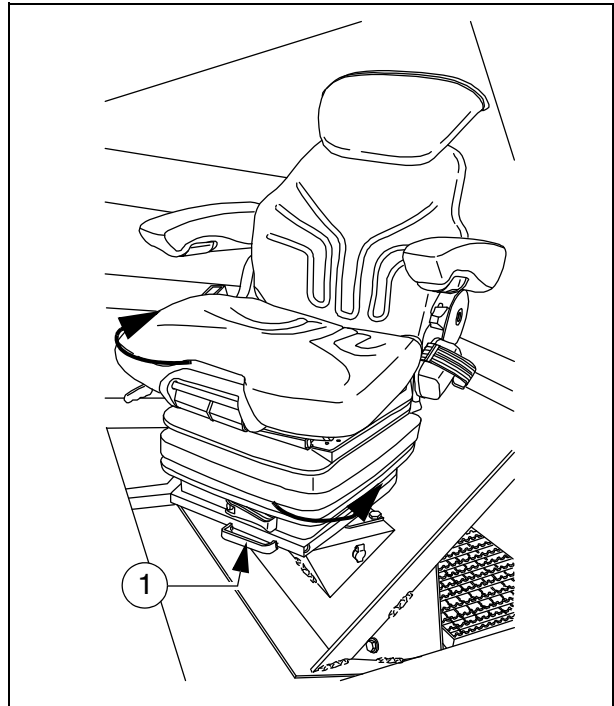


### Seat console storage compartment



Beneath both seat consoles, there is a storage compartment which can be locked (1).



Lock the storage compartments at the end of work.

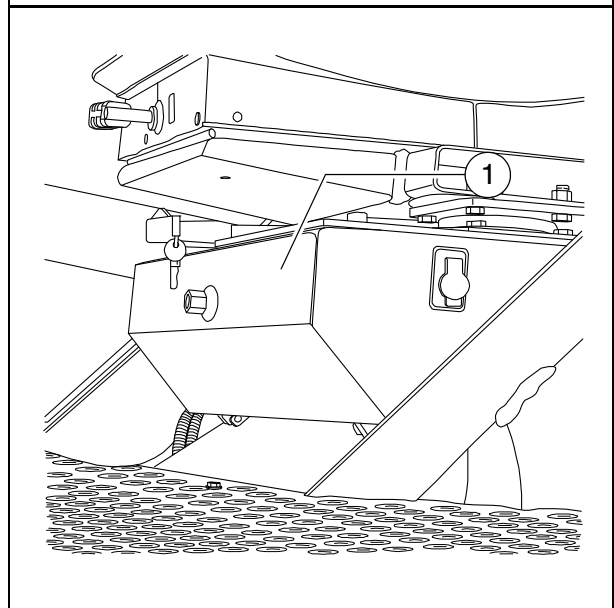

## Driver's seat, type I



To avoid damage to health, the individual seat settings should be checked and adjusted before starting the vehicle.




After locking the individual elements, it must no longer be possible to shift them to another position.

- **Weight setting (1):** The relevant driver's weight should be set by turning the weight adjustment lever when the driver's seat is unoccupied.
- **Weight indicator (2):** The set driver's weight can be read off at the viewing window.
- **Longitudinal adjustment (3):** Longitudinal adjustment is released by actuating the locking lever.

The locking lever must engage in the desired position.

- **Seat depth adjustment (4):** The seat depth can be individually adjusted. Raise the button to adjust the seat depth. The desired position is set by simultaneously sliding the seat surface forwards or backwards.
- **Seat inclination adjustment (5):** The seat surface's longitudinal inclination can be individually adjusted. Raise the button to adjust the inclination. The seat surface inclines to the desired position by simultaneously loading or relieving it.
- **Armrest inclination (6):** The armrest's longitudinal inclination can be adjusted by turning the hand wheel. Turning outwards raises the front of the armrest; turning inwards lowers it at the front.  
In addition, the armrests can be folded up fully.
- **Lumbar support (7):** Both the height and the extent of the convexity in the backrest padding can be individually adjusted by turning the hand wheel to the left or right.
- **Backrest adjustment (8):** The backrest is adjusted via the locking lever. The locking lever must engage in the desired position.
- **Back extension (9):** By pulling out via perceptible detents, the height can be individually adjusted up to a limit stop. To remove the back extension, the limit stop is overcome with a jolt.
- **Seat heating ON/OFF (10):** The seat heating is switched on and off by actuating the switch.
- **Seat belt (11):** The seat belt must be applied before starting up the vehicle.

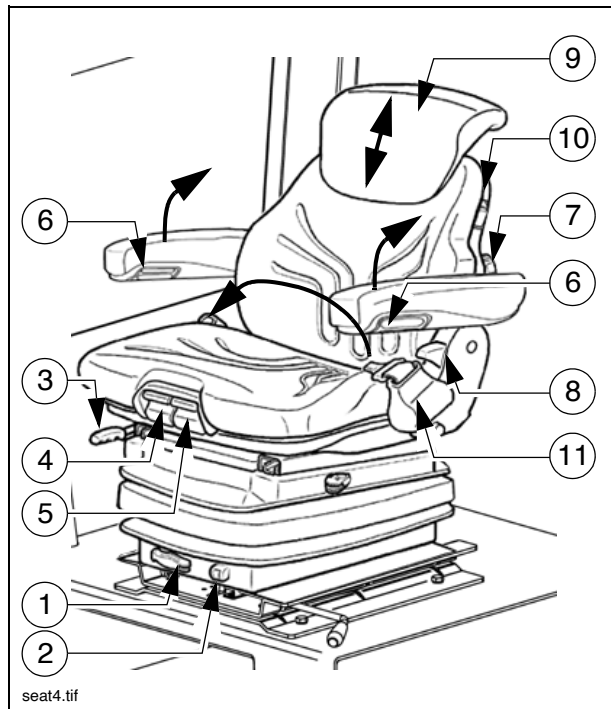

The seat belts must be replaced following an accident.

## Driver's seat, type II




To avoid damage to health, the individual seat settings should be checked and adjusted before starting the vehicle.



After locking the individual elements, it must no longer be possible to shift them to another position.

- **Weight setting (1):** The relevant driver's weight should be set by turning the weight adjustment lever when the driver's seat is unoccupied.
- **Weight indicator (2):** The set driver's weight can be read off at the viewing window.
- **Longitudinal adjustment (3):** Longitudinal adjustment is released by actuating the locking lever. The locking lever must engage in the desired position.
- **Seat height adjustment (4):** The seat height can be individually adjusted. Turn the handle in the desired direction to adjust the seat height.
- **Backrest adjustment (5):** The backrest inclination can be continuously adjusted. Turn the handle in the desired direction to adjust.
- **Armrest inclination (6):** The armrest's longitudinal inclination can be adjusted by turning the hand wheel. Turning outwards raises the front of the armrest; turning inwards lowers it at the front. In addition, the armrests can be folded up fully.
- **Lumbar support (7):** Both the height and the extent of the convexity in the backrest padding can be individually adjusted by turning the hand wheel to the left or right.
- **Seat belt (8):** The seat belt must be applied before starting up the vehicle.

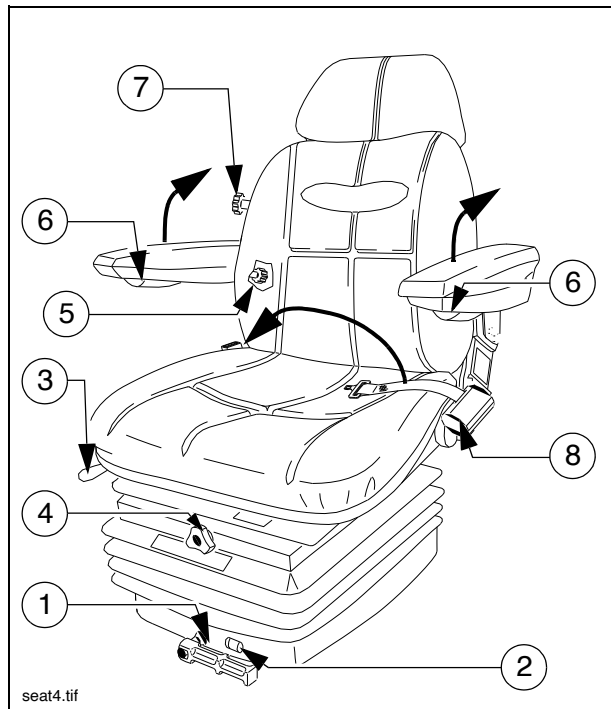

The seat belts must be replaced following an accident.

### Service brake ("foot brake") (○)

The brake pedal is in front of the driver's seat.




When the brake is actuated, the speed of the travel drive is automatically reduced (regardless of the drive lever position).



If the vehicle was brought to a standstill with the service brake, it cannot be driven away again until after the drive lever has been put into neutral!



For transportation, the driver's seat must be on the same side as the service brake.

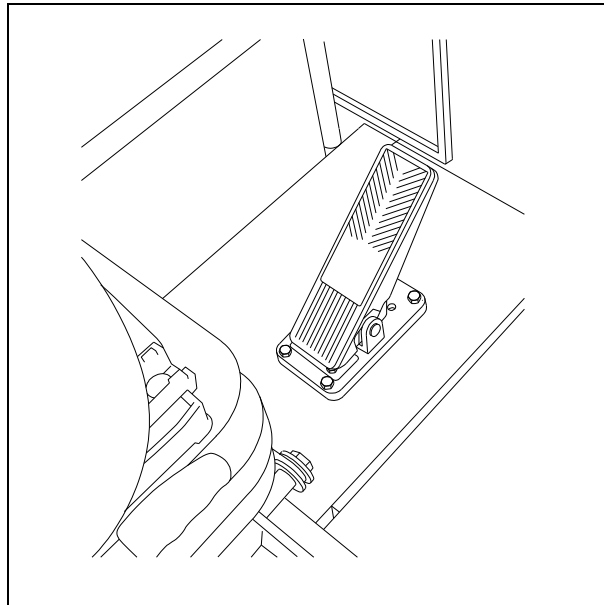




## Fuse box

The terminal box, which contains all fuses and relays, etc. is located beneath the central control platform floor panel.



An assignment plan for fuses and relays can be found in chapter F8.

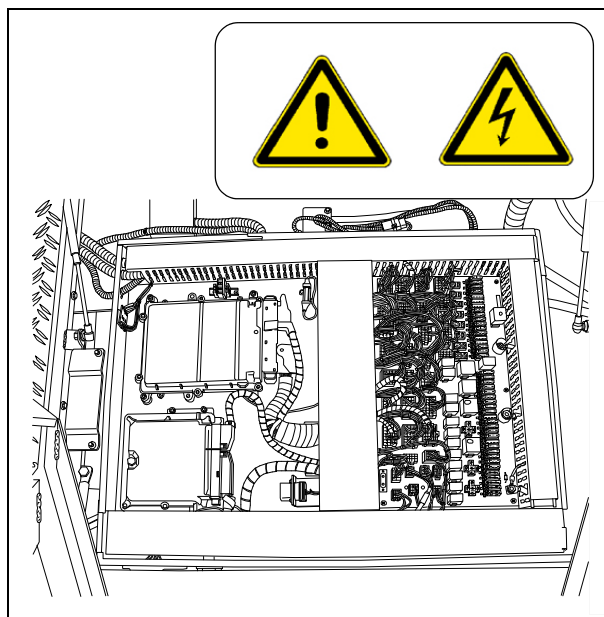

## Batteries

The batteries (1) of the 24 V system are located in the vehicle footwell.



For the specifications, refer to chapter B, "Technical Data". For maintenance, see chapter "F".



External starting only according to the instructions (see section "Starting the paver finisher, external starting (starting aid)")

## Main battery switch

The main battery switch separates the current circuit from the battery to the main fuse.




For the assignment of all fuses, see chapter F

- To interrupt the battery's current circuit, turn the key pin (3) to the left and pull it out.



Do not lose the key pin as in this case the paver finisher can no longer be moved!

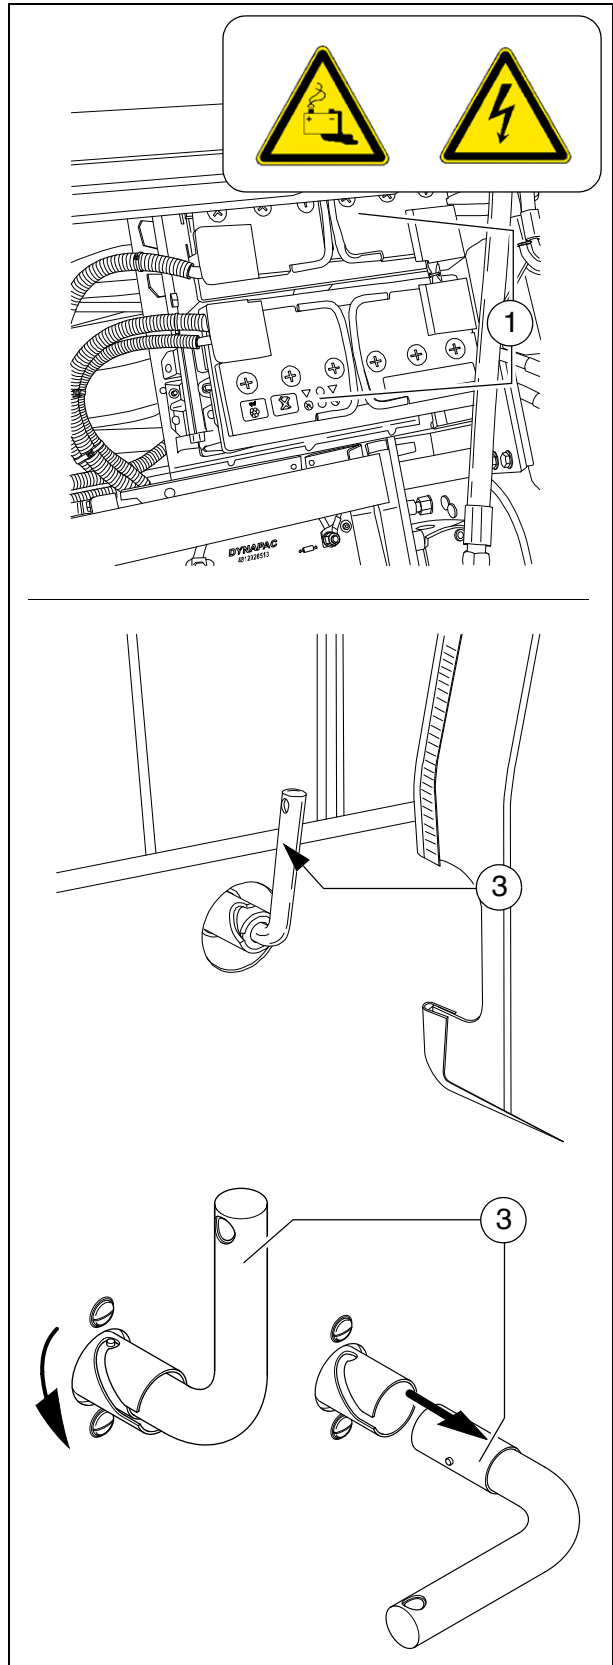


## Hopper transport safeguard

Before transporting or in order to park the paver finisher, the hopper halves must be swung upwards and the transport safeguards for the hopper must be inserted on both sides of the vehicle.

- Pull the locking pin (1) and place the transport safeguard (2) above the hopper cylinder's piston rod.



Without transport safeguards inserted, the hopper halves will slowly open; danger during transportation!

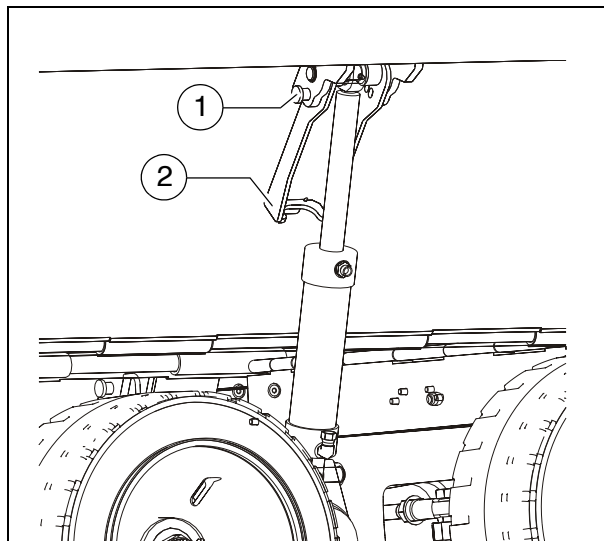

## Screed lock, mechanical (○)




The screed locks must additionally be engaged on both sides of the vehicle prior to transportation with the screed lifted.



Transportation with an unsecured screed leads to a risk of accidents!

- Lift the screed.
- On both sides of the paver finisher, slide the screed lock beneath the crossbeams using the lever (1); place the lever in the detent position.

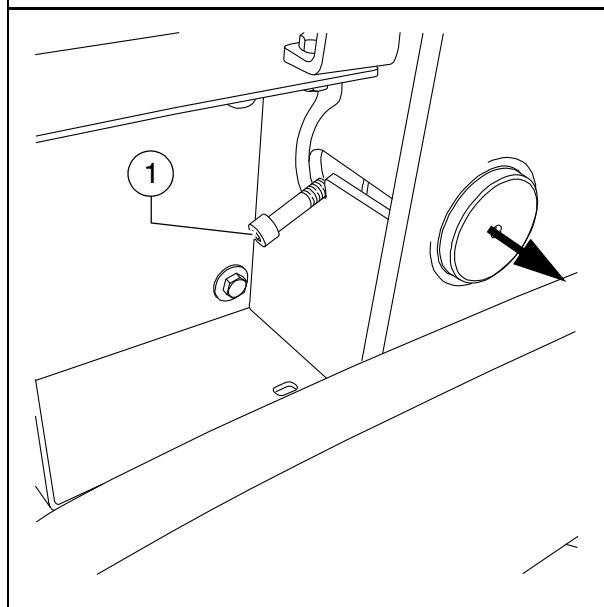

### ATTENTION!

Insert screed lock only at crown adjustment "zero"!

Screed lock only for transportation!

Do not enter or work under screed only secured with screed lock for transportation!

**Danger of accidents!**

### Screed lock, hydraulic (○)



The screed locks must additionally be extended on both sides of the vehicle prior to transportation with the screed lifted.




Transportation with an unsecured screed leads to a risk of accidents!

- Lift the screed.
- Activate the function on the operating panel.



The two screed locks (1) extend hydraulically.

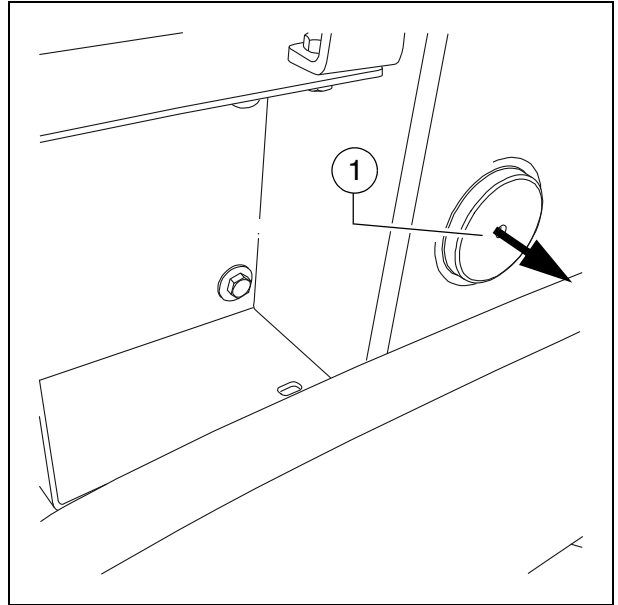

### **ATTENTION!**

Insert screed lock only at crown adjustment "zero"!

Screed lock only for transportation!

Do not enter or work under screed only secured with screed lock for transportation!

**Danger of accidents!**

## Paving thickness indicator

Two scales, on which the currently set paving thickness can be read off, are located on the left and right sides of the vehicle.

- Loosen the clamping bolt (1) to change the position of the indicator.



In normal paving situations, the same paving thickness should be set on both sides of the vehicle!

Other displays (○) are on the crossbeam guide.


- To change the reading position, the scale (2) can be raised and lowered again in one of the adjacent locating bores (3).
- The pointer (4) can be swivelled to different positions using the locking knob (5).



The scale (2) and pointer (4) must be swivelled in completely to transport the machine.



Avoid parallax errors!

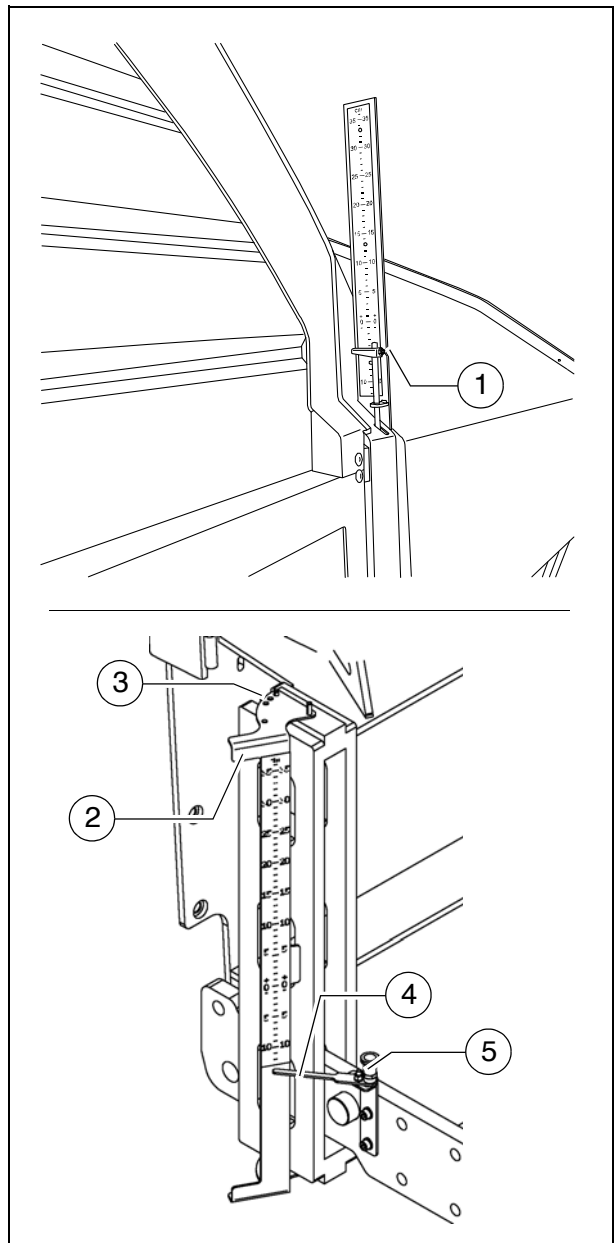

### Auger lighting (○)




Two swivelling headlights (1) are located on the auger box for illuminating the auger compartment.

- They are engaged together with the working lights.



These are activated together with the other working lights on the operating panel!

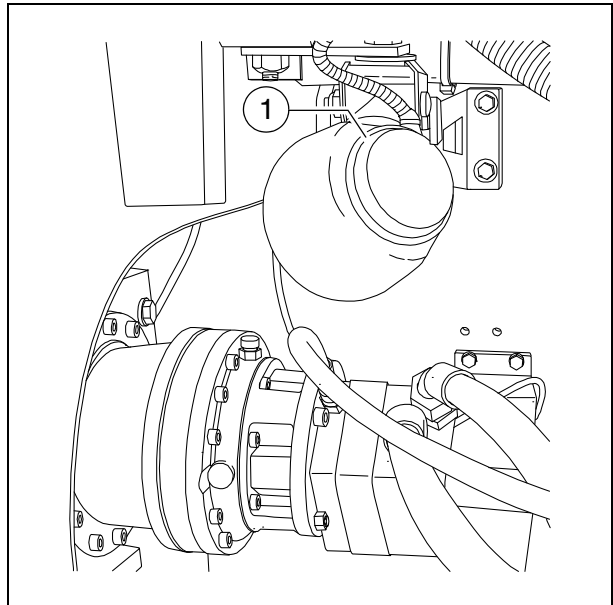


### Engine compartment lighting (○)



The engine compartment lighting can be activated when the ignition is switched on.

- On/off switch (1) for the engine compartment lighting.

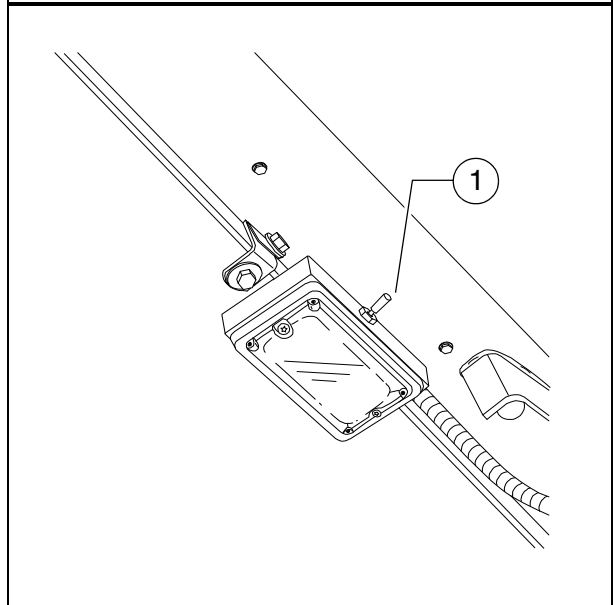

## Xenon working light (○)




Xenon working lights have a secondary high voltagesource.  
Only a qualified electrician may work on the lighting after the primary voltage has been switched off.



Please contact a Dynapac dealer!



Caution, environmentally harmful waste!  
Working lights with Xenon lamps have a gas discharge lamp containing mercury (Hg). A defective lamp is deemed to be hazardous waste and must be disposed of in accordance with the local regulations.

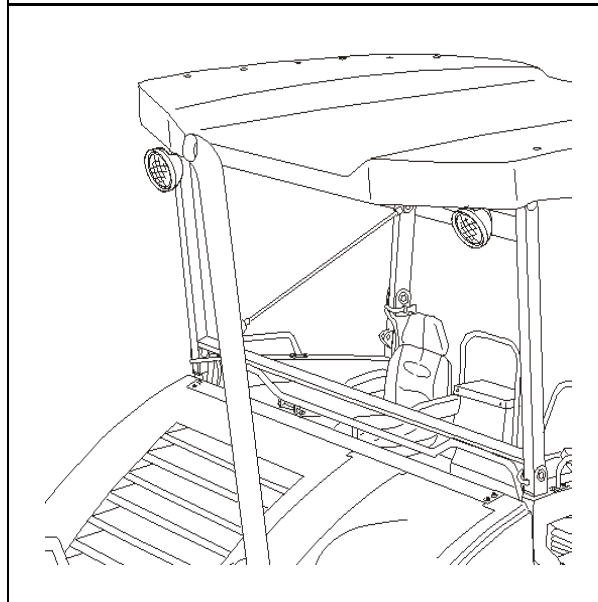


## LED working light (○)

There are two LED spotlights (1) at the front of the machine and also at the back.



Always align the working lights to avoid dazzling the operating personnel or other road users!

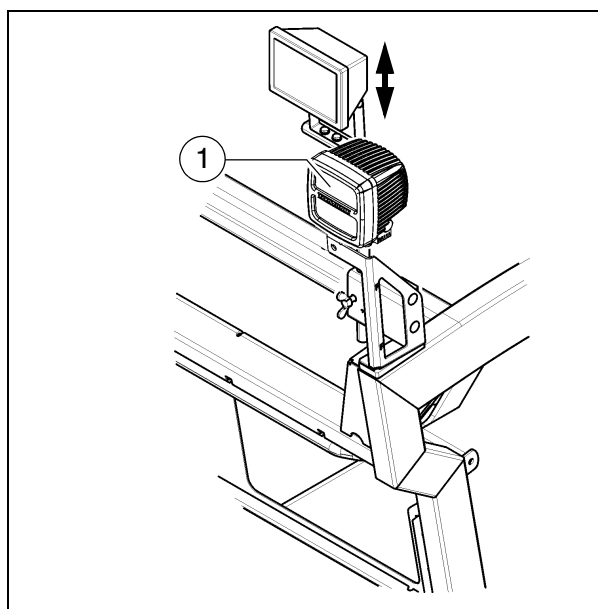

## 500 watt spotlight (○)

There are two halogen spotlights (2) at the front of the machine and also at the back.



- For machine without roof: use clamping bolt (3) to change the height of the spotlights.



Always align the working lights to avoid dazzling the operating personnel or other road users!




Danger of burning! The working lights get very hot!  
Do not touch working lights that are switched on or hot!



When equipped with an electric screed, it is possible for the lamps to flicker irregularly during the heating-up phase with simultaneous operation of 500 watt spotlights (○) and the power moon (○).

Preferably only one type of lighting should be used during the heating-up phase.

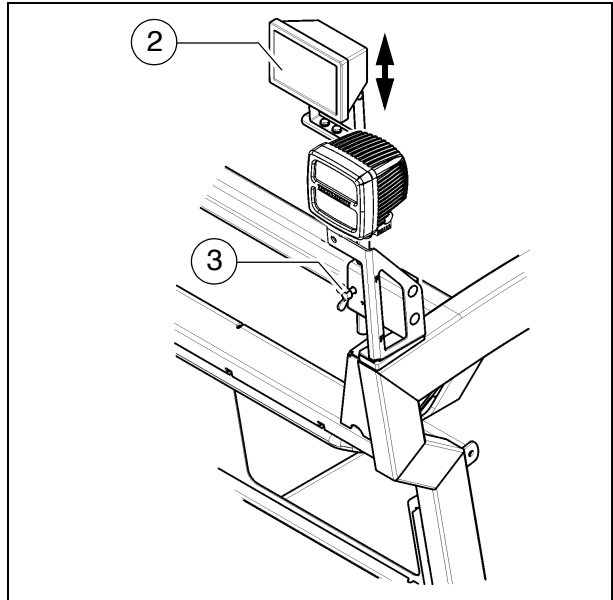


## Camera (○)

There is a camera (1) at the front of the machine and also at the back.

- The camera can be swivelled in various directions.



The pictures are shown in the control panel display.

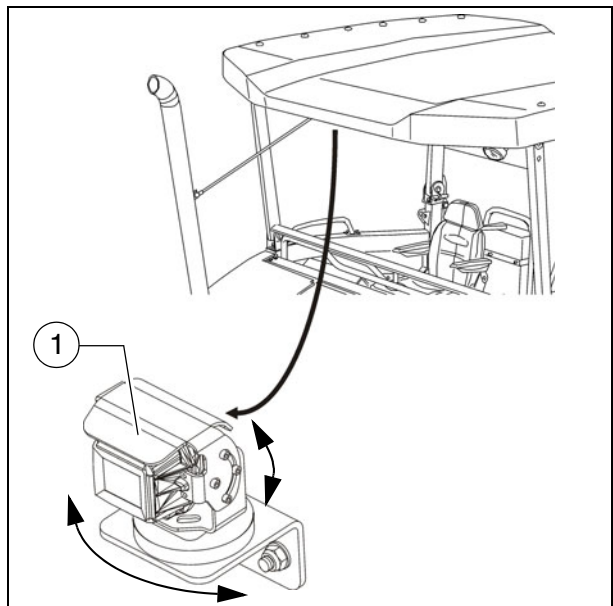




## Auger height adjustment ratchet (○)

For mechanical adjustment of the auger height

- Set the ratchet direction lever (1) to the clockwise or anti-clockwise direction. Turning anti-clockwise lowers the auger, turning clockwise lifts the auger.
- Actuate the ratchet lever (2)
- Set the desired height by alternately actuating the left and right ratchets.

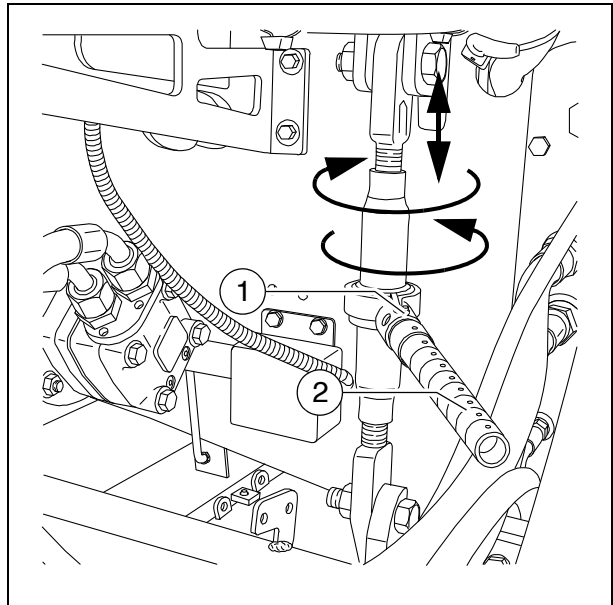

The current height can be read on both auger height indicators.



Observe the notes on adjusting the auger height in the chapter "Set-up and modification"!

## Auger height indicators

A scale (1), on which the currently set auger height can be read off, is located on the left and right sides of the ladder.




Display in cm


- Loosen the clamping bolt (2) to change the position of the indicator.



When setting the auger height, adjustment must be carried out evenly on both sides to prevent the auger from jamming!

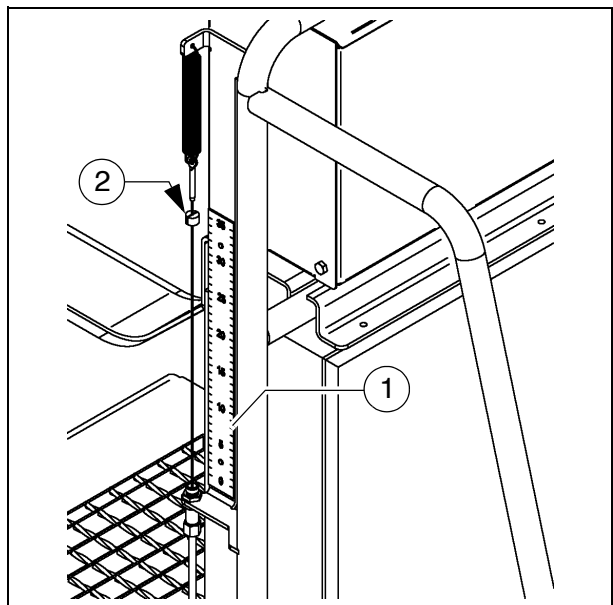

## Sensor rod / sensor rod extension

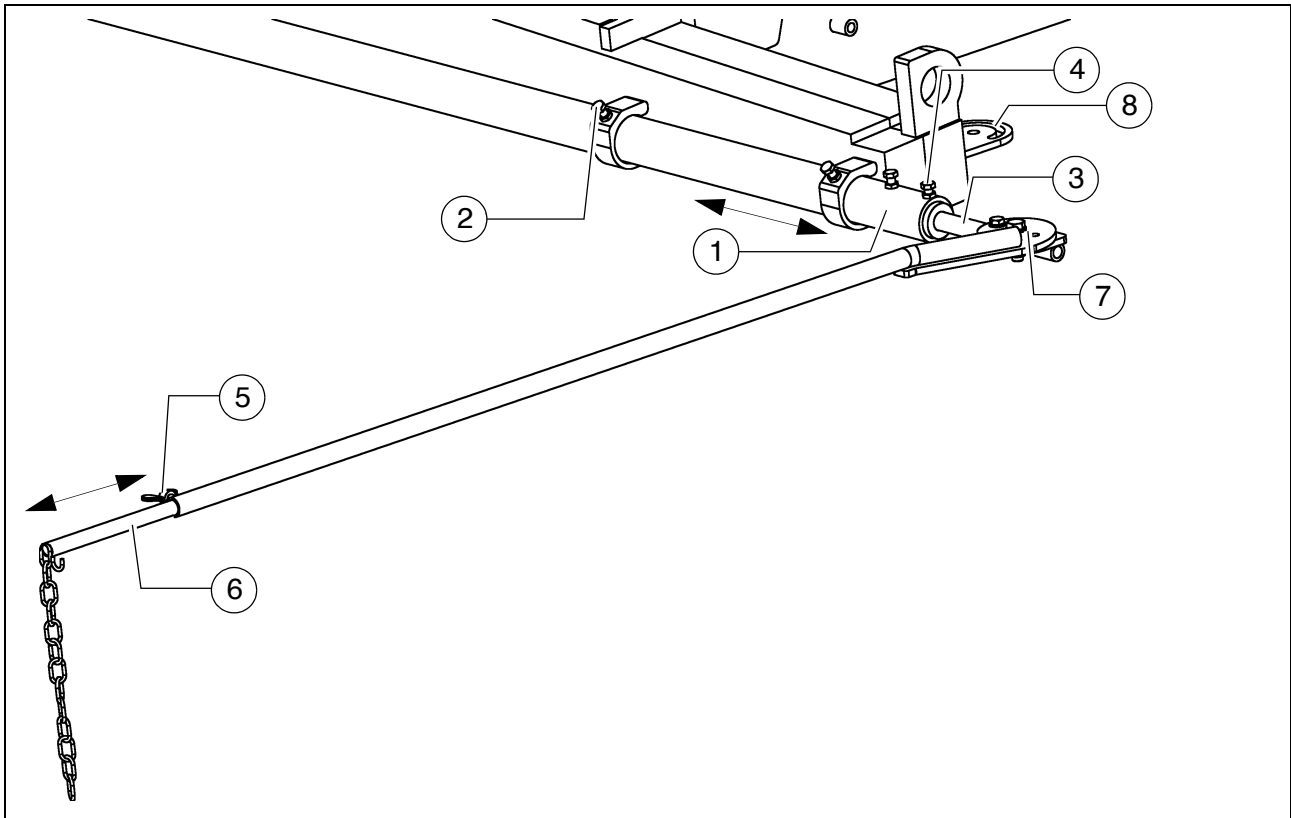

The sensor rod acts as an orientation aid for the vehicle driver during paving. Along the defined paving route, the vehicle driver can use the sensor rod to follow a tensioned reference wire or another marking.

The sensor rod runs along the reference wire or over the marking. Steering deviations can therefore be ascertained and corrected by the driver.



Use of the sensor rod increases the basic width of the paver finisher.



If the sensor rod or sensor rod extension are used, ensure that there is no one in the vehicle's danger area!



The sensor rod is adjusted when the vehicle is positioned, with its set working width, on the paving route and the reference marking running parallel to the paving route has been set up.

Adjusting the sensor rod:

- The sensor rod (1) is located on the face end of the vehicle and can be pulled out to the left or right after releasing the four clamping bolts (2).



In the case of larger working widths, the sensor rod extension (3) is inserted into the sensor rod.

- Once the sensor rod has been set to the desired width, the clamping bolts (2) must be tightened again.
- The inserted sensor rod extension is secured with the bolts (4).



Depending on the side of the vehicle on which the sensor rod extension is used, the entire sensor rod may have to be removed and re-inserted on the other side of the vehicle!

- After releasing the wing nuts (5), the end section of the sensor rod extension (6) can be set to the desired length; the angle can additionally be changed by swivelling on the joint (7).



Either the adjustable indicator or the chain can be used as an aid to orientation.



Tighten all assembly parts properly after setting up!



The sensor rod extension's joint (7) can be mounted on both sides of the vehicle in position (8).

At this point, the sensor rod extension can be swivelled in for transporting the vehicle without increasing the vehicle's basic width.


### Manual separator fluid spray (○)

Used to spray the parts coming into contact with asphalt with a separator emulsion.

- Remove the spray (1) from its bracket.
- Build up pressure by actuating the pump lever (2).
  - The pressure is indicated on the manometer (3).
- Actuate the manual valve (4) to spray.
- On completion of work, secure the manual spray in its bracket with a lock (5).



Do not spray into open flame or on hot surface. Danger of explosion!

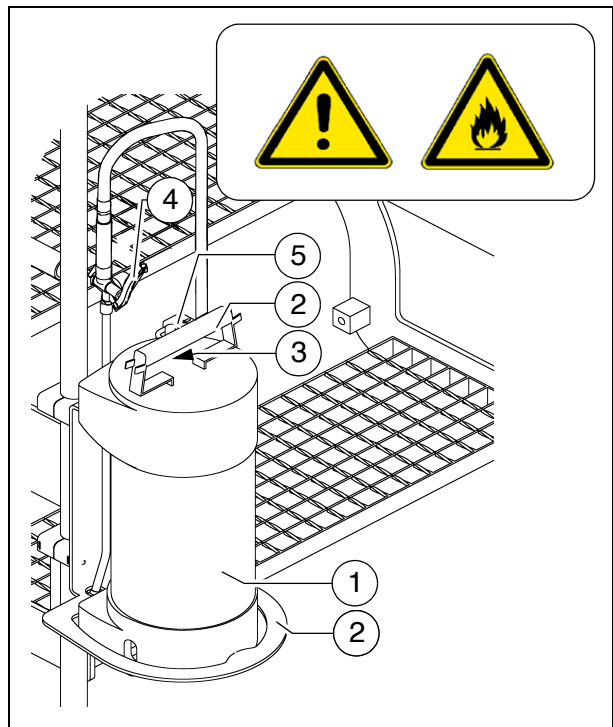

## Separator fluid spraying system (○)

Used to spray the parts coming into contact with asphalt with a separator emulsion.

- Connect the spray hose (1) with quick-action coupling (2).



Only switch on the spraying system when the diesel engine is running; otherwise, the battery will be discharged. Switch off after use.



A permanently installed hose package (3) for the spraying system is available as an option.

- Pull the hose out of the device until a click is audible. When released, the hose automatically engages here. The hose is automatically retracted into the guide after pulling and discharging again.
- Actuate button (4) to activate and deactivate the pump.
  - The indicator lamp (5) lights up when the emulsion pump is running.
- Actuate the manual valve (6) to spray.



Do not spray into open flame or on hot surface! Danger of explosion!




The spraying system is fed by a canister (7) at the vehicle step.



Refill the canister only while the vehicle is stationary!

- If the system is not in use, place the spray lance (8) in the provided holder (9).
- If the spray hose is not in use, it can be placed in its bracket (10).

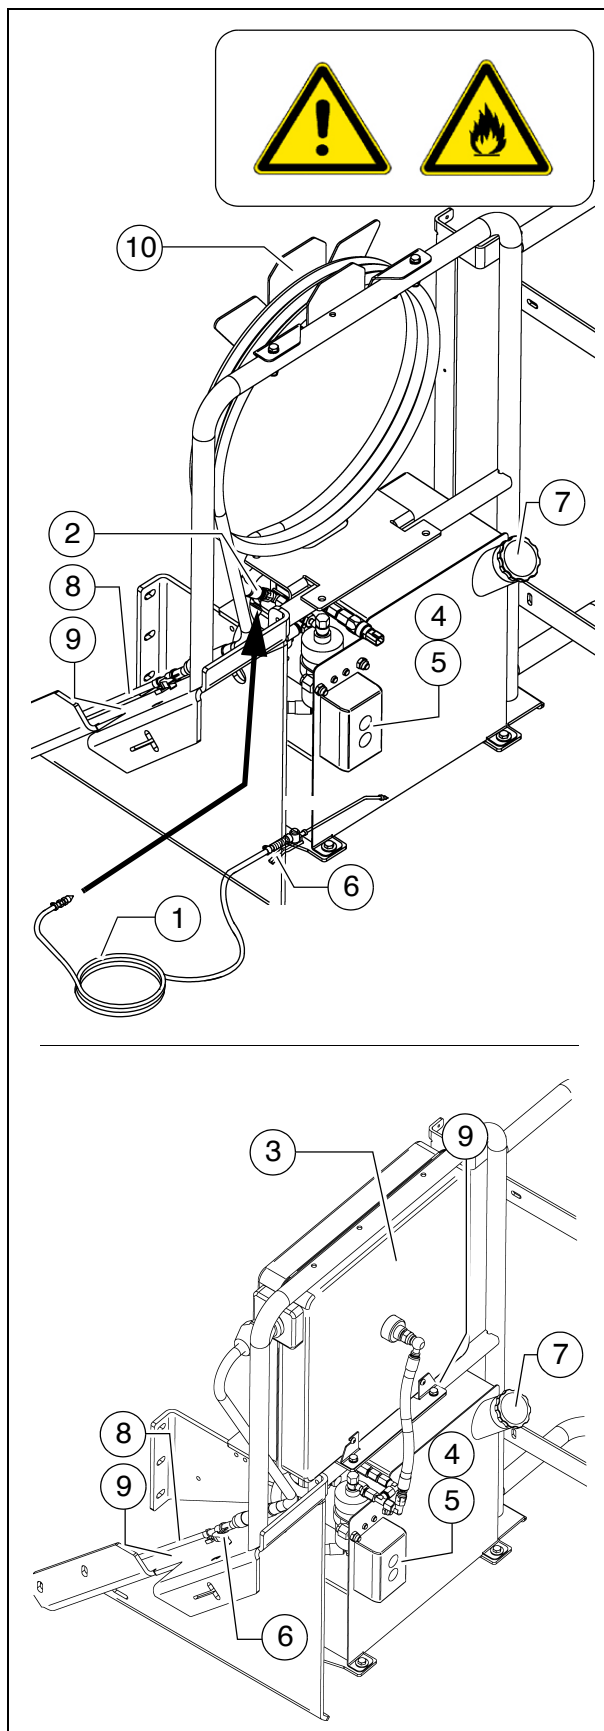

## Conveyor limit switches - PLC version


The mechanical conveyor limit switches (1) or the ultrasonic conveyor limit switches (2) control the material flow on the relevant half of the conveyor. The conveyors should stop when the material has roughly reached the area below the auger tube.



This requires that the auger height has been adjusted correctly (see chapter E).



In vehicles with a PLC control system, the deactivation point is set on the remote control.

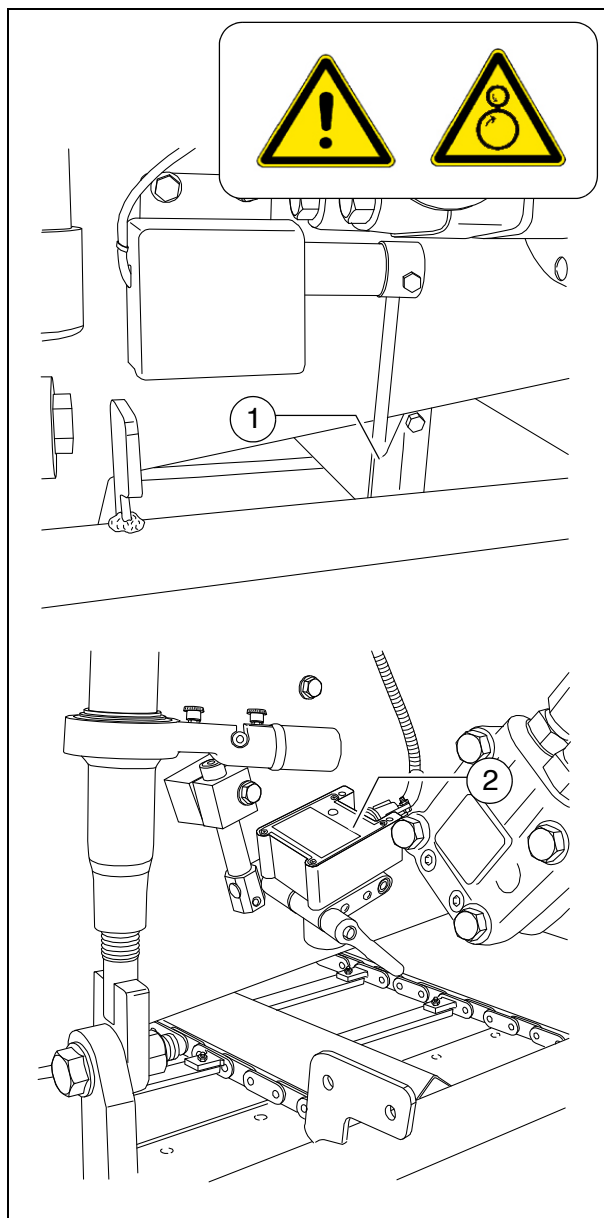


### Conveyor limit switches - conventional version

The mechanical conveyor limit switches (1) control the material flow on the relevant half of the conveyor. The conveyors should stop when the material has roughly reached the area below the auger tube.



This requires that the auger height has been adjusted correctly (see chapter E).

- To set the deactivation point, release the two mounting screws (2) and set the switch to the required height.
- After adjusting, retighten all mounting parts properly.

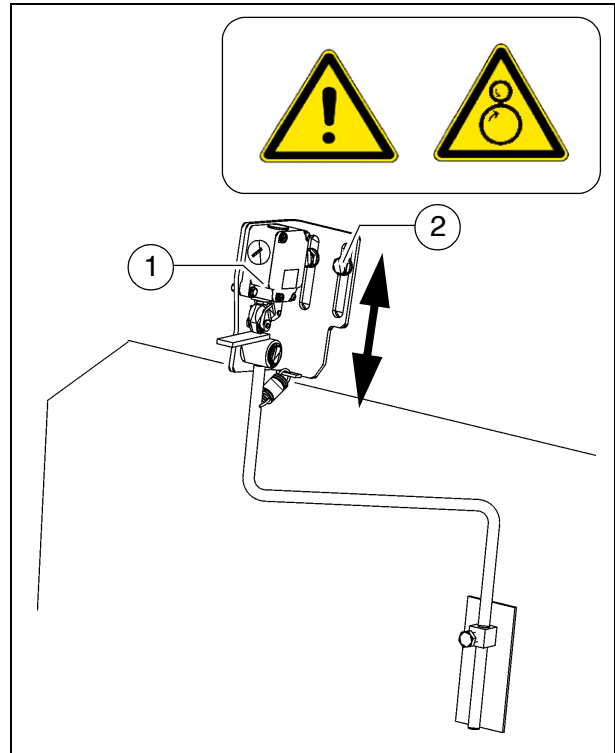


### Ultrasonic auger limit switches (left and right) - PLC version



The limit switches control the material flow at the relevant half of the auger without contact.

The ultrasonic sensor (1) is secured to the side shield via a bracket (2).

- To adjust, release the clamping lever / stop screw (3) and adjust the sensor's angle.
- After adjusting, retighten all mounting parts properly.

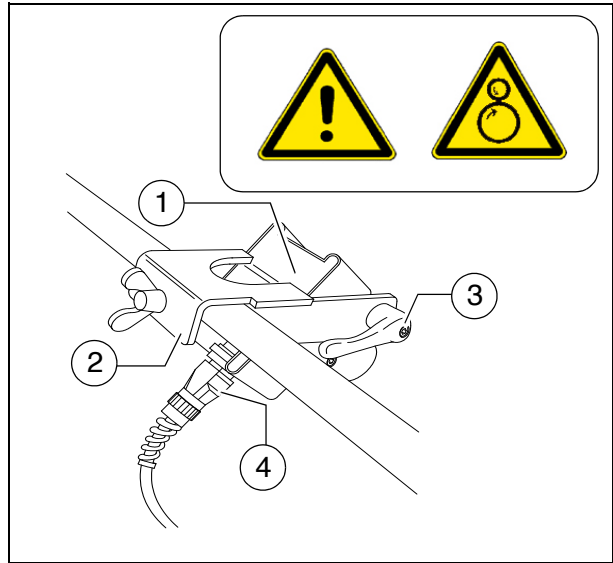

The connection cables (4) are connected to the relevant sockets on the remote control bracket.



The sensors should be adjusted so that 2/3 of the augers are covered with the paving material.



The paving material must be conveyed over the full working width.



We recommend adjusting the limit switch positions during material distribution.



In vehicles with a PLC control system, the deactivation point is set on the remote control.



### Ultrasonic auger limit switches (left and right) - conventional version



The limit switches control the material flow at the relevant half of the auger without contact.

The ultrasonic sensor (1) is secured to the side shield via a bracket (2).

- To adjust the sensor angle, loosen the clamps (3) and swivel the bracket.
- To set the sensor height / the deactivation point, loosen the star handles (4) and adjust the linkage to the required length.
- After adjusting, retighten all mounting parts properly.



The connection cables are connected to the relevant sockets on the remote control bracket.




The sensors should be adjusted so that 2/3 of the augers are covered with the paving material.



The paving material must be conveyed over the full working width.



We recommend adjusting the limit switch positions during material distribution.

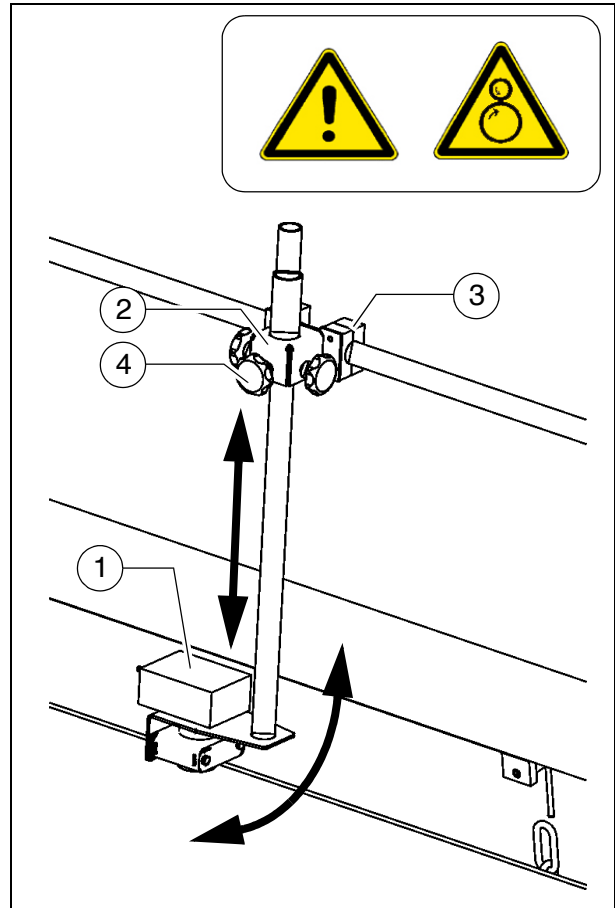

### 24 volt / 12 volt sockets (○)


A socket (1) is located beneath the left/ right seat consoles.

Additional working lights can be connected here, for example.

- Right seat console: 12V socket
- Left seat console: 24V socket



Voltage is present when the main switch is switched on.

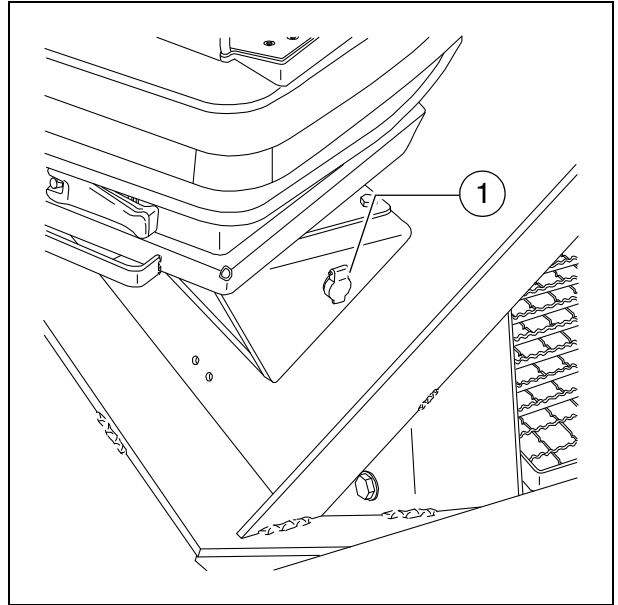


### Pressure control valve for screed charging/relieving

A valve (1) is used to set the pressure for additional screed charging/relieving.



Switching on, see screed charging/relieving (chapter "Operating panel", "Operation").

- For pressure indication, see manometer (3).

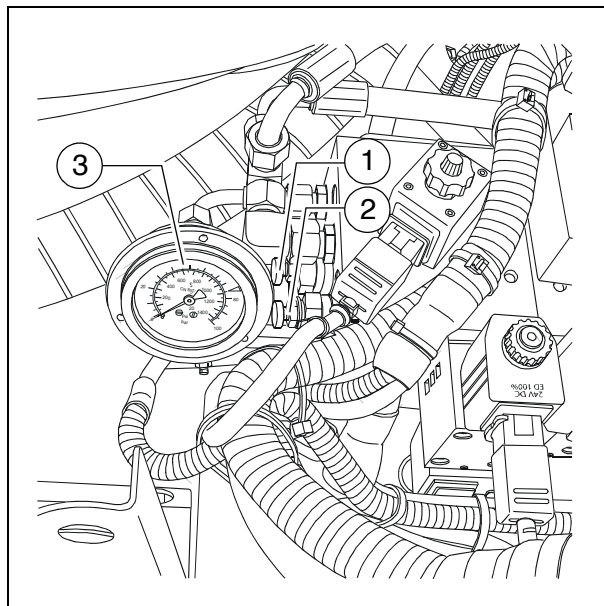

### Pressure control valve for paving stop with relieving

This is used to set the pressure for "Screed control with paver finisher stop - floating stop with relieving".

- Switching on, see screed stop / paving stop (Chapters "Operating panel", "Operation").
- For pressure indication, see manometer (3).

### Manometer for screed charging/relieving

The manometer (3) indicates the pressure for:

- Screed charging/relieving when the drive lever is in the third position (pressure setting with valve (1)).

### Central lubrication system (○)

The central lubrication system is activated in automatic mode as soon as the drive engine is started.


- Pumping time: 4 min
- Pause time: 2 h



It is prohibited to change the factory-set durations of pumping and break without consulting the technical customer service!




Changing the duration of lubrication and breaks may be necessary when laying mineral or cement bound material mix.

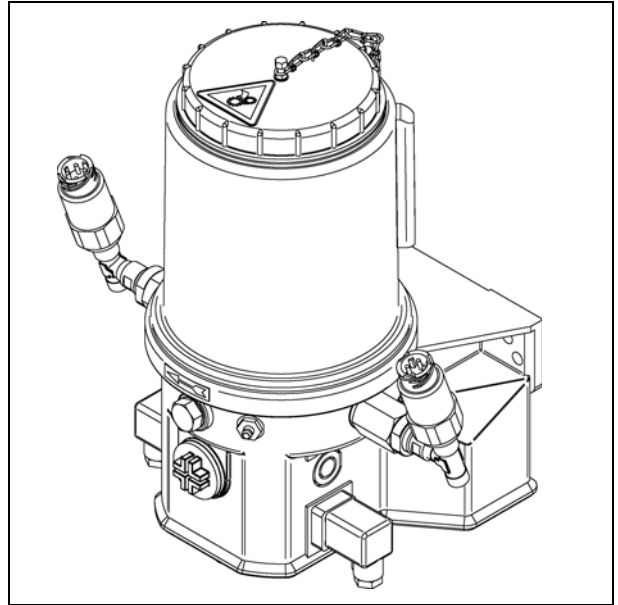

## Screed eccentric adjustment

To pave thicker layers of material, if the piston rods in the levelling cylinder are operating close to their limit position and if the desired paving thickness cannot be reached, it is possible to alter the approach angle of the screed by adjusting the eccentric.

- Pos. I: Paving thickness up to approx. 7 cm
- Pos. II Paving thickness of approx. 7 cm to approx. 14 cm
- Pos. III Paving thickness above approx. 14 cm

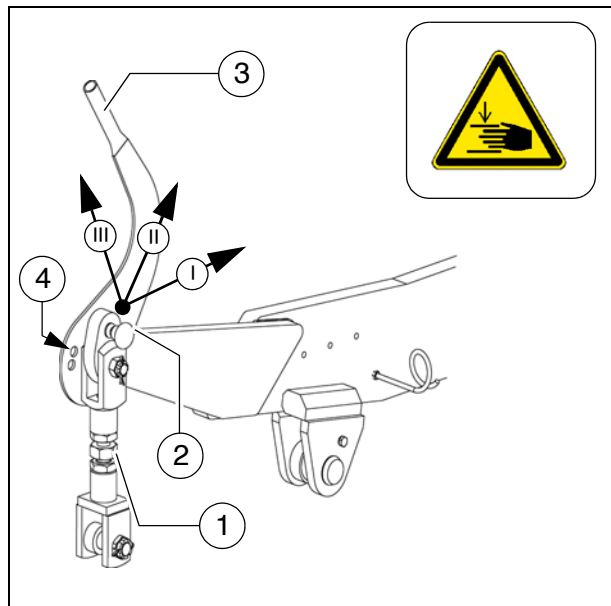

- The spindle (1) is not adjusted.
- Unfasten locks (2) for eccentric adjustment.
- Swivel screed to the desired position using the lever (3), and engage the locking knob again.



If the levelling unit is connected to a height controller, this has the function of balancing out any rapid rise in the screed position: The levelling cylinders are extended until the correct height is reached.

- The change in approach angle can only take place slowly and uniformly on both sides at once during paving operation, and involves the use of eccentric adjustments. Failing this, any rapid response in the screed could easily cause waves to appear on the road surface.

The setting process should therefore take place before work starts!



When equipped with rigid screed, the second hole (4) is intended for (item I).

## Push roller crossbar, adjustable

For adaptation to various truck design types, the push roller crossbar (1) can be shifted to two positions.




The adjustment travel is 90 mm.

- Close the hopper halves to lift the hopper flap (2).
- After removing the bolts (4), remove the locking plate (3) on the lower side of the crossbar.
- Remove insert plate (5).
- Move the push roller crossbar as far as it will go to the front / rear position.




Shift the push roller crossbar at the towing eye (6) or use a suitable assembly lever in its guide (left and right) to push it into the corresponding position.

- Turn the insert plate (5) 180° and reinsert into the groove in the front or rear position.
- Properly reinstall the locking plate (3) with bolts (4).

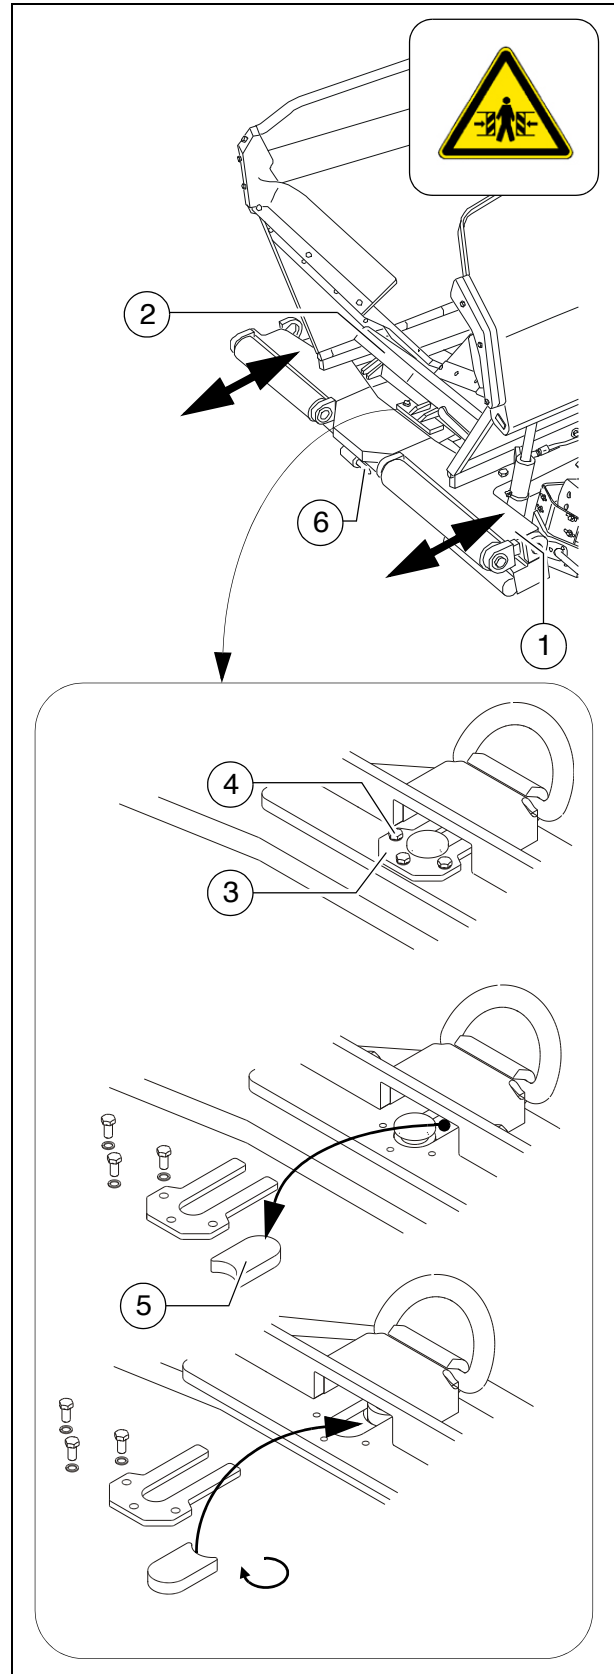



### Storage box


 For storing the on-board tool kit, remote controls and other accessories.

 Lock the storage box at the end of work.

### Fire extinguisher (○)

 The paver finisher personnel must be familiarised with fire extinguisher (2) operation.

 Observe the inspection intervals for the fire extinguisher!

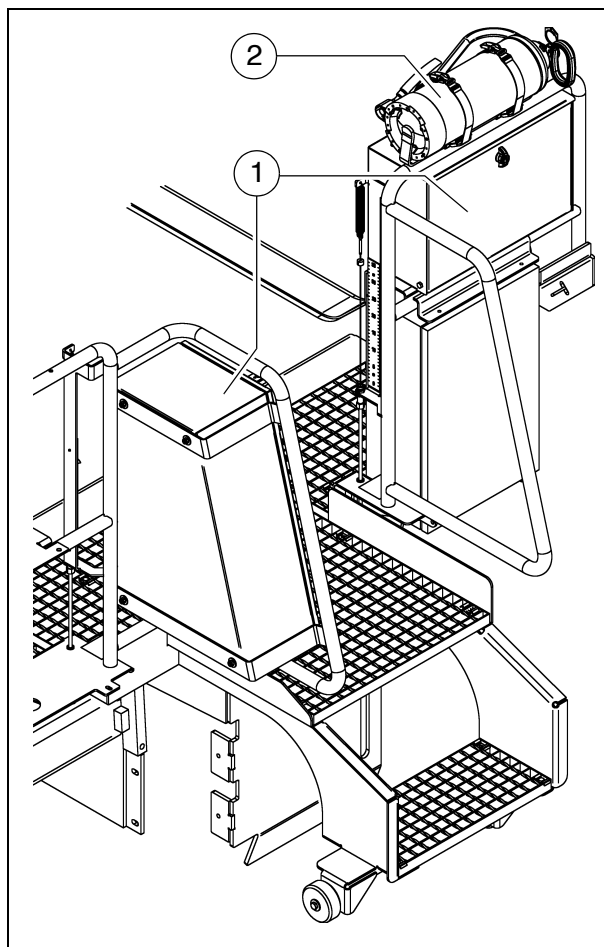

## Rotary beacon (○)




The function of the rotary beacon must be checked daily before starting work.

- Place the rotary beacon onto the plug-in contact and secure with a wing bolt (1).
- Slide the rotary beacon with the tube (2) out to the desired height and secure with the clamping bolt (3).
- Vehicle version with protective roof:  
Raise the bracket (4), swivel to the outer position and allow to engage there.
- Activate the function on the operating panel as necessary.



The rotary beacon is easy to remove and should be stored securely at the end of work.

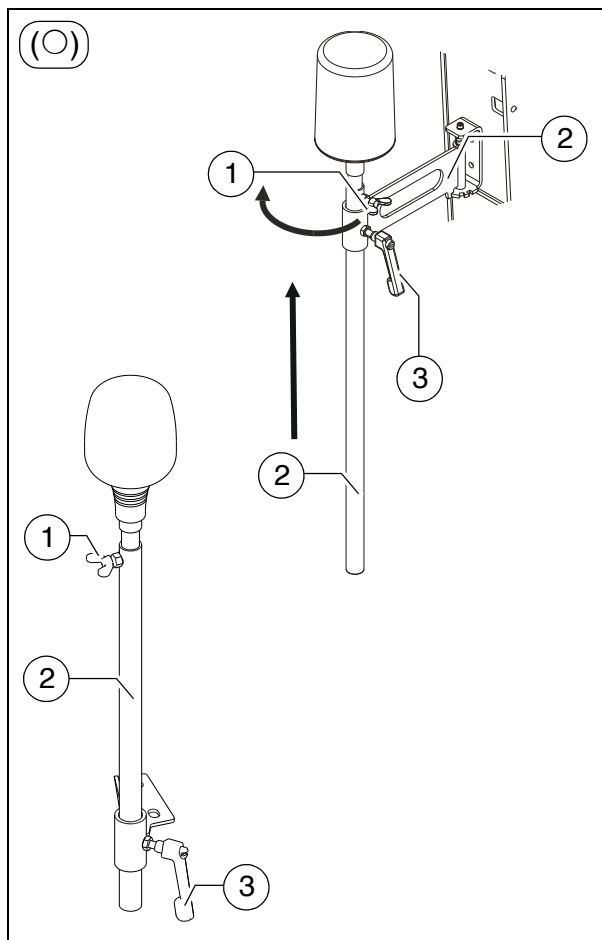



### Fuelling pump (○)




The fuelling pump must only be used to pump diesel fuel.



Foreign bodies which are larger than the mesh size of the intake cage (1) lead to damage. An intake cage must therefore always be used.



Each time fuelling is carried out, the intake cage (1) must be checked for damage, and must be replaced if damaged. Do not work without it under any circumstances, as the fuelling pump is not otherwise protected against foreign bodies.

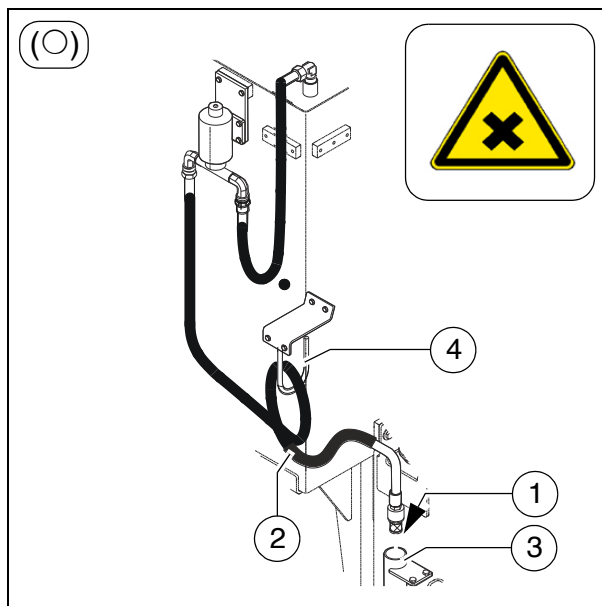

- Insert the suction hose (2) into the container which is to be emptied.



To enable the container to be emptied completely, the suction hose must reach down to the floor of the container.

- Activate the function on the operating panel as necessary.



The fuelling pump does not shut off automatically. Therefore, never leave the pump unattended when fuelling!



Never operate the pump without pumping a fluid. The risk of damaging your diesel pump is run if it runs dry.

- To end fuelling, switch the function "off" on the operating panel.

- Place the end of the hose, with the intake cage, into its cup (3) so that no diesel is able to escape into the environment.

- Gather up the hose and place it over the bracket (4).

## Power moon (○)

The power moon is a special, illuminated balloon with shadow-reducing and anti-dazzle light.



Use of the power moon increases the height of the paver finisher.



Note the passage height of bridges and tunnels.



The power moon must not be used in the vicinity of highly flammable materials (e.g. petrol and gas); a safety distance of at least 1 metre must be maintained from combustible materials.



A safety distance of at least 50 m must be maintained from high-voltage lines, and at least 2.5 m from railway track voltage lines.




The power moon must not be operated if the electric supply cables or connectors are damaged.


- Hold the handle (1) tightly and pull the detent pin (2) out.
- Press the handle down until the detent pin engages.



Before starting up, check whether the Velcro seal around the power moon is closed. If the skin is damaged, it must be repaired or replaced. The bulbs must be checked for firm seating and damage.

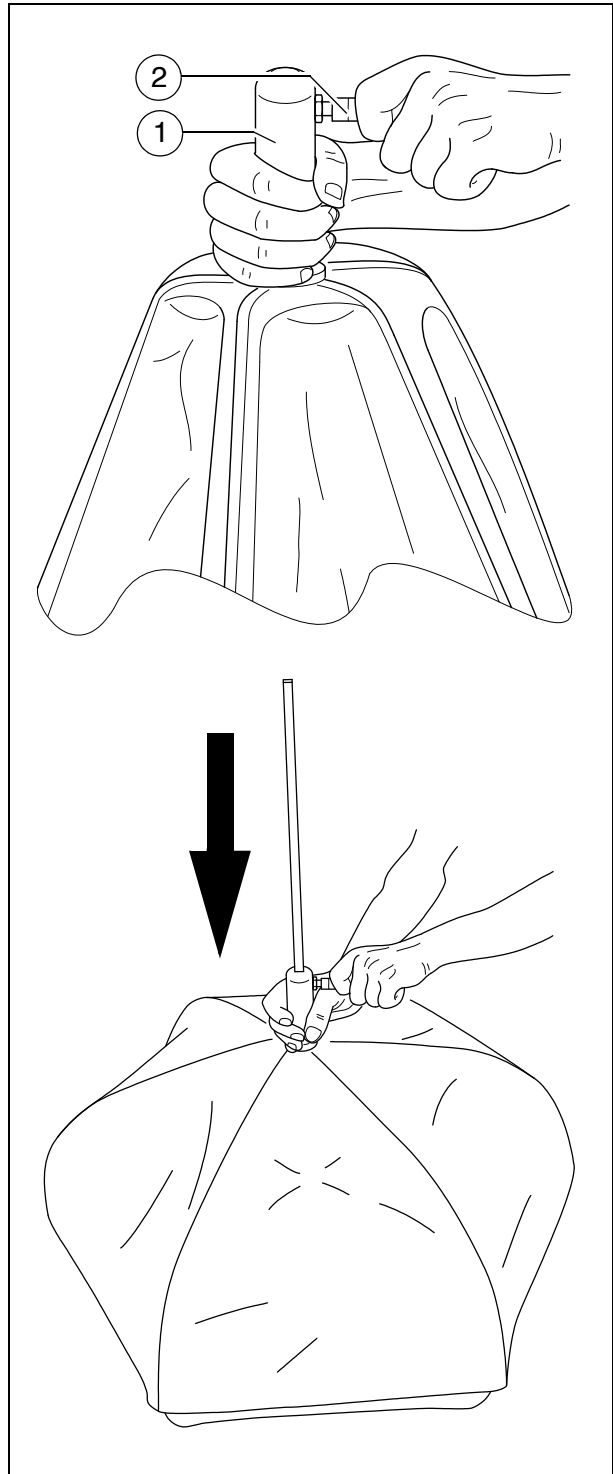

- Secure the lower part of the tripod (3) to the preassembled bracket (5) using the relevant assembly parts (4).
- Connect the tripod sections (6) and secure with stop screws (7).
- Place the power moon's journal (8) onto the top part of the tripod and secure with the stop screws (9).
- Finally, place the assembled tripod sections, together with the power moon, onto the lower part of the tripod (3) and secure with the stop screws (10).
- When the power moon has been fully assembled and secured, the power moon connector (11) can be connected to its current supply.
- The power moon is switched off by removing the power connector (11) from the socket.

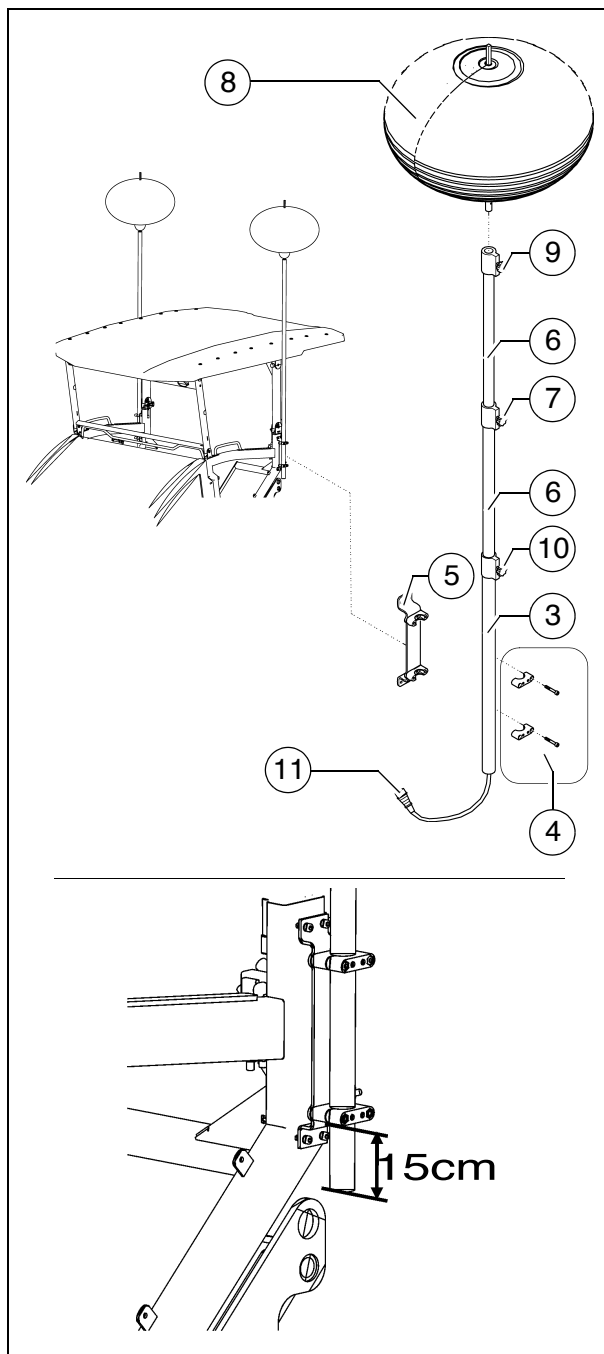

On assembly, make sure that the lower part of the tripod projects max. 15 cm out of the bracket. Risk of collision!



When equipped with an electric screed, it is possible for the lamps to flicker irregularly during the heating-up phase with simultaneous operation of 500 watt spotlights (○) and the power moon (○). Preferably only one type of lighting should be used during the heating-up phase.



## **D 42      Operation**

### **1      Preparing for operation**

#### **Required devices and aids**

To avoid delays on site, check before starting work whether or not the following devices and aids are present:

- Wheel loader for transporting heavy extension parts
- Diesel fuel
- Engine oil and hydraulic oil, lubricants
- Separator fluids (emulsion) and manual injector
- Two filled propane gas bottles
- Shovel and broom
- Scraper (spatula) for cleaning the auger and the hopper infeed area
- Parts that may become necessary for extending the auger
- Parts that may become necessary for extending the screed
- Percentage spirit level + levelling rail, 4 m long
- Levelling wire
- Protective clothing, signal vest, gloves, ear protection


## Before starting work


(in the morning or when starting paving)

- Heed the safety instructions.
- Check the personal protective equipment .
- Take an inspection walk around the paver finisher and check for leaks and damages.
- Install parts removed for transportation or for the night.
- When screed is operated with the optional gas heating system, open the closing valves and the main shut-off valve.
- Perform the check according to the following "Checklist for the machine operator".

## Check list for the machine operator

| Check!  | How?   |
|---|--|
| Emergency stop button <ul style="list-style-type: none"> <li>- on the operating panel</li> <li>- on both remote controls</li> </ul>   | Push in the button.<br>The diesel engine and all running drives must stop immediately.   |
| Steering  | The paver finisher must immediately follow every steering wheel movement in a precise manner. Check straight ahead travel.   |
| Horn <ul style="list-style-type: none"> <li>- on the operating panel</li> <li>- on both remote controls</li> </ul>  | Briefly press the horn button.<br>Horn signal must sound.  |
| Lights  | Switch on with the ignition key, walk around the paver finisher to check and switch off again.   |
| Screed hazard flasher<br>(with vario screeds)   | With the ignition switched on, press the switches for extending/retracting the screed parts.<br>The rear lights must flash.  |
| Gas heater system (○): <ul style="list-style-type: none"> <li>- Bottle holders</li> <li>- Bottle valves</li> <li>- Pressure reducer</li> <li>- Hose break safety devices</li> <li>- Shut-off valves</li> <li>- Main shut-off valve</li> <li>- Connections</li> <li>- Indicator lamps of the switch box</li> </ul> | Check: <ul style="list-style-type: none"> <li>- Secure seat</li> <li>- Cleanliness and tightness</li> <li>- Working pressure 1.5 bar</li> <li>- Function</li> <li>- Function</li> <li>- Function</li> <li>- Tightness</li> <li>- All indicator lamps must light up when the system is switched on</li> </ul> |

| Check!  | How?   |
|---|--|
| Auger coverings   | For larger working widths, the walkway plates must be extended and the auger tunnels must be covered.  |
| Screed covers and walkways                              | For larger working widths, the walkway plates must be extended.<br>Hinged walkway plates must be swung down.<br>Check that the side shields, the side plates and the covers are securely seated. |
| Screed transport safeguard                              | When the screed is lifted, it must be possible to push the locking rods sideways into the recesses in the crossbeams using the lever beneath the seat.   |
| Hopper transport safeguard                              | When the hopper is closed, it must be possible to fold the catches over the lock studs on the two lids of the hopper.  |
| Protective roof   | Both locking bolts must be in the provided bore hole.  |
| Other facilities:<br>- Engine panels<br>- Lateral flaps | Check that the hoods and flaps are securely seated.  |
| Accessories:<br>- First aid box                         | Equipment must be present on the vehicle!<br> Always observe the local regulations!                           |

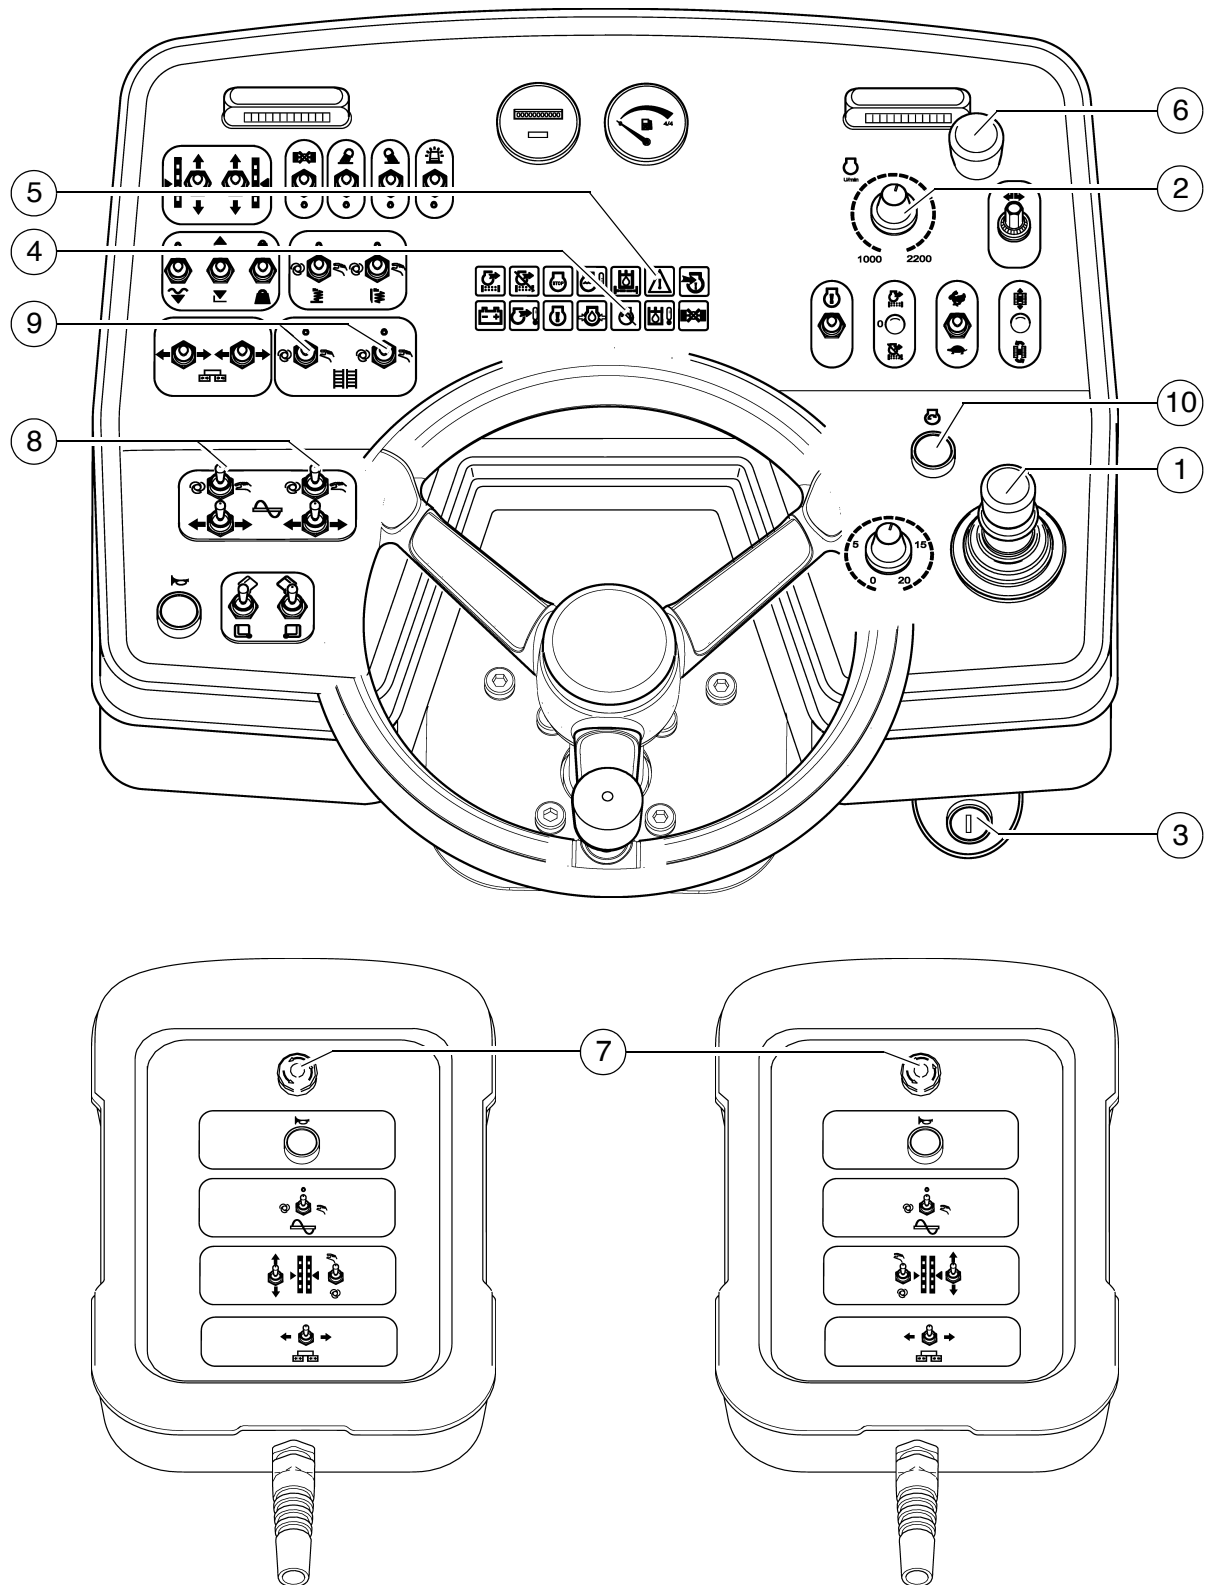



## 1.1 Starting the paver finisher

### Before starting the paver finisher

Before starting the diesel engine and beginning operation, the following steps must be performed:

- Daily maintenance of the paver finisher (see chapter F).



Check the operating hour counter to determine whether or not additional maintenance work (e.g. monthly or annual maintenance) must be performed.

- Check the safety devices and protective devices.

### "Normal" starting

Set the drive lever (1) to the centre position and the speed adjuster (2) to minimum

- Insert the ignition key (3) in position "0".




The lights should be switched off during starting to reduce the current drain on the battery.



Starting is not possible when the "Start inhibit" (4) or drive mode (5) indicator lamps indicate that an emergency stop button (6) / (7) on the remote control has been pressed, or the auger function (8) or conveyor function (9) are switched to "AUTO" or "MANUAL" operating mode.

- Press the starter button (10) to start the engine. Do not let the starter run permanently for more than 30 seconds; allow for a break of 2 minutes after every attempt!

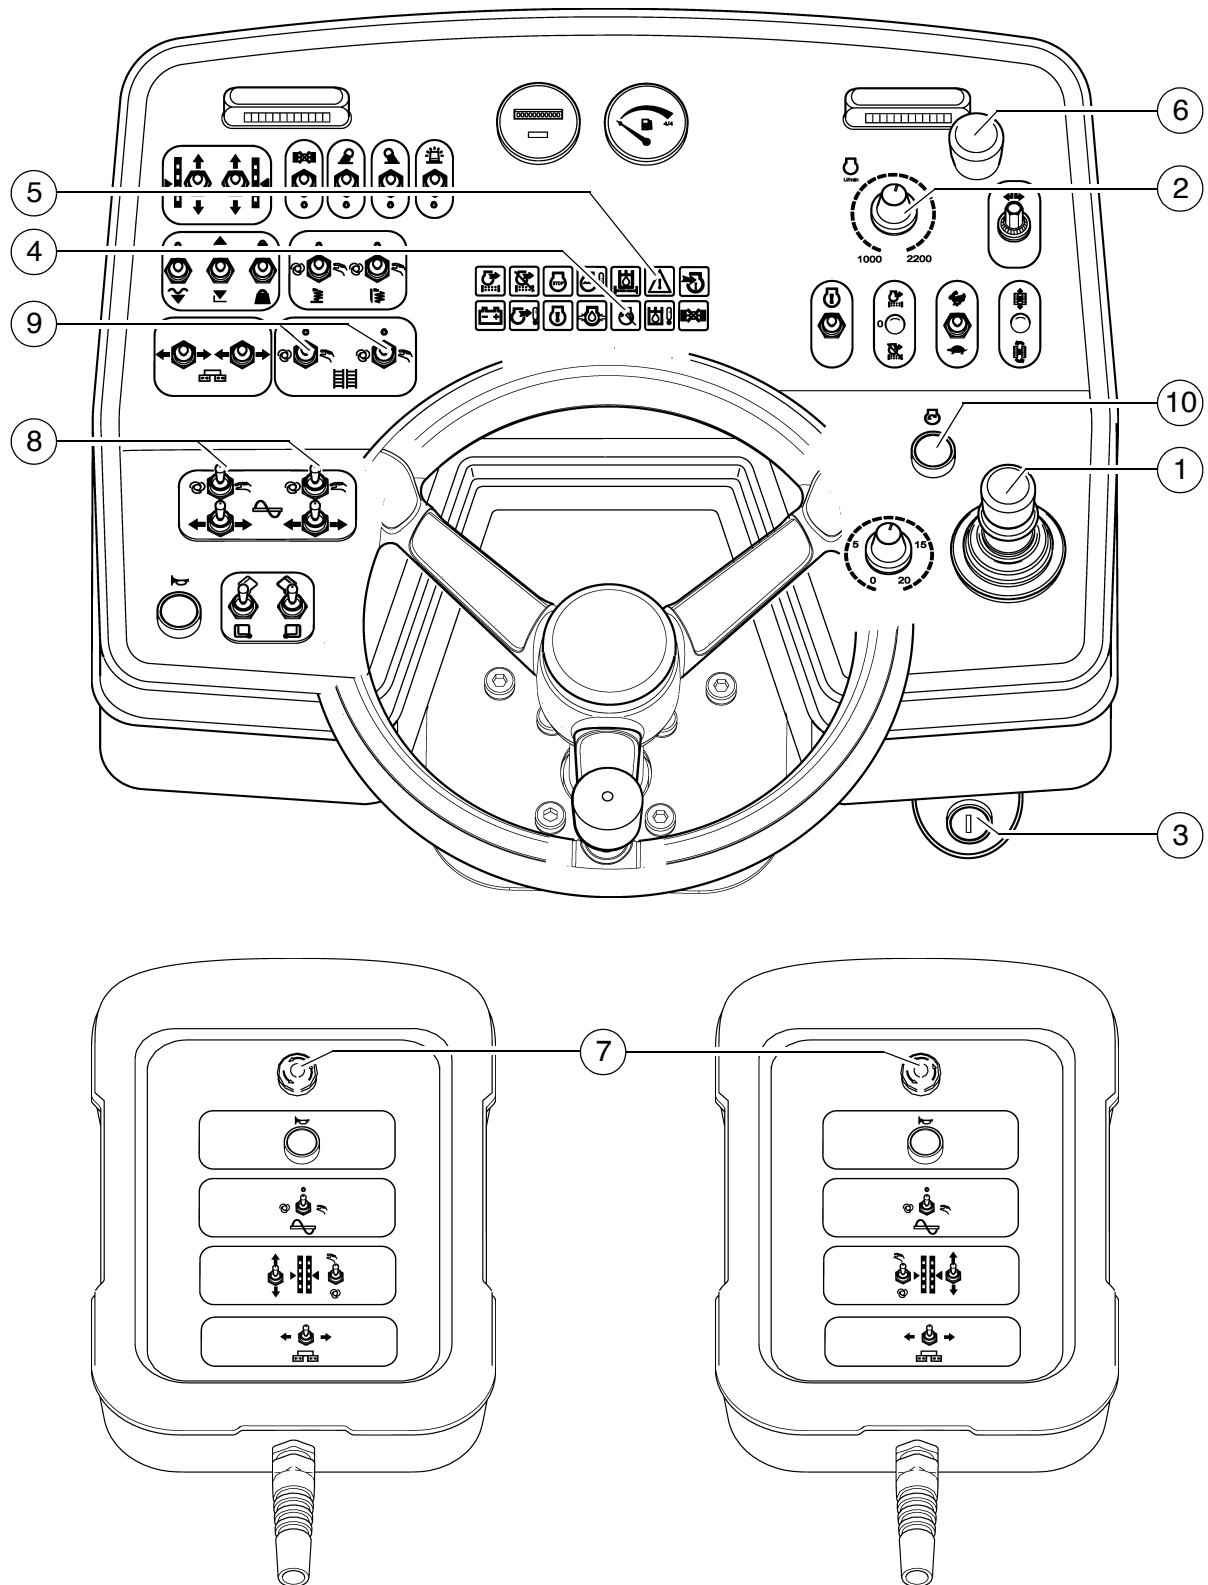

## External starting (starting aid)



The engine can be started with the help of an external power source if the batteries are empty and the starter no longer turns.

Suitable power sources are:

- Other vehicles with a 24 V system
- Additional 24 V battery
- Start device that is suitable for external starting (24 V/90 A).



Standard chargers or quick chargers cannot be used for external starting.

To externally start the engine:

- Set the drive lever (1) to the centre position and the engine speed adjuster (2) to minimum.
- Insert the ignition key (3) in position "0" to switch on the ignition.
- Use appropriate cables to connect the external power source.




Observe the polarity! Always connect the negative cable last and disconnect it first!



Starting is not possible when the "Start inhibit" (4) or drive mode (5) indicator lamps indicate that an emergency stop button (6) / (7) on the remote control has been pressed, or the auger function (8) or conveyor function (9) are switched to "AUTO" or "MANUAL" operating mode.



- Press the starter button (10) to start the engine. Do not let the starter run permanently for more than 30 seconds; allow for a break of 2 minutes after every attempt!

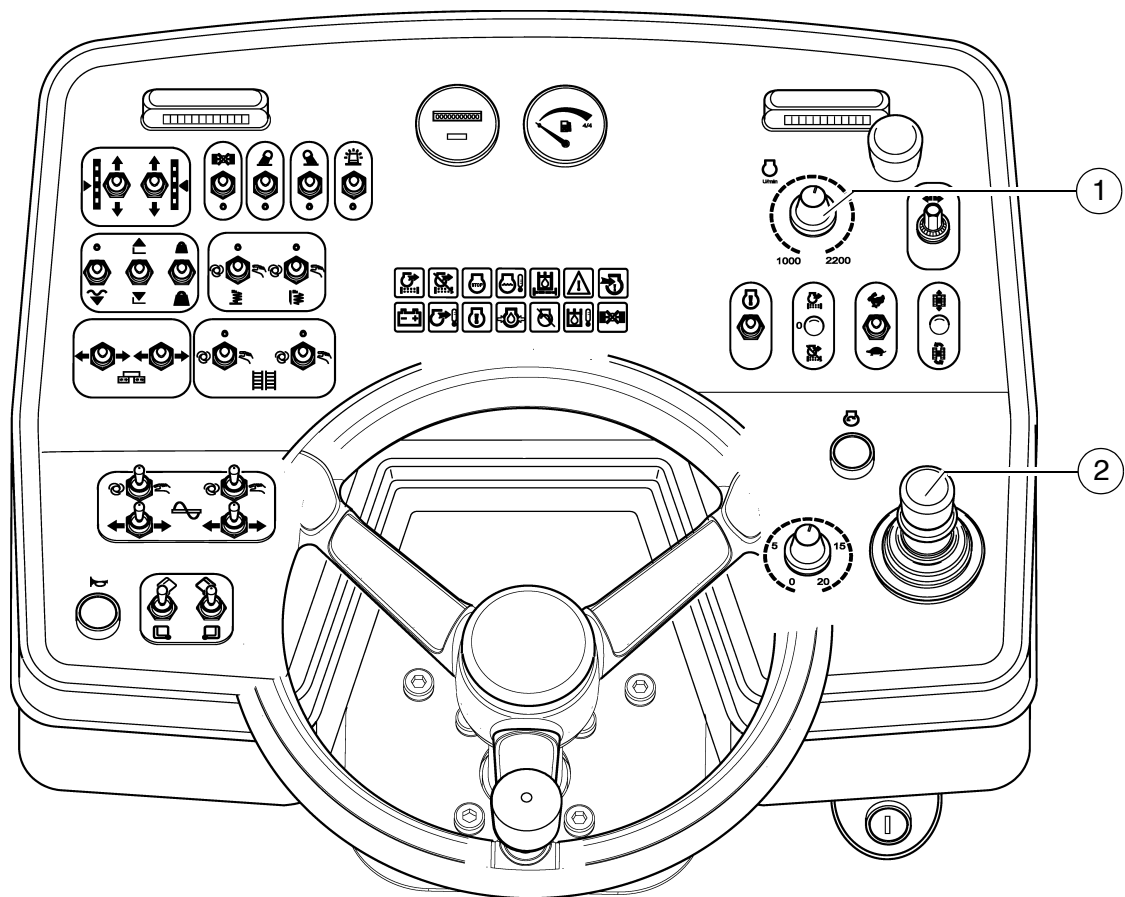

### **After starting**



Let the paver finisher warm up for approx. 5 minutes if the engine is cold.

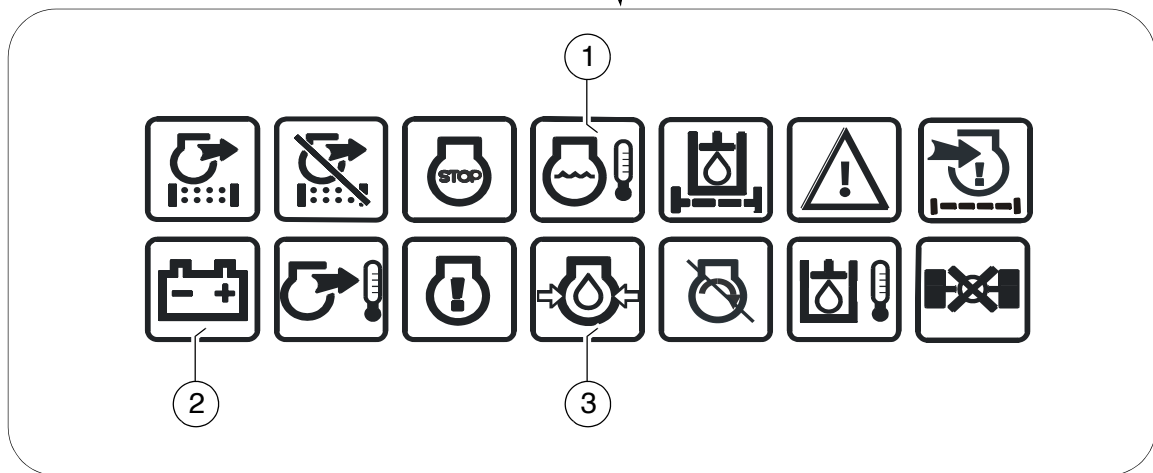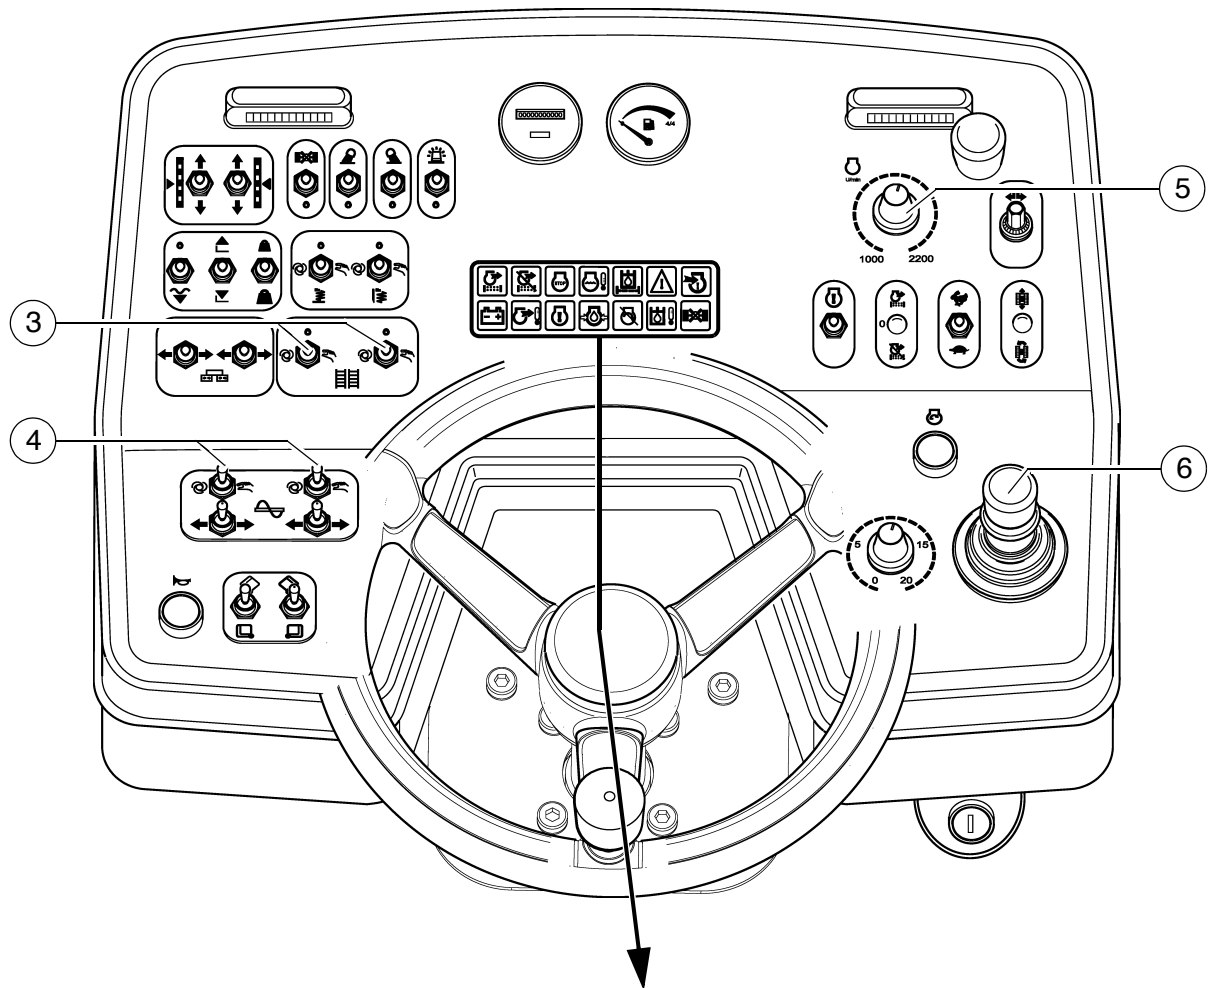

## **Observe indicator lamps**

The following indicator lamps must be observed under all circumstances:

For further possible faults, refer to the Engine operating instructions.

### **Engine coolant temperature check (1)**

Lights up when the engine temperature is outside of the permissible range.



Stop the paver finisher (drive lever to the centre position), let the engine cool down while idling.

Determine the cause and correct it if necessary.



The engine performance will be throttled down automatically. (Driving mode remains possible).

After cooling down to normal temperature, the engine will run with full performance again.

### **Battery charge indicator (2)**

Must go out after starting when the engine revs up.



If the lamp does not go out or lights up during operation: Briefly rev up the engine. Switch off the engine and determine the fault if the lamp does not go out.


For further possible malfunctions, refer to the section "Malfunctions".

### **Oil pressure indicator lamp for the diesel engine (3)**

Must go out at the latest 15 seconds after starting.



If the lamp does not go out or lights up during operation: switch off engine immediately and determine fault.

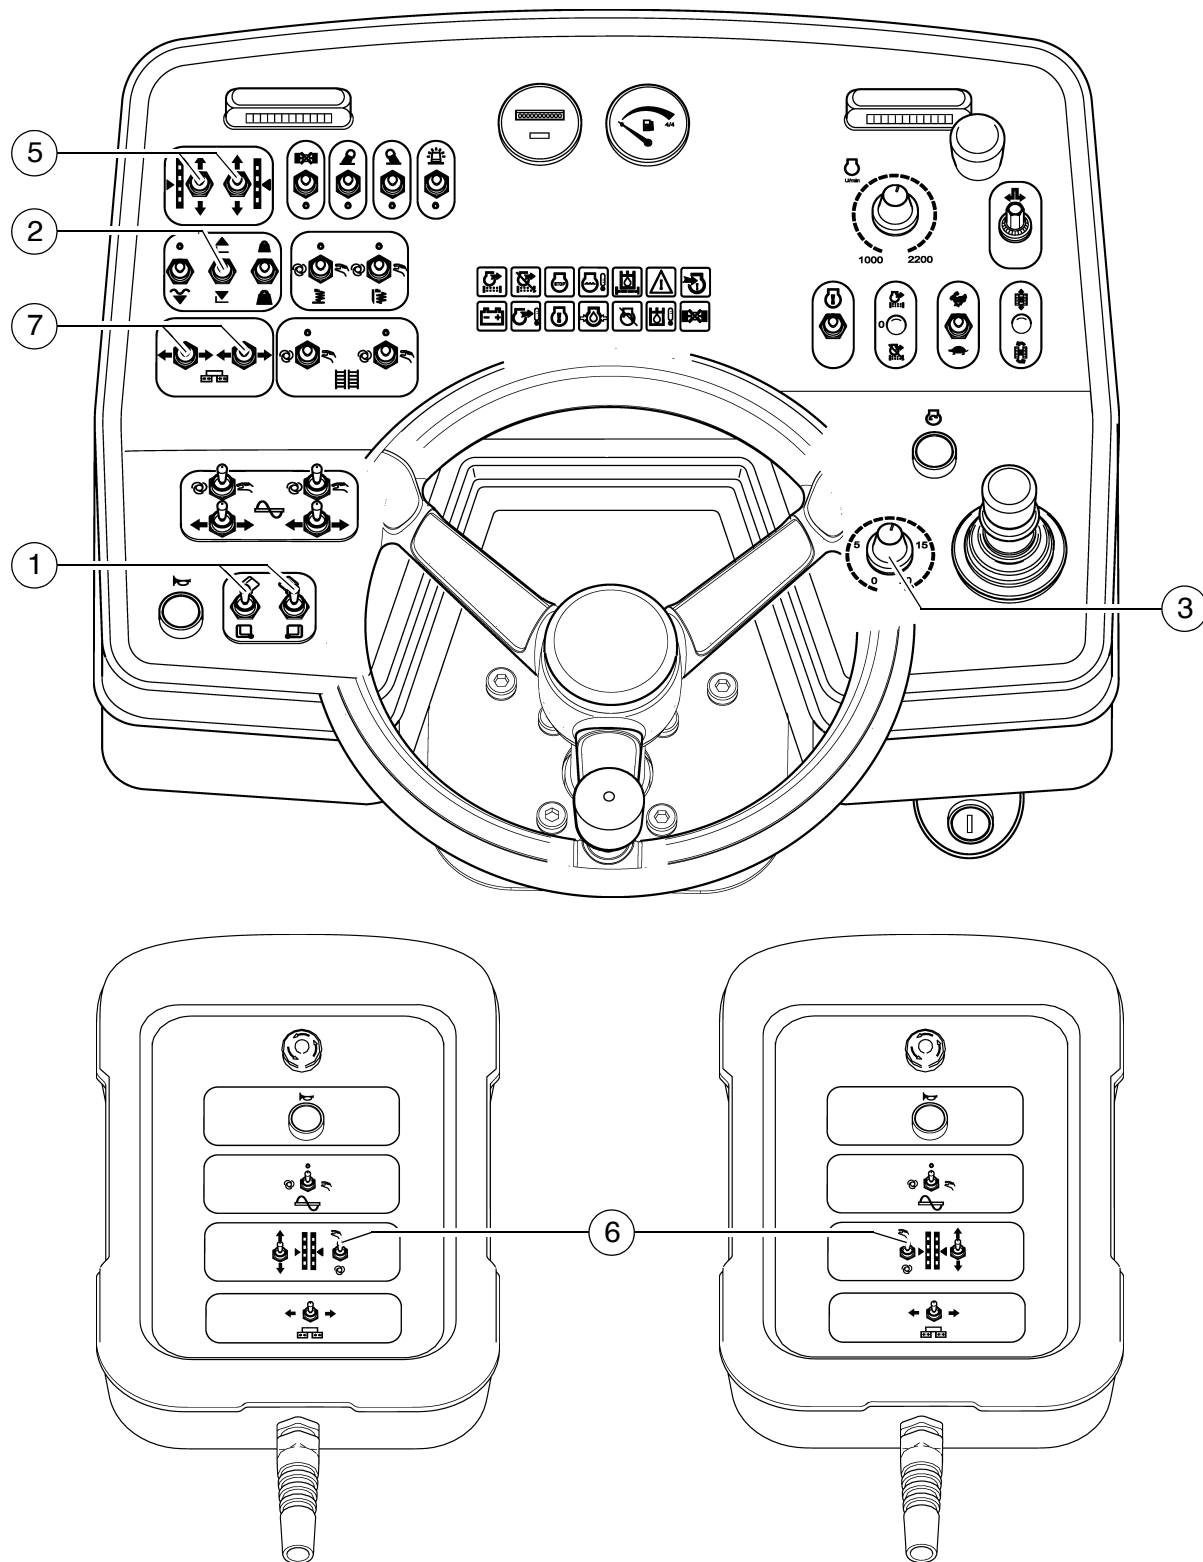



## 1.2 Preparation for transportation

- Use switch (1) to close the hopper.
- Engage both hopper transport safeguards.
- Lift the screed completely using switch (2), set the crossbeam lock.
- Turn the travel drive preselector (3) to zero.
- Fully extend the levelling cylinders with the switch (5).



To extend the levelling cylinders, levelling operating mode (6) must be switched to "MANUAL" on the remote controls.


- Use switch (7) to adjust the screed to the basic width of the paver finisher.



Lift the auger if necessary!



If the engine is started with the drive lever pivoted out, the travel drive is inhibited. To start the travel drive, first the drive lever must be returned to the centre position.

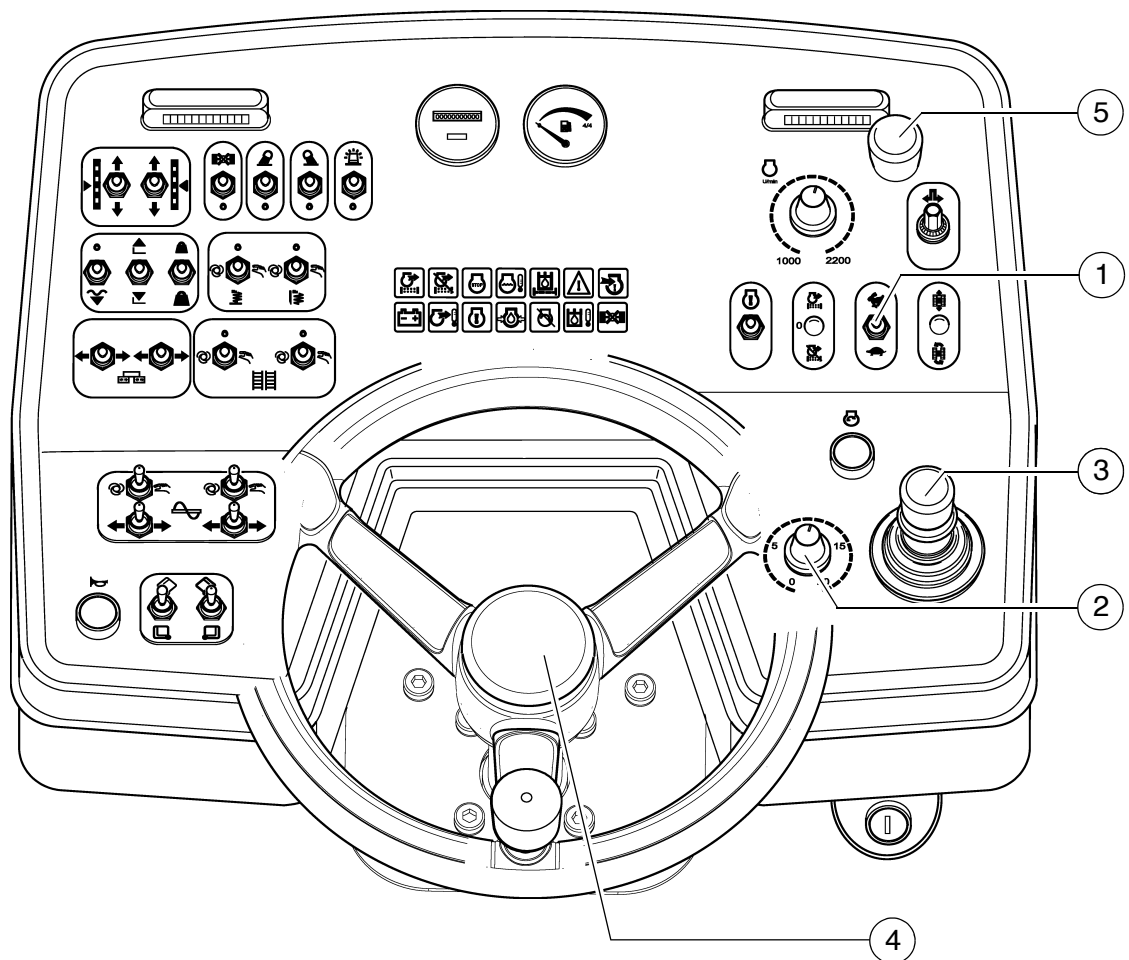

## Driving and stopping the paver finisher

- Set the travel drive to the desired speed level, fast/slow (1).
  - Upper switch position: transport speed (hare)
  - Lower switch position: operating speed (tortoise)
- Turn the travel drive preselector (2) to medium speed.
- For driving, carefully tilt the drive lever (3) forward or backward according to the drive direction desired.
  - Adjust the speed with the preselector (2).
- Carry out steering movements with the steering wheel (4).



In emergency situations, press the emergency stop button (5)!

- To stop, set the preselector (2) to "0" and move the drive lever (3) into its centre position.


### 1.3 Preparations for paving

#### Separator fluid

Spray the parts coming into contact with asphalt (hopper, screed, auger, push roller) with a separator fluid.



Do not use diesel fuel as it dissolves the bitumen (prohibited in Germany!).

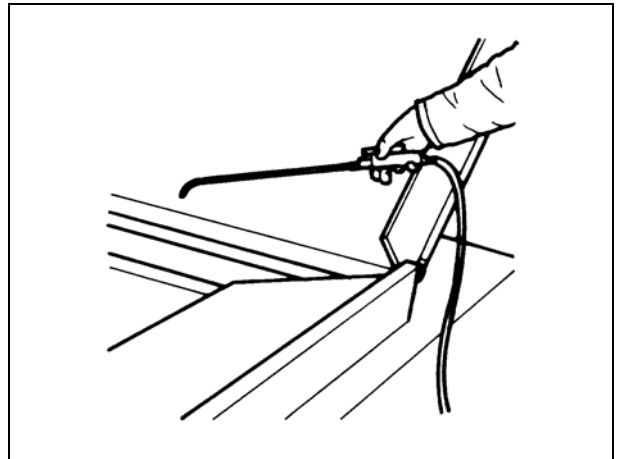


#### Screed heater system



Switch on the screed heater approx. 15–30 minutes (depending on the ambient temperature) before paving begins. Warming up prevents the material from sticking to the screed plates.

### Direction marks

To ensure straight paving, a direction mark must be present or established (road edge, chalk lines or similar).


- Slide the operating panel to the desired side and secure it.
- Pull the direction indicator out of the bumper (arrow) and adjust it accordingly.

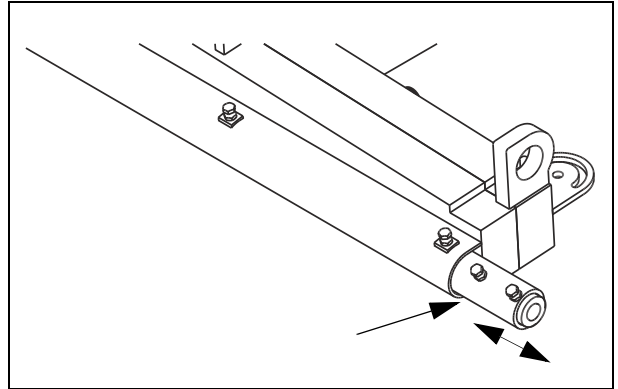

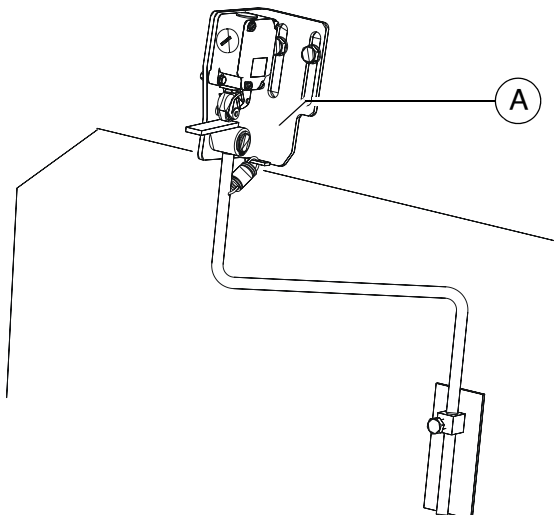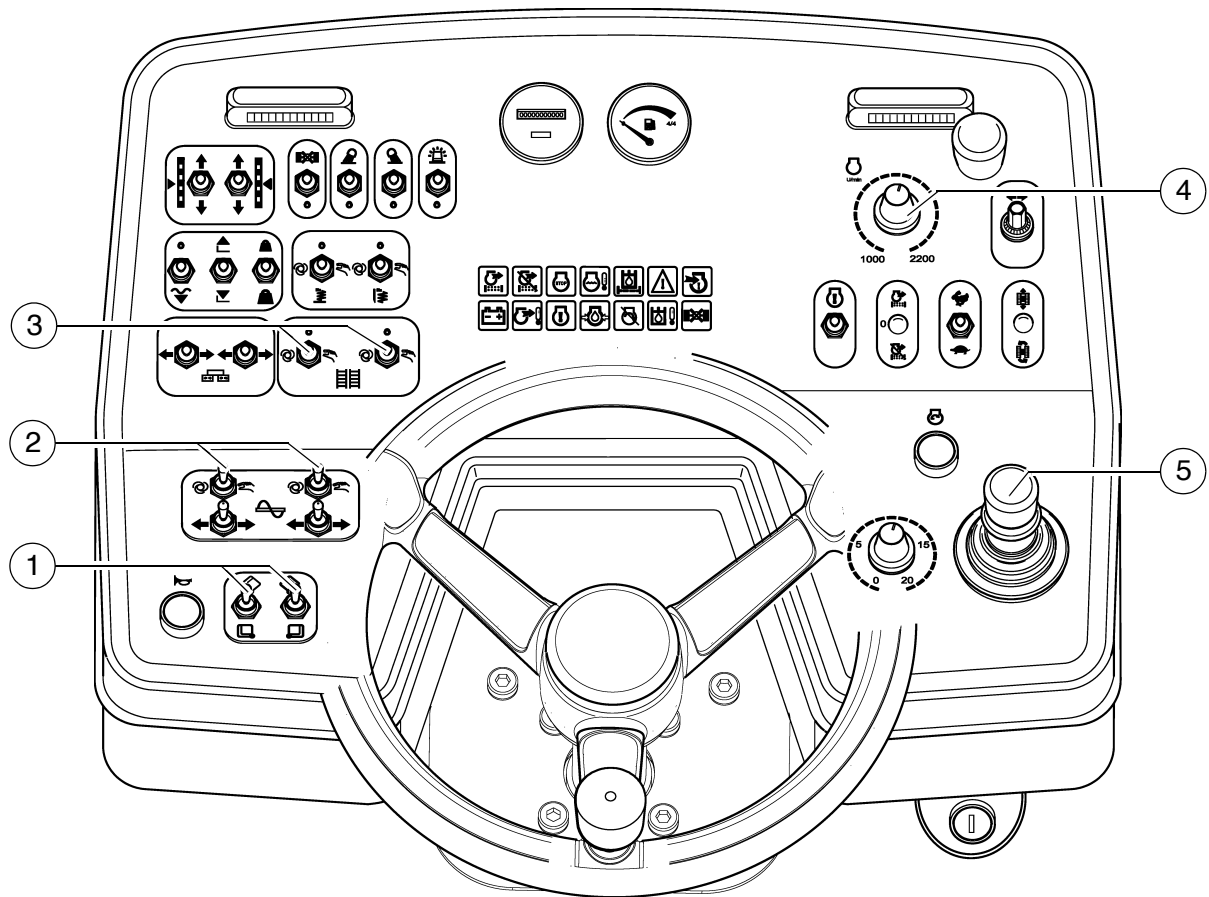

### **Loading/conveying material**

- Use switch (1) to open the hopper.  
Instruct the truck driver to dump the material.
- Set the switches for the auger (2) and the conveyor (3) to "auto".
- Set the switches for the auger and the conveyor on the remote controls (if applicable) to "auto".
- Switch the conveyors on.  
The conveyor limit switches (A) must switch off when the material has approximately reached the area beneath the auger crossbeam.
- Check that the material is transferred properly.  
Manually switch on or off the conveyor if the material is not conveyed properly until a sufficient amount of material lies in front of the screed.

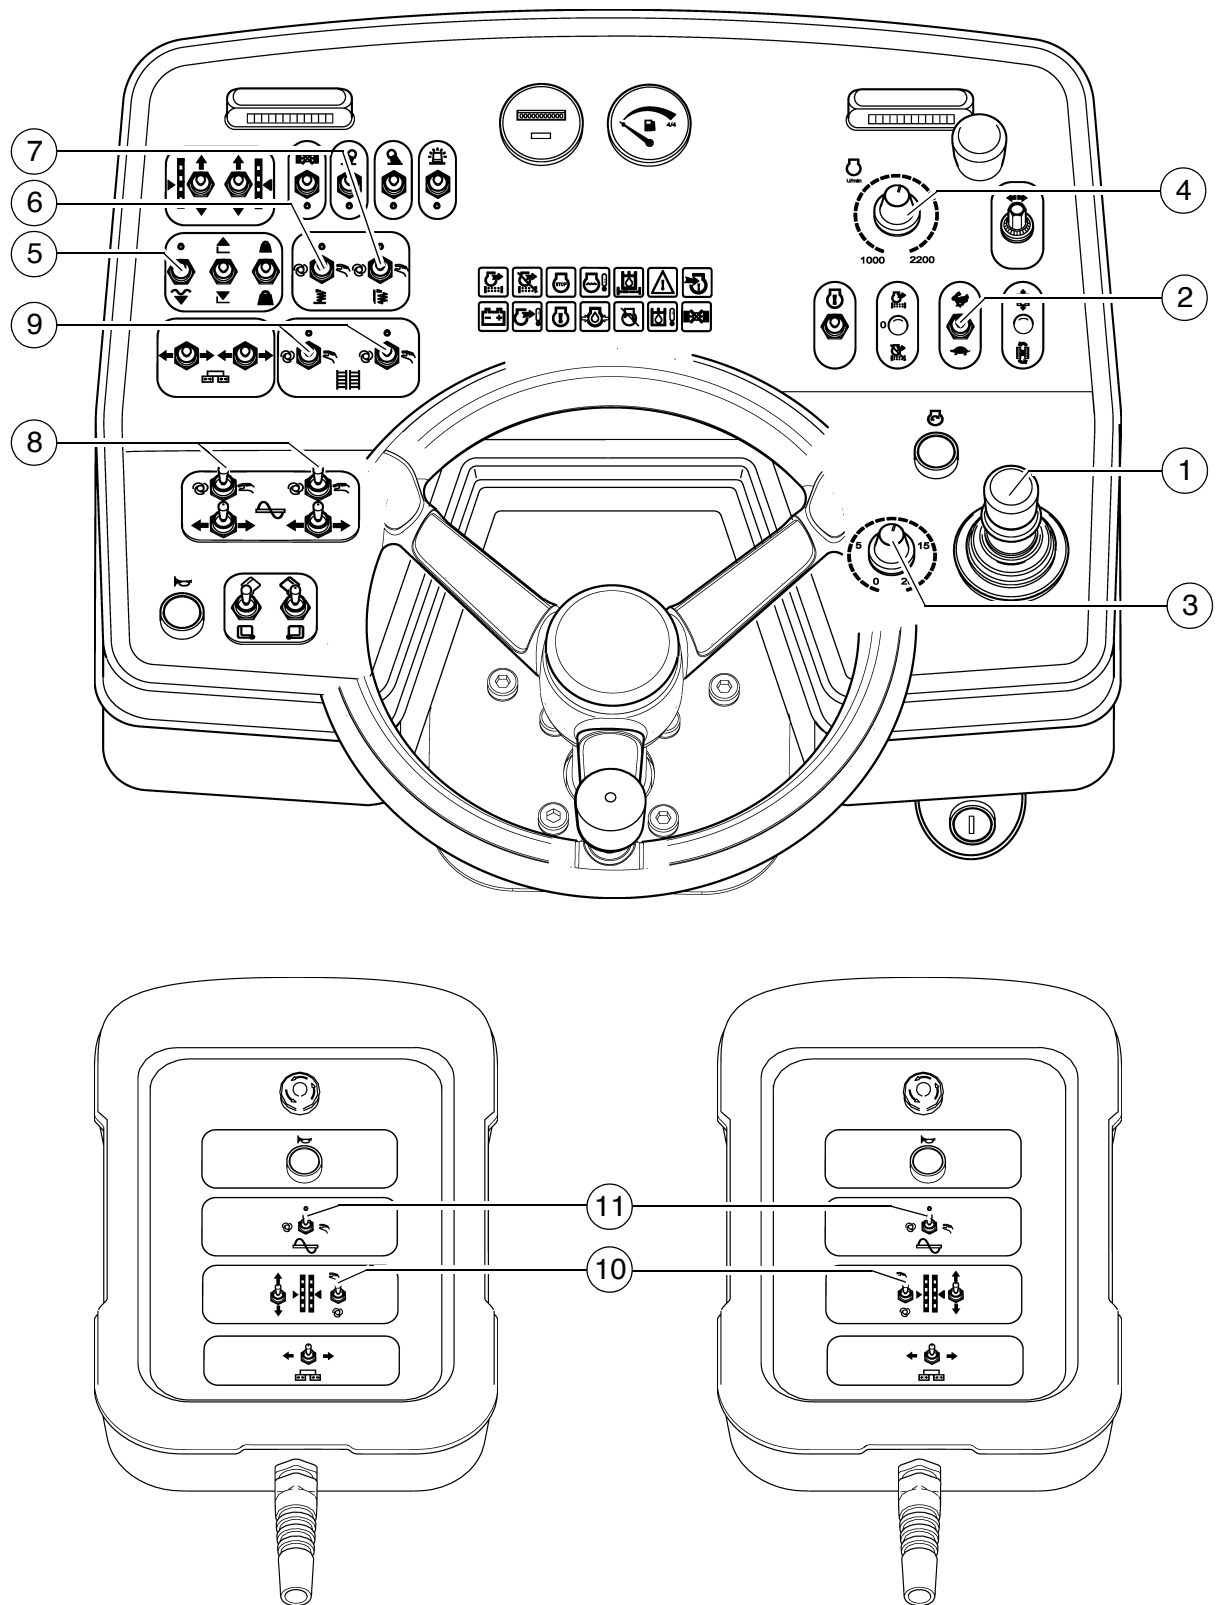



## 1.4 Starting for paving

Set the switches, levers and controls listed below to the specified positions when the screed has reached its operating temperature and a sufficient amount of material lies in front of the screed:

| Item | Travelling direction           | Position                        |
|------|--------------------------------|---------------------------------|
| 1    | Drive lever                    | Centre position                 |
| 2    | Travel drive speed - fast/slow | slow ("Tortoise")               |
| 3    | Travel drive preselector       | Mark 6-7                        |
| 4    | Engine speed                   | Maximum                         |
| 5    | Screed position                | Floating position               |
| 6    | Vibration                      | auto                            |
| 7    | Tamper                         | auto                            |
| 8    | Auger left/right               | auto                            |
| 9    | Conveyor left/right            | auto                            |
|      | Speed control for the tamper   | adapted to the paving situation |
|      | Speed regulator, vibration     | adapted to the paving situation |
| 10   | Levelling                      | auto                            |
| 11   | Auger                          | auto                            |

- Then push the drive lever (1) all the way to the front and start driving.
- Observe the distribution of the material and adjust the limit switches if necessary.
- Set the compacting elements (tamper and/or vibration) according to the required compaction ratio.
- Let the paving master check the paving thickness after 5–6 meters and correct if necessary.

Carry out the check in the area of the caterpillar chains or drive wheels as the screed tends to level an uneven ground. The reference points for the layer thickness are the caterpillar chains or drive wheels.

The basic setting of the screed must be corrected when the actual layer thickness deviates significantly from the values indicated by the scales (see the operating instructions for the screed).



The basic setting is for asphalt material.

## 1.5 Checks during paving

The following points must be constantly observed during paving:

### **Paver function**

- Screed heater system
- Tamper and vibration
- Engine oil and hydraulic oil temperature
- The screed parts must be retracted and extended in time when obstacles are in the way
- Uniform material transport and distribution or supply to the screed; may require corrections to settings of the material switches for conveyor and auger.



See the section "Malfunctions" when paver functions fail.

### **Quality of the layer**

- Paving height
- Slope
- Evenness in the driving direction and at right angles to it (check with 4 m levelling rod)
- Surface structure/texture behind the screed.



See section "Malfunctions, problems during paving" if the paving quality is poor.

## 1.6 Paving with "screed control at paver finisher stop" and "screed charging/relieving"



### General

The screed hydraulics can be influenced in three different ways to attain optimum paving results:

- floating stop with relief when the paver finisher is halting,
- floating paving when the paver finisher is driving,
- floating paving with screed charging or relieving when the paver finisher is driving.



Relieving reduces the screed weight and increases the traction force.  
Charging increases the screed weight, reduces the traction force, but increases the compaction ratio. (To be used with light-weight screeds in exceptional cases.)

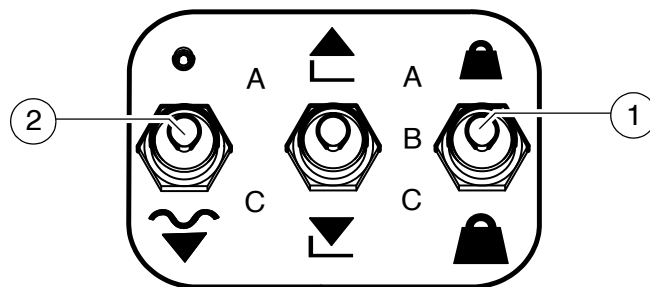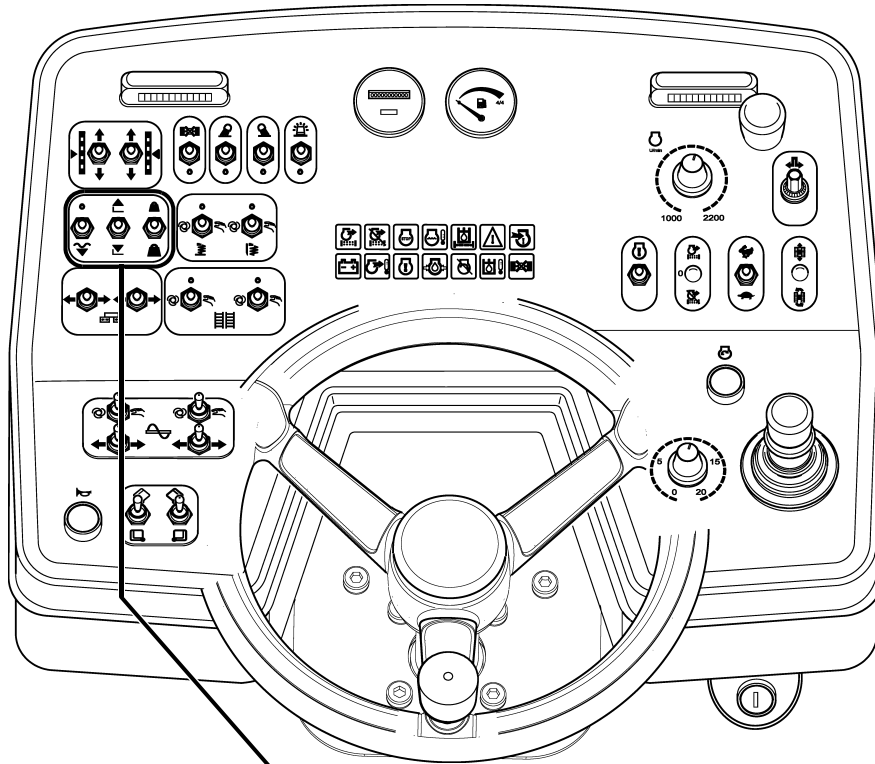

## **Screed charging/relieving**

This function charges or relieves the screed regardless of its own dead weight.

Switch (1) has the following positions:

- A:** Relieving (screed 'lighter')
- B:** function OFF
- C:** Charging (screed 'heavier')



Switch positions "Screed charging/relieving" are only effective when the paver finisher moves.

According to the activated function, the paver finisher is automatically switched to "Screed stop" when stationary.

## **Screed control with paver finisher stop / in paving operation (screed stop / floating stop / floating paving)**

Switch (2) has the following positions:

- A:** screed stop / floating position OFF:  
screed is hydraulically held in position.



Function for setting up the paver finisher and for lifting/lowering the screed.



- C:** floating position

The following functions are active depending on operating status:

- "Floating stop": when the paver finisher is stationary.  
The screed is held by the relief pressure and the counter pressure of the material.
- "Floating paving": during paving operation.  
Screed lowering to the floating position with preselected screed charging/relieving function.



Function for paving operation.

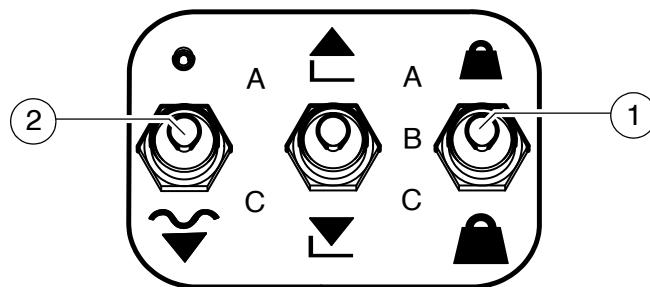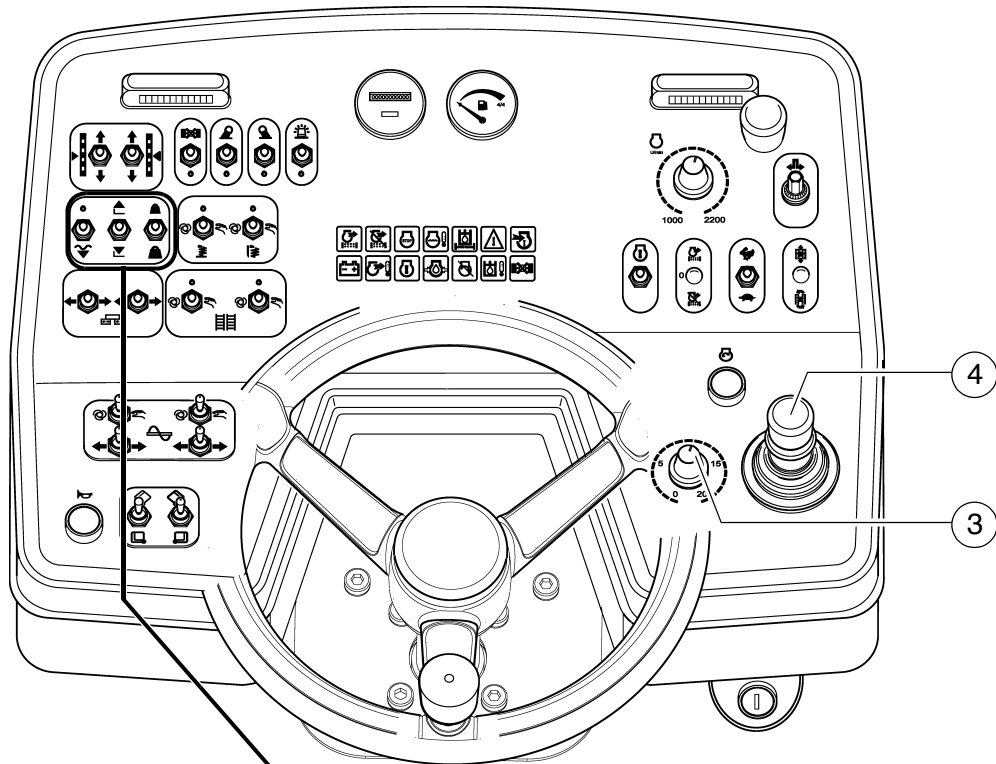

## Screed control with paver finisher stop - floating stop with relief

As for charging/relieving, a pressure of 2-50 bar can be individually applied to the screed lifting cylinders. This pressure acts to combat the weight of the screed to prevent the screed from sinking into the freshly laid material.

The pressure to be applied depends on the load-bearing capacity of the material. If necessary, the pressure must be readjusted or changed as required during the first stops until the lower edge of the screed no longer leaves any marks when the finisher moves on again.

As of a pressure of approx. 10-15 bar, the weight of the screed is neutralised, thus preventing the screed from possibly sinking into the material.



The pressure is set to approx. 20 bar in the factory.

### Adjusting the pressure

Pressure adjustments can only be made while the diesel engine is running. Therefore:

- Start the diesel engine and set the traction controller (3) to zero.
- Set switch (2) to "Floating position".

### Set pressure for screed charging or relieving


- Swivel the drive lever (4) out.
- Set switch (1) to position A (relieving) or C (charging).
- Set pressure with pressure control valve (5); read off at the manometer (6).





When screed charging/relieving is necessary and automatic levelling is used (grade control and/or slope control), the compacting performance changes (layer thickness).



The pressure can also be set or corrected during paving.  
(Max. 50 bar)

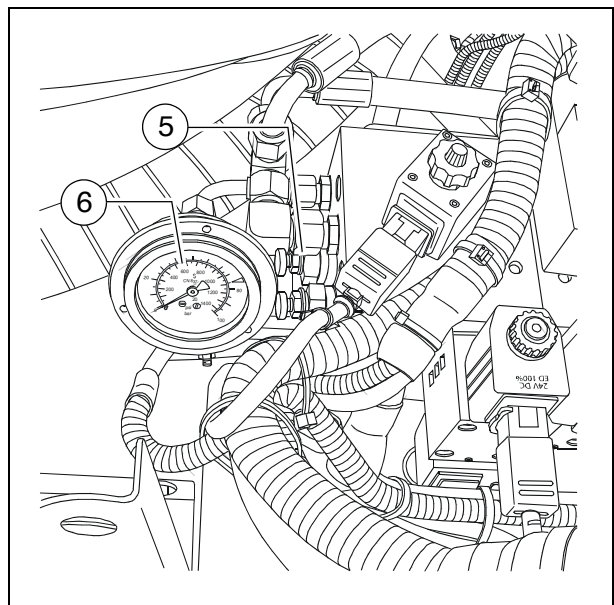


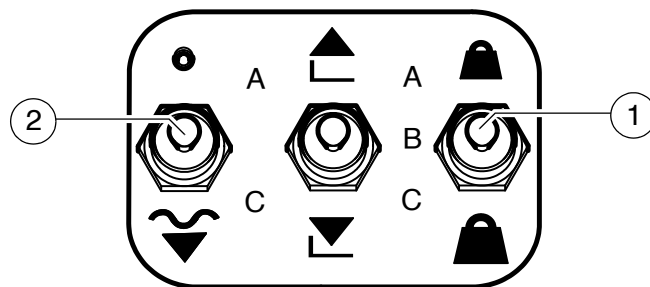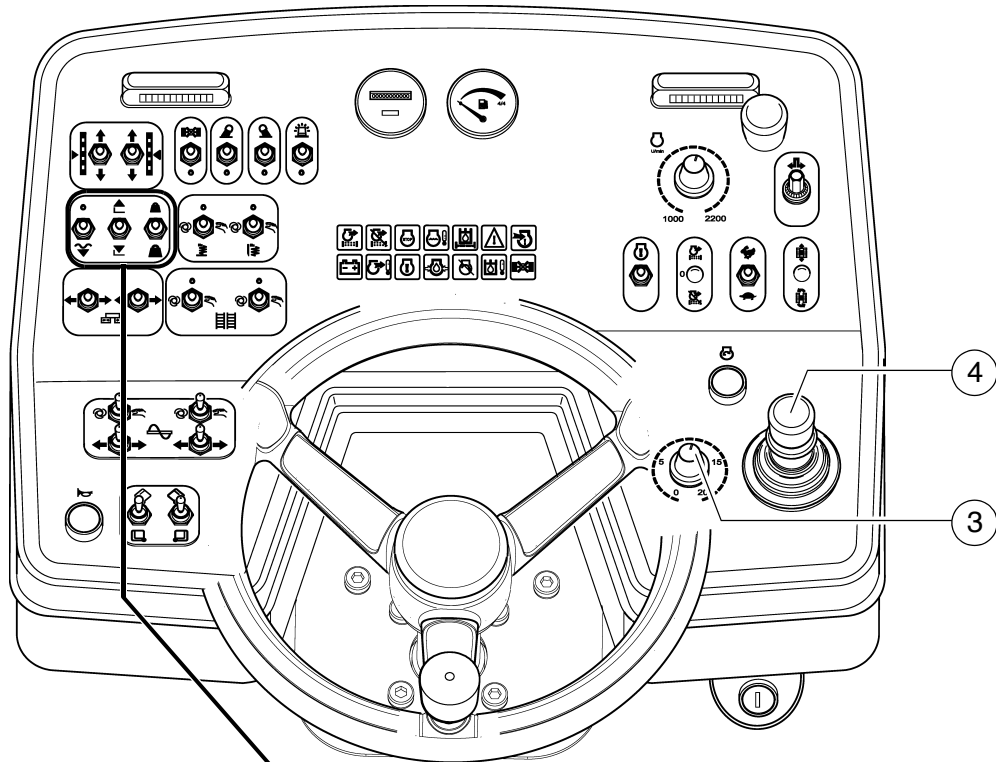




**Setting pressure for screed control  
with paver finisher stop - floating stop  
with relief**

- Set the drive lever (4) to the centre position.
- Set switch (2) to position C.
- Set the pressure using pressure regulating valve (7); read the pressure off at the manometer (6). (Basic setting: 20 bar)

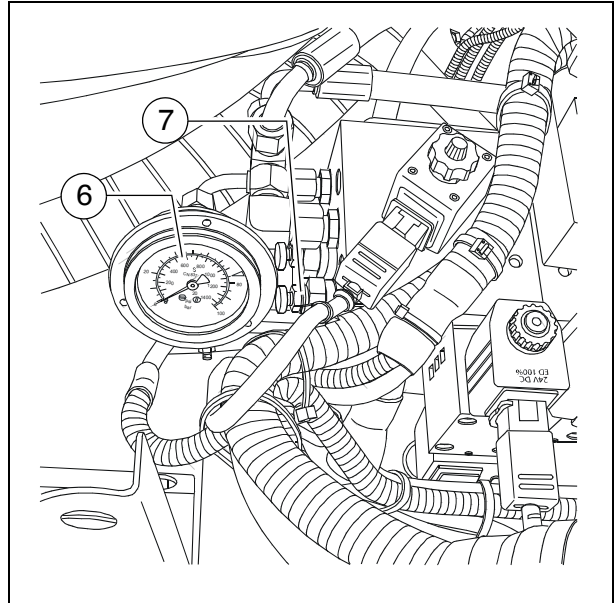

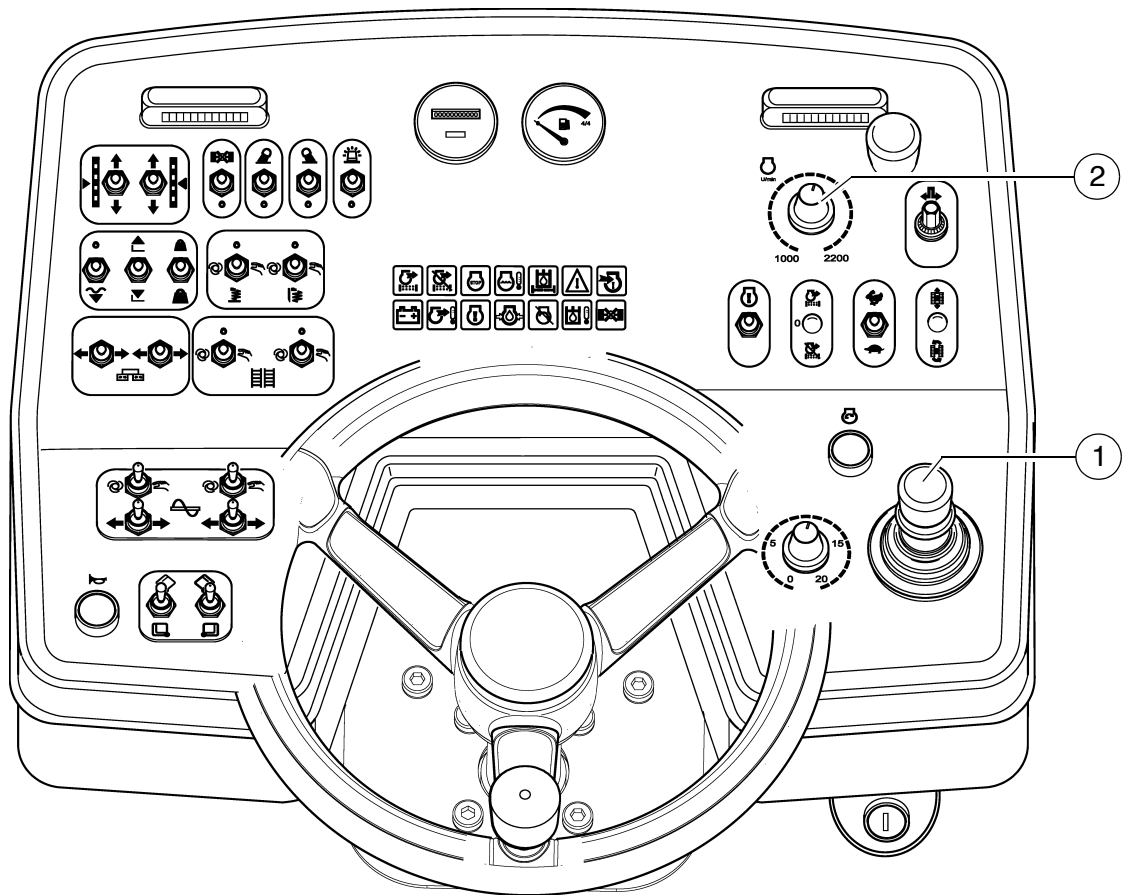

## 1.7 Interrupting/terminating operation

**During breaks** (e.g. the material supply truck is late)

- Determine the approximate duration.
- When cooling down of the material below the minimum paving temperature must be expected, run the paver finisher empty and create an edge like the end of a layer.
- Set the drive lever (1) to the centre position.


**During longer breaks**

(e.g. lunch break)

- Set the drive lever (1) to the centre position and the speed adjuster (2) to minimum
- Switch the screed heater system off.
- Switch off the ignition.
- When screed is operated with the optional gas heating system, close the valves of the bottles.



The screed must be heated up to the correct paving temperature before paving may be restarted.

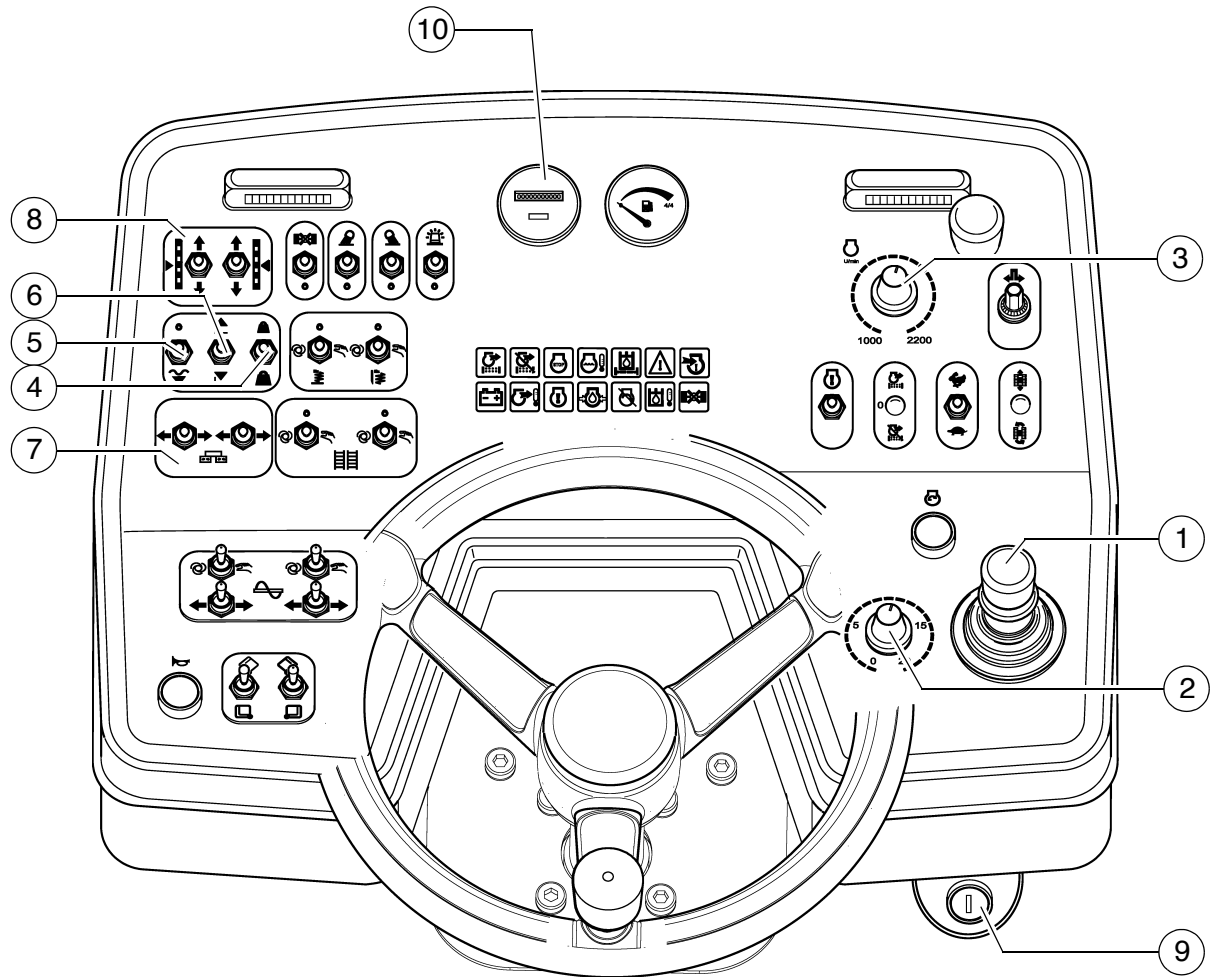

## When work is finished

- Run the paver finisher empty and stop it.
- Move the drive lever (1) to the central position, set preselector (2) to "0" and set the speed adjuster (3) to minimum.
- Switch the auger, conveyor, tamper and vibration functions "OFF".
- Lift the screed: set switch (4) to centre position, switch (5) to the top position and switch (6) to lifting.
- Set crossbeam lock.
- Retract the screed parts to the basic screed width using switch (7) and lift the auger. Where applicable, completely extend the levelling cylinders using switch (8).
- Close hopper halves, set hopper transport safeguards.
  - Set tampers to "manual"; while operating the tampers at a low speed, let any material residues drop out.
- Switch tampers "OFF".
- Switch the screed heater system off.
- Switch lighting "OFF".
- Switch off the ignition (9).
- Close the main shut-off valves and the bottle valves for the screed gas heater system.
- Remove the levelling units and stow them away in the boxes, close all flaps.
- Remove all parts that extend beyond the paver finisher contour or secure them if the paver finisher is to be transported over public roads on a low-bed trailer.



Do not turn off main switch until 15 seconds after the ignition has been turned off!




The engine electronics need this length of time to back up data.

- Read and check the operating hour meter (10) to determine whether maintenance work must be performed (see chapter F).
- Cover and lock the operating panel.
- Remove material residues from the screed and the paver finisher and spray all parts with separator fluid.

## 2 Malfunctions

### 2.1 Error code query for engine

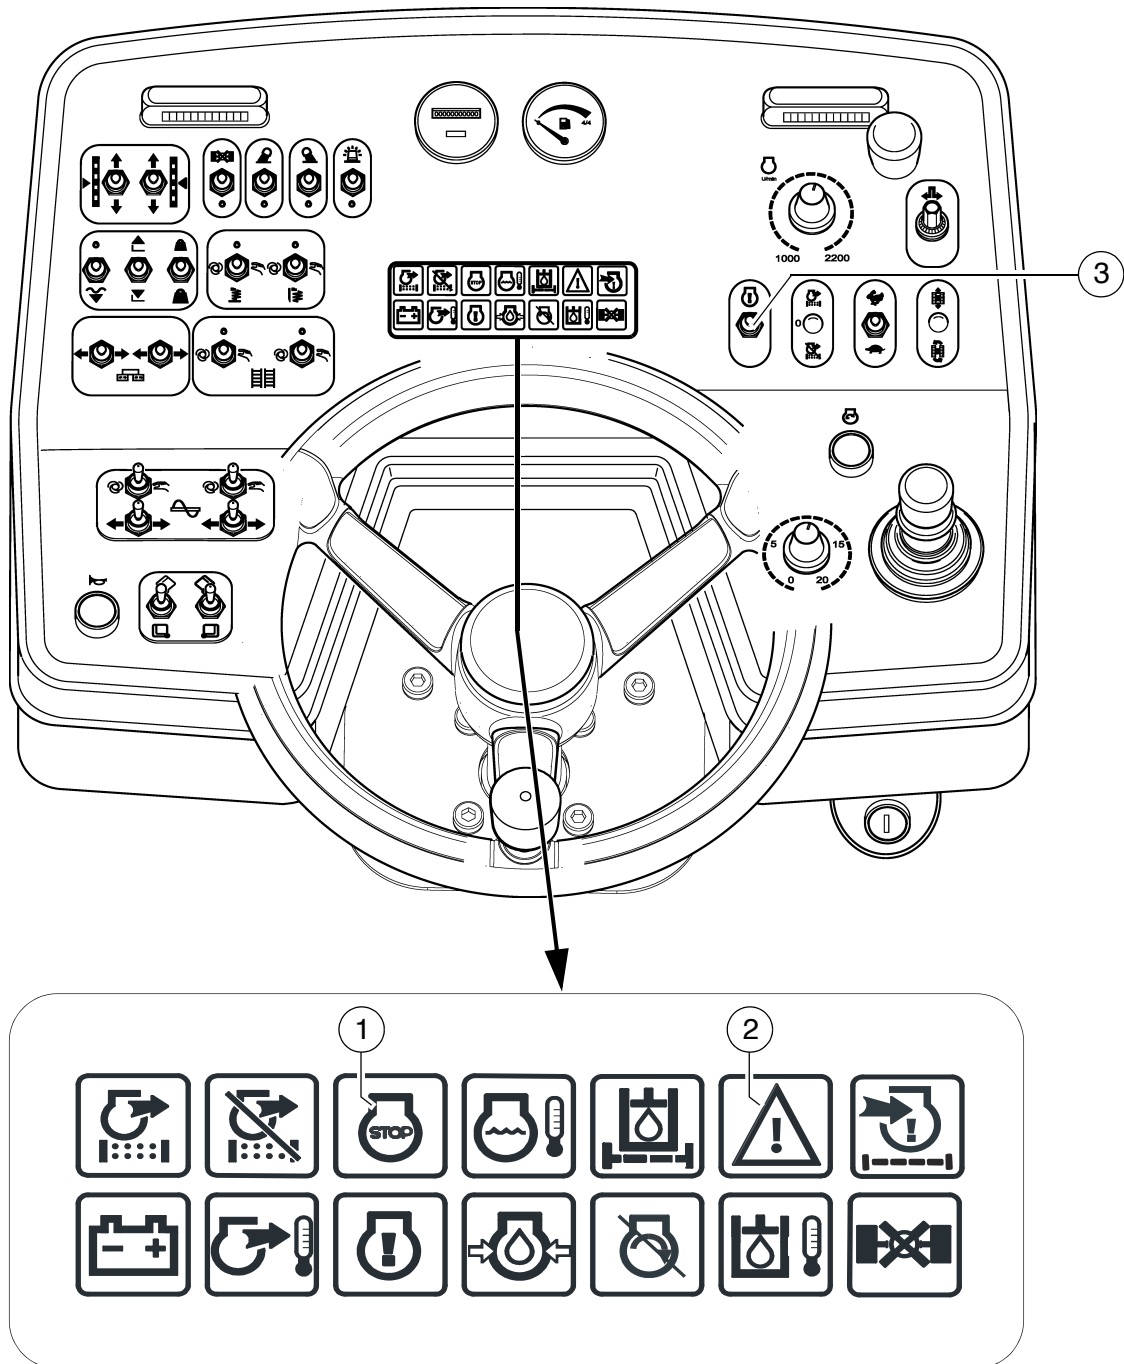

If a fault on the engine is detected and is signalled by one of the warning lamps (1) or (2), a code to which a defined fault is assigned can be displayed using the query switch (3).


Output of the flash code is performed by the other warning lamp:

if a fault is displayed by warning lamp (1), output is carried out via warning lamp (2) and vice-versa.

## Output of numerical code

- Press switch (3) into display position until the three-digit code has been output via the warning lamp. While the switch for error queries is being actuated, the warning lamp which first signalled the fault which occurred goes out.

Example:

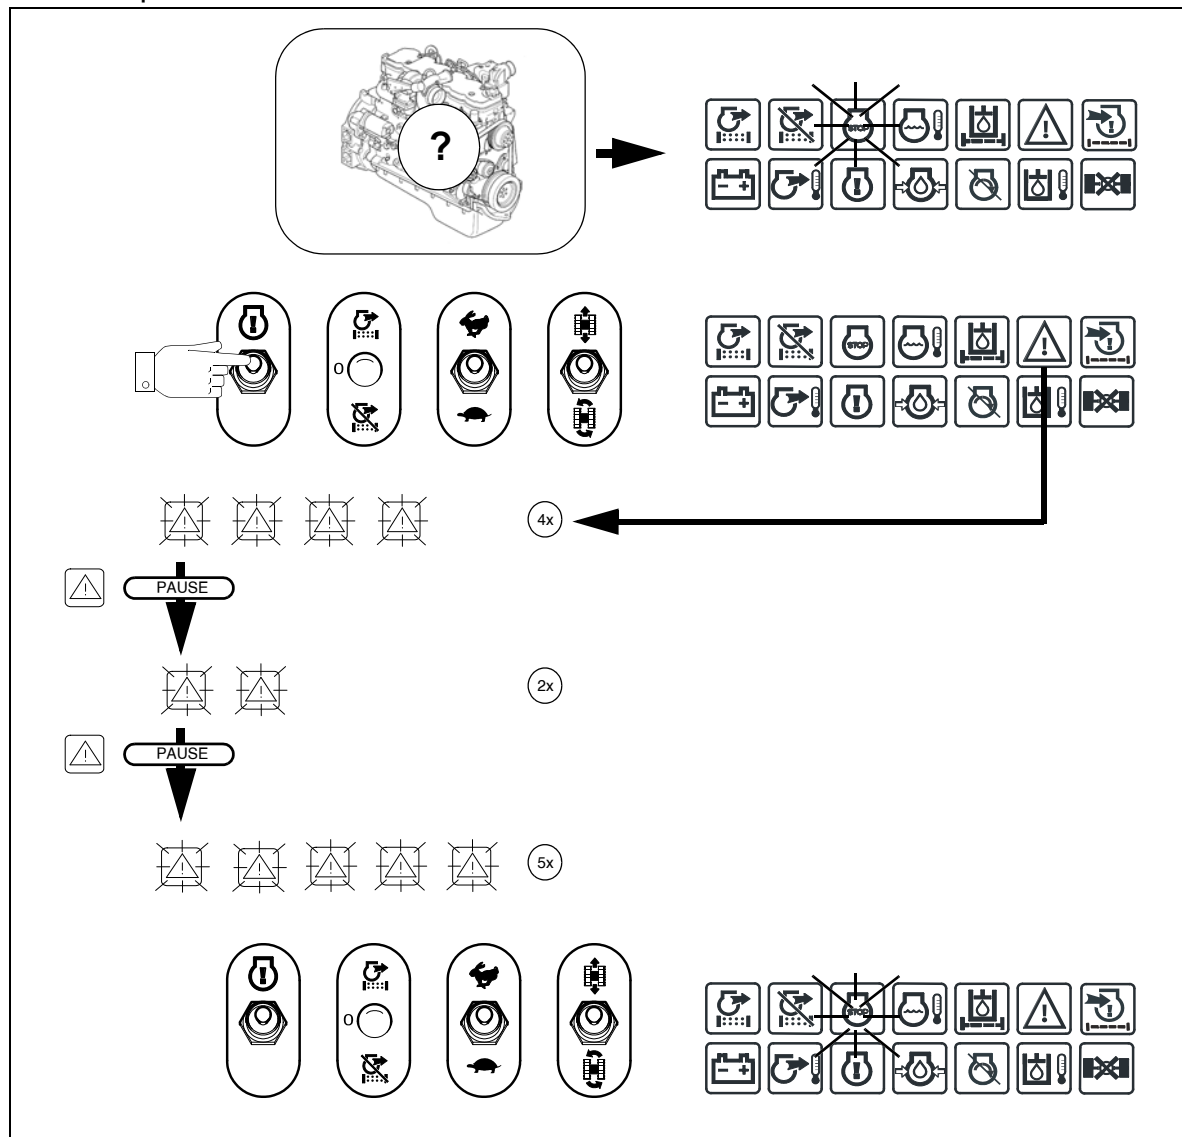



Flash sequence: 4-Pause-2-Pause-5.

Fault code: 425



If the output switch continues to be held in its upper position, the code is issued once again.



Once the switch for error queries has returned to its 0 position, the warning lamp which signalled the fault lights up again.

This continues until the corresponding error or malfunction has been rectified.



If several errors occur at the same time, the various flash codes are displayed next to one another by pressing the output switch.



Notify customer service of the fault number displayed on your paver finisher: staff in this department will then discuss with you what action to take.

## 2.2 Error codes

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description      | Cummins Description  |
|------------|-----------|-----------|------------|----------------------------|--|
| 111        | 629       | 12        | Red        | Controller #1              | Engine Control Module Critical internal failure - Bad intelligent Device or Component  |
| 115        | 612       | 2         | Red        | System Diagnostic Code # 2 | Engine Speed/Position Sensor Circuit lost both of two signals from the magnetic pickup sensor - Data Erratic, Intermittent, or incorrect |
| 122        | 102       | 3         | Amber      | Boost Pressure             | Intake Manifold Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source  |
| 123        | 102       | 4         | Amber      | Boost Pressure             | Intake Manifold Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 131        | 91        | 3         | Red        | Accelerator Pedal Position | Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal, or Shorted to High Source                                     |
| 132        | 91        | 4         | Red        | Accelerator Pedal Position | Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                                      |
| 133        | 974       | 3         | Red        | Remote Accelerator         | Remote Accelerator Pedal or Lever Position Sensor Circuit - Voltage Above Normal, or Shorted to High Source                              |
| 134        | 974       | 4         | Red        | Remote Accelerator         | Remote Accelerator Pedal or Lever Position Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                               |
| 135        | 100       | 3         | Amber      | Engine Oil Pressure        | Oil Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source  |
| 141        | 100       | 4         | Amber      | Engine Oil Pressure        | Oil Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 143        | 100       | 18        | Amber      | Engine Oil Pressure        | Oil Pressure Low - Data Valid but Below Normal Operational Range - Moderately Severe Level   |
| 144        | 110       | 3         | Amber      | Engine Coolant Temperature | Coolant Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source   |
| 145        | 110       | 4         | Amber      | Engine Coolant Temperature | Coolant Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 146        | 110       | 16        | Amber      | Engine Coolant Temperature | Coolant Temperature High - Data Valid but Above Normal Operational Range - Moderately Severe Level                                       |
| 147        | 91        | 1         | Red        | Accelerator Pedal Position | Accelerator Pedal or Lever Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period  |
| 148        | 91        | 0         | Red        | Accelerator Pedal Position | Accelerator Pedal or Lever Position Sensor Circuit - Abnormal Frequency, Pulse Width, or Period  |
| 151        | 110       | 0         | Red        | Engine Coolant Temperature | Coolant Temperature Low - Data Valid but Above Normal Operational Range - Most Severe Level  |
| 153        | 105       | 3         | Amber      | Intake Manifold #1 Temp    | Intake Manifold Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source   |
| 154        | 105       | 4         | Amber      | Intake Manifold #1 Temp    | Intake Manifold Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 155        | 105       | 0         | Red        | Intake Manifold #1 Temp    | Intake Manifold Air Temperature High - Data Valid but Above Normal Operational Range - Most Severe Level                                 |
| 187        | 1080      | 4         | Amber      | 5 Volts DC Supply          | Sensor Supply Voltage #2 Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 195        | 111       | 3         | Amber      | Coolant Level              | Coolant Level Sensor Circuit - Voltage Above Normal, or Shorted to High Source   |
| 196        | 111       | 4         | Amber      | Coolant Level              | Coolant Level Sensor Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 197        | 111       | 18        | Amber      | Coolant Level              | Coolant Level - Data Valid but Below Normal Operational Range - Moderately Severe Level  |
| 211        | 1484      | 31        | None       | J1939 Error                | Additional Auxiliary Diagnostic Codes logged - Condition Exists  |
| 212        | 175       | 3         | Amber      | Oil Temperature            | Engine Oil Temperature Sensor 1 Circuit - Voltage Above Normal, or Shorted to High Source  |
| 213        | 175       | 4         | Amber      | Oil Temperature            | Engine Oil Temperature Sensor 1 Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 214        | 175       | 0         | Red        | Oil Temperature            | Engine Oil Temperature - Data Valid but Above Normal Operational Range - Most Severe Level   |

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description              | Cummins Description   |
|------------|-----------|-----------|------------|------------------------------------|---|
| 221        | 108       | 3         | Amber      | Barometric Pressure                | Barometric Pressure Sensor Circuit – Voltage Above Normal, or Shorted to High Source                              |
| 222        | 108       | 4         | Amber      | Barometric Pressure                | Barometric Pressure Sensor Circuit – Voltage Below Normal, or Shorted to Low Source                               |
| 227        | 1080      | 3         | Amber      | 5 Volts DC Supply                  | Sensor Supply Voltage #2 Circuit – Voltage Above Normal, or Shorted to High Source                                |
| 231        | 109       | 3         | Amber      | Coolant Pressure                   | Coolant Pressure Sensor Circuit - Voltage Above Normal, or Shorted to High Source                                 |
| 232        | 109       | 4         | Amber      | Coolant Pressure                   | Coolant Pressure Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                                  |
| 233        | 109       | 18        | Amber      | Coolant Pressure                   | Coolant Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level                        |
| 234        | 190       | 0         | Red        | Engine Speed                       | Engine Speed High - Data Valid but Above Normal Operational Range - Most Severe Level                             |
| 235        | 111       | 1         | Red        | Coolant Level                      | Coolant Level Low - Data Valid but Below Normal Operational Range - Most Severe Level                             |
| 237        | 644       | 2         | Amber      | External Speed Input               | External Speed Input (Multiple Unit Synchronization) - Data Erratic, Intermittent, or Incorrect                   |
| 238        | 611       | 4         | Amber      | System Diagnostic code # 1         | Sensor Supply Voltage #3 Circuit – Voltage Below Normal, or Shorted to Low Source                                 |
| 241        | 84        | 2         | Amber      | Wheel-based Vehicle Speed          | Vehicle Speed Sensor Circuit - Data Erratic, Intermittent, or Incorrect   |
| 242        | 84        | 10        | Amber      | Wheel-based Vehicle Speed          | Vehicle Speed Sensor Circuit tampering has been detected – Abnormal Rate of Change                                |
| 245        | 647       | 4         | Amber      | Fan Clutch Output Device Driver    | Fan Control Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 249        | 171       | 3         | Amber      | Ambient Air Temperature            | Ambient Air Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source                          |
| 256        | 171       | 4         | Amber      | Ambient Air Temperature            | Ambient Air Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                           |
| 261        | 174       | 16        | Amber      | Fuel Temperature                   | Engine Fuel Temperature - Data Valid but Above Normal Operational Range - Moderately Severe Level                 |
| 263        | 174       | 3         | Amber      | Fuel Temperature                   | Engine Fuel Temperature Sensor 1 Circuit - Voltage Above Normal, or Shorted to High Source                        |
| 265        | 174       | 4         | Amber      | Fuel Temperature                   | Engine Fuel Temperature Sensor 1 Circuit - Voltage Below Normal, or Shorted to Low Source                         |
| 268        | 94        | 2         | Amber      | Fuel Delivery Pressure             | Fuel Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect   |
| 271        | 1347      | 4         | Amber      | Fuel Pump Pressurizing Assembly #1 | High Fuel Pressure Solenoid Valve Circuit – Voltage Below Normal, or Shorted to Low Source                        |
| 272        | 1347      | 3         | Amber      | Fuel Pump Pressurizing Assembly #1 | High Fuel Pressure Solenoid Valve Circuit – Voltage Above Normal, or Shorted to High Source                       |
| 275        | 1347      | 7         | Amber      | Fuel Pump Pressurizing Assembly #1 | Fuel Pumping Element (Front) – Mechanical System Not Responding Properly or Out of Adjustment                     |
| 281        | 1347      | 7         | Amber      | Fuel Pump Pressurizing Assembly #1 | High Fuel Pressure Solenoid Valve #1 – Mechanical System Not Responding Properly or Out of Adjustment             |
| 284        | 1043      | 4         | Amber      | Internal Sensor Voltage Supply     | Engine Speed/Position Sensor (Crankshaft) Supply Voltage Circuit - Voltage Below Normal, or Shorted to Low Source |
| 285        | 639       | 9         | Amber      | SAE J1939 Datalink                 | SAE J1939 Multiplexing PGN Timeout Error - Abnormal Update Rate   |
| 286        | 639       | 13        | Amber      | SAE J1939 Datalink                 | SAE J1939 Multiplexing Configuration Error – Out of Calibration   |
| 287        | 91        | 19        | Red        | Accelerator Pedal Position         | SAE J1939 Multiplexing Accelerator Pedal or Lever Sensor System Error - Received Network Data In Error            |
| 288        | 974       | 19        | Red        | Remote Accelerator                 | SAE J1939 Multiplexing Remote Accelerator Pedal or Lever Data Error - Received Network Data In Error              |
| 293        | 441       | 3         | Amber      | OEM Temperature                    | Auxiliary Temperature Sensor Input # 1 Circuit - Voltage Above Normal, or Shorted to High Source                  |
| 294        | 441       | 4         | Amber      | OEM Temperature                    | Auxiliary Temperature Sensor Input # 1 Circuit - Voltage Below Normal, or Shorted to Low Source                   |
| 295        | 108       | 2         | Amber      | Barometric Pressure                | Barometric Pressure Sensor Circuit - Data Erratic,  |

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description             | Cummins Description   |
|------------|-----------|-----------|------------|-----------------------------------|---|
|            |           |           |            |                                   | Intermittent, or Incorrect  |
| 296        | 1388      | 14        | Red        | Auxiliary Pressure                | Auxiliary Pressure Sensor Input 1 - Special Instructions  |
| 297        | 1388      | 3         | Amber      | Auxiliary Pressure                | Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Above Normal, or Shorted to High Source                       |
| 298        | 1388      | 4         | Amber      | Auxiliary Pressure                | Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Below Normal, or Shorted to Low Source                        |
| 319        | 251       | 2         | Maint      | Real Time Clock Power             | Real Time Clock Power Interrupt - Data Erratic, Intermittent, or Incorrect  |
| 322        | 651       | 5         | Amber      | Injector Cylinder #01             | Injector Solenoid Cylinder #1 Circuit - Current Below Normal, or Open Circuit                                       |
| 323        | 655       | 5         | Amber      | Injector Cylinder #05             | Injector Solenoid Cylinder #5 Circuit - Current Below Normal, or Open Circuit                                       |
| 324        | 653       | 5         | Amber      | Injector Cylinder #03             | Injector Solenoid Cylinder #3 Circuit - Current Below Normal, or Open Circuit                                       |
| 325        | 656       | 5         | Amber      | Injector Cylinder #06             | Injector Solenoid Cylinder #6 Circuit - Current Below Normal, or Open Circuit                                       |
| 331        | 652       | 5         | Amber      | Injector Cylinder #02             | Injector Solenoid Cylinder #2 Circuit - Current Below Normal, or Open Circuit                                       |
| 332        | 654       | 5         | Amber      | Injector Cylinder #04             | Injector Solenoid Cylinder #4 Circuit - Current Below Normal, or Open Circuit                                       |
| 334        | 110       | 2         | Amber      | Engine Coolant Temperature        | Coolant Temperature Sensor Circuit - Data Erratic, Intermittent, or Incorrect                                       |
| 338        | 1267      | 3         | Amber      | Vehicle Accessories Relay Driver  | Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal, or Shorted to High Source            |
| 339        | 1267      | 4         | Amber      | Vehicle Accessories Relay Driver  | Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal, or Shorted to Low Source             |
| 341        | 630       | 2         | Amber      | Calibration Memory                | Engine Control Module data lost - Data Erratic, Intermittent, or Incorrect  |
| 342        | 630       | 13        | Red        | Calibration Memory                | Electronic Calibration Code Incompatibility - Out of Calibration  |
| 343        | 629       | 12        | Amber      | Controller #1                     | Engine Control Module Warning internal hardware failure - Bad Intelligent Device or Component                       |
| 351        | 629       | 12        | Amber      | Controller #1                     | Injector Power Supply - Bad Intelligent Device or Component   |
| 352        | 1079      | 4         | Amber      | 5 Volts DC Supply                 | Sensor Supply Voltage #1 Circuit - Voltage Below Normal, or Shorted to Low Source                                   |
| 386        | 1079      | 3         | Amber      | 5 Volts DC Supply                 | Sensor Supply Voltage #1 Circuit - Voltage Above Normal, or Shorted to High Source                                  |
| 387        | 1043      | 3         | Amber      | Internal Sensor Voltage Supply    | Accelerator Pedal or Lever Position Sensor Supply Voltage Circuit - Voltage Above Normal, or Shorted to High Source |
| 415        | 100       | 1         | Red        | Engine Oil Pressure               | Oil Pressure Low - Data Valid but Below Normal Operational Range - Most Severe Level                                |
| 418        | 97        | 15        | Maint.     | Water in Fuel Indicator           | Water in Fuel Indicator High - Data Valid but Above Normal Operational Range - Least Severe Level                   |
| 422        | 111       | 2         | Amber      | Coolant Level                     | Coolant Level - Data Erratic, Intermittent, or Incorrect  |
| 425        | 175       | 2         | Amber      | Oil Temperature                   | Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect   |
| 428        | 97        | 3         | Amber      | Water in Fuel Indicator           | Water in Fuel Sensor Circuit - Voltage Above Normal, or Shorted to High Source                                      |
| 429        | 97        | 4         | Amber      | Water in Fuel Indicator           | Water in Fuel Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                                       |
| 431        | 558       | 2         | Amber      | Accelerator Pedal Low Idle Switch | Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect                       |
| 432        | 558       | 13        | Red        | Accelerator Pedal Low Idle Switch | Accelerator Pedal or Lever Idle Validation Circuit - Out of Calibration   |
| 433        | 102       | 2         | Amber      | Boost Pressure                    | Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect                                  |
| 434        | 627       | 2         | Amber      | Power Supply                      | Power Lost without Ignition Off - Data Erratic, Intermittent, or Incorrect  |

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description             | Cummins Description   |
|------------|-----------|-----------|------------|-----------------------------------|---|
|            |           |           |            |                                   | Intermittent, or Incorrect  |
| 296        | 1388      | 14        | Red        | Auxiliary Pressure                | Auxiliary Pressure Sensor Input 1 - Special Instructions  |
| 297        | 1388      | 3         | Amber      | Auxiliary Pressure                | Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Above Normal, or Shorted to High Source                       |
| 298        | 1388      | 4         | Amber      | Auxiliary Pressure                | Auxiliary Pressure Sensor Input # 2 Circuit - Voltage Below Normal, or Shorted to Low Source                        |
| 319        | 251       | 2         | Maint      | Real Time Clock Power             | Real Time Clock Power Interrupt - Data Erratic, Intermittent, or Incorrect  |
| 322        | 651       | 5         | Amber      | Injector Cylinder #01             | Injector Solenoid Cylinder #1 Circuit – Current Below Normal, or Open Circuit                                       |
| 323        | 655       | 5         | Amber      | Injector Cylinder #05             | Injector Solenoid Cylinder #5 Circuit – Current Below Normal, or Open Circuit                                       |
| 324        | 653       | 5         | Amber      | Injector Cylinder #03             | Injector Solenoid Cylinder #3 Circuit – Current Below Normal, or Open Circuit                                       |
| 325        | 656       | 5         | Amber      | Injector Cylinder #06             | Injector Solenoid Cylinder #6 Circuit – Current Below Normal, or Open Circuit                                       |
| 331        | 652       | 5         | Amber      | Injector Cylinder #02             | Injector Solenoid Cylinder #2 Circuit – Current Below Normal, or Open Circuit                                       |
| 332        | 654       | 5         | Amber      | Injector Cylinder #04             | Injector Solenoid Cylinder #4 Circuit – Current Below Normal, or Open Circuit                                       |
| 334        | 110       | 2         | Amber      | Engine Coolant Temperature        | Coolant Temperature Sensor Circuit – Data Erratic, Intermittent, or Incorrect                                       |
| 338        | 1267      | 3         | Amber      | Vehicle Accessories Relay Driver  | Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Above Normal, or Shorted to High Source            |
| 339        | 1267      | 4         | Amber      | Vehicle Accessories Relay Driver  | Idle Shutdown Vehicle Accessories Relay Driver Circuit - Voltage Below Normal, or Shorted to Low Source             |
| 341        | 630       | 2         | Amber      | Calibration Memory                | Engine Control Module data lost - Data Erratic, Intermittent, or Incorrect  |
| 342        | 630       | 13        | Red        | Calibration Memory                | Electronic Calibration Code Incompatibility - Out of Calibration  |
| 343        | 629       | 12        | Amber      | Controller #1                     | Engine Control Module Warning internal hardware failure - Bad Intelligent Device or Component                       |
| 351        | 629       | 12        | Amber      | Controller #1                     | Injector Power Supply - Bad Intelligent Device or Component   |
| 352        | 1079      | 4         | Amber      | 5 Volts DC Supply                 | Sensor Supply Voltage #1 Circuit – Voltage Below Normal, or Shorted to Low Source                                   |
| 386        | 1079      | 3         | Amber      | 5 Volts DC Supply                 | Sensor Supply Voltage #1 Circuit – Voltage Above Normal, or Shorted to High Source                                  |
| 387        | 1043      | 3         | Amber      | Internal Sensor Voltage Supply    | Accelerator Pedal or Lever Position Sensor Supply Voltage Circuit - Voltage Above Normal, or Shorted to High Source |
| 415        | 100       | 1         | Red        | Engine Oil Pressure               | Oil Pressure Low – Data Valid but Below Normal Operational Range - Most Severe Level                                |
| 418        | 97        | 15        | Maint.     | Water in Fuel Indicator           | Water in Fuel Indicator High - Data Valid but Above Normal Operational Range – Least Severe Level                   |
| 422        | 111       | 2         | Amber      | Coolant Level                     | Coolant Level - Data Erratic, Intermittent, or Incorrect  |
| 425        | 175       | 2         | Amber      | Oil Temperature                   | Engine Oil Temperature - Data Erratic, Intermittent, or Incorrect   |
| 428        | 97        | 3         | Amber      | Water in Fuel Indicator           | Water in Fuel Sensor Circuit - Voltage Above Normal, or Shorted to High Source                                      |
| 429        | 97        | 4         | Amber      | Water in Fuel Indicator           | Water in Fuel Sensor Circuit - Voltage Below Normal, or Shorted to Low Source                                       |
| 431        | 558       | 2         | Amber      | Accelerator Pedal Low Idle Switch | Accelerator Pedal or Lever Idle Validation Circuit - Data Erratic, Intermittent, or Incorrect                       |
| 432        | 558       | 13        | Red        | Accelerator Pedal Low Idle Switch | Accelerator Pedal or Lever Idle Validation Circuit - Out of Calibration   |
| 433        | 102       | 2         | Amber      | Boost Pressure                    | Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect                                  |
| 434        | 627       | 2         | Amber      | Power Supply                      | Power Lost without Ignition Off - Data Erratic, Intermittent, or Incorrect  |



| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description                        | Cummins Description   |
|------------|-----------|-----------|------------|--|---|
| 692        | 1172      | 4         | Amber      | Turbocharger #1 Compressor Inlet Temperature | Turbocharger #1 Compressor Inlet Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 697        | 1136      | 3         | Amber      | Sensor Circuit - Voltage                     | ECM Internal Temperature Sensor Circuit - Voltage Above Normal, or Shorted to High Source   |
| 698        | 1136      | 4         | Amber      | Sensor Circuit - Voltage                     | ECM Internal Temperature Sensor Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 719        | 22        | 3         | Amber      | Crankcase Pressure                           | Extended Crankcase Blow-by Pressure Circuit - Voltage Above Normal, or Shorted to High Source   |
| 729        | 22        | 4         | Amber      | Crankcase Pressure                           | Extended Crankcase Blow-by Pressure Circuit - Voltage Below Normal, or Shorted to Low Source  |
| 731        | 723       | 7         | Amber      | Engine Speed Sensor #2                       | Engine Speed/Position #2 mechanical misalignment between camshaft and crankshaft sensors - Mechanical System Not Responding Properly or Out of Adjustment |
| 753        | 723       | 2         | Amber      | Engine Speed Sensor #2                       | Engine Speed/Position #2 Camshaft sync error - Data Erratic, Intermittent, or Incorrect   |
| 757        | 611       | 31        | Amber      | Electronic Control Module                    | Electronic Control Module data lost - Condition Exists  |
| 778        | 723       | 2         | Amber      | Engine Speed Sensor #2                       | Engine Speed Sensor (Camshaft) Error - Data Erratic, Intermittent, or Incorrect   |
| 779        | 703       | 11        | Amber      | Auxiliary Equipment Sensor Input             | Warning Auxiliary Equipment Sensor Input # 3 (OEM Switch) - Root Cause Not Known  |
| 951        | 166       | 2         | None       | Cylinder Power                               | Cylinder Power Imbalance Between Cylinders - Data Erratic, Intermittent, or Incorrect   |
| 1117       | 627       | 2         | None       | Power Supply                                 | Power Lost With Ignition On - Data Erratic, Intermittent, or Incorrect  |
| 1139       | 651       | 7         | Amber      | Injector Cylinder # 01                       | Injector Cylinder #1 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1141       | 652       | 7         | Amber      | Injector Cylinder # 02                       | Injector Cylinder #2 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1142       | 653       | 7         | Amber      | Injector Cylinder # 03                       | Injector Cylinder #3 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1143       | 654       | 7         | Amber      | Injector Cylinder # 04                       | Injector Cylinder #4 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1144       | 655       | 7         | Amber      | Injector Cylinder # 05                       | Injector Cylinder #5 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1145       | 656       | 7         | Amber      | Injector Cylinder # 06                       | Injector Cylinder #6 - Mechanical System Not Responding Properly or Out of Adjustment   |
| 1239       | 2623      | 3         | Amber      | Accelerator Pedal Position                   | Accelerator Pedal or Lever Position Sensor 2 Circuit - Voltage Above Normal, or Shorted to High Source  |
| 1241       | 2623      | 4         | Amber      | Accelerator Pedal Position                   | Accelerator Pedal or Lever Position Sensor 2 Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 1242       | 91        | 2         | Red        | Accelerator Pedal Position                   | Accelerator Pedal or Lever Position Sensor 1 and 2 - Data Erratic, Intermittent, or Incorrect   |
| 1256       | 1563      | 2         | Amber      | Control Module Identification Input State    | Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect  |
| 1257       | 1563      | 2         | Red        | Control Module Identification Input State    | Control Module Identification Input State Error - Data Erratic, Intermittent, or Incorrect  |
| 1911       | 157       | 0         | Amber      | Injector Metering Rail                       | Injector Metering Rail 1 Pressure - Data Valid but Above Normal Operational Range - Most Severe Level   |
| 2111       | 32        | 3         | Amber      | Coolant Temperature                          | Coolant Temperature 2 Sensor Circuit - Voltage Above Normal, or Shorted to High Source  |
| 2112       | 52        | 4         | Amber      | Coolant Temperature                          | Coolant Temperature 2 Sensor Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 2113       | 52        | 16        | Amber      | Coolant Temperature                          | Coolant Temperature 2 - Data Valid but Above Normal Operational Range - Moderately Severe Level   |
| 2114       | 52        | 0         | Red        | Coolant Temperature                          | Coolant Temperature 2 - Data Valid but Above Normal Operational Range - Most Severe Level   |
| 2115       | 2981      | 3         | Amber      | Coolant Pressure                             | Coolant Pressure 2 Circuit - Voltage Above Normal, or Shorted to High Source  |
| 2116       | 2981      | 4         | Amber      | Coolant Pressure                             | Coolant Pressure 2 Circuit - Voltage Below Normal, or Shorted to Low Source   |

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description               | Cummins Description   |
|------------|-----------|-----------|------------|-------------------------------------|---|
| 2117       | 2981      | 18        | Amber      | Coolant Pressure                    | Coolant Pressure 2 - Data Valid but Below Normal Operational Range - Moderately Severe Level                                      |
| 2185       | 611       | 3         | Amber      | System Diagnostic code # 1          | Sensor Supply Voltage #4 Circuit - Voltage Above Normal, or Shorted to High Source  |
| 2186       | 611       | 4         | Amber      | System Diagnostic code # 1          | Sensor Supply Voltage #4 Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 2195       | 703       | 14        | Red        | Auxiliary Equipment Sensor          | Auxiliary Equipment Sensor Input 3 Engine Protection Critical - Special Instructions  |
| 2215       | 94        | 18        | Amber      | Fuel Delivery Pressure              | Fuel Pump Delivery Pressure - Data Valid but Below Normal Operational Range - Moderately Severe Level                             |
| 2216       | 94        | 1         | Amber      | Fuel Delivery Pressure              | Fuel Pump Delivery Pressure - Data Valid but Above Normal Operational Range - Moderately Severe Level                             |
| 2217       | 630       | 31        | Amber      | Calibration Memory                  | ECM Program Memory (RAM) Corruption - Condition Exists  |
| 2249       | 157       | 1         | Amber      | Injector Metering Rail 1 Pressure   | Injector Metering Rail 1 Pressure - Data Valid but Below Normal Operational Range - Most Severe Level                             |
| 2265       | 1075      | 3         | Amber      | Electric Lift Pump for Engine Fuel  | Fuel Priming Pump Control Signal Circuit - Voltage Above Normal, or Shorted to High Source  |
| 2266       | 1075      | 4         | Amber      | Electric Lift Pump for Engine Fuel  | Fuel Priming Pump Control Signal Circuit - Voltage Below Normal, or Shorted to Low Source   |
| 2292       | 611       | 16        | Amber      | Fuel Inlet Meter Device             | Fuel Inlet Meter Device - Data Valid but Above Normal Operational Range - Moderately Severe Level                                 |
| 2293       | 611       | 18        | Amber      | Fuel Inlet Meter Device             | Fuel Inlet Meter Device flow demand lower than expected - Data Valid but Below Normal Operational Range - Moderately Severe Level |
| 2311       | 633       | 31        | Amber      | Fuel Control Valve #1               | Fueling Actuator #1 Circuit Error - Condition Exists  |
| 2321       | 190       | 2         | None       | Engine Speed                        | Engine Speed / Position Sensor #1 - Data Erratic, Intermittent, or Incorrect  |
| 2322       | 723       | 2         | None       | Engine Speed Sensor #2              | Engine Speed / Position Sensor #2 - Data Erratic, Intermittent, or Incorrect  |
| 2345       | 103       | 10        | Amber      | Turbocharger 1 Speed                | Turbocharger speed invalid rate of change detected Abnormal Rate of Change  |
| 2346       | 2789      | 15        | None       | System Diagnostic Code #1           | Turbocharger Turbine Inlet Temperature (Calculated) - Data Valid but Above Normal Operational Range - Least Severe Level          |
| 2347       | 2629      | 15        | None       | System Diagnostic Code #1           | Turbocharger Compressor Outlet Temperature (Calculated) - Data Valid but Above Normal Operational Range - Least Severe Level      |
| 2362       | 1072      | 4         | Amber      | Engine Compression Brake Output # 1 | Engine Brake Actuator Circuit #1 - Voltage Below Normal, or Shorted to Low Source   |
| 2363       | 1073      | 4         | Amber      | Engine Compression Brake Output # 2 | Engine Brake Actuator Circuit #2 - Voltage Below Normal, or Shorted to Low Source   |
| 2366       | 1072      | 3         | Amber      | Engine Compression Brake Output # 1 | Engine Brake Actuator Circuit #1 - Voltage Above Normal, or Shorted to High Source  |
| 2367       | 1073      | 3         | Amber      | Engine Compression Brake Output # 2 | Engine Brake Actuator Circuit #2 - Voltage Above Normal, or Shorted to High Source  |
| 2377       | 647       | 3         | Amber      | Fan Clutch Output Device Driver     | Fan Control Circuit - Voltage Above Normal, or Shorted to High Source   |
| 2384       | 641       | 4         | Amber      | Variable Geometry Turbocharger      | VGT Actuator Driver Circuit - Voltage Below Normal or Shorted to Low Source   |
| 2385       | 641       | 3         | Amber      | Variable Geometry Turbocharger      | VGT Actuator Driver Circuit - Voltage Above Normal or Shorted to High Source  |
| 2555       | 729       | 3         | Amber      | Inlet Air Heater Driver #1          | Intake Air Heater #1 Circuit - Voltage Above Normal or Shorted to High Source   |
| 2556       | 729       | 4         | Amber      | Inlet Air Heater Driver #1          | Intake Air Heater #1 Circuit - Voltage Below Normal or Shorted to Low Source  |
|            |           |           |            |                                     | Auxiliary PWM Driver #1 - Voltage Above Normal  |

| Fault Code | J1939 SPN | J1939 FMI | Lamp Color | J1939 SPN Description          | Cummins Description   |
|------------|-----------|-----------|------------|--------------------------------|---|
| 2963       | 110       | 15        | None       | Engine Coolant Temperature     | Engine Coolant Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level  |
| 2964       | 105       | 15        | None       | Intake Manifold #1 Temperature | Intake Manifold Temperature High - Data Valid but Above Normal Operational Range - Least Severe Level |
| 2973       | 102       | 2         | Amber      | Boost Pressure                 | Intake Manifold Pressure Sensor Circuit - Data Erratic, Intermittent, or Incorrect                    |



## 2.3 Problems during paving

| Problem  | Reason  |
|--|---|
| Wavy surface<br>("short waves")                | <ul style="list-style-type: none"> <li>- change in the material temperature, demixing</li> <li>- wrong material composition</li> <li>- incorrect operation of the roller</li> <li>- incorrectly prepared foundation</li> <li>- long standstill times between loads</li> <li>- grade control reference line is not suitable</li> <li>- grade control jumps to the reference line</li> <li>- grade control toggles between up and down (inertia setting is too high)</li> <li>- bottom plates of the screed are loose</li> <li>- bottom plates of the screed are warped or not uniformly worn</li> <li>- screed is not operated in the floating position</li> <li>- too much play in the mechanical screed link/suspension</li> <li>- paver finisher speed is too high</li> <li>- augers are overloaded</li> <li>- changing material pressure against the screed</li> </ul> |
| Wavy surface<br>("long waves")                 | <ul style="list-style-type: none"> <li>- change in the material temperature</li> <li>- demixing</li> <li>- roller has stopped on the hot material</li> <li>- roller has turned or roller speed has been changed too fast</li> <li>- incorrect operation of the roller</li> <li>- incorrectly prepared foundation</li> <li>- truck brake is applied too tight</li> <li>- long standstill times between loads</li> <li>- grade control reference line is not suitable</li> <li>- incorrect installation of the grade control</li> <li>- limit switch is not correctly set</li> <li>- screed is empty</li> <li>- screed has not been switched to the floating position</li> <li>- too much play in the mechanical screed link</li> <li>- auger is set too deep</li> <li>- auger is overloaded</li> <li>- changing material pressure against the screed</li> </ul>            |
| Cracks in the layer<br>(over the entire width) | <ul style="list-style-type: none"> <li>- material temperature is too low</li> <li>- change in the material temperature</li> <li>- moisture on the foundation</li> <li>- demixing</li> <li>- wrong material composition</li> <li>- wrong layer height for maximum grain size</li> <li>- cold screed</li> <li>- bottom plates of the screed are worn or warped</li> <li>- paver finisher speed is too high</li> </ul>   |

| Problem  | Reason  |
|--|---|
| Cracks in the layer (centre strip)                       | <ul style="list-style-type: none"> <li>- material temperature</li> <li>- cold screed</li> <li>- bottom plates are worn or warped</li> <li>- wrong crowning</li> </ul>   |
| Cracks in the layer (outer strip)                        | <ul style="list-style-type: none"> <li>- material temperature</li> <li>- screed extendable parts are incorrectly installed</li> <li>- limit switch is not correctly set</li> <li>- cold screed</li> <li>- bottom plates are worn or warped</li> <li>- paver finisher speed is too high</li> </ul>   |
| Layer composition is not uniform                         | <ul style="list-style-type: none"> <li>- material temperature</li> <li>- change in the material temperature</li> <li>- moisture on the foundation</li> <li>- demixing</li> <li>- wrong material composition</li> <li>- incorrectly prepared foundation</li> <li>- wrong layer height for maximum grain size</li> <li>- long standstill times between loads</li> <li>- vibration is too slow</li> <li>- screed extendable parts are incorrectly installed</li> <li>- cold screed</li> <li>- bottom plates are worn or warped</li> <li>- screed is not operated in the floating position</li> <li>- paver finisher speed is too high</li> <li>- auger is overloaded</li> <li>- changing material pressure against the screed</li> </ul> |
| Marks in the surface                                     | <ul style="list-style-type: none"> <li>- truck hits too much against the finisher while aligning to the finisher</li> <li>- too much play in the mechanical screed link/suspension</li> <li>- truck brake is applied</li> <li>- vibration is too high while standing on a spot</li> </ul>   |
| Screed does not react to corrective measures as expected | <ul style="list-style-type: none"> <li>- material temperature</li> <li>- change in the material temperature</li> <li>- wrong layer height for maximum grain size</li> <li>- incorrect installation of the grade control</li> <li>- vibration is too slow</li> <li>- screed is not operated in the floating position</li> <li>- too much play in the mechanical screed link</li> <li>- paver finisher speed is too high</li> </ul>   |

## 2.4 Malfunctions on the paver finisher or screed

| Malfunction                            | Reason   | Remedy  |
|--|--|---|
| At the diesel engine                   | Diverse  | See operating instructions for the engine                               |
| Diesel engine does not start           | Batteries empty                                    | See "External starting" (start assistance)                              |
|  | Diverse  | see "Towing"  |
| Tamper or vibration is not functioning | Tamper is obstructed by cold bitumen               | Properly heat the screed  |
|  | Hydraulic oil level in the tank is too low         | Top up the oil  |
|  | Pressure limiting valve is defective               | Replace the valve; if necessary, repair and adjust the valve            |
|  | Leak in the suction line of the pump               | Seal or replace the connections   |
|  |  | Tighten or replace the hose clamps                                      |
|  | Oil filter is soiled                               | Clean the filter; if necessary, replace the filter                      |
| Conveyor or augers run too slowly      | Hydraulic oil level in the tank is too low         | Top up the oil  |
|  | Power supply interrupted                           | Check fuses and cables; replace if necessary                            |
|  | Switch is defective                                | Replace the switch  |
|  | One of the pressure limiting valves is defective   | Repair or exchange the valves   |
|  | Pump shaft broken                                  | Replace the pump  |
|  | Limit switch does not switch or regulate correctly | Check the switch; replace and adjust the switch if necessary            |
|  | Pump is defective                                  | Check the high pressure filter for dirt particles; replace if necessary |
|  | Oil filter is soiled                               | Replace the filter  |

|                             |   |   |
|-----------------------------|---|---|
| Hopper cannot be swung open | Engine speed is too low                 | Increase the speed                          |
|                             | Hydraulic oil level is too low          | Top up the oil                              |
|                             | Leak in the suction line                | Tighten the connections                     |
|                             | Flow rate regulator defective           | Replace                                     |
|                             | Leaking seals of the hydraulic cylinder | Replace                                     |
|                             | Control valve is defective              | Replace                                     |
|                             | Power supply interrupted                | Check fuse and cables; replace if necessary |

| Malfunction                            | Reason  | Remedy                                      |
|--|---|---|
| Hoppers lowers inadvertently           | Control valve is defective                    | Replace                                     |
|  | Leaking seals of the hydraulic cylinder       | Replace                                     |
| Screed cannot be lifted                | Oil pressure too low                          | Increase the oil pressure                   |
|  | Leaking seal                                  | Replace                                     |
|  | Screed relieving or charging is switched on   | Switch must be in the centre position       |
|  | Power supply interrupted                      | Check fuse and cables; replace if necessary |
| Crossbeams cannot be lifted or lowered | Switch on the remote control is set to "Auto" | Set the switch to "Manual"                  |
|  | Power supply interrupted                      | Check fuse and cables; replace if necessary |
|  | Switch on the operating panel defective       | Replace                                     |
|  | Excess pressure valve defective               | Replace                                     |
|  | Flow rate regulator defective                 | Replace                                     |
|  | Seals defective                               | Replace                                     |
| Crossbeams lower inadvertently         | Control valves defective                      | Replace                                     |
|  | Pilot-controlled non-return valves defective  | Replace                                     |
|  | Seals defective                               | Replace                                     |

| Malfunction  | Reason  | Remedy  |
|--|---|---|
| Traction does not work                                     | Travel drive fuse defective                           | Replace (fuse strip on the operating panel)                                   |
|  | Power supply interrupted                              | Check potentiometer, cables, connectors; replace if necessary                 |
|  | Travel drive monitoring (type-specific) defective     | Replace   |
|  | Electro-hydraulic servo unit of the pump defective    | Replace the servo unit  |
|  | Insufficient supply pressure                          | Check and adjust if necessary   |
|  |   | Check the suction filter; replace the supply pump and the filter if necessary |
|  | Drive shaft of hydraulic pumps or engines broken      | Replace pump or engine  |
| Irregular engine speed, engine stop function does not work | Fuel level too low                                    | Check the fuel level; refill fuel if necessary                                |
|  | Fuse "engine speed control" defective                 | Replace (fuse strip on the operating panel)                                   |
|  | Electrical power defect (line break or short circuit) | Check potentiometer, cables, connectors; replace if necessary                 |

## E 12 Set-up and modification

### 1 Special notes on safety



Danger to personnel by inadvertent starting of the engine, travel drive, conveyor, auger, screed or screed lifting devices.

Unless otherwise specified, work may only be performed when the engine is at a standstill!

- To protect the paver finisher against inadvertent starting:  
Move drive lever into centre position and turn preselector controller to zero, remove ignition key and battery main switch.
- Protect lifted vehicle parts (e.g. screed or hopper) against lowering by means of mechanical safeguards.
- Replace parts or have them replaced as stipulated.



When connecting or disconnecting hydraulic hoses and when working on the hydraulic system, hot hydraulic fluid may spurt out at high pressure.

Switch off the engine and depressurise the hydraulic system! Protect your eyes!

- Mount all protective devices before re-commissioning the paver finisher.
- The walkway must always reach over the entire working width of the screed.  
The hinged walkway plate may only be folded up under the following conditions:
  - When paving next to a wall or a similar obstacle.
  - During transportation on a low-bed trailer.

## 2 Distribution auger


### 2.1 Height adjustment

Depending on the mix of materials, the set height of the distribution auger (1) – measured from its bottom edge – should lie above the material layer height.

#### Grain sizes up to 16 mm

Example:

Paving thickness 10 cm  
Min. height setting 15 cm  
from the ground

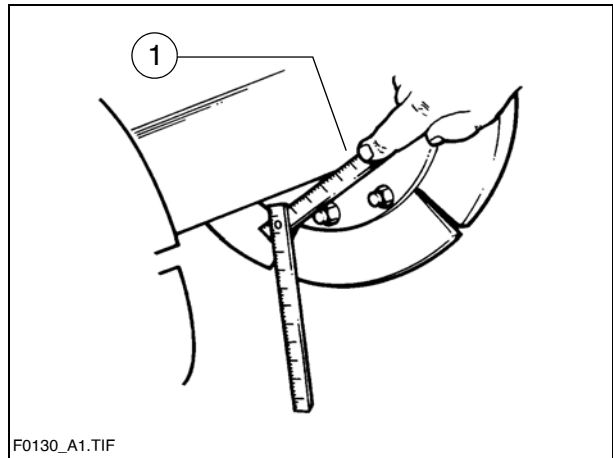

#### Grain sizes > 16 mm

Example:

Paving thickness 10 cm  
Min. height setting 18 cm  
from the ground




An incorrect height setting can result in the following problems during paving:

- Auger too high:  
Too much material in front of the screed; material overflow. When operating with larger working widths, demixing and traction problems may occur.
- Auger too low:  
Not enough material that can be precompacted by the auger. Irregularities resulting from this cannot be completely compensated by the screed (wavy surface).  
In addition, increased auger segment wear occurs.




## 2.2 Mechanical height adjustment of the auger

- Set the ratchet direction lever (1) to the clockwise or anti-clockwise direction. Turning anti-clockwise lowers the auger, turning clockwise lifts the auger.
- Set the desired height by alternately adjusting the right-hand and the left-hand side.
- The current height can be read at the scale (2).

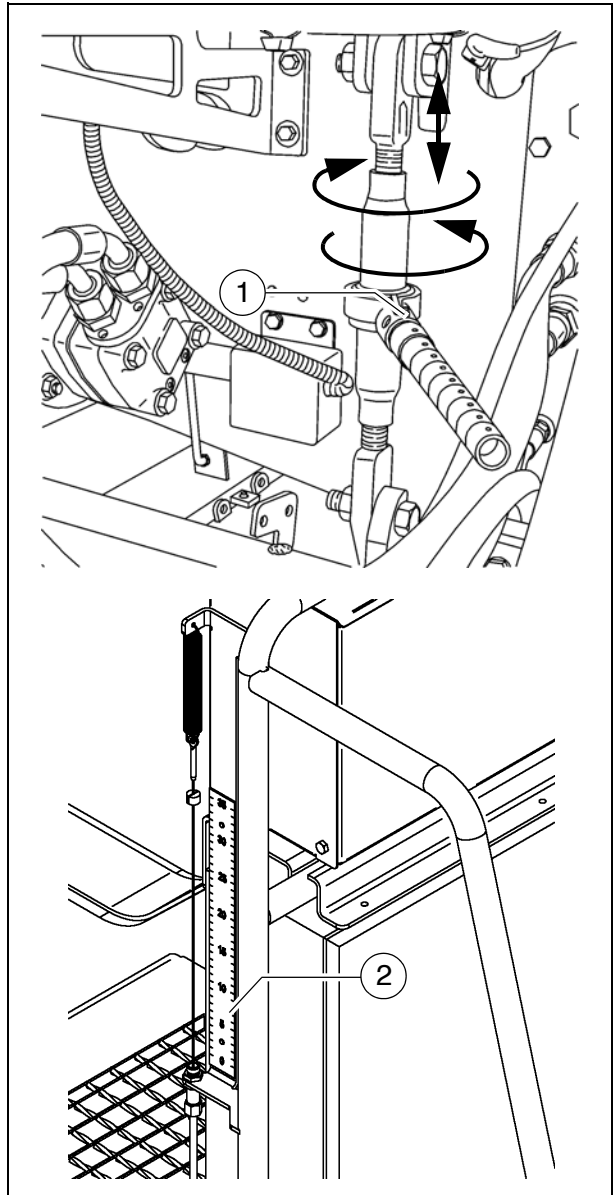

### 3 Auger extension

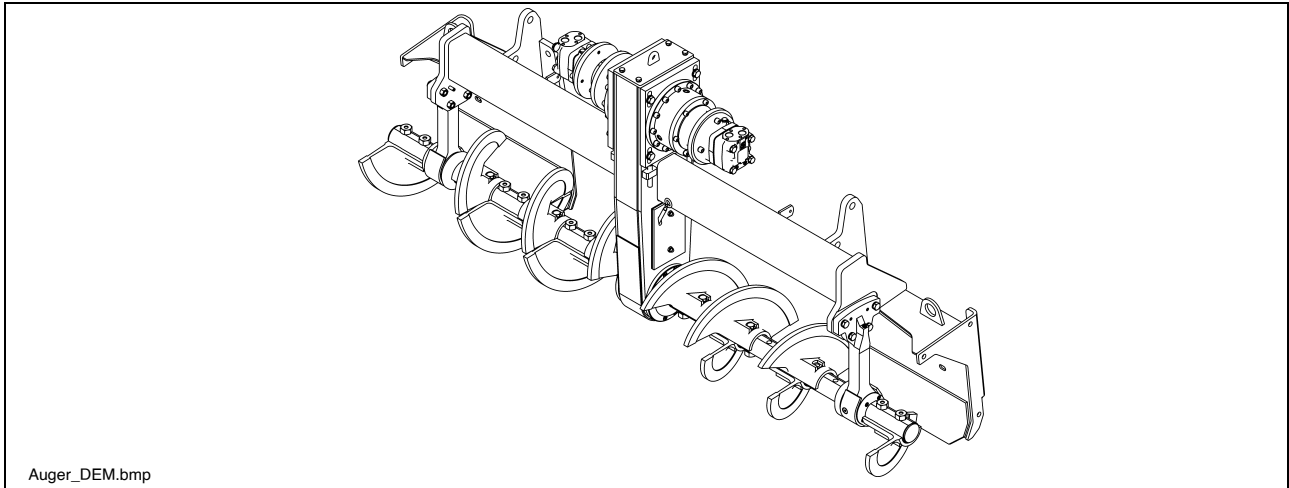

Depending on the type of screed, the most diversified working widths can be reached.



Auger and screed extension must match.

Refer to the appropriate chapter "Set-up and modification" in the Operating instructions for the screed:

– screed extension chart

To attain the desired working width, the respective screed extensions, side plates, augers, tunnel plates or cut-off shoes must be mounted.

For working widths of more than 3.00 m, the auger should be fitted with extension parts on both sides to improve material distribution and to reduce the wear.



The diesel engine must be switched off whenever work is performed on the auger. Danger of injuries!




If the operating conditions on the construction site permit an auger extension to be fitted, or render this necessary, always additionally fit the outer auger bearings.

For auger width extensions with an outer auger bearing on the basic unit, fit the shorter auger blade to the bearing. Otherwise, destruction between the auger blade and bearing may occur.

### 3.1 Mounting extension parts

#### Mounting the material shaft and auger extension

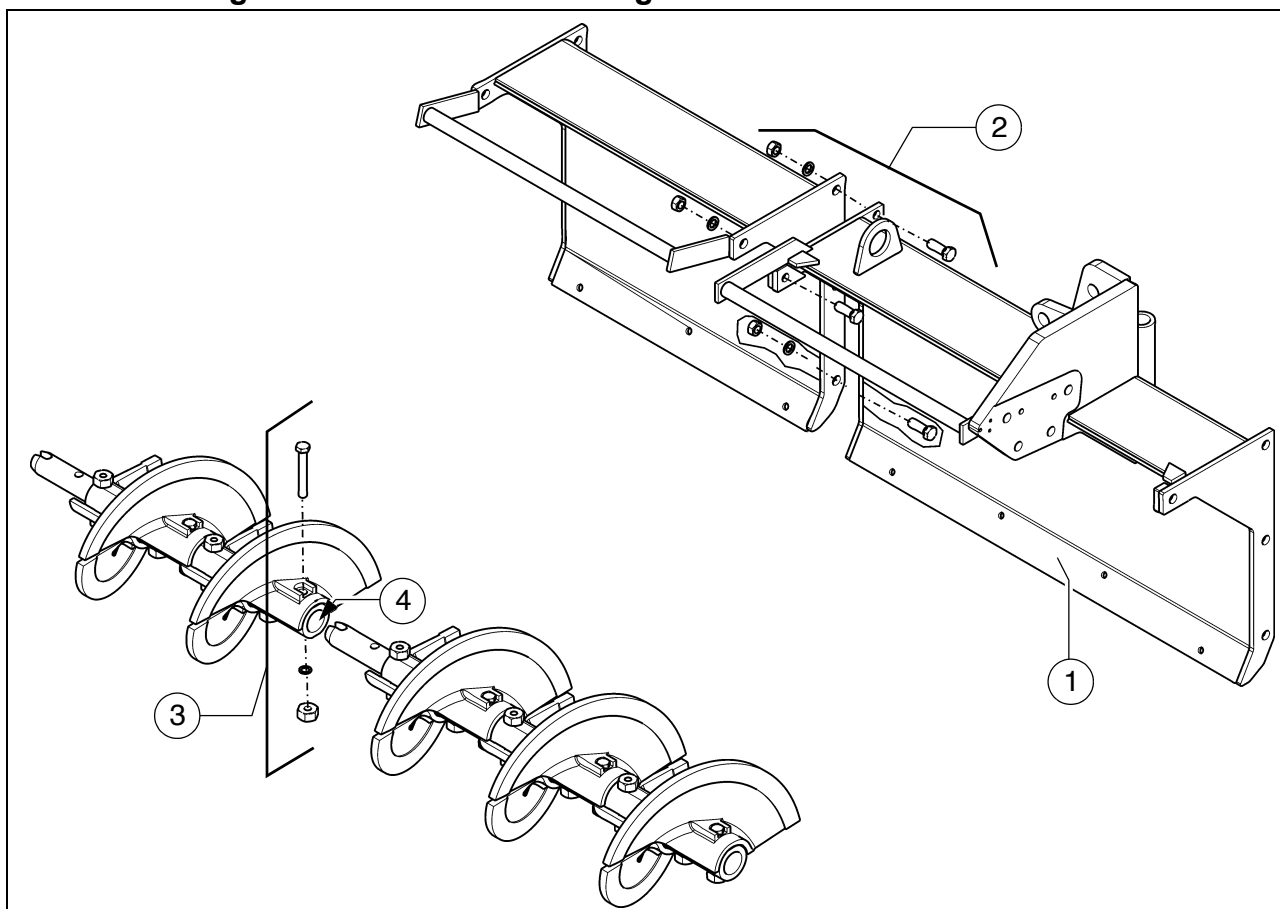


- Secure the additional material shaft (1) to the basic unit or the adjacent material shaft with the relevant assembly parts (2) (bolts, washers, nuts).
- Dismantle the assembly parts (3) of the adjacent auger blade, remove plug (4).
- Insert the auger shaft extension into the auger shaft.
- Reinstall the previously removed assembly parts (3) and simultaneously tighten the auger shaft bolts.
- Insert the plug (4) at the end of the auger.



Depending on the operating width, the outer auger bearing and/or auger end bearing must be installed:

## Mounting the outer auger bearing

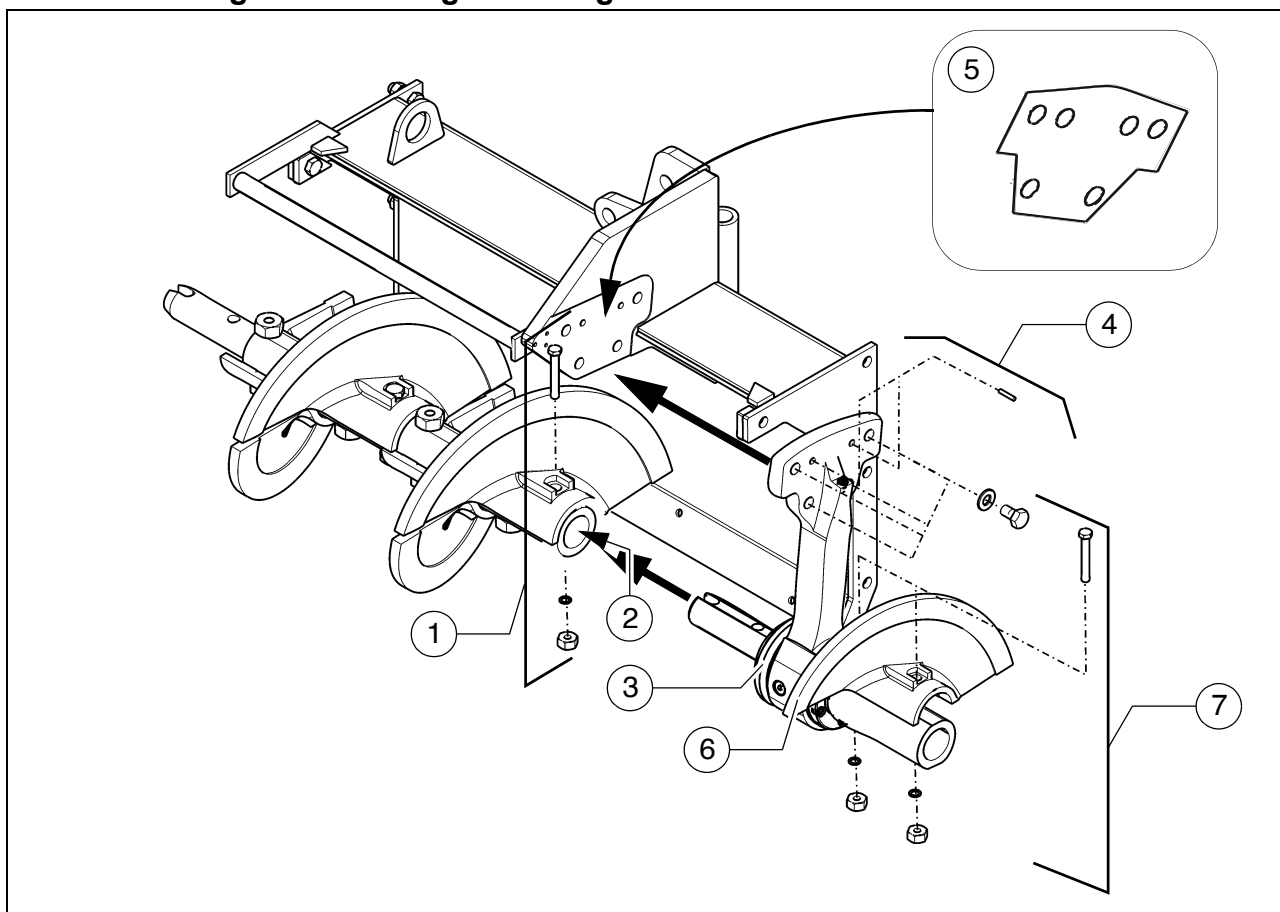


- Dismantle the assembly parts (1) of the adjacent auger blade, remove plug (2).
- Insert the outer auger bearing (3) into the auger extension.
- Secure the outer auger bearing to the brace shaft with the relevant assembly parts (4) (bolts, washers, pins).



If necessary, insert fitted plates (5)!










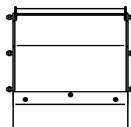
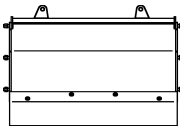
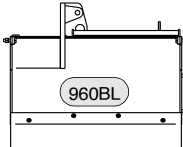
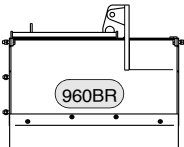
- Reinstall the previously removed assembly parts (1) and simultaneously tighten the auger shaft and bearing shaft bolts.
- Mount the auger half (5) on the outer side of the bearing with the relevant assembly parts (6) (bolts, washers, nuts).
- Insert the plug (2) at the end of the auger.


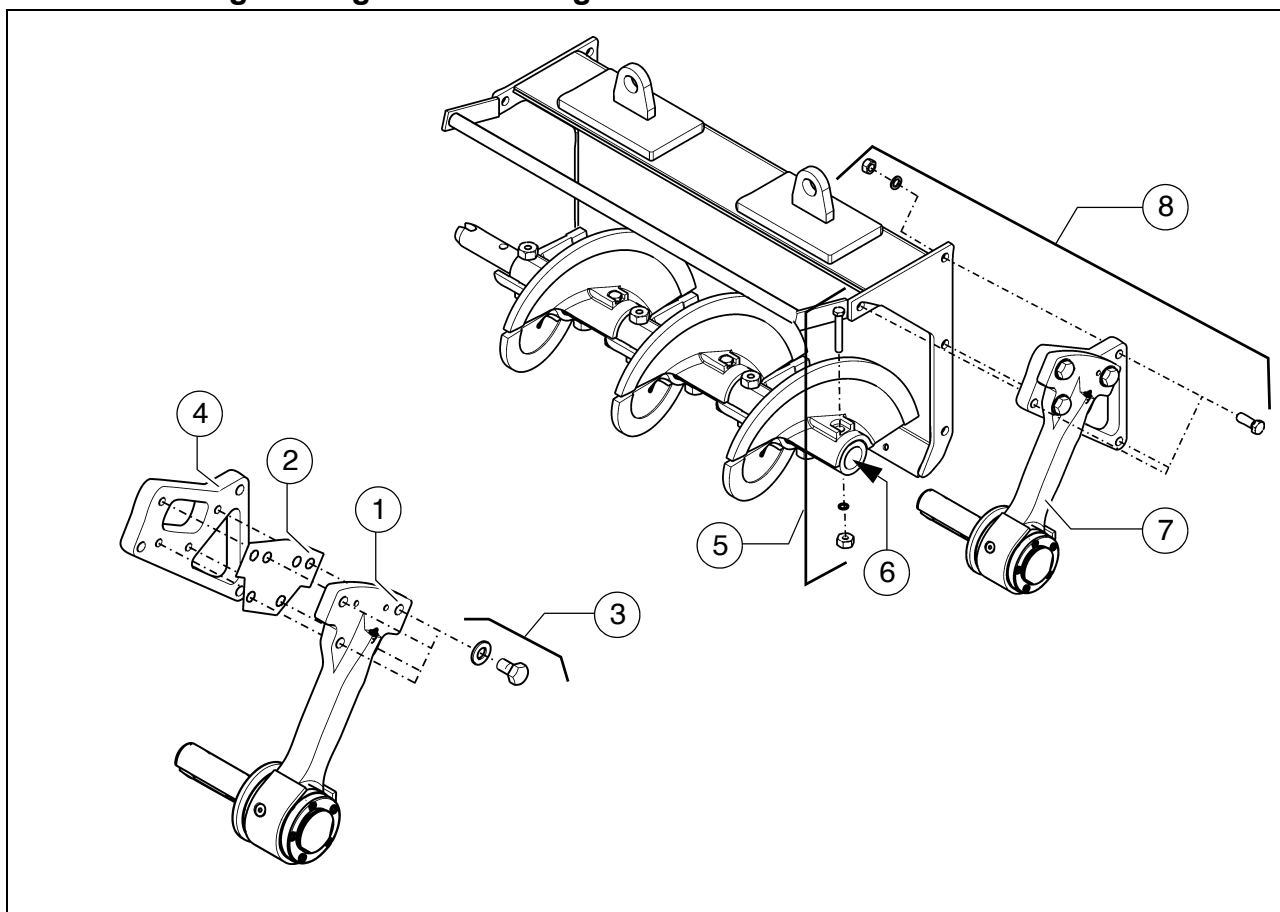
## Mounting the auger end bearing





- The auger end bearing must first be pre-assembled:
  - Mount the auger end bearing (1) together with the fitted plate (2) on the intermediate plate (4) with the relevant assembly parts (3) (bolt, washer).
- Dismantle the assembly parts (5) of the adjacent auger blade, remove plug (6).
- Insert the auger end bearing (7) into the auger extension.
- Secure the auger end bearing to the material shaft with the relevant assembly parts (8) (bolts, washers, nuts).
- Reinstall the previously removed assembly parts (5) of the auger blade and simultaneously tighten the auger shaft and bearing shaft bolts.
- Insert the plug (6) at the end of the auger.

### 3.2 Auger extension chart

| Symbol  |           | Meaning                                 |
|---|-----------|---|
| <div></div> <div>160L</div>    | - (160L)  | - Auger blade 160 mm left               |
| <div></div> <div>160R</div>    | - (160R)  | - Auger blade 160 mm right              |
| <div></div> <div>320L</div>    | - (320L)  | - Auger extension part 320mm left       |
| <div></div> <div>320R</div>    | - (320R)  | - Auger extension part 320mm right      |
| <div></div> <div>640L</div>    | - (640L)  | - Auger extension part 640mm right      |
| <div></div> <div>640R</div>    | - (640R)  | - Auger extension part 640mm right      |
| <div></div> <div>960L</div>    | - (960L)  | - Auger extension part 960mm left       |
| <div></div> <div>960R</div>    | - (960R)  | - Auger extension part 960mm right      |
| <div></div> <div>320</div>   | - (320)   | - Material shaft 320mm                  |
| <div></div> <div>640</div>   | - (640)   | - Material shaft 640mm                  |
| <div></div> <div>960</div>   | - (960)   | - Material shaft 960mm                  |
| <div></div> <div>960BL</div> | - (960BL) | - Material shaft 960mm with brace left  |
| <div></div> <div>960BR</div> | - (960BR) | - Material shaft 960mm with brace right |
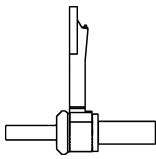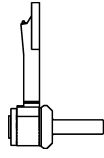
| Symbol  |  | Meaning             |
|---|--|---------------------|
|  |  | Outer auger bearing |
|  |  | Auger end bearing   |


### Auger upgrading, working width 3.14m

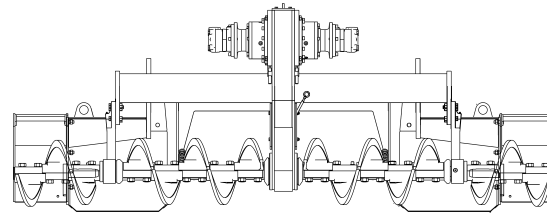

320



320 L





320




320 R


### Auger upgrading, working width 3.78m

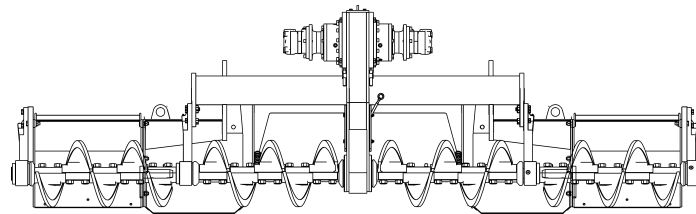


640



640 L





640




640 R

### Auger upgrading, working width 4.42m

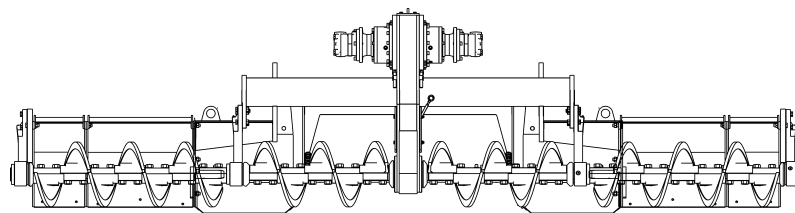


320

640




320 L

640 L



640

320




640 R


320 R



### Auger upgrading, working width 5.06m

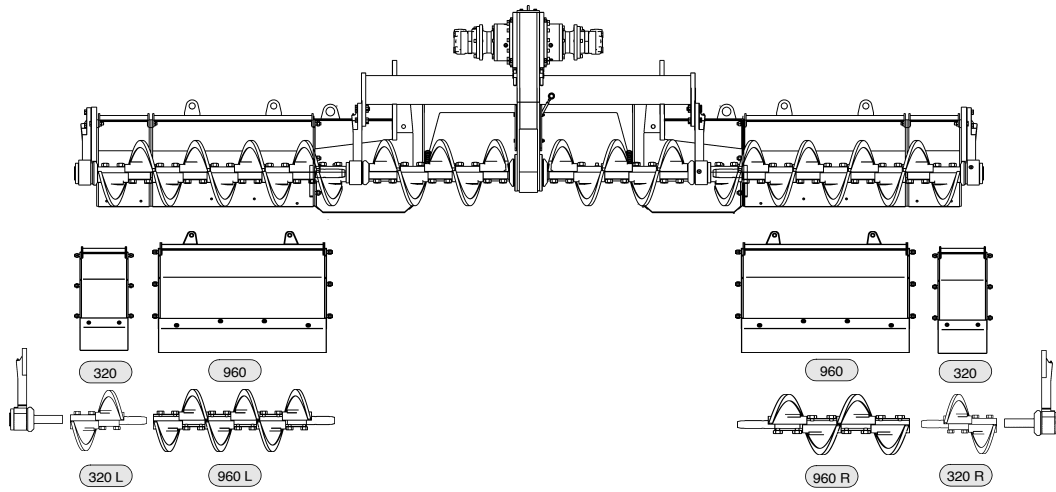

### Auger upgrading, working width 5.70m

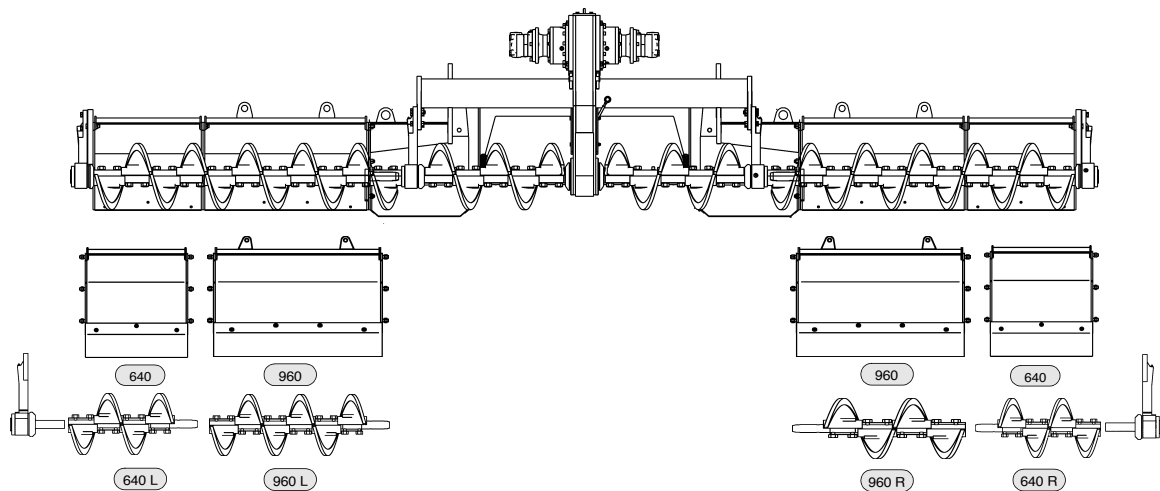

### 3.3 Material shaft, hinged

To close the gap between auger box and side board of the screen, hinged material shafts can be fitted to both sides of the auger.



The hinged material shafts swivel up due to the material pressure which is exerted and swivel in due to screed retraction.

- Mount the left/right material shafts on the auger box with the relevant assembly parts (1).



If a terminal bearing is mounted for the existing auger width, the adapter plate (2) also has to be fitted.


- Fit the plate (3) to the hinge (5) using the hinge rod (4).



The hinged material shaft can be secured with the assembly parts (6) in swivelled in position when transporting the machine in its basic width.



The assembly parts (6) can be kept at the hole (7).

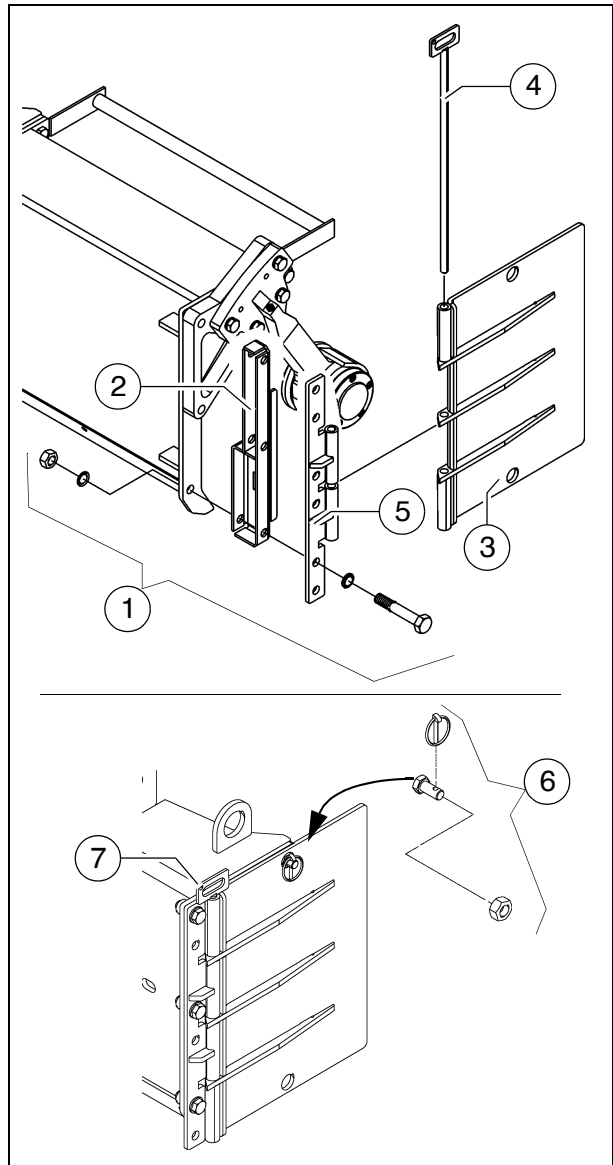

### 3.4 Hopper scraper


To reduce the gap between hopper and machine frame, the hopper scrapers (1) must be adjusted at both hopper halves.



- Loosen the mounting screws (2).
- Adjust a gap of 6 mm across the whole length of the scraper.
- Retighten the mounting screws (2) properly.



Risk of injury due to sharp-edged parts!  
Wear suitable safety gloves to protect your hands!

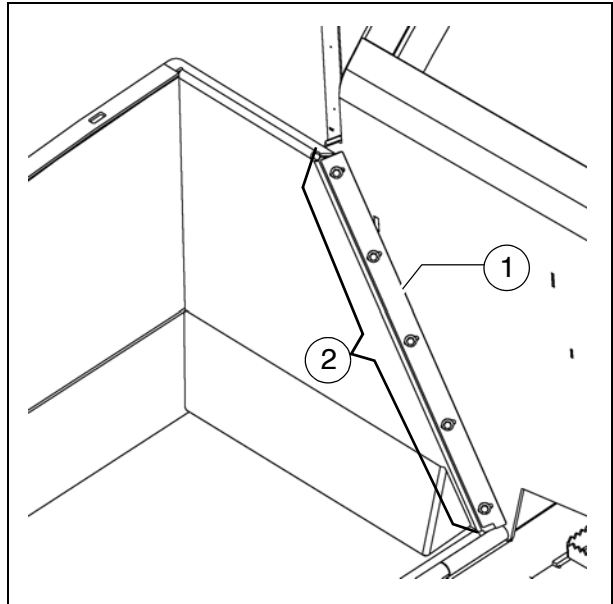

#### 4 Offsetting the screed


Depending on the paving condition requirements, the crossbeam can be moved backwards or forwards.

This adjustment enlarges the material space between the auger and screed.

- Loosen the four mounting screws (1).
- Remove the screws and move the vehicle forwards.
- The crossbeam remains in its position on slide rails: now tighten the screws (1) back down.



When paving thin layers, the material can "settle" in front of the screed if the screed is set to the rear position. When paving thick layers, the screed then climbs better.

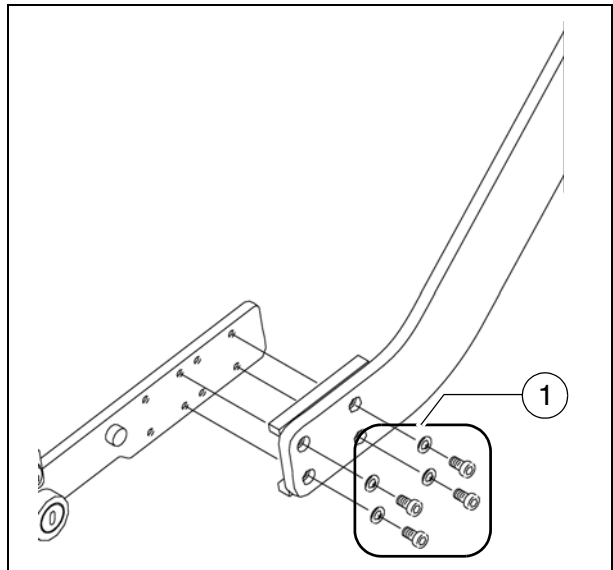

## 5 Levelling

### 5.1 Slope controller



During operation, no work may be carried out on the slope control linkage or the slope controller!

- Mount the slope control linkage (1) in the intended position between the two crossbeams.
- Mount the slope controller (2) on the slope control linkage's retaining plate (3).



Four securing holes are provided for mounting on the sensor's retaining plate.



The digital slope controller must be mounted in such a way that the marking arrow on the housing points in the direction of travel.




The analogue slope controller must be mounted in such a way that the displays for the operator visibly point backwards.

- Connect the left or right connection cable to the intended handset or vehicle socket.



Exhaustive operating instructions can be found in the documentation for the corresponding levelling system.

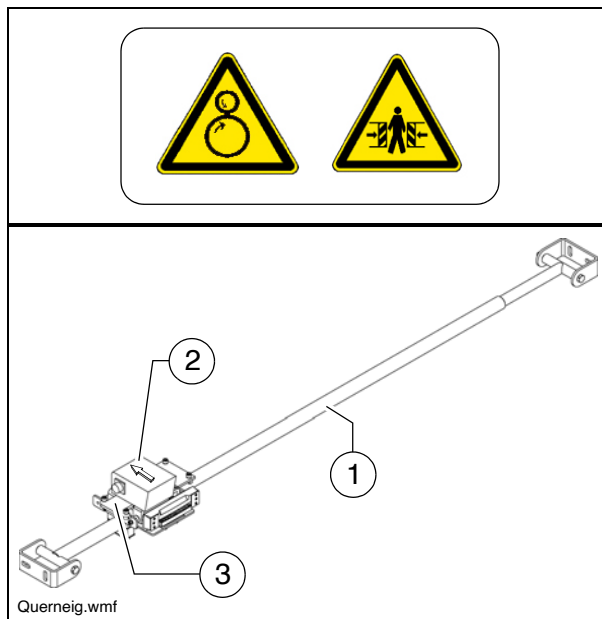


## 5.2 Mounting the sensor arm

- Position the sensor arm mounting (1) on the corresponding journal of the screed side board.
- Tighten the pin (2) so that the sensor arm is just still able to swivel.




The sensor arm can be secured on the side board with the lock (3).

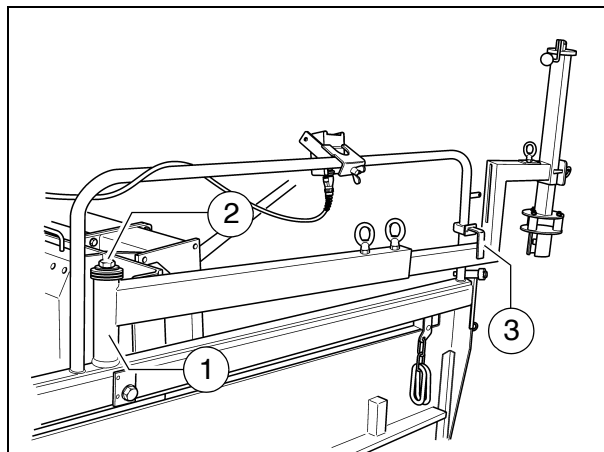

Tastarm.wmf

## 5.3 Mounting the grade control system

Insert the grade control system into the clamp bracket (1) and secure with the clamping bolt (2) to prevent rotation.

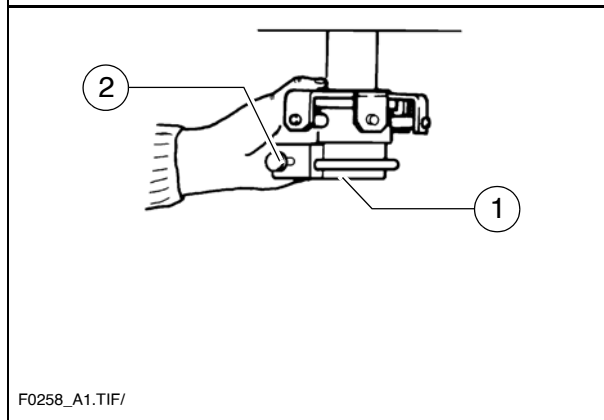

F0258\_A1.TIF/


## 5.4 Setting up the sensor arm

Before starting paving, the sensor arm must be set, with the grade control system, to its reference (cable, kerb, etc.).



Sensing should be carried out in the area of the auger.

- Swivel the sensor arm (2) over the reference.
- Use the following options to adjust the sensor arm precisely:
  - After loosening the clamping bolts (3), the sensor arm length can be set up.
  - The sensing height can be set by loosening the clamping bolts (4).
  - Adjustment of the lateral sensing angle is possible at the lock (5).
  - Height adjustment for analogue grade sensors is carried out by means of a crank (6). To lock it, the crank is inserted into one of the available notches following the adjustment work.

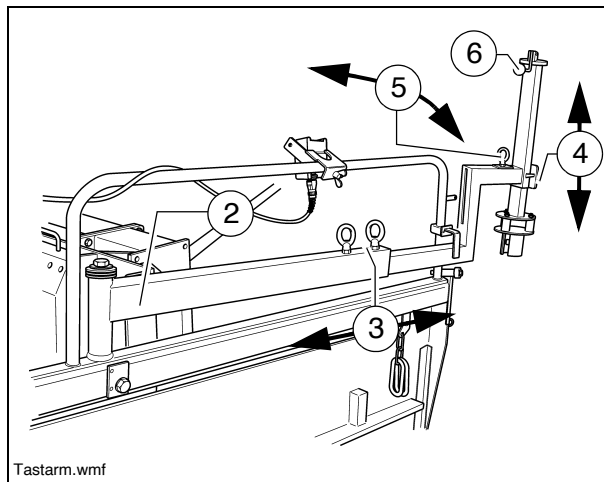

All assembly parts and clamping points must be tightened properly to ensure safe and precise sensor arm operation!

- Connect the left or right grade control system connection cable to the intended handset or vehicle socket.




If the vehicle is to be operated with automatic grade sensing on both sides, the above described adjustment process must be repeated on the second side.



Exhaustive operating instructions can be found in the documentation for the corresponding levelling system.

## 5.5 Big ski 9 m, big ski 13 m

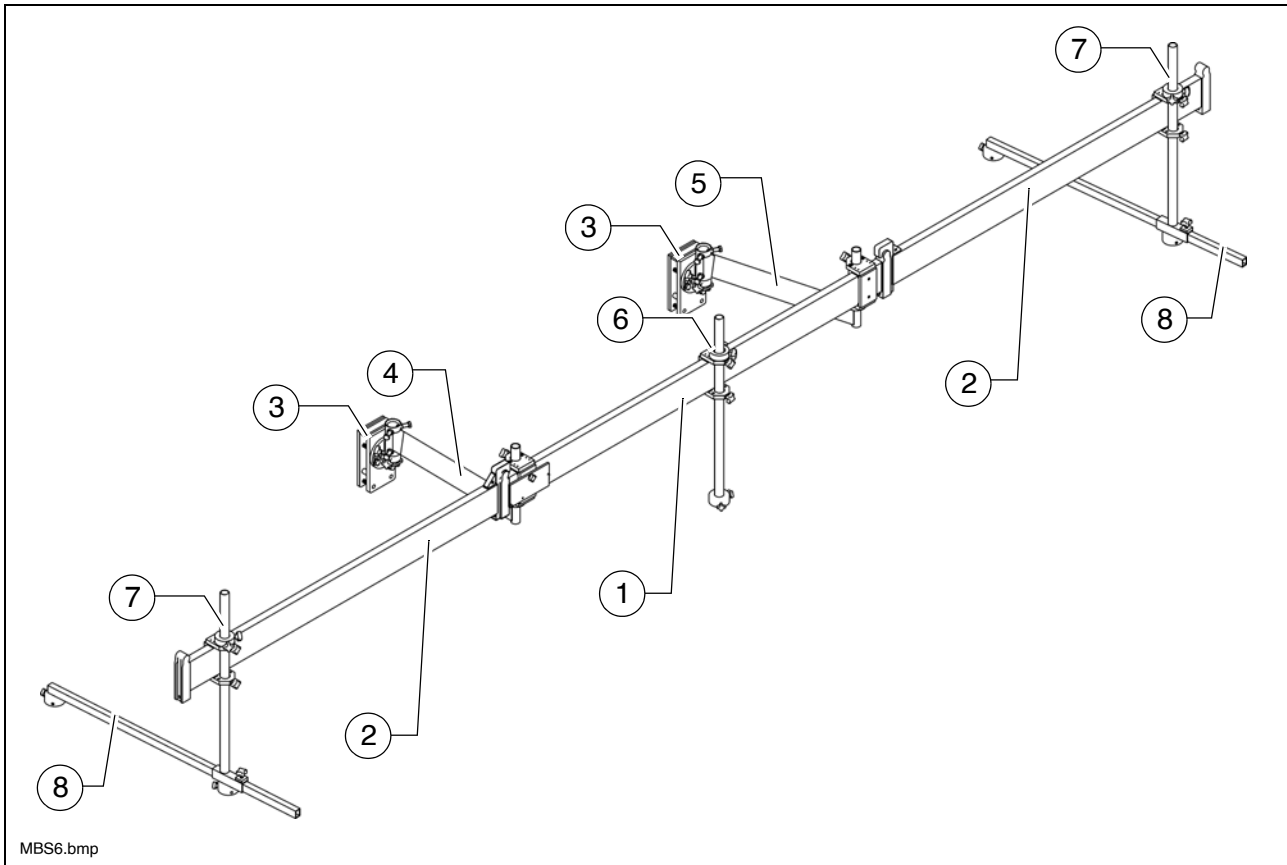

The big ski is used for contactless sensing over a particularly large reference length.



A total max. ski length of approx. 9.30 m can be achieved with the combination of 1 centre element and 2 module elements together with the sensor arm extensions. A total max. ski length of approx. 13.50 m can be achieved with the combination of 1 centre element and 4 module elements together with the sensor arm extensions.



The big ski enables the alignment of the individual sensors at the front and rear to be shifted over the reference. The sonic ski can actually be positioned in front of and behind the vehicle in order to guarantee safe reference sensing even on cornering.




Before starting paving, the big ski must be set, with the grade control system mounted, to its reference (cable, kerb, etc.).

The big ski essentially consists of the following components:

- Centre element (1)
- Extension modules (2)
- Crossbeam bracket (3)
- Front swivel arm (4)
- Rear swivel arm (5)
- Sensor bracket (6)
- Sensor bracket, extendable (7)
- Arm extension (8)



- ➡ Assembly of the short version is described in the following, as the longer variant is achieved simply by adding further module elements.

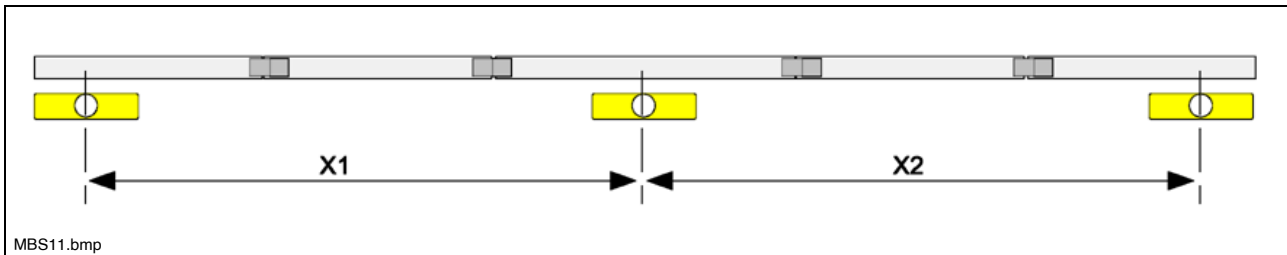

The distances between the sensors are ideally identical ( $X1 = X2$ ).

- ➡ The centre sensor is mounted in the usual individual sensor position so that, if necessary, work can be carried out with just one sensor by switching over on the MOBAMatic (e.g. at the start of paving, road junctions, etc...)
- ➡ Depending on application, the mechanism can be mounted at the side next to the screed or also above the screed. This is dependent on the paving width required in each case.
- ➡ The procedure for mounting the big ski is the same in both cases.
- ➡ So that the big ski can be operated as parallel to the ground as possible during paving, it must be attached according to the subsequent paving conditions. To do this, the screed should be lowered to the desired course thickness and the traction point should be set appropriately.
- ⚠ When mounting the two crossbeam brackets, it is vital to ensure that these do not hamper the free movement of either the crossbeam or the screed construction! Clearance must be guaranteed throughout the entire working range!


## Mounting the big ski bracket on the crossbeam



The entire big ski construction is mounted laterally on the crossbeams. To do so, the two crossbeam brackets must first be mounted. The crossbeam bracket design differs slightly depending on the paver finisher which is used. During assembly, it is possible either to bolt the bracket directly at the existing bores or, as described in the following, to secure it to the crossbeam using clamping plates.



The front bracket is mounted directly behind the traction point; the rear bracket is mounted at approximately the height of the auger.

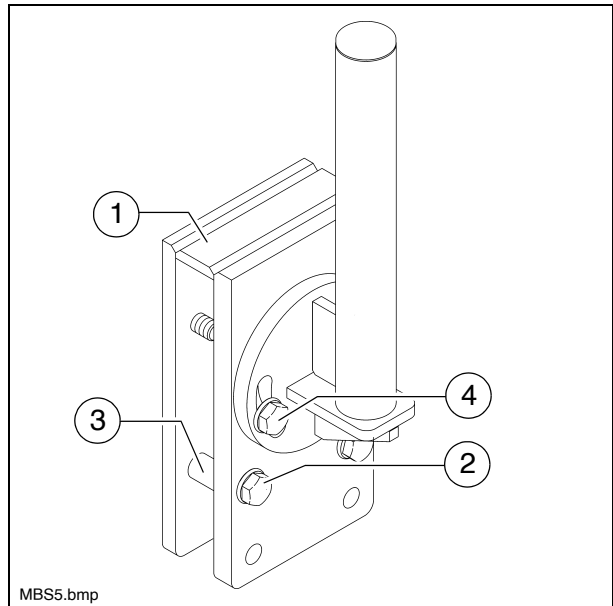

- Place both brackets (1) over the crossbeam at the corresponding point and mount with bolts (2) and sleeves (3).



For different crossbeam thicknesses, use the mounting's corresponding bores.

- The mounting tube is aligned via the two bolts (4).



Align the bracket vertically.

## Mounting the swivel arms

- Slide a fixing ring (1) over the tube of the big ski bracket (2).




The fixing ring's 45° chamfer must point upwards.

- Then slide the two swivel arms (3) onto the tube of the big ski bracket.




The rear swivel arm is positioned, rotated by 180°, on the big ski bracket.

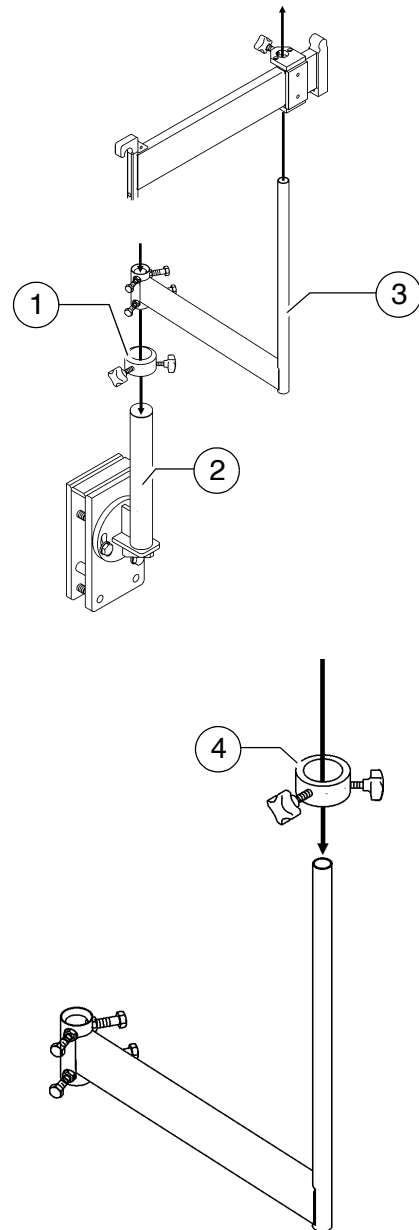


- Slide a fixing ring (4) (flat version) onto the front swivel arm and secure with the relevant star handle bolt.



MBS3a.bmp/MBS3c.bmp
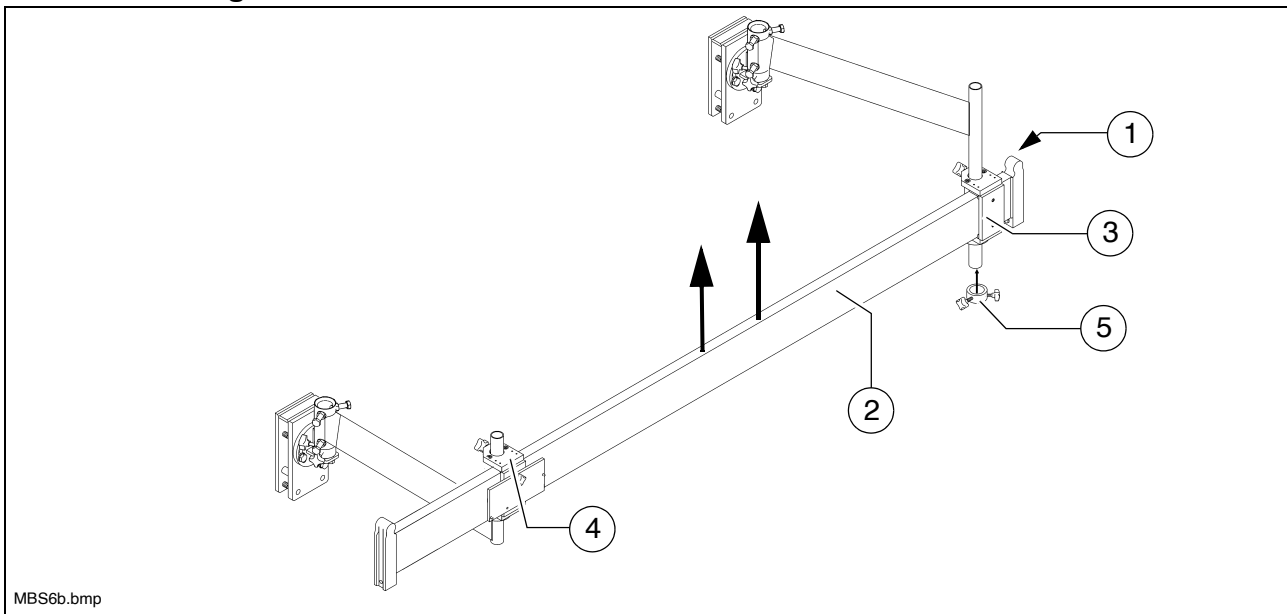
## Mounting the centre element



-  During assembly, it must be ensured that the round lug (1) for attaching the subsequent modules points upwards.
-  The centre element (2) is already fitted in the factory with 2 pre-assembled sliding parts (3) / (4), which are pushed over the two round mounting journals of the swivel arms.
  - First slide the rear sliding part (3) onto the rear swivel arm from below. Then raise the centre element, together with the rear swivel arm, until the front sliding part (4) can be pushed onto the front swivel arm from above.
  - Then secure the rear sliding part with a fixing ring (5) and the relevant star handle bolt.
-  Once the first part of the beam has been assembled, it is initially aligned:
  - The centre element is now aligned horizontally using the fixing rings on the swivel arms, and also with the fixing rings on the big ski brackets if necessary.
  - Next, the centre element is aligned by rotating the swivel arms parallel to the paver finisher.
  - Finally tighten all securing bolts.

## Extending the big ski



The big ski can be extended to both the 9 m and 13 m versions.




Structure of the 9 m version:

Extension part at the front/rear each.

Structure of the 13 m version:

Two extension parts at the front/rear each.

- Place the extension module (1) onto the centre element (2) and secure with a bolt (3).

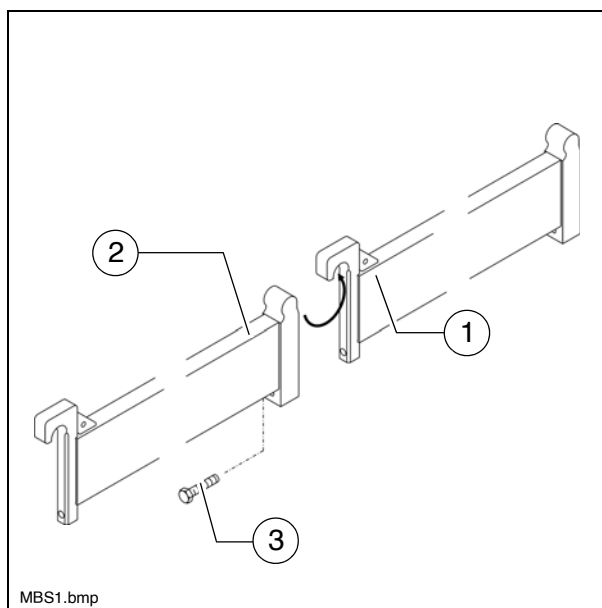

## Mounting the sensor bracket



A sensing system with 3 sensors is provided over the entire length of the big ski. One sensor each on the centre element, and the front and rear end elements.




The centre sensor should be mounted on the ski in precisely the location in which it would be found during normal operation (approx. the height of the auger).

The two other sensors should be mounted the same distance away from it.



Extendable sensor brackets (1) are mounted in the two outer positions; the normal sensor bracket (2) is mounted in the centre.

- Place the sliding bracket (3) over the corresponding big ski element from the inner side.
- Insert the sensor bracket (4) into the sliding bracket (5) from below and secure with the relevant star handle bolts.
- Place the clamping ring (6) onto the sensor bracket tube and secure with the relevant star handle bolt.
- In the case of the extendable sensor brackets, slide in the arm extension (7) and secure in position with the relevant star handle bolt.

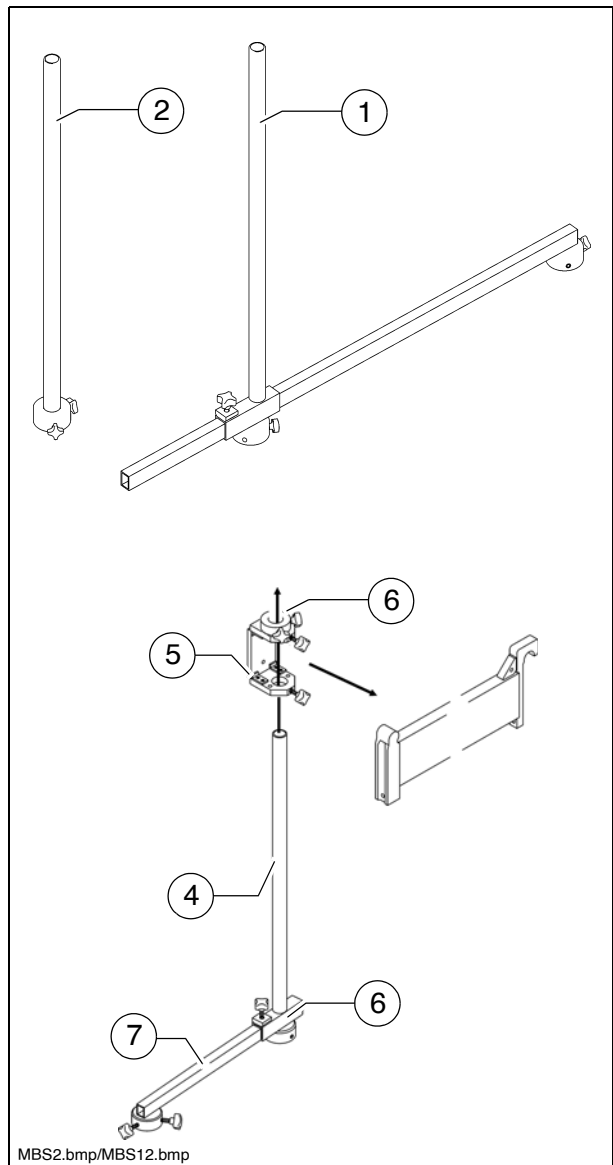

## Mounting and aligning the sensors

- Insert the sensor mounting (1) into the bracket (2).
- Align the sensor and secure with the relevant star handle bolts.
  - The sensing height can be adjusted by loosening the star handle bolts (3).



At the two outer sensor brackets, the sensor can also be mounted on the swivelling sensor extension arm (4). This therefore enables the two outer sensors to be swivelled during paving for diverse requirements, e.g. cornering.


- By loosening the star handle bolts (5), the length of the extension arm can be adjusted.
- The sensor bracket with extension arm can be swivelled by loosening the star handle bolts (3).



If a sensor extension arm is swivelled to the side, it must be ensured that the attached sensor is subsequently aligned in the direction of travel.



All assembly parts must be mounted and tightened properly to ensure safe and precise operation of the big ski!

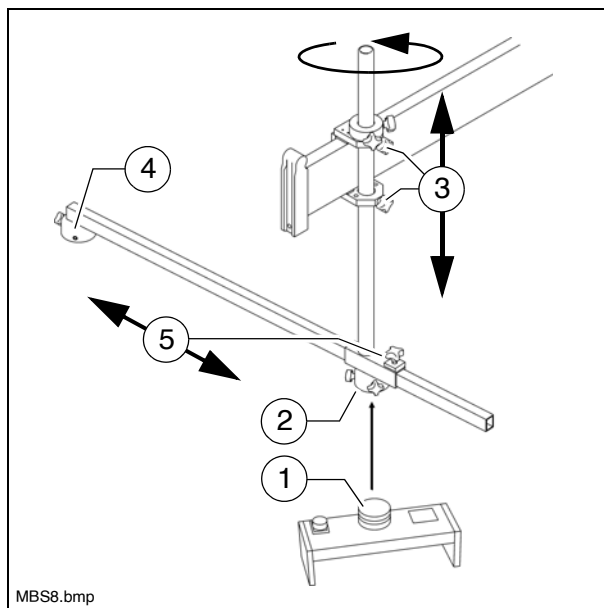

## Mounting the distributor box



The distributor box should be mounted in such a way that simple wiring to the controller and the sensors is possible.




The connections for the sensors should always point down to prevent water from entering the distributor box. Inlets which are not required must be sealed with dust caps.

- Allen head bolts are used to initially mount the distributor box (1) on the mounting plate (2).



The input connector always points in the direction of travel.

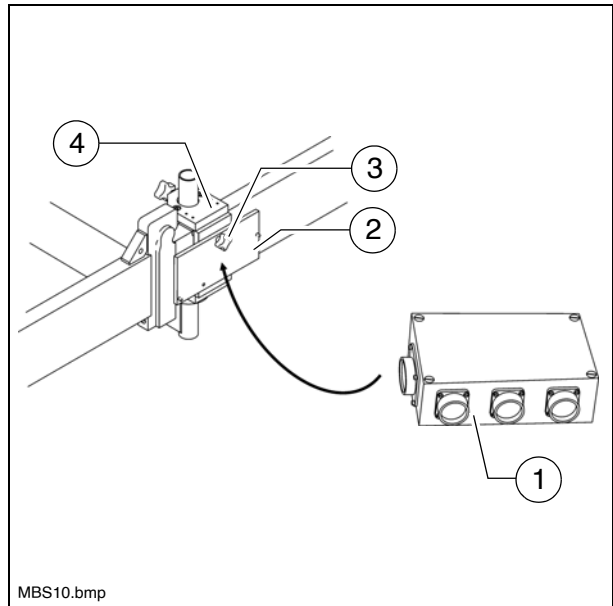

- Then mount the mounting plate on one of the two sliding brackets (4) on the centre element using a star handle bolt (3).



Mounting the big ski on the right-hand side of the vehicle:

To meet the requirement that the input connector always points in the direction of travel, the sliding bracket, on which the distributor box is to be mounted, must be pushed onto the big ski from the inside to the outside here.




## Connection diagram



The three sensors are connected to the distributor box and the distributor to the machine according to the following scheme.

- Sensors
  - Front (1)
  - Centre (2)
  - Rear (3)
- Distributor box (4)
- Machine interface (5)

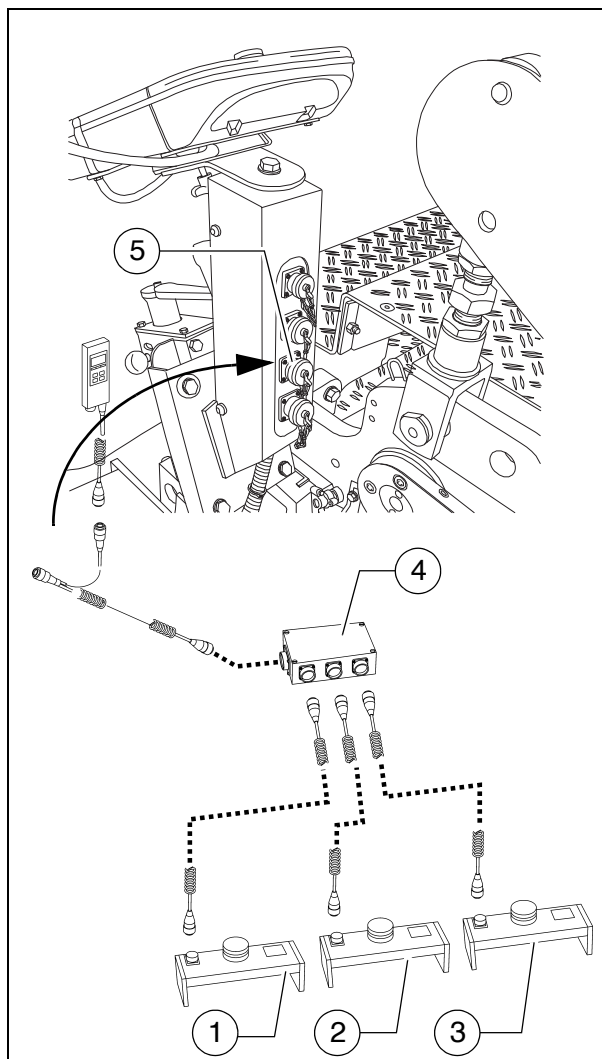



## 6 Limit switch


### 6.1 Auger limit switches (left and right) - mounting the conventional version


The ultrasonic sensor (1) is secured to the side shield via a bracket (2).


- To adjust the sensor angle, loosen the clamps (3) and swivel the bracket.
- To set the sensor height / the deactivation point, loosen the star handles (4) and adjust the linkage to the required length.
- After adjusting, retighten all mounting parts properly.

 The connection cables are connected to the relevant sockets on the remote control bracket.

 The sensors should be adjusted so that 2/3 of the augers are covered with the paving material.

 The paving material must be conveyed over the full working width.

 We recommend adjusting the limit switch positions during material distribution.

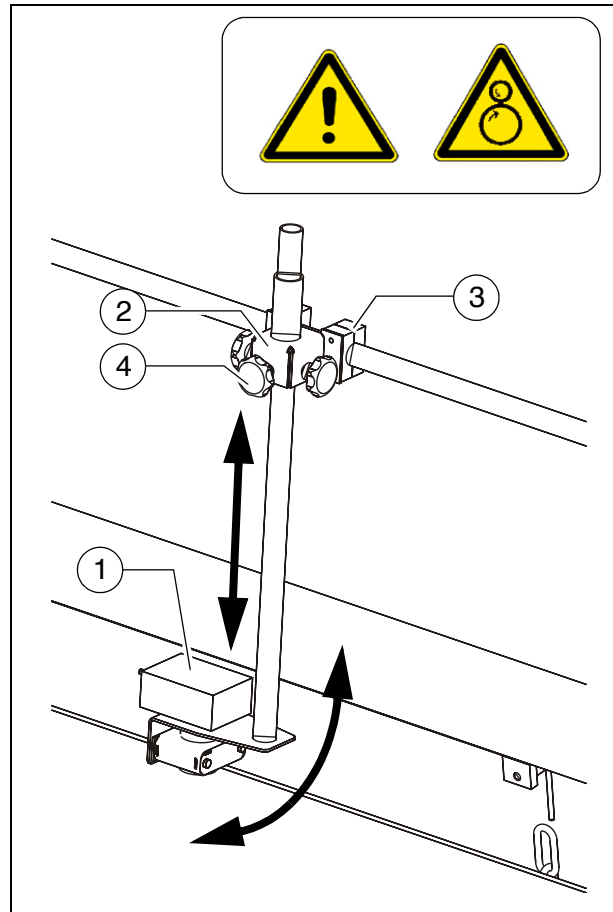

## 7 Screed

The Operating instructions for the screed cover all work required for mounting, setting up and extending the screed.

## 8 Electrical connections


Establish the following connections on the rear of the remote control brackets (1) when the mechanical assemblies have been mounted and set up:

PLC version:

- Auger limit switches (2)
- Remote control (3)
- Grade control system (4)
- External levelling system (5)



When using an external levelling system, this must be logged in using the remote control menu.

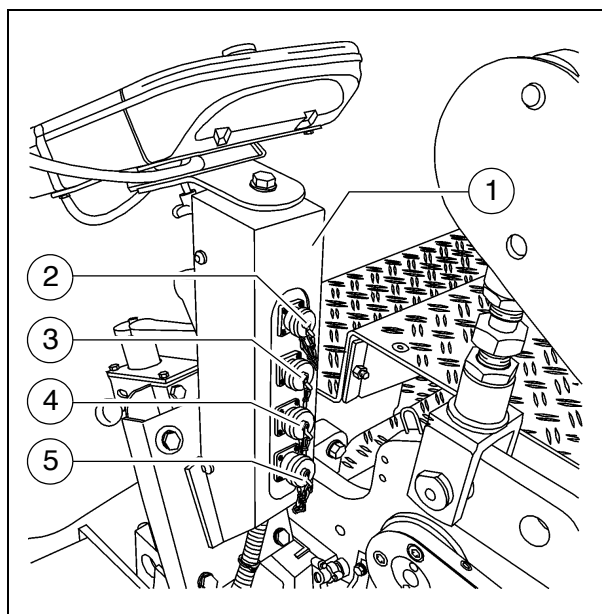


Conventional version:

- Remote control (6)
- Auger limit switches (7)
- Automatic levelling system (8)



Always seal unused sockets with the relevant protective caps!

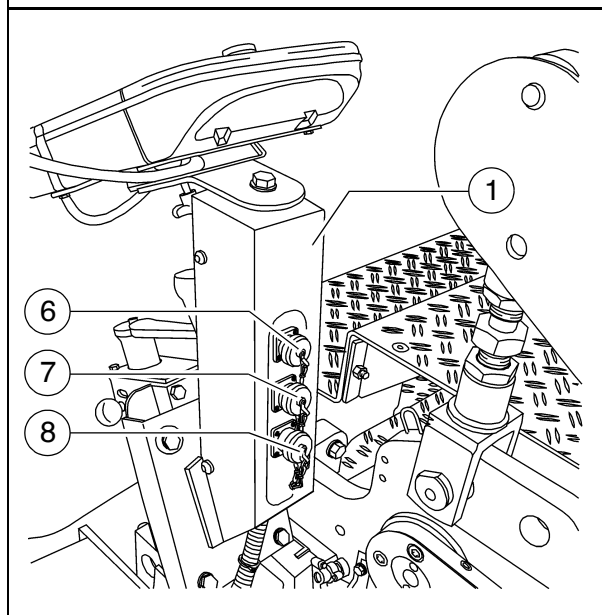

## 8.1 Machine operation without remote control / side board




The machine can only be driven without connected remote control if the corresponding bridge connectors have been fitted on both sides of the machine.

Side board with mounted remote bracket:

- Fit bridge connector (1) in the socket of the remote control and secure with cap.
- Check that the connection box is plugged in (2).

Side board removed:

- Fit bridge connector (3) in the socket of the connection box and secure with cap.

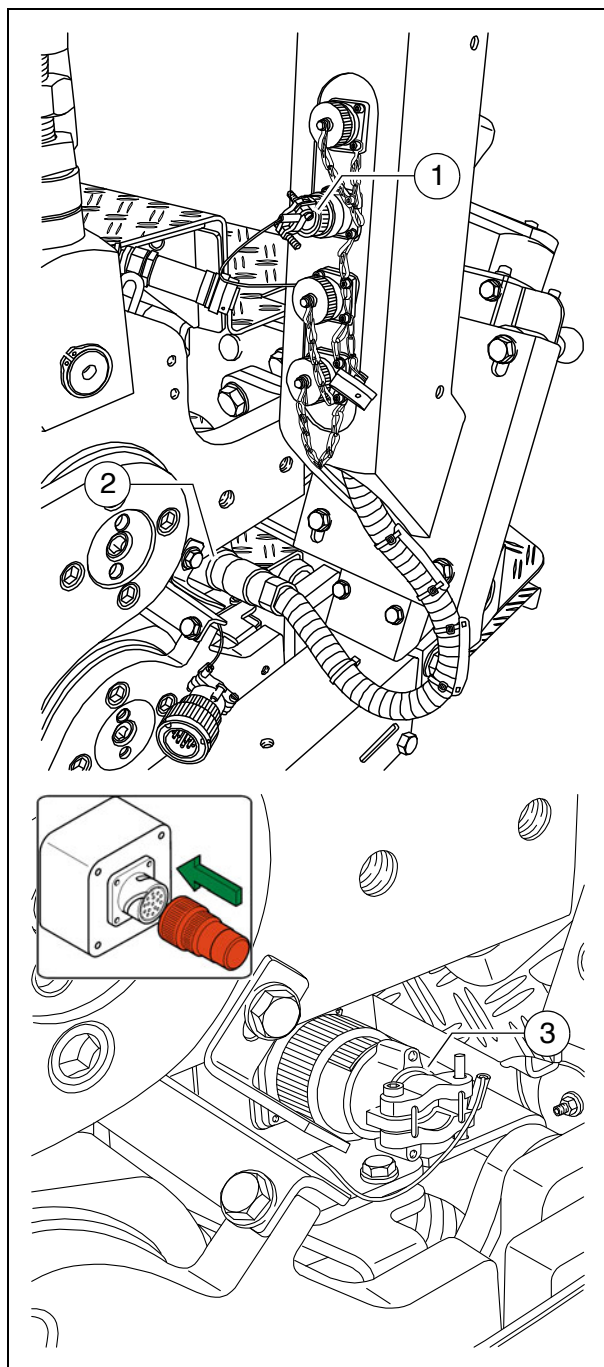

# F 10 Maintenance

## 1 Notes regarding safety



**Maintenance work:** Maintenance work may only be carried out when the engine is at a standstill.

Secure the paver finisher and the attachments against inadvertent starting before beginning any maintenance work:

- Set the drive lever to the centre position and the speed preselector to zero.
- Pull out the ignition key and the battery main switch.



**Lifting and jacking up:** Secure lifted machine parts (e.g. screed or hopper) against lowering by means of mechanical supports.



**Spare parts:** Use only approved parts and install them according to the specifications! If in doubt, contact the manufacturer!



**Re-commissioning:** Mount all protective devices before re-commissioning the paver finisher.



**Cleaning:** Cleaning must not be carried out while the engine is running. Do not use any inflammable substances (such as petrol). Avoid directly cleaning electrical parts and insulation material with a steam jet; cover them up beforehand.



**Working in enclosed environments:** Exhaust fumes must be conducted into the open air. Propane gas bottles must not be stored in closed rooms.



In addition to these maintenance instructions, the maintenance instructions issued by the engine manufacturer must be adhered to under all circumstances. All maintenance work and service intervals itemised here are binding in nature.




Information on how to maintain the optional equipment can be found in the individual sub-sections of this chapter!



# F 23 Maintenance review

## 1 Maintenance review

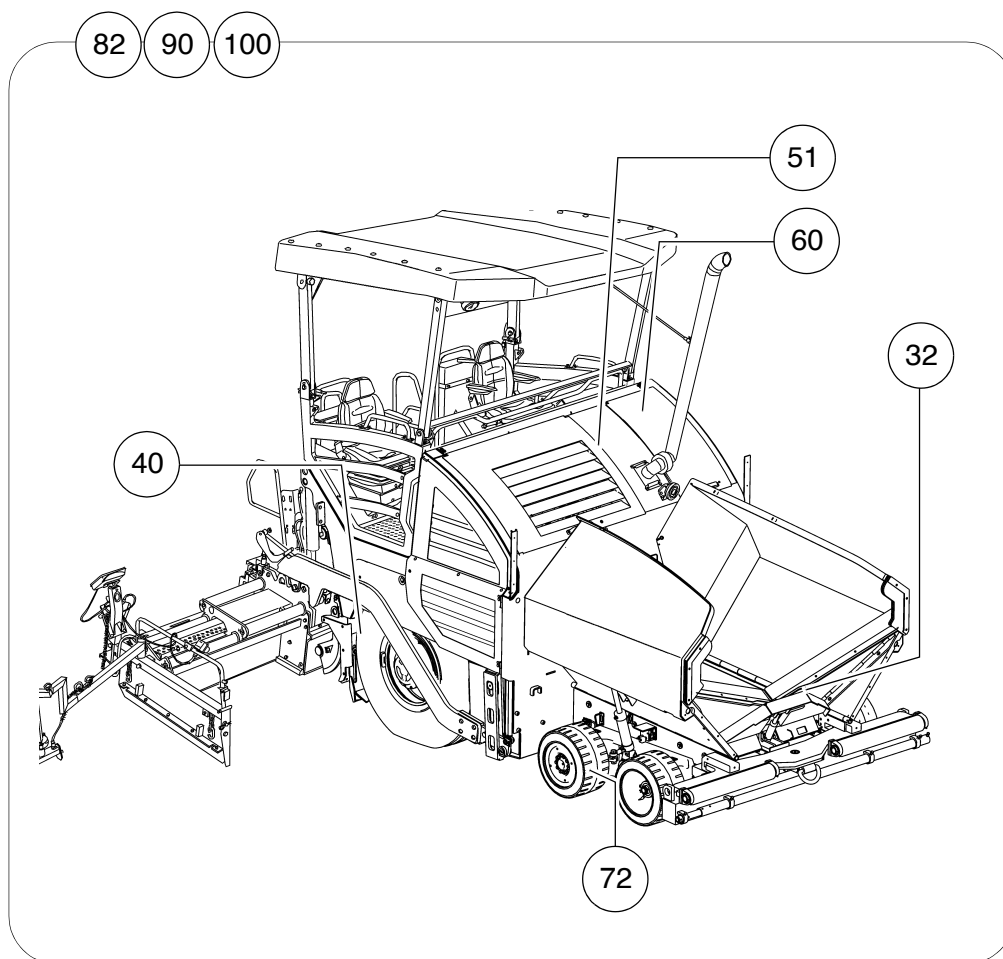

| Assembly           | Chapter | Maintenance required after the following service hours |    |     |     |     |                 |                      |      |       |              |
|--------------------|---------|--|----|-----|-----|-----|-----------------|----------------------|------|-------|--------------|
|                    |         | 10   | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | 5000 | 20000 | If necessary |
|                    |         |  |    |     |     |     |                 |                      |      |       |              |
| Conveyor           | F32     | ■  |    | ■   |     |     |                 |                      |      |       | ■            |
| Auger              | F40     | ■  | ■  | ■   | ■   |     | ■               | ■                    |      |       | ■            |
| Engine             | F51     | ■  |    |     | ■   | ■   | ■               | ■                    |      |       | ■            |
| Hydraulic system   | F60     | ■  | ■  |     |     | ■   | ■               | ■                    |      |       | ■            |
| Wheel chassis      | F72     | ■  | ■  | ■   |     | ■   | ■               |                      |      |       | ■            |
| Electrical system  | F82     |  |    | ■   | ■   |     |                 |                      |      |       | ■            |
| Lubrication points | F90     | ■  | ■  |     |     |     |                 | ■                    |      |       | ■            |
| Checking/stopping  | F100    | ■  |    |     |     |     | ■               |                      |      |       | ■            |

|                      |   |
|----------------------|---|
| Maintenance required | ■ |
|----------------------|---|




In this overview, you will find the maintenance intervals for optional machine equipment!



## F 32 Maintenance - conveyor

### 1 Maintenance - conveyor

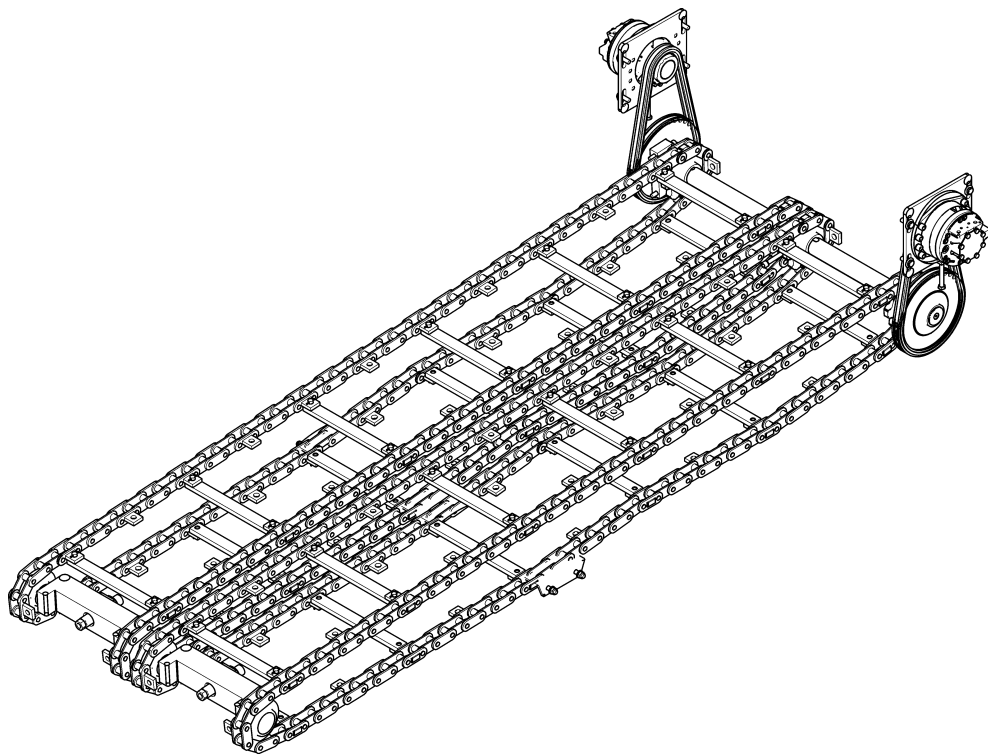

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      |              | Maintenance point   | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | If necessary |   |      |
| 1    | ■        |    |     |     |     |                 |                      |              | - Conveyor chain -<br>Check tightness                       |      |
|      |          |    |     |     |     |                 |                      | ■            | - Conveyor chain -<br>Adjust tension                        |      |
|      |          |    |     |     |     |                 |                      | ■            | - Conveyor chain -<br>Replace chain                         |      |
| 2    |          |    | ■   |     |     |                 |                      |              | - Conveyor drive - drive chains -<br>Check chain tightness  |      |
|      |          |    |     |     |     |                 |                      | ■            | - Conveyor drive - drive chains -<br>Adjust chain tightness |      |
| 3    |          |    |     |     |     |                 |                      | ■            | - Replace conveyor deflectors /<br>conveyor plates          |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## 1.2 Points of maintenance

### Chain tension, conveyor (1)

#### Check chain tension:

When correctly tensioned, the conveyor chain hangs approx. 40 mm below the crossbeam of the front axle.



The conveyor chains should not be too tight or too slack. An excessively taut chain can cause the chain to be stopped or to break when material falls into the space between the chain and the sprocket.

An excessively slack chain may catch on protruding objects and be destroyed.

#### Adjustment of chain tension:




One adjusting screw is located on both halves of the conveyor for adjusting the chain tension.



The adjusting screws (A) are located at the reversal behind the crossbeam.

- Loosen the lock nut (A) on the rear of the reversal.
- Adjust the chain tension using the adjusting screw (B).
- Retighten the lock nut (A) properly.

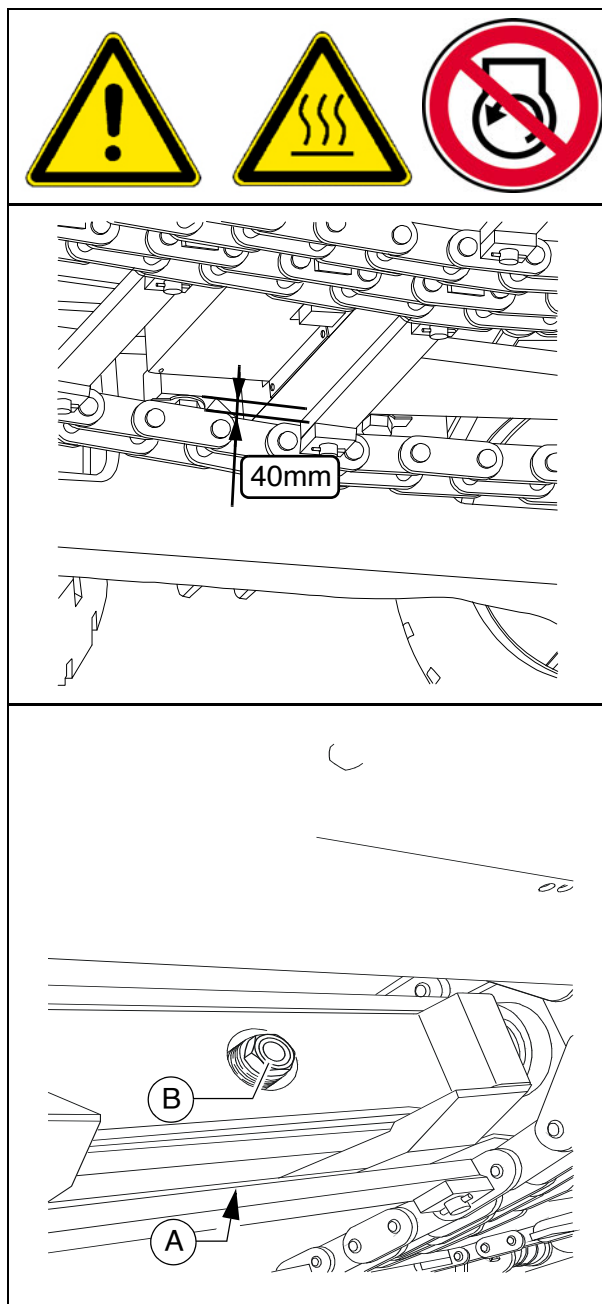

### Check / replace chain:



At the latest, the conveyor chains (A) must be replaced when their elongation has progressed so far that they can no longer be re-tensioned.




Chain links must not be removed to shorten the chain!  
Incorrectly dividing the chains would lead to the destruction of the drive wheels!



If components have to be replaced as a result of wear, the following components should always be replaced in sets:

- Conveyor chain
- Conveyor deflectors
- Conveyor plates
- Deflector plates
- Conveyor chain reversing rollers
- Conveyor drive chain sprockets

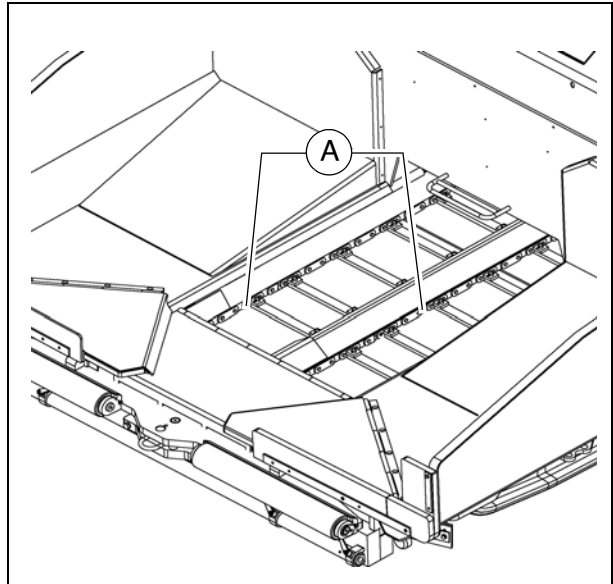

Your Dynapac customer service will be happy to provide support during maintenance, repair and the replacement of wearing parts!

## Conveyor drive - drive chains (2)

To check the chain tension:



At the chain protection is a scale (A) which indicates the dip of the chain.

- Move the chain in the long hole of the chain protection:


If the tension has been set properly, the chain must be able to move freely approx. 10 - 15 mm.

To **re-tension** the chains

- Unfasten mounting screws (B) and lock nut (C) slightly.
- Use the tensioning screw (D) to set the required chain tightness.
- Retighten mounting screws (B) and lock nuts (C) correctly.



The tensioning screws are accessed through the bottom plates of the operating platform.

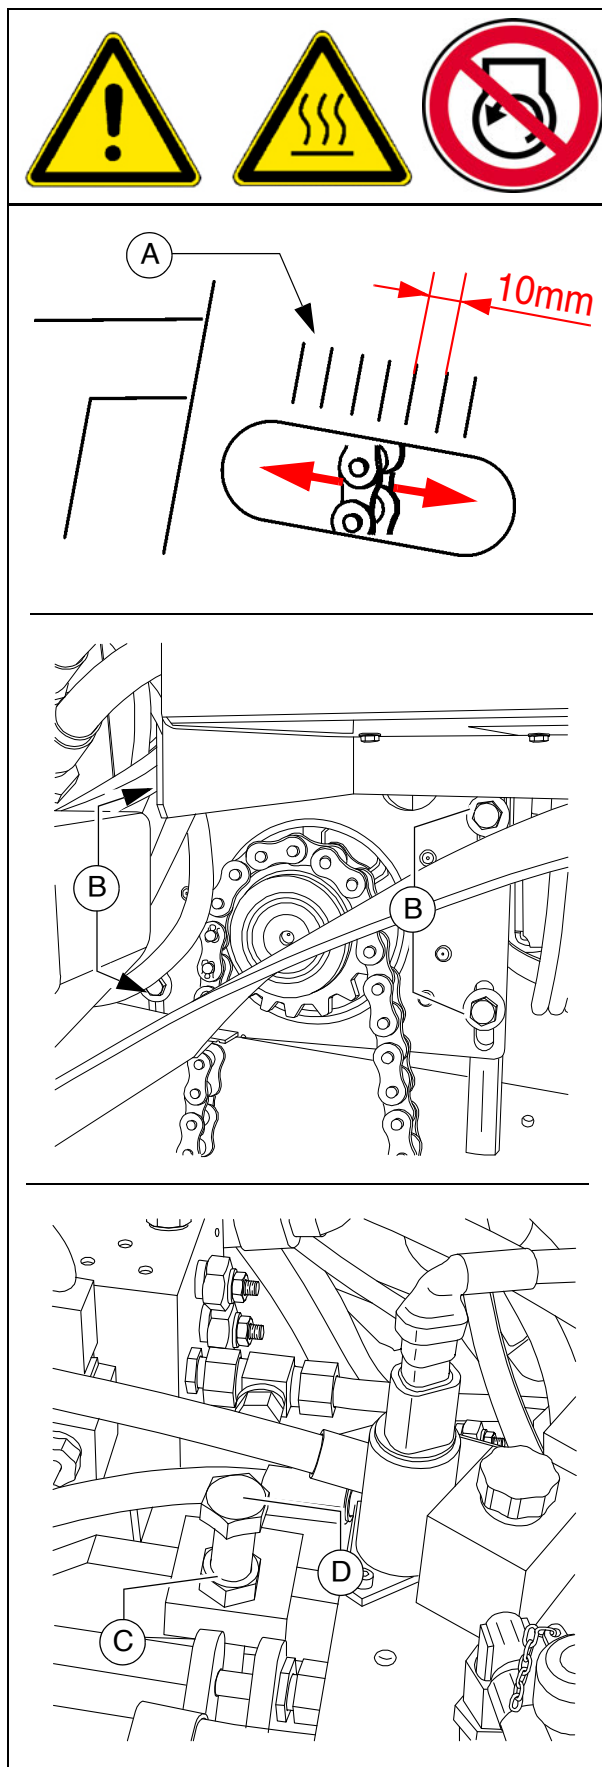

### Conveyor deflectors / conveyor plates (3)



At the latest, the conveyor deflectors (A) must be replaced when their lower edges are worn or reveal holes.




The conveyor chain is not offered protection by worn conveyor deflectors!

- Remove conveyor deflector bolts.
- Remove the conveyor deflectors from the material tunnel.
- Install new conveyor deflectors with new bolts.



At the latest, the conveyor plates (B) must be replaced when the wear limit of 5 mm in the rear area beneath the chain has been reached.

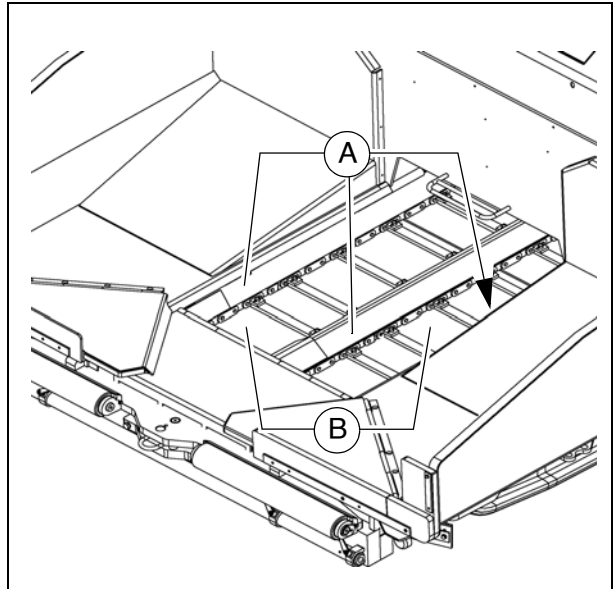

If components have to be replaced as a result of wear, the following components should always be replaced in sets:


- Conveyor chain
- Conveyor deflectors
- Conveyor plates
- Deflector plates
- Conveyor chain reversing rollers
- Conveyor drive chain sprockets



Your Dynapac customer service will be happy to provide support during maintenance, repair and the replacement of wearing parts!

# F 40      Maintenance - auger assembly

## 1      Maintenance - auger assembly

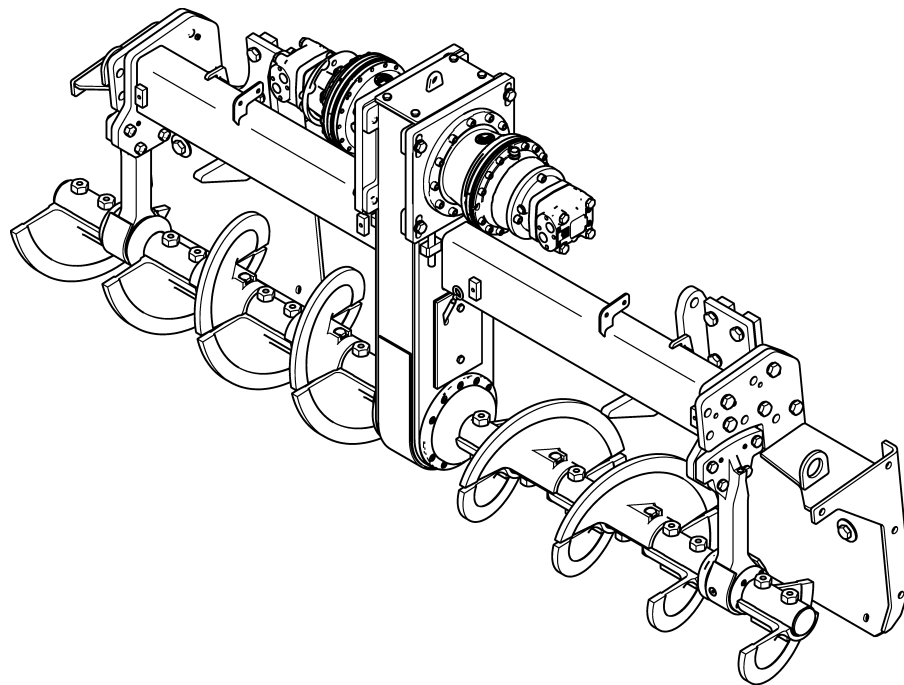

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      |      | Maintenance point                         | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|------|---|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | 5000 |   |      |
| 1    | ■        |    |     |     |     |                 |                      |      | - Outer auger bearing - Lubricate         |      |
| 2    |          |    |     |     |     | ■               |                      |      | - Auger planetary gear - Check oil level  |      |
|      |          |    |     |     |     |                 |                      | ■    | - Auger planetary gear - Top up oil       |      |
|      |          |    |     | ▼   |     |                 | ■                    |      | - Auger planetary gear - Change oil       |      |
| 3    |          |    | ■   |     |     |                 |                      |      | - Auger drive chains - Check tension      |      |
|      |          |    |     |     |     |                 |                      | ■    | - Auger drive chains - Adjust tension     |      |
| 4    |          |    |     | ■   |     |                 |                      |      | - Auger box - Check oil level             |      |
|      |          |    |     |     |     |                 |                      | ■    | - Auger box - Top up oil                  |      |
|      |          |    |     |     |     | ■               |                      |      | - Auger box - Change oil                  |      |
| 5    |          |    |     |     |     |                 |                      | ■    | - Seals and sealing rings - Check wear    |      |
|      |          |    |     |     |     |                 |                      | ■    | - Seals and sealing rings - Replace seals |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |



| Item | Interval |    |     |     |     |                 |                      |      | Maintenance point                                    | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|------|--|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | 5000 |  |      |
| 6    |          |    |     | ▼   |     |                 |                      |      | - Gearbox bolts -<br>Check tightening                |      |
|      |          |    |     |     |     |                 |                      | ■    | - Gearbox bolts -<br>Tighten to correct torque       |      |
| 7    |          | ▼  |     |     |     |                 |                      |      | - Outer bearing bolts -<br>Check tightening          |      |
|      |          |    |     |     |     |                 |                      | ■    | - Outer bearing bolts -<br>Tighten to correct torque |      |
| 8    |          |    | ■   |     |     |                 |                      |      | - Auger blade -<br>Check wear                        |      |
|      |          |    |     |     |     |                 |                      | ■    | - Auger blade -<br>Replace auger blade               |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## 1.2 Points of maintenance


### Outer auger bearing (1)

The grease nipples are located on each side at the top of the outer auger bearings.

These nipples must be lubricated at the end of work to force out any bitumen residues which may have entered and to supply the bearings with fresh grease when warm.

☞ If the auger is extended, the outer rings should be loosened slightly when initially greasing the outer bearing points in order to improve ventilation on greasing. The outer rings must be properly secured again after greasing.

☞ New bearings must be filled with 6 strokes of grease using a grease gun.

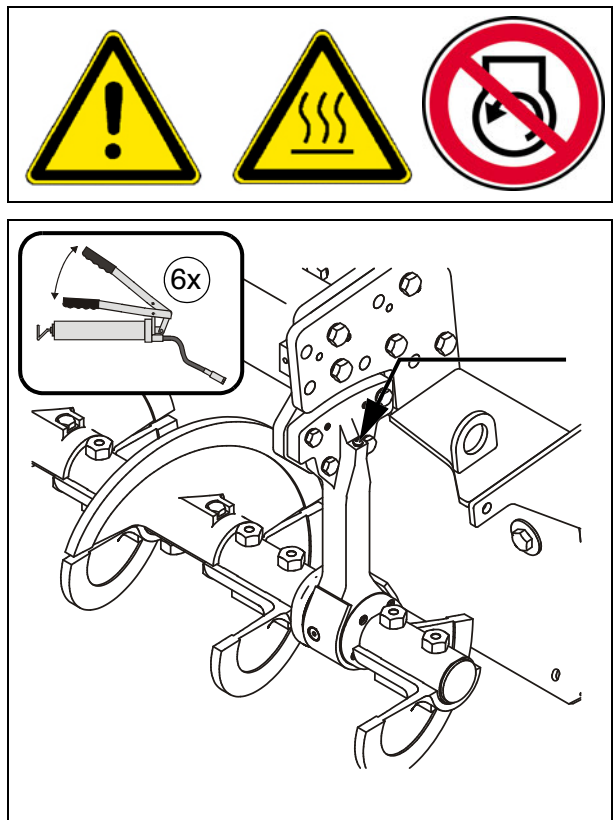

### Auger planetary gear (2)

- For **oil level check** unscrew and remove the inspection bolt (A).



When oil level is correct, the oil comes up to the lower edge of the inspection bore or a small amount of oil escapes through the aperture.

For **filling in** the oil:


- Unscrew inspection screw (A) and filler screw (B).
- Fill in the specified oil into the filler bore at (B) until the oil level has reached the lower edge of the inspection bore (A).
- Screw the filler (B) and inspection screws (A) back in.

To **change** oil:



The oil should be changed when at operating temperature.

- Unscrew the filler screw (B) and drain plug (C).
- Drain the oil.
- Screw the drain plug (C) back in.
- Unscrew the inspection screw (A).
- Fill the specified oil into the filler bore at (B) until the oil level has reached the lower edge of the inspection bore (A).
- Screw the filler (B) and inspection screws (A) back in.

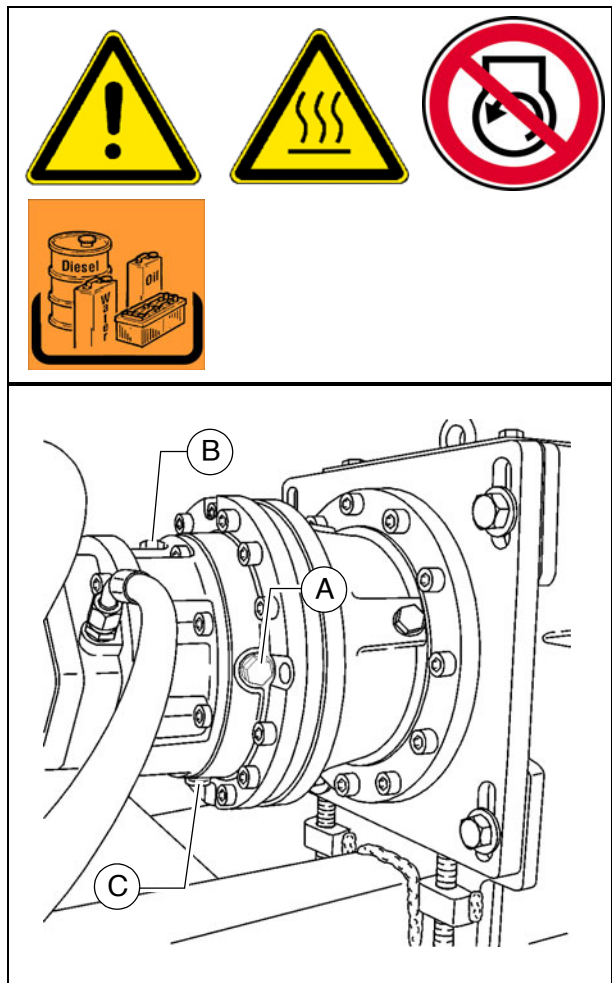

## Drive chains of the augers (3)

To check the chain tension:


- Manually turn both augers to the right and left. In this case, movement clearance (C) at the augers' outer circumference should be 10 mm.



Risk of injury due to sharp-edged parts!

To **re-tension** the chains

- Release the mounting screws (A).
- Set the chain tension correctly using the threaded pins (B):
  - Tighten the threaded pins to 20 Nm using a torque wrench.
  - Subsequently loosen the threaded pins again by one full revolution.
- Retighten the bolts (A).

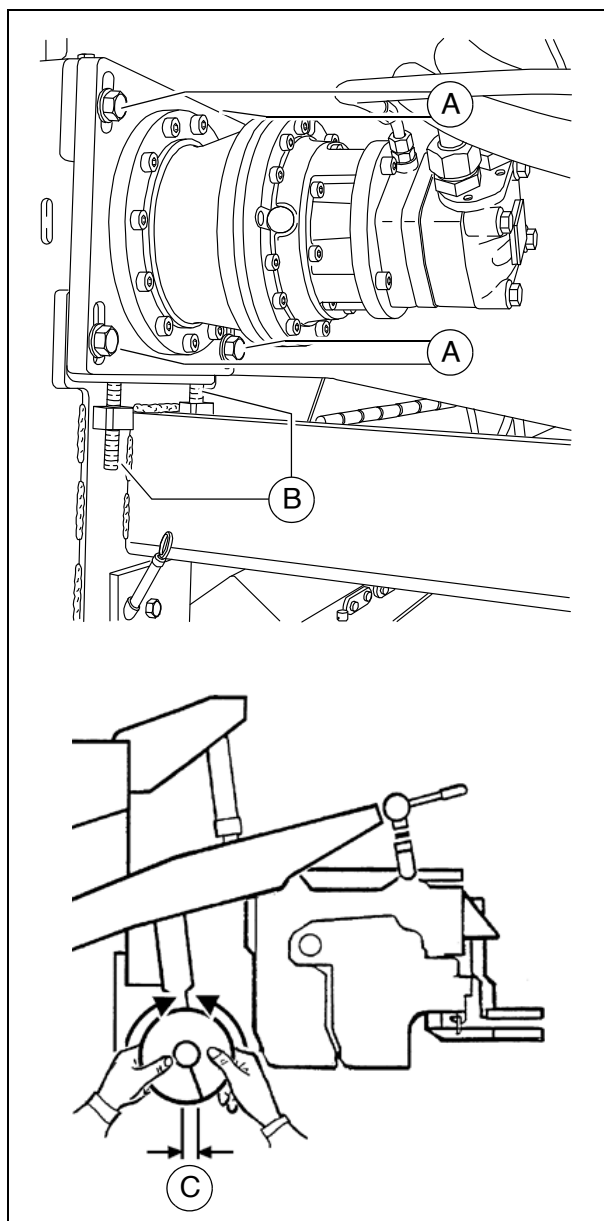

## Auger box (4)

### Check oil level



In case of correct oil level, the oil is between the two notches of the dipstick (A).

For **filling in** the oil:

- Unscrew screws (B) from the top cover of the auger box.
- Take off the cover (C).
- Fill up oil to correct level.
- Reinstall the cover.
- Use dipstick to check level again.

### Change oil




The oil should be changed when at operating temperature.

- Place a suitable collecting container under the auger box.
- Loosen bolts (D) from the circumference of the worm shaft flange.



The oil runs out between the flange and auger box.

- Drain out all oil.
- Correctly retighten flange bolts (D) diagonally.
- Pour the specified oil in through the open top cover (C) of the auger box until the oil level has reached the correct level on the dipstick (A).
- Correctly reinstall the cover (C) and screws (B).

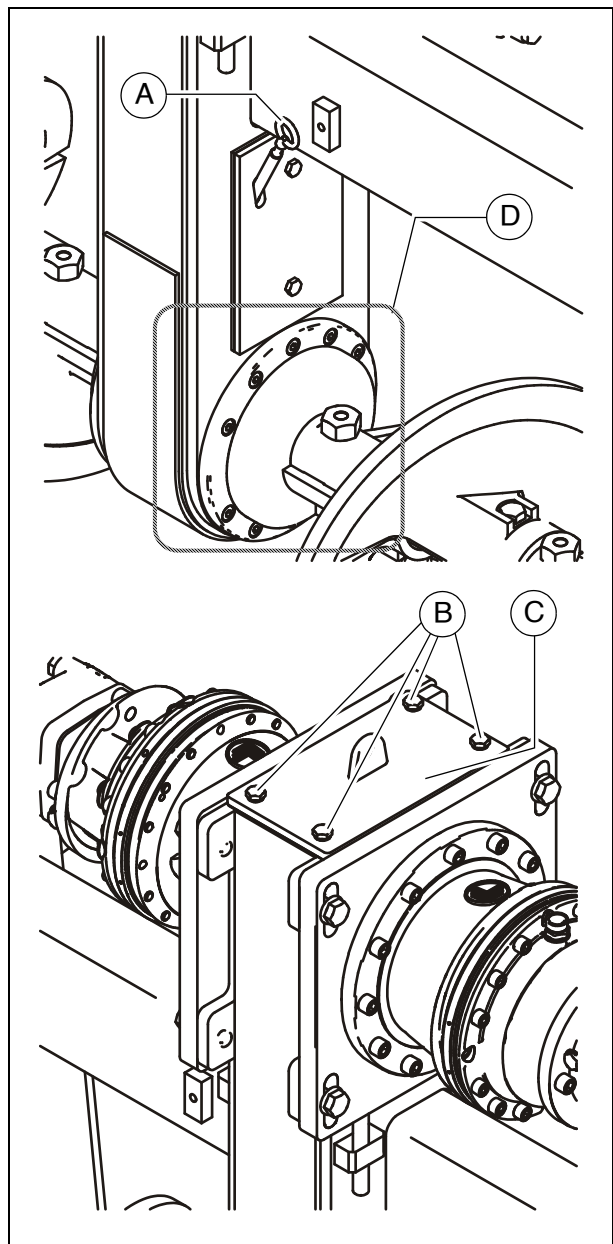


### Seals and sealing rings (5)



After reaching operating temperature, check the gearbox for leaks.



In case of visible leaks, e.g. between the flange surfaces (A) of the gearbox, replacement of the seals and sealing rings is necessary.

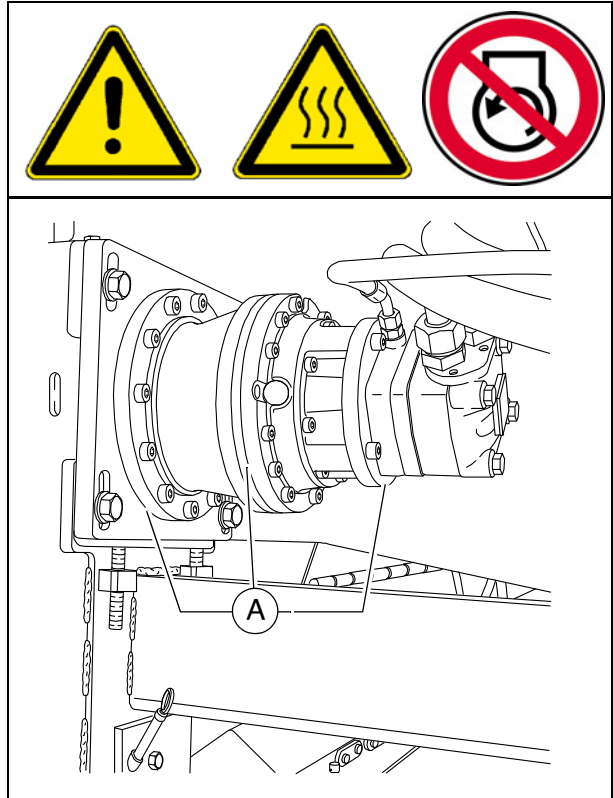

### **Gearbox bolts Check tightening (6)**



Following the running-in period, the tightening torques of the outer gearbox bolts must be checked.




- Tighten to the following torques if necessary:

- (A): 86 Nm
- (B): 83 Nm
- (C): 49 Nm
- (D): 49 Nm
- (E): 86 Nm



Check that each bolt has attained the full tightening torque and note the corresponding tightening pattern whilst doing so!

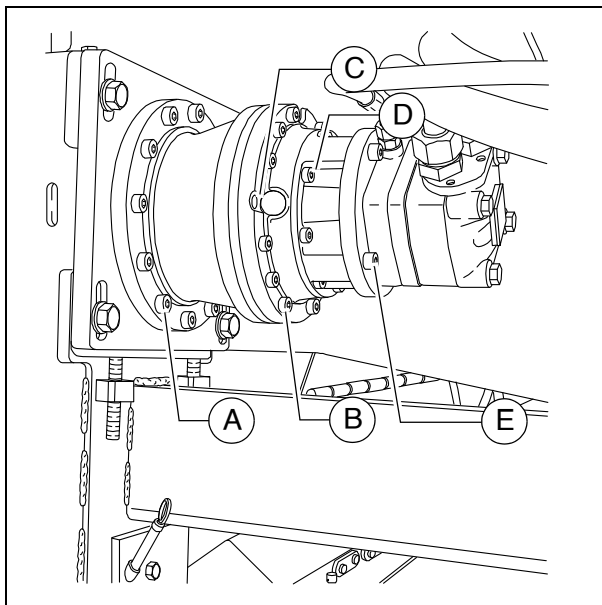

### **Mounting screws - Outer auger bearing Check tightening (7)**




Following the running-in period, the tightening torques of the outer auger bearing mounting screws must be checked.

- Tighten to the following torques if necessary:

- (F): 210 Nm



If the auger's working width is changed, the tightening check must be repeated after the running-in period!

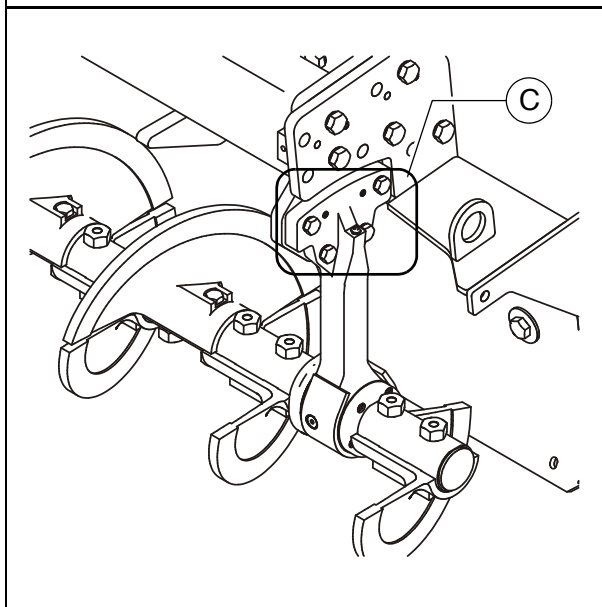

## Auger blade (8)



If the surface of the auger blade (A) becomes sharp-edged, the diameter of the auger is reduced and the blades (B) have to be replaced.



- Remove the bolts (C), washers (D), nuts (E) and auger blade (B).




Risk of injury due to sharp-edged parts!



Auger blades must be installed play-free; the contact surfaces must be dirt-free!


- Install the new auger blade (B); replace the bolts (C), washers (D) and nuts (E) if necessary.

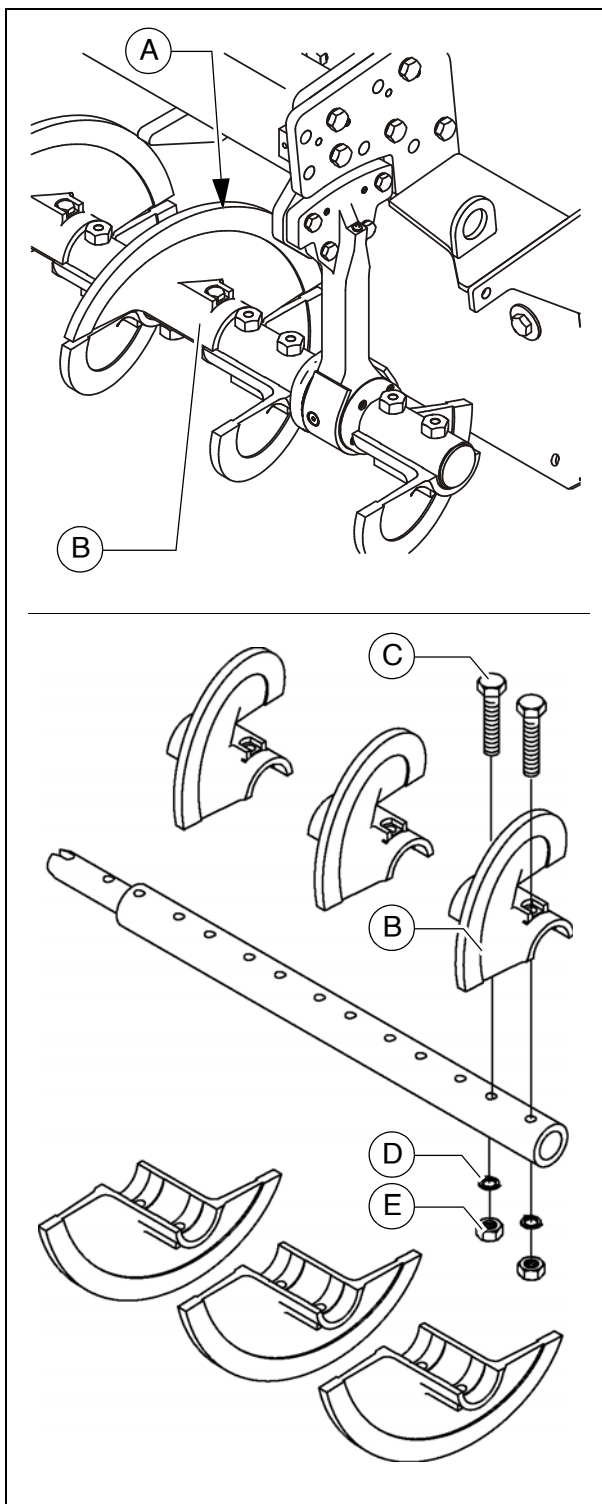



# F 51 Maintenance - engine assembly

## 1 Maintenance - engine assembly

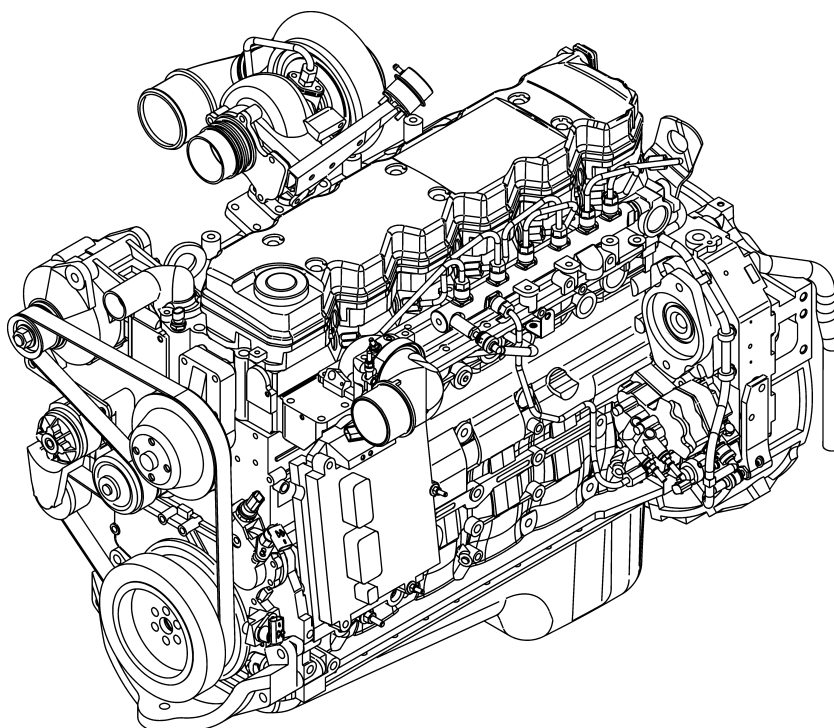

In addition to these maintenance instructions, the maintenance instructions issued by the engine manufacturer must be adhered to under all circumstances. All maintenance work and service intervals itemised here are binding in nature.

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |                |                 |                      |              | Maintenance point   | Note |
|------|----------|----|-----|-----|----------------|-----------------|----------------------|--------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 / annually | 1000 / annually | 2000 / every 2 years | If necessary |   |      |
| 1    | ■        |    |     |     |                |                 |                      |              | - Fuel tank<br>Check filling level                              |      |
|      |          |    |     |     |                |                 |                      | ■            | - Fuel tank<br>Refill with fuel                                 |      |
|      |          |    |     |     |                |                 | ■                    |              | - Fuel tank<br>Clean the tank and system                        |      |
| 2    | ■        |    |     |     |                |                 |                      |              | - Engine lube oil system<br>Check oil level                     |      |
|      |          |    |     |     |                |                 |                      | ■            | - Engine lube oil system<br>Top up oil                          |      |
|      |          |    |     |     | ■              |                 |                      |              | - Engine lube oil system<br>Change oil                          |      |
|      |          |    |     |     | ■              |                 |                      |              | - Engine lube oil system<br>Change oil filter                   |      |
| 3    | ■        |    |     |     |                |                 |                      |              | - Engine fuel system<br>Fuel filter (drain the water separator) |      |
|      |          |    |     |     | ■              |                 |                      |              | - Engine fuel system<br>Replace fuel pre-filter                 |      |
|      |          |    |     |     | ■              |                 |                      |              | - Engine fuel system<br>Replace fuel filter                     |      |
|      |          |    |     |     |                |                 |                      | ■            | - Engine fuel system<br>Bleed fuel system                       |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

| Item | Interval |    |     |     |                |                 |                      |              | Maintenance point  | Note |
|------|----------|----|-----|-----|----------------|-----------------|----------------------|--------------|--|------|
|      | 10       | 50 | 100 | 250 | 500 / annually | 1000 / annually | 2000 / every 2 years | If necessary |  |      |
| 4    | ■        |    |     |     |                |                 |                      |              | - Engine air filter<br>Check air filter                    |      |
|      | ■        |    |     |     |                |                 |                      |              | - Engine air filter<br>Dust collector<br>Emptying          |      |
|      |          |    |     |     |                | ■               |                      | ■            | - Engine air filter<br>Air filter cartridge<br>Replace     |      |
| 5    | ■        |    |     |     |                |                 |                      |              | - Engine cooling system<br>Check radiator fins             |      |
|      |          |    |     | ■   |                |                 |                      | ■            | - Engine cooling system<br>Clean radiator fins             |      |
|      |          |    |     | ■   |                |                 |                      |              | - Engine cooling system<br>Check level of the coolant      |      |
|      |          |    |     |     |                |                 |                      | ■            | - Engine cooling system<br>Top up coolant                  |      |
|      |          |    |     |     | ■              |                 |                      |              | - Engine cooling system<br>Check coolant concentration     |      |
|      |          |    |     |     |                |                 |                      | ■            | - Engine cooling system<br>Coolant concentration<br>Adjust |      |
|      |          |    |     |     |                |                 | ■                    |              | - Engine cooling system<br>Change coolant                  |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

| Item | Interval |    |     |     |                |                 |                      | Maintenance point                         | Note |
|------|----------|----|-----|-----|----------------|-----------------|----------------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 / annually | 1000 / annually | 2000 / every 2 years |   |      |
| 6    |          |    |     | ■   |                |                 |                      | - Engine drive belt<br>Check drive belt   |      |
|      |          |    |     |     |                |                 | ■                    | - Engine drive belt<br>Tighten drive belt |      |
|      |          |    |     |     | ■              |                 |                      | - Engine drive belt<br>Replace drive belt |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## 1.2 Points of maintenance

### Engine fuel tank (1)

- Check the **filling level** on the gauge on the operating panel.




Fill the fuel tank each time before starting work so that the fuel system cannot "run dry" and time-consuming venting (bleeding) can therefore be avoided.

For **filling in** the fuel:

- Remove cap (A).
- Fill in fuel through the filling port until the required fill level is achieved.
- Replace the cap (A).



### Clean the tank and system:

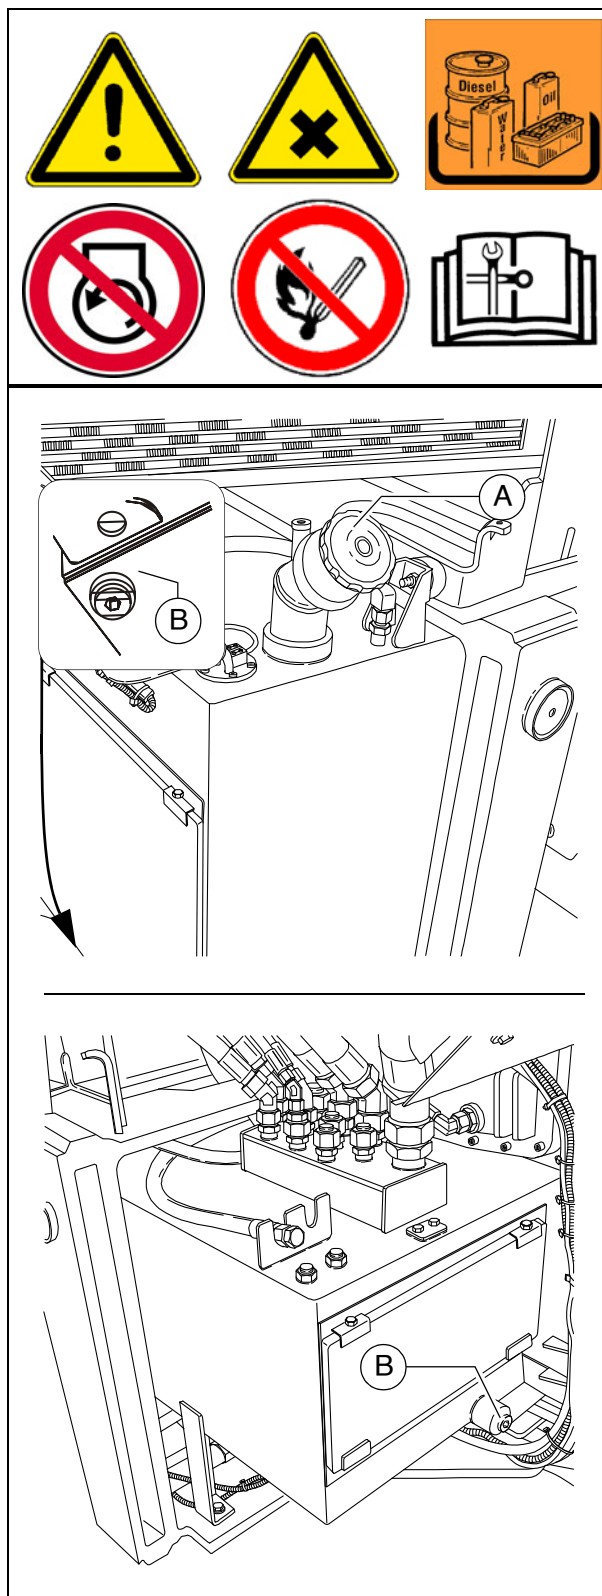
- Unscrew the drain plugs (B) in both tanks and drain about 1 l fuel into a collection pan.
- When fastening the screw again after draining, make sure to use a new seal.



## Engine lube oil system (2)

### Check oil level


-  In case of correct oil level, the oil is between the two notches of the dipstick (A).
-  Only check the oil level when the finisher is in a horizontal position!

-  Too much oil in engine damages gas-kets; too little oil results in overheating and engine destruction.


For **filling in** the oil:




- Remove cap (B).
- Fill up oil to correct level.
- Return cap (B).
- Use dipstick to check level again.

### Oil change:


-  The oil drain screw is accessed via the cover (C) in the vehicle's material tunnel:

- Remove the bolts (D) from the frame and pull the cover (C) out in the direction of travel.
- After completing the maintenance work, reinstall the cover (C) properly.

-  Change the oil when the engine is at operating temperature

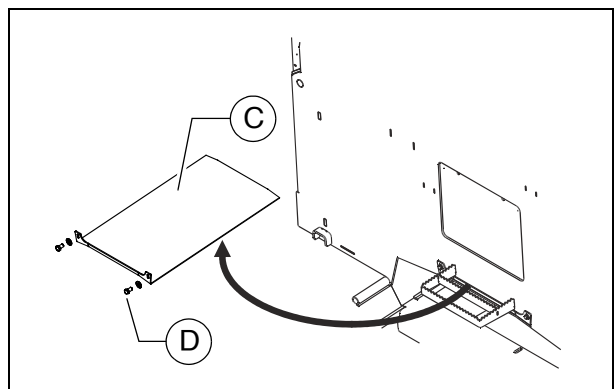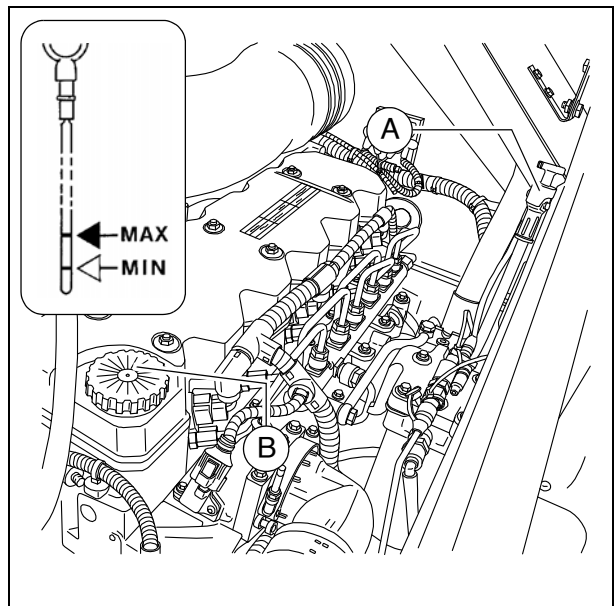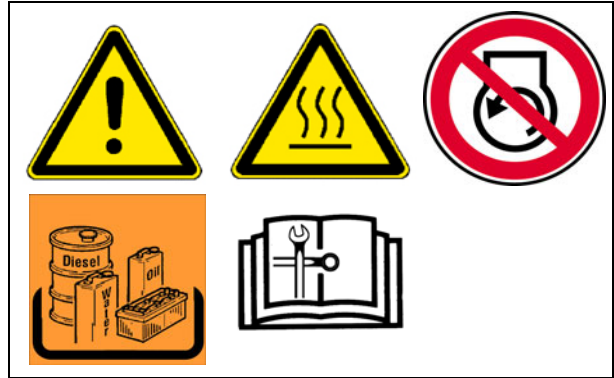

- Position a collecting container beneath the oil pan oil drain screw (E).
- Remove the oil drain screw (E) and allow the oil to drain completely.
- Reinstall the oil drain screw (E) with a new seal and tighten properly.
- Fill in the specified quality of oil through the filler opening (B) on the engine until the oil level rises to the correct mark on the dipstick (A).

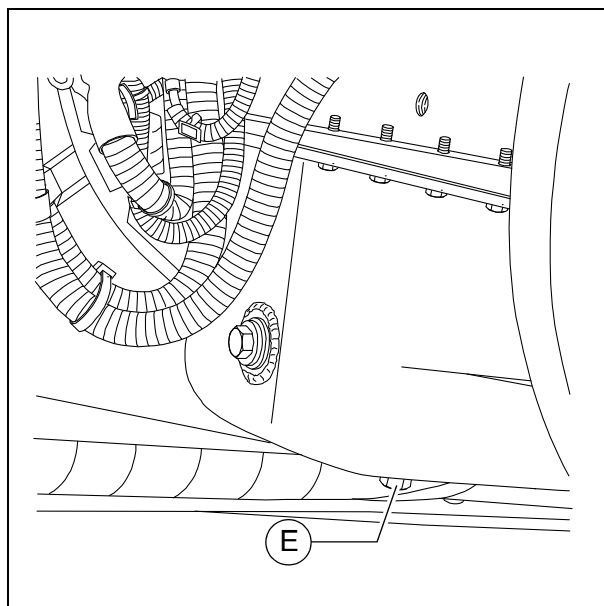


### Changing the oil filter:




All filters are accessed via the service flap (F) on the vehicle's centre wall:

- Remove the screws (G) from the inner side of the frame and remove the service flap (F).
- After completing the maintenance work, reinstall the service flap (F) properly.

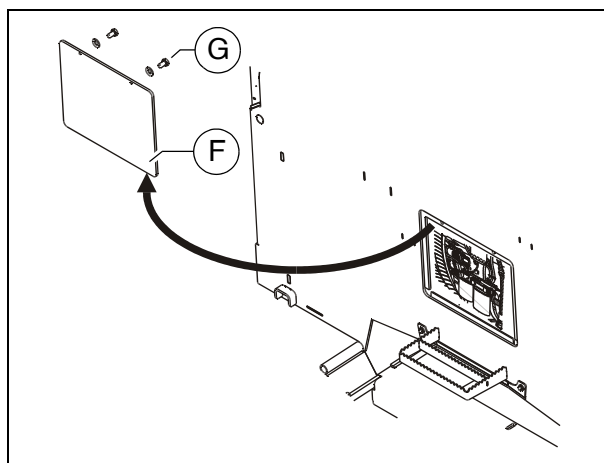

The new filter is inserted during an oil change once the used oil has been drained out.

- Loosen the filter (H) with a filter wrench or filter strap and unscrew it. Clean the contact surface.
- Apply light coating of oil to the gasket on the new filter and fill filter with oil before installing it.
- Tighten filter by hand.

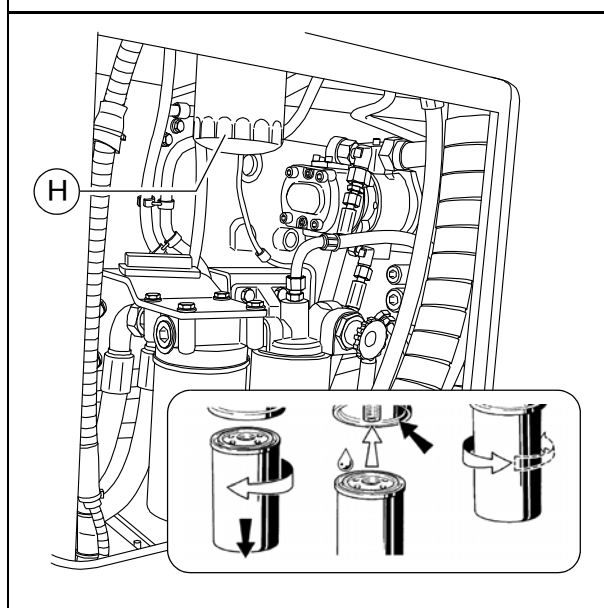

After installing the oil filter, attention must be paid to the oil pressure display and good sealing during the test run. Check oil level again.


### Engine fuel system (3)



All filters are accessed via the service flap (A) on the vehicle's centre wall:



- Remove the screws (B) from the inner side of the frame and remove the service flap (A).
- After completing the maintenance work, reinstall the service flap (A) properly.

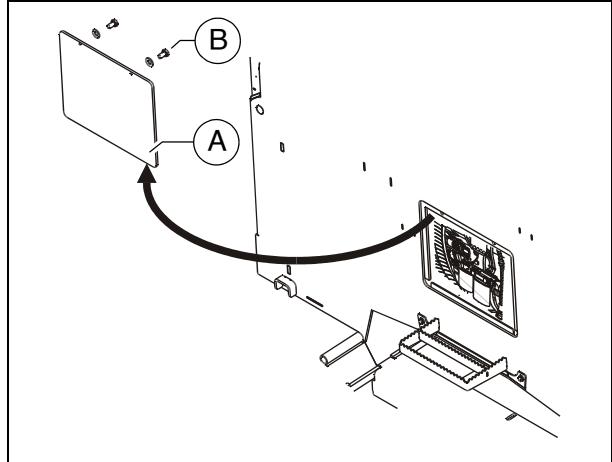

The fuel filter system consists of two filters:


- Prefilter with water separator (C)
- Main filter (D)

#### Prefilter - draining of water



Drain the collecting vessel at regular intervals, or in response to an error message from the engine control unit.

- Drain off separated water at the cock (E) and collect, then close the cock again.

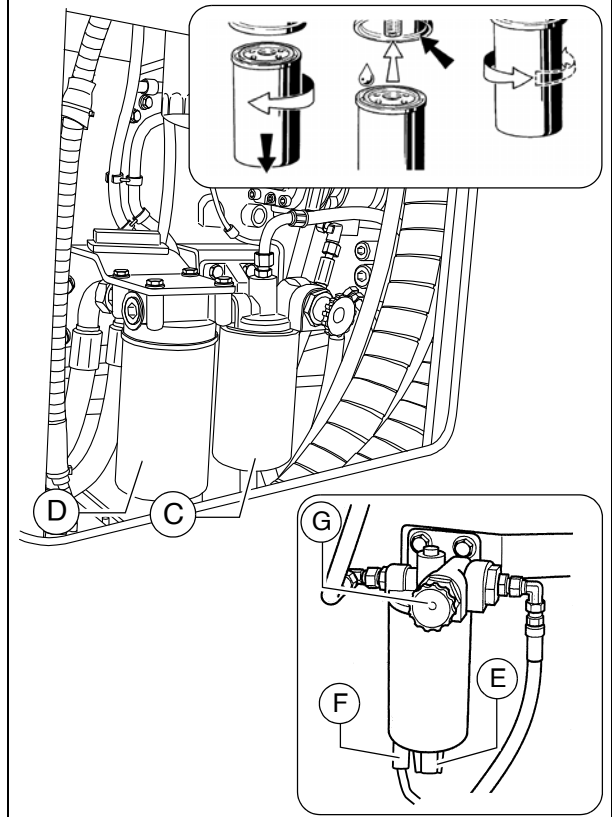



### **Changing the prefilter:**

- Drain off separated water at the cock (E) and collect, then close the cock again.
- Pull off the water sensor (F) connector.
- Loosen the filter cartridge (C) using a filter wrench or filter strap and unscrew.
- Clean sealing surface of filter bracket.
- Oil in filter cartridge gasket (only use a little oil) and screw (hand tight) under the bracket.
- Reconnect the water sensor (F) connector.

### **Bleeding the pre-filter:**

- Release the manual fuel pump's (G) bayonet lock by pressing and simultaneously turning counter-clockwise.
- The pump plunger is now pressed out via the spring.
- Pump until a very high resistance is perceptible and pumping can only be carried out very slowly.
- Now continue pumping a few more times. (The return line must be filled).
- Start the engine and operate for approx. 5 minutes at idle speed or low load.
- Check the prefilter for leaks whilst doing this.
- Lock the manual fuel pump's (G) bayonet lock by pressing and simultaneously turning clockwise.

### **Replacing the main filter:**

- Loosen the filter cartridge (D) using a filter wrench or filter strap and unscrew.
- Clean sealing surface of filter bracket.
- Oil in filter cartridge gasket (only use a little oil) and screw (hand tight) under the bracket.



After fitting the filter, ensure good sealing action during the test run.



## Engine air filter (4)

### Empty dust collector

- Empty the dust removal valve (A) on the air filter housing by compressing the discharge slot.
- Remove any dust defectors by pressing together the upper valve section.



Clean the dust removal valve from time to time.

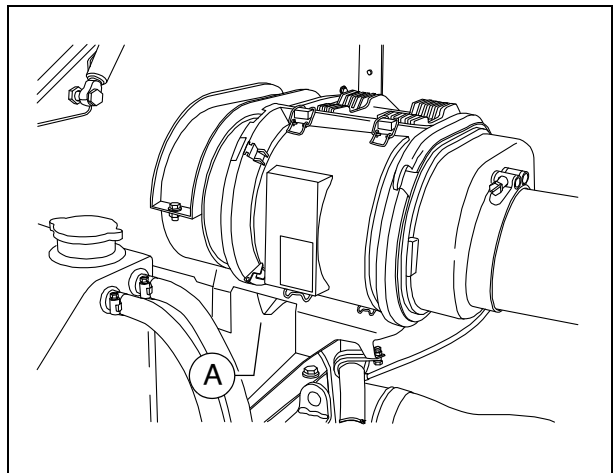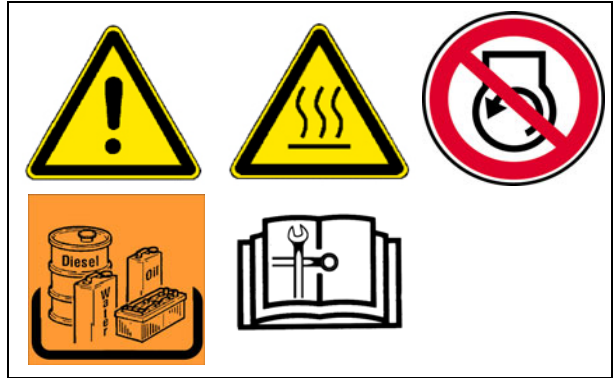

## Replace air filter insert




Maintenance of the filter becomes necessary if:

- Engine electronics service indicator
- Open the air filter housing (B) at the clips (C).
- Move filter element (D) to the side a little and then pull it out of the housing.
- Pull out the safety element (E) and check for signs of damage.



Replace the safety element (E) after the filter has been serviced 3 times, but after 2 years at the latest (never clean it!).

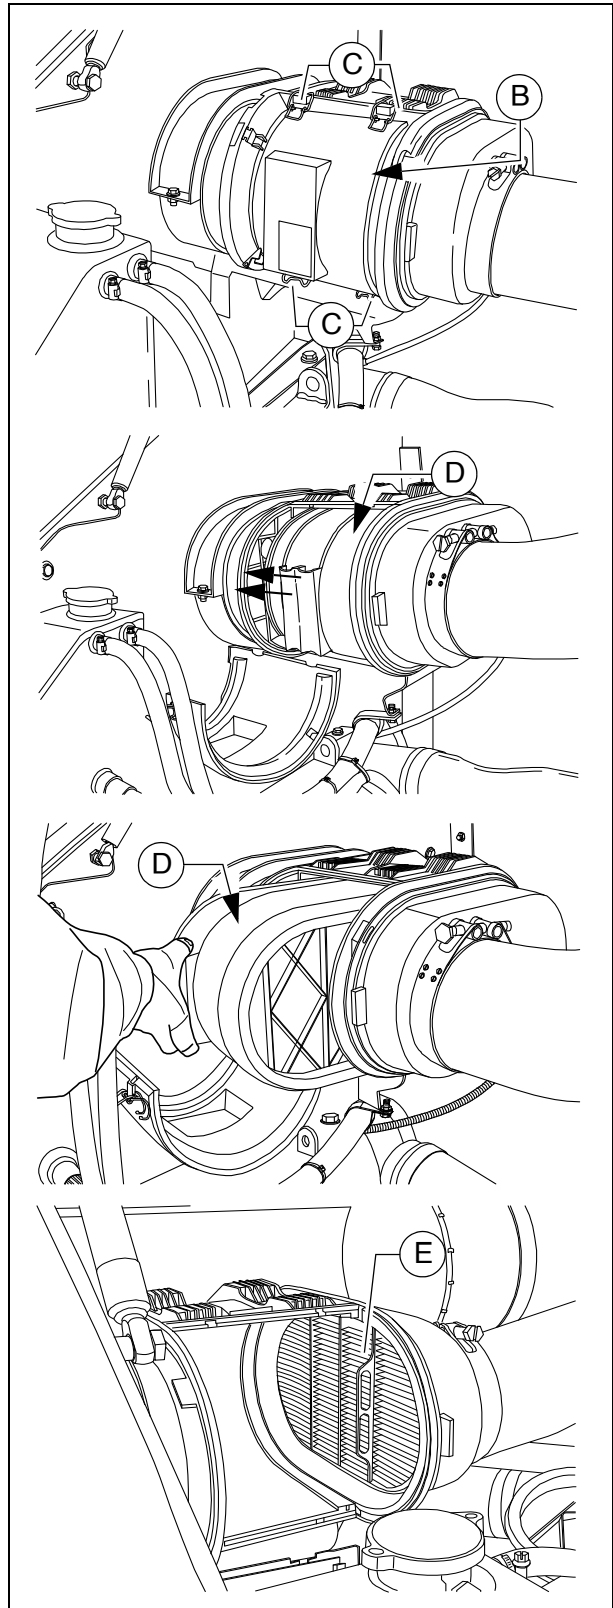

## Engine cooling system (5)

### Checking / topping up coolant

The cooling water level must be checked when the system is cold. Make sure that the anti-freeze and anti-corrosive liquid is sufficient (-25°C).



When hot, the system is under pressure. When it is opened, there is danger of scalding!

- If necessary fill in a sufficient amount of coolant through the open port (A) of the compensating tank.

### Change coolant



When hot, the system is under pressure. When it is opened, there is danger of scalding!



Use only approved coolants!




Observe the instructions in the chapter entitled "Operating substances"!

- Remove the drain screw (B) on the radiator and let the coolant drain completely.
- Reinstall the drain screw (B) and tighten properly.
- Fill in coolant through the filling opening (A) on the compensation tank up to approx. 7 cm (C) from the top edge of the compensation tank.



The air is only able to escape completely from the cooling system once the engine has reached its operating temperature (at least 90°C).

Check the fluid level again, top up if necessary.

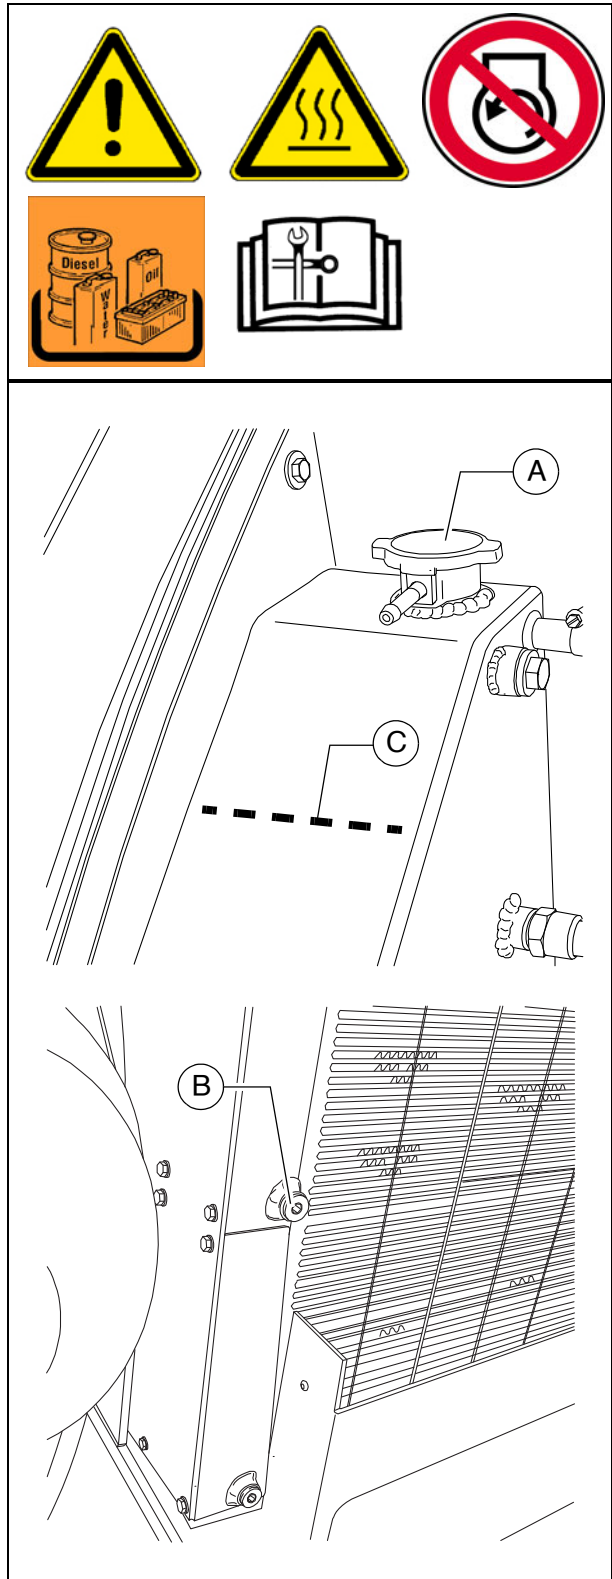

### **Checking and cleaning the radiator fins**

- If necessary, remove leaves, dust or sand from the radiator.



Observe engine's operating instructions!

### **Checking coolant concentration**

- Check the concentration using a suitable tester (hydrometer).
- Adjust the concentration if necessary.



Observe engine's operating instructions!

## Engine drive belt (6)

### Check drive belts

- Check the drive belt for damage.



Small transverse cracks in the belt are acceptable.



In the event of longitudinal cracks which intersect with transverse cracks and damaged material surfaces, belt replacement is necessary.




Observe engine's operating instructions!

### Replace drive belt




Observe engine's operating instructions!

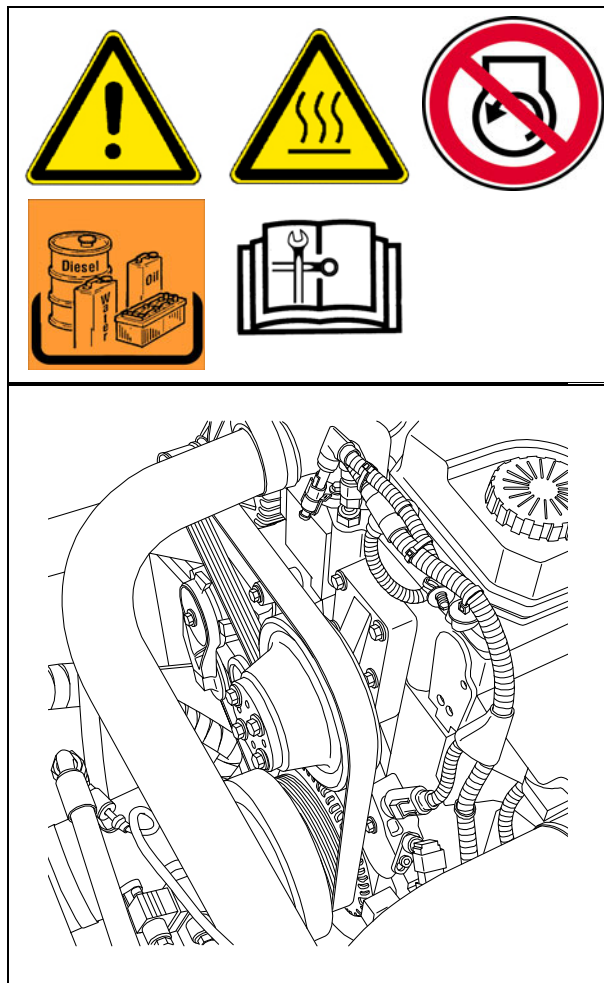

# F 60 Maintenance - hydraulic system

## 1 Maintenance - hydraulic system

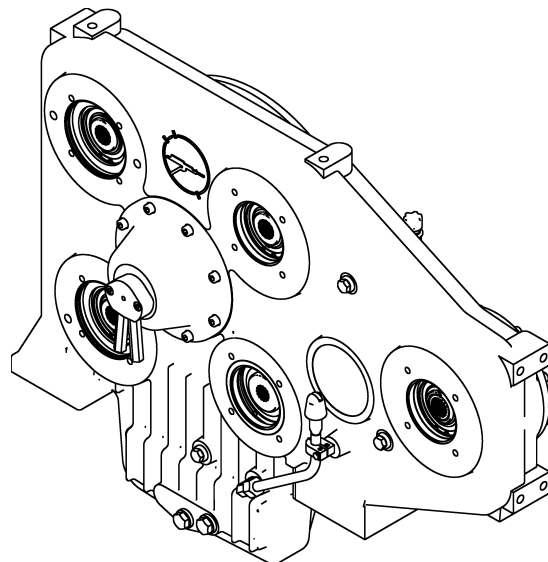

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      |              | Maintenance point   | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | If necessary |   |      |
| 1    | ■        |    |     |     |     |                 |                      |              | - Hydraulic oil tank -<br>Check fill level                                  |      |
|      |          |    |     |     |     |                 |                      | ■            | - Hydraulic oil tank -<br>Top up with oil                                   |      |
|      |          |    |     |     |     |                 | ■                    |              | - Hydraulic oil tank -<br>Change oil and clean                              |      |
| 2    | ■        |    |     |     |     |                 |                      |              | - Hydraulic oil tank -<br>Check maintenance indicator                       |      |
|      |          |    |     |     |     | ■               |                      | ■            | - Hydraulic oil tank -<br>Intake / return<br>hydraulic filter; change, vent |      |
| 3    | ■        |    |     |     |     |                 |                      |              | - High-pressure filter -<br>Check maintenance indicator                     |      |
|      |          |    |     |     |     | ■               |                      | ■            | - High-pressure filter -<br>Replace filter element                          |      |
| 4    |          | ■  |     |     |     |                 |                      |              | - Pump distribution gear -<br>Check oil level                               |      |
|      |          |    |     |     |     |                 |                      | ■            | - Pump distribution gear -<br>Top up oil                                    |      |
|      |          |    |     |     |     | ■               |                      |              | - Pump distribution gear -<br>Change oil                                    |      |
|      |          | ■  |     |     |     |                 |                      |              | - Pump distribution gear -<br>Check bleeder                                 |      |
|      |          |    |     |     |     |                 |                      | ■            | - Pump distribution gear -<br>Clean bleeder                                 |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |




| Item | Interval |    |     |     |     |                 |                      |              | Maintenance point                                  | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--------------|--|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | If necessary |  |      |
| 5    | ▼<br>■   |    |     |     |     |                 |                      |              | - Hydraulic hoses -<br>Visual inspection           |      |
|      | ▼<br>■   |    |     |     |     |                 |                      |              | - Hydraulic system<br>Leak test                    |      |
|      |          |    |     |     |     |                 |                      | ■            | - Hydraulic system<br>Retighten screw connections  |      |
|      |          |    |     |     |     |                 | ■                    | ■            | - Hydraulic hoses -<br>Replace hoses               |      |
| 6    |          |    |     |     | ■   |                 |                      | ■            | - Auxiliary flow filter-<br>Replace filter element | (○)  |


|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |


## 1.2 Points of maintenance

### Hydraulic oil tank (1)

- Check **oil level** on sight glass (A).


 The oil level must be up to the centre of the sight glass when the cylinders are retracted.


 If all the cylinders are extended, the level can fall below the sight glass.


 The sight glass is located on the side of the tank.



For **filling in** the oil:

- Remove cap (B).
- Fill in oil through the filling opening until the oil level rises to the centre of the sight glass (A) (+/- 5mm).
- Screw cap (B) on again.

 Regularly remove dust and dirt from the oil tank vent (C). Clean the surfaces of the oil cooler.

 Use only the recommended hydraulic oils - see section "Recommended hydraulic oils".

 When filling for the first time, all hydraulic cylinders should be extended/retracted at least 2x for ventilation!

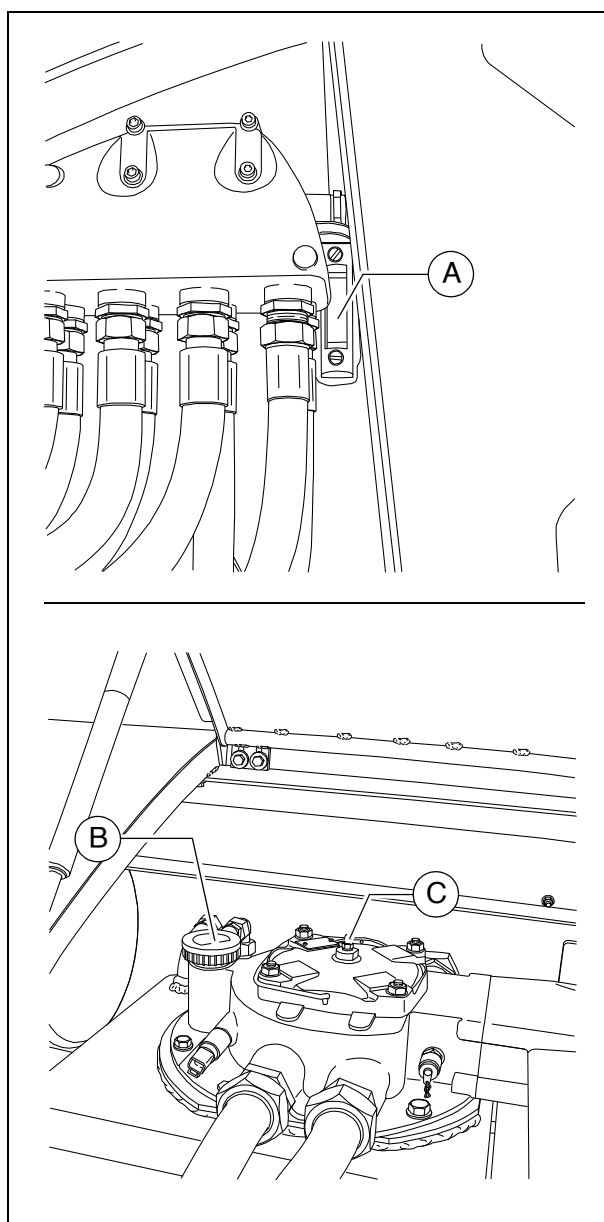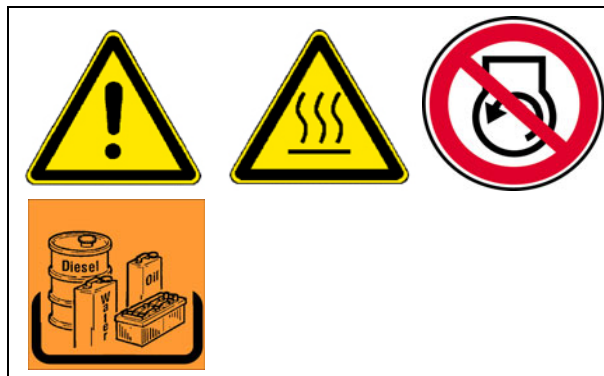

To **change** oil:


- To drain the hydraulic oil unscrew the drain plug (D) at the bottom of the tank.
- Collect the oil in a container using a funnel.
- When returning the screw, make sure to use a new seal.



The oil should be changed when at operating temperature.




When changing the hydraulic oil also change the filter.

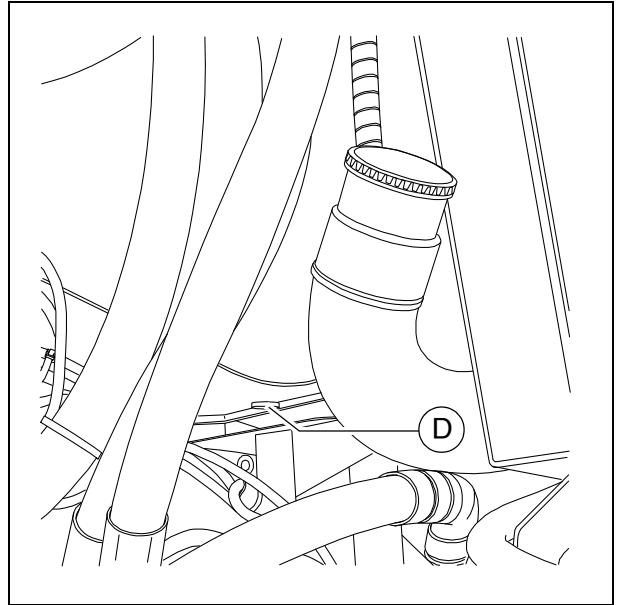

## Suction/return flow hydraulic filter (2)


Carry out **filter replacement** according to the interval or the indicator lamp in the operating panel!

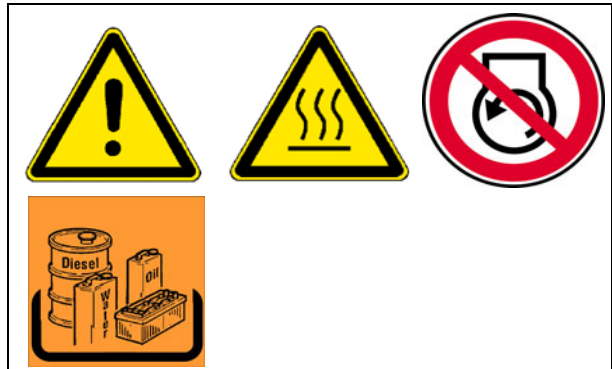

- Remove cover mounting screws (A) and lift off cover.
- Disassemble the removed unit into:
  - Cover (B)
  - Separating plate (C)
  - Filter (D)
  - Dirt trap (E)
- Clean the filter housing, cover, separating plate and dirt trap.
- Check the O-rings (F), replace if necessary.
- Coat the sealing surfaces and O-rings with clean operating fluid.



The filter must be bled following filter replacement!

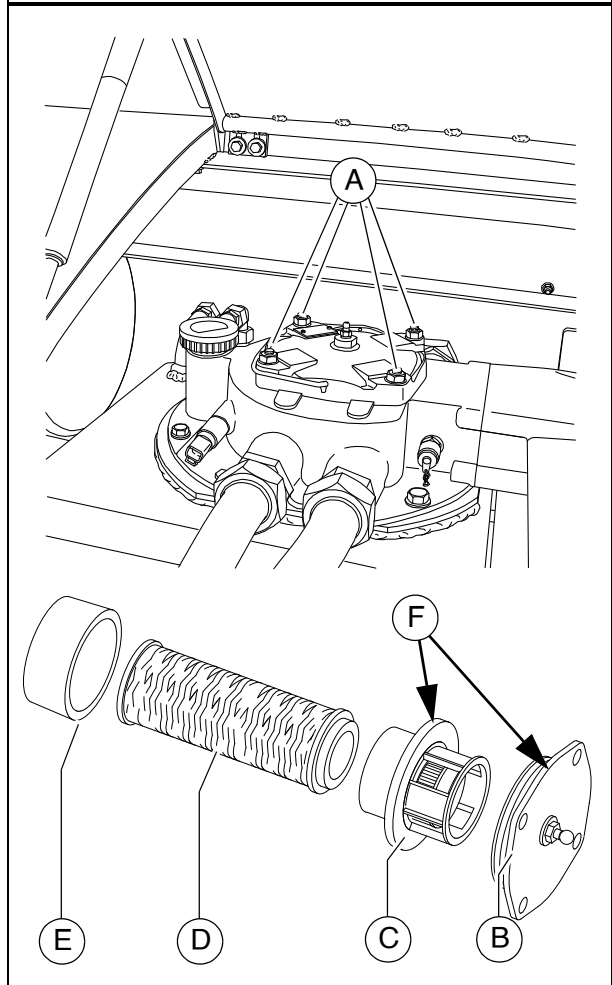

### Bleeding the filter

- Fill the opened filter housing with hydraulic oil up to approx. 2 cm below the top edge.
- If the oil level drops, replenish oil again.



Slow oil level reduction of approx. 1 cm / min. is normal!


- If the oil level remains stable, slowly insert the assembled unit with new filter element into the housing and tighten the cover mounting screws (A).
- Open the bleed screw (G).
- Place a transparent hose (H) onto the bleed screw, ending in a suitable container.
- Start the up drive engine at idle speed.
- Close the bleed screw (G) as soon as the oil forced through the hose is clear and therefore free of air bubbles.



The process from assembling the filter cover to starting the drive engine should take place in less than 3 minutes, as the oil level in the filter housing otherwise falls too far.



Ensure seal integrity is good after changing the filter.

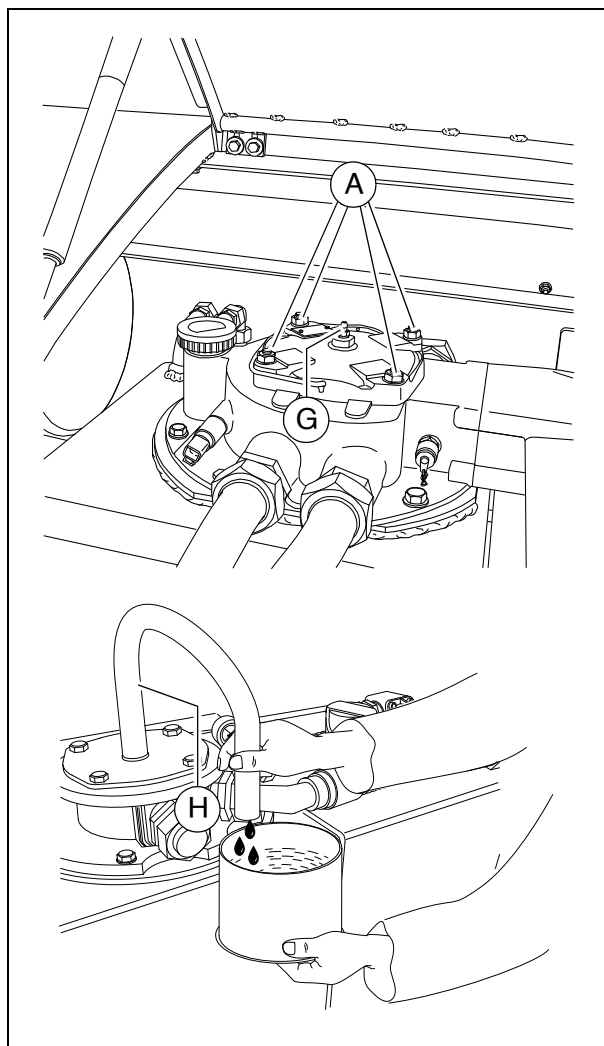

### High-pressure filter (3)

The filter elements must be replaced when the maintenance indicator (A) turns red.



The vehicle's hydraulic system contains 3 high-pressure filters.



- Unscrew filter housing (B).
- Remove the filter cartridge.
- Clean the filter housing.
- Insert the new filter cartridge.
- Replace the seal ring of the filter housing.
- Turn on the filter housing by hand and tighten it using a wrench.
- Start trial operation and check the tightness of the filter.



Replace the seal ring whenever the filter cartridge is replaced.



After replacing the filter element, the red mark in the maintenance indicator (A) automatically reverts to green.

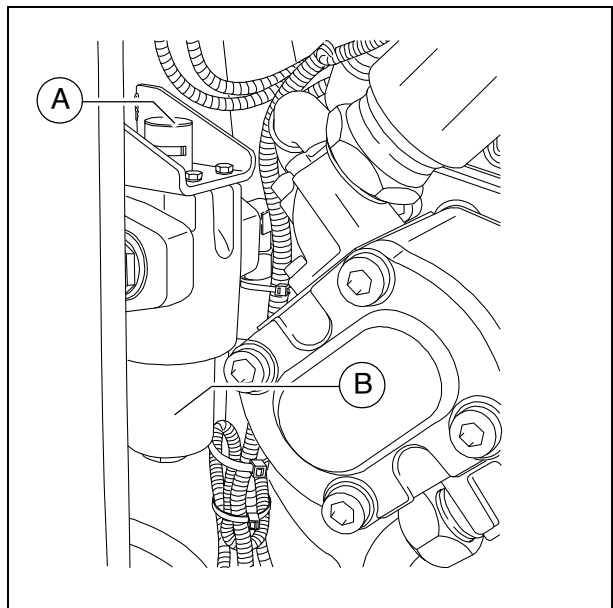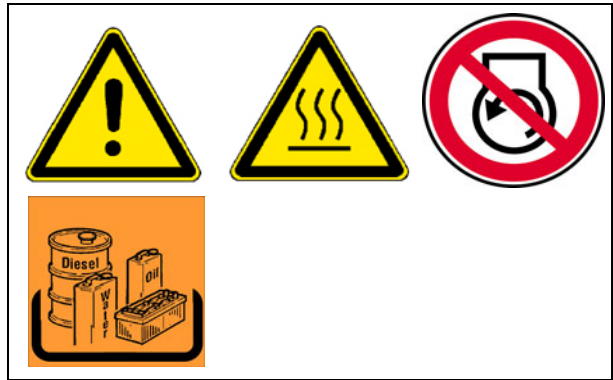

### Pump distribution gear (4)

- **Oil level** check on dipstick (A).



The oil level must lie between the upper and lower marks.



For **filling in** the oil:


- Pull out the dipstick (A) completely.
- Add new oil through the dipstick opening (B).
- Check the fluid level using the dipstick.



Before checking with the dipstick, wait for a moment, as the oil which has been poured in first has to flow off.



Make sure to clean the screw and the vicinity of the drain bore!

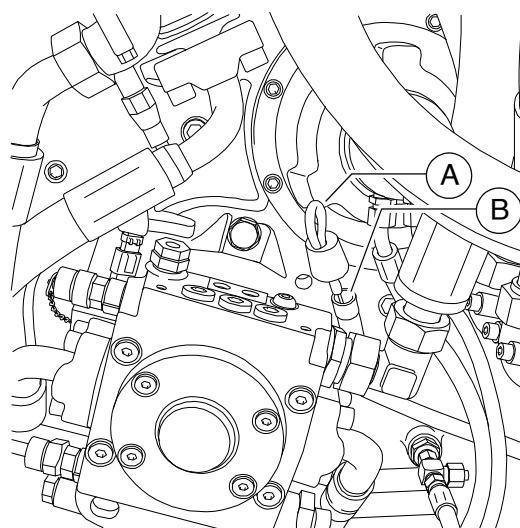


### Oil change:

- Place the end of the oil drain port hose (C) in the collection container.
- Remove the screw cap with a wrench and allow the oil to drain completely.
- Replace the screw cap and tighten properly.
- Pour in the prescribed quality of oil through the dipstick opening (B).
- Check the fluid level using the dipstick.



The oil should be changed when at operating temperature.

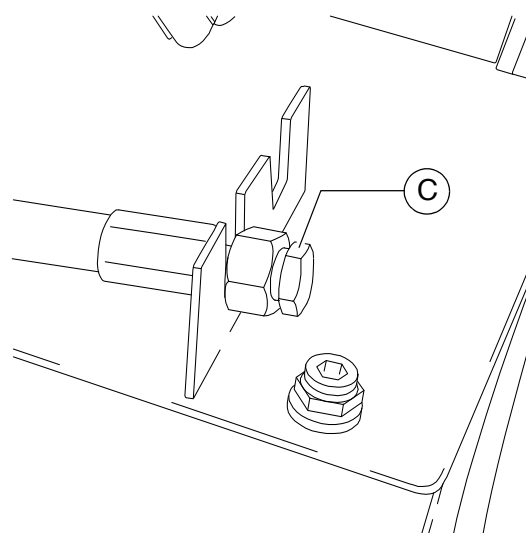


## Bleeder



The bleeder (A) can be found on the rear of the pump distribution gear housing.

- The functioning of the bleeder must be ensured.  
If soiling has occurred, the bleeder should be cleaned.

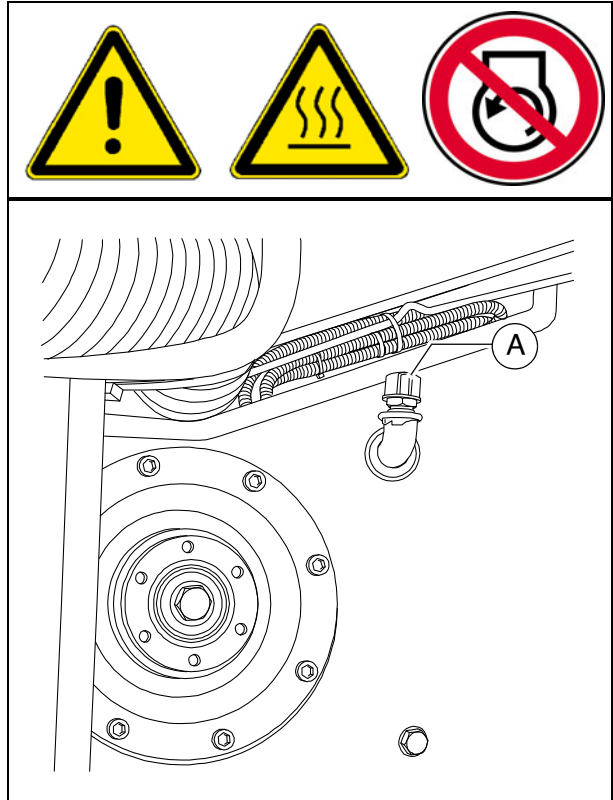



## Hydraulic hoses (5)

- Specifically check the condition of the hydraulic hoses.
- Immediately replace any damaged hoses.



Replace hydraulic hoses if the following criteria are found on inspection:



- damage of the outer layer to the inlay (e.g. chafing, cuts, cracks).
- brittleness of the outer layer (cracking of the hose material).
- deformation that does not correspond to the natural shape of the hose or pipe when depressurised or under pressure or when bent (e.g. separated layers, blistering, pinched or buckled points).
- leaks.
- damage or deformation to the hose fittings (affecting the sealing function); replacements are not necessary for minor damage to the surface.
- hose coming away from the fitting.
- corrosion of the fitting with a detrimental effect on function and strength.
- failure to comply with the installation requirements.
- period of use has exceeded 6 years. Here it is the date of manufacture of the hydraulic hose stated on the fitting that counts, plus 6 years. If the fitting states "2004" as the date of manufacture, the period of use ends in February 2010.



See the section on "Marking hydraulic hoses".



Ageing hoses become porous and may burst! Danger of accidents!



Always comply with the following instructions when installing and removing hydraulic hoses:

- Always only use original Dynapac hydraulic hoses!
- Always observe high standards of cleanliness!
- Hydraulic hoses must always be fitted to ensure that in all operating statuses,
  - there is no tensile load apart from dead weight.
  - there is no compressive load for short lengths.
  - any external mechanical impact on the hydraulic hoses is avoided.
  - appropriate positioning and fastening of the hoses prevents them from chafing on components or on each other.
  - components with sharp edges must be covered when installing hydraulic hoses.
  - bending radii are not smaller than the permitted values.
- When hydraulic hoses are connected to moving parts, the length of the hose must be dimensioned to ensure that the bending radii are not smaller than the permitted smallest values right across the full range of movement and/or that the hydraulic hose is not also exposed to tension.
- Fasten the hydraulic hoses to the provided fastening points. the hoses must not be hindered in their natural movement and change in length.
- Painting the hydraulic hoses is forbidden!

### Marking hydraulic hoses / storage period, period of use




A number stamped onto the threaded connection provides information about the date of manufacture (A) (month / year) and the maximum pressure permitted for this hose (B).



Never install hoses on top of one another and always ensure that they are at the correct pressure.

In individual cases, the period of use can be stipulated according to experience and may differ from the following general indications:

- When producing the hose pipe, the hose (purchased by the meter) should not be more than four years old.
- The period of use of a hose pipe should not exceed six years, including any possible storage period.  
The storage period should not exceed two years.

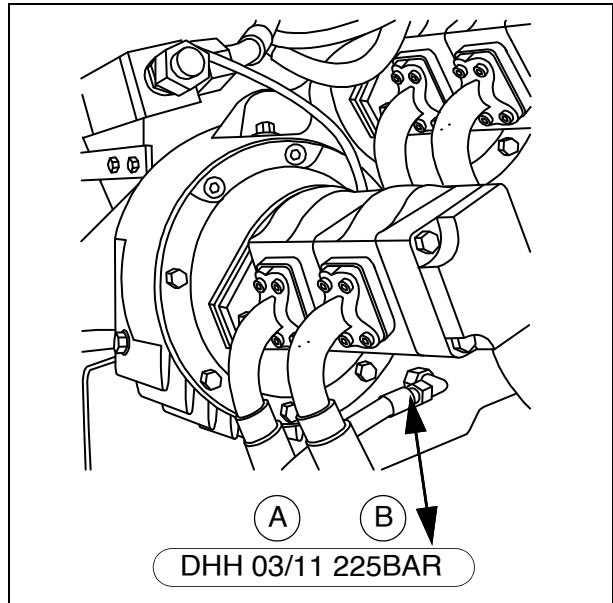

## Auxiliary flow filter (6)





The hydraulic oil change is omitted on use of an auxiliary flow filter!  
The quality of the oil must be checked regularly.  
The oil level must be topped up if necessary!

### Replacing filter element:

- Release the threaded cover connection (A) then open the non-return valve briefly to lower the oil level in the filter, then close the non-return valve again.
- Replace filter element (B) and sealing ring (C):
  - Turn filter element clockwise with the help of carrier straps and, at the same time, raise it slightly.
  - Wait for a moment until the oil has escaped downwards, then remove the filter element.
- Check inlet and outlet in filter housing (D).
- As required, top up hydraulic oil level in filter housing then screw down the cover.
- Bleed the hydraulic system.




Do not remove the cardboard sleeve from the filter element! This is part of the filter!

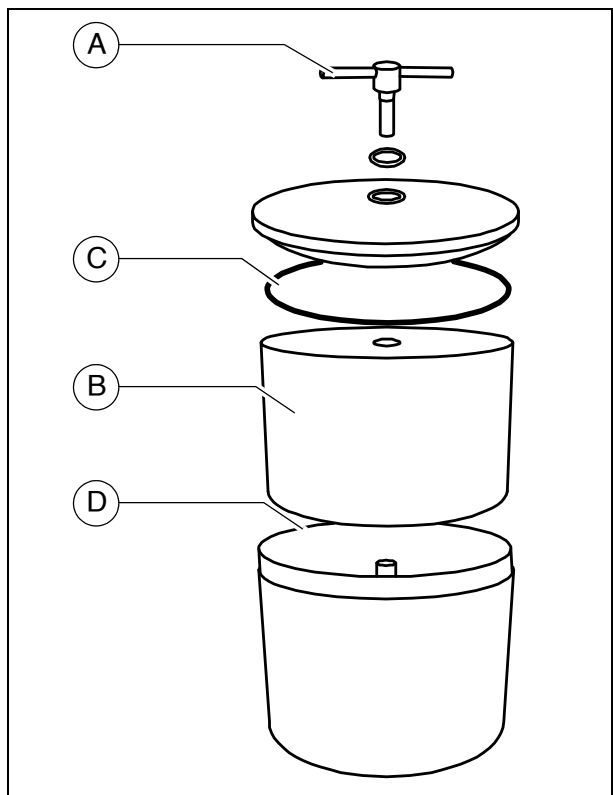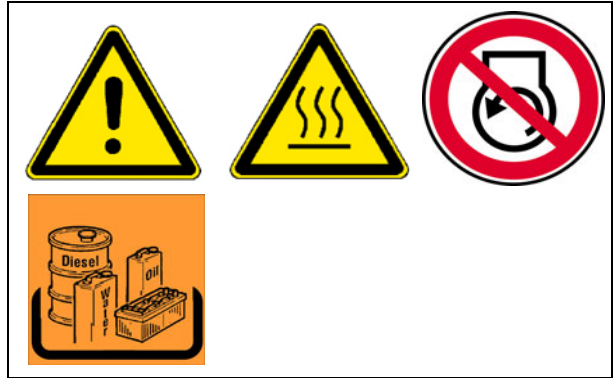

# F 72 Maintenance - travel drive, steering

## 1 Maintenance - travel drive, steering

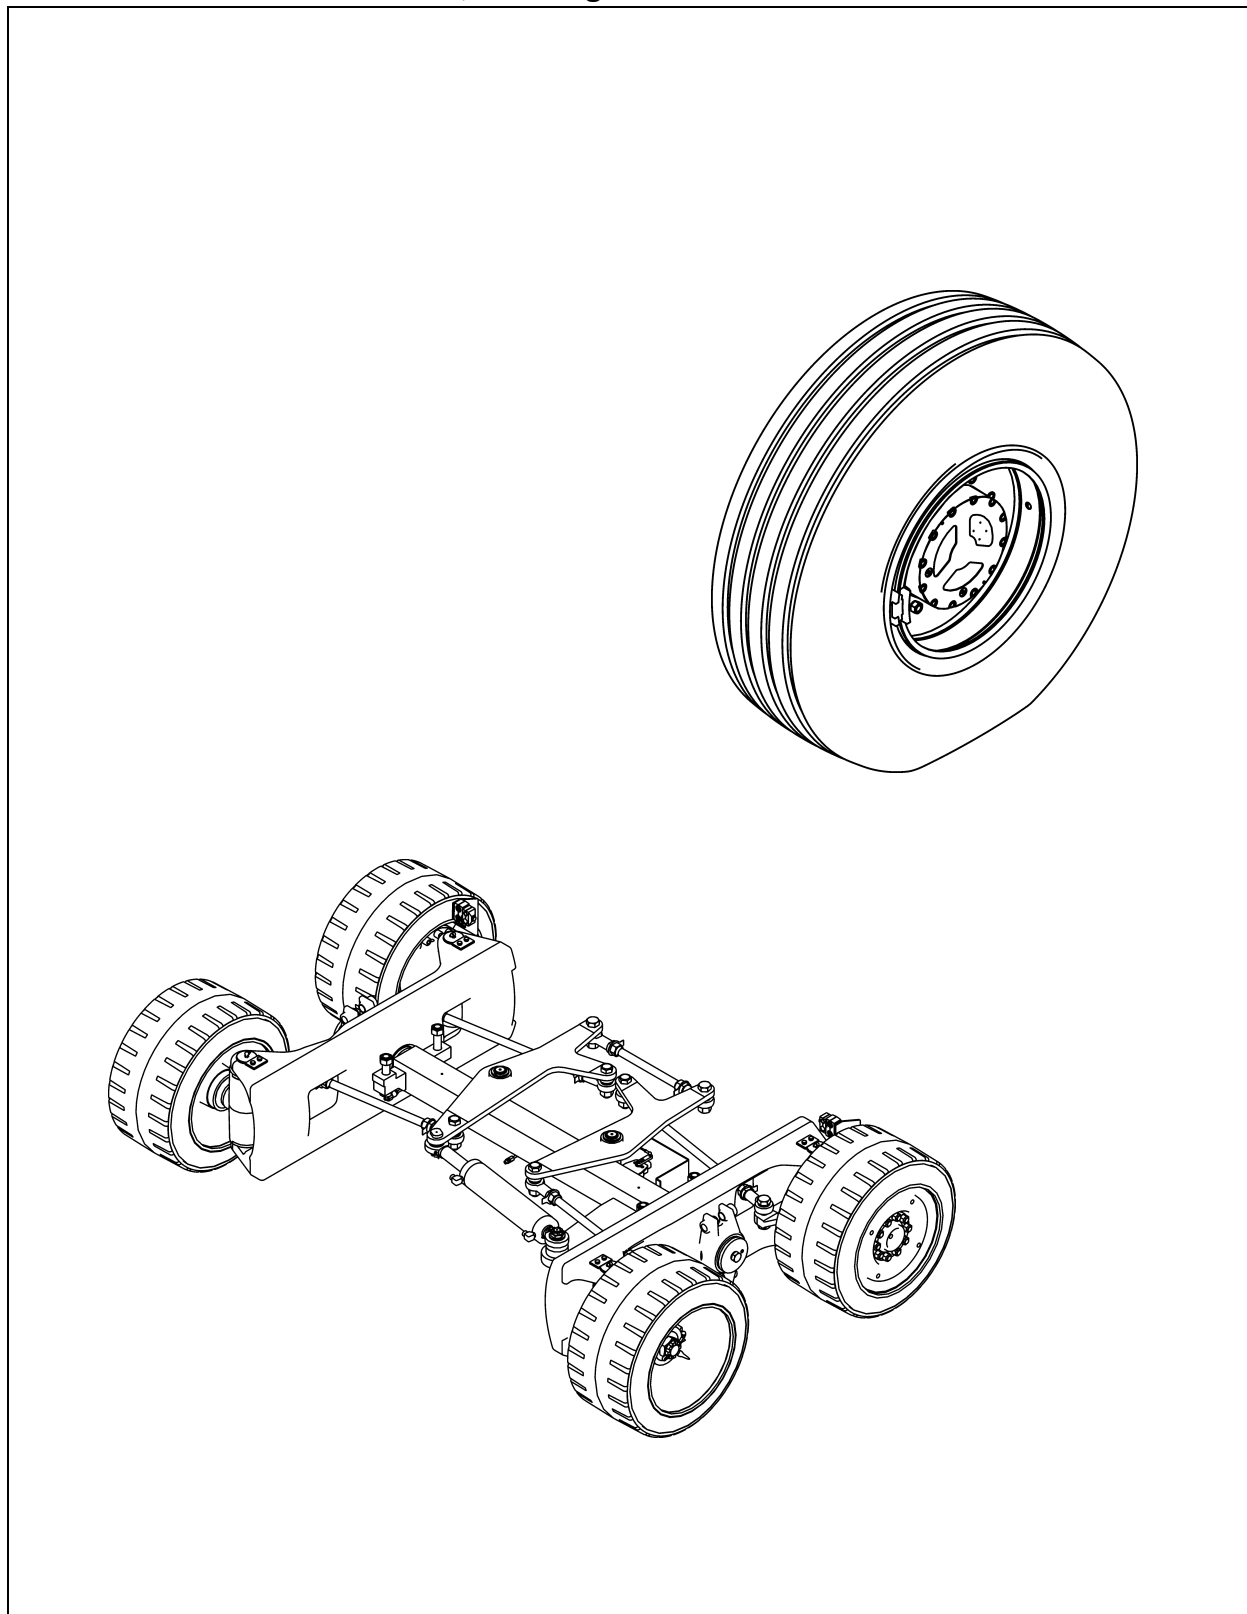

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      | Maintenance point                       | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years |   |      |
| 1    |          | ■  |     |     |     |                 |                      | - Planetary gear -<br>Check oil level   |      |
|      |          |    |     |     |     |                 | ■                    | - Planetary gear -<br>Top up oil        |      |
|      |          |    | ▼   |     | ■   |                 |                      | - Planetary gear -<br>Change oil        |      |
|      |          |    |     |     | ■   |                 |                      | - Planetary gear -<br>Check oil quality |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

| Item | Interval |    |     |     |     |                 |                      | Maintenance point                                    | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years |  |      |
| 2    | ■        |    |     |     |     |                 |                      | - Drive wheels -<br>Check tyres for damage           |      |
|      |          |    |     |     |     |                 | ■                    | - Drive wheels -<br>Replace tyres                    |      |
|      |          | ■  |     |     |     |                 |                      | - Drive wheels -<br>Check air pressure               |      |
|      |          |    |     |     |     |                 | ■                    | - Drive wheels -<br>Adjust air pressure              |      |
|      | ▼        |    |     |     |     |                 |                      | - Drive wheels -<br>Check wheel nuts                 |      |
|      |          |    |     |     |     |                 | ■                    | - Drive wheels -<br>Tighten wheel nuts               |      |
| 3    |          | ■  |     |     |     |                 |                      | - Lubrication points<br>Lubricate king pins          |      |
|      |          | ■  |     |     |     |                 |                      | - Lubrication points<br>Lubricate steering           |      |
|      |          | ■  |     |     |     |                 |                      | - Lubrication points<br>Lubricate floating axle      |      |
|      |          | ■  |     |     |     |                 |                      | - Lubrication points<br>Lubricate (○) wheel bearings |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## 1.2 Points of maintenance

### Planetary gear (1)

- Turn the rear wheel so that the drain plug (B) is located at the bottom.
- For **oil level check** unscrew and remove the inspection bolt (A).



When oil level is correct, the oil comes up to the lower edge of the inspection bore or a small amount of oil escapes through the aperture.



For **filling in** the oil:

- Unscrew the filler screw (A).
- Fill in the specified oil into the filler bore at (A) until the oil level has reached the lower edge of the filler bore.
- Screw the filler screw (A) back in.


### Oil change:



The oil should be changed when at operating temperature.



Ensure that no dirt or foreign bodies are able to enter the gear.

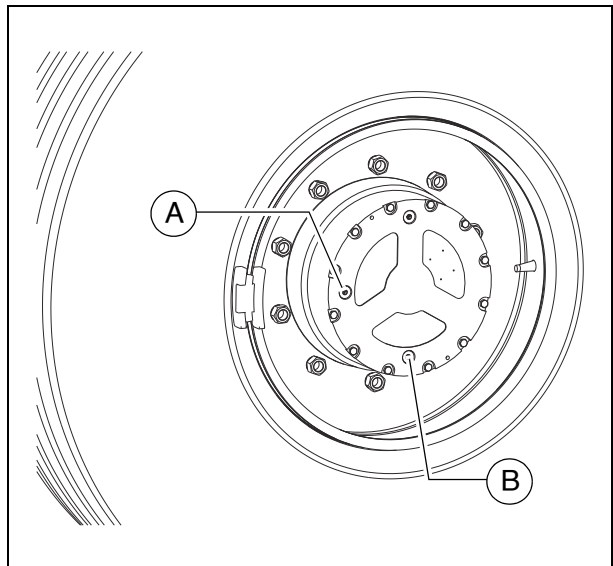

- Turn the rear wheel so that the drain plug (B) is located at the bottom.
- Unscrew and remove the drain plug (B) and filler screw (A) and drain off oil.
- Check gaskets on both screws and replace if necessary.
- Screw the drain plug (B) in.
- Fill new oil through the filler opening until the lower edge of the opening is reached.
- Tighten the filler screw (A).



## Drive wheels (2)

### Check tyres / replace tyres:

- Check the tyres on a daily basis for signs of damage, cracks or blister formation.  
Regularly check compliance with the minimum profile depth.



Replace damaged or worn tyres immediately.

## Replacing/dismantling and installing the wheels



The jack must be rated for at least 10t.



The jack is only intended to lift a load and not as a support. Work should only be performed to and under raised vehicles when they have been secured and correctly supported to prevent them tilting over and rolling or sliding away.



The jack must only be used on smooth, firm ground.




Roller-type jacks must not be moved when under load.



Chocks or supporting beams positioned so that they cannot be shifted or tilted must be adequately dimensioned and be able to take the corresponding weight.



There must not be anyone on the machine while it is being lifted.

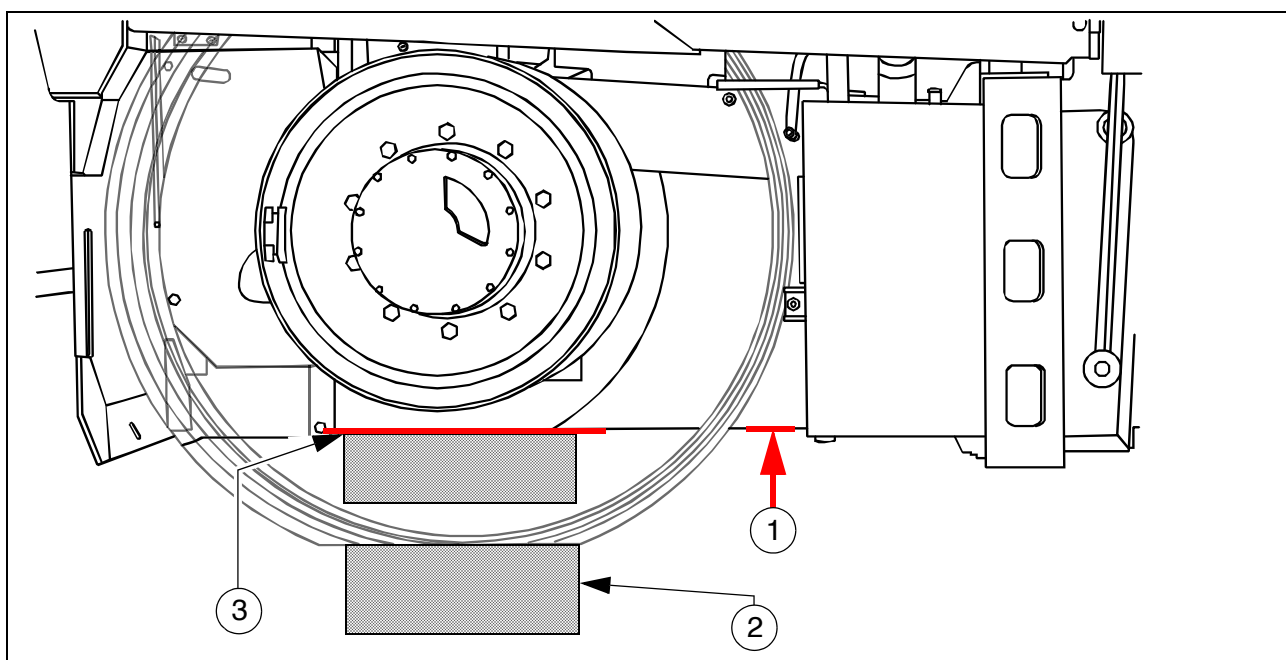

- Dismantle the arm.
- Lift the machine with the jack at the intended position (1) under the machine frame.
- Place the wooden block (2) under the wheel as a safeguard.
- Place another wooden block under the machine frame at point (3).
- Remove the wooden block (2) and gently lower the machine onto the remaining wooden block (3).
- Dismantle the wheel nuts and remove the wheel.



Reassemble in reverse order.

**Check air pressure / adjust air pressure:**



Never work with the tyre pressure too high or too low!



Please consult the following tables for the necessary air pressures.

Check the air pressure at valve (A), adjust if necessary.



Check the tyre pressure in cold condition. A slight increase in tyre pressure during operation is normal and there is no need to relieve pressure.




Only ever set the tyre pressure using a self-regulating filler connection. Never stand directly in front of the tyres when filling them with air!




Please comply with the safety instructions for checking and adjusting the air pressure!





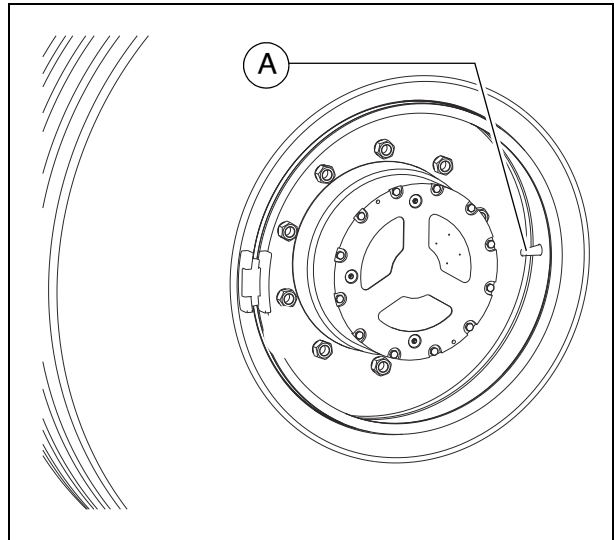






Bear in mind that tyres may be filled with water!




## Air pressure table







 Depending on the equipment, the corresponding table is also affixed to the machine as a label.

| B                                     |       |   |   |     | C  |   |   |     |  |
|--|-------|---|---|-----|---|---|---|-----|--|
| <br>4812039737<br><b>6,0 bar</b><br>A | V5100 |  |  | bar | V5100   |  |   | bar |  |
|  | min   | 3,0   | 4,5   |     | min   | 5,5   |   |     |  |
|  | max   |   |   |     | max   |   |   |     |  |
|  | V6000 |  |  | bar | V6000   |  |   | bar |  |
|  | min   | 3,0   | 4,5   |     | min   | 6,0   |   |     |  |
|  | max   |   | 7,0   |     | max   | 7,0   |   |     |  |
|  |       | D   | E   | F   |   | D   | E | F   |  |










- (A): Recommended air pressure
- (B): Max. / min. air pressure at operating speed
- (C): Max. / min. air pressure at transportation speed
- (D): Screed type
- (E): Max. air pressure for screed without extension parts
- (F): Max. air pressure for screed with extension parts
- (G): Max. air pressure

 Ascertain the tyre type before adjusting the pressure!

### Pressures for equipment Bandag on Michelin XHA

|                                 |       |   |   |     |  |   |  |     |  |
|---|-------|---|---|-----|---|---|--|-----|--|
| <br>4812039738<br><b>4,5 bar</b> | V5100 |  |  | bar | V5100   |  |  | bar |  |
|   | min   | 4,0   | 4,5   |     | min   | 4,0   |  |     |  |
|   | max   |   | 4,5   |     | max   | 4,5   |  |     |  |

### Pressures for equipment Michelin XGC / Techking ETGC

|                                 |       |   |   |     |  |   |  |     |  |
|---|-------|---|---|-----|---|---|--|-----|--|
| <br>4812039737<br><b>6,0 bar</b> | V5100 |  |  | bar | V5100   |  |  | bar |  |
|   | min   | 3,0   | 4,5   |     | min   | 5,5   |  |     |  |
|   | max   |   |   |     | max   |   |  |     |  |
|   | V6000 |  |  | bar | V6000   |  |  | bar |  |
|   | min   | 3,0   | 4,5   |     | min   | 6,0   |  |     |  |
|   | max   |   | 7,0   |     | max   | 7,0   |  |     |  |

**Check wheel nuts / tighten wheel nuts:**




Following wheel replacement, check the wheel nuts after the running-in time.

- Check / tighten all wheel nuts using a torque wrench as shown.



Adjust the torque to 510Nm.

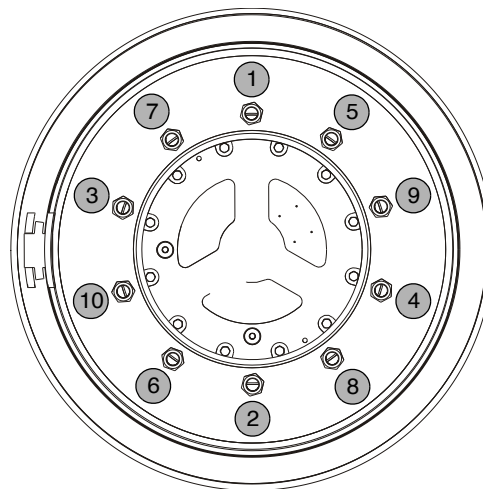

### Lubrication points (3)



Manual lubrication does not apply for vehicles with central lubrication system.



### King pins



Each of the four king pins is equipped with one lubricating nipple (A).

### Steering



The lubricating nipples (B) are on the rear axle of the main frame and supply the steering linkage with grease via a lubrication line.

### Floating axle




The lubricating nipples (C) are located on the left and right of the floating axle's centre bearing.

### Wheel bearings (○)




Each of the wheels is equipped with a lubricating nipple (D) on the wheel hub. In the case of front-wheel drive, the drive wheels have no lubricating nipples.

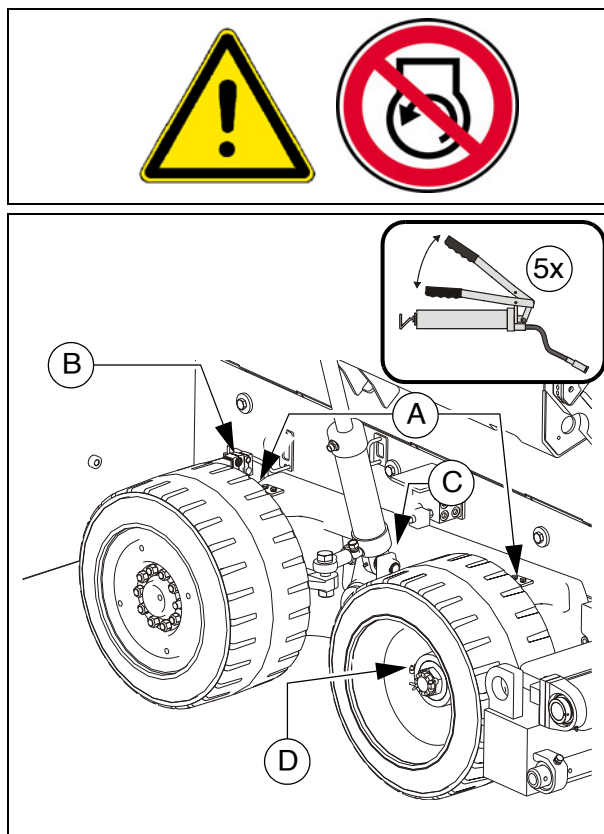

# F 82 Maintenance - electrical system

## 1 Maintenance - electrical system

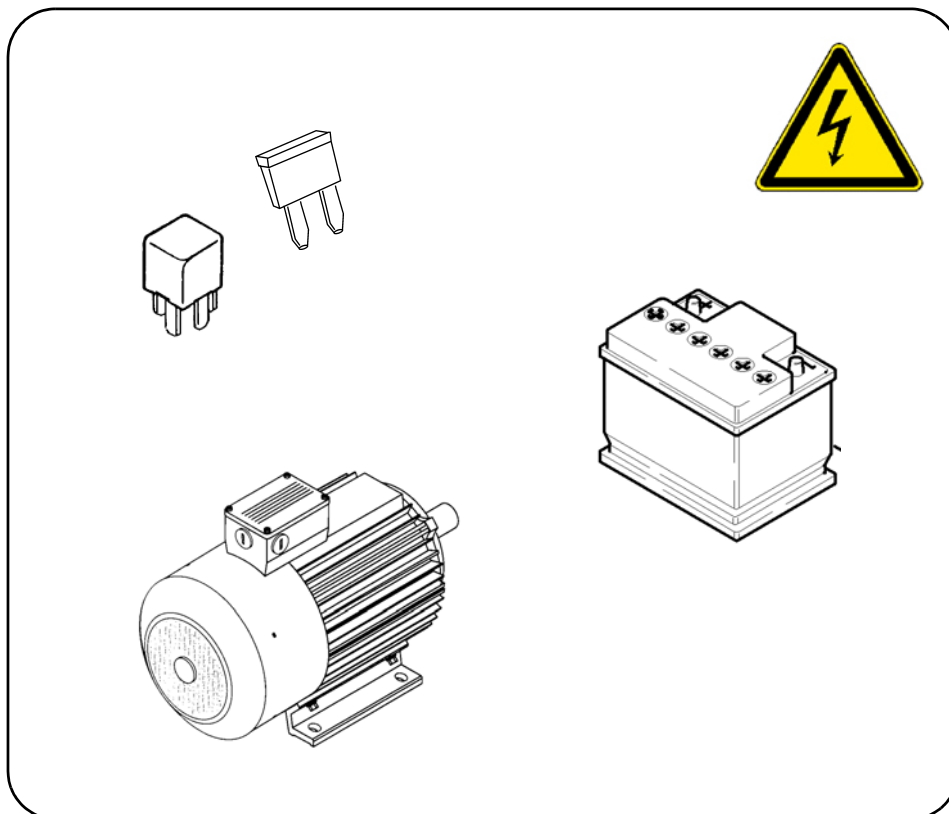

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      | Maintenance point                            | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years |  |      |
| 1    |          |    | ■   |     |     |                 |                      | Filling level of battery electrolyte - check |      |
|      |          |    |     |     |     |                 | ■                    | Top up with distilled water                  |      |
|      |          |    |     | ■   |     |                 |                      | Apply grease to battery terminals            |      |
| 2    |          |    |     |     |     |                 | ■                    | Electric Fuses                               |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |



## 1.2 Points of maintenance

### Batteries (1)

#### Maintenance of batteries



The batteries are factory-filled with the correct quantity of acid. The fluid level should come up to the top mark. If required, top up the battery, but only use distilled water to do so!




The battery terminal clips must be free of oxide and protected with a special terminal grease.



When removing the batteries, always first remove the negative terminal, ensuring that the battery terminals cannot be short circuited.



## Electrical fuses / relays (3)

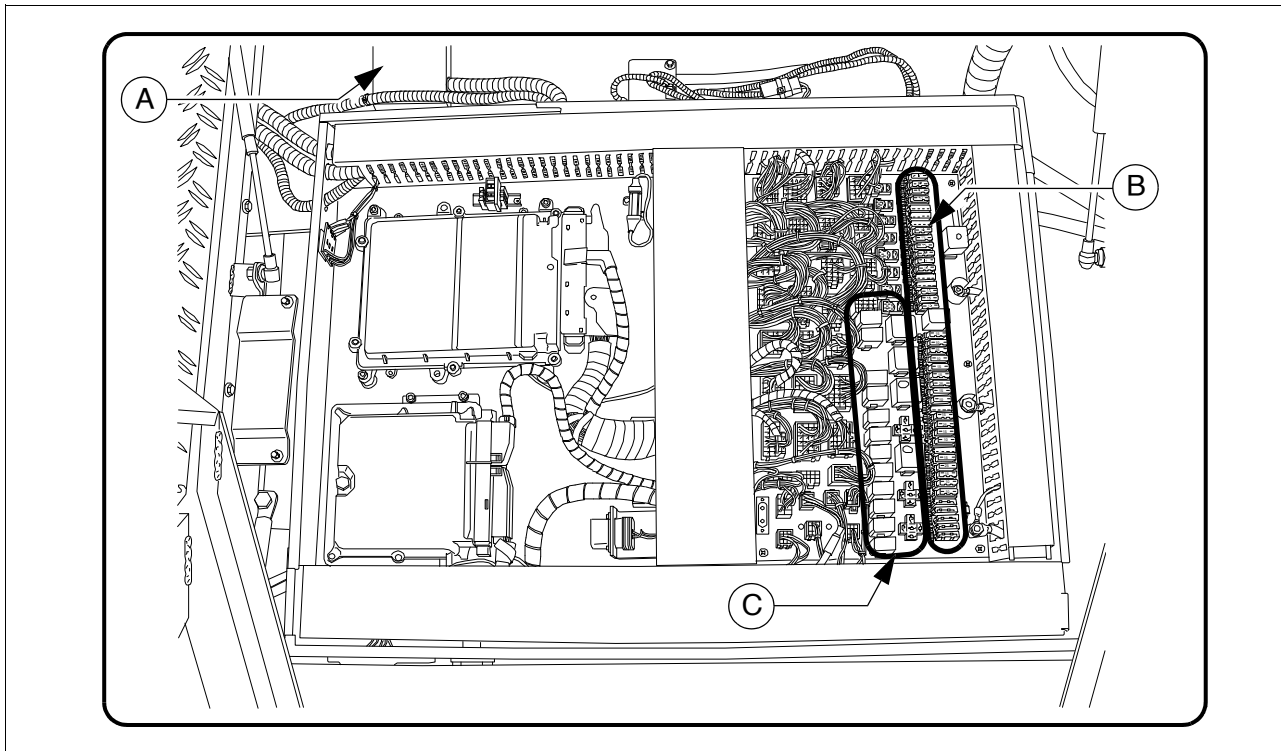


|   |                        |
|---|------------------------|
| A | Main fuses             |
| B | Fuses in terminal box  |
| C | Relays in terminal box |

## Main fuses (A)


| F    |           | A  |
|------|-----------|----|
| F1.1 | Main fuse | 50 |
| F1.2 | Main fuse | 50 |

## Fuses in terminal box (B)

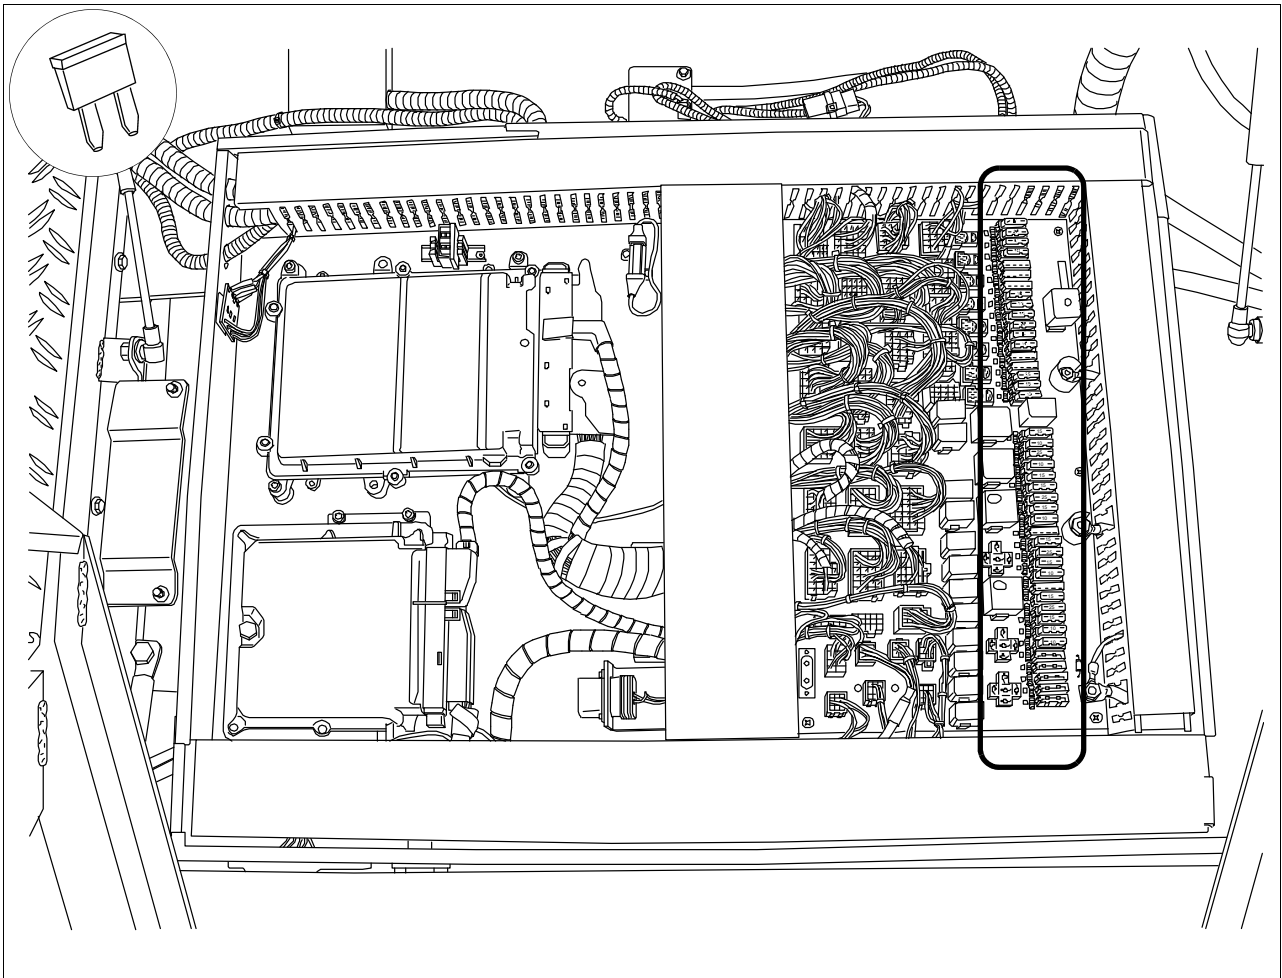


| F   |                                      | A   |
|-----|--------------------------------------|-----|
| F1  | Screed                               | 10  |
| F2  | Screed                               | 10  |
| F3  | Hopper                               | 10  |
| F4  | Engine start                         | 5   |
| F5  | Tamper (○) / vibration               | 7,5 |
| F6  | Screed on / off                      | 10  |
| F7  | not used                             |     |
| F8  | Indicator lamps                      | 5   |
| F9  | Emulsion spraying system (○)         | 5   |
| F10 | Travel drive sensors                 | 7,5 |
| F11 | Screed                               | 10  |
| F12 | Conveyor sensors                     | 7,5 |
| F13 | 12V sockets (○)                      | 10  |
| F14 | Levelling                            | 10  |
| F15 | not used                             |     |
| F16 | 24V sockets                          | 10  |
| F17 | Auger                                | 5   |
| F18 | Auger                                | 5   |
| F19 | not used                             |     |
| F20 | Rotary beacon (○)                    | 7,5 |
| F21 | Travel drive computer voltage supply | 25  |
| F22 | not used                             |     |
| F23 | Horn                                 | 10  |
| F24 | Engine start                         | 10  |
| F25 | not used                             |     |
| F26 | Engine control unit power supply     | 30  |
| F27 | Travel drive computer indicator lamp | 2   |
| F28 | not used                             |     |
| F29 | Ignition                             | 3   |
| F30 | Reverse buzzer (○)                   | 5   |
| F31 | not used                             |     |
| F32 | Travel drive computer outputs        | 20  |
| F33 | not used                             |     |
| F34 | not used                             |     |
| F35 | Rear working lights                  | 10  |
| F36 | Front working lights                 | 10  |
| F37 | Engine interface                     | 2   |
| F38 | Diagnostic interface                 | 2   |

### Relays in terminal box (C)

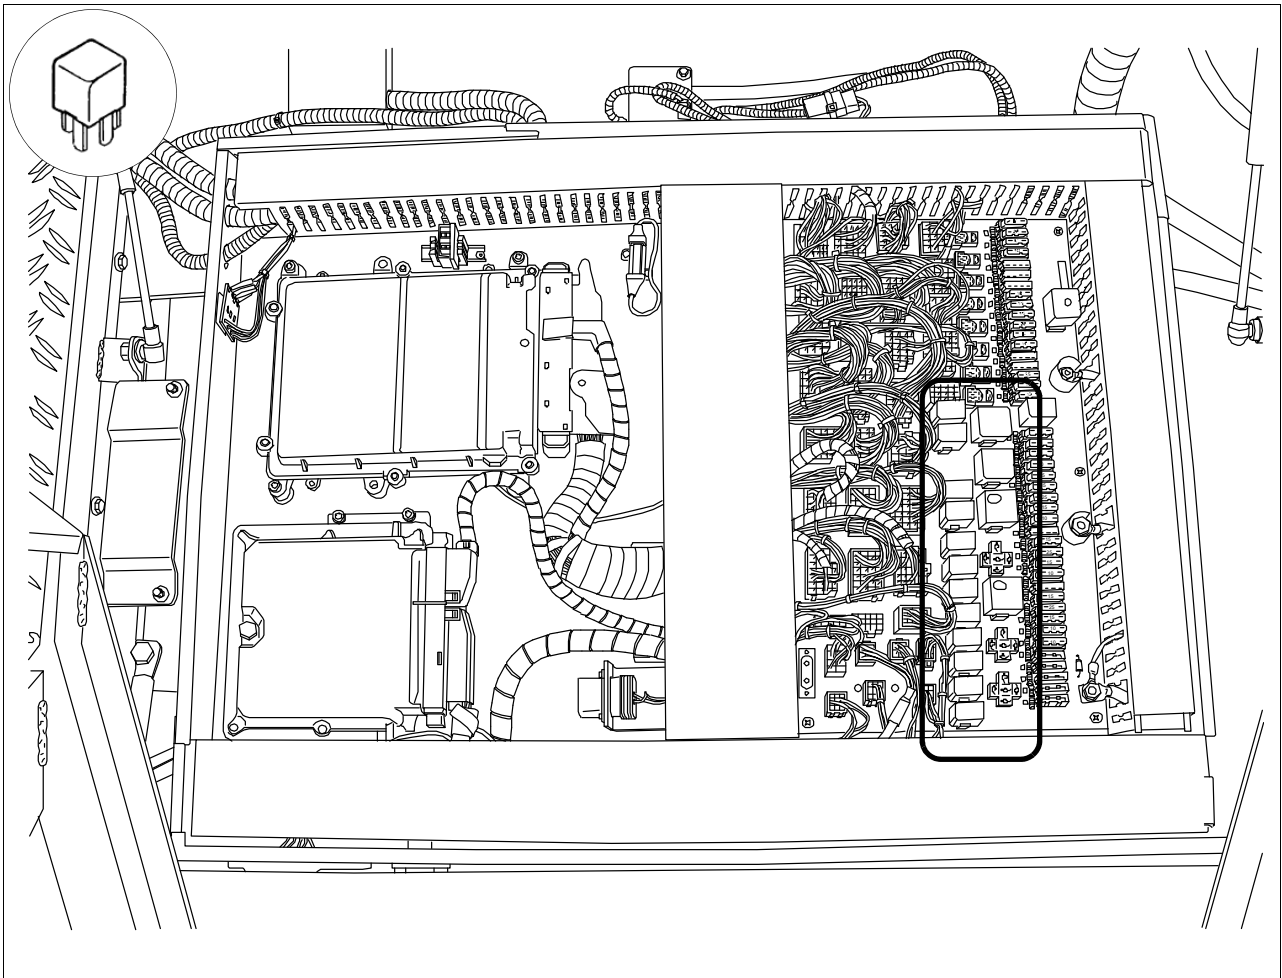


|    |                                      |
|----|--------------------------------------|
| K  |                                      |
| 1  | Ignition                             |
| 2  | Travel drive computer voltage supply |
| 3  | not used                             |
| 4  | Engine start                         |
| 5  | Travel drive computer outputs        |
| 6  | Auger                                |
| 7  | Front working lights                 |
| 8  | Rear working lights                  |
| 9  | Horn                                 |
| 10 | Start inhibit, emergency stop        |
| 11 | Start inhibit                        |
| 12 | Rotary beacon (○)                    |
| 13 | not used                             |
| 14 | not used                             |
| 15 | not used                             |
| 16 | Reverse buzzer (○)                   |
| 17 | not used                             |
| 18 | not used                             |
| 19 | not used                             |
| 20 | not used                             |
| 21 | not used                             |
| 22 | Vibration auto                       |
| 23 | Tamper auto                          |
| 24 | Conveyor auto                        |
| 25 | Conveyor auto                        |
| 26 | Auger auto                           |
| 27 | Auger auto                           |
| 28 | Levelling                            |

## Relays in operating panel (D)

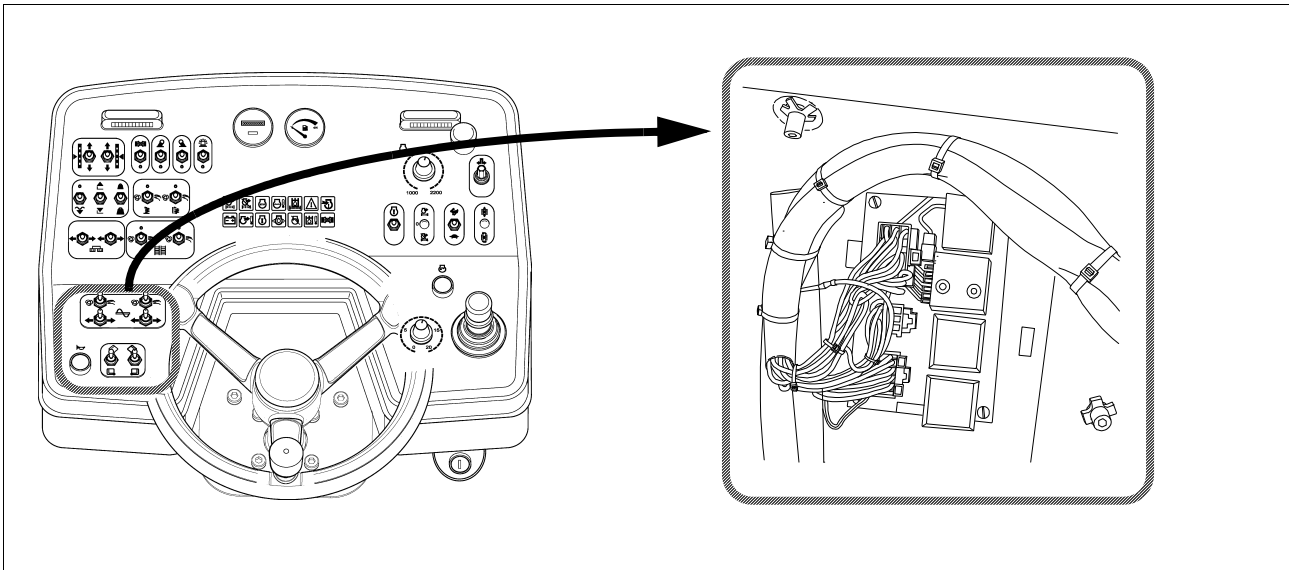

| K  |  |
|----|--|
| 1  | Floating position                            |
| 2  | Screed start (auto)                          |
| 3  | Screed hazard warning flashers, left-hand    |
| 4  | Screed hazard warning flashers, right-hand   |
| 30 | Latch for extending/retracting screed, left  |
| 31 | Latch for extending/retracting screed, right |

## Relays in the engine compartment (E)

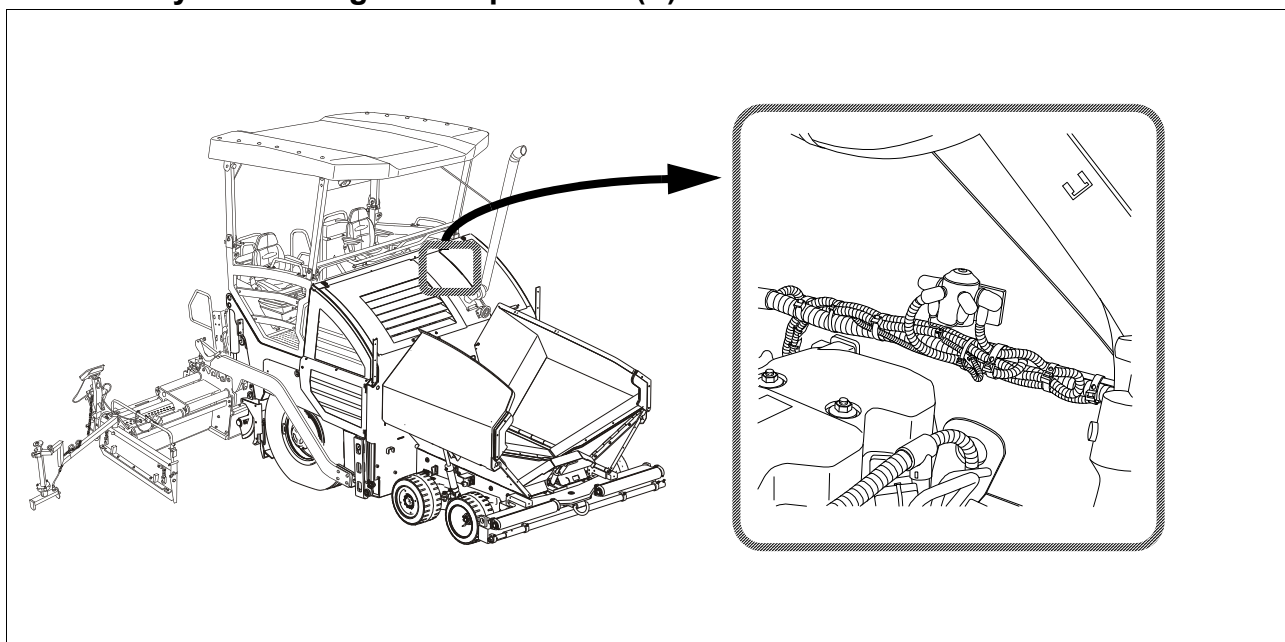


|   |              |
|---|--------------|
| K |              |
| 0 | Engine start |




# F 90 Maintenance - lubricating points

## 1 Maintenance - lubricating points

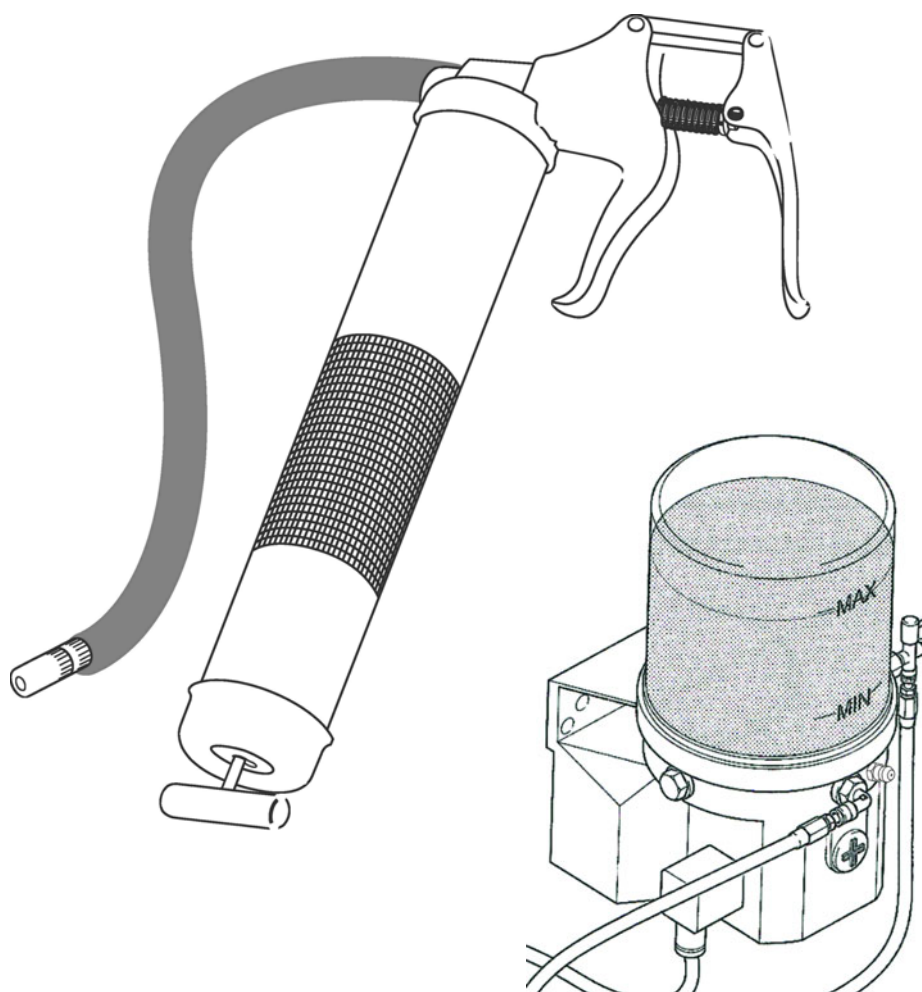

The information on the lubricating points for the various assemblies is assigned to the specific maintenance descriptions and must be read there!

 Due to the use of a central lubrication system (○), the number of lubricating points may deviate from the description.

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      | Maintenance point                         | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|---|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years |   |      |
| 1    | ■        |    |     |     |     |                 |                      | - Check lubricant tank fill level         | (○)  |
|      |          |    |     |     |     |                 | ■                    | - Top up lubricant tank                   | (○)  |
|      |          |    |     |     |     |                 | ■                    | - Bleed central lubrication system        | (○)  |
|      | ■        |    |     |     |     |                 |                      | - Check pressure limiting valve           | (○)  |
|      |          |    |     |     |     |                 | ■                    | - Check flow of lubricant at the consumer | (○)  |
| 2    |          | ■  |     |     |     |                 |                      | - Bearing points                          |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## 1.2 Points of maintenance

### Central lubrication system (1)

#### Danger of injuries!



Do not reach into the tank when the pump is running!



The central lubrication system must only be operated with the safety valve installed!



Do not undertake any work on the pressure relief valve during operation!



Risk of injury due to escaping lubricant, as the system operates at high pressures!




Ensure that the diesel engine cannot be started when working on the system!



Observe safety regulations for handling hydraulic systems!




Ensure maximum cleanliness when working on the central lubrication system!

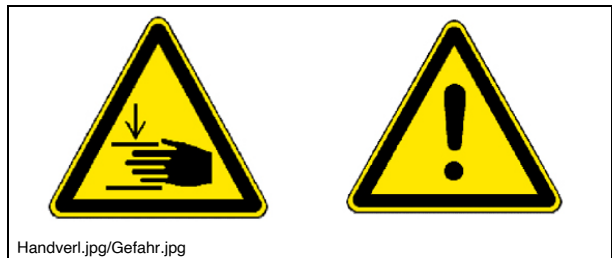

The following assemblies' lubricating points can be automatically supplied with grease by the central lubrication system:

- Conveyor
- Auger
- Steering, axles (wheeled pavers)
- Screed (tamper / vibration)

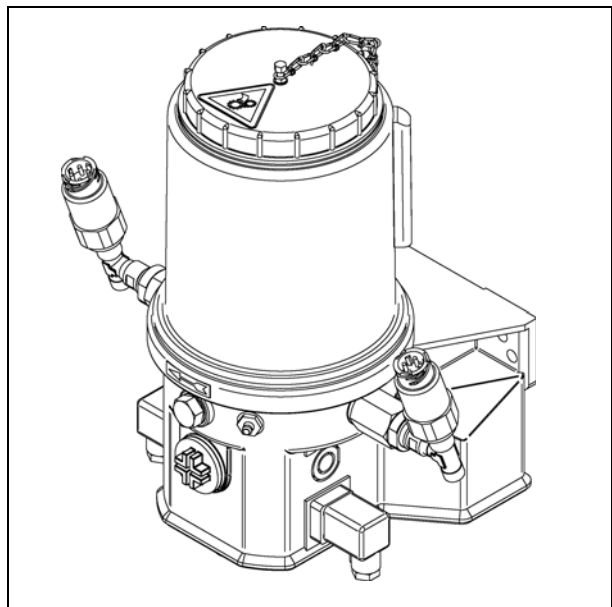


## Central lubrication system Check filling level




The lubricant tank should always be filled sufficiently to ensure that the system does not "run dry", that adequate lubricating point supply is ensured and that time-consuming bleeding does not become necessary.

- Always maintain a fill level above the "MIN" mark (a) on the tank.

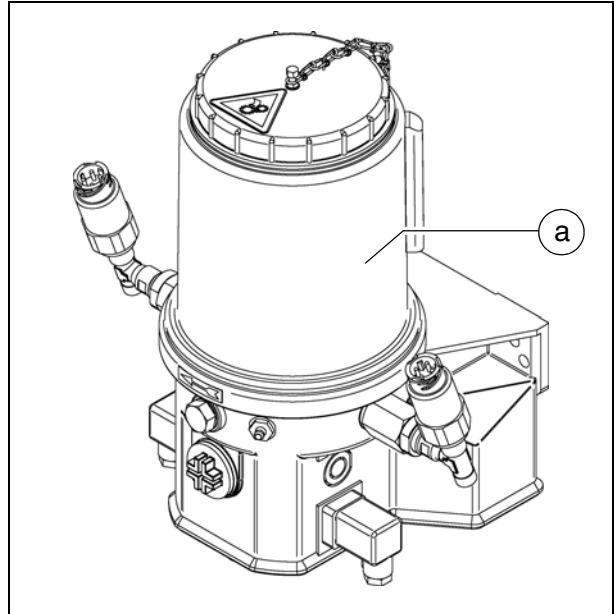

## Top up lubricant tank

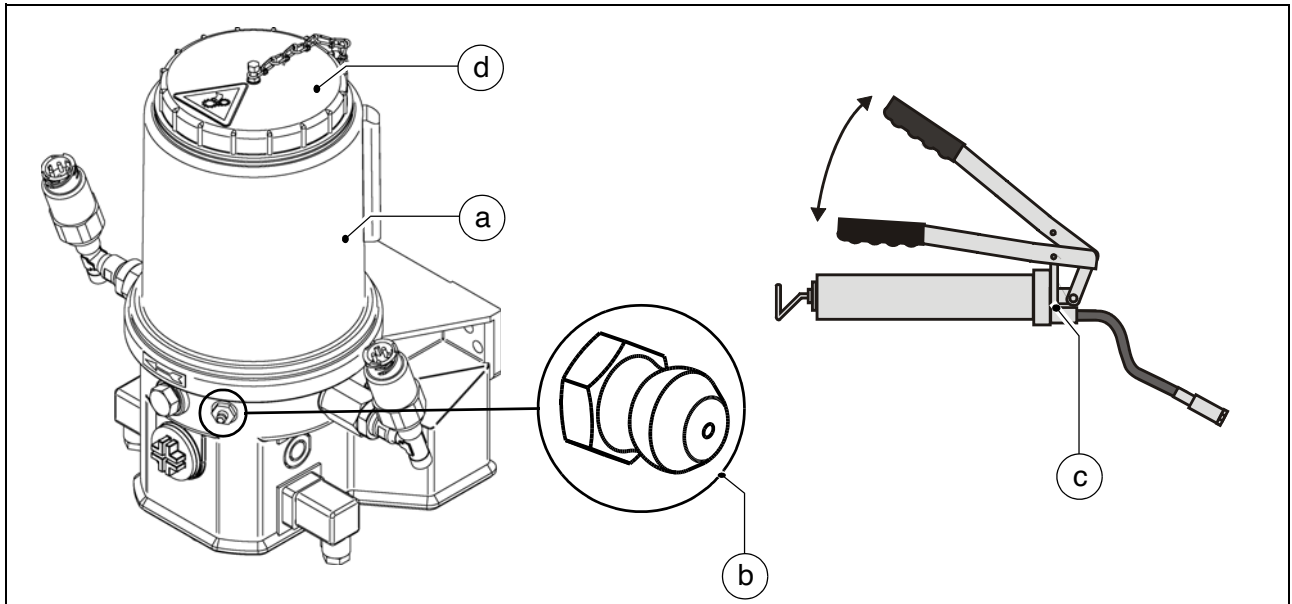

- A lubricating nipple (b) is located on the lubricant tank (a) for filling purposes.
- Connect the grease gun (c) enclosed on delivery to the filling nipple (b) and fill the lubricant tank (a) up to the MAX mark.
- Alternatively, unscrew cover (d) and fill tank from above.




When the lubricant tank is completely empty, the pump may have to run for up to 10 minutes until the full delivery rate is achieved after filling.

## Bleed central lubrication system

Bleeding the lubrication system is necessary if the central lubrication system has been operated with an empty lubricant tank.

- Release the main lubrication line (a) at the distributor (b).
- Start up the central lubrication system with the filled lubricant tank (c).
- Allow the pump to run until lubricant emerges from the previously released main line (a).
- Reconnect the main line (a) to the distributor.
- Release all distribution lines (d) from the distributor.
- Reconnect all distribution lines as soon as lubricant has emerged.
- Check all connections and lines for leaks.

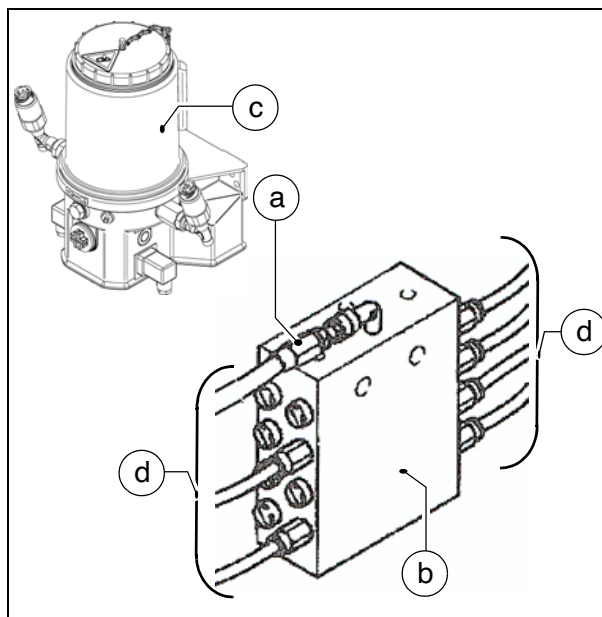


## Check pressure limiting valve



If lubricant emerges at the pressure limiting valve (a), this indicates a malfunction in the system.

The consumers are no longer adequately supplied with lubricant.


- Release all distribution lines (b) leading from the distributor (c) to the consumers in succession.
- If lubricant emerges from one of the released distribution lines (b) under pressure, search in this lubrication circuit for the cause of the blockage which has triggered the pressure limiting valve.
- After rectifying the malfunction and reconnecting all lines, again check the pressure limiting valve (a) for lubricant emergence.
- Check all connections and lines for leaks.

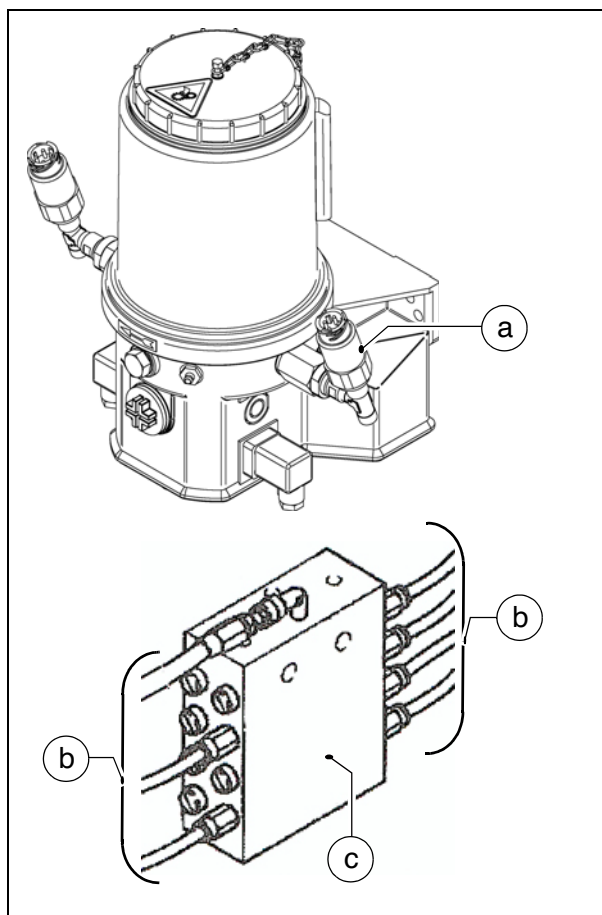

### Check the flow of lubricant at the consumers

Each lubrication channel at the consumers must be checked as regards clearance.



- Remove the lubrication line (a) and install a normal lubricating nipple (b).
- Connect the grease gun (c) enclosed on delivery to the lubricating nipple (b).
- Operate the grease gun until the lubricant visibly emerges.
- Rectify any faults in the flow of lubricant.
- Reinstall the lubrication lines.
- Check all connections and lines for leaks.

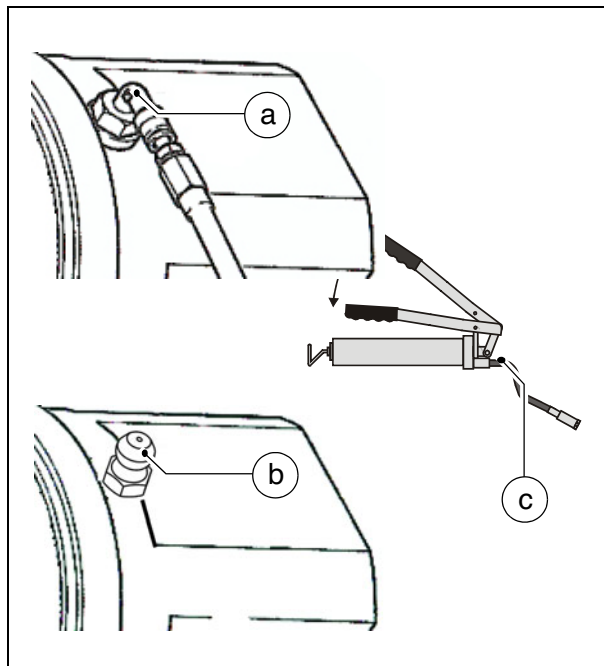



## Bearing points (2)



One lubricating nipple (A) is located at each hydraulic cylinder bearing point (top and bottom).

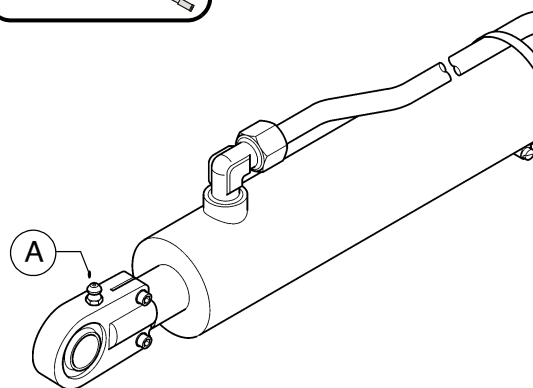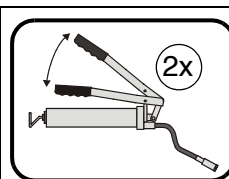

One lubricating nipple (B) is located at each push roller bearing point.

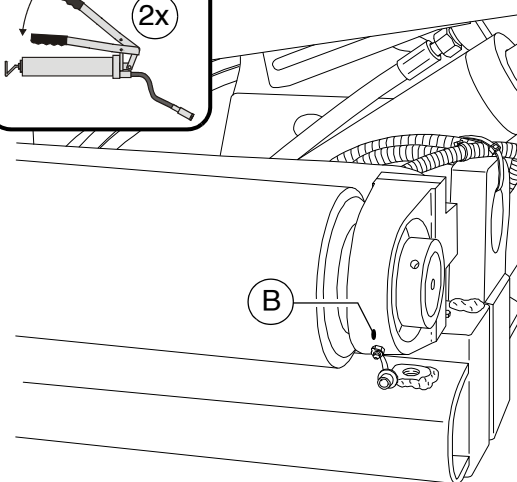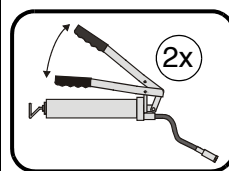






# F 100 Tests, stopping ...

## 1 Tests, checks, cleaning, stopping

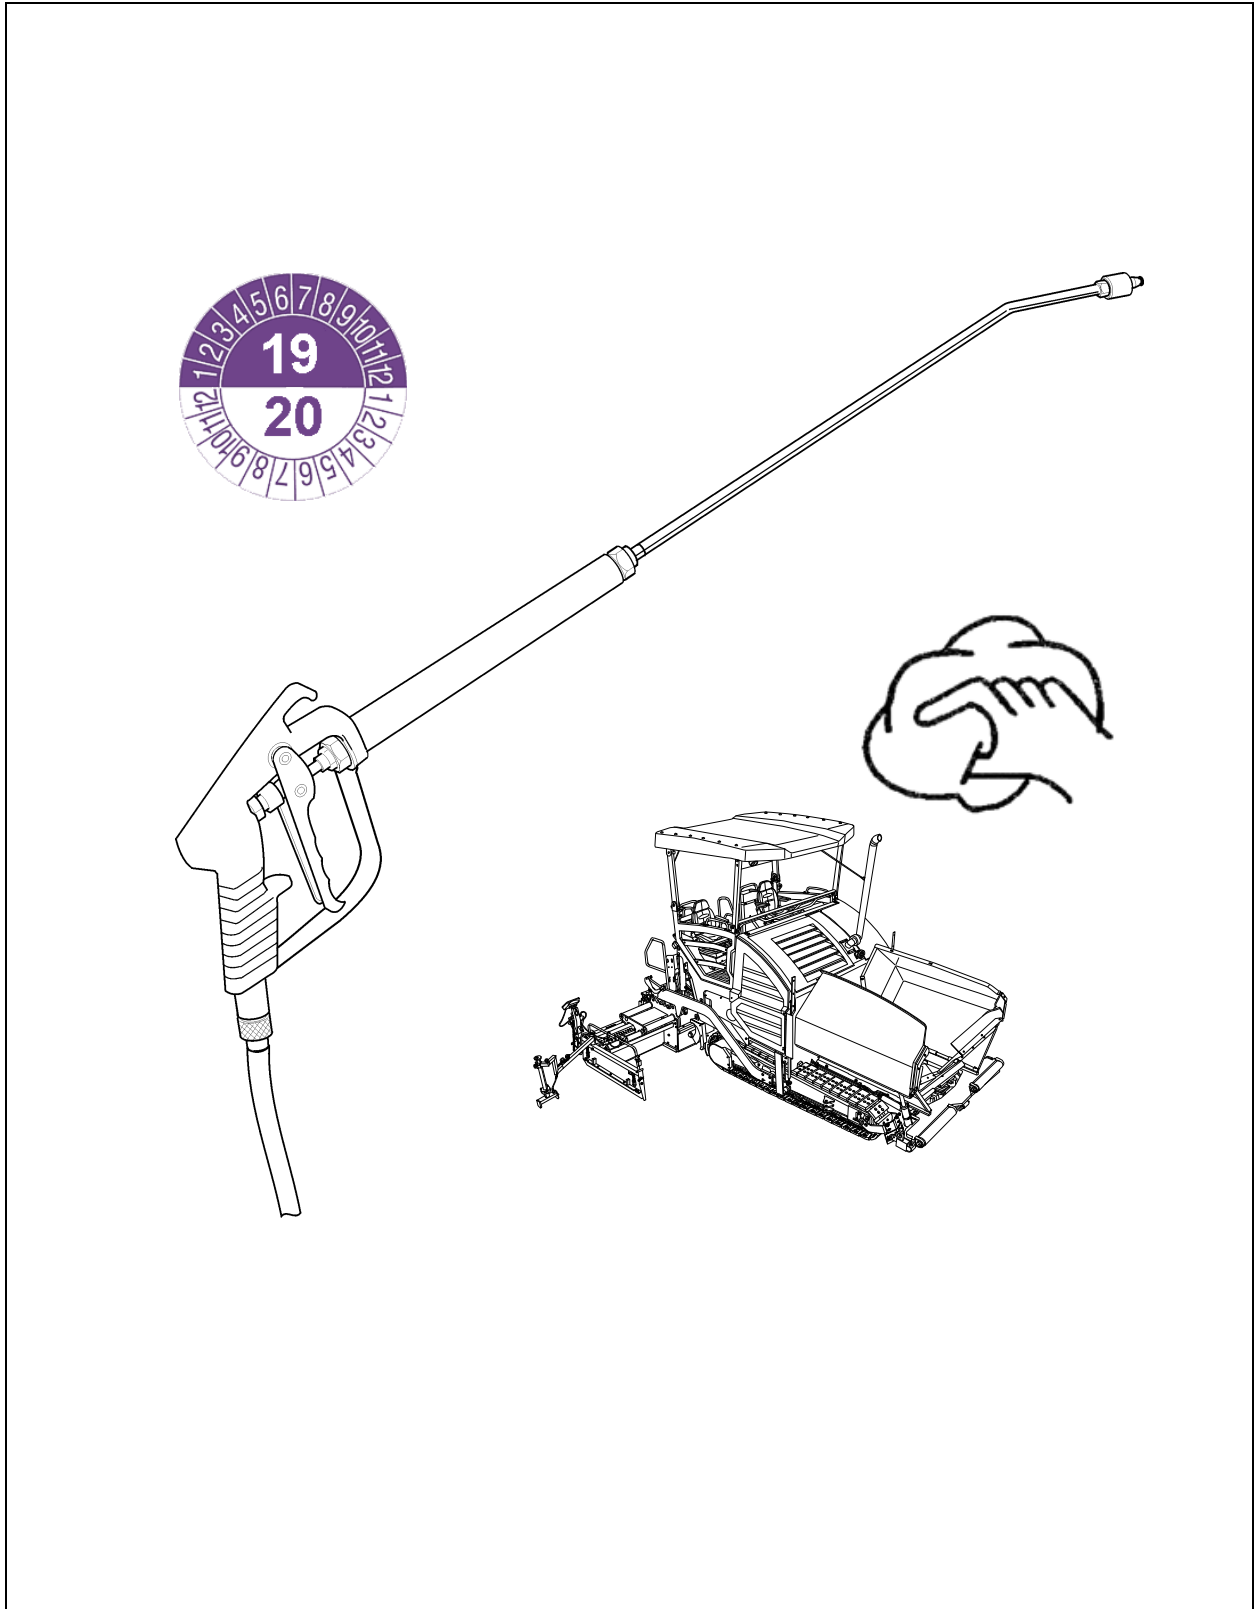

## 1.1 Maintenance intervals

| Item | Interval |    |     |     |     |                 |                      |              | Maintenance point               | Note |
|------|----------|----|-----|-----|-----|-----------------|----------------------|--------------|---------------------------------|------|
|      | 10       | 50 | 100 | 250 | 500 | 1000 / annually | 2000 / every 2 years | If necessary |                                 |      |
| 1    | ■        |    |     |     |     |                 |                      |              | - General visual inspection     |      |
| 2    |          |    |     |     |     | ■               |                      | ■            | - Inspection by an expert       |      |
| 3    |          |    |     |     |     |                 |                      | ■            | - Cleaning                      |      |
| 4    |          |    |     |     |     |                 |                      | ■            | - Preserving the paver finisher |      |

|  |   |
|--|---|
| Maintenance                              | ■ |
| Maintenance during the running-in period | ▼ |

## **2 General visual inspection**

The daily routine should comprise a visual inspection around the entire paver finisher. The following items must be checked:

- Are components or controls damaged?
- Are there leaks on the engine, the hydraulics, the gearbox, etc.?
- Are all fastening points (conveyor, auger, screed, etc.) in order?



Immediately take actions to correct any detected malfunction to avoid damages, dangers or environmental hazards!

## **3 Inspection by an expert**



Have finisher, screed and optional gas or electric system checked by a trained specialist

- when required (according to the operating conditions and the nature of application),
- however, at least once a year, check that they are all in good operational condition.

## 4 Cleaning

- Clean all parts coming into contact with paving material.
- Spray contaminated parts with the separator fluid spraying system (○).



**Before** cleaning work with the high pressure cleaner, grease all lube points acc. to specification.

- Clean the vehicle with water after laying mineral aggregates, lean-mixed concrete, etc.



Do not spray bearing points, electrical or electronic components with water.

- Remove residual paving material.



**After** cleaning work with the high pressure cleaner, grease all lube points acc. to specification.



Danger of slipping! Ensure that all steps and ladders are free of grease and oil!



#### 4.1 Cleaning the hopper



Clean the hopper regularly

To clean the hopper, park the vehicle on a smooth surface with the hopper open. Switch off the engine.



##### **Risk from hot surfaces!**



Hot surfaces and vehicle parts can cause severe injuries!

- Wear your personal safety gear.
- Do not touch hot parts of the vehicle.
- Consult a doctor immediately if injured.



Comply with further instructions in the safety manual!

#### 4.2 Cleaning the conveyor and auger



Clean the conveyor and auger regularly.

If necessary, let the conveyor and auger run at low speed during cleaning.



##### **Danger of being pulled in by rotating or conveying vehicle parts!**



Rotating or conveying vehicle parts can cause severe or fatal injuries!

- Do not enter the danger zone.
- Do not reach into rotating or conveying parts.
- Only wear close-fitting clothing.
- Comply with the warning and information signs on the vehicle.



Comply with further instructions in the safety manual.

## **5 Preserving the paver finisher**

### **5.1 Shutdowns for up to 6 months**

- Park the vehicle in a place where it is protected from great exposure to direct sunlight, wind, humidity and frost.
- Grease all lube points in accordance with specifications. Allow optional central lubricating unit to run if necessary.
- Change oil in diesel engine.
- Seal exhaust silencer to make it airtight.
- Remove batteries, charge them and store them in a well ventilated place at room temperature.



Recharge removed batteries every 2 months.

- Protect all bare metal components, e.g. piston rods on hydraulic cylinders, with a suitable corrosion inhibitor.
- If it is not possible to park the vehicle in an enclosed building or under cover, it must be covered with a suitable size of tarpaulin. In all cases, seal all air intake and exhaust apertures with plastic film and adhesive tape.

### **5.2 Shutdowns lasting from 6 months to 1 year**



- Carry out all the actions listed for "Shutdowns of up to 6 months".
- Once the engine oil has been drained off, fill the diesel engine with a manufacturer-approved grade of preserving oil.

### **5.3 Recommissioning the machine**




- Reverse all the steps described in the "Shutdown" sections.

## **6 Environmental protection, disposal**

### **6.1 Environmental protection**

-  Packaging materials, used operating substances, cleaning agents and machine accessories must be correctly recycled.
-  Always observe the local regulations!

### **6.2 Disposal**

-  Correctly sorted disposal must be carried out after replacing wear and spare parts and after the machine has been withdrawn from service (scrapped).  
The materials must be sorted correctly according to metal, plastic, electronic scrap, various operating substances etc.  
Any oily or greasy parts (hydraulic hoses, lube pipes etc.) must be treated separately.
-  Electric devices, accessories and packaging should be recycled in an environment-friendly manner.
-  Always observe the local regulations!





# F 111 Lubricants and operating substances

## 1 Lubricants and operating substances



Use only the lubricants listed below or comparable qualities of well-known brands.



Only use containers which are clean on inside and outside for filling oil or fuel.



Note capacities (see section "Capacities").



Incorrect oil or lubricant levels promote rapid wear and paver finisher failure.






Never mix synthetic oils with mineral oils!

## 2 Optional assemblies



Two different auger systems are available as options:  
Check which auger type is used in your machine and comply with the corresponding installation, operation and maintenance instructions!
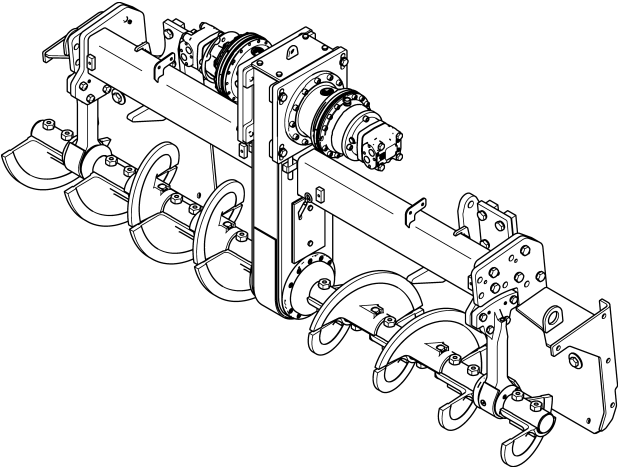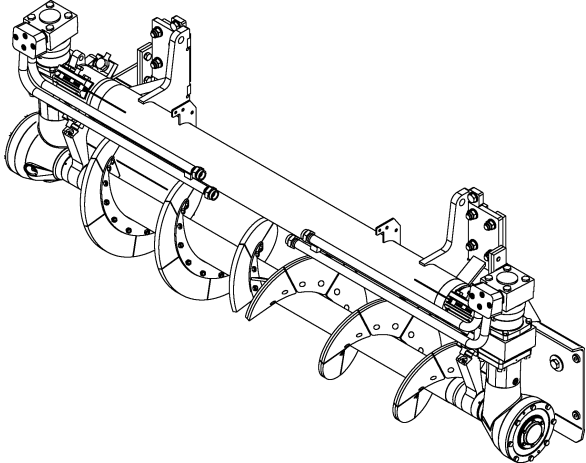
|   |  |
|---|--|
| <p>- Auger<br/><b>-Type A-</b><br/>Central drive</p>  |   |
| <p>- Auger<br/><b>-Type B-</b><br/>External drive</p> |  |

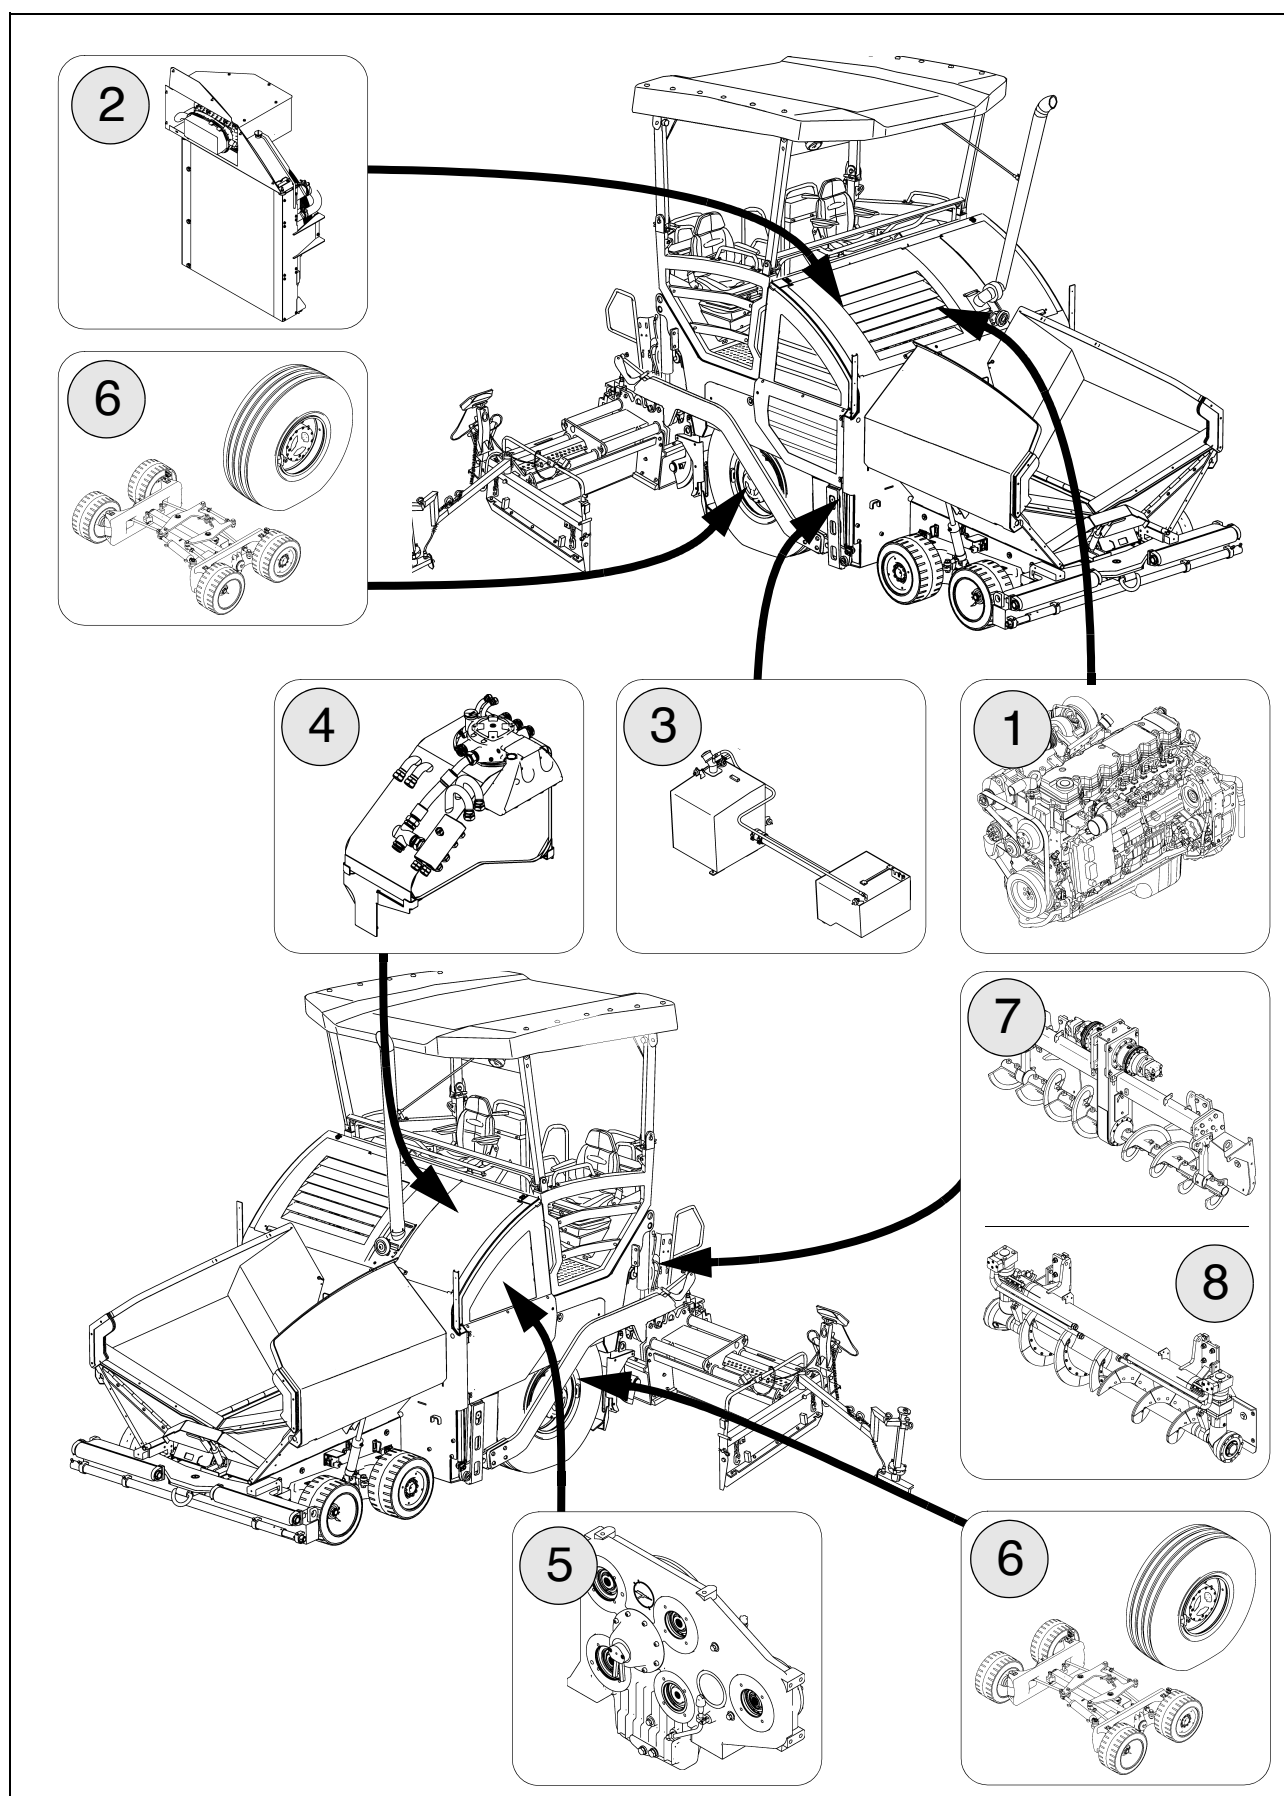

## 2.1 Capacities

|   |   | Substance          | Volume      |
|---|---|--------------------|-------------|
| 1 | Diesel engine<br>(with oil filter change)                 | Engine oil         | 15 litres   |
| 2 | Engine cooling system                                     | Cooling liquid     | 25.0 litres |
| 3 | Fuel tank   | Diesel fuel        | 315 litres  |
| 4 | Hydraulic oil reservoir                                   | Hydraulic oil      | 220 litres  |
| 5 | Pump distribution gear                                    | Gearbox oil        | 7.0 litres  |
| 6 | Planetary gear<br>Travel drive                            | Gearbox oil        | 2.5 litres  |
| 7 | Planetary gear<br>augers (on each side)<br>- Auger Type A | Gearbox oil        | 1.5 litres  |
| 7 | Auger box<br>- Auger Type A                               | Gearbox oil        | 4.0 litres  |
| 7 | Outer auger bearing<br>(per bearing)**<br>- Auger Type A  | Hot bearing grease | 115 grams   |
| 8 | Auger bevel gear<br>(on each side)<br>- Auger Type B      | Gearbox oil        | 0,6 litres  |
|   | Central lubrication system<br>(option)                    | Grease             |             |
|   | Batteries   | Distilled water    |             |



Note specifications on the following pages!

\*\* for new installation

### 3 Lubricant specifications


#### 3.1 Engine

| Atlas Copco        | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell               |  |
|--------------------|------|----|--------------|-------|-------|---------------------|--|
| Engine Oil 100 (*) |      |    |              |       |       | -Rimula R6LM 10W-40 |  |

 (\*) = recommended


#### 3.2 Cooling system

| Dynapac         | AGIP                | Chevron               | Caltex                | Delo                  | Mobil | Shell |  |
|-----------------|---------------------|-----------------------|-----------------------|-----------------------|-------|-------|--|
| Coolant 200 (*) | -Antifreeze Spezial | Extended Life Coolant | Extended Life Coolant | Extended Life Coolant |       |       |  |

 (\*) = recommended


#### 3.3 Hydraulic system

| Atlas Copco       | AGIP | Chevron      | Caltex       | Fuchs | Mobil | Shell              |  |
|-------------------|------|--------------|--------------|-------|-------|--------------------|--|
| Hydraulic 100 (*) |      | Rando HDZ 46 | Rando HDZ 46 |       |       | -Tellus Oil S2 V46 |  |

 (\*) = recommended

#### 3.4 Pump distribution gear

| Dynapac | Aral | BP | Esso / Exxon | Fuchs                  | Mobil | Shell                                   |  |
|---------|------|----|--------------|------------------------|-------|---|--|
|         |      |    |              | -Titan ATF 6000 SL (*) |       | -Spirax S4 ATF HDX<br>-Spirax S4 ATF VM |  |

 (\*) = filled in at the factory

### 3.5 Travel drive planetary gear

| Atlas Copco           | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell            |  |
|-----------------------|------|----|--------------|-------|-------|------------------|--|
| Traction Gear 100 (*) |      |    |              |       |       | -Omala Oil F 220 |  |

 (\*) = recommended

### 3.6 Auger drive planetary gear type A

| Atlas Copco           | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell            |  |
|-----------------------|------|----|--------------|-------|-------|------------------|--|
| Traction Gear 100 (*) |      |    |              |       |       | -Omala Oil F 220 |  |

 (\*) = recommended

### 3.7 Auger box type A

| Dynapac | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell              |  |
|---------|------|----|--------------|-------|-------|--------------------|--|
|         |      |    |              |       |       | -Omala S4WE460 (*) |  |

 (\*) = recommended

### 3.8 Auger bevel gear type B

| Dynapac          | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell               |  |
|------------------|------|----|--------------|-------|-------|---------------------|--|
| Gear Oil 300 (*) |      |    |              |       |       | -Spirax S2 G 80W-90 |  |

 (\*) = recommended

### 3.9 Grease

| Dynapac          | Aral | BP | Esso / Exxon | Fuchs | Mobil | Shell              | Chevron             |
|------------------|------|----|--------------|-------|-------|--------------------|---------------------|
| Paver Grease (*) |      |    |              |       |       | -Gadus S5 T460 1.5 | -High Temp Premium2 |

 (\*) = recommended

### 3.10 Hydraulic oil

Preferred hydraulic oils:

a) Synthetic hydraulic liquids based on ester, HEES

| Manufacturer | ISO viscosity class VG 46 |
|--------------|---------------------------|
| Atlas Copco  | Hydraulic 120 (*)         |
| Shell        | Naturelle HF-E46          |
| Panolin      | HLP SYNTH 46              |
| Esso         | Univis HEES 46            |
| Total        | Total Biohydran SE 46     |
| Aral         | Vitam EHF 46              |



(\*) = recommended

b) Mineral oil pressure fluids

| Manufacturer | ISO viscosity class VG 46 |
|--------------|---------------------------|
| Atlas Copco  | Hydraulic 100 (*)         |
| Shell        | Tellus S2 V46             |
| Chevron      | Rando HDZ 46              |
| Caltex       | Rando HDZ 46              |



(\*) = recommended



When changing from mineral oil pressure fluids to biodegradable pressure fluids, please contact our factory advisory service!







## TRAINING/ INSTRUCTIONS

We offer our customers training courses on DYNAPAC equipment in our dedicated factory training centre.

We hold regular training courses in this training centre as well as courses outside the scheduled hours.

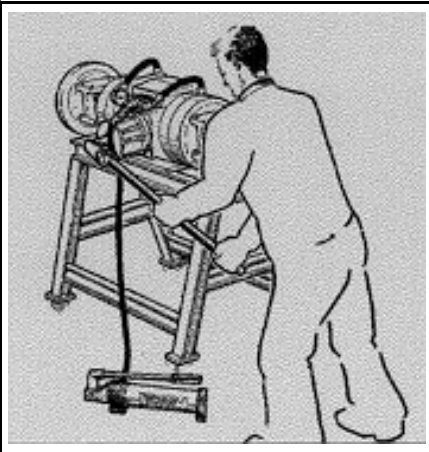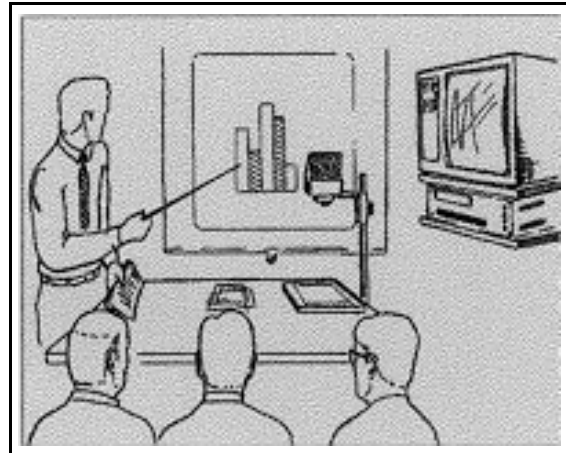

## SERVICE

Please contact one of our responsible service outlets if you encounter any operational problems or have enquiries about spare parts.


Our trained, specialist staff will ensure that you receive prompt attention and repairs in the event of any accident or malfunction you may encounter.

## FACTORY ADVISORY SERVICE

If ever for any reason our dealership network encounters limits to what it is able to do for you, please always feel free to contact us directly.

Our team of technical advisers is on hand to assist you.

***[gmbh-service@dynapac.com](mailto:gmbh-service@dynapac.com)***

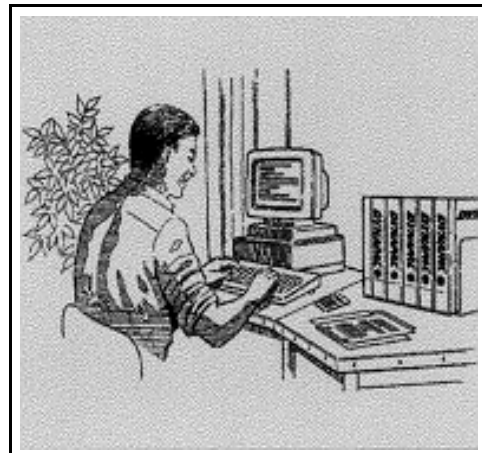

**DYNAPAC**

Part of the Atlas Copco Group

