

OPERATING MANUAL

Asphalt paver wheeled

F80W

Hatz





EN 4812217933

F80W
Asphalt paver, wheeled
Hatz

Operating Manual

Edition 04/2018 EN
From Serial No. 4510125
Original Operating Manual

DYNAPAC GmbH Ammerlaender Strasse 193 D-26203 Wardenburg	Wir	EC DECLARATION OF CONFORMITY Translation Individual machine
Strassenfertiger	Maschinenname	We
F80W Tier 4F	Maschinentyp	Machine name
	Serien- oder (PIN) Chargen-Nr.	Machine type
		Serial or batch (PIN) No.
2006/42 2014/30 2000/14	allen zutreffenden Bestimmungen der folgenden Richtlinien (ggf. in der geltenden novellierten Fassung) und den Rechtsvorschriften der Mitgliedstaaten entspricht	complies with all the relevant provisions of the following directives, as amended, and the corresponding national regulations
EN500-1:2006+A1:2009 EN500-6:2006+A1:2008	Angewandte harmonisierte Standards	Harmonized standards applied
6,3 102 104	Installierte Nettoleistung Motor (kW) Gemessener Schalleistungspegel dB(A) Garantierter Schalleistungspegel dB(A)	Net installed power [kW] Measured sound power level dB(A) Guaranteed sound power level dB(A)
	Verfahren zur Beurteilung der Konformität: Anhang VI	Conformity assessment procedure followed: Annex V
Government Testing Laboratory of Machines J.S.C. Třanovského 622/11 163 04 Praha 6—Repy	Beauftragte benannte Stelle für Lärm-Richtlinie 2000/14/EG	Name and address of the notified body involved for directive 2000/14/EC
Thorsten Bode General Manager 	Name und Position des Erstellers und der Person, die bei einer begründeten behördlichen Anfrage zur Erstellung und Vorlage des entsprechenden Abschnitts der technischen Unterlagen berechtigt ist Unterschrift des Erstellers	Name and position of issuer and the person authorised to compile and transmit, in response to a reasoned request by the national authorities, relevant part of the technical file Signature of issuer
 DYNAPAC Pneumatische Walzen	Ort und Datum der Erstellung	Place and date of issue


Congratulations to purchasing a new DYNAPAC machine. This modern machine is characterised by simple operation and easy maintenance. In order to avoid faults due to improper operation and maintenance, we request that you read this Operating Manual with great care and keep them for later reference.

With kind regards,



Dynapac GmbH | Ammerlaender Str. 93 | 26203 Wardenburg – Germany

☎ +49 4407 972-0 | www.dynapac.com

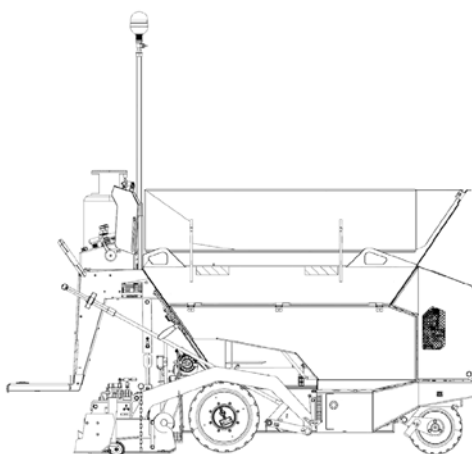

D451020

This Operating Manual consists of:

I. Specification manual

II. Operating manual

III. Maintenance manual

The purpose of this Operator's Manual is to familiarize operators with safe operation of the machine and provide them information for maintenance. Therefore it is necessary to pass this manual to operators and ensure that it will be read by them carefully before the road roller is used.

DYNAPAC assumes no responsibility in cases when the machine is operated incorrectly or is used incorrectly in operating modes, which may result in an injury or death, damage to the machine or property or environmental pollution.

Adherence to maintenance instructions increases the reliability and lifetime of the machinery and reduces repair costs and down time.

In order to ensure smooth operation of the DYNAPAC compaction equipment, use only original spare parts supplied by DYNAPAC for repairs.

The operating instructions must always be kept available on the machine in an appropriate place.

Preface

Information, specifications, and recommended operation and maintenance instructions contained in this publication are basic and final information at the time of the printing of this publication. Printer's errors, technical modifications, and modifications of figures are reserved. All dimensions and weights are approximate and, therefore, not binding.

DYNAPAC reserves the right to perform modifications at any time with no obligation to inform the machine user. If you identify any differences between the machine operated by you and the information contained in this publication, contact your local dealer.

Reproduction or copying of any kind is prohibited without the written permission of DYNAPAC

SAFETY NOTICES AND SIGNS:



The notice warns of a serious risk of personal injury or other personal hazards.




The notice warns of possible damage to the machine or its parts.



The notice warns of the necessity of environmental protection.

! CAUTION!

As used in this operating manual, the terms right, left, front and rear indicate sides of the machine moving forward.

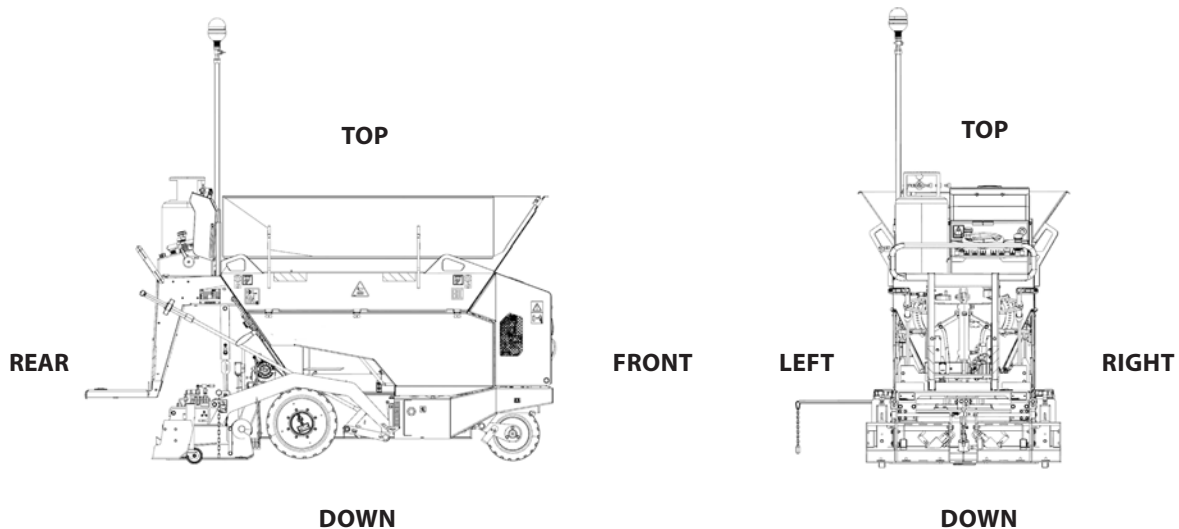

D409002A

Contents

Contents	4
1 SPECIFICATION MANUAL	9
1.1 Basic data	10
1.2 Dimensional drawing of the machine	12
1.3 Technical data	14
1.3.1 Specification table	14
1.3.2 Machine gradeability and lateral static stability	16
1.4 Optional equipment	18
1.4.1 Table of optional equipment	18
1.4.2 Mechanical screed extension	19
1.4.3 Dual wheels	21
1.4.4 Front wheel scraper	22
1.4.5 Material hopper extension	23
1.4.6 Additional lighting	24
2 OPERATING MANUAL	29
2.1 Main safety precautions	30
2.1.1 Obligations before putting into operation	30
2.1.2 Assurance of safety precautions by the owner	30
2.1.3 Requirements for qualified personnel	31
2.1.4 Machine operator's obligations	32
2.1.5 Screed operators' obligations	33
2.1.6 Driver's stand and screed operator stand during machine operation	34
2.1.7 Dangerous zone and safe distance	35
2.1.8 Machine operation at unclear working areas	38
2.1.9 Manual signals	38
2.1.10 Safety notices and symbols used on the machine	42
2.1.11 Personal protective equipment	45
2.1.12 General safety precautions	46
2.1.13 Safety precautions during machine operation	46
2.1.14 Safety and fire precautions during the use of gas bottles	47
2.1.15 Safety precautions for the use of portable fire extinguisher	48
2.1.16 Safety and fire precautions during welding on the machine	48
2.1.17 Safety precautions for electrical and electronic equipment of the machine	49
2.1.18 Prohibited activities	50
2.2 Preservation and storage	52
2.2.1 Storage places and storage conditions	52
2.2.2 Preservation and storage of the machine for 1–2 months	53
2.2.3 Preservation and storage of the machine for a period over 2 months	54
2.2.4 Removing chemical preservatives and putting the machine into operation	55

2.3	Machine disposal	57
2.3.1	Machine disposal after its service life	57
2.4	Machine description.....	58
2.4.1	Description of main parts of the machine and screed	59
2.4.2	Main dashboard	62
2.4.3	Display	66
2.4.4	Foot switch	68
2.5	Operation of the machine	70
2.5.1	Turning ON/OFF the battery disconnecter	70
2.5.2	Basic equipment of the machine	71
2.5.3	Machine footboard.....	74
2.5.4	Deposition boxes and safety covers on the machine.....	75
2.5.5	Mounting of screed reduction plates	77
2.5.6	Beacon	79
2.5.7	Driver's stand.....	80
2.5.8	Starting the engine	81
2.5.9	Starting the engine using starting leads from external power supply	82
2.5.10	Travel and reversing of the machine.....	83
2.5.11	Stopping the machine and engine.....	85
2.5.12	Machine parking	86
2.5.13	Front wheel	87
2.5.14	Using and setting the paving direction indicator	88
2.5.15	Hopper.....	89
2.5.16	Material outlet.....	90
2.5.17	Conveyor.....	91
2.5.18	Conveyor limit switch.....	92
2.5.19	Augers.....	93
2.6	Operation of the screed	94
2.6.1	Lifting and lowering the screed.....	94
2.6.2	Screed lock	95
2.6.3	Setting the paving width	96
2.6.4	Setting the paving thickness	98
2.6.5	Setting the roadway profile	99
2.6.6	Setting the end gates.....	100
2.6.7	Screed vibration (optional equipment)	101
2.6.8	Screed gas heating	102
2.6.9	Loading material to the machine.....	108
2.6.10	Start of paving.....	109
2.6.11	End of paving	110
2.7	Machine transport	111
2.7.1	Preparation of the machine for transport.....	111
2.7.2	Loading the machine using a ramp	112
2.7.3	Loading the machine with a crane.....	113
2.7.4	Machine transport.....	114
2.7.5	Preparation of the machine for operation after transportation	114
2.8	Special conditions to use the machine	115
2.8.1	Towing the machine	115
2.8.2	Climatic conditions	116
2.8.3	Operation of the machine in dusty environment	116

Contents

3	MAINTENANCE MANUAL	119
3.1	Safety and other measures during maintenance of the machine	121
3.1.1	Safety precautions during machine maintenance	121
3.1.2	Safety and fire precautions during replacement of operating fluids.....	122
3.1.3	Environmental and hygienic principles	123
3.1.3.1	Hygienic principles.....	123
3.1.3.2	Environmental principles.....	123
3.2	Specification of operating fluids	124
3.2.1	Engine oil	124
3.2.2	Fuel.....	124
3.2.3	Hydraulic oil	125
3.2.4	Anti-adherent solution	125
3.2.5	Liquid gas.....	126
3.2.6	Lubricating grease.....	126
3.3	Table of fluid quantities	127
3.3.1	Overview of fluids quantities and overview of symbols specified in maintenance plans	127
3.4	Lubrication and maintenance chart.....	128
3.5	Lubrication and service plan	130
3.5.1	Maintenance plan	130
3.6	Lubrication and maintenance operations	131
	Every 10 hours at the beginning of work (daily)	132
3.6.1	Fuel level check.....	132
3.6.2	Engine oil check	133
3.6.3	Hydraulic oil check in the hydraulic tank	134
3.6.4	Driver's stand cleaning.....	135
3.6.5	Cleaning the hopper, outlets and conveyor.....	136
3.6.6	Auger cleaning.....	137
3.6.7	Test of burner ignition, flame position adjustment and spark plug maintenance	138
3.6.8	Gas equipment tightness check.....	142
	Every 10 hours at the end of work (daily)	143
3.6.9	Fuel level check.....	143
3.6.10	Cleaning the hopper, outlets and conveyor.....	144
3.6.11	Auger cleaning.....	145
	Every 50 hours (week)	146
3.6.12	Cleaning the water separator	146
3.6.13	Machine lubrication	147

Every 100 hours of operation (monthly)	150
3.6.14 Fuel system tightness check	150
3.6.15 Rear wheel fastening check	151
3.6.16 Conveyor chain tensioning	152
Every 250 hours of operation (every 3 months)	153
3.6.17 Engine oil replacement	153
3.6.18 Engine air intake check	154
3.6.19 Engine accelerator cable tension check	155
3.6.20 Hydraulic oil cooler cleaning	156
3.6.21 Hydraulic circuit tightness check	157
3.6.22 Battery check	158
Every 500 hours of operation (every 6 months)	160
3.6.23 Fuel filter replacement	160
3.6.24 Air filter replacement	162
3.6.25 Front and rear wheel condition check	163
Every 1000 hours (yearly)	164
3.6.26 Engine oil filter cleaning	164
3.6.27 Hydraulic oil and hydraulic oil filter replacement	166
3.6.28 Gas line hose replacement	168
Maintenance as required	169
3.6.29 Battery replacement	169
3.6.30 Screw connections tightness check	170
3.7 Troubleshooting	172
3.7.1 Troubleshooting	172
3.7.2 Troubleshooting engine faults when indicator lamps are lit on the display	172
3.7.3 Troubleshooting the hydraulic system	172
3.7.4 Troubleshooting the electrical system	173
3.7.5 Troubleshooting of screed heating when active error indicator lamp is lit and an error code is shown on the display	174
3.7.6 List of error codes displayed on the display	175
3.8 Appendices	178
3.8.1 Machine wiring diagram	178
3.8.2 Machine hydraulic system diagram	184
3.8.2.1 Measuring points of the hydraulic circuit	186
3.8.3 Screed gas heating system diagram	187
3.8.4 Table of spare parts for regular maintenance	188
3.8.5 Content of the filter set after 500 hours (4812088533)	188
3.8.6 Content of the filter set after 1000 hours (4812088534)	188
3.8.7 Table of optional equipment	189

1 SPECIFICATION MANUAL

F80W
(Hatz)

1.1 Basic data

Machine description

The F80W wheeled asphalt paver is equipped with a screed with gas heating. The basic paving width is from 800 mm (31.5 in) to 1,300 mm (51.2 in).

The machine is characterised with good manoeuvrability, good view from the operator's place, a wide range of uses and easy transport.


Specification of the expected use of the machine

The performance and dimensions of the F80W wheeled asphalt paver predetermine it for a wide range of paving works, in particular for city streets, city centres as well as for repairs and general maintenance of constructions.

The F80W wheeled asphalt paver has been designed and manufactured for the use for:

Paving asphalt mixtures (at hot condition)

Paving loose mixtures (at cold condition)



The machine is not intended for paving concrete.

Machine type

Serial number of the machine

Year of manufacture

Engine type

Serial number of the engine

Screed type


Serial number of the screed

The machine that complies with the requirements on health protection and safety is provided with a nameplate with CE marking.

1. Name – always stated only in the English version
2. Type
3. Serial number
4. Operating weight
5. Maximum mass
6. Rated power
7. Version
8. Transport weight
9. Front axle load
10. Rear axle load
11. Year of manufacture




Nameplate.
Serial number of the machine.

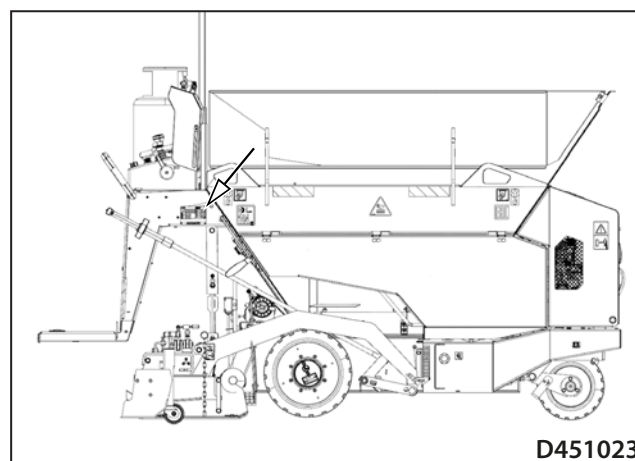

D451023

Serial number of the engine.

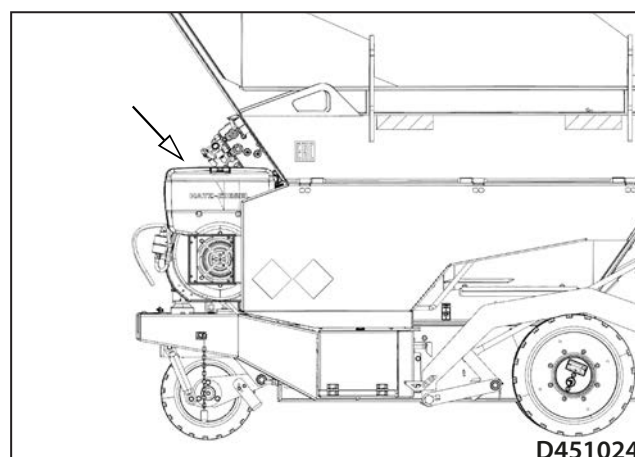


D451024

Nameplate of the screed.
Serial number of the screed.



D451025

1.2 Dimensional drawing of the machine

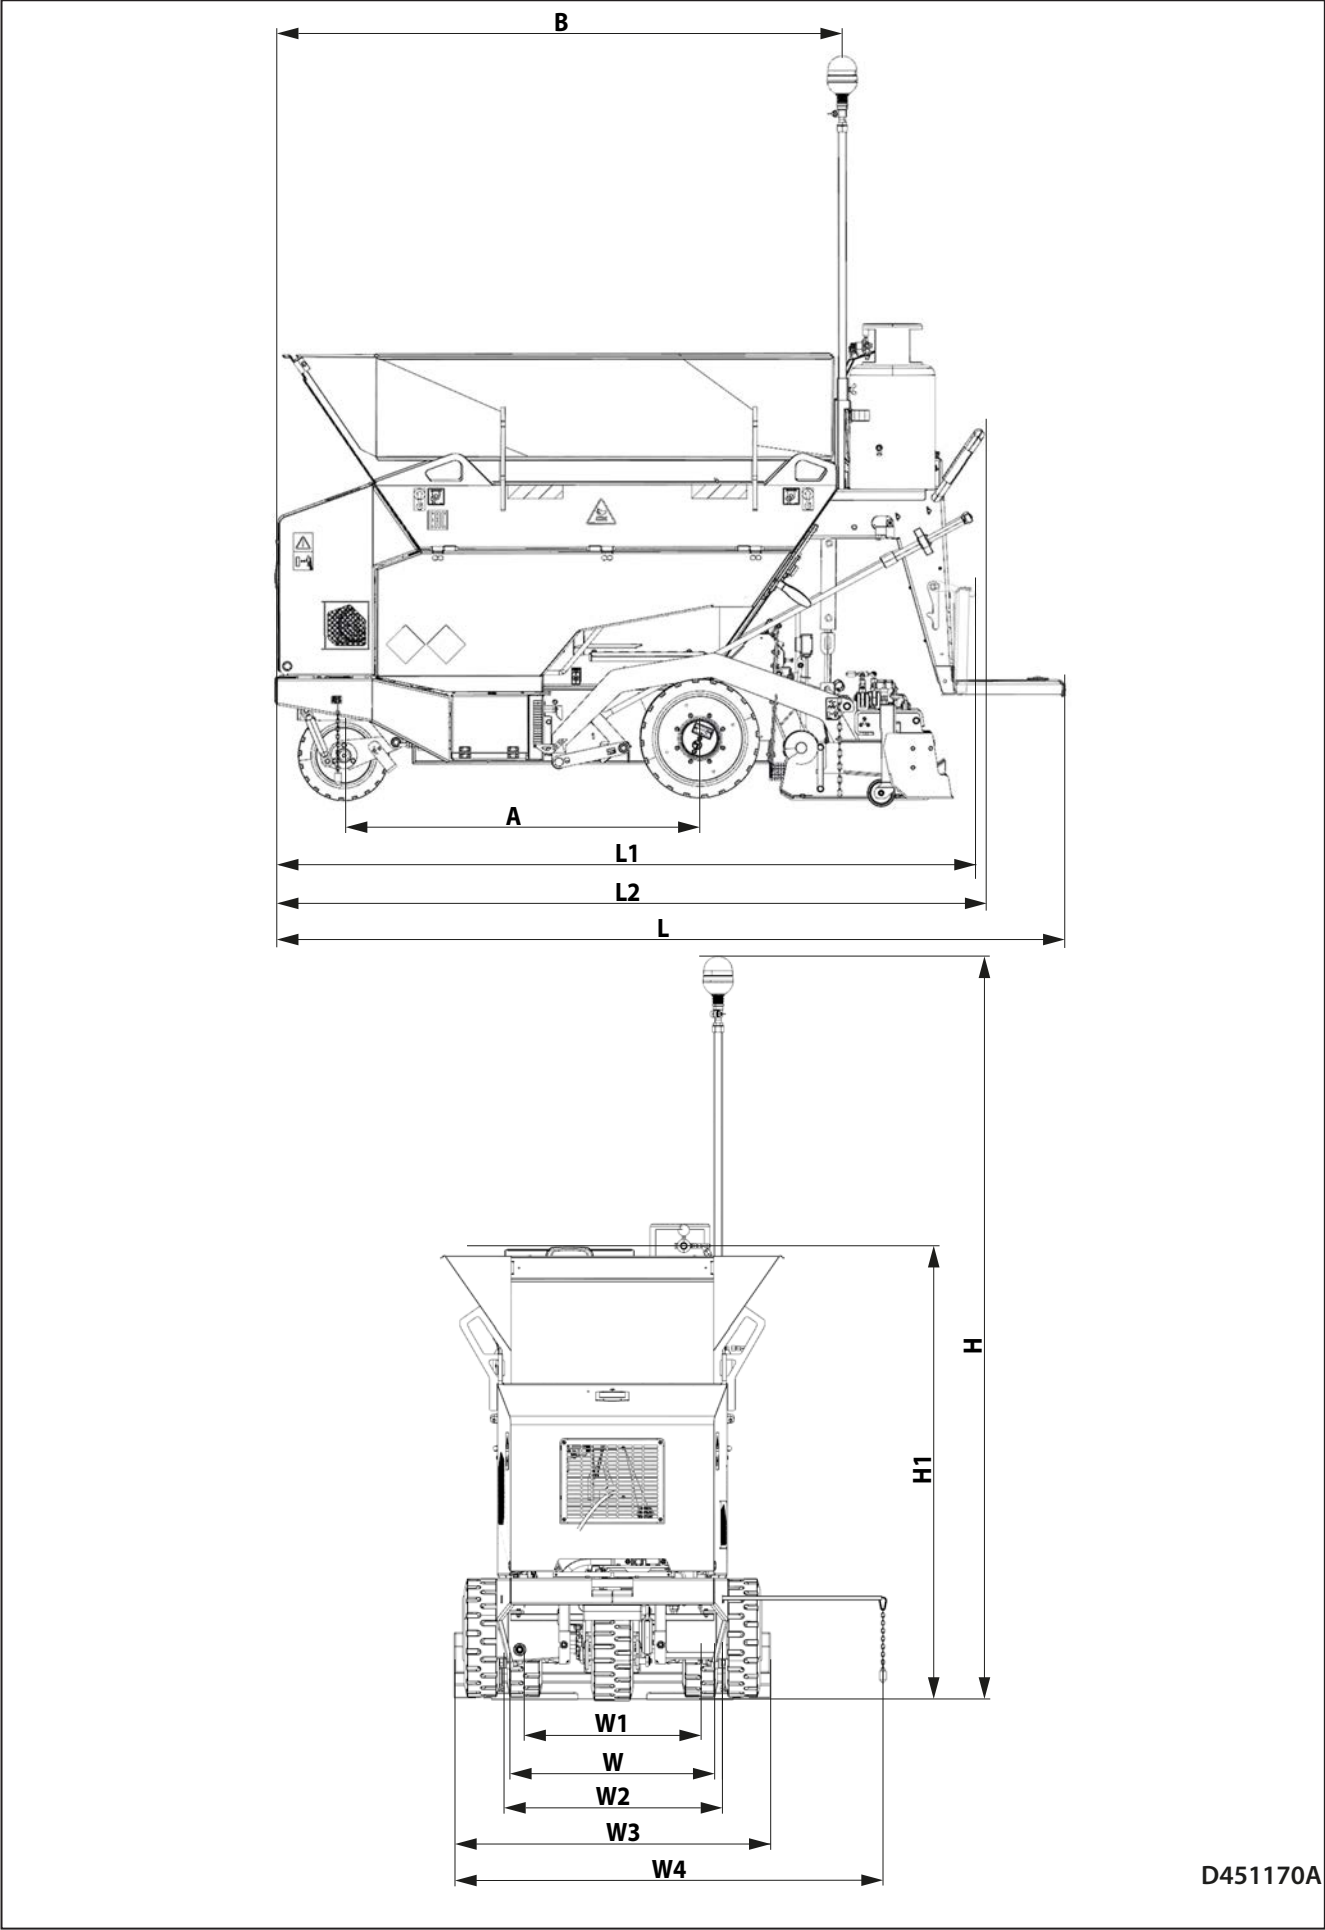

	A	B	H	H1	L	L1
mm	1280	2070	2680	1598	2865	2526
in	50,4	81,5	105,5	62,9	112,8	99,4
	L2	W	W1	W2	W3	W4
mm	2550	765	640	800	1150	1699
in	100,4	30,1	25,2	31,5	45,3	66,9

1.3 Technical data

1.3.1 Specification table

Weight		
The machine operation weight (including: screed extension, doubled driving wheels, vibration)	kg (lb)	1260 (2780)
Transport weight	kg (lb)	1,185 (2,610)
Driving characteristics		
Number of speeds	-	2
Operating speed	km/h (MPH)	0.6 (0.37)
Transport speed	km/h (MPH)	2.5 (1.6)
Machine gradeability with an empty hopper (screed in the lower position)	° / %	7/12
Machine gradeability with a full hopper (screed in the lower position)	° / %	11 / 19
Machine descent with a full hopper (screed in the lower position)	° / %	20 / 36
Lateral static stability with an empty hopper	° / %	12 / 21
Lateral static stability with a full hopper	° / %	12 / 21
Drive type	-	Hydrostatic
Number of driving axles	-	1
Steering		
Steering type	-	Hydraulic
Steering control	-	Hydraulic servo unit
Engine		
Manufacturer	-	Hatz
Type	-	1B40T
Power according to ISO 3046-1	kW (HP)	6.3 (8)
Number of cylinders	-	1
Cylinder capacity	cm ³ (cu in)	462 (28)
Nominal speed	min ⁻¹ (RPM)	2600
Maximum torque	Nm/rpm	25/2000
The engine complies with emission regulations	-	Not regulated
Engine cooling system	-	Air-cooled
Axle		
Number of tyres	-	2
Rear wheel	-	432/127
Front wheel	-	330/152
Brakes		
Operating	-	Hydrostatic
Parking	-	Mechanical

Operating fluids		
Fuel	l (gal US)	5 (1.3)
Engine (oil filling)	l (gal US)	1.8 (0.5)
Hydraulic system	l (gal US)	20 (5.3)
Lubricants	kg (lb)	0.1 (0.22)
Gas bottle with the maximum volume	kg (lb)	10 (22)
Maximum operating pressure	bar	1
Recommended operating pressure	bar	0.6–0.8
Gas type	-	Propane-butane (LPG)
Hopper		
Hopper capacity	kg (lb) / m ³	1,600 (3,527) / 0.6
Filling area length	mm (in)	1,100 (43.3)
Paving		
Paving capacity	kg/h (lb/h)	22,000 (48,500)
Paving thickness	mm (in)	5–100 (0.2–3.9)
Screed		
Minimum paving width without reduction plates (standard equipment of the machine)	mm (in)	800 (31.5)
Maximum paving width without reduction plates (standard equipment of the machine)	mm (in)	1,300 (51.2)
Minimum paving width with reduction plates	mm (in)	250 (9.8)
Maximum paving width with reduction plates	mm (in)	750 (29.5)
Minimum paving width with mechanical extension	mm (in)	1,150 (45.3)
Maximum paving width with mechanical extension	mm (in)	1,650 (65)
Electrical installation		
Voltage	V	12
Battery capacity	Ah	55
Noise and vibration emissions		
Measured sound power level A, L _{pA} at the operator's position (platform)*	dB	81
Uncertainty K _{pA} *	dB	2
Guaranteed sound power level A, L _{WA} **	dB	104
Declared highest weighted effective value of vibration acceleration transmitted to the whole body (platform)***	m/s ² (ft/s ²)	0.6
Declared total value of vibration acceleration transmitted to hands (platform)***	m/s ² (ft/s ²)	<2.5

* measured according to EN 500-4


** measured according to DIRECTIVE 2000/14/EC

*** measured according to EN 1032+A1 at a place, operating units in operation


1.3. Technical data

1.3.2 Machine gradeability and lateral static stability


Machine gradeability with an empty hopper (screed in the lower position).

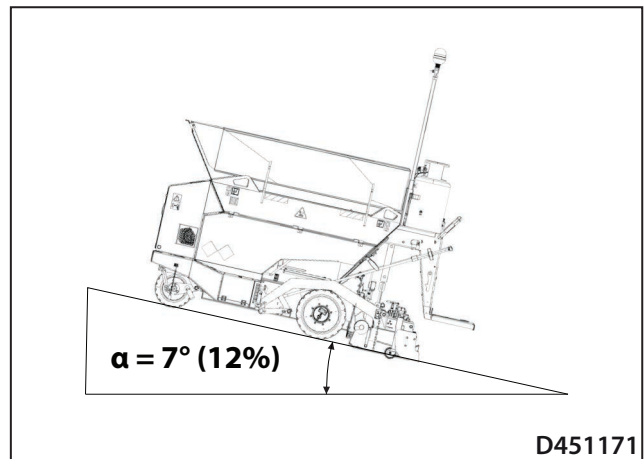


Machine gradeability with a full hopper (screed in the lower position).

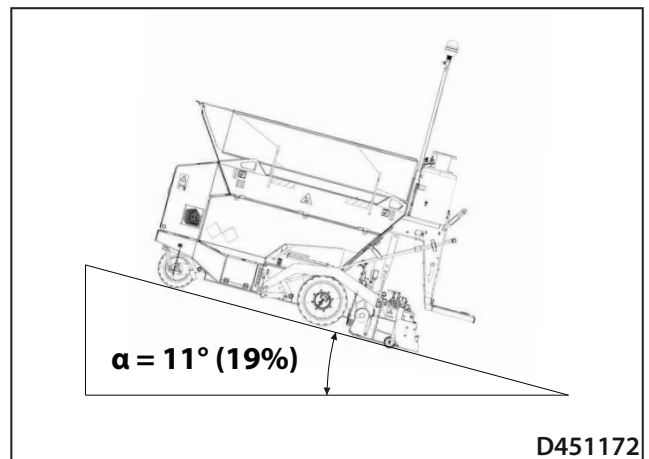


Machine descent with an empty hopper (screed in the lower position).

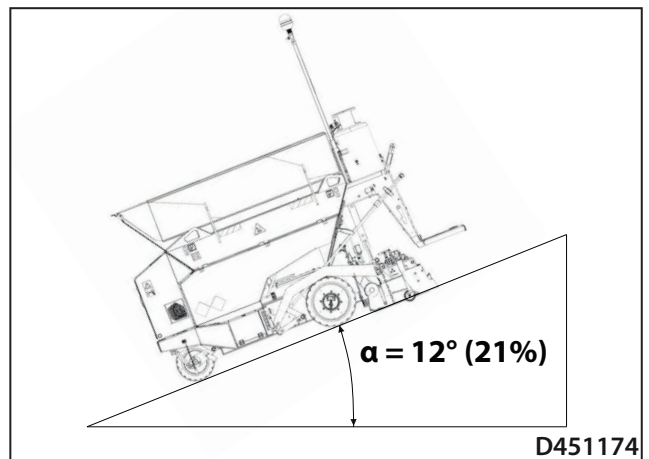

Machine descent with a full hopper (screed in the lower position).

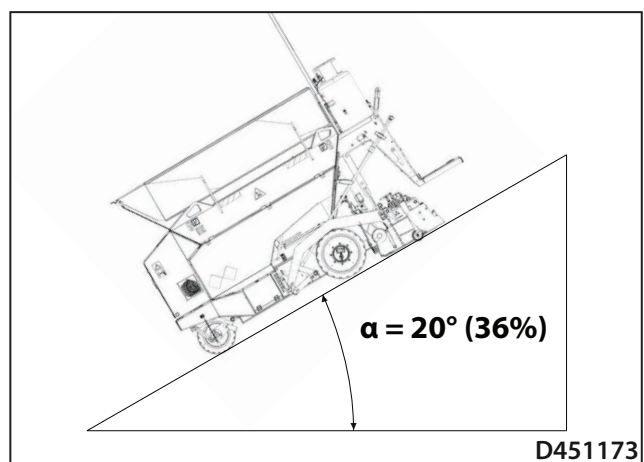

Lateral static stability with an empty and full hopper.

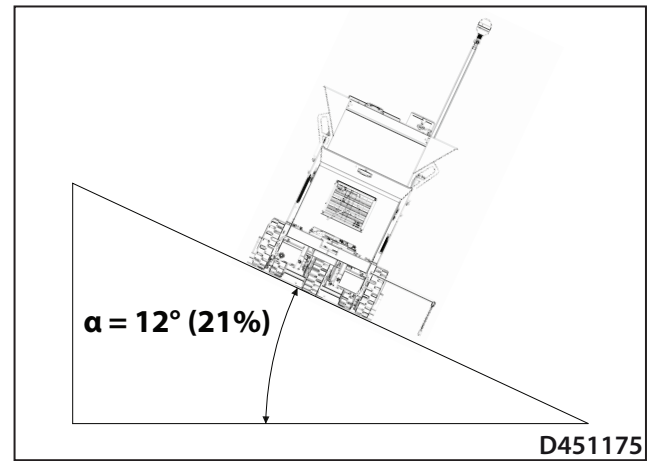

1.4 Optional equipment

1.4.1 Table of optional equipment

Chapter	Optional equipment	Order number
1.4.2	Mechanical screed extension	4812061017
1.4.3	Dual wheels	4812061018
1.4.4	Front wheel scraper	4812061021
1.4.5	Material hopper extension	4812061019
1.4.6	Additional lighting	4812061020

1.4.2 Mechanical screed extension

The mechanical screed extension serves for extending the paving width.

The maximum width of the screed is 1,300 mm. After installing the mechanical screed extension set, the maximum screed width will increase by 350 mm to 1,650 mm.

Paving width with mechanical extension is:

- Minimum paving width with mechanical extension: 1150 mm (45.3 in).
- Maximum paving width with mechanical extension: 1650 mm (65 in).



Mount the mechanical screed extension according to the Mounting Manual.

Mechanical screed extension kit

Order number: 4812061017


The mechanical screed extension kit consists of the following components:

- Mechanical screed extension – left (1),
- Mechanical screed extension – right (2),
- Auger extension – left (3),
- Auger extension – right (4),
- Mounting material.



During mounting of the mechanical screed extension the machine must be parked on a flat and solid surface with the engine and battery disconnecter off.

Use personal protective equipment.

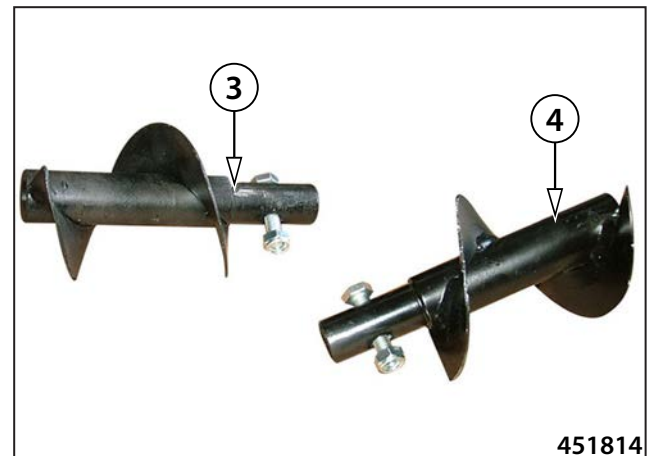

1.4 Optional equipment

Setting the paving width

Procedure for setting the required paving width on the left side of the screed:


To increase the paving width on the left side, turn the paving width switch (2) to the left and hold it.

To release the paving width switch (2), lock it back to the middle position and the screed stops in the required position.

To decrease the paving width on the left side, turn the paving width switch (2) to the right and hold it.

To release the paving width switch (2), lock it back to the middle position and the screed stops in the required position.

Check the required setting of the paving width on the left side by checking the position on the left paving width indicator (51).

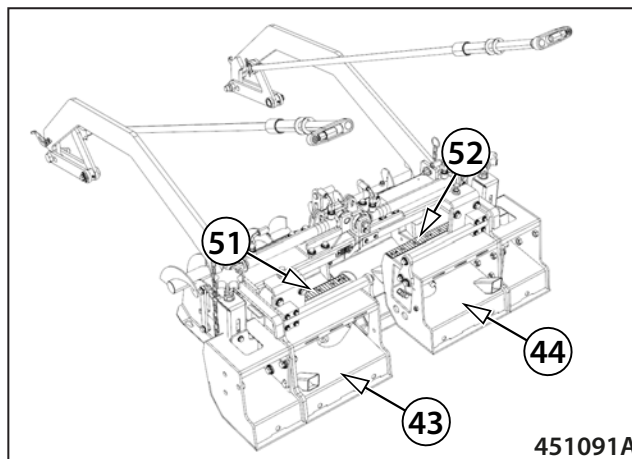

Procedure for setting the required paving width on the right side of the screed:


To increase the paving width on the right side, turn the paving width switch (3) to the right and hold it.

To release the paving width switch (3), lock it back to the middle position and the screed stops in the required position.

To decrease the paving width on the right side, turn the paving width switch (3) to the left and hold it.

To release the paving width switch (3), lock it back to the middle position and the screed stops in the required position.

Check the required setting of the paving width on the right side by checking the position on the right paving width indicator (52).

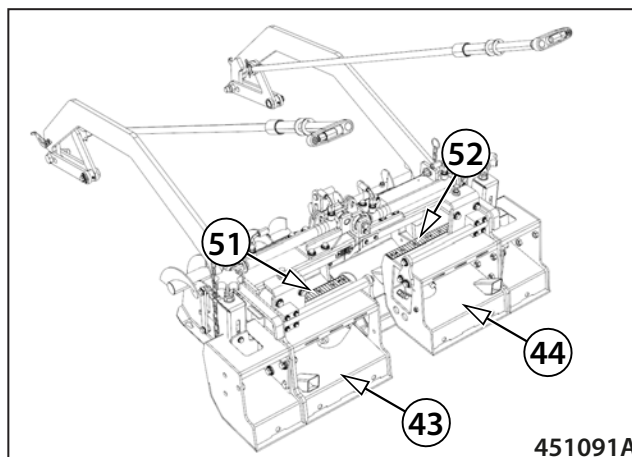

Note

In case of a failure contact your dealer or DYNAPAC Technical Support.



There is a risk of injury from the falling screed.

When working on the screed, the screed must be lifted at its highest position and locked.

Before lifting the screed, make sure that there are no persons or objects in the dangerous area.

Danger of injury. Do not reach in rotating parts.

Risk of burn. The screed and augers are hot.

Use personal suitable protective equipment.

When setting the required screed width, no one is allowed in the hazardous area of the machine.

There is a risk of injury from the movement of the screed extensions. The safe distance from the machine is at least 5 m.

1.4.3 Dual wheels

Dual wheels serve for the improvement of machine traction and stability.

A dual wheel, which is part of the dual wheel set, is identical with the standard rear wheel.

Distance between external surfaces of rear wheels:

- With standard rear wheels: 765 mm (30.1 in).
- With dual wheels: 1,077 mm (42.4 in).



Mount the dual wheels according to the Mounting Manual.

Dual wheel kit:

Order number: 4812061018



The dual wheel kit consists of the following components:

- Two dual wheels (1),
- Two dual wheel supports (2),
- Two dual wheel cover plates (3),
- Mounting material.



During mounting of dual wheels the machine must be parked on a flat and solid surface with the engine and battery disconnecter off.

Use personal protective equipment.

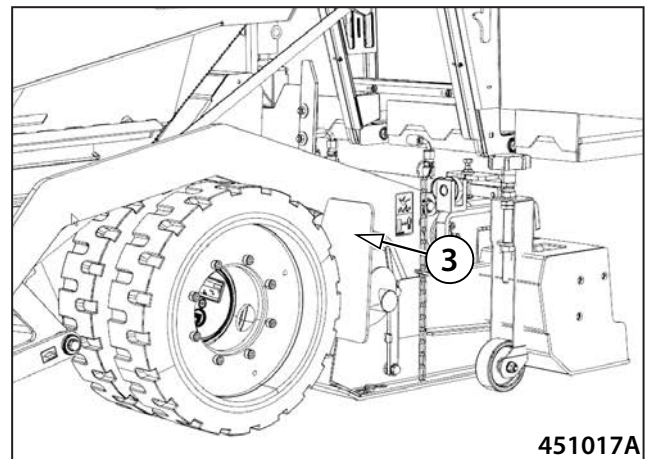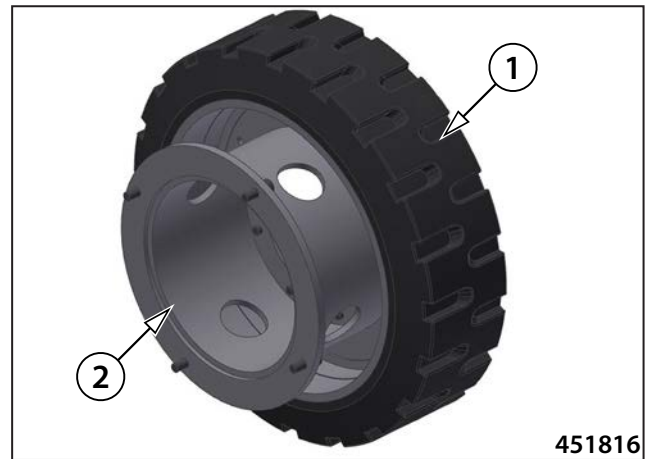

1.4 Optional equipment

1.4.4 Front wheel scraper

The scraper (1) is located on the swing fork of the front wheel and serves for cleaning the front wheel from gross dirt.



Mount the scraper according to the Mounting Manual.

Front wheel scraper kit

Order no.: 4812061021

The front wheel scraper kit consists of the following components:

- Front wheel scraper (1),
- Mounting material.


Operating the front wheel scraper:

The distance of the scraper to the front wheel can be adjusted by loosening the screws (2) on both sides.



During mounting of front wheel scraper the machine must be parked on a flat and solid surface with the engine and battery disconnecter off.

Use personal protective equipment.

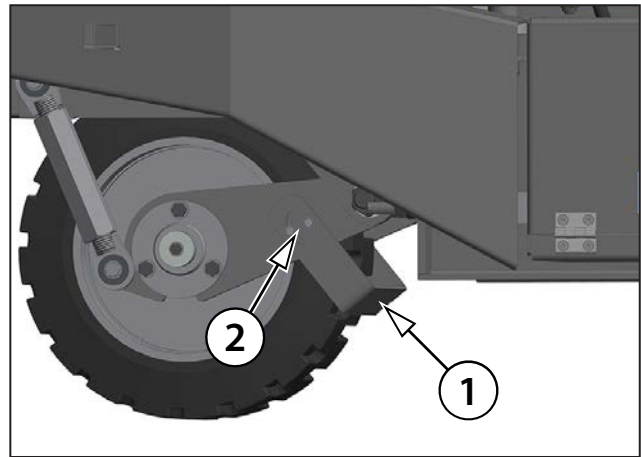

1.4.5 Material hopper extension

The material hopper extension serves for enlarging the filling space and easier feeding of material to the machine.

The material hopper extension consists of two plates (1) and (2), which are fitted with two fork-shaped holders (3)



Mount the material hopper extensions according to the Mounting Manual.

Material hopper extension kit

Order number: 4812061019

The material hopper extension kit consists of the following components:


- Material hopper extension – left (2),
- Material hopper extension – right (1),



During mounting of the material hopper extension the machine must be parked on a flat and solid surface with the engine and battery disconnecter off.

It is prohibited to use the material hopper extension as a container extension.

Use personal protective equipment.

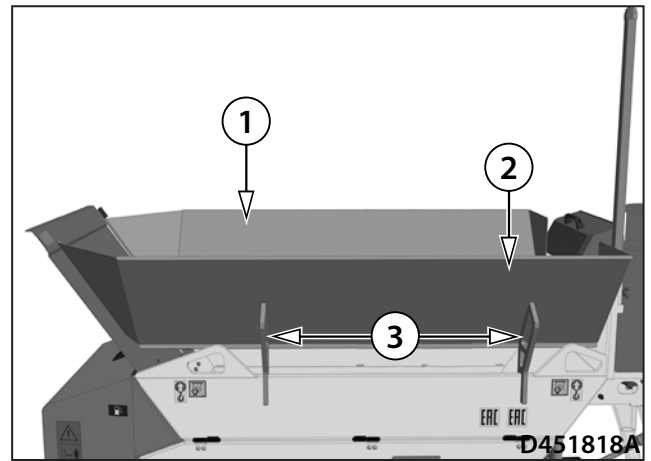

1.4 Optional equipment

1.4.6 Additional lighting

Additional lighting (1) serves for lighting the area of the screed and augers.



Mount the additional lighting according to the Mounting Manual.

Additional lighting kit

Order number: 4812061020

The additional lighting kit consists of the following components:

- Additional lighting (1),
- Mounting material.


Operating the additional lighting:

The additional lighting is fitted with its own switch, on the rear of the light, which is used to switch the light on and off.



During mounting of additional lighting the machine must be parked on a flat and solid surface with the engine and battery disconnecter off.

Use personal protective equipment.

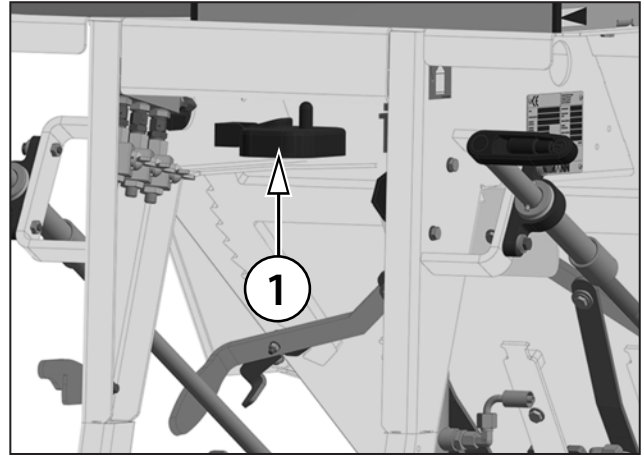

2 OPERATING MANUAL

F80W (Hatz)

2.1 Main safety precautions

2.1.1 Obligations before putting into operation

Before starting working with the machine, the machine operator and the machine operator shall read this Operating Manual and make themselves familiar with the operation of the machine, its control or operation and maintenance.

The machine user is liable to issue instructions for drivers and maintenance workers that include requirements for safety of operation when the machine is used. He must make machine operators familiar with these instructions.

The machine provider must specify a technological procedure that includes a working process for the specific job that specifies among others:

- measures for works under extraordinary conditions, works within protection zones, extreme slopes,
- precautions for any natural disaster hazards,
- requirements for the performance of works while observing principles of safety at work according to respective valid national regulations,
- technical and organizational measures to provide for safety of employees, workplaces and surroundings.

The machine provider must make machine operators provably familiar with the technological procedure.

The machine user shall know exact routes of gas lines, potable water lines, pipelines, sewerage, electric and telephone lines, both aerial and ground, and inform about other potential obstacles. These routes must be properly set out and marked by respective authorities according to national regulations before starting any works with the machine.

The minimum safety distance according to respective national regulations must be kept from the overhead electric lines. There is a danger of high voltage electrical shock.

Any damage to the utility lines must be immediately reported to their provider, and at the same time measures must be taken to prevent unauthorized persons from entering the dangerous area.

2.1.2 Assurance of safety precautions by the owner

He must ensure that the machine is operated only under conditions and only for purposes it is technically capable for according to conditions set by the manufacturer and respective standards.

He must ensure that the machine is used only in such a way and at such workplaces where there is no dangerous vibration transmission and damage to nearby buildings or property possible.

He must ensure a regular inspection of operation and technical conditions, regular maintenance of the machine in intervals specified in this Operating Manual. If the technical condition of the machine does not meet requirements to such an extent that it endangers safety of operation, persons and property, or damages and impairs the environment, the machine must be put out of service until the defects are removed.

He must specify who is allowed to carry out operation, maintenance and repairs of the machine as well as what activities can be carried out during the operation, maintenance and repair of the machine.

He must ensure that periodic safety tests are carried out in time. Every person who drives the machine, performs maintenance and service of the machine must be familiarised with instructions stipulated in this Operating Manual.

He must ensure that the machine is equipped with a fire extinguisher and it is checked on regular basis.

He must ensure that the machine is equipped with a first aid kit at the place defined for it according to respective national regulations.

He must ensure that the Operating Manual and the service book are kept in the machine at a specified place to be available to the driver all the time.

He must ensure continuous supervision by an appointed person during machine operation on public roads, and give instructions to ensure health protection and work safety.

He must ensure that hazardous materials, e.g. fuels, oils, coolants, will be removed from leakage points depending on their nature so as to avoid their adverse impact on the environment, safety of operation and human health.

He must ensure and hand over to respective authorised workers any and all information for the safe use of electric installations and electronic equipment of the machine, always in compliance with respective national regulations.

He must ensure and hand over to respective authorised workers any and all information for the safe use and handling of gas bottles if they form part of the equipment, during the operation of the machine, always in compliance with respective national regulations.

2.1.3 Requirements for qualified personnel

All activities on the machine may only be performed by qualified, instructed and trained personnel.

Qualified, instructed and trained personnel shall:

- be over 18 years old,
- trained in the provision of first aid and be able to provide it,
- be familiarized with this Operating Manual,
- know relevant and related safety instructions.

The mounting of additional equipment, maintenance and setting of mechanical and electronic parts of the machine may only be performed by persons with respective authorisations and qualifications and in compliance with all regulations and safety precautions according to this Operating Manual in compliance with relevant national regulations.

Qualified personnel:

QUALIFICATION	BASIC PROFESSIONAL REQUIREMENTS
Machine operator	Professionally trained for operating the machine.
	Professional knowledge of instructions given in this Operating Manual.
	Professional knowledge of procedures concerning simple setting of functions of the machine.
	Professional knowledge of procedures for handling and use of gas bottles.
	Professional knowledge of procedures in case of fire and extinguishing the machine equipped with a gas bottle.
	Professional knowledge of procedures for the use of the prescribed fire extinguisher.
	Professional knowledge of procedures for first aid provision in case of gas leakage from the system and subsequent harm to people.
Technical administrator Serviceman of mechanical parts	Professional knowledge of basic procedures for removal of defects when the machine is stopped for simple repairs.
	Professional knowledge of basic procedures of machine maintenance.
Technical administrator Electrical system and electronics serviceman	Professional knowledge of the machine and its parts (achieved through training) to be able to adjust and repair the machine.
Service technician	Professional knowledge of the machine and its parts (achieved through training) to be able to perform maintenance and repairs of electrical systems and electronics of the machine.
	Qualified service technician, professionally trained by a dealer or DYNAPAC authorised service centre. They perform complicated repairs, adjustments or testing of the machine at the customer.

2.1 Main safety precautions

2.1.4 Machine operator's obligations

Before starting operation of the machine, the driver is obliged to get familiar with instructions stated in the documentation supplied together with the machine, especially with safety precautions, and strictly observe the instructions. The same also applies to personnel assigned to maintain, adjust and repair the machine.

The driver must not drive the machine if he does not understand any part of the manuals. Contact your local dealer or the machine manufacturer.

The driver must not drive the machine unless he is fully familiarized with all functions and working and operating elements and knows exactly how to operate the machine.

The driver is obliged to follow the safety and operation signs placed on the machine and keep them legible.

The machine operator shall know exact routes of gas lines, portable water lines, pipelines, sewerage, electric and telephone lines, both aerial and ground, and information about other potential obstacles.

The machine driver must always maintain a safe three-point contact with the tilting platform and the handle.

When finding out any health hazard, life hazard to persons, hazard to property, failures, during hardware accidents, or when finding symptoms of such hazards during operation, the driver must stop his/her work and secure the machine against undesired starting, communicate this to a person accountable, and, to a possible extent, notify all the persons exposed to such hazard.

Before starting operation of the machine, the driver is obliged to get familiar with records and operational deviations found during the previous work shift, which are recorded in the service book delivered with the machine.

Before starting the work, the driver is obliged to inspect the machine and its accessories and to check control elements and communication and safety equipment for functioning according to the manual. When he finds defects that might endanger the safety of work and is not able to repair it, then he must not put the machine into operation and must report the defect to a responsible worker.

Before starting any operation, the driver must check that a first aid kit with prescribed contents is available, as well as a fire extinguisher, and find out about the possibilities of rescuing, availability of medical assistance and fire brigade.

If the driver finds a defect during operation of the machine, he must park the machine at a safe place and remove the defect.

During operation, the driver must observe operation of the machine and record any detected defects into the service book.

The driver must maintain a service book, which is intended for records of the acceptance and handover of the machine carried out between drivers, for defects and repairs done during operation and for keeping files of serious events during the work shift.

Before the engine is put into operation, the controls must be in zero positions and no persons are allowed to stay in the danger zone of the machine.

Always before starting the engine, the driver is obliged to notify others by means of a sound signal each time the machine is put into operation.

Before putting the machine into operation, the driver must check the brakes and steering for functioning.

After a warning alarm, the operator may put the machine into operation only when all workers have left the endangered area and are at a safe distance from the machine. In case of workplaces with unclear arranged, the machine can be put into operation only after expiration of the period of time needed for people to leave the dangerous area and after assuring inspection and connection between an appointed worker and the machine operator. During operation of the machine, it is necessary to follow safety instructions and not to carry out any activity that might endanger the work safety. The driver must be fully engaged in steering the machine.

The driver must comply with the technological procedure of works or instructions of a responsible worker.

When driving the machine within the workplace, the driver must adapt the driving speed to terrain conditions, the work performed and weather conditions. Watch continuously the clearance to avoid collision with any obstruction.

If the driver finishes or interrupts machine operation and leaves the machine, he must carry out safety measures against unauthorized use of the machine and undesired start up. He must take the key out from the ignition box, lock the main dashboard of the machine or the cabin of the machine and other lockable parts of the machine and disconnect the wiring by means of a disconnecter.

When the operation is finished, the driver must park the machine in a suitable area (on a flat, solid surface) so as not to endanger stability of the machine; the machine must not interfere with traffic roads, must not be exposed to falling objects, e.g. rocks, and must be protected against any other natural disaster, e.g. floods and landslides.

When parking the machine on roads, measures according to national road traffic regulations shall be taken. The machine must be marked properly.

After the work with the machine is finished, it is necessary to record all defects, damages and repairs of the machine into the service book. When drivers take turns, the driver is obliged to report any identified facts to the following driver.

The driver must use personal protective equipment, work clothes, work shoes, a warning vest, a protective helmet, hearing protection and a dust protection mask.

During maintenance of the machine, lubrication and replacement of operating fluids, hands must be protected with protective gloves and eyes with safety glasses or a safety shield.

The driver must carry out the machine maintenance in compliance with instructions specified in this Operating manual.

The driver must equip the machine with accessories and equipment as prescribed.

The driver must keep the driver's stand, foot rests and walkways clean.

The driver must keep the machine clean, free of oil contaminants and inflammable materials.

2.1.5 Screed operators' obligations

Before starting operation of the machine, screed operators are obliged to get familiar with instructions stated in the documentation supplied together with the machine, especially with safety precautions, and strictly observe the instructions. The same also applies to personnel assigned to maintain, adjust and repair the machine.

The operator must not operate the screed if he does not understand any part of the Operating manuals. Contact your local dealer or the machine manufacturer.

The operator must not operate the screed unless he is fully familiarized with all functions, working and operating elements and knows exactly how to operate the machine.

The screed operator is obliged to follow the safety and operation signs placed on the machine and keep them legible.

Before starting the work, the screed operators must get familiar with the workplace environment, i.e. with obstructions, slopes, utility line system, distribution lines of gas, potable water, pipelines, sewerage, electrical and telephone lines, both aerial and ground, and information about other potential obstacles.

If a screed operator finds out a hazard to health, danger to life of people, property or failures during a breakdown of the technical equipment, and/or if he finds out indications of the above mentioned during operation, he must interrupt the work and in cooperation with the driver secure the machine against unwanted start up, inform a responsible worker on the above mentioned and if possible notify all people involved who might be endangered.

Before starting operation of the machine, the screed operators are obliged to get familiar with records and operational deviations found during the previous work shift.

Before starting the work, the screed operator is obliged to inspect the machine and accessories, and to check control elements and communication and safety equipment for functioning according to the manual. When he finds a defect that might endanger the safety of work and is not able to repair it, then he must not put the machine into operation and must report the defect to a responsible worker.

If the driver or the screed operator finds a defect during operation of the machine, he must park the machine in a safe area and remove the defect.

During operation of the machine, the screed operator must follow safety instructions and must not carry out any activity that might endanger the safety of work; the screed operator must be fully engaged in the operation of the screed.

The screed operator is obliged to comply with technological procedures of works or instructions of a responsible worker.

After finishing the work with the machine, all of the defects, damages to the machine and any repairs made must be recorded in the service book. When screed operators take turns, one screed operator is obliged to report any identified facts to the other screed operator.

The screed operators must use personal protective equipment, work clothes, work boots, a warning vest, a protective helmet, an ear protection and a dust protection mask.

During maintenance of the machine, lubrication and replacement of operating fluids, hands must be protected with protective gloves and eyes with safety glasses or a safety shield.

The operator must carry out the machine maintenance in compliance with instructions specified in the Operating manual.

The screed operator is obliged to equip the machine with accessories and equipment as prescribed.

The screed operator is obliged to keep the driver's stand, foot rests and walkways clean.

The screed operator must keep the machine clean, free of oil contaminants and inflammable materials.

2.1 Main safety precautions

2.1.6 Driver's stand and screed operator stand during machine operation




These requirements during operation of the machine are considered binding with regard to the safety of people. Firstly, the machine operator and the screed operators must observe the below-given requirements during machine operation.

DYNAPAC assumes no responsibility in cases when the machine is operated incorrectly or is used incorrectly in operating modes which may result in an injury or death, damage to the machine or property.


During machine operation no objects may be located on the driver's stand.

Operation of the machine during paving at a workplace:

The driver's stand during machine travel and paving operation is the machine platform (1). The driver stands on the platform and firmly holds the handle with one or both hands.

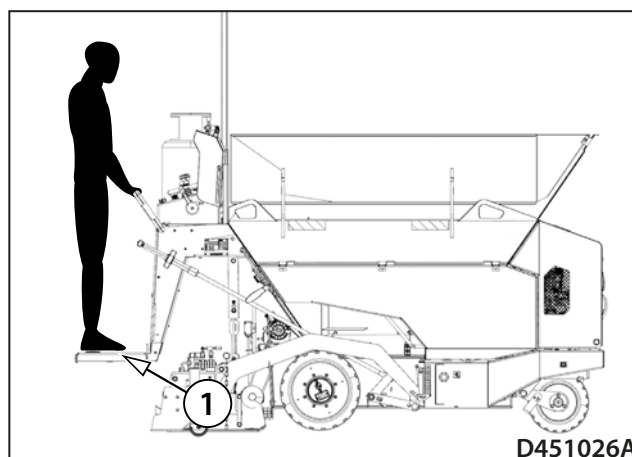

2.1.7 Dangerous zone and safe distance

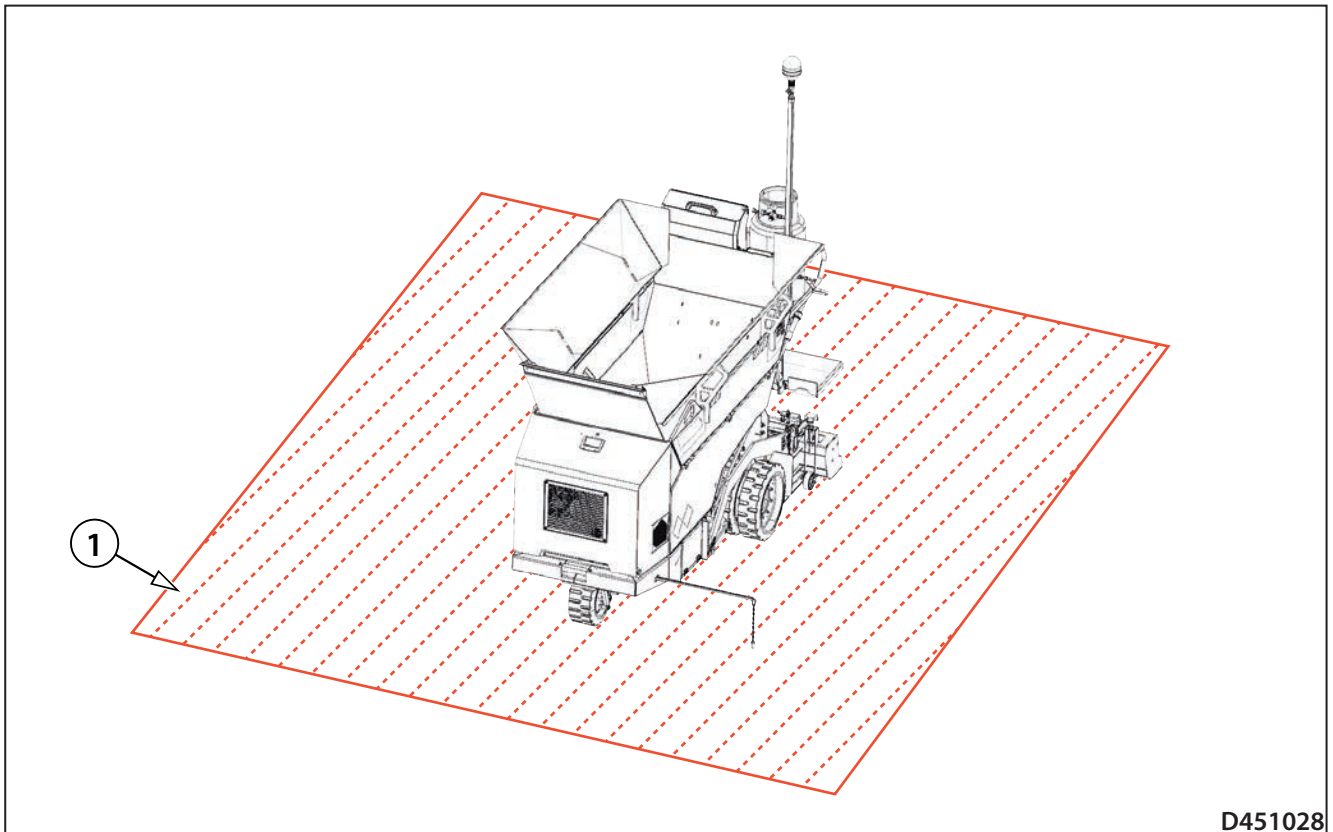

D451028

Dangerous zone of the machine:

During the operation of the machine and paving no people may be present and stay in the dangerous zone of the machine.

The dangerous zone of the machine (1) may only be entered into for the purpose of maintenance and cleaning of the machine when the conditions below are met:

- when the machine is stationary and secured against spontaneous start-up,
- the entry is only permitted to professionally qualified, instructed and trained personnel authorised to operate and maintain the machine.



During the operation of the machine and paving no people may be present and stay in the dangerous zone of the machine.

The machine user as well as the machine operator must ensure adherence to the prohibition to enter the dangerous zone of the machine during its operation.

These requirements during operation of the machine are considered binding with regard to the safety of people.

DYNAPAC assumes no responsibility in cases when the machine is operated incorrectly or is used incorrectly in operating modes which may result in an injury or death, damage to the machine or property.

2.1 Main safety precautions


Safe distance between a public road, the place of paving and the construction site:

The safe distance between a public road, the place of paving and the construction site must be marked with a visible barrier against unauthorised access of other people to the place of paving and construction site.

The safe distance between a public road, the place of paving and the construction site is determined by the machine user on the basis of respective national regulations.



Observe the safe distance between a public road, the place of paving and the construction site.


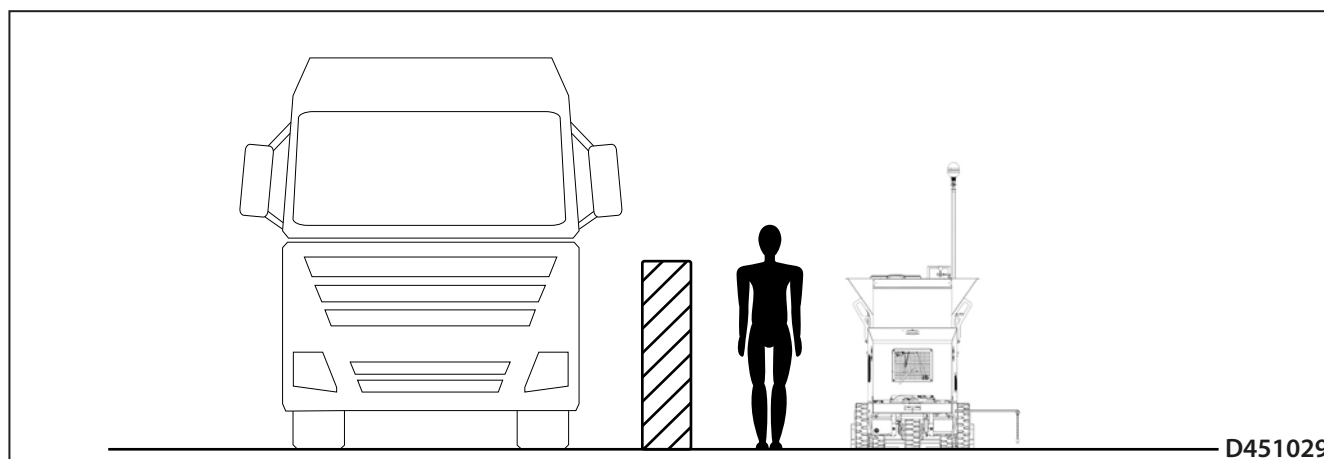


Safe distance of workers at the place of paving:

All workers present at the place of paving, moving near the machine, but not directly operating the machine, must observe the minimum safe distance of 5 metres from the machine.



The machine user as well as the machine operator must ensure adherence to the aforementioned safe distance of 5 m from the machine with regard to safety of workers at the place of paving.

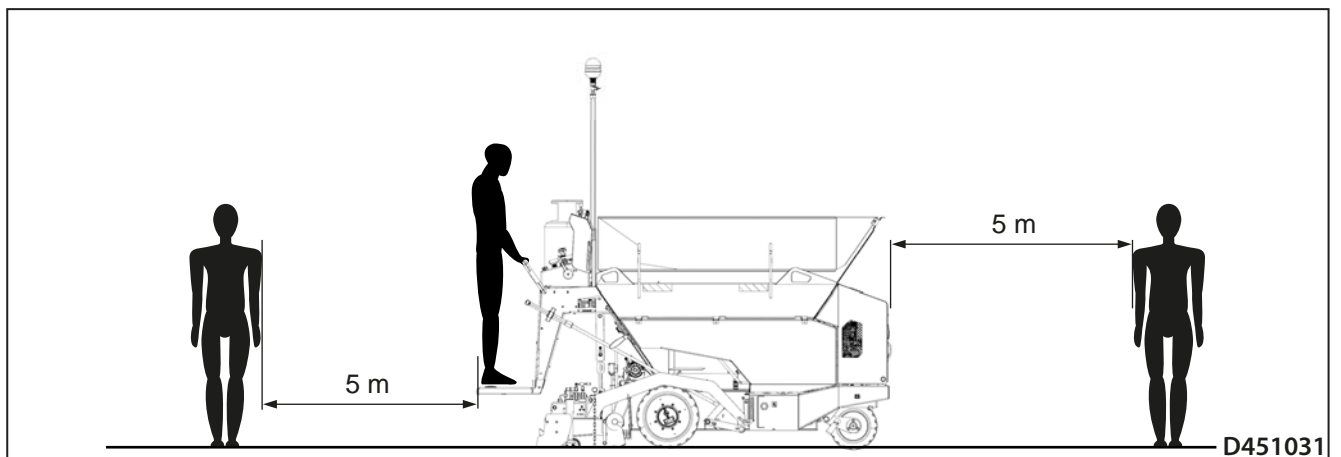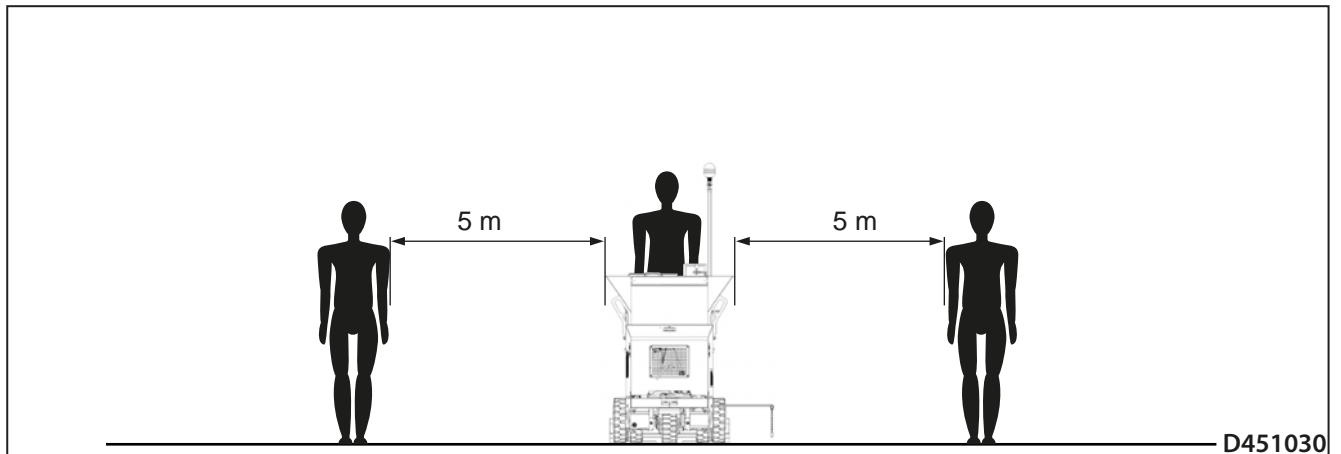

2.1 Main safety precautions

2.1.8 Machine operation at unclear working areas

The machine operator may not operate the machine if he does not have a sufficient overview of the workplace and potential obstacles are not clearly visible. In such cases, a different efficient form of connection between the appointed worker and the machine operator must be ensured.

Before putting the machine into operation the machine operator must be informed by the machine user about potential obstacles, e.g. distribution lines of gas, potable water, pipelines, sewerage, electrical and telephone lines, both aerial and ground ones. These routes must be properly set out and marked by respective authorities according to national regulations before starting the operation of the machine.

To ensure connection between the appointed worker and the machine operator, we recommend using hand signals.

2.1.9 Manual signals

The machine operator may not operate the machine if he does not have a sufficient overview of the workplace and potential obstacles are not clearly visible. In such cases, a different efficient form of connection between the appointed worker and the machine operator must be ensured. To ensure connection between the appointed worker and the machine operator, we recommend using hand signals.

Hand signals for the machine operator may only be given by persons who:


- are trained for these purposes,
- have proven participation in such training,
- can furnish a certificate of such activity to the user.

When using hand signals, the following principles must be adhered to:


- signals between the appointed worker and the machine operator, given by hand, can only be used in cases when environmental conditions enable visual contact,
- the machine operator must be trained in the used signals before putting the machine into operation,
- during the operation of the machine only a limited number of signals must be used to avoid any misunderstanding between the appointed worker and the machine operator.

EXAMPLES OF HAND SIGNALS:


Start the engine

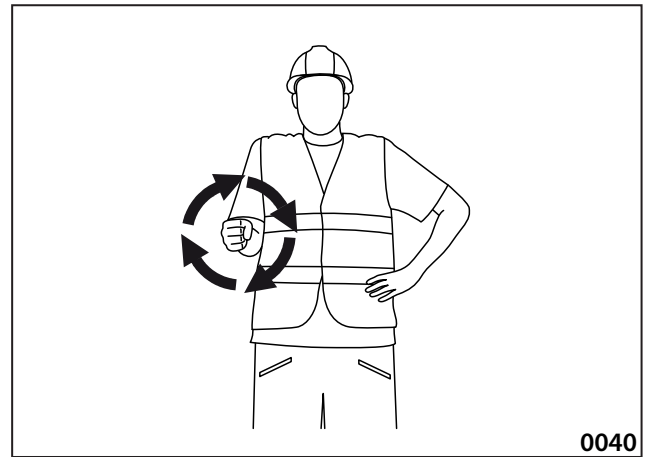


Turn off the engine

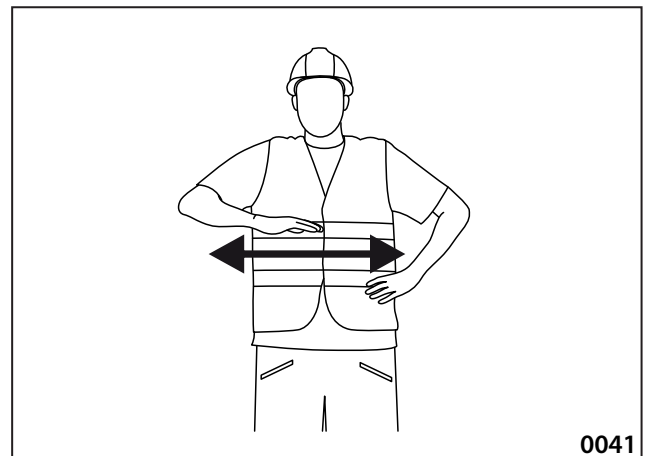

Stop

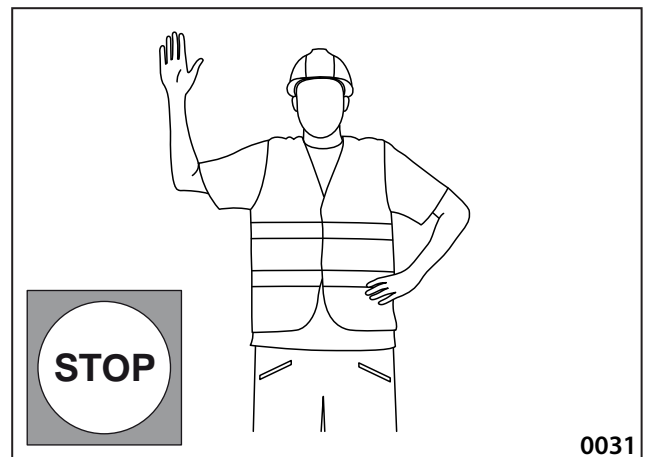


Watch out

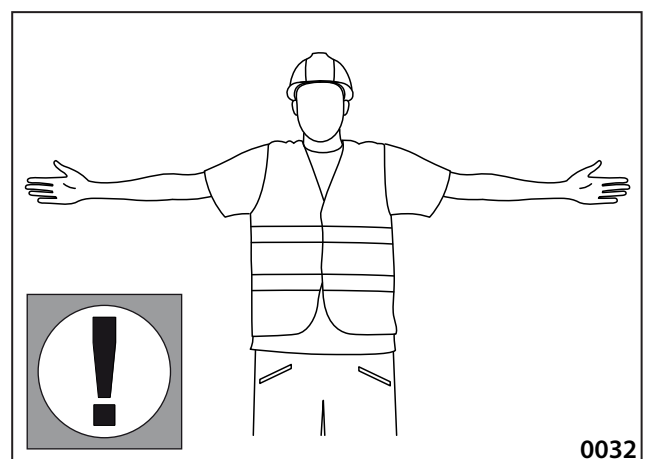


2.1 Main safety precautions


Watch out, danger

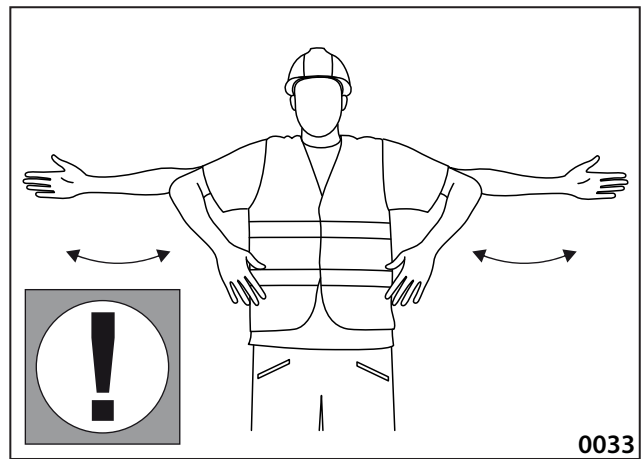


Machine travel

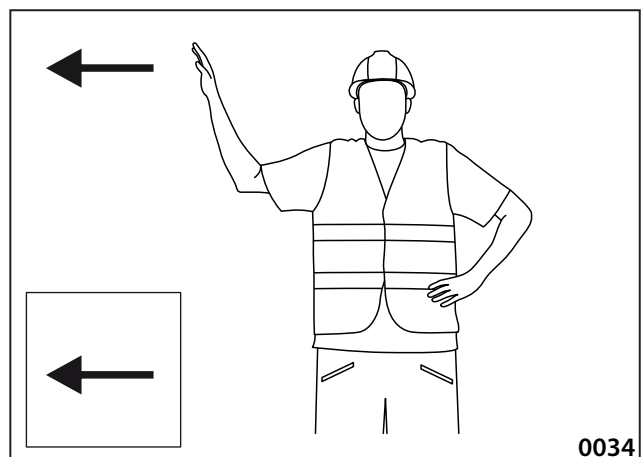


Drive slowly forward – towards me

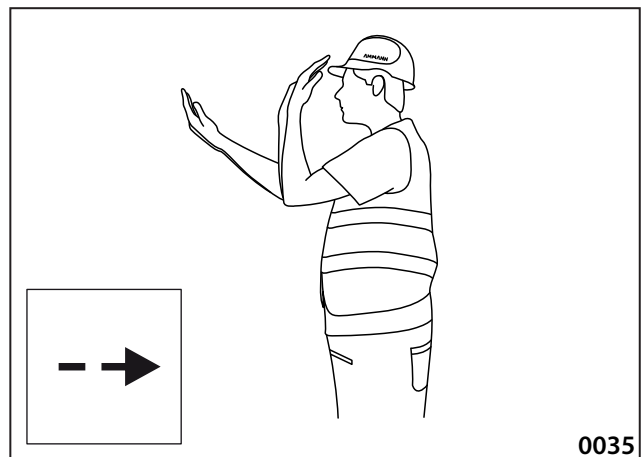


Drive slowly backward – away from me

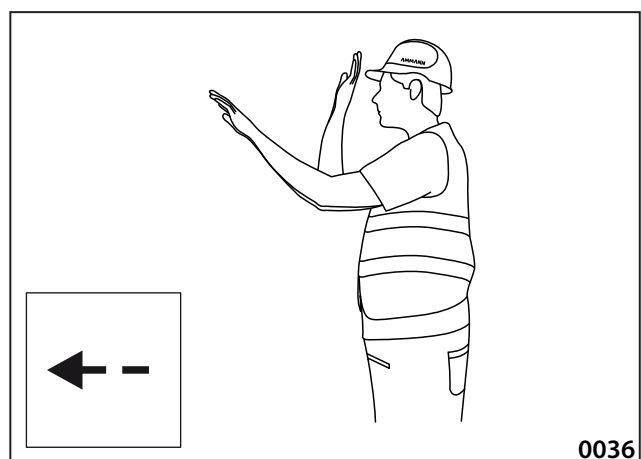


Machine travel – to the right

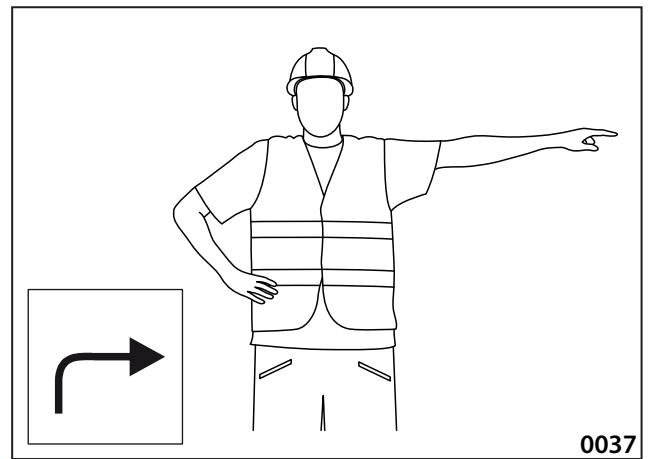

Machine travel – to the left

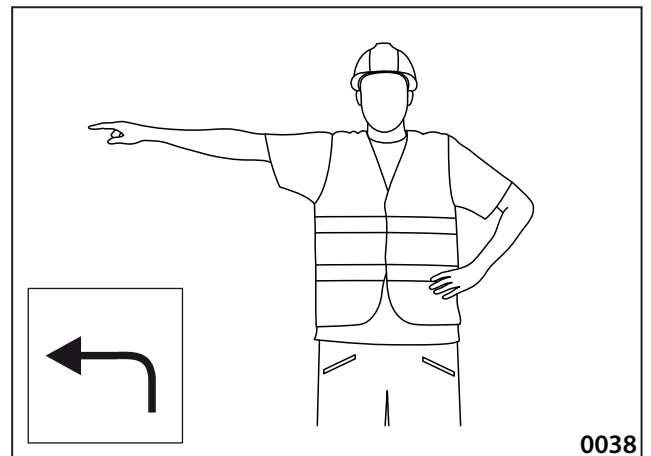


Machine travel for a short distance

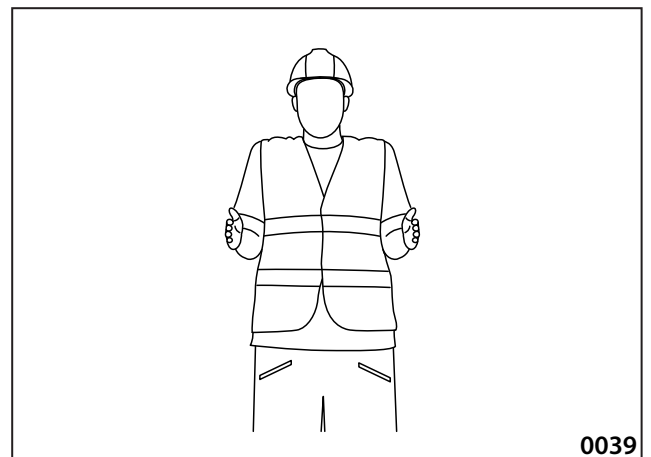

2.1 Main safety precautions

2.1.10 Safety notices and symbols used on the machine

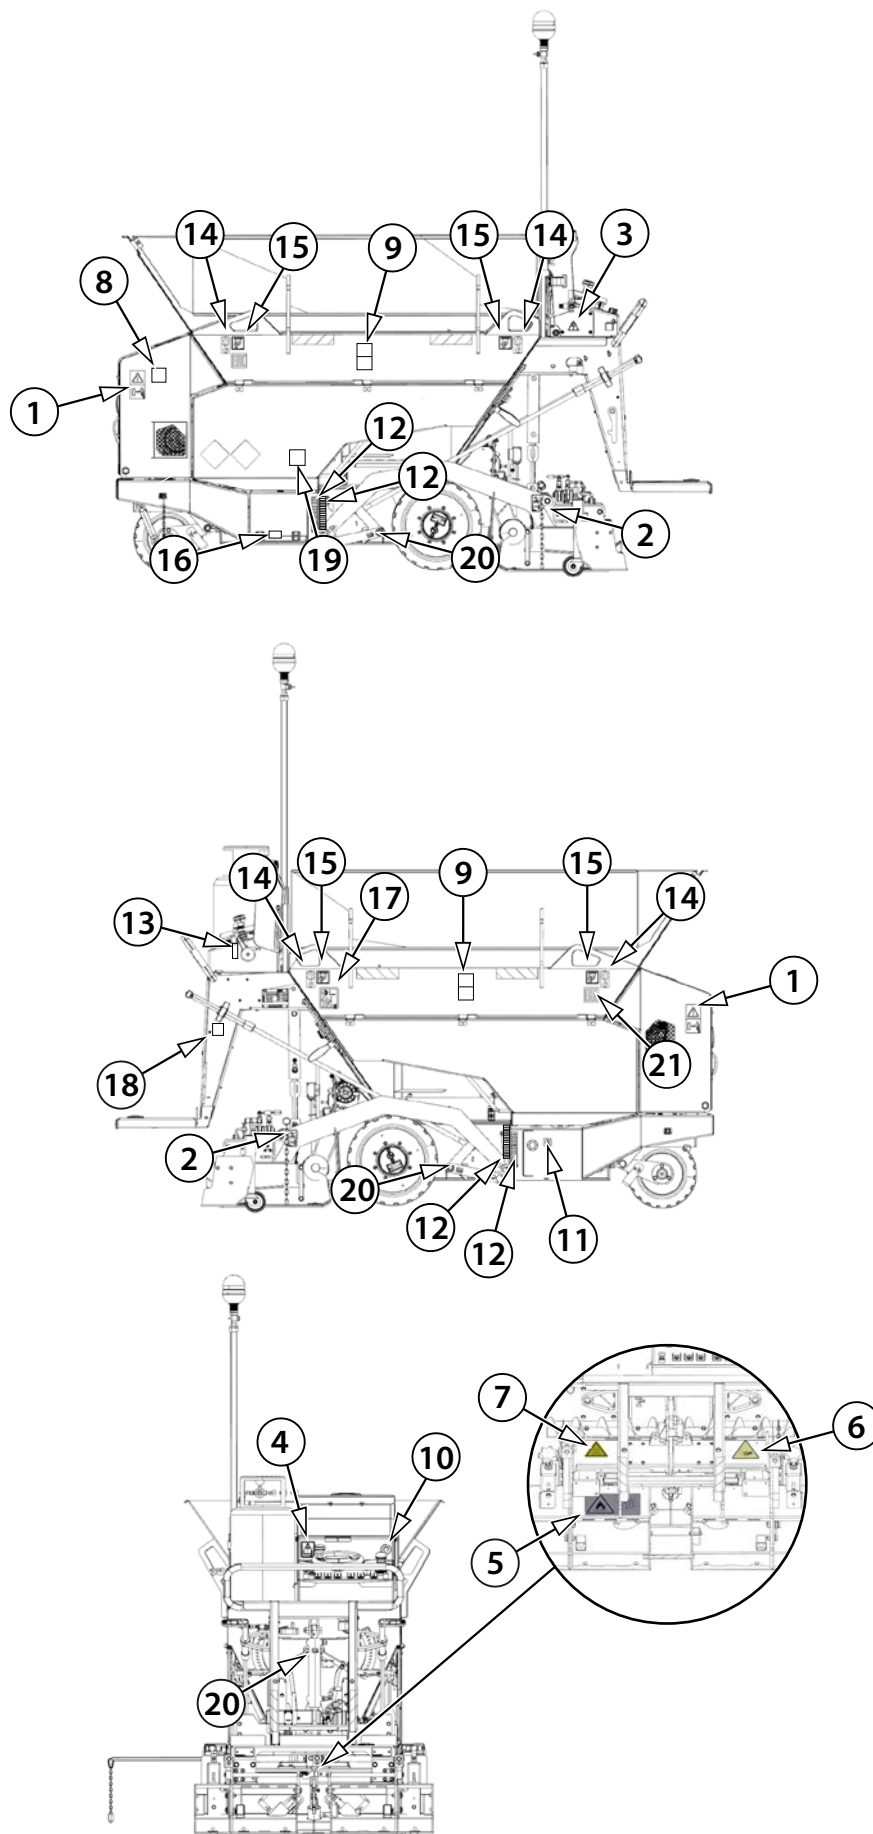

D451034B

1

Danger zone



2942bz

Keep a safe distance!

2

Danger of injury due to augers.



0045

Keep a safe distance!

3

Risk of injury and electric shock.



0019

There is a risk of electric shock.

4

Read the operating manual



2946bz

Get perfectly familiar with the machine operation and maintenance according to the Operating Manual!

5

Danger of injury!



1166732

Liquid gas is easily flammable. Overheated parts may cause a fire.

Maintain the safe distance from very hot parts. Before performing work, wait until the parts cool down.

6

Danger of injury and accident by squeezing during screed movement.



0026

There is a danger of injury and accident by squeezing during screed movement.

Never come close to the screed when it moves. Keep the prescribed and safe distance from the screed of the machine.

7

Risk of burns from hot surfaces



0026a

Maintain the safe distance from very hot parts. Before performing work, wait until the parts cool down. Wear protective gloves.

8

Refuelling



2151

9

Risk of burn



2586bz

Do not touch hot parts of the machine unless you make sure that they have cooled down sufficiently.

2.1 Main safety precautions

10

Hearing protection



Dangerous noise level! Use hearing protection.

11

Hydraulic oil level



12

Paving thickness scale



Indication of the paving thickness.

13

Speed controller position



Indication of the speed controller for engine speed adjustment.

14

Lifting hole



Only use these points to lift the machine.

15


Tie-down attachment point



Tie-down the machine for transport at these points only.

16

Battery disconnecter

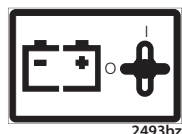

It serves for disconnecting the electrical wiring of the machine.

17

Emitted noise



External noise of the machine.

18

Fire extinguisher.



Mounting place for a manual fire extinguisher. Always have a manual fire extinguisher ready on the driver's stand. Perform maintenance of the manual fire extinguisher in prescribed intervals. Immediately replace any damaged or depleted manual fire extinguisher.

19

First-aid kit



Identification of the place for depositing the first-aid kit.

The machine must be equipped with the first-aid kit according to the national regulations for first aid measures.

20


Lubrication points



Lubrication points on the machine equipped with a grease nipple.

21



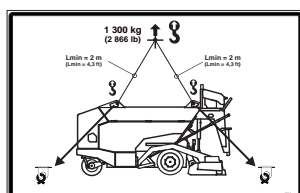





Lifting diagram



To lift the machine, use binding means of sufficient loading capacity.

2.1.11 Personal protective equipment

The machine operator, technical administrators, service technicians and workers present at the workplace must use personal protective equipment during operation and maintenance of the machine:

1.	 0001	Wear work clothes (antistatic protective clothes).
2.	 0008	Wear work shoes (antistatic protective shoes).
3.	 0030	Wear a warning vest.
4.	 0007	Use a protective helmet.
5.	 0002	Use hearing protection.
6.	 0004	Use a dust protection mask (with a filter against organic gases and vapours, type A, AX).
7.	 0005	Use safety glasses or a safety shield.
8.	 0003	Use protective gloves (suitable for low temperatures).

2.1 Main safety precautions

2.1.12 General safety precautions

Always use personal protective equipment such as work clothes, work shoes, a warning vest, a protective helmet, hearing protection and if necessary also a dust protection mask, safety glasses or a safety shield and protective gloves.

Keep away from the moving parts of the machine. Loose clothes, jewellery, watches, long hair and other free or hanging objects can be trapped in moving parts of the machine.

Get on and off the machine only at places with stairs and railing. When getting on/off the machine, you have to have both hands free. Do not use controllers, hoses or other parts of the machines as handles.

Soiled or slippery stairs, ladders, handles, galleries or platform can cause a fall. Ensure these surfaces are clean.

If it is impossible to use parts intended for getting on/off the machine for doing so, use an external platform which meets the valid safety requirements according to respective national regulations.

It is prohibited to get on/off the moving machine.

It is prohibited to jump down of the machine.

Keep the safety and operating plates situated on the machine clean. All safety and operating plates must be visible. Replace damaged plates with new ones.

Before starting to work, check all parts of the machine, covers and safety elements for proper mounting.

Before starting to work, tidy all loose objects which are not a part of the machine.

Unauthorised persons are prohibited to get on the machine.

The machine operator must not leave the driver's stand during travel of the machine.

Before starting to work:

- check the fire extinguisher,
- check all safety devices on the machine for proper operation,
- check performance of all tasks of the regular maintenance,
- remove all dirt from the machine,
- check the whole machine and all additional equipment for correct operation and functioning,
- check the control elements and brakes for correct functioning,
- if you detect any problem during inspection before starting to work, inform the machine user.



It is prohibited to operate the machine if any defects are found, if the machine is incapable of operation and if all safety conditions for machine operation have not been met.

2.1.13 Safety precautions during machine operation

Before using the machine or its equipment, make sure that nobody is present in the dangerous zone of the machine.

Sound the horn.

Observe warnings, safety messages and signals indicated by the machine.

Remember that operating fluids of the machine are flammable. When using them, proceed according to instructions described in this Operating Manual or according to the instructions for use on the product package. Store the containers at a cool, well-ventilated place, inaccessible to unauthorised persons. Dispose of containers according to respective national regulations. Never use operating fluids near smouldering or burning materials, open fire or sparks.

Do not operate the engine of the machine in closed spaces without ventilation capable of exhausting harmful exhaust gases.

Be especially careful, do not place your head, body and/or arms near belts, rotating blades or fans.

The machine must never be used for towing other machinery.

When driving the machine on public roads observe the road traffic routes according to the valid national regulations.



It is prohibited to operate the machine on the slope with inclination and side static stability higher than stated in this Operating Manual.

2.1.14 Safety and fire precautions during the use of gas bottles

The machine user must ensure and hand over to respective authorised workers any and all information for the safe use and handling of gas bottles if they form part of the equipment during the operation of the machine always in compliance with respective national regulations.

The machine operator and appointed workers must be regularly trained in terms of the use, handling and storage of gas bottles according to valid national regulations.

Safety during the use of gas bottles

Bottles can only be handled, transported and stored by workers over 18 year old, physically fit, authorised for the given activity and provably trained and tested in a written form according to respective national regulations.

Gas bottles must be stored in an area intended for that purpose and secured against falling.

Manufacturers or importers of gas bottles shall issue a material safety data sheet to the given product according to respective national regulations.

Material safety data sheet

Material safety data sheets may give information about:

- gas/gas mixture identification and manufacturer or importer
- product specification and its composition
- potential hazards
- first aid measures
- firefighting measures
- gas leakage measures
- instructions for handling and storage
- instructions about personal protective equipment
- physical and chemical properties
- toxicity and ecological information
- instructions for disposal
- transport instructions

Safety fire precautions during the use of gas bottles

During the operation of the machine equipped with a gas bottle, the machine must also be equipped with a prescribed fire extinguisher according to respective national regulations. This also applies to storage of gas bottles.

Prescribed fire extinguishers must be placed and maintained in the proper condition and regularly checked according to respective national regulations.



Stop the gas leakage.

In case of gas leakage, inform relevant national authorities.



Propane-butane (LPG) is an extremely flammable substance and any leakage causes a high risk of fire or explosion!

Propane-butane (LPG) is heavier than air and may accumulate in lower situated places – danger of fire!

Gas inhalation may cause headache, weakness, confusion, dizziness and nausea. It causes frostbites in the liquid state in contact with skin!

Avoid contact with skin. Wear suitable protective clothing!

Wear protective gloves resistant to oil substances complying with EN374!

Wear safety goggles!

In case of excess of vapour concentration limits in air, use a suitable breathing mask. Recommended: organic fume and vapour filter (type A, AX)!

No smoking at work.

Provide adequate area ventilation!

Always require a material safety data sheet to the delivered gas bottle. Before mounting the gas bottle on the machine, read and check that the gas bottle meets all conditions for putting the machine into operation.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

When the machine is operated in underground garages or other underground areas, observe the national safety regulations regarding space ventilation.

First aid instructions

General

Loosen tight clothes of the injured and keep him/her warm and still. If unconscious, place in recovery position and get medical attention immediately. If they are unconscious and do not breathe, ensure passability of air passages. In case of cardiac arrest, provide heart massage and get medical attention. If unconscious and breathing, place in recovery position and get medical attention immediately.

Inhalation

Move the exposed person out to fresh air and do not leave them unattended. Keep them warm and still. Get medical attention.

Skin contact

In case of occurrence of frostbites, get medical attention. Use clean gauze to treat frostbites. Do not use any ointments and powders!

Eye contact

Immediately flush eyes with plenty of water, occasionally lifting the upper and lower eyelids. Check for and remove any contact lenses. Continue rinsing for at least 20 minutes. Get medical attention.

2.1 Main safety precautions

2.1.15 Safety precautions for the use of portable fire extinguisher

A portable fire extinguisher must comply with requirements of EN 3-7+A1.

The machine user must ensure and hand over to the appointed workers any information on the use and handling of portable fire extinguishers.

A portable fire extinguisher is compulsory machine equipment.

Recommended portable fire extinguisher (according to EN 500-1+A1/ para. D.3.10):

- powder fire extinguisher, Class B and C with the capacity of 6 kg.
- Fire rating 13A – 113B – C

A portable fire extinguisher does not form part of delivery of the machine. Equip the machine with a portable fire extinguisher according to the national regulations and mount it to the designated place at the driver's stand.

Regularly review how to operate the portable fire extinguisher. Operating instructions for the fire extinguisher are given on the fire extinguisher.

Replace the fire extinguisher after use and shortly before the maintenance interval elapses or its work life.

Maintenance intervals and fire extinguisher expiration date are defined by national regulations.

Start extinguish using a fire extinguisher just at the centre of the fire. The total extinguishing time (period of powder release) is only a few seconds.

Inspection of portable fire extinguisher

Check the contents of the portable fire extinguisher. If the content does not comply with specification, replace the fire extinguisher for another one with the correct content.

Check the validity of the portable fire extinguisher. In case of expiry of its validity, replace the fire extinguisher for a new one.

Check that the fire extinguisher is not damaged. In case of damage, replace the fire extinguisher for a new one.

Check that a seal of the portable fire extinguisher is undamaged. In case of damaged or missing seal, replace the fire extinguisher for a new one.



A portable fire extinguisher does not form part of delivery of the machine. Equip the machine with a portable fire extinguisher according to the national regulations and mount it to the designated place on the machine.

It is prohibited to operate the machine without a portable fire extinguisher.

Regularly review how to operate the portable fire extinguisher. Operating instructions for the fire extinguisher are given on the fire extinguisher.

Perform regular maintenance and testing of fire extinguishers according to national regulations.

2.1.16 Safety and fire precautions during welding on the machine

The machine user shall ensure that all welding works on the machine are only performed by qualified and professionally trained personnel with regard to work safety during welding in compliance with respective national regulations.

Safety risks during welding:

- risk of electric shock
- risk of burning
- risk of injury by splashing of metal and fragments of slag
- risk of action of harmful substances during welding
- risk of radiation during welding.



Before any welding works, the gas bottle must be removed from the machine.

When performing electrical arc welding on the machine, disconnect all electrical equipment and electrical installations of the machine.

When performing electrical arc welding the welding machine and the machine on which welding is performed must be properly grounded.

Any welding works on the machine can only be performed by qualified and professionally trained personnel with the valid authorisation for welding.

Observe work safety during welding in compliance with respective national regulations and ensure fire safety measures before any welding on the machine.

2.1.17 Safety precautions for electrical and electronic equipment of the machine

- The machine is equipped with electrical wiring, components and electronic equipment, the operation of which can be interfered by external sources of electromagnetic radiation.
- This equipment is safe if operated in compliance with instructions given in this Operating Manual or other documentation supplied with the machine.

Please observe the following safety instructions concerning electrical and electronic equipment of the machine:

- Check the delivered goods for any damage immediately after delivery,
- Do not use damaged parts and instruments,
- Damaged electrical wiring and sockets represent a high safety risk and must not be used,
- In such cases, contact your local dealer or DYNAPAC. They will provide you with new undamaged parts.



Before installation and operation of instruments, make yourself familiar with and carefully read entire Operating Manual to these devices.

If you do not understand any part of the supplied Operating Manual or the instructions are unclear to you, contact your local dealer or DYNAPAC before putting the machine into operation.

In order to ensure smooth operation of DYNAPAC machinery, use only original spare parts supplied by DYNAPAC for repairs.

DYNAPAC does not assume any liability for additionally mounted equipment which is not authorised by DYNAPAC.

DYNAPAC assumes no responsibility in cases when the machine is operated incorrectly by not adhering to the instructions given in this Operating Manual, which may result in an injury or death, damage to the machine, property or environment.

Safety precautions

Electrical installations and wiring must be connected properly and according to data given in this Operating Manual.

Entire electrical wiring and connection components must be have adequate current rating within the meaning of valid regulations and they must meet requirements of respective national regulations.

All devices are only intended for industrial use and tested accordingly.

Observe all instructions for control and installation of electrical and electronic equipment according to this Operating Manual.

Observe the correct polarity of connectors.

Ensure adherence to the prescribed supply voltage.

Check electrical wiring and connections of individual parts regularly with regard to trouble-free operation of the machine.

The machine is equipped with fuses, which protect electrical and electronic equipment of the machine from short circuit.

Observe prescribed values of individual fuses according to this Operating Manual or other documentation supplied with the machine.

Electrical and electronic equipment of the machine is not intended for operation in explosive environments.

Before starting works on electrical and electronic equipment of the machine when removing defects, always disconnect electrical wiring of the machine and instruments from the battery using a disconnecter. Failure to adhere to these instructions exposes you to a danger of injury of the machine operator and danger of damage to electrical and electronic parts of the machine.



It is prohibited to interfere in any manner with electrical and electronic parts of the machine. Special repairs can only be performed by an authorised service centre.

It is prohibited to use free connectors to connect other devices.

2.1 Main safety precautions

2.1.18 Prohibited activities

This chapter deals with main prohibited activities during operation, work, repairs and maintenance of the machine.

Guarantee and warranty claims cannot be applied in the following cases:

- faulty operation of the machine,
- insufficient or incorrectly performed maintenance of the machine,
- use of incorrect operating fluids,
- use and operation of the machine for other purposes than the ones stated in this Operating Manual.



Failure to observe these prohibited activities may affect potential assessment of a claim and further continuation of warranty claims and warranty for the machine, which has been issued by the manufacturer - DYNAPAC.

DYNAPAC does not assume any liability for additionally mounted equipment which is not authorised by DYNAPAC.

DYNAPAC assumes no responsibility in cases when the machine is operated incorrectly by not adhering to the instructions given in this Operating Manual, which may result in an injury or death, damage to the machine or property.

Prohibited activities during machine control:

- The machine operator must not operate the machine without personal protective equipment.
- The machine operator must not leave the operator stand during operation of the machine.
- The machine operator may not operate the machine if he does not have a sufficient overview of the workplace and potential obstacles are not clearly visible. In such cases, a different efficient form of connection between the appointed worker and the machine operator must be ensured. To ensure connection between the appointed worker and the machine operator, we recommend using hand signals.
- The driver must not operate the machine under reduced visibility or at night unless the machine's working area and the workplace are illuminated sufficiently.
- The machine operator must not use the machine after drinking alcoholic beverages and/or using drugs.
- The machine operator must not operate the machine in a different way than stated in this Operating Manual.
- The machine operator must not transport other people on the machine, except for people appointed by the machine user.
- The machine operator must not operate the machine in the protective zone of electrical grid and transformer stations without observing respective national regulations.
- The machine operator must not cross electric cables if they are not properly protected against mechanical damage.
- The machine operator must not leave the machine or move away from the machine without taking measures to prevent its operation or spontaneous movement according to this Operating Manual.

Prohibited activities during machine operation:

- Operating the machine without personal protective equipment.
- Operating the machine if any defects are found, if the machine is not serviceable and if all safety conditions for machine operation are met.
- Operating the machine if its operation endangers safety of people, its technical condition and property.
- Operating the machine if any safety devices, e.g. an emergency brake of the machine, are dismantled or damaged.
- Operating the machine when any of the operating fluid levels is low.
- Operating the machine with leaking oil, fuel, coolant or other operating fluid.
- Operating the machine on the slope with inclination and side static stability higher than stated in this Operating Manual.
- Operating the machine in explosive environment.
- Starting the engine in a different way than stated in this Operating Manual.
- Using the function of the emergency brake of the machine to switch off the engine during machine operation when there is no danger threatening people or the machine.
- Transporting and storing tools and other objects at the driver's place.
- Transporting and storing objects at places inside the machine which are not intended as deposition boxes.
- Transporting and storing cloths soaked with flammable substances and flammable liquids in/on the machine.
- Using diesel instead of an anti-adhesion solution to ensure non-adherent surface of the hopper area.

Prohibited activities during repairs and maintenance of the machine:

- Performing maintenance, cleaning and repairs without personal protective equipment.
- Performing maintenance, cleaning or repairs with the machine not secured against spontaneous movement or accidental start, and if a person can come in contact with moving parts of the machine.
- Failing to observe prescribed machine maintenance intervals.
- Failing to observe or omitting instructions at repairs and maintenance of the machine stated in this Operating Manual.
- Repairing or maintaining the engine in a different way than according to prescribed tasks in this Operating Manual; special repairs can only be performed by an authorised service centre.
- Disabling safety, protective or locking systems or altering their parameters.
- Removing impurities by high-pressure cleaners.
- Removing impurities during machine operation.
- Touching moving parts of the machine with the human body or items and tools held in hands.
- Smoking or handling an open flame when checking and pumping fuels, replacing or refilling operating fluids, lubricating the machine, inspecting and refilling the battery.
- Only an authorized service centre can interfere in any manner with electrical and electronic parts and cable harnesses, the machine is equipped with and carry out special repairs.
- Using free connectors to connect other devices.
- Performing any modifications on the machine without the prior written consent of the manufacturer DYNAPAC.
- Performing maintenance and repairs of the machine using non-original parts.

2.2 Preservation and storage

2.2.1 Storage places and storage conditions

The machine can be stored under a shelter or in an open-air space. The machine can be stored in closed unheated areas or in closed air-conditioned areas as well.

Before the machine is stored, it must be checked and its preservative treatment must be verified.

The stored machine must be placed horizontally on a flat and solid surface,

If the machine is equipped with tyres, it must be stored horizontally on supports so that the clearance between the bearing surface and tyres is not less than 80 mm (3.15 in).

Access holes, fuel fill holes, exhaust pipes and other holes, through which atmospheric precipitations can penetrate in internal cavities of parts of the individual components the machine, must be sealed hermetically with plugs, stoppers, caps, using waterproof adhesive tape and/or other special means.

Controls must be adjusted in such positions, in which there is no danger that the machine starts operating.

If the machine is equipped with a safety cover of the dashboard, this cover must be secured to prevent the machine from operating.

If the machine is equipped with a cab, the cab must be locked to prevent the machine from operating.

The key must not be in the ignition box of the machine and the battery disconnecter must be in the position "OFF".

Terminals of the battery must be disconnected. The electrolyte level must correspond to recommendations of the manufacturer.

If the machine is stored for a time interval longer than 2 months, the batteries must be removed from the machine and stored in special areas.

Operating fluids of the machine must be refilled up to the levels specified in this Operating Manual.



A machine stored for a time interval longer than 2 months must be checked regularly according to the following instructions:

- **every 6 months in mild climatic conditions,**
 - **every 3 months in tropical, cold, arctic and seaside conditions.**
-



Each of the machines, on which the preservative treatment was carried out, must be provided with instructions for removing the preservatives.

Instructions for removing the preservatives must specify procedures to remove the preservatives and procedures to reinstall the dismantled parts of the machine. Besides, a list of tools, instruments and devices must be specified, which are required for performing the working procedures.



The working procedures must contain safety precautions in accordance with relevant national regulations.

2.2.2 Preservation and storage of the machine for 1–2 months

Before storing the machine, clean and wash the whole machine.

Before putting the machine out of operation, start the machine to warm operating fluids up to the operating temperature. Then refill the operating fluids up to the levels specified in this Operating Manual.

Before preserving and storing, clean the machine from coarse impurities and wash.



Wash the machine only in areas with intercepting traps to intercept the contaminated water and detergents.



Park the machine on a flat solid surface in a safe area when there is no danger of damage to the machine by a natural disaster, e.g. landslides, floods and fire.

The following tasks must be performed first on the machine:

- stop the machine and turn off the engine
- turn off the battery disconnecter
- the machine hopper must be closed and locked
- the machine screed must be placed horizontally on a flat and solid surface
- the protective roof of the machine must be locked in the highest working position or adjusted in the lowest working position
- protective covers of the individual instruments and machine covers must be locked
- if the machine is equipped with a gas bottle, the gas bottle must be removed from the machine and stored in a special area.

Then it is recommended to perform the following tasks:

- repair damaged paintwork,
- service lubrication points according to instructions stated in the manual,
- check the pressure in tyres if the machine is equipped with wheels; protect the tyres from direct sunlight,
- check that the water tanks are drained if they are on the machine,
- check that the coolant has the desired antifreeze properties,
- check the batteries for charging and recharge them if required according to instructions of the manufacturer
- apply chemical preservatives on chromium-plated surfaces of piston-rods,
- we recommend you to protect the machine from corrosion by spraying a chemical preservative, particularly in areas where corrosion can occur.

If you treat the machine as above described, it is not necessary to prepare the machine in a special manner before it is put into operation again.

It is only necessary to wash the machine to remove applied chemical preservatives.



Wash the machine only in areas with intercepting traps to intercept the contaminated water and detergents.

2.2 Preservation and storage

2.2.3 Preservation and storage of the machine for a period over 2 months

Before storing the machine, clean and wash the whole machine.

Before putting the machine out of operation, start the machine to warm operating fluids up to the operating temperatures. Then refill the operating fluids up to the levels specified in this Operating Manual.

Before preserving and storing, clean the machine from coarse impurities and wash.



Wash the machine only in areas with intercepting traps to intercept the contaminated water and detergents.



Park the machine on a flat solid surface in a safe area when there is no danger of damage to the machine by a natural disaster, e.g. landslides, floods and fire.

The following tasks must be performed first on the machine:

- the machine hopper must be closed and locked,
- the machine screed must be put horizontally on a flat and solid surface,
- protective covers of the individual instruments and machine covers must be locked,
- the protective roof of the machine must be adjusted in the lowest working position,
- if the machine is equipped with a gas bottle, the gas bottle must be removed from the machine and stored in a special area.

Then it is recommended to perform the following tasks:

- repair damaged paintwork,
- service lubrication points according to instructions stated in the manual,
- check the pressure in tyres if the machine is equipped with wheels; protect the tyres from direct sunlight,
- check that the water tanks are drained if they are on the machine,
- check that the coolant has the desired antifreeze properties,
- remove the batteries from the machine; recharge them according to instructions of the manufacturer and store them in special areas,
- apply chemical preservatives on chromium-plated surfaces of piston-rods,
- we recommend you to protect the machine from corrosion by applying a chemical preservative, particularly in areas where corrosion can occur,
- protect all rubber parts of the machine with chemical preservatives,
- seal the holes, through which atmospheric precipitations can penetrate in internal cavities of parts of the individual components of the machine,
- Protect the head lamps and side rear-view mirrors with chemical preservatives,
- protect other elements of the external electrical installation using a special spray,
- preserve the engine according to instructions of the manufacturer of the engine and mark visibly that the machine has been preserved.



Never start the engine of the machine during storage!

A machine stored for a time interval longer than 2 months must be regularly inspected according to the following instructions, every 6 months in mild climatic conditions, every 3 months in tropical, cold, arctic and seaside conditions.

In order to protect components of a machine stored for a time interval longer than 2 months, during the regular inspections remove the chemical preservatives and put the machine into operation to rebuild the oil film in various hydraulic and mechanical parts of the machine. If you want to keep storing the machine in the long term, complete the preservation and storage procedure for the time interval longer than 2 months.

2.2.4 Removing chemical preservatives and putting the machine into operation

Each of the machines, on which the preservative treatment was carried out, must be provided with instructions for removing the preservatives.

Instructions for removing the preservatives must specify procedures to remove the preservatives and procedures to reinstall the dismantled parts of the machine. Besides, a list of tools, instruments and devices must be specified, which are required for performing the working procedures.



Always follow the working instructions for removing the chemical preservatives and procedures for reinstalling the dismantled machine parts. Observe safety precautions stated in the instructions for removing the chemical preservatives.



Wash the machine only in areas with intercepting traps to intercept the contaminated water and detergents.



After the preservation and storage of the machine for a time interval longer than 2 months, before the machine is put into operation, it is necessary to replace all filter and air elements according to instructions stated in this Operating Manual.

After the preservation and storage of the machine for more than 2 months, carry out the following tasks:

- unlock the machine hopper,
- unlock the protective covers of the individual instruments and covers of the machine,
- adjust the roof of the machine to the highest working position,
- if the machine is equipped with a gas bottle, mount the gas bottle on the machine.

Then it is recommended to perform the following tasks:

- service lubrication points according to instructions stated in the manual,
- check the tyres for pressure if the machine is equipped with wheels,
- check that the coolant has the desired antifreeze properties,
- mount the batteries on the machine; recharge them according to instructions of the manufacturer,
- clean the chromium-plated surface of piston rods from chemical preservatives,
- remove protective components of the hole seals, through which atmospheric precipitations can penetrate in internal cavities of parts of the individual components of the machine,
- remove protective components from headlamps and exterior mirrors of the machine,
- check parts of the electrical installation,
- remove chemical preservatives and protective elements of the engine according to instructions of the manufacturer of the engine.
- Remove all the chemical preservatives from the machine by washing.

2.3.1 Machine disposal after its service life


When disposing of the machine after its lifetime expires, the machine owner must observe relevant national waste disposal regulations and environment protection regulations.

Therefore we recommend you in such cases to always contact businesses specialising professionally in waste disposal.



DYNAPAC does not assume any liability in cases when the machine after its lifetime expires is disposed of in an improper way, which may result in damage to the property or environment.

2.4 Machine description


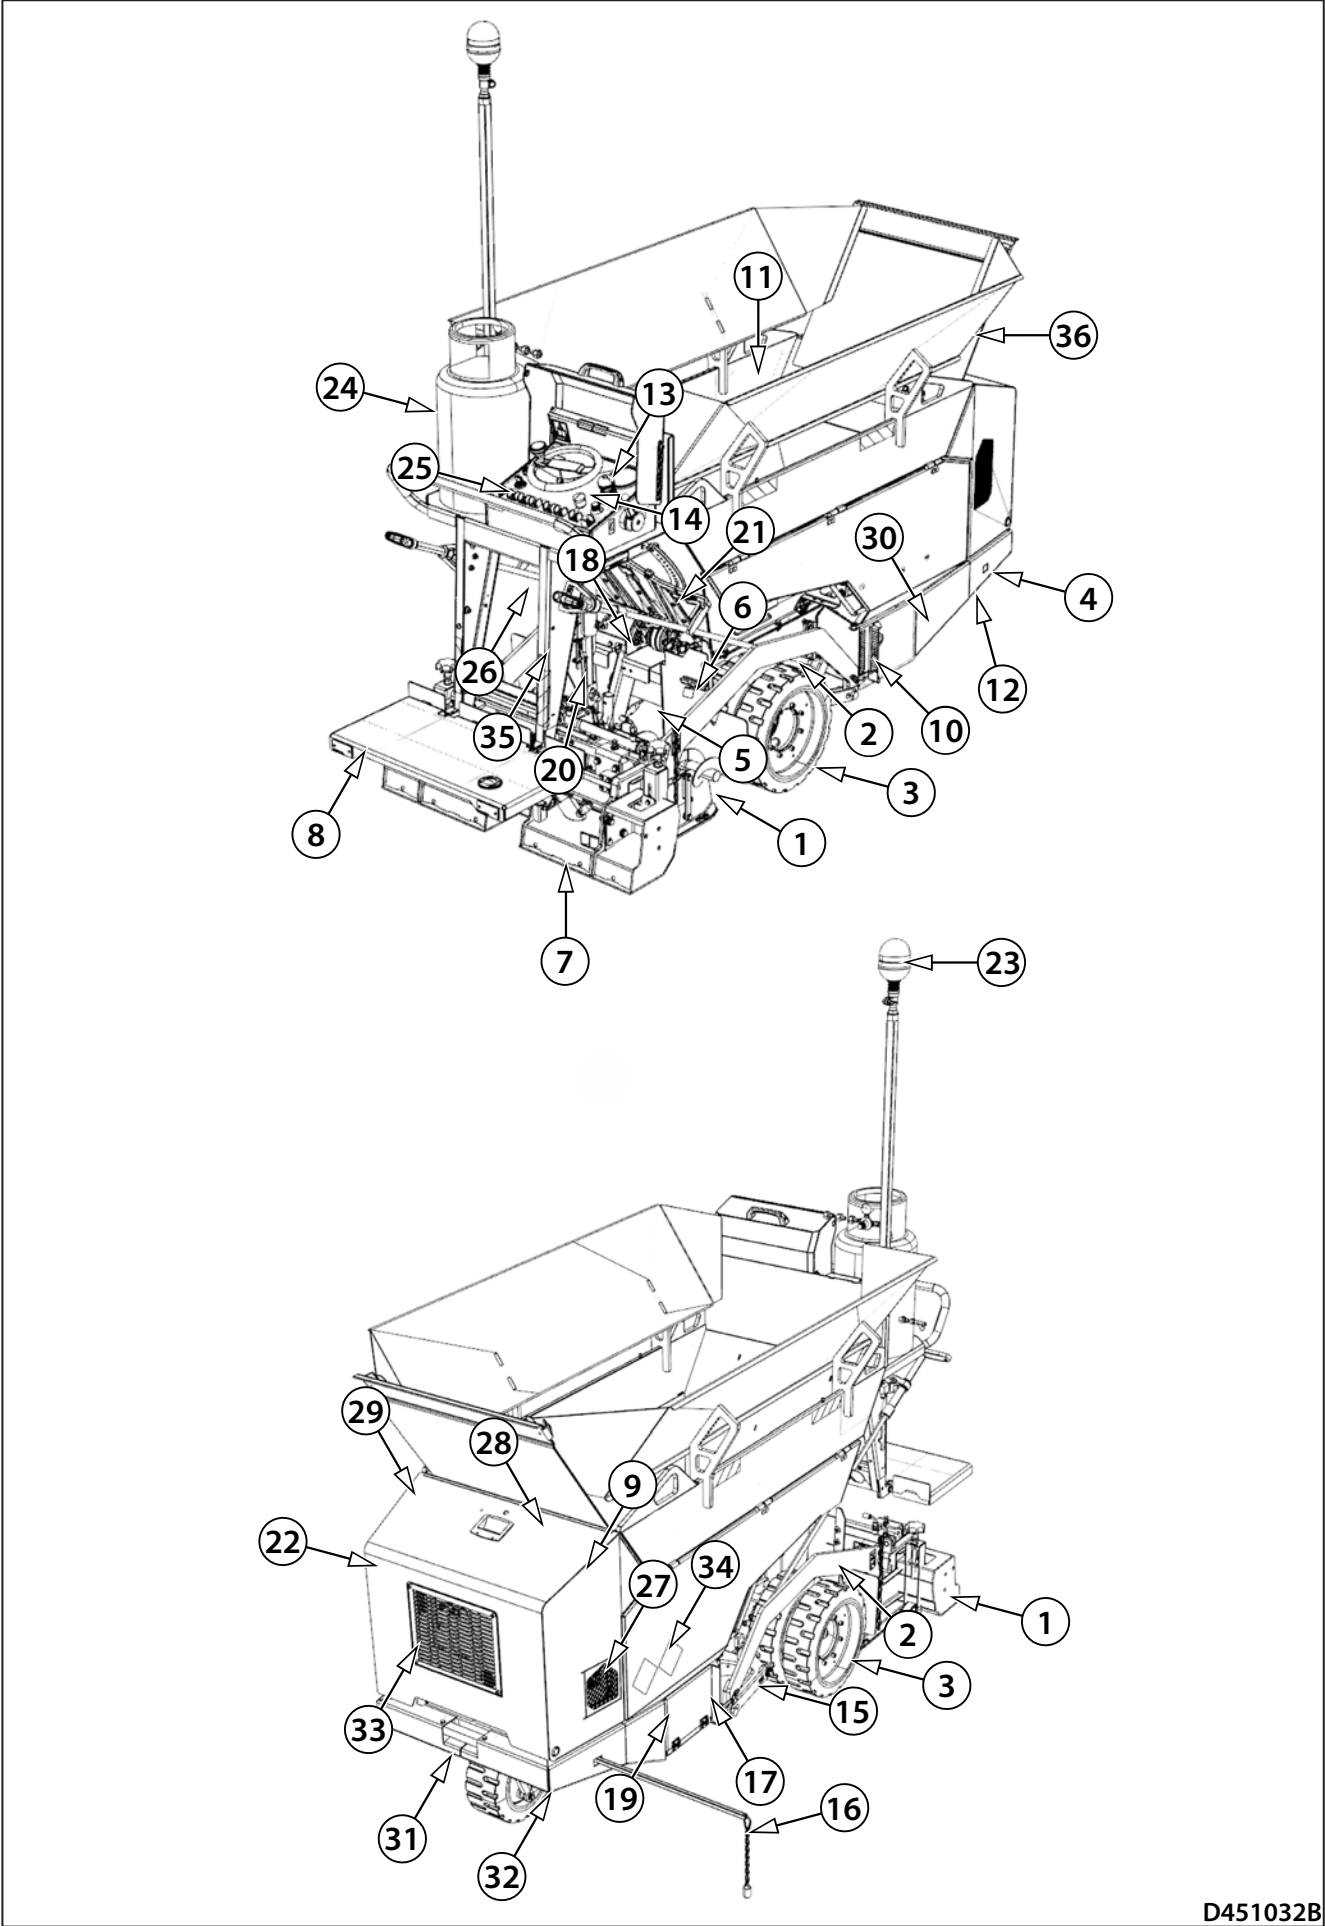


D451032B

2.4.1 Description of main parts of the machine and screed


1. Augers
2. Screed tow arm
3. Travel wheels
4. Machine frame
5. Belt conveyors
6. Screed lock
7. Screed
8. Tilting platform
9. Engine
10. Laying height indicator
11. Hopper
12. Exhaust
13. Main dashboard (Chapter 2.4.2)
14. Steering wheel
15. Tow point
16. Paving direction indicator
17. Battery disconnecter
18. Conveyor hydraulic motor
19. Battery
20. Screed linear hydraulic motor
21. Material outlet
22. Hydraulic pumps
23. Beacon
24. Gas bottle
25. Fuse box
26. Warning horn
27. Air filter
28. Fuel tank
29. Bonnet
30. Hydraulic tank
31. Lug for towing the machine
32. Conveyor tensioner
33. Combined cooler
34. Storage space for the first aid kit
35. Mounting place for a manual fire extinguisher.
36. Hopper extension

2.4 Machine description

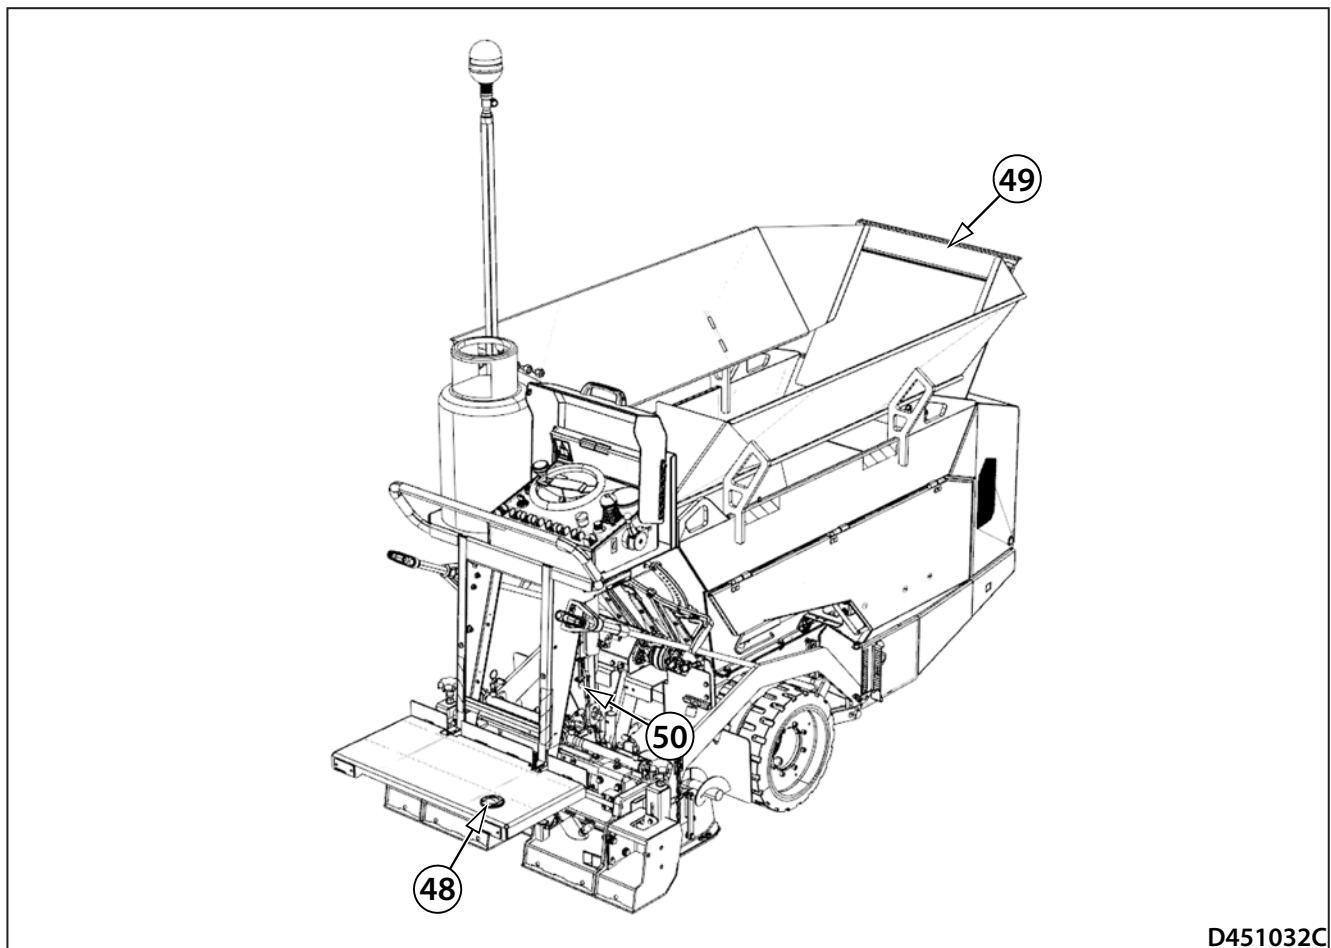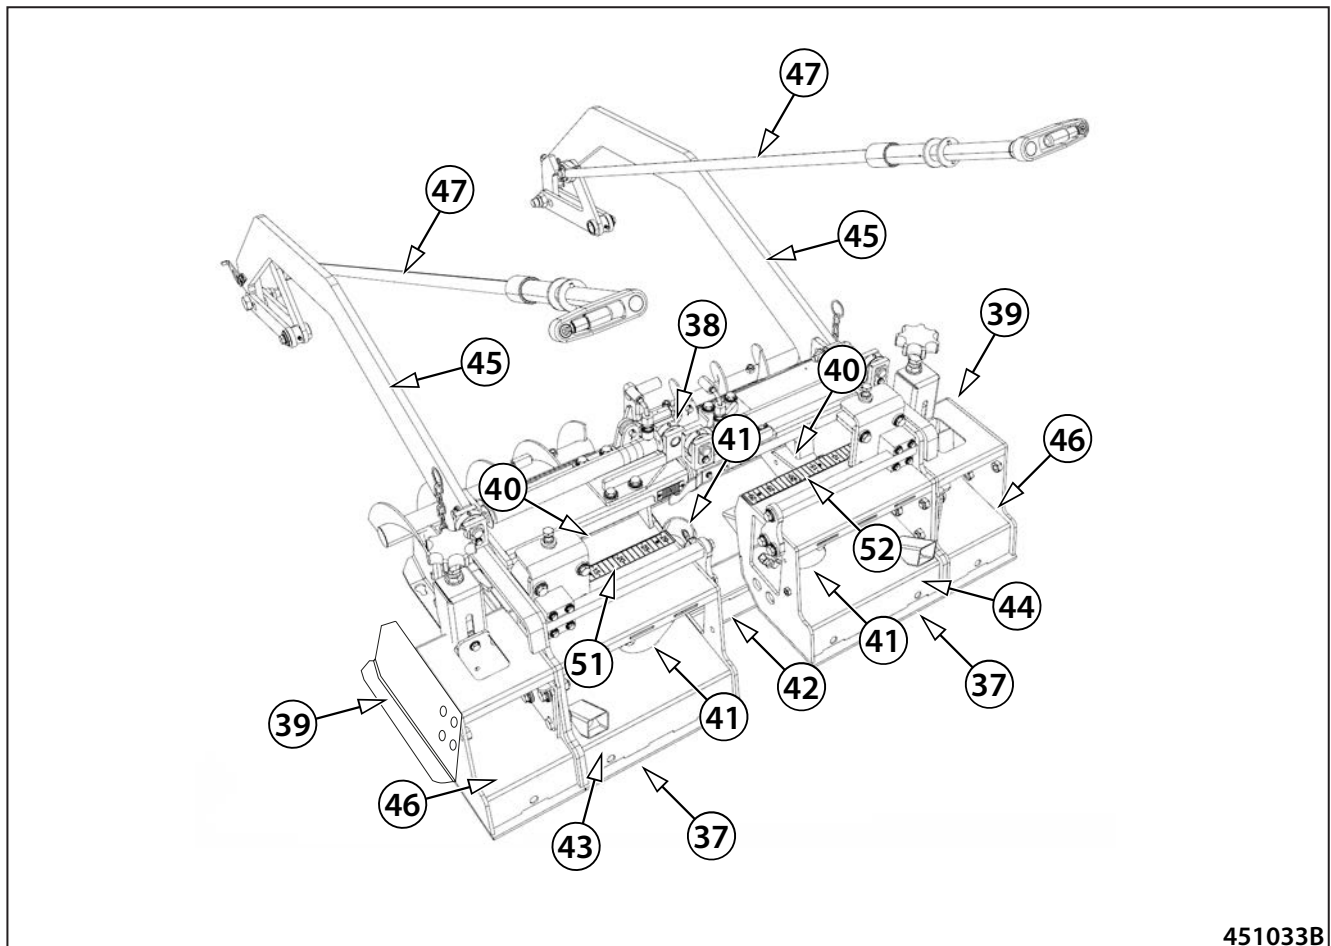

- 37. Roadway profile bottom plates
- 38. Crown adjustment
- 39. Screed end gate
- 40. Screed vibrators
- 41. Gas components
- 42. Main screed
- 43. Left screed extension
- 44. Right screed extension
- 45. Screed tow arm
- 46. Mechanical extension
- 47. Paving thickness controller
- 48. Foot switch
- 49. Hopper cover
- 50. Conveyor limit switch
- 51. Left indicator of paving width setting
- 52. Right indicator of paving width setting

2.4 Machine description

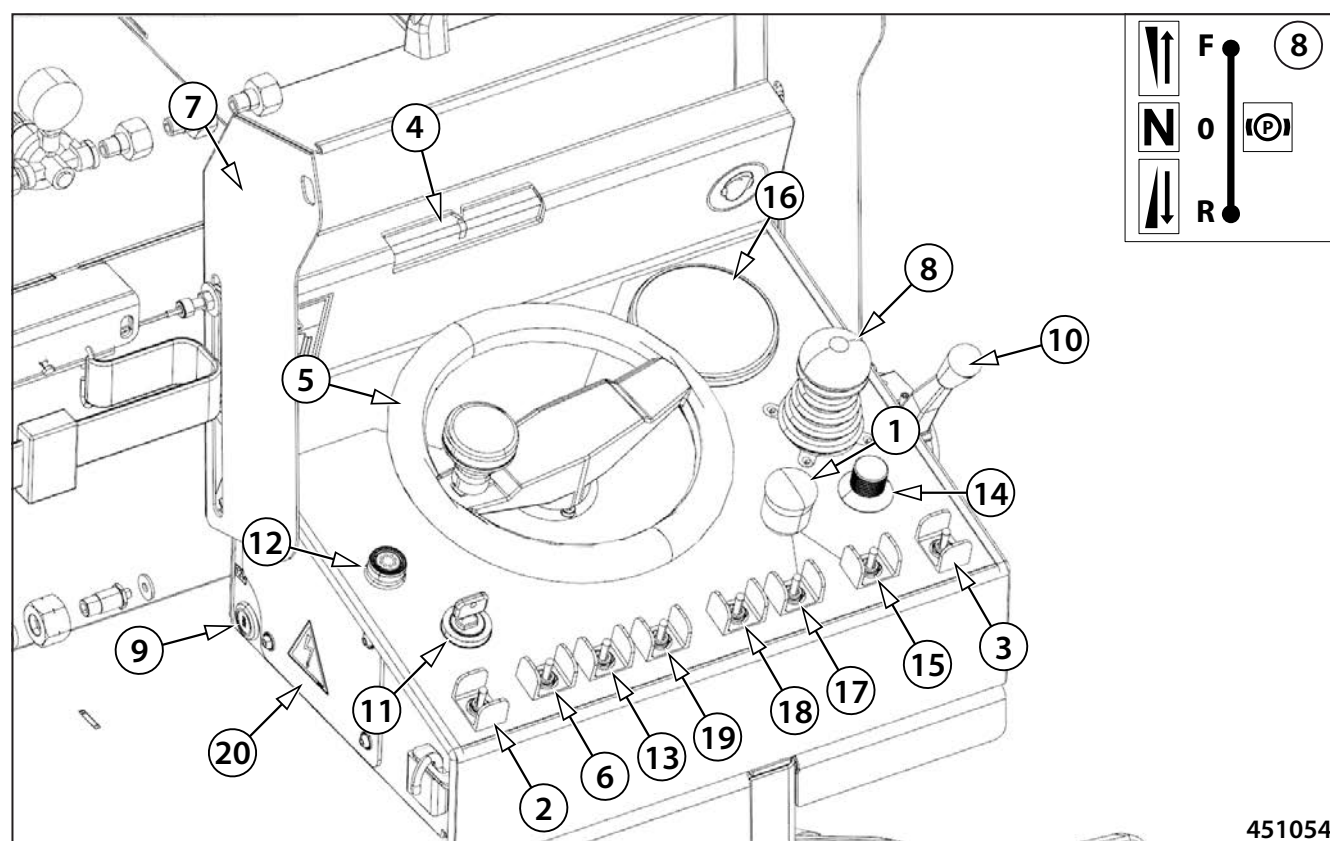

2.4.2 Main dashboard

1. Emergency switch
2. Paving width switch left
3. Paving width switch right
4. Front wheel turning angle indicator
5. Steering wheel
6. Vibration unit switch (optional equipment)
7. Safety cover
8. Travel controller
9. Mounting socket 12 V
10. Engine speed adjusting controller
11. Ignition box
12. Warning horn
13. Screed heating switch
14. Paving speed selector
15. Transport/operating mode switch
16. Display (Chapter 2.4.3)
17. Selector switch of the material delivery operating mode – MAN/AUT
18. Conveyor and auger direction switch
19. Screed lift/lower switch
20. Fuse box



Emergency switch (1)

Press the button to enable the machine emergency brake, which is indicated by lighting up the brake, emergency stop and charging indicator lamps on the display.

The machine stops moving and the engine stalls!



Paving width switch – left (2)

It serves for increasing/decreasing the paving width on the left side.

- Left – the left part of the screed is extended.
- Middle – neutral position.
- Right – the left part of the screed is retracted.



Paving width switch – right (3)

It serves for increasing/decreasing the paving width on the right side.

- Right – the right part of the screed is extended.
- Middle – neutral position.
- Left – the right part of the screed is retracted.

Front wheel turning angle indicator (4)

It shows the turning angle of the front wheel to the left or right.



Steering wheel (5)



**Vibration unit switch (6)
(optional equipment)**

It serves for turning on the vibration.

- Upper position – the vibration unit on
- Lower position – the vibration unit off

The vibration unit is only active in the operating mode when machine travels forward.

Safety cover (7)

Protection against vandalism and unauthorized use of the machine.



Travel controller (8)

The travel controller is used for braking the machine and setting the direction and speed of travel. The travel control is fitted with an arresting ring, which must be pulled up before the control is moved.


Travel controller positions:

N – Neutral – the machine is braked, idle engine speed set up

F – Forward travel

R – Reverse travel

That the machine is braked is signalled on the dashboard.



Mounting socket 12 V (9)

It is used for connecting a beacon, a mounting lamp or other equipment (12 V).



Engine speed adjusting controller (10)

The accelerator controller regulates the engine speed.

- Position up: standard speed (1,100 rpm)
- Position down: maximum speed (2,600 rpm)

To operate the machine, set the speed at maximum.



Ignition box (11)

Switch with three positions:

- Position "0" (with arresting): engine OFF.
 - No electrical devices are powered.
- Position "1" (with arresting):
 - All electrical devices are powered.
- Intermediate position: Engine pre-heating
- Position "2" (without arresting): Starting up of the engine



Warning horn (12)

2.4 Machine description



Screed heating switch (13)

It is used for turning on the screed gas heating.

- Upper position – turned ON
- Lower position – turned OFF



Paving speed selector (14)

Active only in the operating mode. The maximum speed in the operating mode is 0.6 km/h (0.37 MPH).



Transport/operating mode switch (15)

- Transport mode ("rabbit")
 - The material feed function to augers, vibration and screed lowering functions cannot be activated.
 - The maximum travel speed forward and backward is 2.5 km/h (1.55 MPH).
- Operating mode ("turtle")
 - The material feed function to augers, vibration and screed lowering functions can be activated.
 - The maximum travel speed forward is 0.6 km/h (0.37 MPH).
 - The machine backward travel function cannot be activated in the operating mode.



Selector switch of the material delivery operating mode – MAN/AUT (17)

- AUT – automatic mode of material delivery
 - the machine moves in the operating mode.
- MAN – manual mode of material delivery
 - turn over the conveyor direction switch (18) to the lower position (opposite the machine travel).



Conveyor and auger direction switch (18)

It serves for the operation of the material conveyor and augers. The function is only active in the operating mode.

- Upper position – reversing
- Central position – no material distribution
- Lower position – material distribution active




Screed lift/lower switch (19)

Toggle switch with 3 positions:


- Position up (without arresting): lifts the screed.
 - Set the travel controller to the neutral position.
 - Set the maximum engine speed.
- Central position (with arresting): screed lock; the screed will stay in its current position.
- Position down (with arresting): lowers the screed and the floating function.
 - Floating position – active only during travel of the machine in the operating mode.

Fuse box (20)


1Diagnostics connector

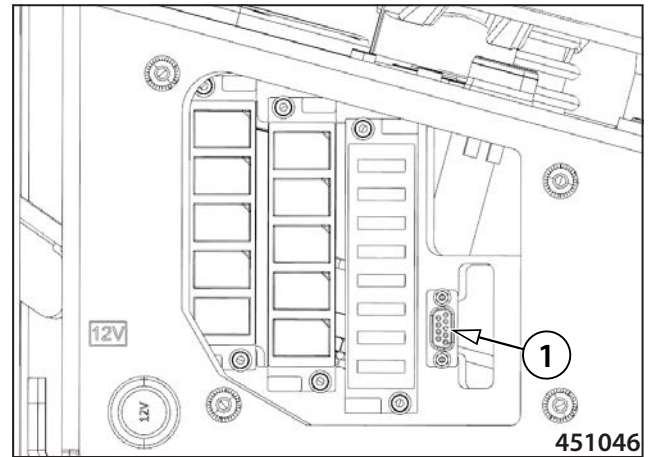


- | | |
|----|---|
| F1 | Fuse at the input of the power supply of the control unit..... (3 A) |
| F2 | Fuse at the output of the power supply of the control unit (25 A) |
| F3 | Oil cooler fan fuse (15 A) |
| F4 | Horn and reverse travel with horn fuse (5 A) |
| F5 | Fuse of beacon and auger area lighting..... (7.5 A) |
| F6 | Screed heating fuse..... (5 A) |
| F7 | Universal display fuse (2 A) |
| F8 | Fuse of the power supply of the electronics of the control unit (5 A) |

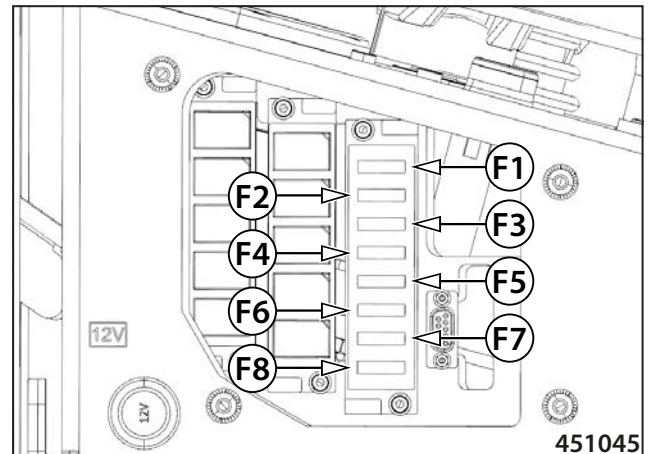

- | | |
|-----|---|
| K1 | Engine starting relay |
| K2 | Oil cooler relay |
| K3 | Horn relay |
| K4 | Relay of the warning acoustic signal of the reverse run |
| K5 | Warning beacon relay; |
| K6 | Screed heating relay |
| K7 | Not used |
| K8 | Not used |
| K9 | Not used |
| K10 | Screed heating relay |

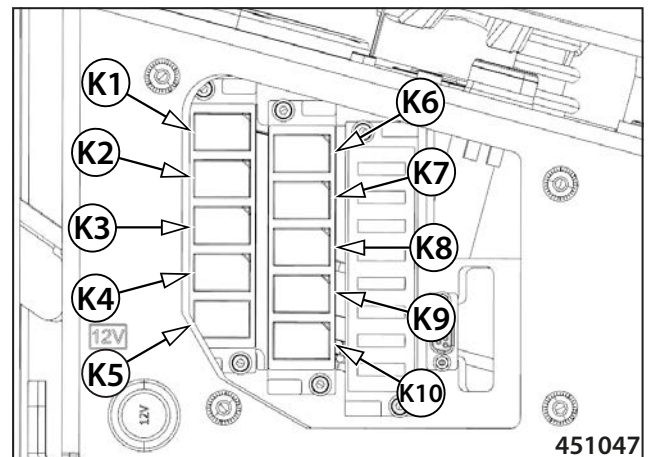

2.4 Machine description

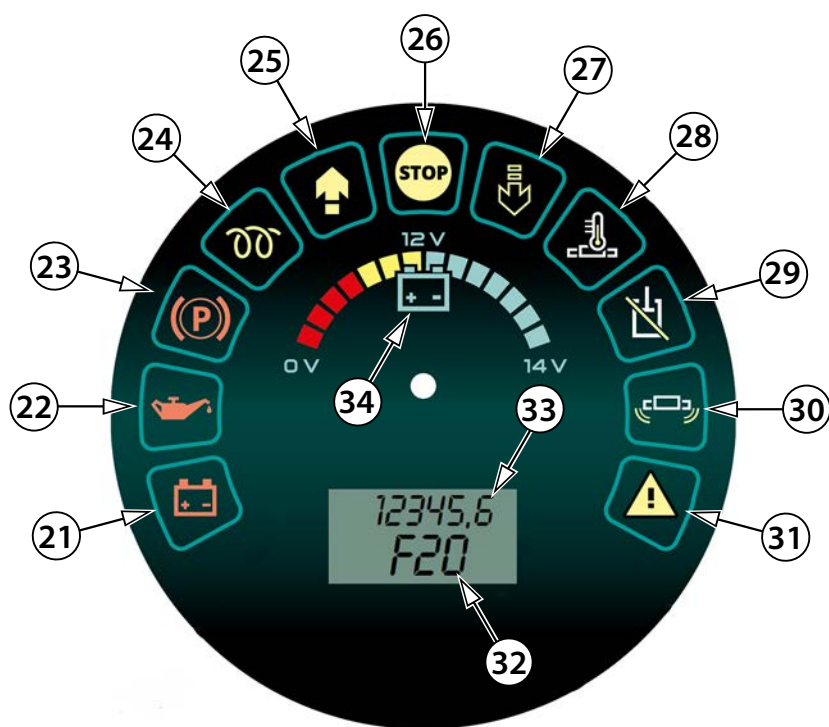

451055B

2.4.3 Display

- 21. Battery charging indicator lamp
- 22. Engine lubrication indicator lamp
- 23. Parking brake indicator lamp
- 24. Engine glowing indicator lamp
- 25. Machine travel forward released indicator lamp
- 26. Emergency stop indicator lamp
- 27. Machine travel backward released indicator lamp
- 28. Screed gas heating indicator lamp
- 29. Hydraulics operating mode indicator lamp
- 30. Screed vibration indicator lamp
- 31. Active error indicator lamp
- 32. Error message code indicator
- 33. Counter of worked engine hours
- 34. Current battery voltage indicator



Battery charging indicator lamp (21)

It indicates that the battery charging function is in order. After the key in the ignition box (11) is switched over to the position "I", the indicator lamp must light up and it must go off after the start-up.



Engine lubrication indicator lamp (22)

The indicator lamp indicates an engine lubrication failure.
Oil pressure too low.



Parking brake indicator lamp (23)

The lighting indicator lamp indicates that the parking brake was enabled.



Engine glowing indicator lamp (24)

It indicates the engine warming up before the cold start.



Machine travel forward released indicator lamp (25)

The indicator lamp indicates that the machine can travel forward.



Emergency stop indicator lamp (26)

It indicates an active function of the emergency brake.



Machine travel backward released indicator lamp (27)

The indicator lamp signals that the machine can travel backward.



Screed gas heating indicator lamp (28)

It indicates an active function of the screed gas heating.



Hydraulics operating mode indicator lamp (29)

It indicates blocking of material delivery, the vibration function and screed lowering.




Screed vibration indicator lamp (30)

It indicates that the vibration function is active.




Active error indicator lamp (31)

If the indicator lamp is lit, remove the failure displayed on the display or contact your dealer or an DYNAPAC authorised service centre.



Error code indicator (32)



Counter of worked engine hours (33)

It shows the total time, during which the machine has been in operation.



Battery voltage indicator (34)

It shows a battery voltage value:

Green – the battery is OK

Yellow – low battery voltage

Red – battery voltage too low

2.4 Machine description

2.4.4 Foot switch

The foot switch is placed on the machine platform.




Reverse travel

The travel of the machine backwards is possible only in the transport mode.

- Switch over the transport/operating mode switch (15) to the transport mode.
- To travel backwards, enable the foot switch (48); the indicator lamp (27) will light up. Wait for 2 seconds, pull up the arresting ring of the travel control and move the travel control (8) backward.
- Keep your foot on the foot switch (48) for the whole time of the machine travel.
- When you take your foot from the foot switch (48), the machine will stop.

Note

When the time delay of 2 sec. is not observed before the travel control (8) is moved back, it is possible that the machine travel control will not be enabled. In such a case repeat the procedure.

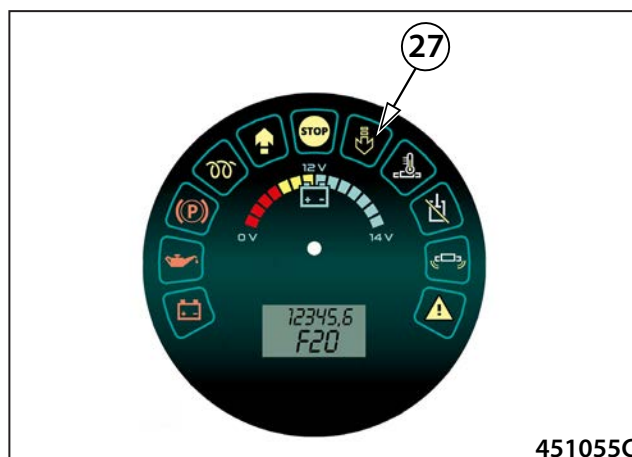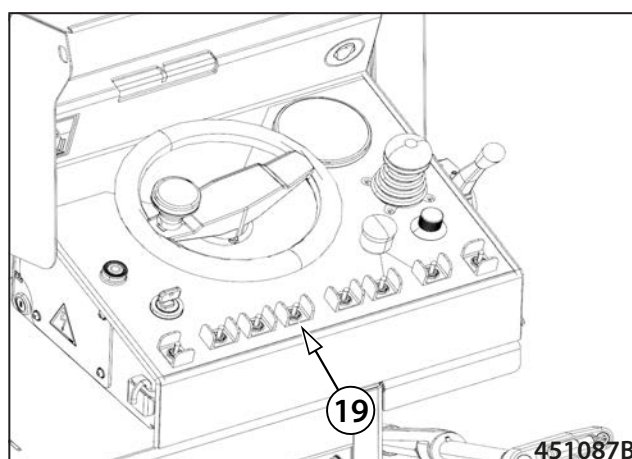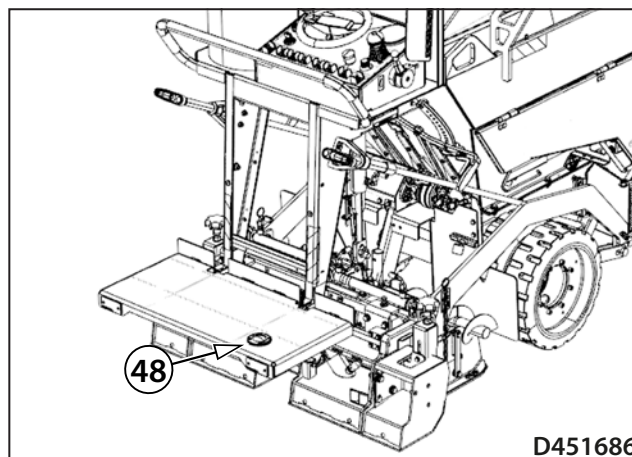

Lowering the screed to the floating position

The screed lowering in the transport mode is adjusted using the foot switch (48) mainly when the machine is transported

The screed lowering using the foot switch (48) is possible only in the transport mode.



- Set the travel control (8) to the neutral position (N).
- Switch over the transport/operating mode switch (15) to the transport mode.
- Switch over the screed lifting/lowering switch (19) to the lower position.
- Press the foot switch (48).

Note

The function of screed lowering to the floating position cannot be enabled when the machine is moving.



Keep the platform clean without any oil stains. Danger of injury!

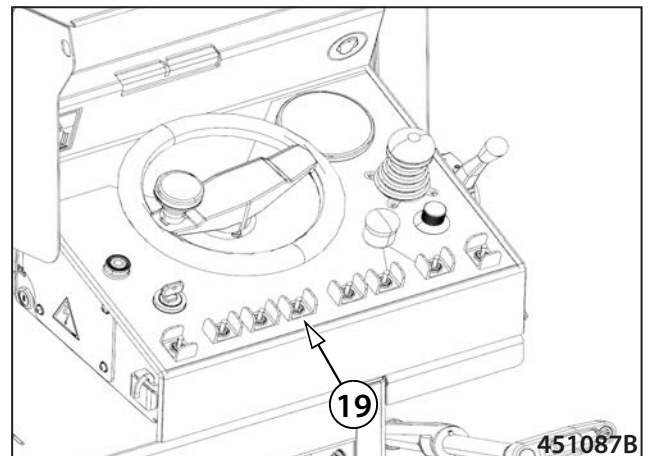
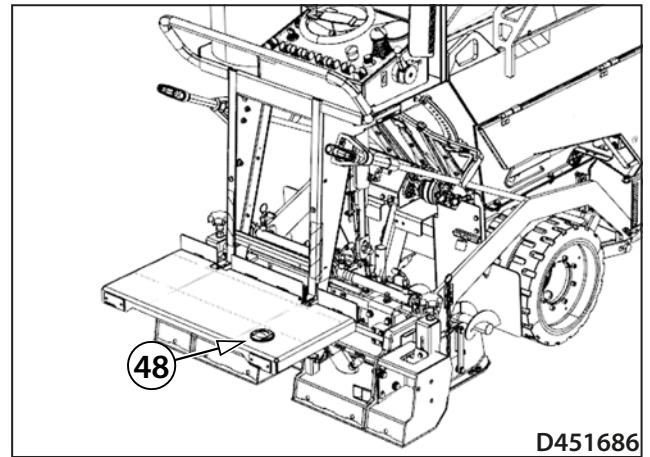


2.5 Operation of the machine

2.5.1 Turning ON/OFF the battery disconnecter

Position "OFF" – Electrical wiring of the machine disconnected.


Position "ON" – Electrical wiring of the machine connected.

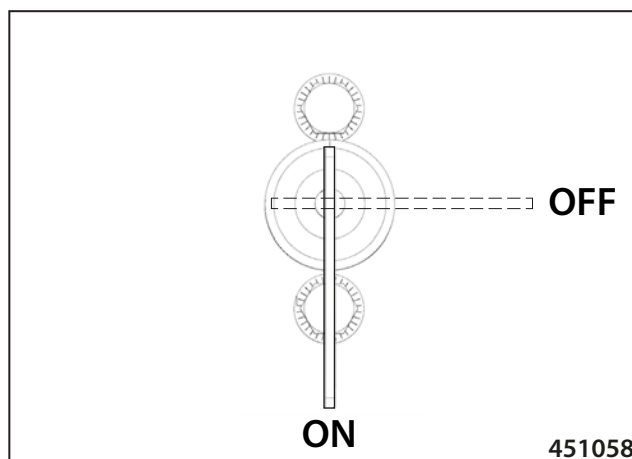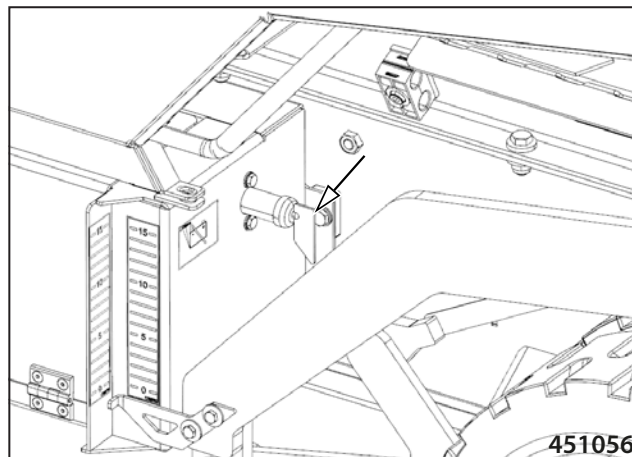


2.5.2 Basic equipment of the machine

List of the basic equipment of the machine:


- Driver's stand

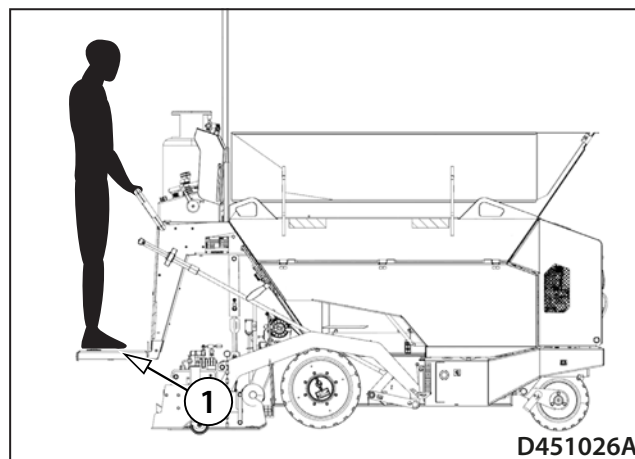


- Main dashboard

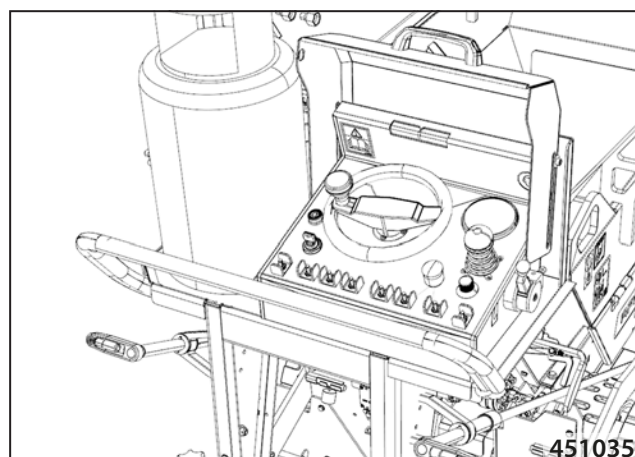

- Engine


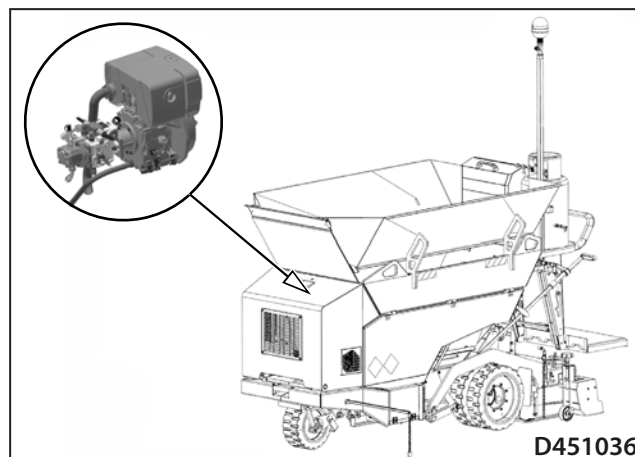


- Hydraulic system

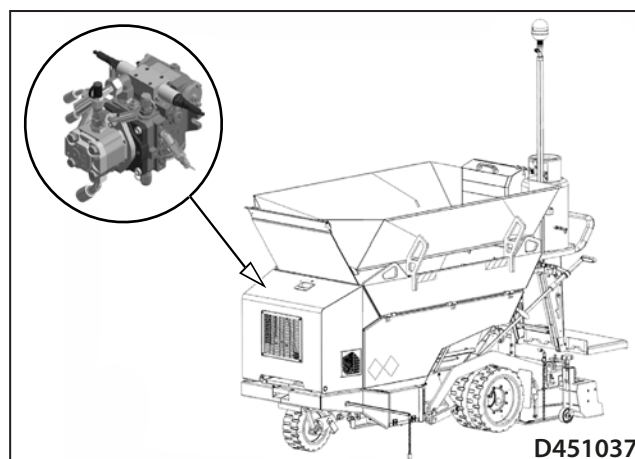


2.5 Operation of the machine


- Electrical system 12 V

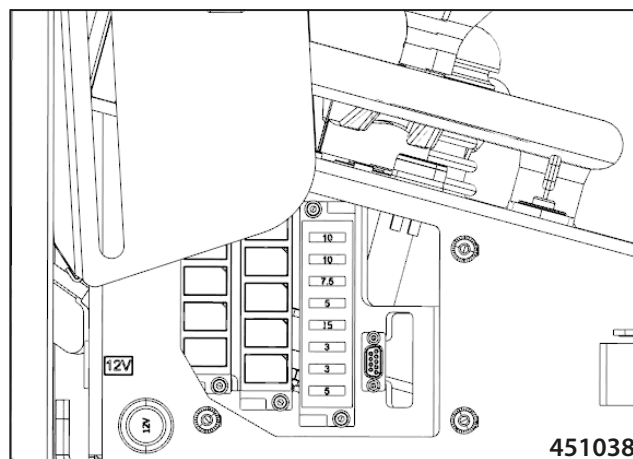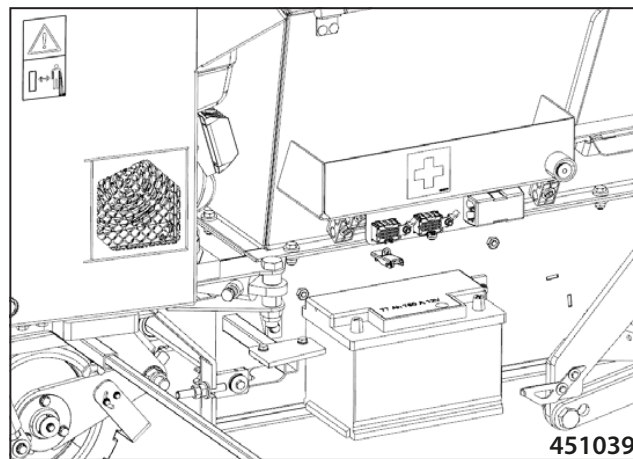


- Drive and steering

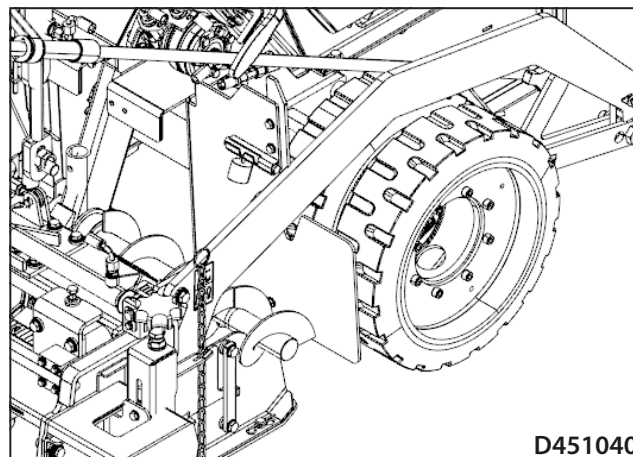


- Hopper

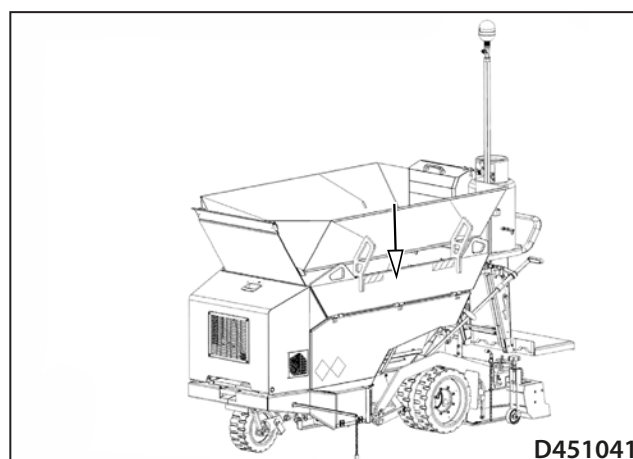


- Conveyor

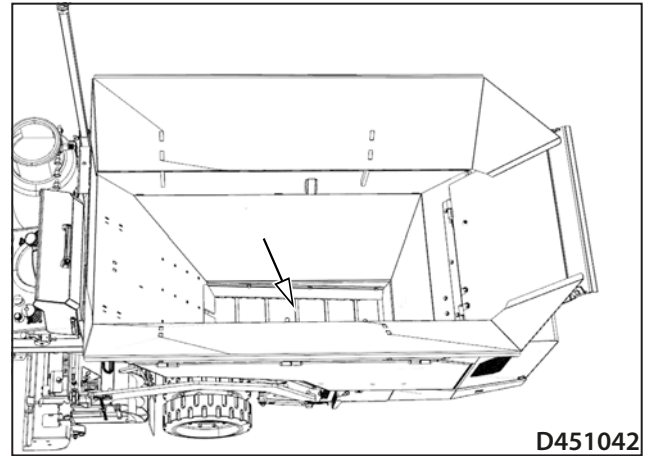

- Augers

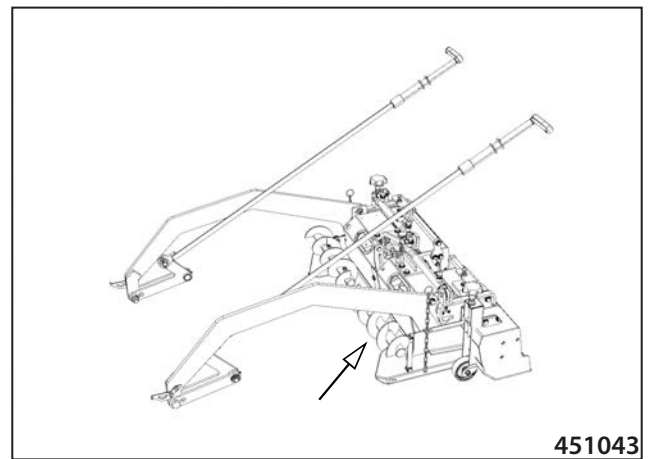

- Screed

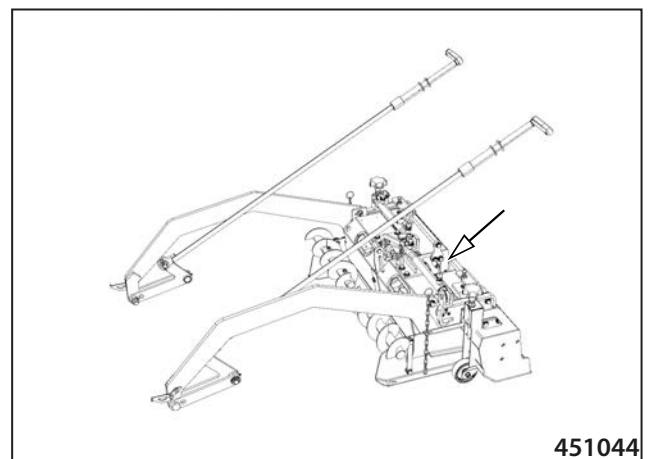

2.5 Operation of the machine


2.5.3 Machine footboard

During the operation of the machine the footboard of the machine must be set in the working position (1).

The footboard of the machine (1) may be set to position (2).

Position (2) is intended for loading the machine with a crane, transport of the machine on a means of transport, towing of the machine, storing and maintenance.

The footboard is set manually.

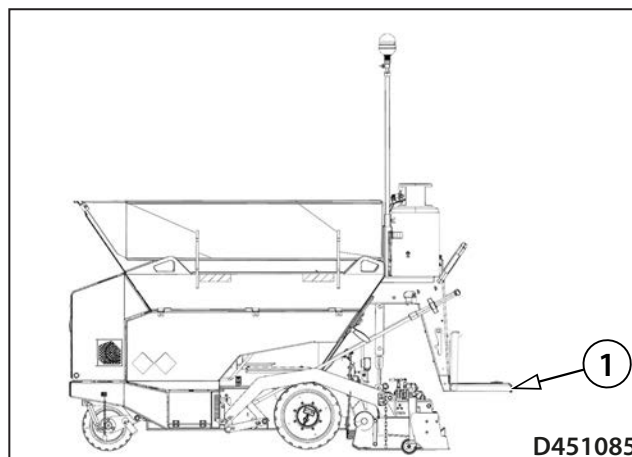

Setting the footboard to position (1):


- Hold the footboard and lift the latch (3).
- Move the footboard slowly to position (1).

Setting the footboard to position (2):

- Grab the footboard and lift it to its maximum upper position.
- Secure the footboard in the upper position the latch (3).
- Make sure it is secured properly.



Caution! There is a risk of falling from the footboard.

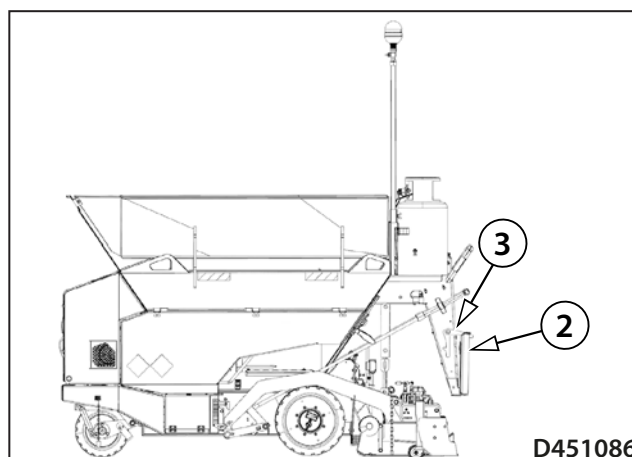


When loading the machine with a crane, transporting the machine on a means of transport or towing the machine, the footboard must be set in position (2).

2.5.4 Deposition boxes and safety covers on the machine

A deposition box situated on the right side under the cover serves for storing the Operating Manual and other documents related to the operation of the machine.



The Operating Manual must always be kept in the machine in an appropriate place to be always available for the driver of the machine for viewing.

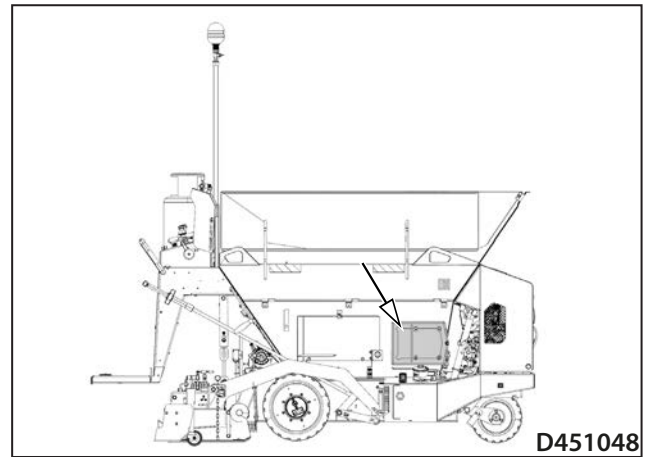


Place to deposit the first-aid kit

The deposition box on the right side under the cover serves for depositing the first-aid kit.



The machine must be equipped with the first-aid kit.

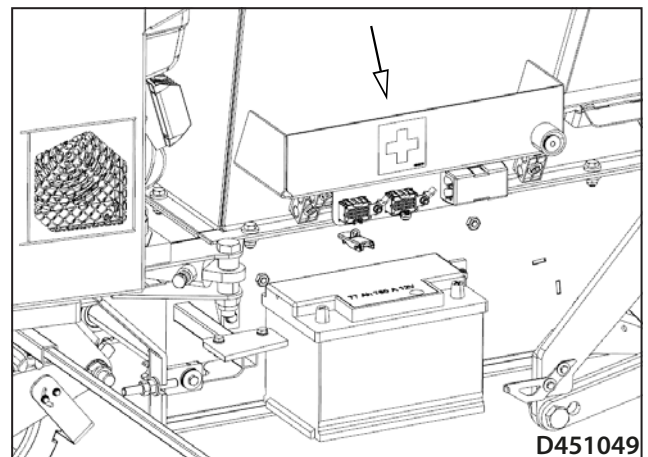


Place to install a fire extinguisher

A fire extinguisher is not in the standard equipment of the machine. The machine user shall ensure that a fire extinguisher is mounted to the designated place on the machine. A fire extinguisher must be regularly inspected according to Chapter 2.1.15.



The machine must be equipped with a fire extinguisher.

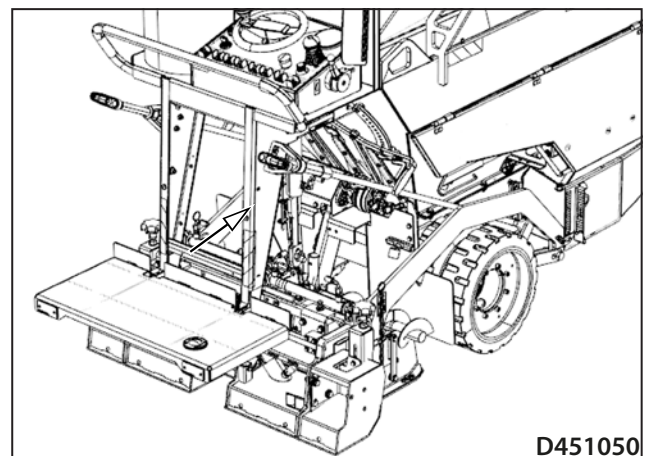


2.5 Operation of the machine

Safety cover on the machine

The machine is equipped with a safety cover of the main dashboard. This safety cover is mounted on the machine to protect the equipment from damage or unauthorised use.



When the machine is put out of operation or left unattended, the safety cover of the main dashboard must always be locked.

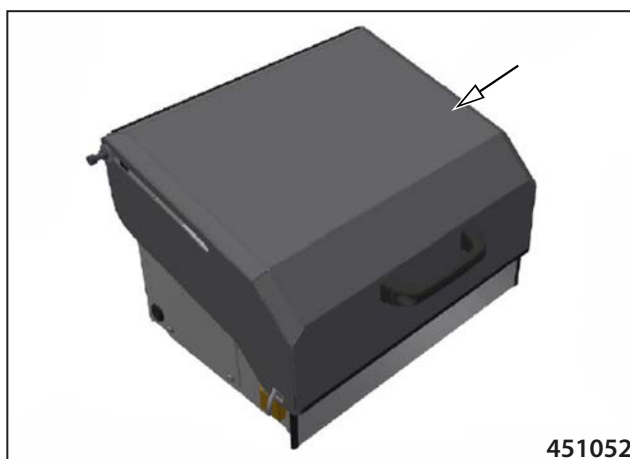

2.5.5 Mounting of screed reduction plates

By mounting the screed reduction plates the material paving with is changed.

The paving width in the standard model of the machine is:

- Minimum paving width without reduction plates 800 mm (31.5 in)
- Maximum paving width without reduction plates: 1,300 mm (51.2 in)

Paving width with reduction plates is:

- Minimum paving width with reduction plates: 250 mm (9.8 in)
- Maximum paving width with reduction plates: 750 mm (29.5 in)

When mounting screed reduction plate set, the augers must be dismantled from the machine.

Screed reduction plate set:

- 1 Screed reduction plate – left
- 2 Screed reduction plate – right
- 3 Protective cases of auger shaft

Procedure of mounting of screed reduction plates

- The procedure of mounting is the same for the left and right screed reduction plate.
- Park the machine on a flat solid surface.
- Start the engine.
- Lift the screed of the machine to the transportation position and secure it.
- Extend the screed on the left and right side of the machine to the maximum position.
- Turn off the engine and the battery disconnecter.
- Mount the paving reduction plates with the shaped edge (1) on the machine in the forward machine travel.
- Insert pins (2) on both sides of the screed to the holes (3) on the screed end gate (4).
- Secure the pins using a split pin (5).







Mount the paving reduction plates on the machine which is parked on a flat and solid surface.

When mounting reduction plates, the engine and the battery disconnecter must be switched off.

Risk of burn injury when installing the screed reduction plates.

When mounting reduction plates, wear protective equipment.

When mounting screed reduction plate set, the augers must be dismantled from the machine.

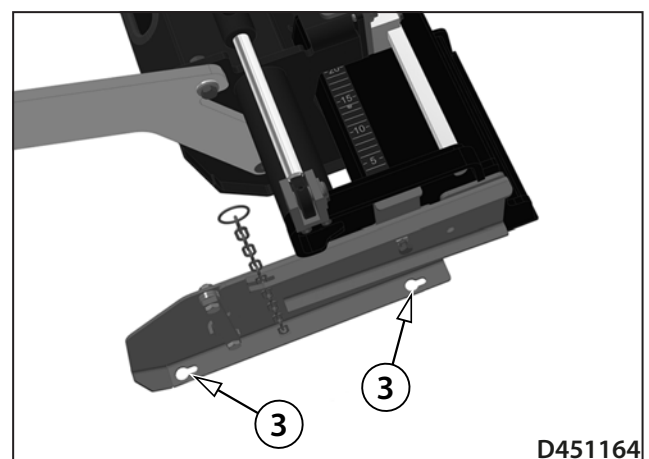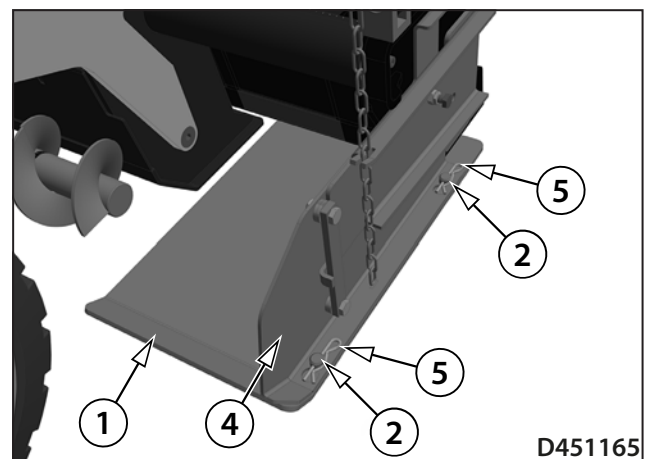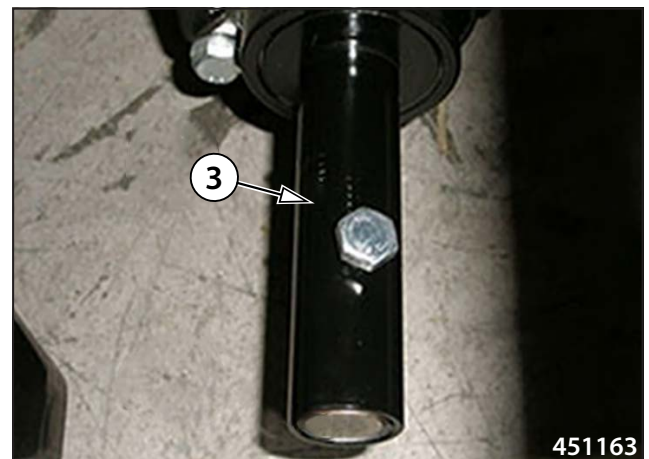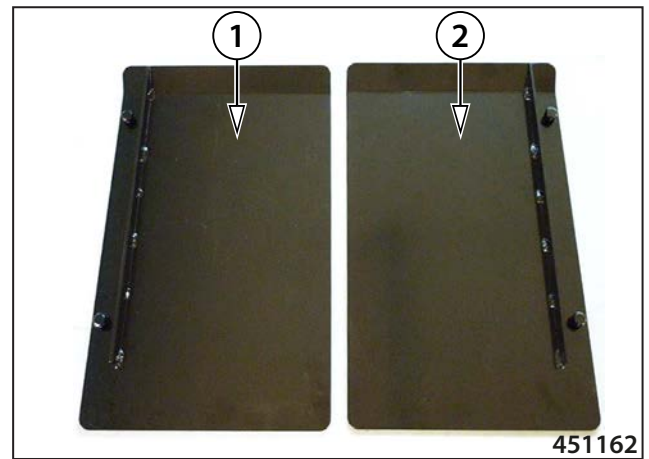

2.5 Operation of the machine

Procedure of dismounting the material augers

- The dismounting procedure is the same for the left and right auger.
- Release the nut (2) and remove the screw (3) on the material augers (1) .
- Dismount material augers (1) from material auger shafts (4).
- If necessary, clean the shaft of the material augers (4).
- Mount protective cases (5) on the shafts of material augers (4)
- Mount the screw (3) and tighten the nut (2) at the torque of 48 Nm (35.4 lbft).




Dismount the material augers and mount protective cases of the shaft on the machine which is parked on a flat and solid surface.


When dismounting the material augers and mounting protective cases of the shafts, the engine and the battery disconnecter must be switched off.

Risk of burn injury when dismounting the material augers and mounting protective cases of the shafts.


Wear protective equipment when dismounting the material augers and mounting protective cases of the shafts.

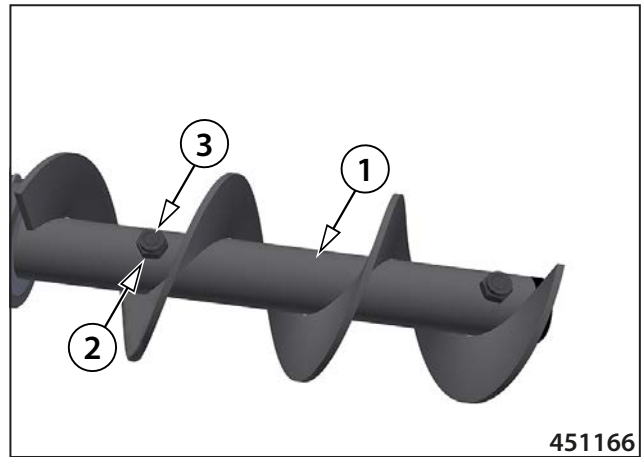

451166

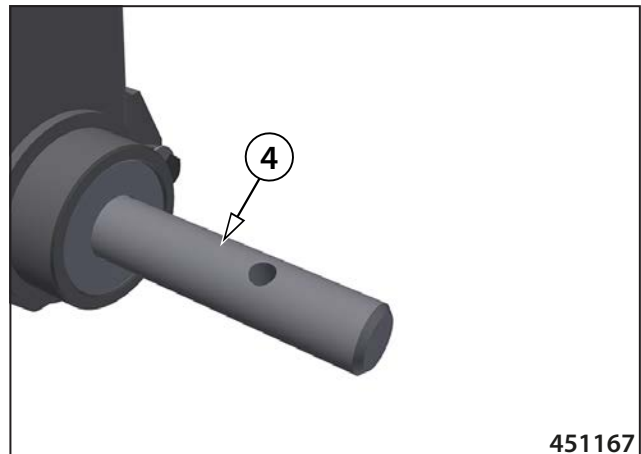

451167

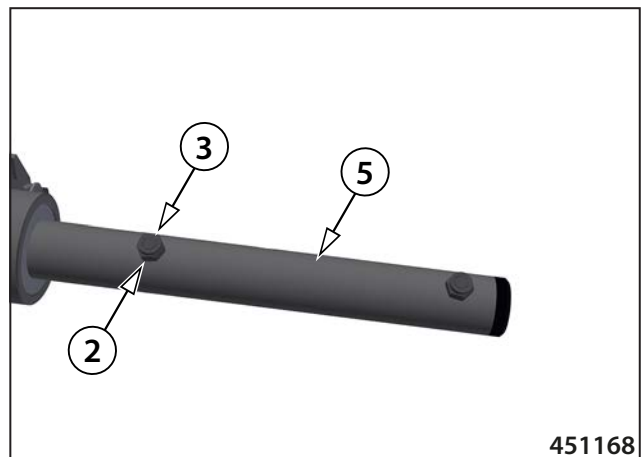

451168

2.5.6 Beacon

The machine is delivered from the manufacturer with a beacon dismounted. Before starting the operation of the machine the beacon must be mounted on the machine.

Turning on the beacon:

- When the engine is started, the beacon (1) will be automatically turned on.

Turning off the beacon:

- When the engine is turned off, the beacon (1) will be automatically turned off.

Mounting the beacon:




- Mount the beacon (1) on the beacon holder (2).
- Mount the beacon holder (2) on the machine and secure it using a wing nut (3).

Connecting the electrical wiring to the beacon:

- Insert the plug of the beacon (4) to the mounting socket 12 V (5) on the main dashboard (6).



It is forbidden to operate the machine without the beacon mounted on.

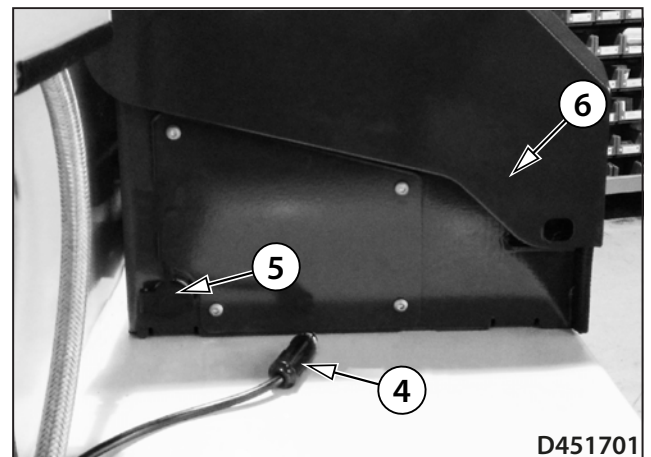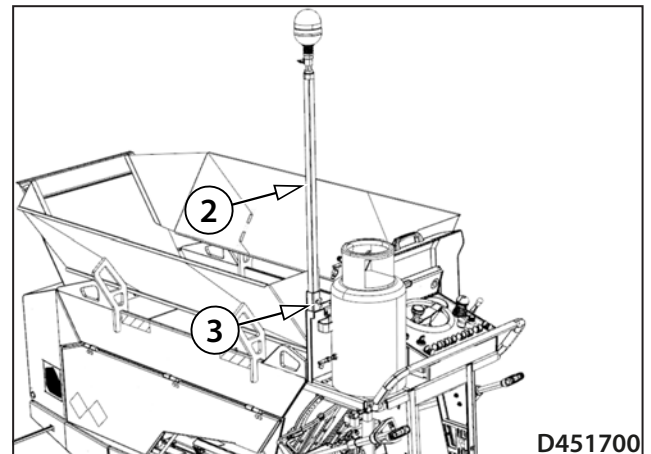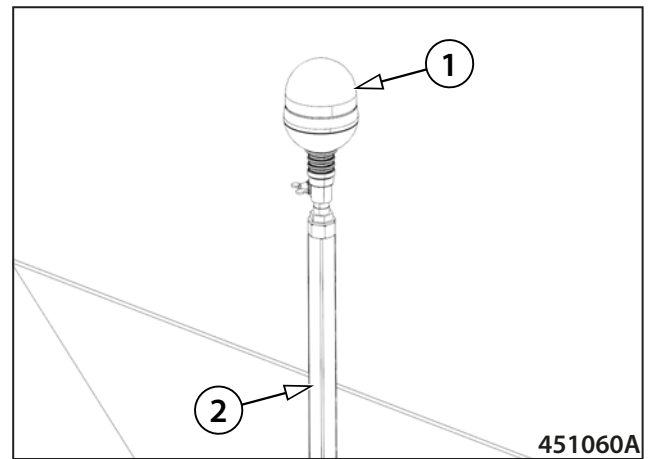

2.5 Operation of the machine

2.5.7 Driver's stand

To access the driver's stand use only places intended for this purpose, the footboard and the handle.

When getting on and off:

- Clean your footwear before getting on the machine.
- Always face the machine and pay increased attention during the action.
- Always observe a safe three-point contact with the footboard and the handle.

Procedure for entering onto the driver's stand:

- If required, set the footboard (2) to the operating position.
- Firmly hold on to the handle (1).
- Get on the footboard (2).
- Move to the centre of the footboard (2).
- Continue to firmly hold on to the handle (1).
- During the operation of the machine always observe a safe three-point contact with the footboard and the handle.



Jumping off the parked or moving machine is prohibited.


It is forbidden to get on or off the machine when it is moving.

It is prohibited to use the steering wheel, control parts of the machine or its other parts not intended for this purpose for holding.

Keep the footboard and holders clean, remove any grease, coarse dirt, ice or snow and do not place any objects on the surface. By failure to observe these rules the danger of injury by falling down of the machine arises.

For safe movement on the machine, always use protective shoes.

During the operation of the machine always observe a safe three-point contact with the footboard and the handle.

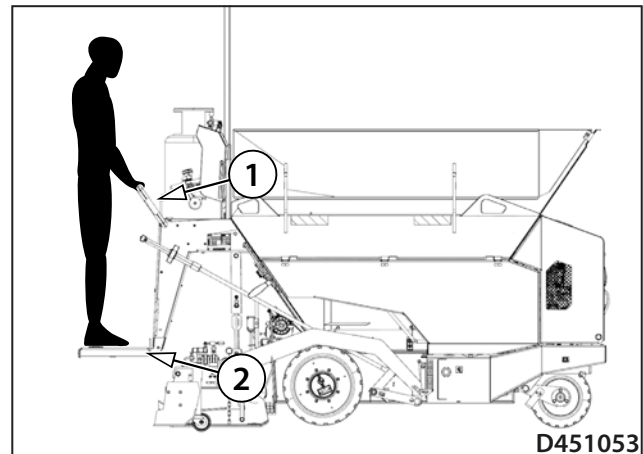

2.5.8 Starting the engine

- Before starting the engine, daily check the oil level in the engine, hydraulic tank and fuel level in the fuel tank. Check that there are no loosened, worn or missing parts on the machine.



Start the engine only from the driver's stand! Use the alarm horn to signal the engine starting and check that nobody is endangered by starting the engine!

Start-up procedure:

- Turn on the battery disconnecter.
- Set the travel controller (8) to the neutral position – the parking brake is activated.
- Check that the screed gas heating (13) is turned off.
- Check that the emergency switch (1) is not activated.
- Insert the key into the ignition box (11) in the position "0" and switch over to the position "I".
- The brake indicator lamp (23), charging (21), hydraulics operating mode switch-off (29) and engine lubrication (22) will light up on the display.
- Set the key between position "I" and "II" and the engine glowing indicator lamp (24) will light up.
- Do not perform engine glowing for more than 15 s.
- Use the alarm horn (12) to signal that the engine is starting.
- Turn the key to position "II" to start the engine.
- The engine lubrication indicator lamp (22) and the battery charging indicator lamp (21) will turn off.
- After the machine moving-off is completed, the brake indicator lamp goes out (23).





Do not start the engine for more than 20 seconds.

Wait at least for 2 minutes before starting again.

When starting the engine at the cold condition, slowly increase the engine speed for proper lubrication of bearings and oil pressure stabilisation.

If the charging indicator lamp does not go off after starting the engine, immediately remove the failure.

If the charging (21) and lubrication (22) indicator lamps do not go off, switch off the engine and remove the failure.

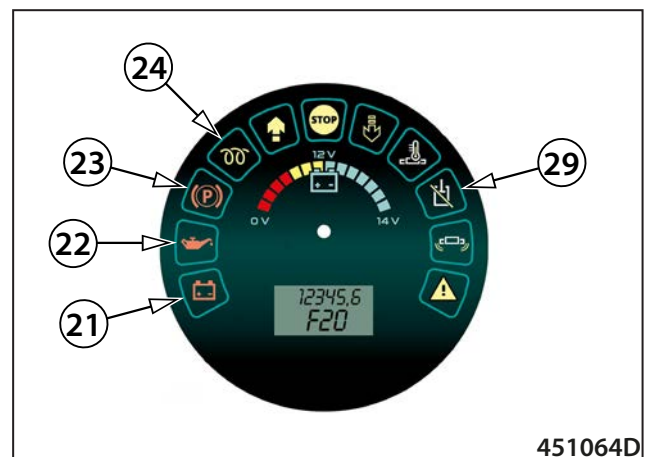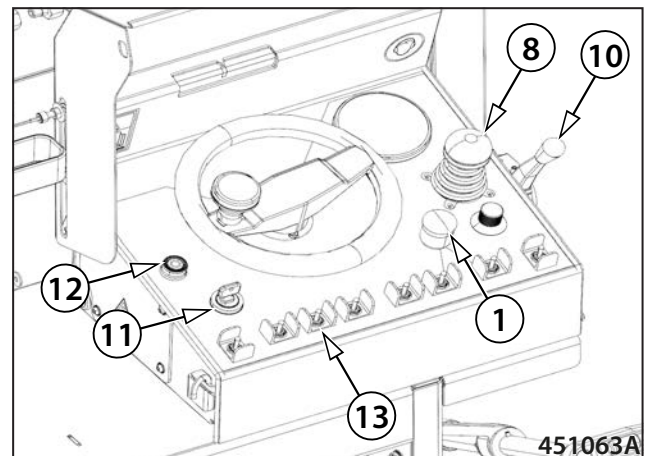

2.5 Operation of the machine

2.5.9 Starting the engine using starting leads from external power supply

Start-up procedure using leads from an external power supply:



The starting supply voltage from the external power supply must be 12 V.

Always follow the undermentioned operation sequence.

- 1/ Connect one end of the (+) pole of the cable to the (+) pole of the discharged battery.
- 2/ Connect the other end of the (+) pole of the cable to the (+) pole of the external battery.
- 3/ Connect one end of the (-) pole of the cable to the (-) pole of the external battery.
- 4/ Connect the second end of the (-) pole of the cable to any part of the started machine, which is attached to the engine (or with the engine block itself).

After starting, disconnect the starting leads in reverse order.



Do not connect the (-) pole of the cable to the (-) pole of the discharged battery of the machine being started! During starting heavy sparking may occur and gases of the charged battery may explode.


Uninsulated parts of clamps of the jump leads must not touch each other!

The jump lead connected to the (+) pole of the batteries must not come into contact with electrically conductive parts of the machine – danger of a short circuit!

Do not lean over the batteries – possibility of electrolyte burns!

Remove flammable sources (open flame, burning cigarettes, etc.)

Do not check the presence of voltage in the wire by sparking against the machine frame.

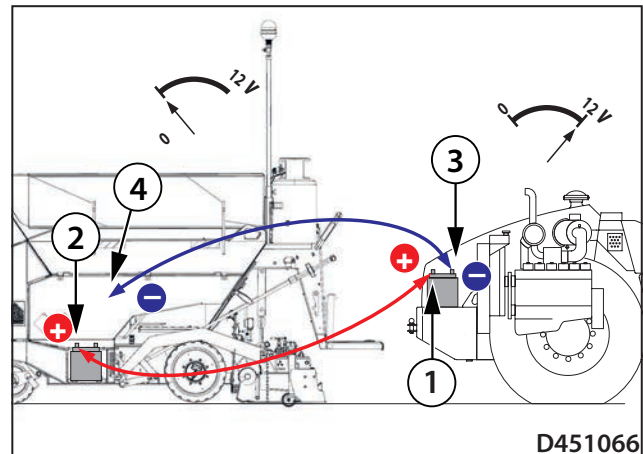

D451066

2.5.10 Travel and reversing of the machine

The machine may be operated in the transport or operating mode. The transport or operating mode are set by the switch of the transport and operating mode (15).





The travel of the machine backwards is only possible in the transport mode.

Travel of the machine in the transport mode:

- Check that the emergency switch (1) is not activated.
- Turn the transport and operating mode switch to the transport mode position (rabbit).
- Switch over the key in the ignition box (11) to the position "1".
- Use the horn (12) to signal that the engine is starting.
- Start the engine using the ignition box (11).
- Travel control in the neutral position. The indicator lamp (25) lights on the display.
- Using the engine speed adjusting controller (10), set the maximum engine speed.
- Pull the arresting ring of the travel controller (8) up and move the travel controller forward.
- The indicator lamp (25) lights on the display.
- To travel the machine backwards, operate the foot switch (48); the travel control is in the neutral position, the indicator lamp (27) will light up, then pull up the arresting ring of the travel control (8) and move the travel control backwards.
- The indicator lamp (27) lights on the display and the indicator lamp (25) will go out.
- An acoustic signals is emitted by the reversing horn when the machine travels backwards.
- The maximum travel speed forward and backward is 2.5 km/h (1.55 MPH).
- During the travel the front wheel turning angle indicator (4) checks the turning angle.

Travel of the machine in the operating mode:

- Check that the emergency switch (1) is not activated.
- Switch over the transport and operating mode switch (15) to the operating mode position (turtle).
- Set the required speed using the paving speed selector (14),
- Switch over the key in the ignition box (11) to the position "1".
- Use the horn (12) to signal that the engine is starting.
- Start the engine using the ignition box (11).
- Travel control in the neutral position. The indicator lamp (25) lights on the display.
- Using the engine speed adjusting controller (10), set the maximum engine speed.
- Pull up the arresting ring of the travel control (8) and move the travel control forward.
- The maximum travel speed forward is 0.6 km/h (0.37 MPH).
- The machine backward travel function cannot be activated in the operating mode.
- During the travel the front wheel turning angle indicator (4) checks the turning angle.

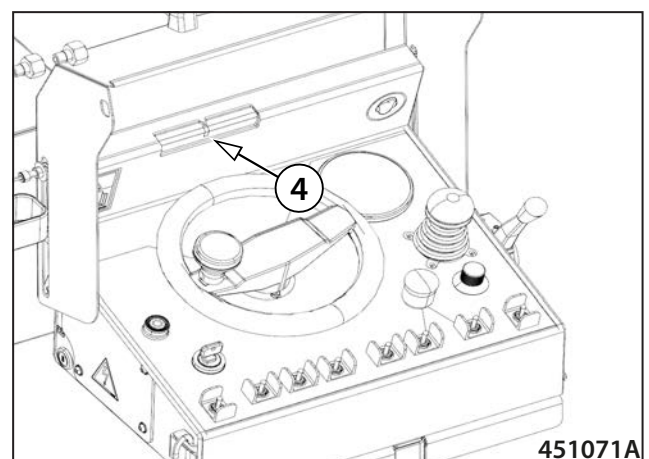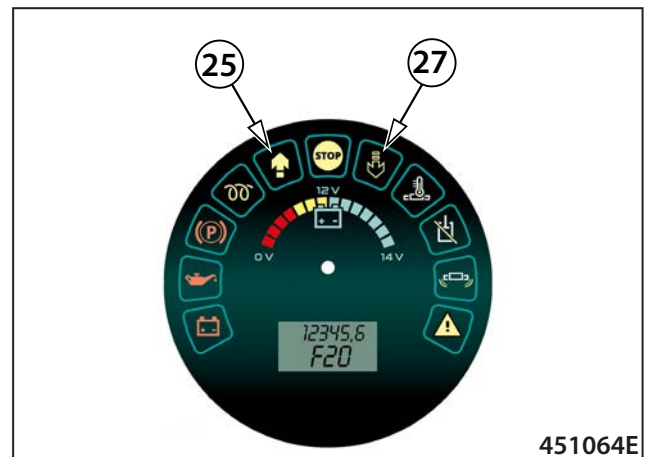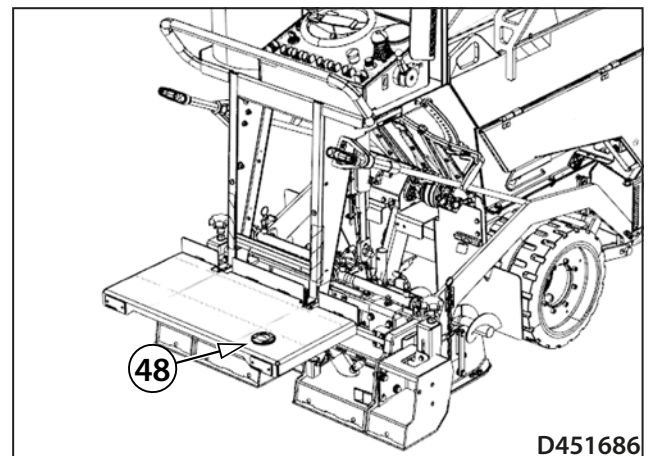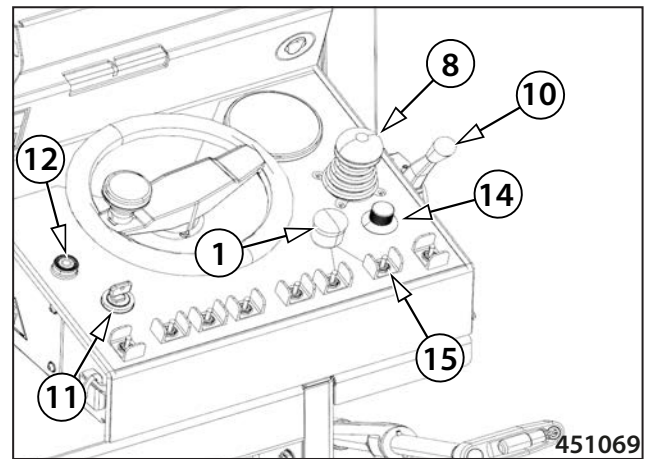

2.5 Operation of the machine



Start the engine only from the driver's stand! Use the alarm horn to signal the engine starting and check that nobody is endangered by starting the engine!

Caution! The machine starts moving immediately in the operating mode after the forward travel control indicator (25) lights up and the travel control (8) is moved when a speed is pre-set using the paving speed selector (14).

Jumping off the parked or moving machine is prohibited.


It is forbidden to get on or off the machine when it is moving.

During the operation of the machine always observe a safe three-point contact with the footboard and the handle.

2.5.11 Stopping the machine and engine

Stopping the machine:

- Stop and brake the machine by changing the travel controller (8) to the neutral position (N). The parking brake indicator lamp (23) lights up.
- Set the engine speed adjusting controller (10) to the idle speed.
- Switch over the key in the ignition box (11) to the position "0".
- Remove the key from the ignition box (11) and disconnect the battery disconnecter.

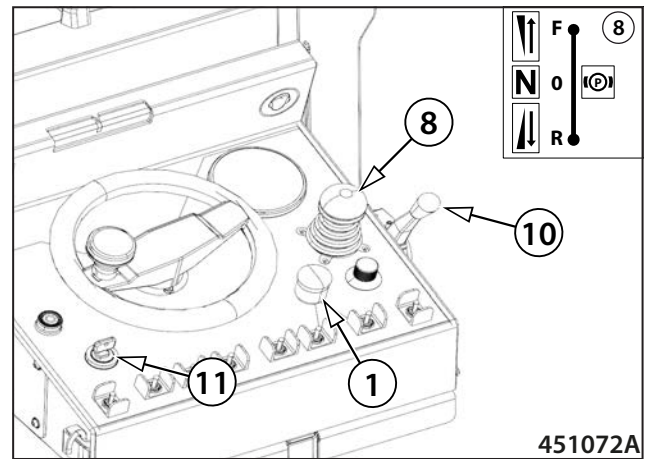


Machine emergency stop

Activation:

- Press the emergency brake button (1).
- The machine brakes, the engine stops, material distribution on the conveyor stops, and vibration units and the screed gas heating stops.
- The battery charging indicator lamp (21), engine lubrication indicator lamp (22) and emergency brake indicator lamp (26) will light up on the display.

Deactivation:

- Pull out the emergency brake button (1). Shift the travel controller (8) to the neutral position (N); the machine can be started again in this position.

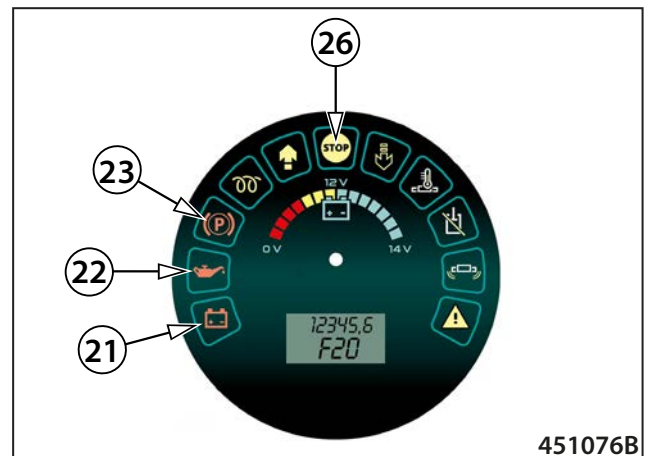

Use only if a failure occurs when it is impossible to stop the engine with the key in the ignition box or if serious emergency occurs when it is impossible to stop the machine by moving the travel control (8) to the neutral position (N)!



Turn off the battery disconnecter when shutting down the machine.

When the machine is put out of operation, protect the dashboard and the engine compartment from unauthorized access of others by locking the dashboard cover and the engine bonnet.

2.5 Operation of the machine

2.5.12 Machine parking

Shut down the machine on a flat and solid surface where there is no potential natural hazard (e.g. landslides, flooding).

- Stop and brake the machine by changing the travel controller (8) to the neutral position (N). The parking brake indicator lamp (23) lights up.
- Set the engine speed adjusting controller (10) to the idle speed.
- Switch off the engine by switching over the key in the ignition box (11) to the position "0".
- Remove the key in the ignition box (11) and close the cap of the ignition box (11).
- Turn off the battery disconnecter.
- Clean the machine from dirt.
- Check the whole machine and repair defects that occurred during operation.
- Lock the safety cover of the dashboard (7) and the engine bonnets with a padlock.

Note



The padlock is not delivered in the machine equipment.



If the machine is equipped with a gas bottle, the gas bottle must be removed from the machine and stored in a special area.

Turn off the battery disconnecter when parking the machine.

When the machine is parked, protect the dashboard and the engine compartment from unauthorized access of others by locking the dashboard cover and the engine bonnet.

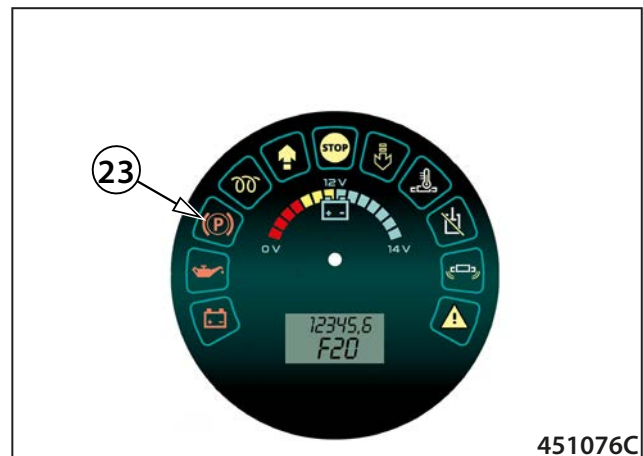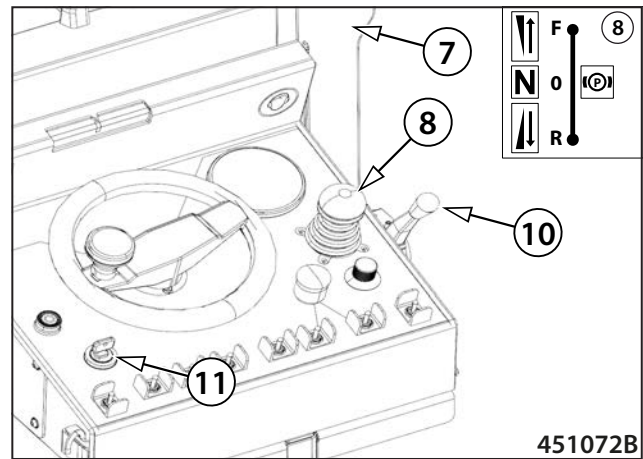

2.5.13 Front wheel

The machine is fitted with a height adjustable front wheel (1).

By adjusting this front wheel (1) the levelling of the machine is set as required so that the machine can pave the material in parallel with the subgrade.

The wheel is adjusted due to:

- Increase traction on a soft subgrade.
- Set the correct angle of machine travel in a gap.
- Set the levelling of the machine against the subgrade.

Procedure of front wheel adjustment:

- Always adjust the front wheel at the place of paving before starting the paving.

Lowering:


- Turn the adjusting screw (2) counter-clockwise to lower the wheel.

Lifting:

- Turn the adjusting screw (2) clockwise to lift the wheel.



Caution! Always before starting the paving of a material check the setting of the machine levelling against the subgrade (e.g. using a spirit level) and if necessary, adjust the wheel.

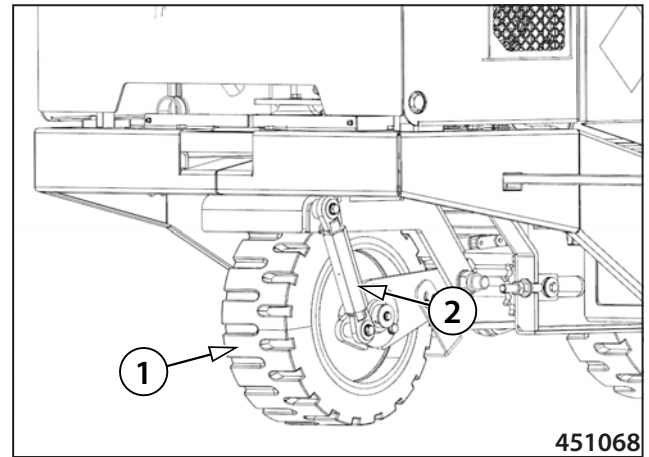

451068

2.5 Operation of the machine

2.5.14 Using and setting the paving direction indicator


The machine is equipped with a paving direction indicator (3).

Use:

- By setting the paving direction indicator (3), the required paving direction is adhered to during the operation of the machine.
- The paving direction indicator (3) can be mounted on the left or right side of the machine.

Setting the paving direction indicator:

- Release the locking screw of the paving direction indicator (1).
- Pull out the paving direction indicator rod (2).
- Mount the paving direction indicator (3).
- Set the paving direction indicator rod (2) so that the paving direction indicator (3) extends beyond the outer outline.
- Tighten the locking screw of the paving direction indicator (1).
- Set the height of the paving direction indicator (3) by opening the snap-hook and adjusting the chain length.

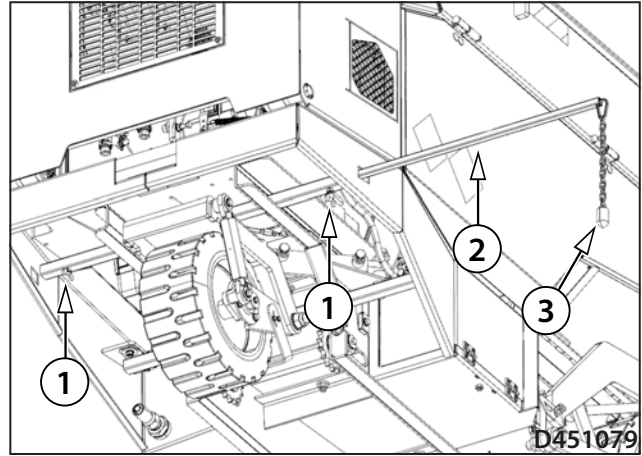

In the transport mode the paving direction indicator rod (2) must be retracted and secured, the paving direction indicator (3) dismantled and deposited on the machine.

2.5.15 Hopper

The hopper is equipped with a cover (1) which prevents material from falling on the engine bonnet or to the area of the engine during loading of the material.

Procedure for the hopper cover operation:

- Before loading the machine with material open the hopper cover (1) by tilting it over in the machine travel direction so that the locking pin (2) fits into the counter-piece (3).
- After loading the machine with material, close the hopper cover (1).




Before loading material to the machine always open and lock the hopper cover (1).

During machine travel the hopper cover (1) must be in the closed position.

Load the material to the machine according to Chapter 2.6.9.

It is prohibited to load the material during machine operation; the machine must be parked on a flat and solid surface with the engine off.

In case of mounting the material hopper extension, observe the mounting and safety instructions stated in the Mounting Manual.

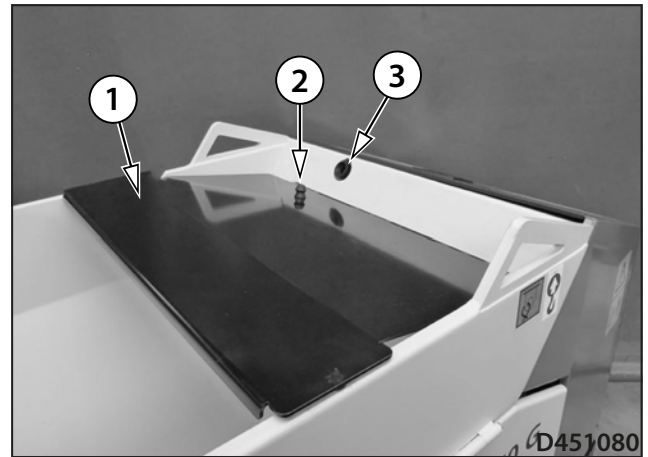

2.5 Operation of the machine

2.5.16 Material outlet


It serves for controlling the flow of the material to augers.

Adjustment process:

- Control the flow rate of the material to augers as required on the left or right side by setting the lever (1) to the required position.
- By setting the lever (1) to the required position, you can control the flow rate of the delivered material to augers by changing the position of the material outlet (2).



During the operation of the machine pay higher attention when adjusting the material outlet with regard to the safety of the operator and machine operation.

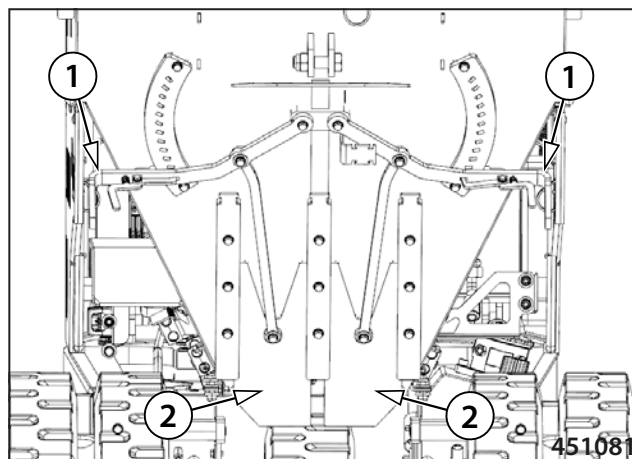

2.5.17 Conveyor

It serves for distributing the material to augers.

Conveyor movement directions:



- When distributing the material, the conveyor moves in the opposite direction of the machine travel.
- When reversing, the material conveyor moves in the direction of the machine travel.
- The conveyor direction can be affected by the conveyor direction switch (18).

Operating modes:

- Automatic mode:
 - When the machine stops, the material distribution will stop.
 - The material limit switch monitors the amount of the delivered material and as needed, stops or starts the movement of the conveyor.
 - The mode is only active during machine travel.
 - The conveyor direction can be affected by the conveyor direction switch (18).
- Manual mode:
 - Monitor the amount of the material and if necessary adjust the direction of the conveyor by the conveyor direction switch (18).

Operating the conveyor:

- Automatic mode:
 - For the automatic mode, switch over the material delivery operating mode switch MAN/AUT (17) to the automatic mode position.
 - For material distribution, switch over the conveyor direction switch (18) to the lower position.
 - For reverse run, switch over the conveyor direction switch (18) to the upper position.
 - To stop the conveyor, switch over the conveyor direction switch (18) to the central position.
- Manual mode:
 - For the manual mode, switch over the material delivery operating mode switch MAN/AUT (17) to the manual mode position.
 - For material distribution, switch over the conveyor direction switch (18) to the lower position.
 - For reverse run, switch over the conveyor direction switch (18) to the upper position.
 - To stop the conveyor, switch over the conveyor direction switch (18) to the central position.

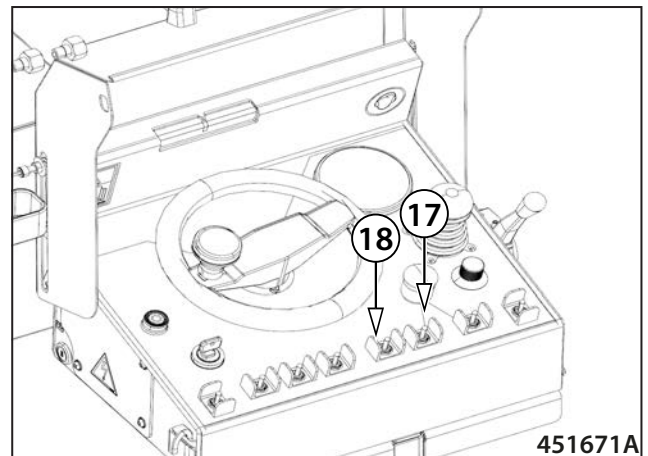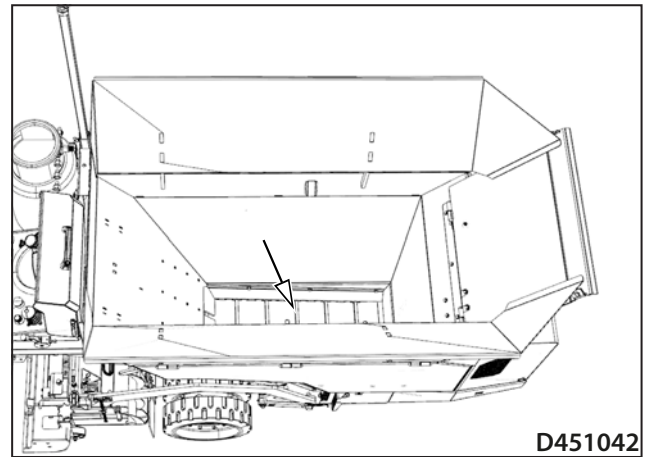

Caution! When the conveyor direction switch (18) is activated in the lower position, the conveyor moves in the manual mode even if the machine is not moving.

Caution! When the conveyor direction switch (18) is activated to the upper position, the conveyor starts moving in the automatic mode only after the machine starts moving.

2.5 Operation of the machine

2.5.18 Conveyor limit switch


If the automatic mode of the conveyor is set, it is possible to control the quantity of the delivered material to augers by setting the conveyor limit switch.

The conveyor limit switch assembly consists of the limit switch (1) and the limit switch arm (4).

The quantity of the material delivered to augers can be controlled by extending and retracting the limit switch arm (4), or to increase the setting range of the delivered material, by shifting the conveyor limit switch assembly on the holder (5).

Procedure for setting the conveyor limit switch:

- Adjustment by means of the limit switch arm:
 - Set the required position of the limit switch arm (4).
 - Loosen the lock screw (3) of the limit switch arm (4).
 - To increase the quantity of the delivered material, retract the limit switch arm (4).
 - To reduce the quantity of the delivered material, extend the limit switch arm (4).
 - Tighten the lock screw (3) of the limit switch arm (4).
- Adjustment by shifting the limit switch assembly:
 - Set the required position of the limit switch assembly (1).
 - Loosen the lock screw (2) of the limit switch assembly (1).
 - To increase the quantity of the delivered material, move the limit switch assembly (1) upwards.
 - To reduce the quantity of the delivered material, move the limit switch assembly (1) downwards.
 - Tighten the lock screw (2) of the limit switch assembly (1).

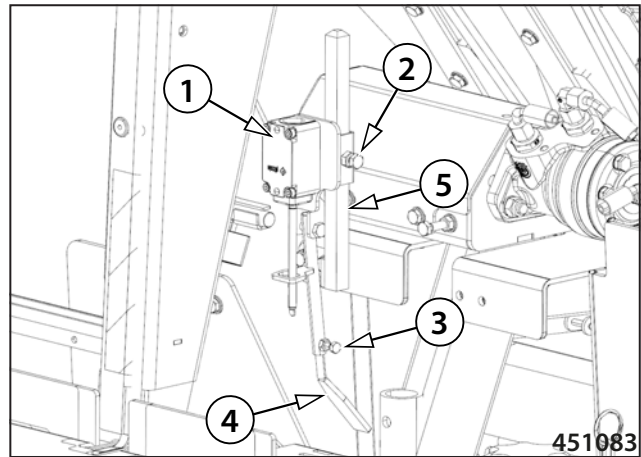

Caution! When setting the conveyor limit switch, the engine of the machine may not be started.

There is a risk of burns when adjusting the limit switch.

Use protective equipment when adjusting the limit switch.

2.5.19 Augers

The machine is equipped with augers which are used for moving the material to the area of paving.

The augers are connected with the drive of the material conveyor. When the material conveyor is moving, both augers move as well.




When augers are operated, no one is allowed in the hazardous area of the machine.

Perform repairs and maintenance of augers only with the engine and battery disconnecter off.

There is a danger of a fatal injury caused by the movement of augers.

There is a risk of burns. Use protective equipment.

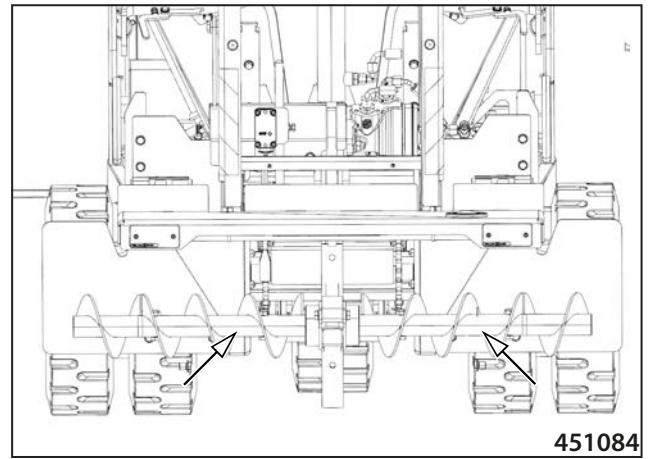

2.6 Operation of the screed

2.6.1 Lifting and lowering the screed

The machine is equipped with a screed linear hydraulic motor (3).

The screed linear hydraulic motor (3) is controlled by means of the screed lift/lower switch (19) on the main dashboard of the machine, or by means of the foot switch (49) on the footboard of the screed (8).

The screed can be set to the upper, locked or floating position.

Lifting and lowering of the screed can be performed in the transport or operating mode.

Procedure for lifting/lowering of the screed in the transport mode:

- Setting the lifting and lowering of the screed in the transport mode is used before the start of material paving or at the end of the material paving.
- Set the travel controller (8) to the neutral position (N).
- Set the engine speed adjusting controller (10) to the maximum speed.
- Switch over the transport/operating mode switch (15) to the upper position.
- Press the foot switch (48).
- To lower the screed, switch over the screed lift/lower switch (19) down.
- After setting the required position, switch over the screed lift/lower switch (19) to the central position.
- To lift the screed, switch over the switch lift/lower switch (19) up.
- After reaching the required position, release the switch.
- Release the foot switch (48).



Procedure for lifting of the screed in the operating mode:

- The setting of the lifting and lowering of the screed in the operating mode is used during material paving.
- Set the travel controller (8) to the neutral position (N).
- Set the engine speed adjusting controller (10) to the maximum speed.
- Switch over the transport/operating mode switch (15) to the lower position.
- Shift the travel controller (8) forwards.
- After start of the travel and a set pause (0 – 2 s) the screed will be set automatically to its floating position.



When the screed is controlled, no one is allowed in the hazardous area of the machine.

There is a risk of injury from the moving screed tow arms or the moving screed.

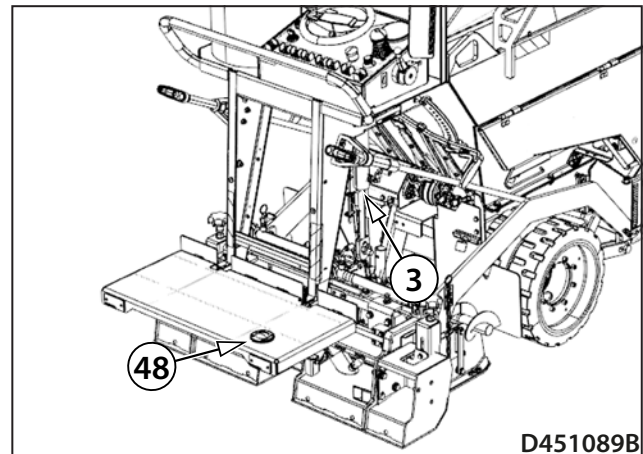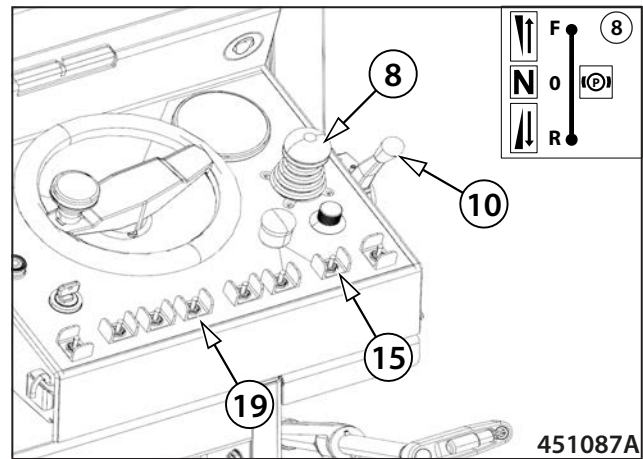

If the screed of the machine is not in use, during movement or transport of the machine on another vehicle, the screed tow arms must always be locked using lock pins according to Chapter 2.6.2.

2.6.2 Screed lock

The screed is locked to prevent a spontaneous fall of the screed due to possible leaks in the hydraulic system.

Lock the screed with the machine parked and started, the travel controller (8) must be set in the neutral position (N).

If the screed of the machine is not in use, during movement or transport of the machine on another vehicle, the screed tow arms must always be locked using lock pins.

Procedure for locking the screed:

- Set the travel controller (8) to the neutral position (N).
- Check that both screed lock pins (2) are inserted.
- Set the engine speed adjusting controller (10) to the maximum speed.
- Switch over the transport/operating mode switch (15) to the upper position.
- Press the foot switch (48).
- To lift the screed, switch over the switch lift/lower switch (19) up, and after reaching the maximum screed position release the switch.
- Release the foot switch (48).
- Extend both the screed lock pins (2).
- Press the foot switch (48).
- Lower the screed until the screed tow arms (3) lie on the lock pins (2).
- After the contact of the screed tow arms (3) with the lock pins (2), switch over the screed lift/lower switch (19) to the central position.

Procedure for unlocking the screed:




- Set the travel controller (8) to the neutral position (N).
- Set the engine speed adjusting controller (10) to the maximum speed.
- Switch over the transport/operating mode switch (15) to the upper position.
- Press the foot switch (48).
- To lift the screed, switch over the switch lift/lower switch (19) up, and after reaching the maximum screed position release the switch.
- Release the foot switch (48).
- Retract both the screed lock pins (2).
- Set the screed to the required position.



Due to leaks in the hydraulic system, the screed may gradually lower if the screed tow arms are not locked.

In case of failure of the hydraulic system, the screed may fall spontaneously if the screed tow arms are not locked.

In the event of failure of the hydraulic system, there is a risk of injury from the falling screed.

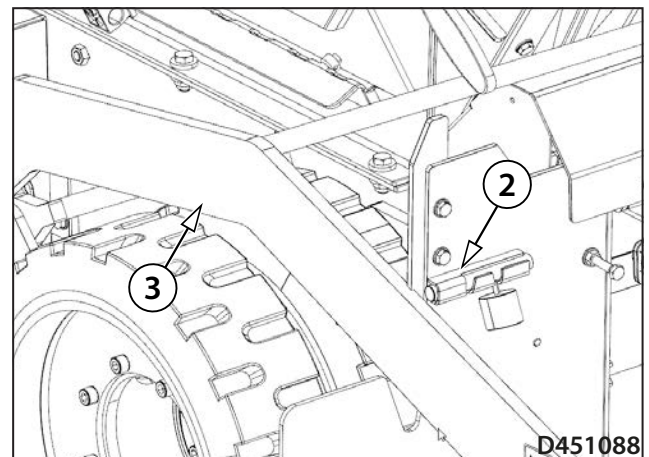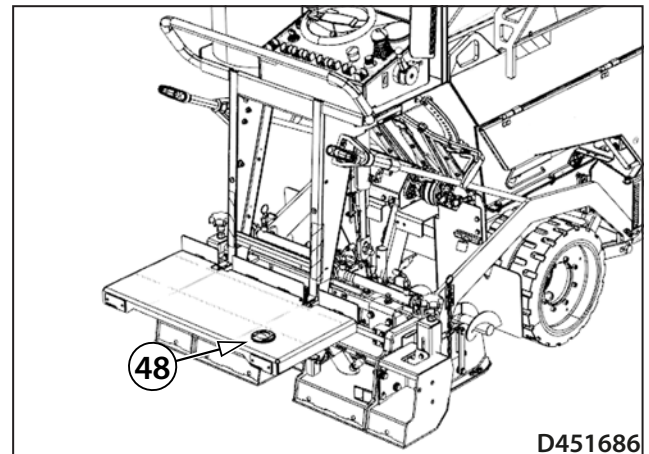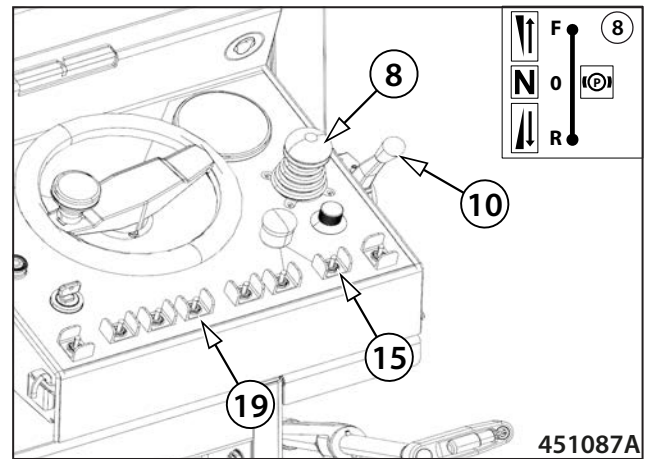

If the screed of the machine is not in use, during movement or transport of the machine on another vehicle, the screed tow arms must always be locked using lock pins.

2.6 Operation of the screed

2.6.3 Setting the paving width

The machine is equipped with a left (43) and right (44) screed extension frame for setting the paving width.

The required paving width can be set using the controls (2) and (3) on the dashboard.

The basic screed width is 800 mm (31.5 in), and each of the extendible screed extension is 250 mm (9.8 in) wide. The adjustable range of the paving width corresponds to the total width of both extendible screed extensions and amounts to 500 mm (19.7 in). The paving width can be adjusted in a maximum to minimum range value.

The paving width in the standard model of the machine is:

- Minimum paving width without reduction plates 800 mm (31.5 in)
- Maximum paving width without reduction plates: 1,300 mm (51.2 in)

Paving width with reduction plates is:

- Minimum paving width with reduction plates: 250 mm (9.8 in)
- Maximum paving width with reduction plates: 750 mm (29.5 in)



Paving width with mechanical extension is:

- Minimum paving width with mechanical extension: 1150 mm (45.3 in)
- Maximum paving width with mechanical extension: 1650 mm (65 in)

Setting the paving width:

Procedure for setting the required paving width on the left side of the screed:

- To increase the paving width on the left side, turn the paving width switch (2) to the left and hold it.
- To release the paving width switch (2), lock it back to the middle position and the screed stops in the required position.
- To decrease the paving width on the left side, turn the paving width switch (2) to the right and hold it.
- To release the paving width switch (2), lock it back to the middle position and the screed stops in the required position.
- Check the required setting of the paving width on the left side by checking the position on the left paving width indicator (51).

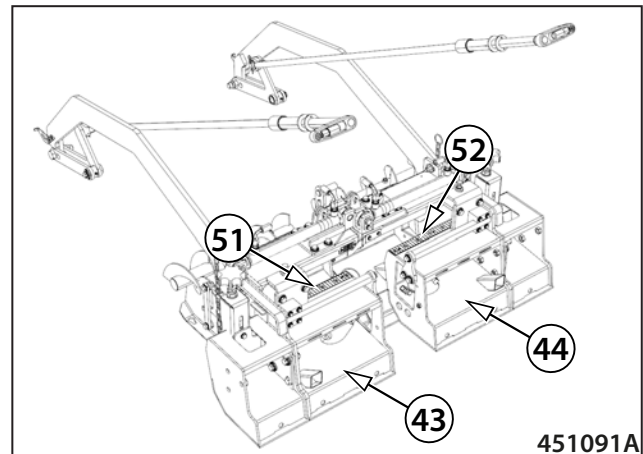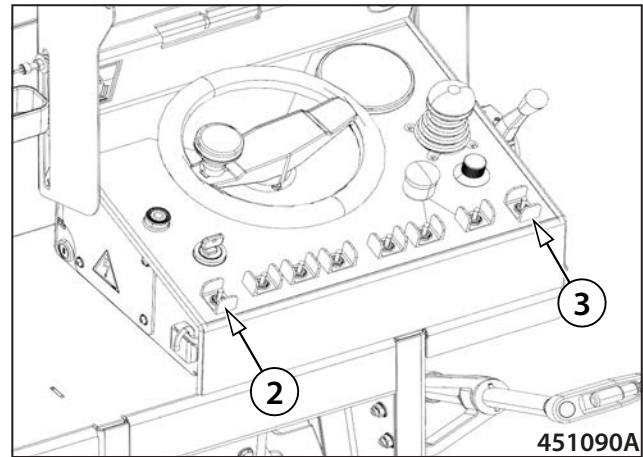



Procedure for setting the required paving width on the right side of the screed:

- To increase the paving width on the right side, turn the paving width switch (3) to the right and hold it.
- To release the paving width switch (3), lock it back to the middle position and the screed stops in the required position.
- To decrease the paving width on the right side, turn the paving width switch (3) to the left and hold it.
- To release the paving width switch (3), lock it back to the middle position and the screed stops in the required position.
- Check the required setting of the paving width on the right side by checking the position on the right paving width indicator (52).



When setting the required screed width, no one is allowed in the hazardous area of the machine.

There is a risk of injury from the movement of the screed extensions. The safe distance from the machine is at least 5 m.

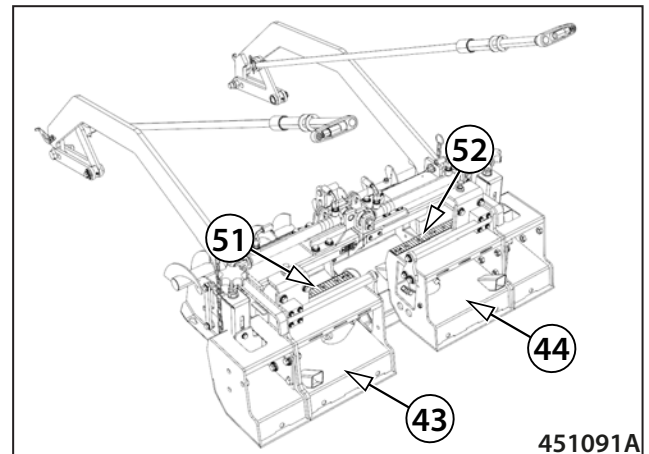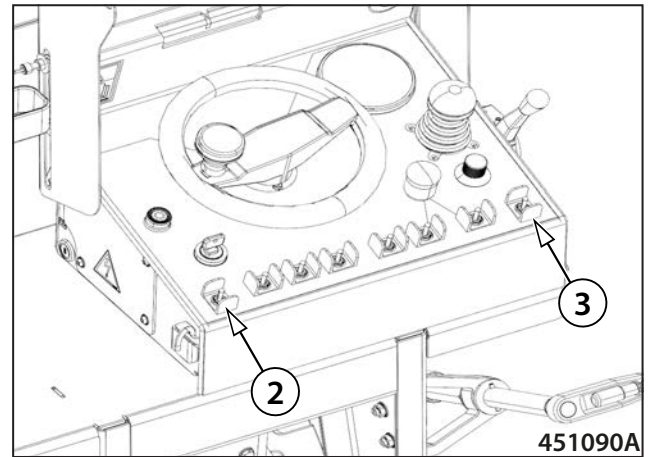

2.6 Operation of the screed

2.6.4 Setting the paving thickness

By setting the paving thickness, we can set a variable paving thickness in the range from 5 to 100 mm (0.2 – 3.9 in).

The maximum allowed difference in the paving thickness (H) on the left and right side of the machine can be 40 mm (1.6 in).

The paving thickness is set by setting the pitch angle of the screed.

The pitch angle is an angle between the base of the screed and the surface of the subgrade in the longitudinal direction of machine travel.

A larger pitch angle will cause a higher lift and this will cause a greater paving thickness.

To create a layer with the right or left crown (A), set a different paving thickness on both sides of the machine using the paving thickness controllers (47).

Procedure for setting the paving thickness:

- To increase the paving thickness on the left or right side, turn the paving thickness controller (47) in the clockwise direction.
- To decrease the paving thickness on the left or right side, turn the paving thickness controller (47) in the anti-clockwise direction.
- During paving of the material check the setting of the paving thickness on the left and right side by checking the position of the paving thickness indicator (1) on the paving thickness scale (2).

Note

The paving thickness scale (2) is only used for informative measuring and the actual paving thickness must be measured behind the machine.

Every change in the paving thickness is manifested with a delay (after driving 2 – 6 length of the screed tow arms).

Procedure for setting the screed tow arms:

- The quantity of the material delivered to the area of augers can be affected by setting the screed tow arms depending on the grain size of the paved material.

Grain size 0 – 25 mm:

- The screed tow arms must be set in point (3).

Grain size 25 – 35 mm:

- The screed tow arms must be set in point (4).




When setting the required paving thickness, no one is allowed in the hazardous area of the machine.

There is a risk of injury from the movement of the screed.


When setting the screed tow arms, there is a danger of injury caused by movement of the tow arms.

There is a risk of burns from the hot parts of the screed.


When setting the screed tow arms, use the prescribed protective equipment.

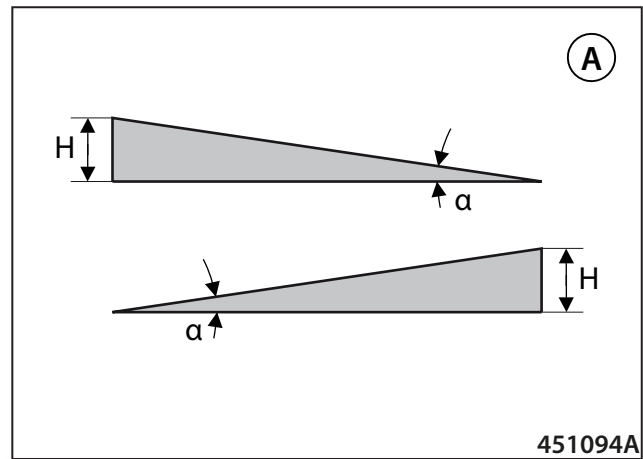

451094A

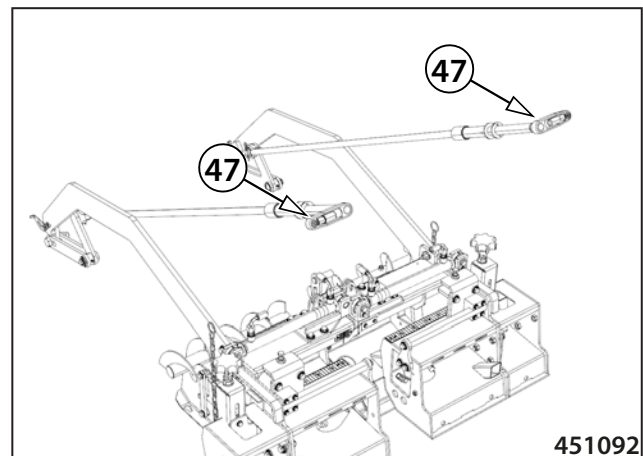

451092

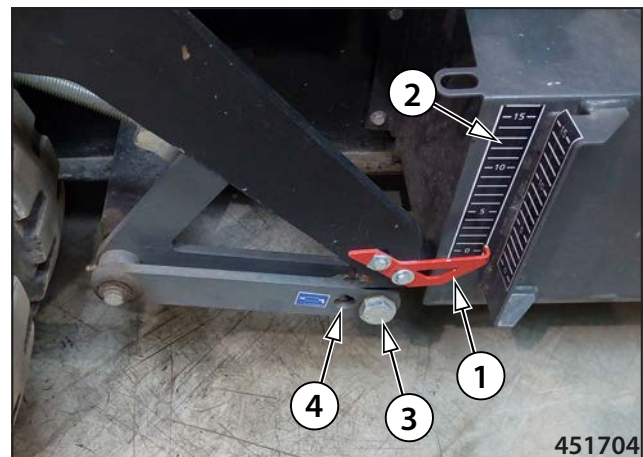

451704



The paving thickness scale (2) is only used for informative measuring and the actual paving thickness must be measured behind the machine.

2.6.5 Setting the roadway profile

Setting the roadway profile defines the cross shaping of the paved layer with the purpose to drain water from the road in a crosswise direction.

The roadway profile is measured in "%" and the positive "α" and negative "β" roadway profile is distinguished.

- In case of the positive roadway profile, the centre of the layer lies above the edges of the layer. The roadway drains the water to both sides of the road.
- In case of the negative (super elevation) roadway profile, the centre of the layer lies below the edges of the layer. The roadway drains the water to the centre of the road.

The limit values of the roadway profile are different for the positive and negative ranges.

- The positive range may be set to a maximum of 3 %.
- The negative range may be set to a maximum of -2%.

Setting the roadway profile:

- Set the roadway profile by setting the screw (1) on the screed of the machine.
- Ensure that the machine is standing on a level and firm surface.
- To increase the roadway profile, loosen the screw (1).
- To decrease the roadway profile, tighten the screw (1).
- Check the setting of the roadway profile on the scale (2).

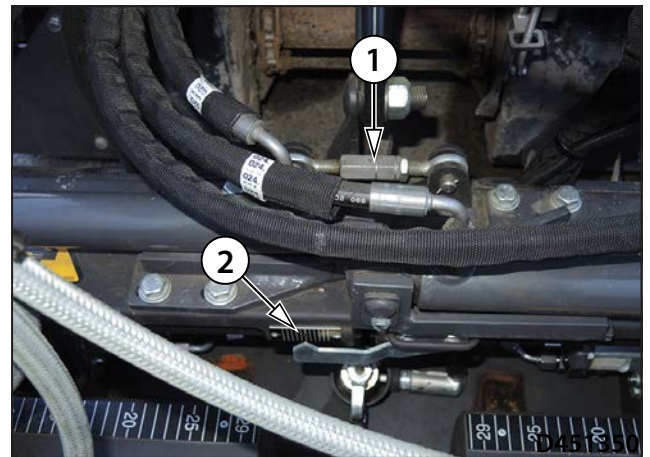
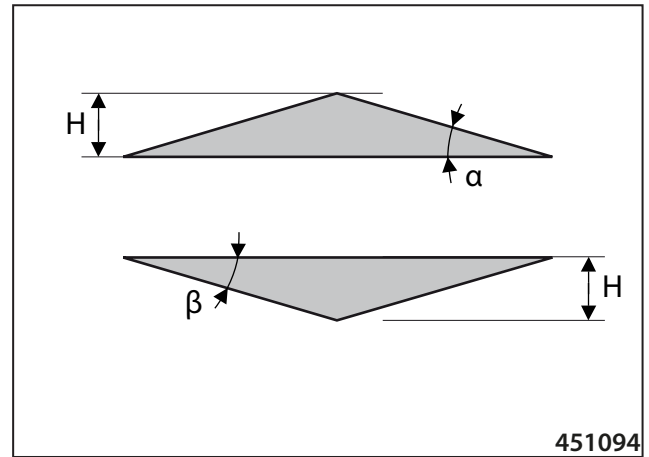


Table of values for positive roadway crown setting:

% (+)	α (°)	V (mm (in))
+1	0.57	6.5 (0.26)
+2	1.15	13 (0.51)
+3	1.72	19.5 (0.77)

Table of values for negative roadway crown setting:

% (-)	β (°)	V (mm (in))
-1	0.57	6.5 (0.26)
-2	1.15	13 (0.51)

2.6 Operation of the screed


2.6.6 Setting the end gates

The screed end gates (39) prevent the paving material from getting outside the paving area.

The screed of the machine is equipped with a left and right screed end gate (39), chains (2) and holders (3) for setting the position of the screed end gates (48) on the left and right side of the screed.

Procedure for setting the end gates:

- Release the chains (2) of holders (3).
- Check that the screed end gates (39) are in contact with the ground.
- Hang the chains (2) on holders (3).
- Check that the screed end gates (39) have a sufficient play to copy the ground profile during paving of the material.

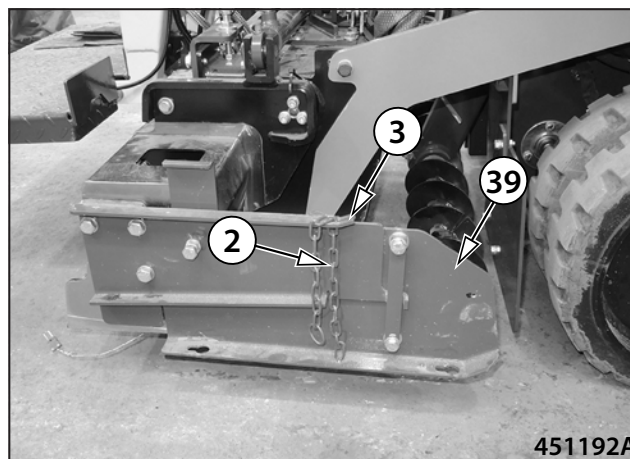

The end gates must be set before starting paving.

Set the end gates before starting the paving on the machine with the engine off.

There is a risk of injury from the movement of the screed.

2.6.7 Screed vibration (optional equipment)

The function of the screed vibration serves for reducing a machine travel resistance during paving and improving the surface of the paved asphalt mixture.


Vibration is only active in the operating mode and machine travel forward.

Turning on:

- Switch over the transport/operating mode switch (15) to the lower position.
- Turn the vibration unit switch (6) on the main dashboard to the upper position.
- During the machine travel forward, the vibration function is activated and the vibration indicator lamp (30) turns on.
- When the machine stops, the vibration function is deactivated and the vibration indicator lamp (30) turns off.

Turning off:

- To turn off the vibration function, turn the vibration unit switch (6) on the main dashboard to the lower position.

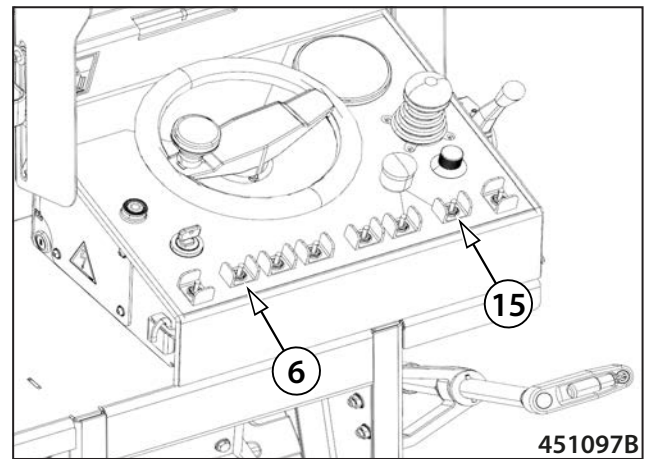

2.6 Operation of the screed

2.6.8 Screed gas heating

To heat the screed with gas, liquefied propane-butane (LPG) can only be used.

The maximum gas bottle volume which may be placed on the machine is 10 kg (22 lb).

It is prohibited to use natural gas for screed heating.

The screed heating system is designed for a maximum operating pressure of 1 bar with a total gas consumption of 10 kg/h (22 lb/h).

The recommended operating pressure for screed gas heating is from 0.6 bar to 0.8 bar, the gas consumption of a burner is approx. 200 g/h (0.44 lb/g).



Propane-butane (LPG) is an extremely flammable substance and any leakage causes a high risk of fire or explosion!

Propane-butane (LPG) is heavier than air and may accumulate in lower places – danger of fire or explosion!!

Do not smoke during machine operation. There is a risk of explosion or fire. Liquid gas can easily ignite.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

Caution! Risk of explosion, if the screed gas heating is operated incorrectly, or safety and fire instructions for using and handling gas bottled are not adhered to.

Operate the screed heating system always according to the operating manual delivered with the machine.

Adhere to the national regulations in the country where the machine is operated. Familiarize yourself with these regulations and observe them.

It is prohibited to use natural gas for screed heating.

Operate the machine only with the liquefied propane-butane (LPG). Propane-butane (LPG) is an odourless liquefied gas.

In some countries, in which the machine is operated, gas manufacturers odorize odourless gasses due to safety reasons (by adding aromatic substances), so that a leak can be identified easily.

In such cases pay higher attention to a potential gas leak during operation of the machine, which is manifested by an odour, and close the gas inlet.

In case of gas leakage, in some cases it is impossible to rely on the gas odour as a sign of gas leak from the system.

During the operation of the machine visually check that the gas system is undamaged.

Regularly check the gas system according to the maintenance plan given in this manual, especially hoses, valves and other components.

Always require a material safety data sheet to the delivered gas bottle. Before mounting the gas bottle on the machine, read and check that the gas bottle meets all conditions for putting the machine into operation.

Risk of burns! The screed may reach the temperature of up to 130°C.



Stop the gas leakage.

In case of gas leakage, inform relevant national authorities.

Mounting the gas bottle on the machine:

Before mounting the gas bottle on the machine, check the content of the gas bottle (1) that it contains liquefied propane-butane (LPG).

If the contents of the gas bottle is incorrect or not known, never use the gas bottle (1)!

Before mounting the gas bottle on the machine also check that the gas bottle is undamaged.

Do not use the gas bottle (1) in case of any damage!

Before mounting the gas bottle on the machine, the machine must be equipped with a fire extinguisher at a designated place (35).

Procedure for mounting the gas bottle on the machine:

- Place a gas bottle (1) on the platform (4) next to the main dashboard in the vertical position, with the gas bottle shut-off valve facing up.
- Fasten the gas bottle using a fastening strap (3) to the holder (2).



The gas bottle must be placed on the machine vertically with the gas bottle stop valve facing up.

It is prohibited to place and transport the gas bottle on the machine in a different position than specified in this manual.

The maximum gas bottle volume which may be placed on the machine is 10 kg (22 lb).




During machine operation it is prohibited to use damaged gas bottles or gas bottles with an incorrect or unknown contents.

Never operate the machine unless the gas bottle is firmly fastened.

An unfastened gas bottle can fall down and the bottle or gas bottle valve may be damaged.

There is a risk of explosion.

During machine operation check that the gas bottle is correctly fastened.

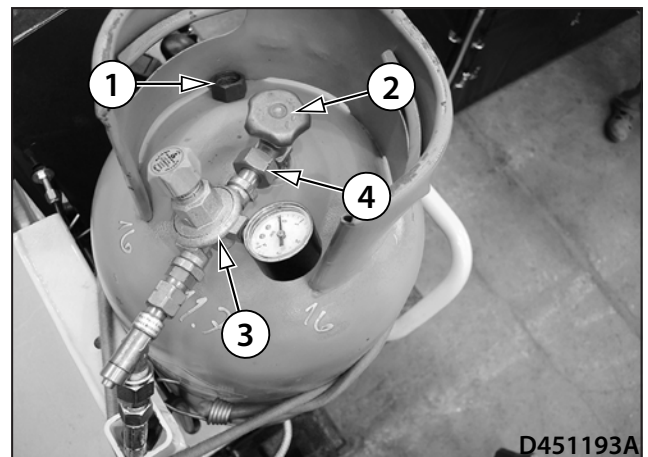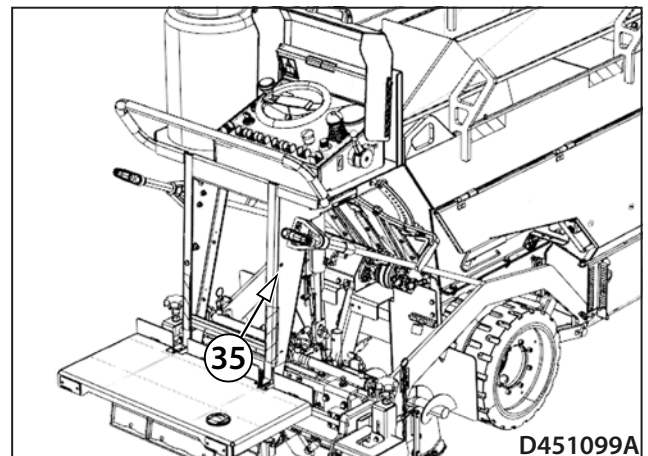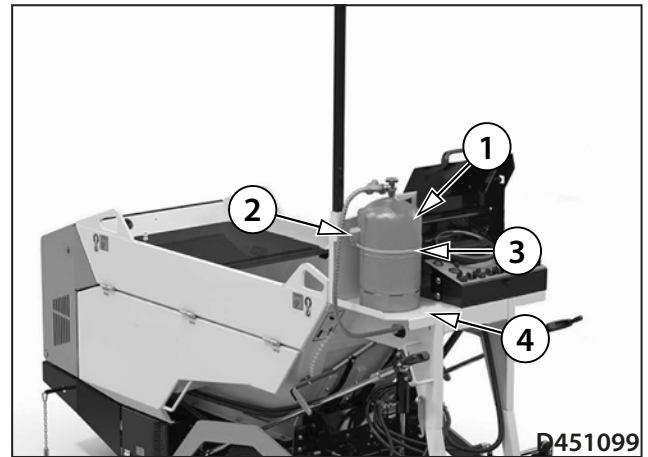

Procedure for gas bottle connection:

- Dismount the protective cap (1) from the gas bottle shut-off valve (2).
- Check that the rubber seal of the cap nut (4) of the reducing valve (3) is undamaged. In case of damage, replace the rubber seal of the cap nut (4) of the reducing valve (3).
- When connecting the reducing valve onto the gas bottle, pay attention to the thread direction.
- Connect the gas bottle by screwing on the reducing valve (3) on the gas bottle shut-off valve (2).
- Tighten the cap nut (4) of the reducing valve (3) at the maximum tightening torque value of 3-5 Nm (2.2 – 3.7 lbft).



Caution! Tighten the cap nut (4) of the reducing valve (3) at the maximum tightening torque value of 3-5 Nm (2.2 – 3.7 lbft); there is a risk of damage to the rubber seal.

Caution! Risk of damage to the thread when connecting the gas bottle.

Caution! The reducing valve is fitted with a nut which has a left-handed thread.

Before putting the machine into operation, check the tightness of the reducing valve (3).

Caution! Always check the tightness of the cap nut (4) connection after connecting a gas bottle.

2.6 Operation of the screed

Opening the gas supply

Gas is supplied via the gas bottle (9) shut-off valve (2).




Before mounting the gas bottle on the machine always check that the delivered gas bottle has a valid revision according to the valid national regulations.

Keep the safety valve (7) clean and in faultless condition.

Abide by the instructions for opening gas supply.

Caution! When the operation is terminated or machine shut down, always close the shut-off valve (2) of the gas bottle (9).

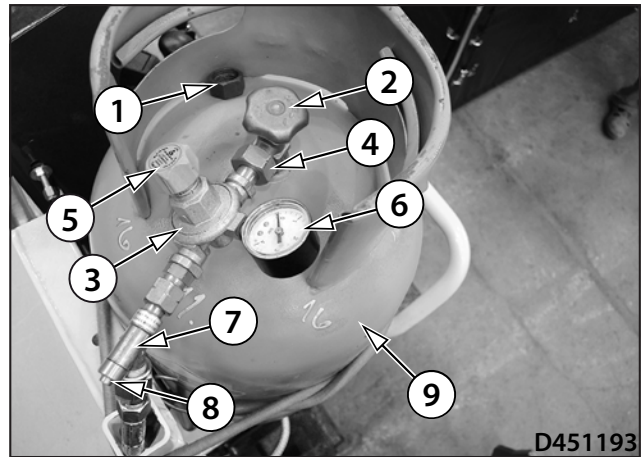


Revise the machine gas equipment regularly, at least one a year.

Caution! Risk of screed damage if gas pressure is set too high.

A too high gas pressure may cause the screed to overheat and as a result to mechanically deform.

Always keep an operating pressure in the range of approx. 0.6 bar to 0.8 bar.

Never exceed the maximum operating pressure of 1 bar.

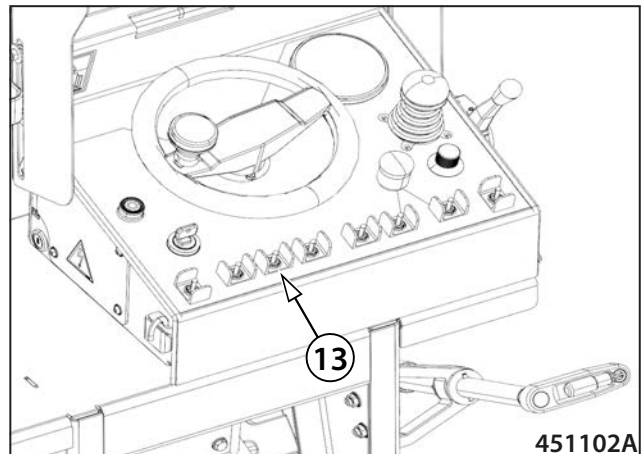

Gas bottle inspection:

- Check on the pressure gauge (6) that the gas bottle (9) is sufficiently full.
- A pressure on the pressure gauge (6) may not be lower than 1.5 bar.
- If the gas level is too low, replace the gas bottle (9) for a new one with sufficient filling.

Inspection of screed heating system switch-off:

- Check on the main dashboard that the screed heating system is switched off.
 - The screed heating switch (13) must be in the lower "OFF" position.
 - The screed gas heating indicator lamp (28) is not lit.




Procedure for opening the gas bottle:

- Slowly open the gas bottle (9) shut-off valve (2).
- Check the response of the safety valve (7).
- If the safety valve (7) clicks (stops the gas supply), immediately close the shut-off valve (2) of the gas bottle (9) and proceed according to instructions in Chapter 3.7.3.
- Apply the procedure for resetting the safety valve function.
- Do not apply the procedure for resetting the safety valve function more than twice. If the failure is not removed, close the valve (2) of the gas bottle (9) and call an authorised service for repair.



Do not reset the safety valve more than twice.

Unless the failure is removed, call an authorised service.

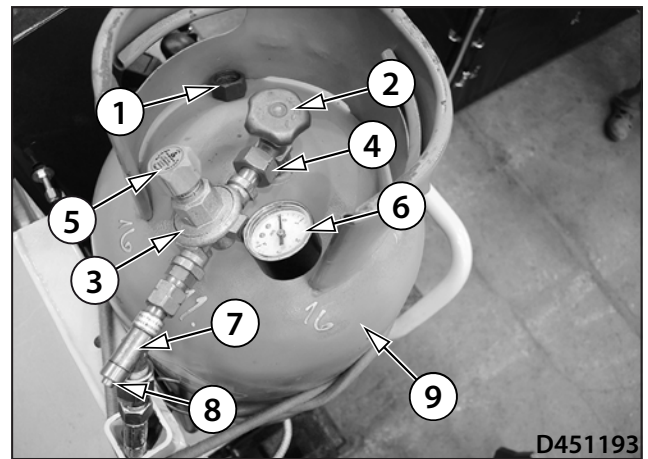

D451193

Procedure for resetting the safety valve function:

This procedure only serves for resetting the safety valve in case that the safety valve is activated.

- Press the button for resetting the safety valve (8) and hold it pressed for 20 s.
- Gas pressure builds up and the safety valve (7) remains opened.
- Release the safety valve reset button (8).
- Unless the safety valve function is deactivated, close the shut-off valve (2) of the gas bottle (9) and call an authorised service to troubleshoot the failure.



Do not reset the safety valve more than twice.

Unless the failure is removed, call an authorised service.

2.6 Operation of the screed


Procedure for setting operating pressure:

- Set the gas operating pressure on the reducing valve (3) by valve (5); the gas operating pressure must be at the range of 0.6 – 0.8 bar.
- Check the set values on the gas pressure gauge (6).
- The maximum operating pressure is 1 bar.



Always keep an operating pressure in the range of approx. 0.6 bar to 0.8 bar.


Never exceed the maximum operating pressure of 1 bar.

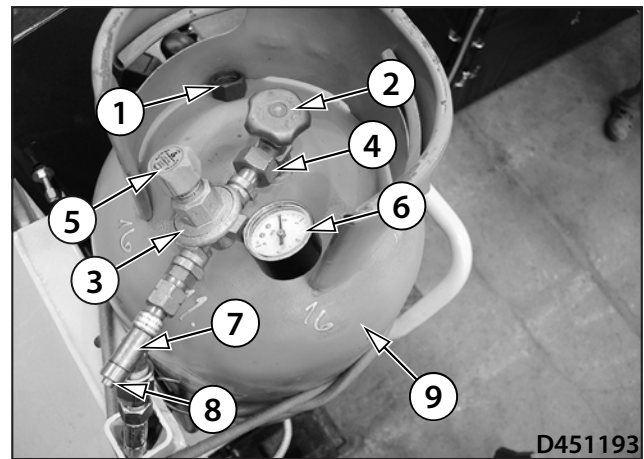


D451193

Procedure for switching the screed gas heating on and off:

- Insert the key into the ignition box (11) in the position "0" and switch over to the position "I".
- To switch it on, turn the screed heating switch (13) to the upper position.
- The screed gas heating indicator lamp (28) will light up on the display.
- The gas supply solenoid valve opens the gas inlet to the burners.
- Automatic ignition boxes will activate spark plugs within 10 s.
- The burners ignite and the gas burns.
- A thermal sensor situated on the screed checks the temperature of the screed lower surface.
- When the temperature is too high, the thermal switch interrupts power supply and the solenoid valve closes the gas supply.
- When the temperature is too low, the thermal switch restores power supply and the solenoid valve opens the gas supply.
- To switch off the screed gas heating, turn the screed heating switch (13) to the lower "OFF" position.
- The screed gas heating indicator lamp (28) will go off on the display.
- Automatic screed heating ignition boxes will interrupt power supply and the solenoid valve closes the gas supply.

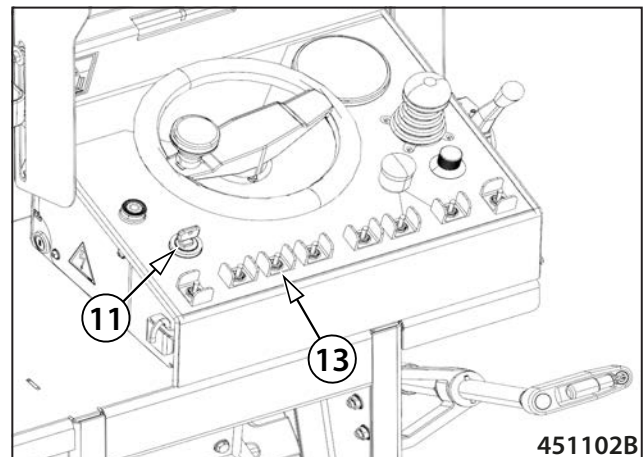

451102B

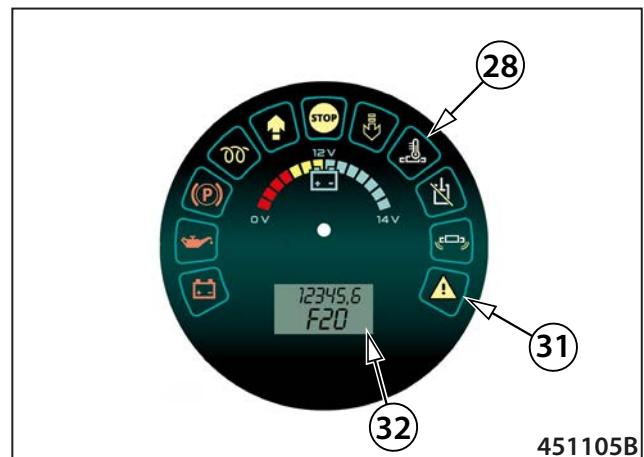

451105B

Note

To accelerate screed heating, place the screed on a solid non-flammable surface.



If an active error indicator lamp (31) and the error code (32) light up on the display during paving, switch off the screed gas heating function and proceed according to the instructions in Chapters 3.7.3 or 3.7.7.

Do not reset the safety valve more than twice.

Unless the failure is removed, call an authorised service.

Procedure for gas bottle disconnection:

- Close the shut-off valve (2) on the gas bottle (9).
- Disconnect the gas bottle by screwing out the cap nut (4) of the reducing valve (3) on the gas bottle shut-off valve (2).
- When disconnecting the reducing valve from the gas bottle, pay attention to the thread direction.
- Check the seal of the reducing valve (3) for damage and replace the reducing valve seal if needed.
- Mount the protective cap (1) onto the gas bottle shut-off valve (2).




Caution! Risk of damage to the thread when connecting the gas bottle.

Caution! The reducing valve is fitted with a cap nut which has a left-handed thread.

When the gas bottle is dismantled from the machine, it must be stored in special areas.

Use only original spare parts delivered by the machine manufacturer.

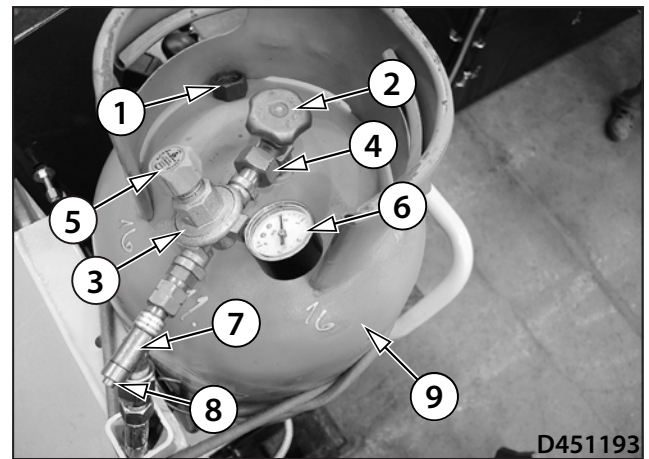

2.6 Operation of the screed



2.6.9 Loading material to the machine

Always load the material into the machine at the place of paving, just before performing paving.

The beacon of the machine must be activated when loading a material to the machine.

Procedure for loading the machine

- Start the engine.
- Lower the screed to the ground.
- Make sure the warning beacon is connected.
- Turn off the engine.
- Turn the key in the ignition box (11) from position "0" to position "I".
- The beacon is activated.
- Leave the driver's stand.
- Open the hopper extension.
- Make sure there are no persons in the dangerous area of the machine.
- Move away from the danger zone of the machine.
- Wait until the loader moves away from the danger zone of the machine.
- Close the hopper extension.
- Get on the driver's stand.
- Switch over the key in the ignition box (11) from position "I" to position "0".
- The beacon is deactivated.

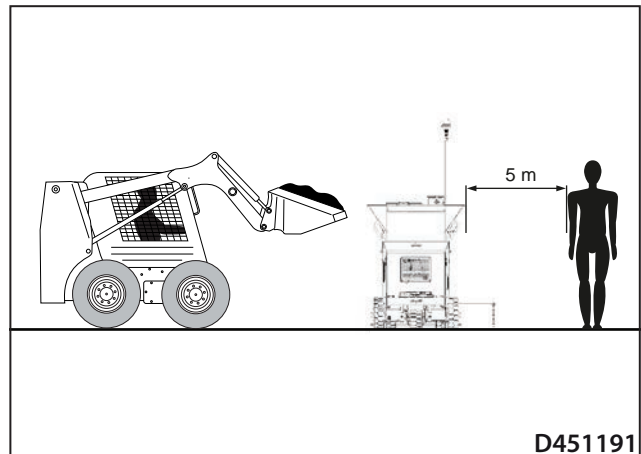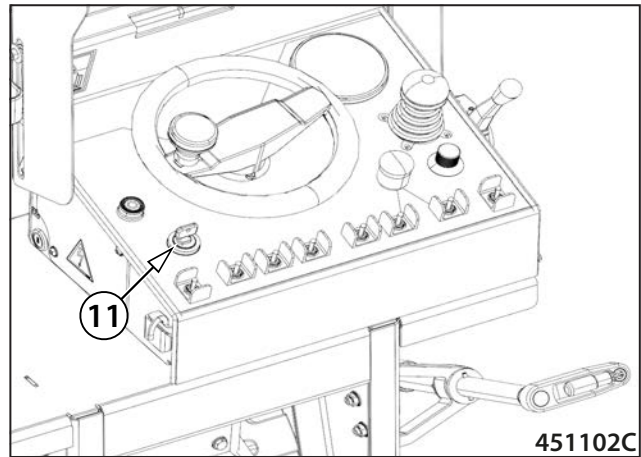

It is prohibited to load the material to the machine during machine operation. The machine must be parked on a flat and solid surface with the engine off and with the activated beacon.

Risk of burns when loading the machine.

The material is hot. Its temperature ranges from approx. 120 to 180°C.

Leave the driver's stand and move to a safe distance, before loading the machine with material. The safe distance is at least 5 metres.

2.6.10 Start of paving

Before paving complete the following tasks:

- As needed:
 - Adjust the front wheel.
 - Set the paving direction indicator.
 - Pre-set the conveyor limit switch.
 - Pre-set material outlet.
- Check that the warning beacon is connected.
- Set the footboard into the working position.
- Load the material to the machine.
- Start the engine.
- Set the paving width and thickness.
- Set the required roadway profile.
- Lower the screed to the floating position.
- Set screed end gates.
- Open gas supply.
- Turn on screed gas heating and preheat the screed.
- Get on the driver's stand.
- Put the machine into operation and pave the material.



Caution! Travel speed during paving may have negative influence on the paving result.



No one is allowed in the hazardous area of the machine during paving.

2.6 Operation of the screed

2.6.11 End of paving

Complete the following tasks before the end of paving:

- Stop the machine as needed.
- Activate the parking brake.
- Turn off the screed gas heating.
- Place the screed into a safe position, as needed, to avoid potential spontaneous fall of the screed.
 - Lower the screed to the ground.
 - Lock the screed.
- Turn off the engine.
- Leave the driver's stand.
- Set the footboard into the transportation position.
- As needed, set the paving direction indicator to the transportation position.
- As needed, turn off the battery disconnecter.



After the end of paving the machine must be shut-down on a flat solid surface.

If the machine is not subsequently operated, park the machine.

If the machine is parked, the gas bottle must be removed from the machine and stored in a special area.

Turn off the battery disconnecter when parking the machine.

When the machine is parked, protect the dashboard and the engine compartment from unauthorized access of others by locking the dashboard cover and the engine bonnet.

2.7.1 Preparation of the machine for transport

Each country has its own national transport regulations.

- Familiarize yourself with these regulations and observe them.
- When transporting the machine between two countries, observe the stricter national transport regulations.
- When transporting the machine, always remove the gas bottle from the machine.
- Transport the gas bottle according to the valid national regulations.

Procedure for preparation of the machine for transport:

- Check that there is no material in the hopper.
- Check that the hopper cover is closed.
- Start the engine.
- Set the minimum paving width on the screed.
- Lock the screed.
- Stop the engine.
- Closed the gas supply.
- Check that the gas supply is closed.
- Disconnect the gas bottle.
- Remove the gas bottle from the machine.
- Before loading using a crane lift the footboard.
- Check that there are no loose objects on the machine.



Familiarise yourself and observe the national transport regulations.



When transporting the machine, always remove the gas bottle from the machine.

Transport the gas bottle according to the valid national regulations.

2.7 Machine transport

2.7.2 Loading the machine using a ramp

Use a loading ramp to load the machine onto the transport vehicle.

When loading the machine using a ramp, all safety regulations related to loading of the machine and complying with the national regulations in the place of loading must be adhered to. The ramp must have appropriate loading capacity, anti-slip surface and must be put on a flat surface. We recommend that you adhere to the BGR 233 regulation.

The maximum permissible value of incline of the ramp is 12 %.

Procedure for loading the machine using a ramp:

- As needed, turn on the battery disconnecter.
- Set the tilting platform to the working position.
- Get on the driver's stand.
- Start the engine.
- Deactivate the parking brake.
- Drive the machine onto the transport vehicle.
- Stop the machine.
- Unlock the screed and lower the screed on the cargo bed of the mean of transport using the foot switch (48).
- Activate the parking brake.
- Turn off the engine.
- Leave the driver's stand.
- Set the footboard into the transportation position.
- Turn off the battery disconnecter.
- Anchor the machine and mechanically secure it with slings in tie-down holes against longitudinal and lateral displacement as well as against overturning during transport.
- Secure the machine wheels against accidental movement using wedges.



When loading the machine, another person must be present to give hand signals to the machine operator.


See the list of hand signals in chapter 2.1.9.

Pay increased attention when loading the machine. Improper handling can cause serious injury or death.

Caution! There is a risk of serious injury or death by the machine falling down when it is being loaded on the transport vehicle.

Anchor the machine and mechanically secure it with slings in tie-down holes against longitudinal and lateral displacement as well as against overturning during transport.

Secure the machine wheels against accidental movement using wedges.

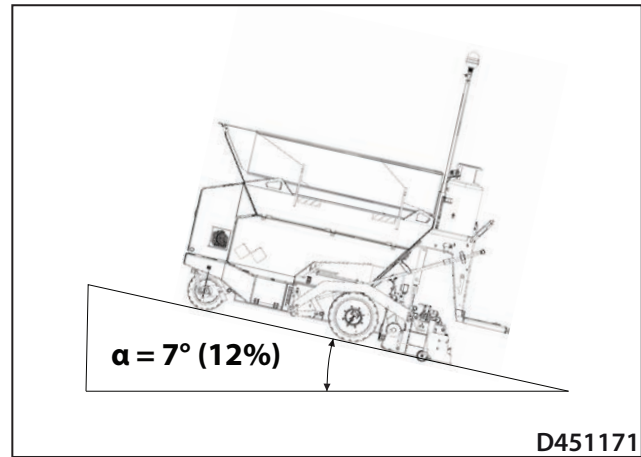

A failure to observe prescribed ramp parameters with regard to the maximum permissible inclination of the machine may cause damage to the machine.

2.7.3 Loading the machine with a crane

For loading with a crane, the machine is provided with lifting lugs (1).

When loading the machine, use a crane with a sufficient load capacity.

When loading and unloading the machine or its parts, it is necessary to observe relevant national regulations.



When loading the machine, another person must be present to give hand signals to the machine operator.

See the list of hand signals in chapter 2.1.9.

Observe safety regulations while loading and unloading.

Use a crane with a sufficient load capacity.


Use corresponding and unbroken hoisting slings with a sufficient load capacity.

The machine must be tied to the lifting lugs (1).


The machine must be tied for loading and unloading with a crane only by a trained person.

Do not enter under the suspended load.

When loading the machine with a crane, no one is allowed to be in the loading area of the machine. The safe distance is at least 5 metres from the loaded machine.

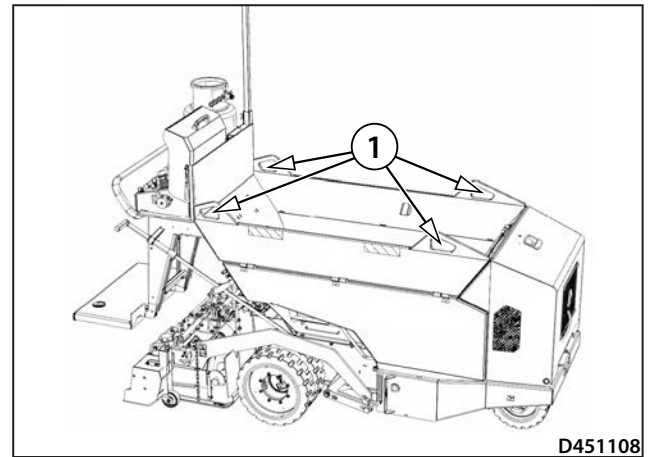

D451108

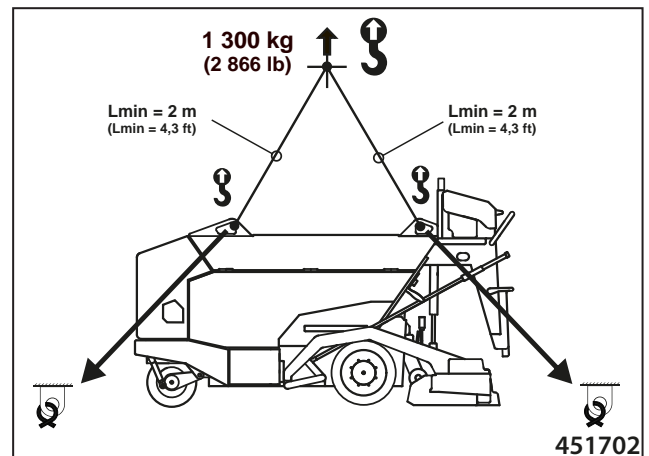

451702

2.7 Machine transport

2.7.4 Machine transport

- The machine can move on its own within the work site.



When driving, observe the safety measures applicable to the working site.

- The machine should be transported on a vehicle on public roads.





When transporting the machine on a vehicle, observe regulations applicable to the given territory.

When transporting the machine on a vehicle, the gas bottle must be removed from the machine.

A warning label must be placed on the transport vehicle, informing of the transport of a gas bottle according to the national regulations.

When loading and unloading, the vehicle transporting the machine must be braked and mechanically protected against accidental movement using wedges.

The machine on the vehicle must be properly anchored and mechanically secured with the slings in tie-down holes against longitudinal and lateral displacement as well as against overturning. The machine wheels must be secured against accidental movement using wedges.

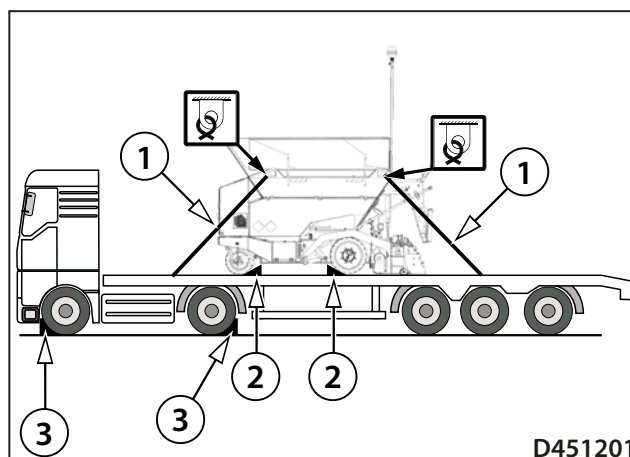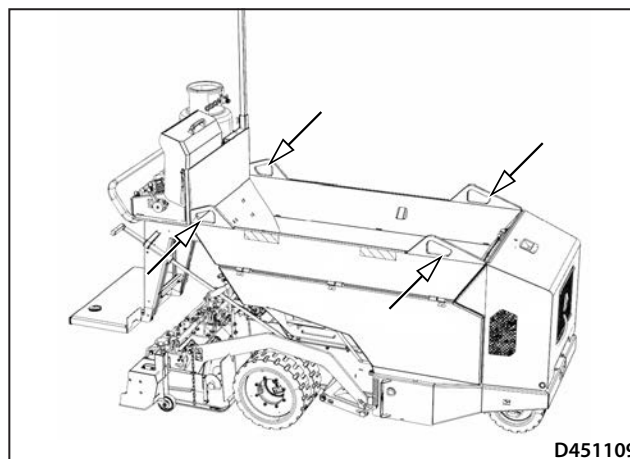

2.7.5 Preparation of the machine for operation after transportation

Procedure for preparation:

- Make sure a gas bottle is installed.
- Connect the gas bottle.
- Restore the gas supply.

2.8 Special conditions to use the machine

2.8.1 Towing the machine

The machine is not fitted with any system that would manually release the parking brake. If the pressure in the brake system is too low, the rear wheels will remain blocked.

We recommend towing the machine only for short distances or to avoid towing completely, if possible.

- Depending on the possibilities, have the machine repaired or maintenance performed on location.
- If possible, use a crane to lift the machine and transport it for maintenance and repairs.

Procedure to tow the machine:

- The towing movement when towing the machine must be smooth. Do not exceed the towing speed by more than 1 km/hour (0.6 mph).
- The towed machine must be attached to the towing lug (1).
- Make sure there are no persons in the dangerous area of the machine.
- Move away from the danger zone of the machine.
- Have the machine towed in compliance with the instructions of the machine owner.



Risk of injury when towing the machine.

For towing, use undamaged tow ropes or tow bars of a sufficient capacity $1.5 \times$ higher than the weight of the towed vehicle. Do not use a chain for the towing.

Ensure that there are no persons in the dangerous area when the machine is towed.

Move away from the danger zone of the machine. The safe distance is at least 5 metres.

The machine may only be towed attached to the towing lug (1), by means of a tow bar (2) or tow rope (2).

No persons are allowed on the machine when the machine is towed!





There is a risk of damage to the machine when the machine is towed.

The rear wheels are blocked and will skid over the surface. The front wheel can turn, but cannot be controlled.

Tow the machine very slowly and smoothly.

Tow the machine only using vehicles with a sufficient tow force considering the weight of the towed machine.

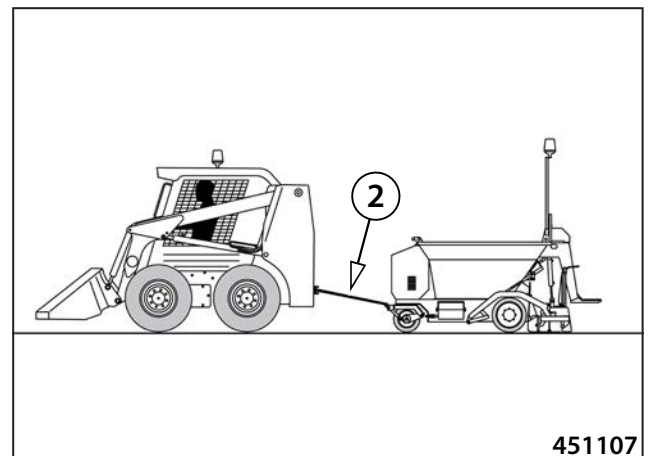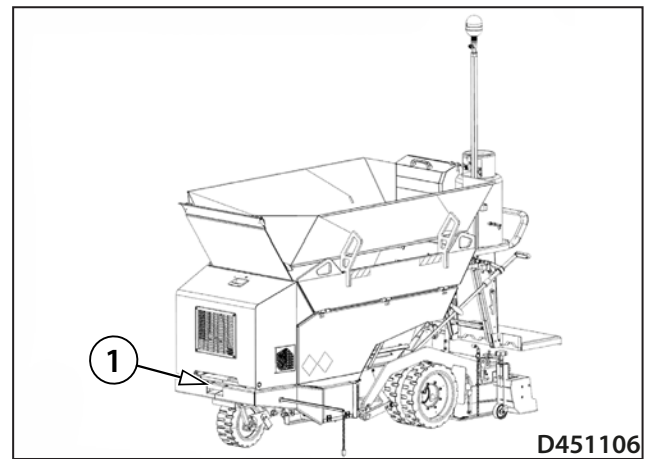

2.8 Special conditions to use the machine

2.8.2 Climatic conditions

Operating the machine at low temperatures

Prepare the machine for operation at low temperatures:

- Replace the engine oil with the oil recommended for the range of ambient temperatures.
- Use hydraulic oil of the corresponding cinematic viscosity.
- Use a winter diesel.
- Check the battery for charging.

Operation at low temperatures:

- The good condition of the battery is a precondition for good starting under low temperatures. The machine can be used at full power only after the operating fluids have been heated to their operating temperatures.
- Every week check all rubber parts, e.g. hoses, V-belts.
- Check all electrical cables and connections for worn and/or damaged insulation.
- Refill the fuel tank at the end of every shift.

Operating the machine at higher temperature and humidity:

- The engine power output decreases with the increasing temperature and air humidity. Considering that both of the factors reducing the engine power are independent on each other, it is possible to describe their impact as follows:
 - Every 10 °C (18 °F) of the temperature rise means a power drop by up to 4% (at a constant humidity).
 - Every 10 % of the relative humidity rise means a power drop by up to 2% (at a constant temperature).
- At outdoor temperatures when the hydraulic oil temperature is constantly about 90°C (194°F), we recommend you to replace the oil with the oil ISO VG 100 having the cinematic viscosity of 100 mm²/s at 40°C (104°F).

Machine operation at high altitudes

- With the increasing altitude, the engine power output decreases as a result of the lower atmospheric pressure and specific density of the incoming air.



The engine power depends on the environment, in which the machine is working.

2.8.3 Operation of the machine in dusty environment



While operating in a very dusty environment, shorten cleaning and replacement intervals of air filter cartridges and shorten cleaning intervals of coolers.

The recommended cleaning interval is once a week.

3 MAINTENANCE MANUAL

F80W (Hatz)

3.1 Safety and other measures during maintenance of the machine

3.1.1 Safety precautions during machine maintenance

Lubrication, maintenance and adjustment process shall be performed:

- by professionally qualified and trained personnel,
- according to intervals given in the Operating Manual,
- in compliance with safety warnings given in the Operating Manual,
- on the machine standing on a flat and solid surface and secured against movement with wedge blocks, always with the engine off, the key removed from the ignition box and the battery disconnecter disconnected,
- with the "Machine repair" tag attached to the steering wheel (the tag is supplied with the machine accessories),



- on cold machine parts,
- there is a danger of burning after operating fluids warm up during certain tasks of inspection or maintenance of the machine,
- after the machine, lubrication points and maintenance places have been cleaned,
- using suitable, undamaged tools,
- by replacing parts with new original parts according to the spare parts catalogue,
- with sufficient lighting of the entire machine during reduced visibility and at night,
- reinstall all removed covers and safety elements after the work is completed,
- re-tighten bolted connections according to the specified tightening torques.

When using a steam cleaning machine, use protective clothes and safety glasses or a face shield and a protective helmet.


Hot steam can cause serious injuries.

Spilt fuel on a hot surface or electric parts can cause fire. Fire can consequently cause serious injuries.

Never place your head, body and arms under the parts of the machine which are not firmly fixed to the machine or secured against spontaneous fall.

If you need to perform repair or maintenance in areas which are not accessible from the ground, use ladder or a platform with stairs which comply with respective national regulations to reach the working area. Unless any platform with stairs or a ladder are available, use only handles and foot plates the machine is equipped with. By failure to observe these rules you expose yourself to the danger of injury by falling down of the machine.

Do not use petrol, diesel oil, thinners or other flammable liquids to clean parts of the machine. Use approved commercial solvents which are non-flammable and non-toxic.



After the adjustment or maintenance is completed, check all safety devices for proper operation!

3.1 Safety and other measures during maintenance of the machine

3.1.2 Safety and fire precautions during replacement of operating fluids

Considering the fire danger, the flammable liquids and gases used on the machine are divided into the following hazard classes:

- hazard class I – propane-butane (LPG)
- hazard class II – diesel fuel
- hazard class IV – mineral oils, lubricating greases

The oil change area must be located so that it does not interfere with any explosion or fire hazard area.

It must be identified by the tables and marks with “No smoking” signs and signs prohibiting the use of naked fire.

The handling area must be dimensioned so that it can catch a volume of flammable liquid equal to the capacity of the biggest, transport container.

It must be equipped with portable fire extinguishers.

To handle the oil, diesel and other operating fluids use such vessels such as metal barrels, jerrycans or sheet-metal cans.

The transport containers must be properly closed during storage.

Containers must only be provided with one hole, always stored with the hole up and secured so that their content cannot flow out and drip off.

Containers must be marked by non-removable texts stating the contents and flammability classes.

3.1.3 Environmental and hygienic principles

3.1.3.1 Hygienic principles

When operating and maintaining the machines, the user and appointed workers shall observe general principles of health protection related to these issues according to respective national regulations.

Operating fluids of the machine, battery fluids and paints including thinners are harmful to health.

Workers coming into contact with the above products during operation or maintenance of the machine are obliged to follow general principles of health protection and comply with safety and hygienic manuals by manufacturers of the products.

In particular we draw your attention to the following:

- Protect your eyes and skin while working with the batteries.
- Protect your skin when working with operating fluids and paints.



Always store operating fluids and cleaning and preservative agents in their original, properly labelled packages.

These materials are not allowed to be stored in unlabelled bottles or in any other containers considering the likelihood of confusion.

Possible confusion with foodstuffs or beverages is very dangerous.

If by accident the skin, eyes or mucous membrane is stained or if you breathe in vapours, apply immediately the principles of the first aid and immediately seek medical first aid.

During operation of the machine always use protective equipment stated in this Operating Manual.

3.1.3.2 Environmental principles

Some parts of the machine and operating fluids become hazardous wastes with dangerous properties for the environment after they are put out of operation.

This category includes in particular the following:

- organic and synthetic lubricating materials, oil or fuels,
- coolants,
- battery fluids and batteries,
- tyre fillings,
- all dismantled filters and filter elements,
- any used and discarded hydraulic and fuel hoses, rubber-metal elements and other parts of the machine contaminated with the above mentioned products.
- cleaning and preservative agents.



When operating and storing the machine, the user shall observe general principles of environmental protection related to these issues according to respective national regulations.

Contaminated parts of the machine and operating fluids must be handled according to respective national regulations after they are put out of operation.

DYNAPAC does not assume any liability in cases when contaminated parts and operating fluids are disposed of in an improper way, which may result in damage to the environment.

3.2 Specification of operating fluids

3.2.1 Engine oil



Engine oil has been specified as per its performance classification and viscosity classification.

Performance classification according to

API (AMERICAN PETROLEUM INSTITUTE)

ACEA (ASSOCIATION DES CONSTRUCTEURS EUROPÉENS DE AUTOMOBILE)

Viscosity classification

To determine the SAE (Society of Automotive Engineers) viscosity class, the ambient temperature and type of operation where the machine is used are decisive.

Use of permissible oils according to API: CF / CH-4 or better quality.

Use of permissible oils according to ACEA: B3 / E4 or better quality.

SAE 15W-40 year-round.

Note

Exceeding the lower temperature limit does not result in damage to the engine; it can only cause some starting difficulties.

It is convenient to use universal multi-range oils to avoid oil changes due to ambient temperature.

For easy starts at the temperatures below 0°C (32°F), the engine manufacturer recommends SAE 10W-30 oil.



Exceeding the upper temperature limit, considering the reduced lubricating capabilities of the oil must not last for long.

3.2.2 Fuel



Diesel oil is used as fuel for the engine:

- EN 590
- BS 2869 A1 / A2
- ASTM D 975-09a 1-D, 2-D

At ambient temperatures below 0°C (32°F), use winter diesel fuel.

Mixing diesel with special additives is forbidden.

Mixing diesel with petrol is forbidden.

3.2.3 Hydraulic oil



For the hydraulic system of the machine, it is necessary to use only high-quality hydraulic oil grades according to ISO 6743/HV (equal to DIN 51524 part 3 HVLP).

Fill the Machines normally with hydraulic oil that has cinematic viscosity of 46 mm²/s at 40°C (104°F) ISO VG 46. This oil is the most suitable for use in the widest range of ambient temperatures.

Synthetic hydraulic oil

The hydraulic system can be filled with synthetic oil, which if leakages occur will be degraded completely by micro-organisms present in water and soil.



Always consult with the oil manufacturer or dealer any switching from mineral oil to synthetic or mixing oils of various brands!

3.2.4 Anti-adherent solution



The anti-adhesive liquid is a non-adhesive additive.

It serves for cleaning the hopper, conveyor, augers and parts of the machine which are in contact with the paved asphalt material.

Use an environmentally-friendly anti-adherent solution according to the applicable national regulations.

To create the anti-adherent solution, mix a non-sticking agent with water according to the instructions of the non-sticking agent manufacturer.

Dosage

The anti-adherent solution dosage may vary depending on the operating conditions:

For standard mixtures, 1 part of anti-adherent solution in 30 parts of water. (1:30)

For modified mixtures, 1 part of anti adherent solution in 5 parts of water. (1:5)

Note

There is no vessel for an anti-adherent solution on the machine.

To apply the anti-adherent solution on individual parts of the machine, use a hand pump for spraying liquids.



It is prohibited to use diesel oil instead of an anti-adherent solution.

3.2 Specification of operating fluids

3.2.5 Liquid gas

The machine is equipped with a gas heating system that uses liquid gas as fuel.

- Propane-butane (LPG)



Propane-butane (LPG) is an extremely flammable substance and any leakage causes a high risk of fire or explosion!

Propane-butane (LPG) is heavier than air and may accumulate in lower places – danger of fire or explosion!

Gas inhalation may cause headache, weakness, confusion, dizziness and nausea. It causes frostbites in the liquid state in contact with skin!

Avoid contact with skin. Wear suitable protective clothing!

Wear protective gloves resistant to oil substances complying with EN374!

Wear safety goggles!

In case of excess of vapour concentration limits in air, use a suitable breathing mask. Recommended: organic fume and vapour filter (type A, AX)!

No smoking at work.

Provide adequate area ventilation!

Always require a material safety data sheet to the delivered gas bottle. Before mounting the gas bottle on the machine, read and check that the gas bottle meets all conditions for putting the machine into operation.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.


When the machine is operated in underground garages or other underground areas, observe the national safety regulations regarding space ventilation.



Stop the gas leakage.

In case of gas leakage, inform relevant national authorities.

3.2.6 Lubricating grease



0787






To lubricate the machine you must use a plastic grease containing lithium according to:

ISO 6743/9 CCEB 2

DIN 51 502 KP2K-30

3.3 Table of fluid quantities

3.3.1 Overview of fluids quantities and overview of symbols specified in maintenance plans

Part	Fluid type	Filling quantity l (gal US)	Brand
Engine	Engine oil according to Chapter 3.2.1.	1.8 l (0.48 gal US)	 2412
Fuel tank	Fuel according to Chapter 3.2.2.	5 l (1.3 gal US)	 DIESEL 2151
Hydraulic system	Hydraulic oil according to Chapter 3.2.3.	20 l (5.3 gal US)	 2158
Liquid gas	Liquid gas according to Chapter 3.2.5.	Maximum weight of 10 kg (22 lb)	
Anti-adherent solution	Fluid according to Chapter 3.2.4.	-	 AMN411
Lubricating grease	Grease according to Chapter 3.2.6.	As required	 0787

3.4 Lubrication and maintenance chart




Every 10 hours at the beginning of work (daily)	
3.6.1	Fuel level check
3.6.2	Engine oil level check
3.6.3	Hydraulic tank oil level check
3.6.4	Driver's stand cleaning
3.6.5	Cleaning the hopper, outlets and conveyor
3.6.6	Cleaning the augers
3.6.7	Test of burner ignition, flame position adjustment and spark plug maintenance
3.6.8	Gas equipment tightness check
Every 10 hours at the end of work (daily)	
3.6.9	Fuel level check
3.6.10	Cleaning the conveyor
3.6.11	Cleaning the augers
Every 50 hours (weekly)	
3.6.12	Clearing the water separator
3.6.13	Machine lubrication
After 50 hours of operation	
3.6.17	Engine oil replacement
Every 100 hours of operation (monthly)	
3.6.14	Fuel system tightness check
3.6.15	Rear wheel fastening check
3.6.16	Conveyor chain tension
Every 250 hours of operation (every 3 months)	
3.6.17	Engine oil replacement
3.6.18	Engine air intake check
3.6.19	Engine accelerator cable tension check
3.6.20	Hydraulic oil cooler cleaning
3.6.21	Hydraulic circuit tightness check
3.6.22	Battery inspection


Every 500 hours of operation (every 6 months)	
3.6.23	Fuel filter replacement
3.6.24	Air filter replacement
3.6.25	Front and rear wheel condition check
After 500 hours of operation	
3.6.27	Hydraulic oil and hydraulic oil filter replacement**
Every 1000 hours (yearly)	
3.6.26	Engine oil filter cleaning
3.6.27	Hydraulic oil and hydraulic oil filter replacement**
3.6.28	Gas line hose replacement
Maintenance as required	
3.6.29	Battery replacement
3.6.30	Screw connections tightness check
<p>* First after 50 engine hours.</p> <p>** First after 500 engine hours.</p>	





3.5 Lubrication and service plan

3.5.1 Maintenance plan

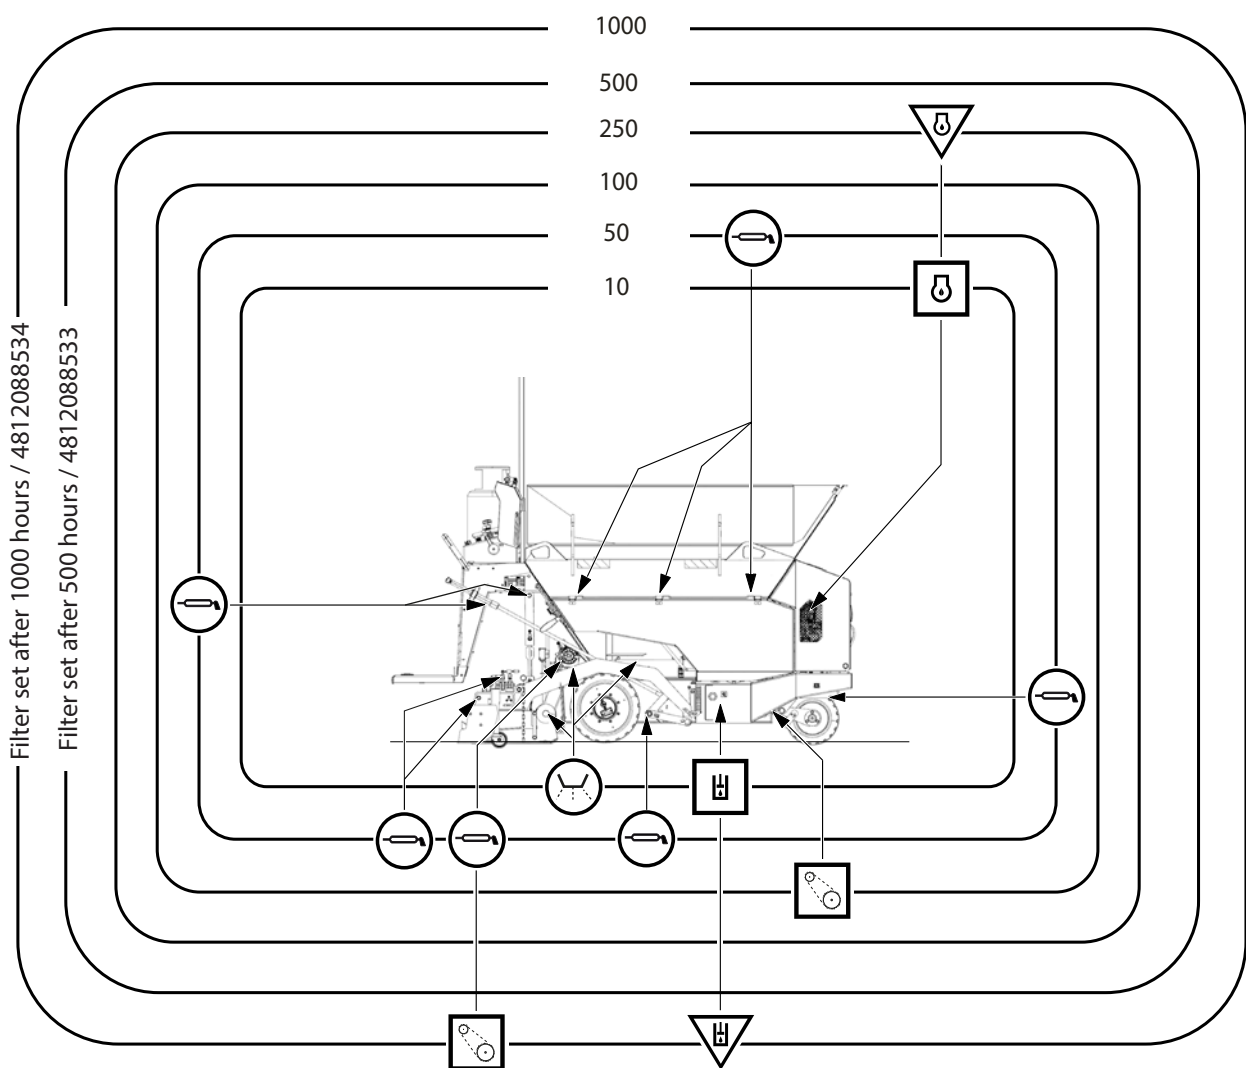LUBRICATION AND SERVICE PLAN

	INSPECTION
	LUBRICATION
	REPLACEMENT



	Engine oil:	SAE 15W-40	API CF / CH-4
	Hydraulic oil:	ISO VG 46	ISO 6743/HV
	Lubricating grease:	ISO 6743/9	CCEB 2
	Anti-adherent solution:	Specification according to the country of machine operation	

D451351B

3.6 Lubrication and maintenance operations

Carry out lubrication and maintenance in defined intervals according to daily values on the counter of worked hours.

This manual includes only basic information about the engine, other information is given in the engine operation and maintenance manual, which is a part of the documentation supplied with the machine.



Follow also the instructions given in the engine operation and maintenance manual!



451110

Tighten dismantled or loosened screws, plugs, worm connections of the hydraulic system, etc. to tightening torque values according to tables in Chapter 3.6.30 unless a different value is specified for the respective operation.



Carry out maintenance works with the machine placed on a flat, solid surface and secured against any spontaneous movement, always with the engine off, and the key removed from the ignition box and with the disconnected battery disconnecter (unless required otherwise).

After 50 hours of operation of the new machine or after a general overhaul, carry out the operations according to Chapter:

3.6.17 Engine oil replacement

After 500 hours of operation of the new machine or after a general overhaul, carry out the operations according to Chapter:

3.6.27 Hydraulic oil and hydraulic oil filter replacement

3.6 Lubrication and maintenance operations

Every 10 hours at the beginning of work (daily)

3.6.1 Fuel level check

The fuel tank (1) has a capacity of 5 litres. Full tank provides approx. six hours of operation at the maximum travel speed. Regularly check the fuel tank level and add the fuel if necessary.

Refuelling procedure:


- Open the engine bonnet.
- Unlock the lever (3) of the fuel tank cap (2) on the fuel tank (1) and check the fuel level.
- Replenish the fuel tank from the filling vessel to the maximum level.

Note

The temperature differences between day and night can cause condensation of water in the fuel tank. Always fill the fuel tank completely.

Completely fill the fuel tank after it was completely emptied to allow the fuel system to automatically bleed.

Always add clean diesel fuel and use clean filling containers to prevent damage to the engine.

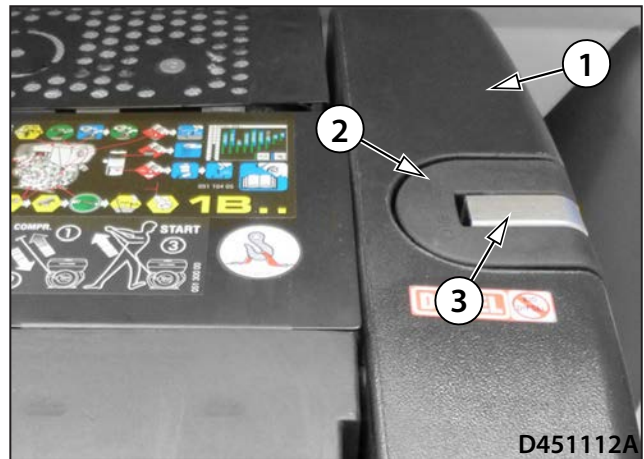

Do not smoke and do not use a naked flame while working. Danger of fire!

Avoid inhaling vapours and avoid skin contact with diesel fuel.

Use personal protective equipment.

Caution! There is a risk of burns from the hot parts of the machine.

Do not fill the fuel when the engine is running. The machine must be parked on a flat and solid surface with the engine and battery disconnecter off.



Refill the same fuel grade; see Chapter 3.2.2

Check the fuel tank and the fuel circuit for leaks.

In case of detecting water condensation in the fuel tank, drain the condensate according to Chapter 3.6.12.



Stop the fuel soaking into the ground.

3.6.2 Engine oil check

Ensure that the machine is standing on a level and firm surface.
If the engine was running, wait for about 5 minutes until the oil runs down to the engine sump.

Oil check procedure:

- Pull out the oil dipstick gauge (1), wipe it.
- Put it back up to the stop, pull out again and read height of the level.
- If required, fill up the oil through the filler neck after taking out the oil dipstick gauge (1).

Note

- The lower "MIN" mark shows the lowest possible oil level, the upper "MAX" mark the highest possible oil level.
- After refilling, wait approximately for 5 minutes before oil flows to the sump and check the level again.
- The total volume of oil in the engine is 1.8 l (0.5 US gal).



Do not use the engine if oil level in the engine is not correct.

The oil level should be maintained between the marks stamped on the oil-gauge rod.



Use the same type of oil for refilling as given in Chapter 3.2.1

Check the engine for leakage, repair possible causes.

Check the engine for damaged and/or missing parts and for changes in appearance.



Stop the oil soaking into the ground.

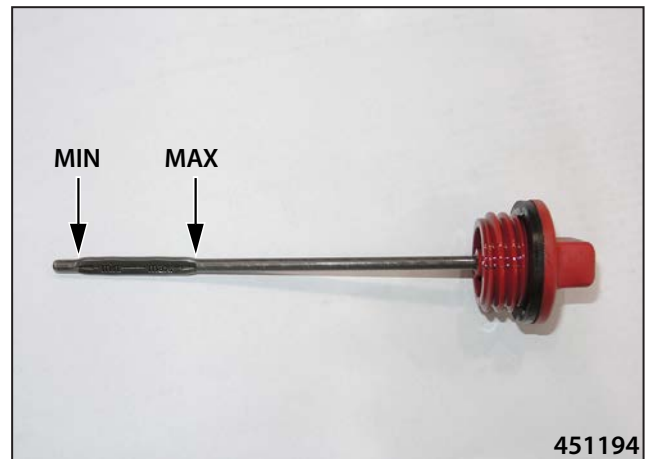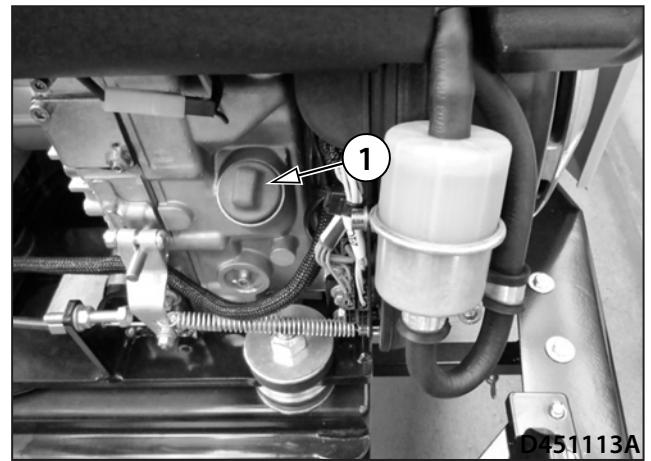

3.6 Lubrication and maintenance operations

3.6.3 Hydraulic oil check in the hydraulic tank

Before checking the level of hydraulic oil, lower the screed all the way down and aim the front wheel straight so that hydraulic oil can flow back into the hydraulic oil tank.

Ensure that the machine is standing on a level and firm surface.
Start the engine.

Lower the screed to the lower position using the switch (19) on the main dashboard.

Turn off the engine.

Oil level check procedure:

- Check the oil level on the oil gauge (2).
- The hydraulic oil level must be between the MIN and MAX marks.

Hydraulic oil refilling procedure:

- Open the right material hopper side cover (1).
- Take off the ventilation filter (3) from the filler neck.
- Refill the necessary hydraulic oil quantity according to Chapter 3.2.3.
- Mount the ventilation filter (3) back in place.
- After refilling the oil check the oil quantity in the hydraulic tank on the oil gauge (2).
- Close the right material hopper side cover (1).



Wear suitable protective goggles, protective clothing and footwear.

Thoroughly wash areas on the body that have been in contact with hydraulic oil.

Do not inhale hydraulic oil vapours.



The oil level must always be visible in the oil gauge!




Refill with the specified hydraulic oil according to Chapter 3.2.3

In case of large oil losses, find out the cause of leakage of the hydraulic system (leakage of screwed hose connections, hydraulic generators, hydraulic motors etc.) and remedy the defects.

Caution! The hydraulic oil level must always be between the MIN and MAX marks on the oil gauge.



Stop the oil soaking into the ground.

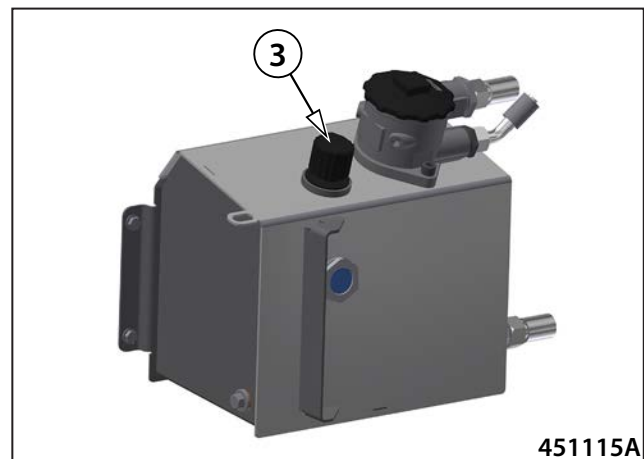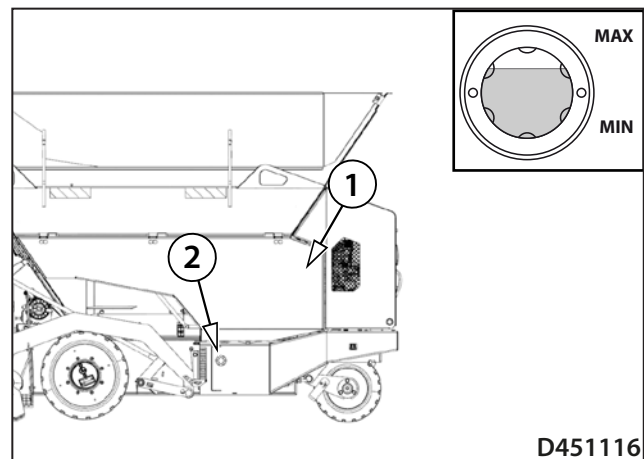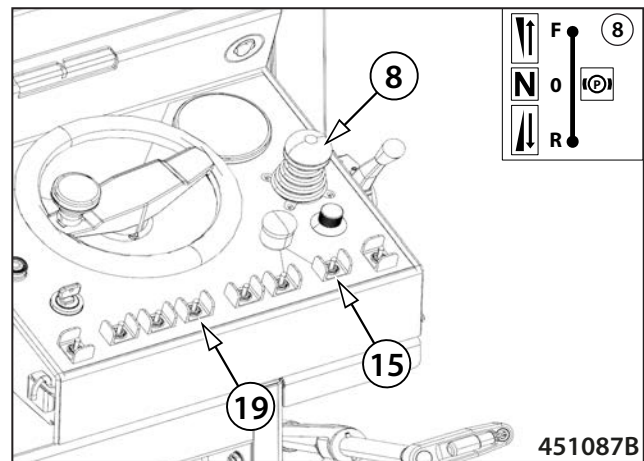

3.6.4 Driver's stand cleaning

Clean the driver's stand always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Keep the driver's stand continuously clean, dry and without snow and ice during the winter.

Cleaning procedure:

- Make sure there are no objects deposited on the driver's stand (1).
- Remove potential residues of materials from the driver's stand (1) using a scraper.




Caution! There is a risk of injury during cleaning.

Remove dirt from the driver's stand only with the engine and battery disconnecter off.

Use the prescribed protective equipment during cleaning.



During machine operation no objects may be located on the driver's stand.

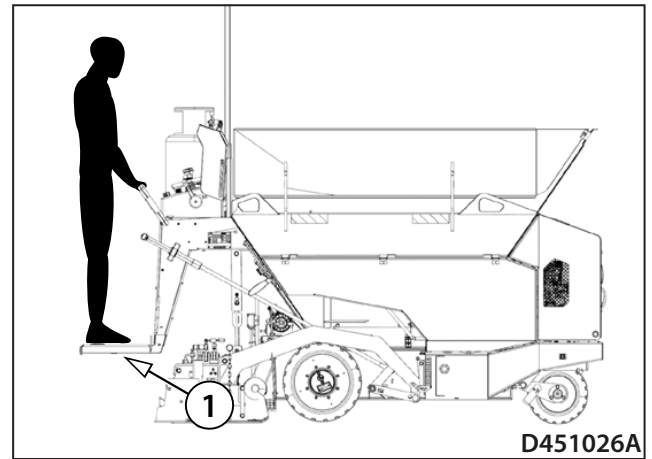

3.6 Lubrication and maintenance operations



3.6.5 Cleaning the hopper, outlets and conveyor

Before applying the anti-adherent solution remove gross dirt from the conveyor, material outlets and the hopper of the machine.

Clean the driver's stand always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Cleaning procedure:

- Make sure the material hopper (1) is empty.
- Apply the anti-adherent solution on the material hopper (1), material outlets (2) and conveyor (3).
- Use a scraper to remove material residues from the material hopper walls (1).
- Use a scraper to remove material residues from the material outlets (2).
- Use a scraper to remove material residues from the conveyor (3).
- Start the engine.
- Activate the function of conveyor start by shifting the operating mode controller (17) to the lower position and the controller (18) on the main dashboard to remove dirt from the hopper area.
- After removing dirt from the hopper area disable the switch (18) and the operating mode switch (17) functions.
- Turn off the engine and disconnect the battery disconnecter.
- Apply the anti-adherent solution on the material hopper (1), material outlets (2) and conveyor (3).

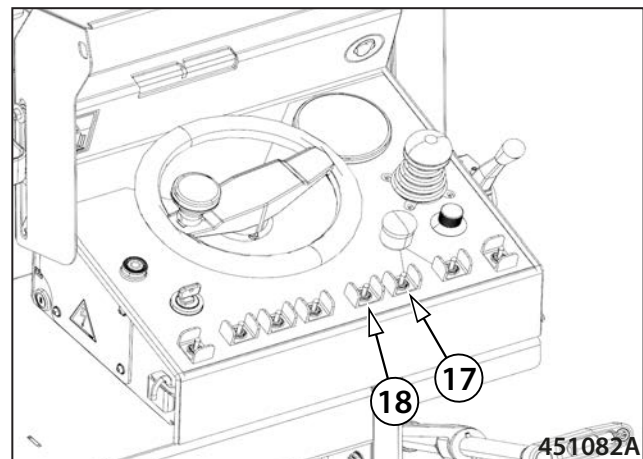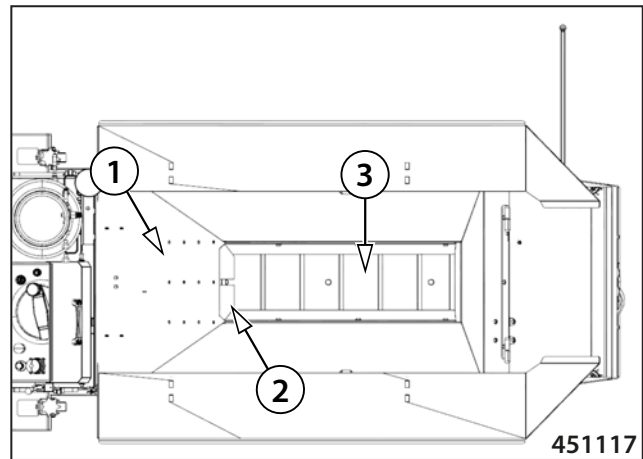

Caution! There is a risk of injury during cleaning.

Remove dirt from the hopper area using a scraper only with the engine and battery disconnecter off.

Use the prescribed protective equipment during cleaning.



Use the prescribed anti-adherent solution according to Chapter 3.2.4.

It is prohibited to use diesel oil instead of an anti-adherent solution.

3.6.6 Auger cleaning

Before applying the anti-adherent solution remove gross dirt from the augers.

Always clean the machine when it is parked on a flat and solid surface, the machine engine and the battery disconnecter are off and the gas bottle is closed.

Cleaning procedure:

- Make sure the screed heating system is turned off.
- Apply the anti-adherent solution on augers (1).
- Use a scraper to remove material residues from the augers (1) on both sides of the machine.
- Turn on the battery disconnecter.
- Start the engine.
- Activate the function of auger start by shifting the operating mode switch (17) to the lower position and the switch (18) on the main dashboard to remove the dirt from the augers.
- After removing dirt from the augers disable the switch (18) and the operating mode switch (17) functions.
- Turn off the engine and disconnect the battery disconnecter.
- Apply the anti-adherent solution on augers (1).



Caution! There is a risk of injury during cleaning.

Caution! There is a risk of burns.

Remove dirt from the augers using a scraper only with the engine and battery disconnecter off.



Use the prescribed protective equipment during cleaning.

Always clean the machine when it is parked on a flat and solid surface, the machine engine and the battery disconnecter are off and the gas bottle is closed.



Use the prescribed anti-adherent solution according to Chapter 3.2.4.

It is prohibited to use diesel oil instead of an anti-adherent solution.

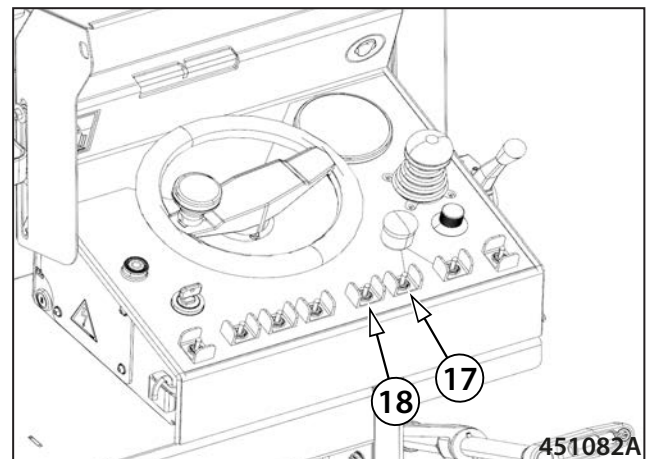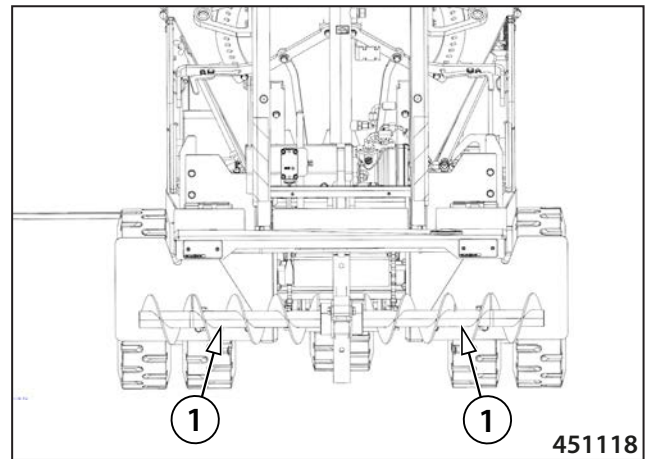

3.6 Lubrication and maintenance operations

3.6.7 Test of burner ignition, flame position adjustment and spark plug maintenance





When testing the burner ignition, check the behaviour of the burners and the position of the gas flame.

The behaviour of the burners when ignited is correct if the burners ignite within a few seconds.

Unless the burners ignite within a few seconds, the ignition box stops further attempts for igniting the burners and interrupts gas supply.

Burner ignition test procedure:

- Open the access to the burners.
- Insert the key into the ignition box (11) in the position "0" and switch over to the position "I".
- Set the key between position "I" and "II" and the engine glowing indicator lamp (24) will light up.
- Do not perform engine glowing for more than 15 s.
- Use the alarm horn (12) to signal that the engine is starting.
- Start the engine by turning the key to position "II".
- Secure the screed against free fall.
- Set the maximum paving width on both sides of the machine.
- Turn the key in the ignition box (11) from position "II" to position "I". The engine switches off.
- Switch on the gas screed heating system by moving the switch (13) to the upper position.
- Check that all burners are burning.
- Unless the burners start within a few seconds, switch off the gas screed heating system and perform a test of spark plugs, or have spark plug maintenance performed. Have the test and maintenance of spark plugs performed by an authorised service plant or qualified personnel according to the procedure given below.
- Visually check the gas flame position on all burners (1). Perform the visual check through the burner pipe (2) and check their position with regard to the spark plug (3).
- If the gas flame is incorrect, have the flame position adjusted. Have the flame position adjusted by an authorised service or qualified personnel according to the procedure given below.
- Switch off the gas screed heating system by moving the switch (13) to the lower position.
- Close the access to the burners.
- Set the key between position "I" and "II" and the engine glowing indicator lamp (24) will light up.
- Do not perform engine glowing for more than 15 s.
- Use the alarm horn (12) to signal that the engine is starting.
- Start the engine by turning the key to position "II".
- Set the minimum paving width on both sides of the machine.
- Unlock the screed and lower it to the ground.
- Turn the key to the position "0" and remove the key from the ignition box (11).

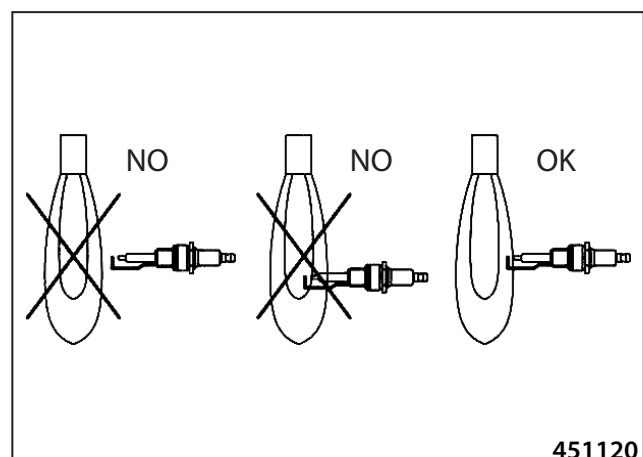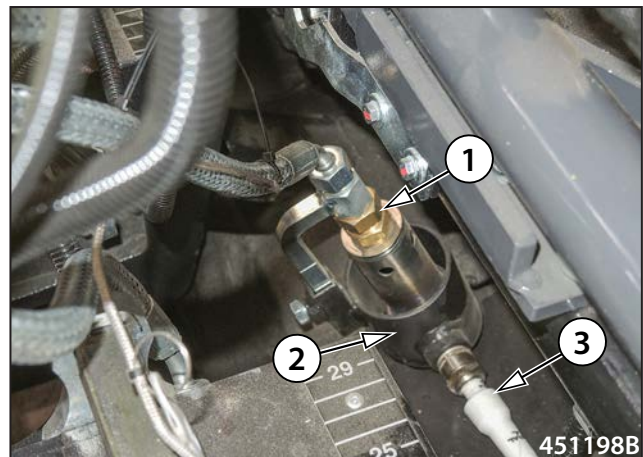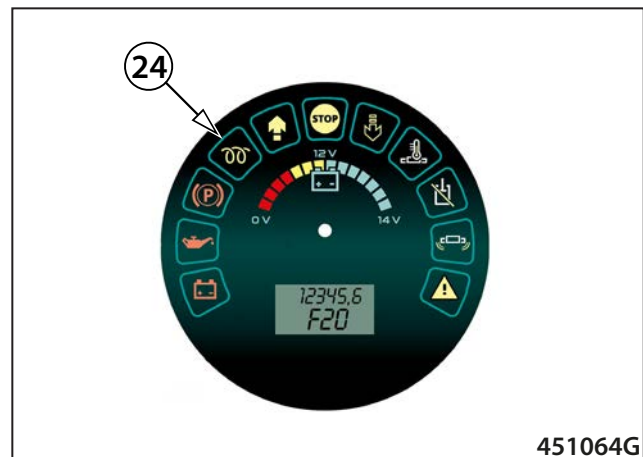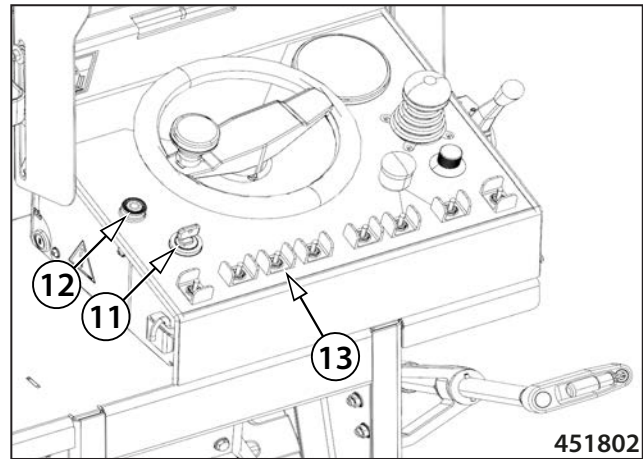



There is a risk of explosion.

Do not smoke during machine operation. There is a risk of explosion or fire. Liquid gas can easily ignite.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

Pay extra attention to potential gas leaks and in doubts, shut off the gas supply.


Check the tightness of the gas equipment, e.g. with a gas leak detector.

If you detect gas leakage, immediately shut off the gas bottle shut-off valve and have the gas equipment repaired by an authorised service plant or qualified personnel.

Follow safety regulations for handling gas bottles.

There is a risk of burns. Use protective equipment.

Have the test and maintenance of spark plugs performed by an authorised service plant or qualified personnel according to the procedure given below.

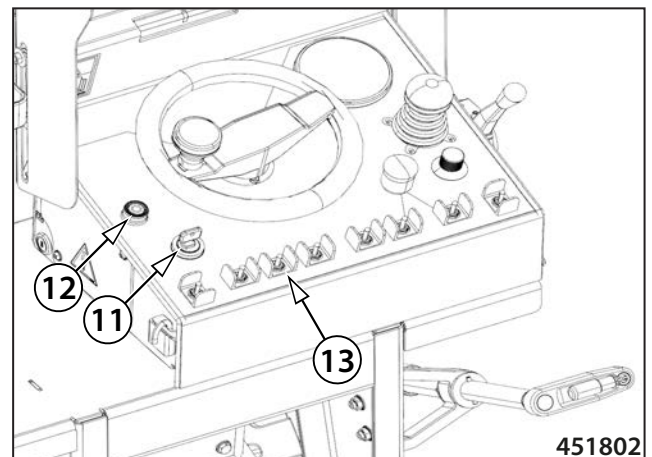


451802

Spark plug function test:

- Insert the key into the ignition box (11) in the position "0" and switch over to the position "I".
- Set the key between position "I" and "II" and the engine glowing indicator lamp (24) will light up.
- Do not perform engine glowing for more than 15 s.
- Use the alarm horn (12) to signal that the engine is starting.
- Turn the key to position "II" to start the engine.
- Secure the screed against free fall.
- Set the maximum paving width on both sides of the machine.
- Turn the key in the ignition box (11) from position "II" to position "I". The engine switches off.
- Close the gas bottle shut-off valve.
- Switch on the gas screed heating system by moving the switch (13) to the upper position.
- Test the spark plugs for sparking and correct sending of the signal pulse.
- Switch off the gas screed heating system by moving the switch (13) to the lower position.
- Turn the key to the "0" position.
- Disconnect the battery disconnecter.



451064G

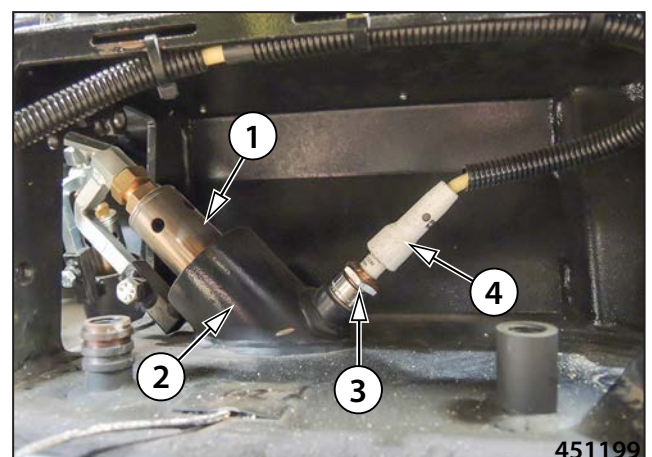

451199

3.6 Lubrication and maintenance operations

Spark plug check procedure:



- Dismount the cable (4) of a spark plug (3).
- Dismount the spark plug (3).
- Check the middle electrode (5)
- If the spark plug is too burned, replace the spark plug (3) for a new one.
- Measure the distance between the middle electrode (5) and the external electrode (6). The correct distance must be 4 mm (0.2 in).
- In case of incorrect distance, adjust the distance between the middle electrode (5) and the external electrode (6) by slightly bending the external electrode (6).
- Screw in the spark plug (3).
- Mount the cable of the spark plug (4).
- Perform the spark plug test again according to the previous procedure.
- Unless the burners start within a few seconds, repeat the whole procedure.



Perform maintenance of spark plugs when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.


Have the test and maintenance of spark plugs performed by an authorised service plant or qualified personnel according to the given procedure.

There is a risk of burns. Use protective equipment.

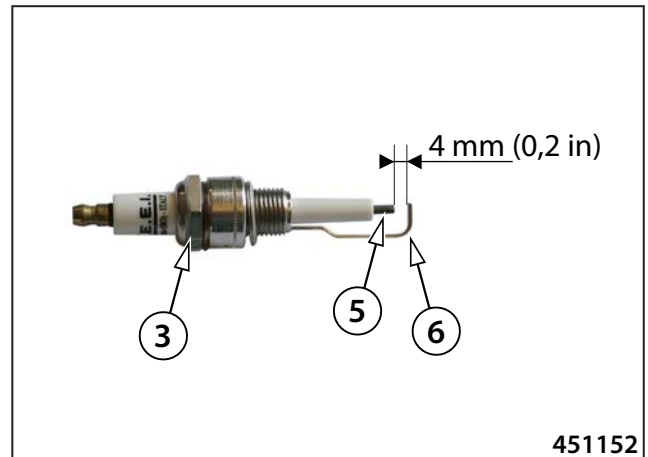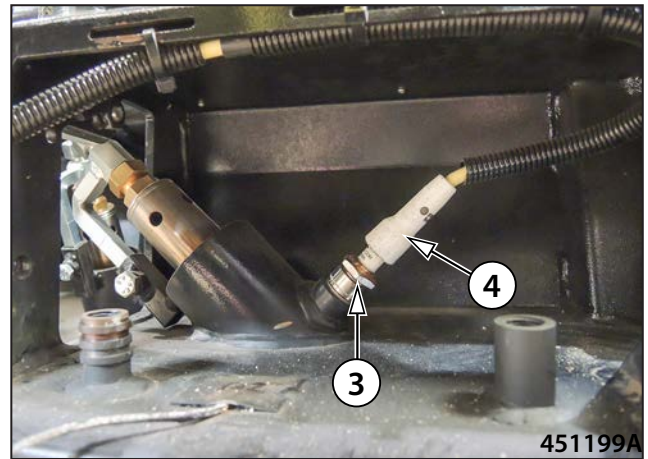

Gas flame position adjustment:


- Open the access to the burners.
- Insert the key into the ignition box (11) in the position "0" and switch over to the position "I".
- Set the key between position "I" and "II" and the engine glowing indicator lamp (24) will light up.
- Do not perform engine glowing for more than 15 s.
- Use the alarm horn (12) to signal that the engine is starting.
- Turn the key to position "II" to start the engine.
- Secure the screed against free fall.
- Set the maximum paving width on both sides of the machine.
- Turn the key in the ignition box (11) from position "II" to position "I". The engine switches off.
- Turn the key in the ignition box (11) from position "I" to position "0" and disconnect the battery disconnecter.

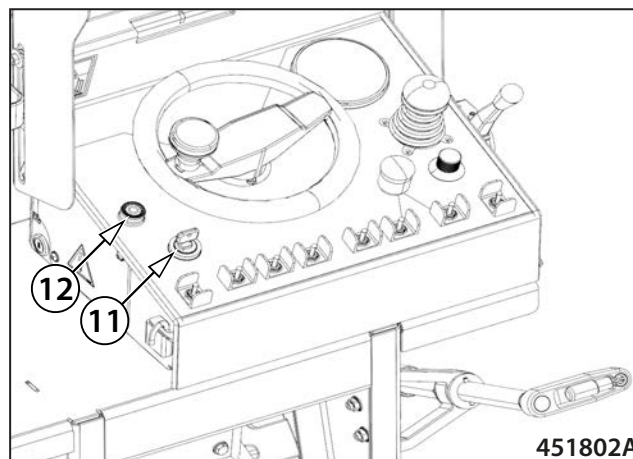

451802A

Gas flame adjustment procedure:

- Have the correct position of the gas flame adjusted.
- Have the flame position adjustment performed by an authorised service plant or qualified personnel according to the procedure given below.
- Adjust the distance (D) between the gas burner (3) and the spark plug (4).
- Adjust the distance (D) by loosening the gas burner set screw (1) on the burner holder (2).
- The distance (D) can only be adjusted within the MIN and MAX marks. The values of MIN and MAX are marked on the burner holder (2) by marks.
- After adjusting the burner (3), tighten the burner set screw (1) on the burner holder (2).
- Test the ignition of the burners. In case of incorrect adjustment, repeat the gas flame adjustment procedure.

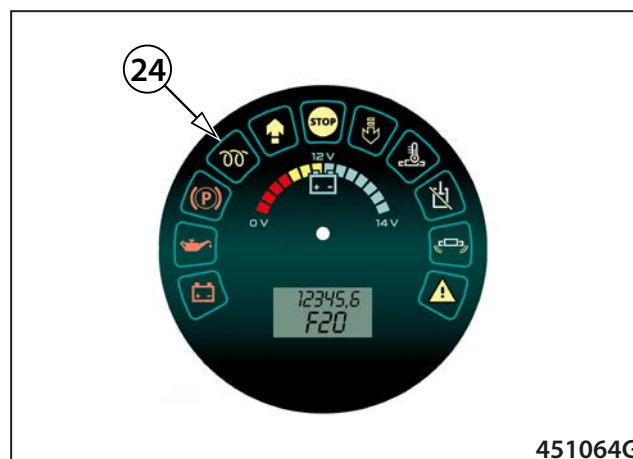

451064G



Perform gas flame adjustment when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.


Have the gas flame adjustment performed by an authorised service plant or qualified personnel according to the given procedure.

There is a risk of burns. Use protective equipment.


There is a risk of explosion.

Do not smoke during machine operation. There is a risk of explosion or fire. Liquid gas can easily ignite.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

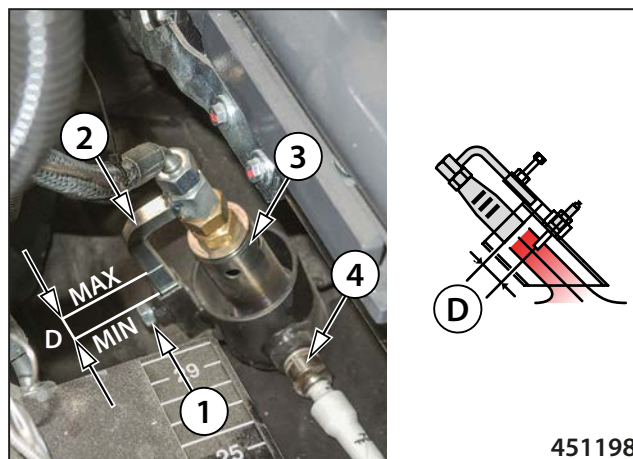

451198

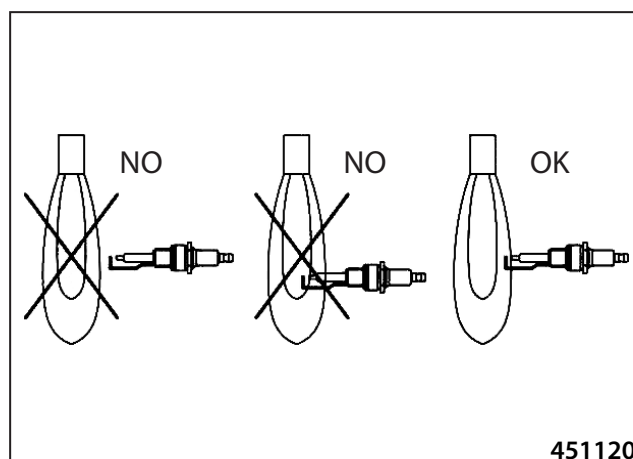

451120

3.6 Lubrication and maintenance operations

3.6.8 Gas equipment tightness check

Check the gas equipment for leakage when the machine is parked on a flat and solid surface and the valve (5) of the gas bottle is open.

Gas equipment tightness check procedure:

- Start the engine.
- Switch on the screed gas heating.
- Check the tightness of the gas equipment, e.g. with a gas leak detector.
- When checking the gas equipment, pay extra attention especially to any damage of hoses and potential gas leaks, and also check:
 - All hoses (1)
 - All fittings (2)
 - Gas supply manifold (3)
 - Gas supply solenoid valves (4)
 - Gas bottle shut-off valve (5)
 - Tightness of the reducing valve connection to the gas bottle (6)
 - Pressure gauge (7)
 - Reducing valve (8)
 - Safety valve (9)
 - Tightness of the hose connection to the safety valve (10)
 - Tightness of the hose and fitting connection to the burners (11)
- Test the gas equipment for leakage.
- In case of any leak, interrupt the gas supply and have the gas equipment repaired by an authorised service plant or qualified personnel.
- Close the gas bottle shut-off valve.
- Turn off the screed gas heating.
- Closed the gas supply.
- Stop the engine.



Do not smoke during machine operation. There is a risk of explosion or fire. Liquid gas can easily ignite.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

Pay extra attention to potential gas leaks and in doubt, shut off the gas supply.





Check the tightness of the gas equipment, e.g. with a gas leak detector.

If you detect gas leakage, immediately shut off the gas bottle shut-off valve and have the gas equipment repaired by an authorised service plant or qualified personnel.

Follow safety regulations for handling gas bottles.

There is a risk of burns. Use protective equipment.

Have the gas equipment tightness check performed by an authorised service plant or qualified personnel.

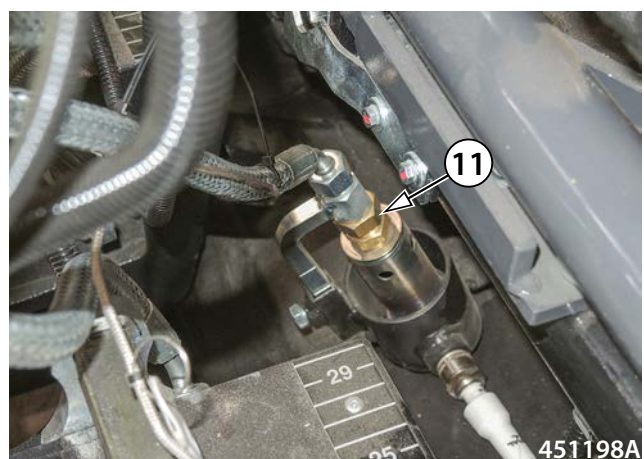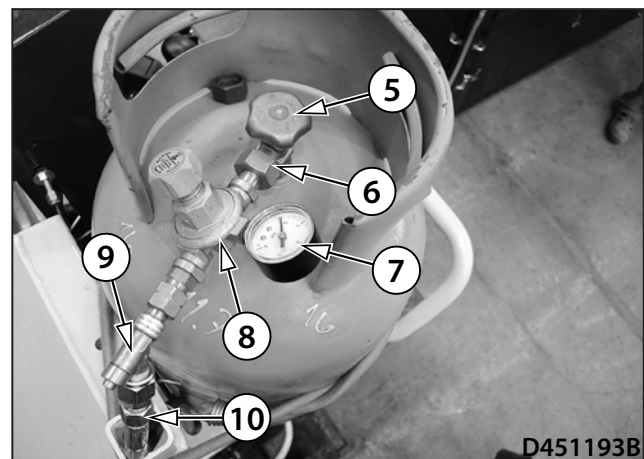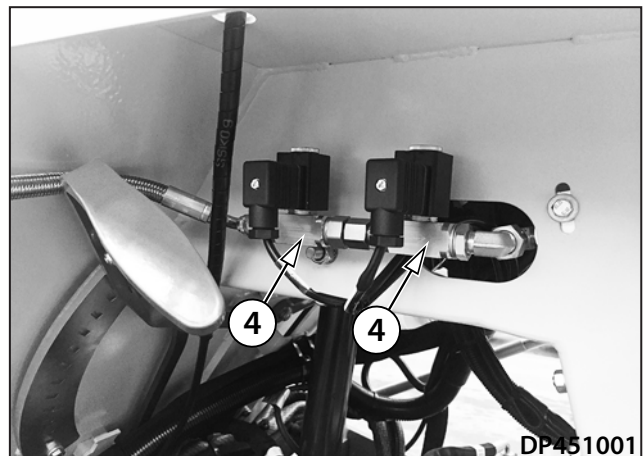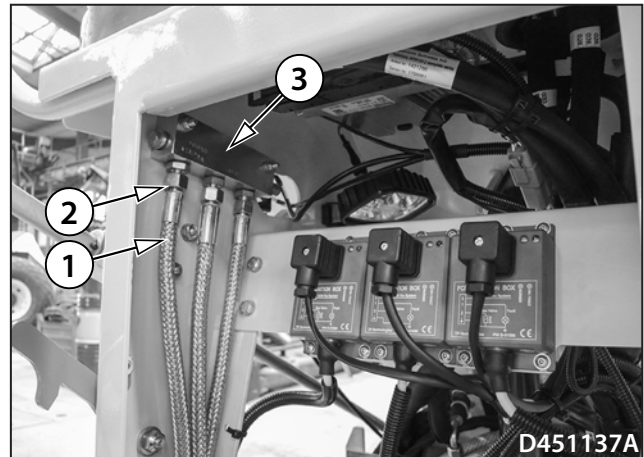

Every 10 hours at the end of work (daily)

3.6.9 Fuel level check

The fuel tank (1) has a capacity of 5 litres. Full tank provides approx. six hours of operation at the maximum travel speed. Regularly check the fuel tank level and add the fuel if necessary.

Refuelling procedure:


- Open the engine bonnet.
- Unlock the lever (3) of the fuel tank cap (2) on the fuel tank (1) and check the fuel level.
- Replenish the fuel tank from the filling vessel to the maximum level.

Note

The temperature differences between day and night can cause condensation of water in the fuel tank. Always fill the fuel tank completely.

Completely fill the fuel tank after it was completely emptied to allow the fuel system to automatically bleed.

Always add clean diesel fuel and use clean filling containers to prevent damage to the engine.

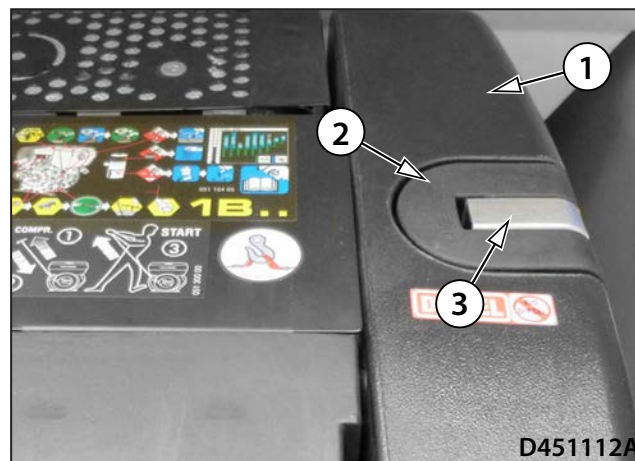

Do not smoke and do not use a naked flame while working. Danger of fire!

Avoid inhaling vapours and avoid skin contact with diesel fuel.

Use personal protective equipment.

Caution! There is a risk of burns from the hot parts of the machine.

Do not fill the fuel when the engine is running. The machine must be parked on a flat and solid surface with the engine and battery disconnecter off.



Refill the same fuel grade; see Chapter 3.2.2

Check the fuel tank and the fuel circuit for leaks.

In case of detecting water condensation in the fuel tank, drain the condensate according to Chapter 3.6.12.



Stop the fuel soaking into the ground.

3.6 Lubrication and maintenance operations



3.6.10 Cleaning the hopper, outlets and conveyor

Before applying the anti-adherent solution remove gross dirt from the conveyor, material outlets and the hopper of the machine.

Clean the driver's stand always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Cleaning procedure:

- Make sure the material hopper (1) is empty.
- Apply the anti-adherent solution on the material hopper (1), material outlets (2) and conveyor (3).
- Use a scraper to remove material residues from the material hopper walls (1).
- Use a scraper to remove material residues from the material outlets (2).
- Use a scraper to remove material residues from the conveyor (3).
- Start the engine.
- Activate the function of conveyor start by shifting the operating mode controller (17) to the lower position and the controller (18) on the main dashboard to remove dirt from the hopper area.
- After removing dirt from the hopper area disable the switch (18) and the operating mode switch (17) functions.
- Turn off the engine and disconnect the battery disconnecter.
- Apply the anti-adherent solution on the material hopper (1), material outlets (2) and conveyor (3).

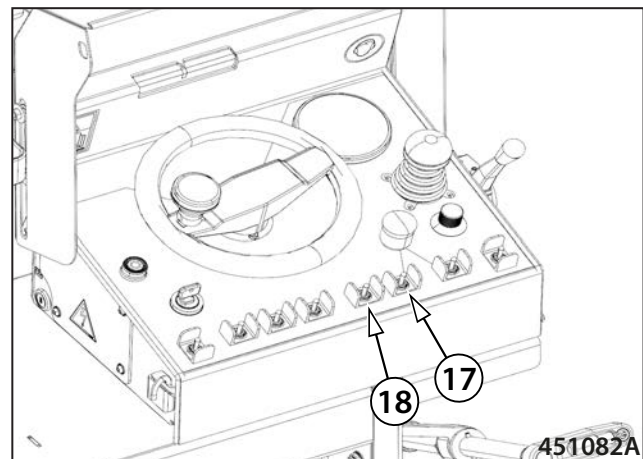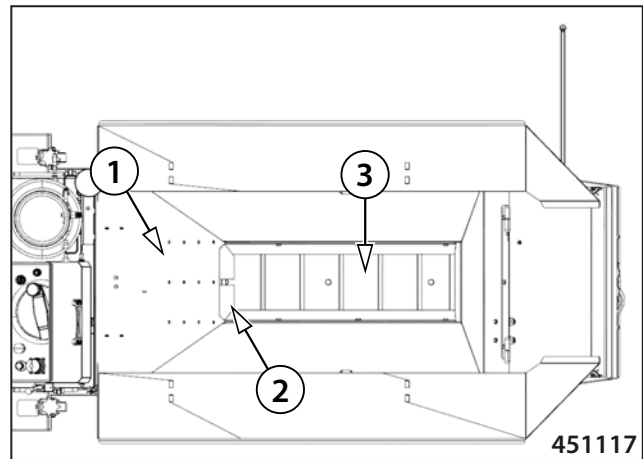

Caution! There is a risk of injury during cleaning.

Remove dirt from the hopper area using a scraper only with the engine and battery disconnecter off.

Use the prescribed protective equipment during cleaning.



Use the prescribed anti-adherent solution according to Chapter 3.2.4.

It is prohibited to use diesel oil instead of an anti-adherent solution.

3.6.11 Auger cleaning

Before applying the anti-adherent solution remove gross dirt from the augers.

Clean the driver's stand always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Cleaning procedure:

- Make sure the screed heating system is turned off.
- Apply the anti-adherent solution on augers (1).
- Use a scraper to remove material residues from the augers (1) on both sides of the machine.
- Start the engine.
- Activate the function of auger start by shifting the operating mode switch (17) to the lower position and the switch (18) on the main dashboard to remove the dirt from the augers.
- After removing dirt from the augers disable the switch (18) and the operating mode switch (17) functions.
- Turn off the engine and disconnect the battery disconnecter.
- Apply the anti-adherent solution on augers (1).



Caution! There is a risk of injury during cleaning.

Caution! There is a risk of burns.



Remove dirt from the augers using a scraper only with the engine and battery disconnecter off.

Use the prescribed protective equipment during cleaning.



Use the prescribed anti-adherent solution according to Chapter 3.2.4.

It is prohibited to use diesel oil instead of an anti-adherent solution.

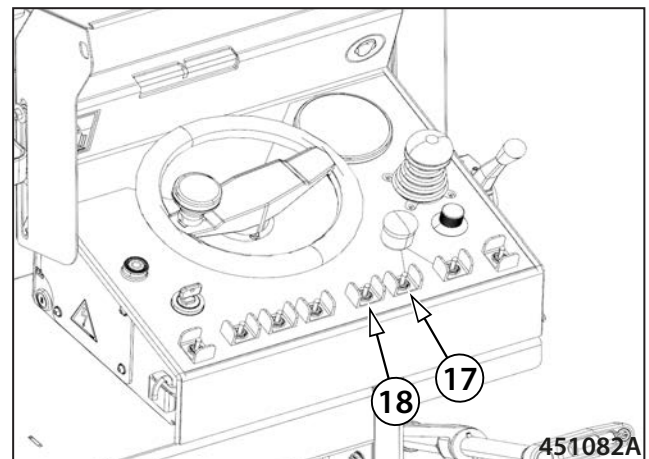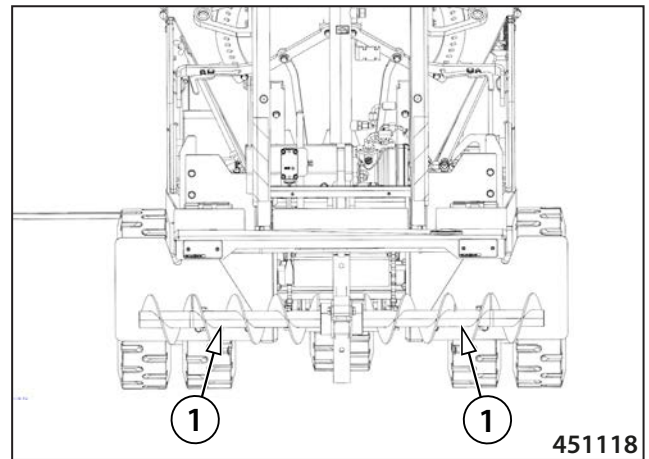

3.6 Lubrication and maintenance operations

Every 50 hours (week)

3.6.12 Cleaning the water separator

Clean the water separator when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Water separator cleaning procedure:

- Open the engine bonnet (1).
- Open the left material hopper side cover (2).
- Place a transparent drain container resistant to engine fuel under the water separator (3).
- Hold the water separator (3) with a spanner by the nut (4).
- Loosen the water separator drain screw (5) with a screwdriver (about 3 – 4 turns) until the liquid starts to flow out.
- Check if there is a dividing line in the drain container between the condensed water (bottom) and engine fuel (top).
- When clean engine fuel flows out, firmly hold the water separator (3) by the nut (4) with a spanner and tighten the water separator drain screw (5).
- Close the left material hopper side cover (2).
- Close the engine bonnet (1).



Caution! When draining the condensate, fuel can come in contact with hot parts of the engine and catch fire.

There is a risk of burns from the hot parts of the engine.

Clean the water separator when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When cleaning the water separator, do not smoke. There is a risk of fire.

When cleaning the water separator, wear the prescribed protective equipment.






After cleaning the water separator check the tightness.

In case of detecting water condensation in the fuel tank, perform the separator cleaning procedure earlier.



Stop the fluid soaking into the ground.

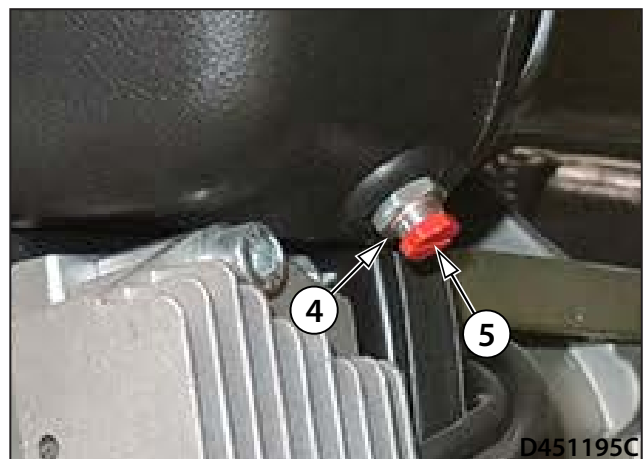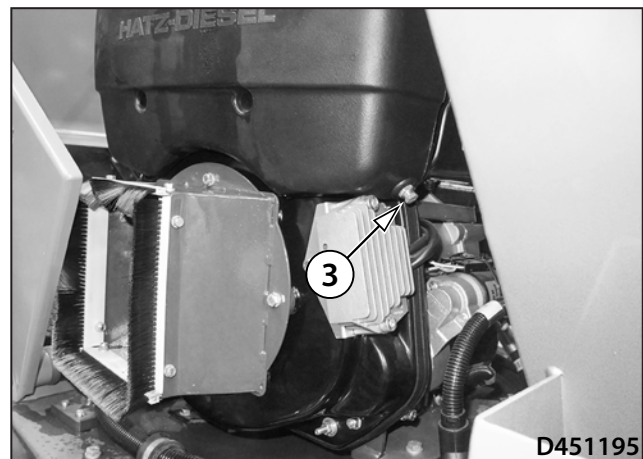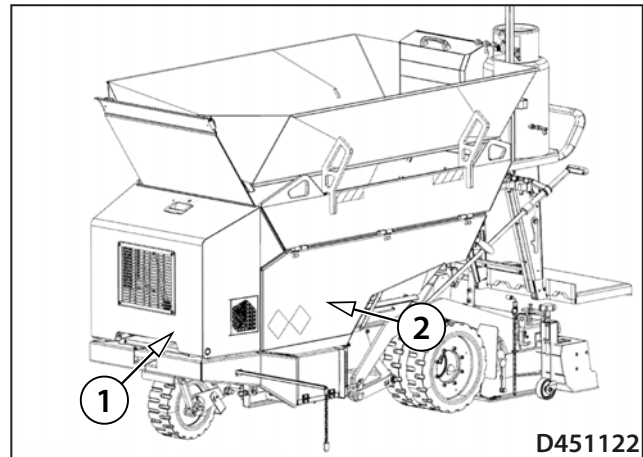

3.6.13 Machine lubrication

Lubricate the machine when it is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Use the prescribed lubricants according to Chapter 3.2.6 for lubricating the machine.

Overview of lubrication points on the machine:

- Mechanism for setting the paving thickness (1).
- Screed lifting mechanism (2).
- Paving width setting mechanism (3).
- Front wheel suspension (4).
- Chains of the conveyor belt and augers (5).

Procedure for lubrication of the paving thickness setting mechanism:

- The procedure is identical for the left and right side of the machine.
- Dismount the protective cover and clean the grease nipple.
- Connect the grease gun to the grease nipple.
- Lubricate the bearing until the lubricant starts to flow out.
- Mount the protective cover on the grease nipple.



Lubricate the machine when it is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When lubricating the machine, use the prescribed protective equipment.

There is a risk of burns from the hot parts of the screed.

There is a risk of injury due to the fall of the screed.

Procedure for lubrication of the screed lifting mechanism:

- Dismount the protective cover and clean the grease nipple.
- Connect the grease gun to the grease nipple.
- Lubricate the bearing until the lubricant starts to flow out.
- Mount the protective cover on the grease nipple.






Lubricate the machine when it is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When lubricating the machine, use the prescribed protective equipment.

There is a risk of burns from the hot parts of the screed.

There is a risk of injury due to the fall of the screed.

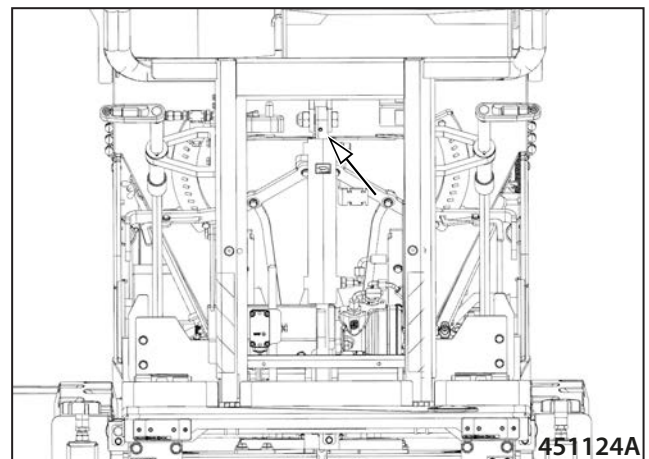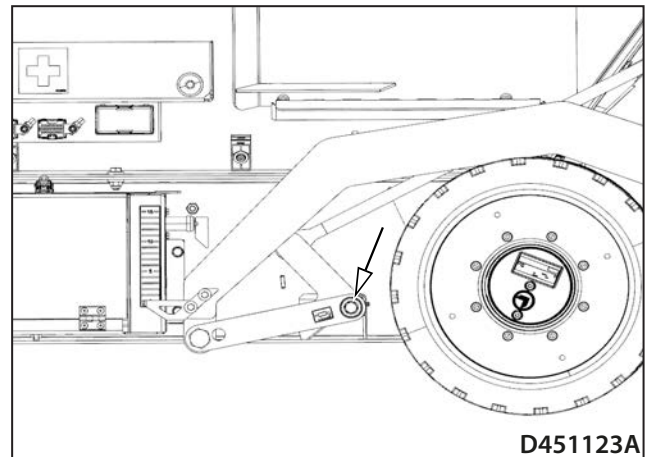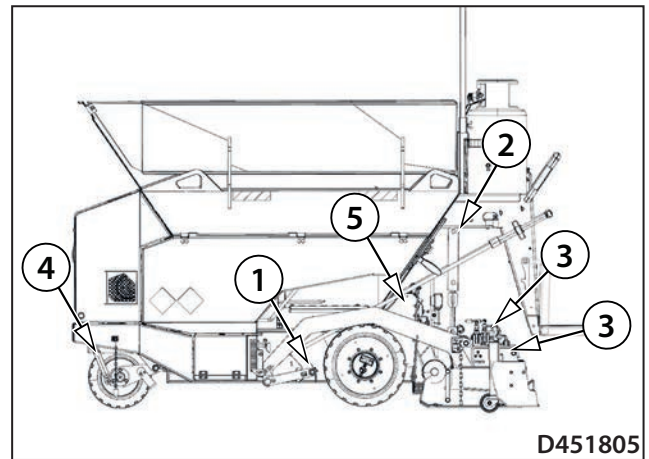

3.6 Lubrication and maintenance operations

Procedure for lubrication of the paving width setting mechanism:

- The procedure is identical for the left and right side of the screed.
- Set the maximum paving width on both screed sides.
- Remove lubricating grease residues and dust from the screed extension guide (1).
- Apply the lubricating grease on the screed extension guide (1).
- Dismount the protective covers and clean the grease nipples (2) on the linear hydraulic motors (3).
- Connect the grease gun to the grease nipples.
- Lubricate the bearings until the lubricant starts to flow out.
- Mount the protective covers on the grease nipples (2) on the linear hydraulic motors (3).




Lubricate the machine when it is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When lubricating the machine, use the prescribed protective equipment.

There is a risk of burns from the hot parts of the screed.

There is a risk of injury due to the fall of the screed.

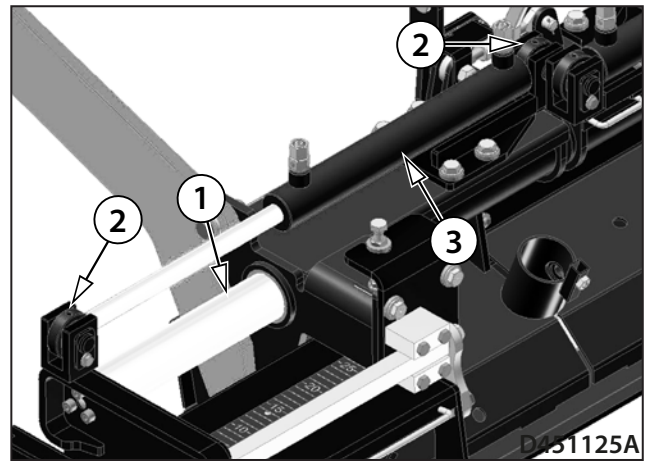


Front wheel suspension lubrication procedure:

- Dismount the protective cover and clean the grease nipple (1).
- Connect the grease gun to the grease nipple (1).
- Lubricate the bearing until the lubricant starts to flow out.
- Mount the protective cover on the grease nipple (1).



Lubricate the front wheel suspension when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When lubricating the machine, use the prescribed protective equipment.

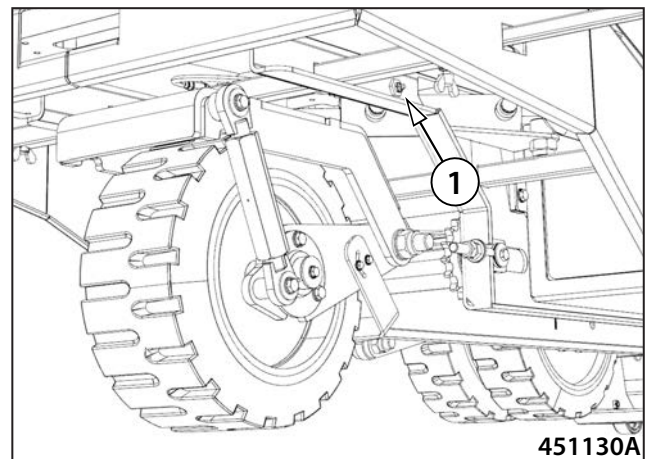

Conveyor chain and auger chain lubrication procedure:

Conveyor chain lubrication procedure:

- Apply the lubricating grease on chains (2) and (3) in point (1) with a brush.

Auger chain lubrication procedure:

- Remove the cover (4).
- Apply the lubricating grease on chains (5) with a brush.
- Mount the cover (4) back.

Chain lubrication check:

- Start the engine.
- Let the conveyor running in the manual mode.
- Stop the conveyor.
- Turn off the engine.
- Check conveyor chain and auger chain lubrication.
- If the chains are not sufficiently lubricated, repeat the procedure.







Lubricate the machine when it is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When lubricating the machine, use the prescribed protective equipment.

There is a risk of burns from the hot parts of the screed.

There is a risk of injury due to the fall of the screed.

There is a risk of injury due to a movement of the conveyor and augers.

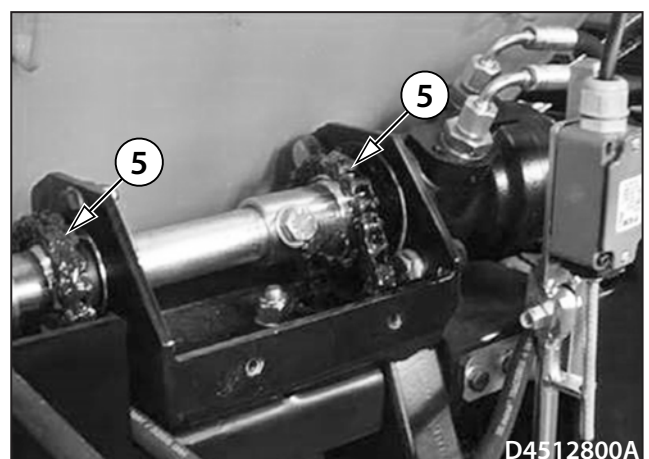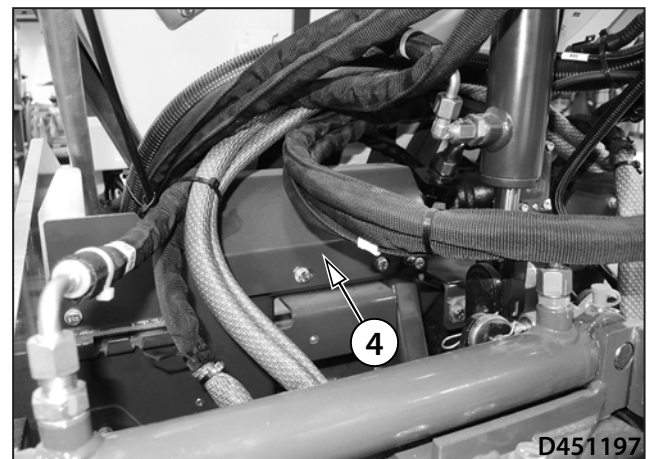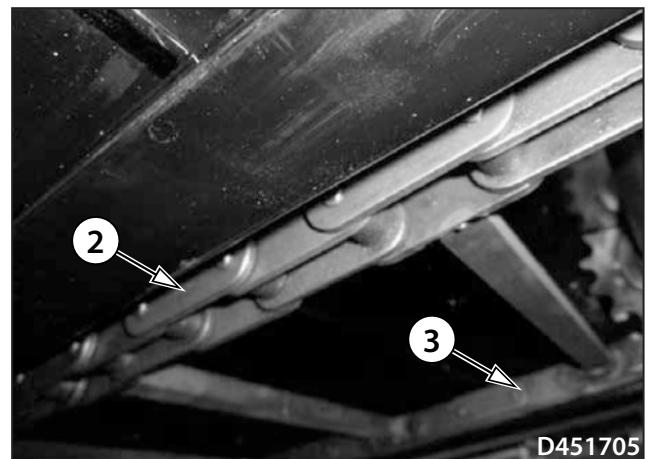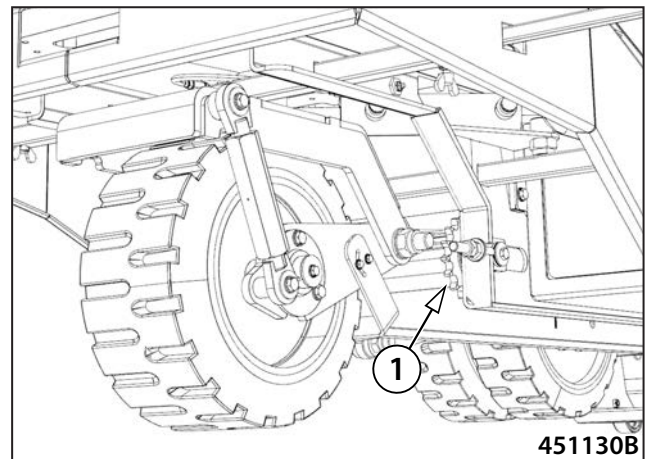

3.6 Lubrication and maintenance operations

Every 100 hours of operation (monthly)

3.6.14 Fuel system tightness check

Fuel system tightness check procedure:





- Open the left material hopper side cover (1).
- Open the engine bonnet (2).
- Dismount the inlet air filter cap (3) and remove the inlet air filter cover (4).
- Check the tightness of the fuel system:
 - Fuel tank (5)
 - Water separator (6)
 - Fuel hoses (7)
 - Fuel filter (8)
 - Fuel hose connections (9)
- Have any potential leaks of the fuel system repaired by an authorised service plant or qualified personnel.
- Mount the inlet air filter cover (4) and tighten the inlet air filter cap (3).
- Close the engine bonnet (2).
- Close the left material hopper side cover (1).



Perform cleaning of the fuel system when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Wear the prescribed personal protective equipment when checking the fuel system tightness.

There is a risk of burns from the hot parts of the engine.

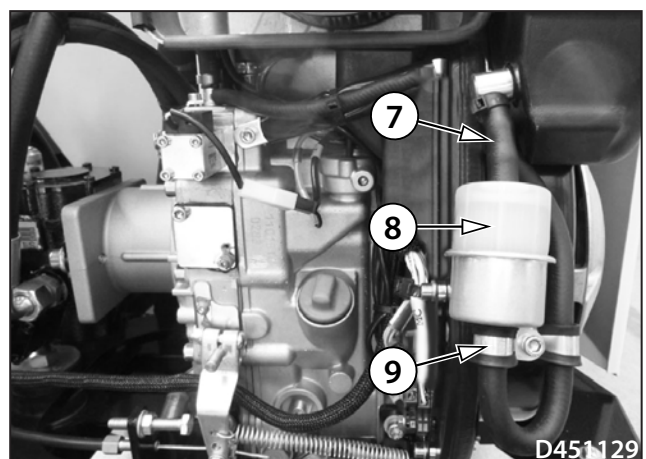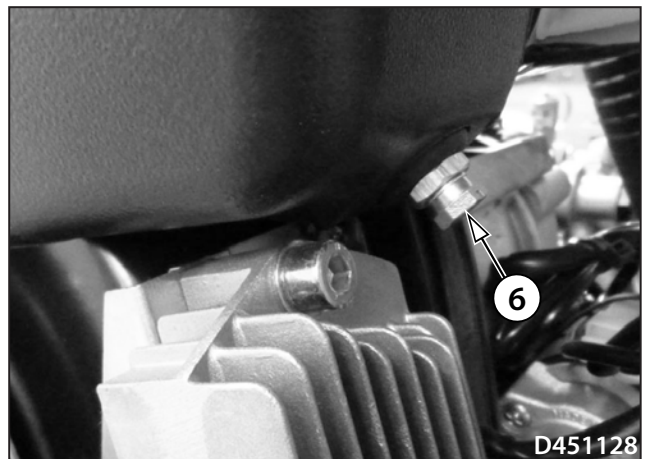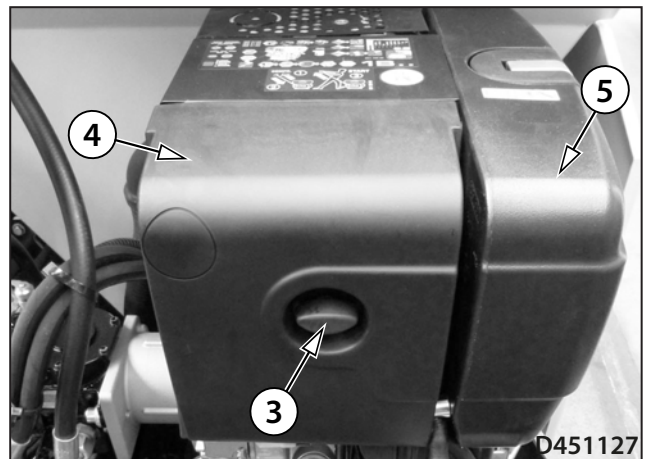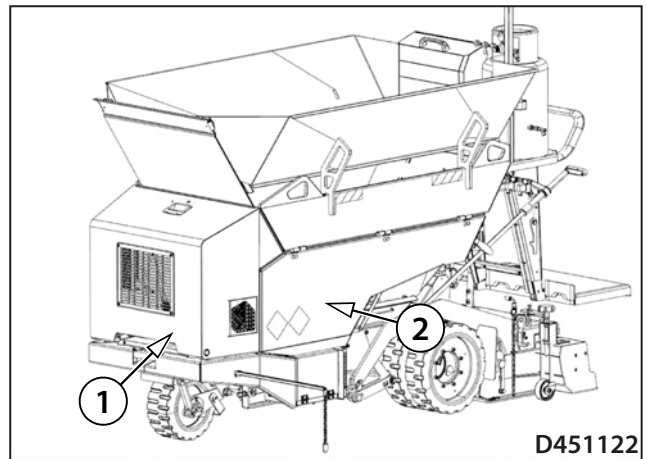


3.6.15 Rear wheel fastening check

- The procedure is identical for the left and right side of the machine.


Rear wheel fastening check procedure (the machine has one wheel on the left and right side):

- Check tightening of all bolts (1) on the rear wheels (2).
- The tightening torque value for the bolts (1) is 48 Nm (35.4 lb ft).

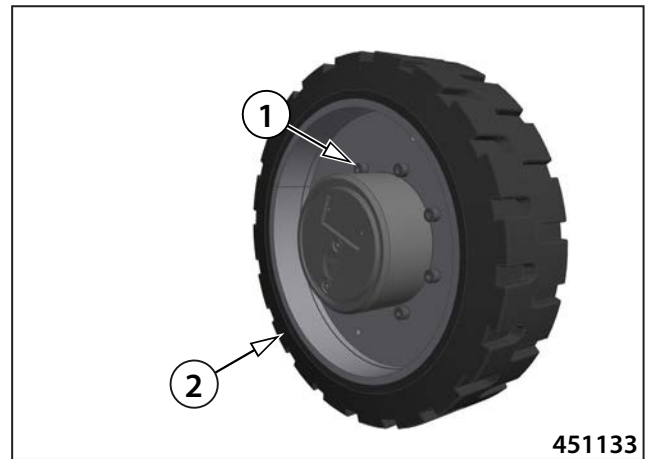

Rear wheel fastening check procedure (the machine has two wheels on the left and right side):


- Remove the bolts of the outer wheel (3).
- Remove the outer wheel (4) from the rear wheel carrier (5).
- Keep the rear wheel carrier (5) mounted.
- Check the tightness of all bolts (1) of the inner wheel (2) through the hole in the outer wheel carrier.
- The tightening torque value for the bolts (1) is 48 Nm (35.4 lb ft).
- Mount the outer wheel (4) on the rear wheel carrier (5).
- Tighten all bolts (3) of the outer wheel (4).
- The tightening torque value for the bolts (3) is 48 Nm (35.4 lb ft).

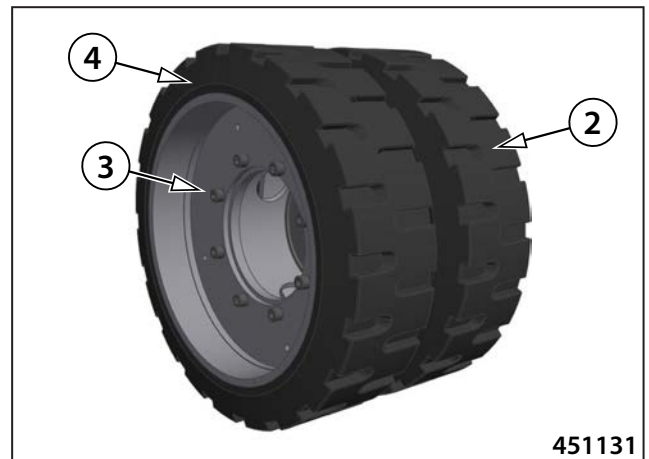

Perform rear wheel fastening check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

There is a risk of injury to people due to loose rear wheels. If loose rear wheels are detected, perform the procedure for fastening of the rear wheels earlier.

Wear the prescribed personal protective equipment when checking the rear wheel fastening.

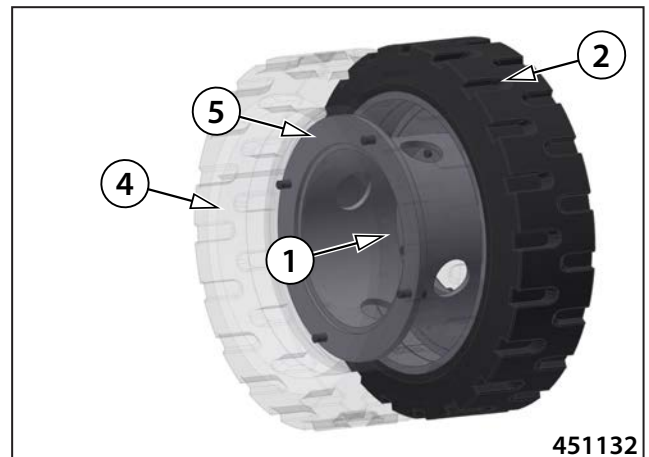

3.6 Lubrication and maintenance operations

3.6.16 Conveyor chain tensioning

Calculate the sag of the conveyor chain by measuring the distance between the ground and the left conveyor chain (1) or the right conveyor chain (2), always in the central part of the chain.

The chain is correctly tensioned when there is an approx. 30 – 40 cm sag (1.2 – 1.6 in) in the middle.

Chain sag calculation procedure:

- The procedure is identical for the left (1) and right (2) conveyor chain.
- Measuring the distance between the ground and the chain in the middle part of the chain (1).
- Press the chain upwards in the middle part of the chain (1) and measure the distance between the ground and the chain again.
- Calculate the sag of the chain (1) by deducting the two measured values.
- The chain is correctly tensioned when there is an approx. 30 – 40 cm sag (1.2 – 1.6 in) in the middle.

Chain tensioning procedure:




- The procedure is identical for the left (1) and right (2) conveyor chain.
- Loosen the lock nut (4).
- Tension the chain using the adjusting nut (5).
- Calculate the sag of the chain (1) by deducting the two measured values according to the procedure above.
- If the calculated sag is in the range of 30 – 40 mm (1.2 – 1.6 in), tighten the lock nut (4).
- Tension the chain equally on both sides of the machine.

Note

- In case of too high chain tension, loosen the lock nut (4) and the adjusting nut (5).
- Calculate the sag of the chain (1) by deducting the two measured values according to the procedure above.

Belt tension check:

- Check chain movement.
 - Start the engine.
 - Let the conveyor running in the manual mode.
 - Check the correct running of conveyor chains.
 - Stop the conveyor.
 - Turn off the engine.

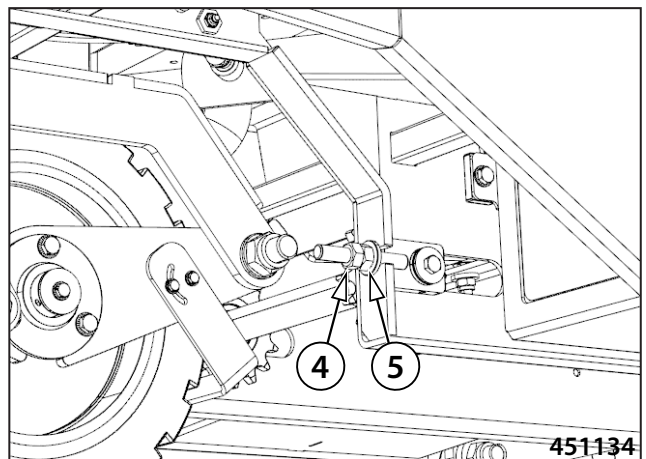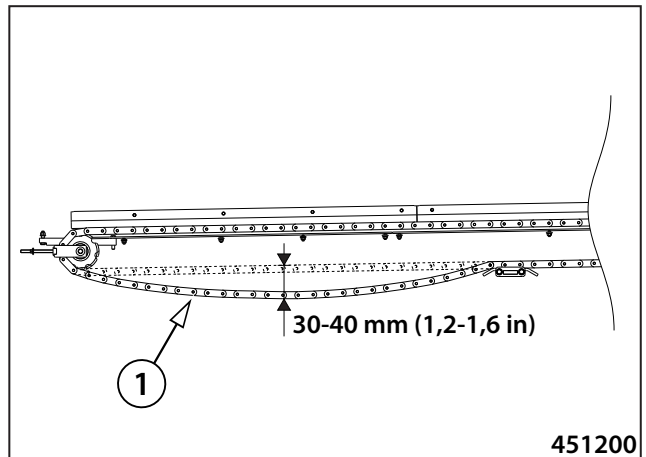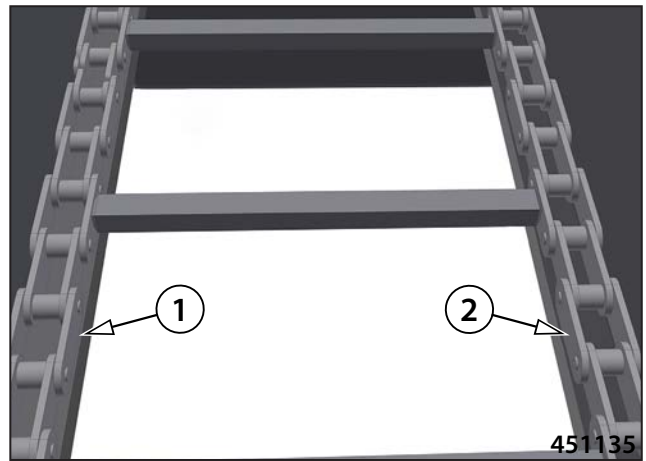

Perform tensioning of the conveyor chains with the machine parked on a flat and solid surface with the engine and battery disconnecter off.

Wear the prescribed personal protective equipment when tensioning the conveyor chains.

There is a risk of burns from the hot parts of the conveyor.

Caution! Tension the chain equally on both sides of the machine.

Every 250 hours of operation (every 3 months)

3.6.17 Engine oil replacement

Change the engine oil when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Engine oil replacement procedure:

- Open the engine bonnet (1).
- Remove the engine oil dipstick gauge (3).
- Remove the hose (4) from the holder (5).
- Dismount the plug (6) and let oil drain to a ready container with a minimum capacity of 2 l (0.53 US gal).
- Check the plug seal (6) and replace it, if damaged.
- Mount the plug (6).
- Connect the hose (4) to the holder (5).
- Add engine oil through the engine oil filler neck (2).
- The total oil volume is 1.8 l (0.50 gal US).
- Check the engine oil level on the oil dipstick gauge (3).
- The correct engine oil level must be within the MIN and MAX marks on the oil dipstick gauge (3).
- Close the engine bonnet (1).
- After you change the oil, start the engine and let it run at a higher idle speed for 2 – 3 minutes.
- Stop the engine and wait for about 3 minutes until the oil runs into the crankcase, then check the oil level again.



Change the engine oil when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Wear the prescribed personal protective equipment when replacing the oil in the engine.

There is a risk of burns from the hot parts of the engine and the engine oil.




The oil level must not exceed the MAX level line on the oil dipstick gauge.




Catch the drained oil and do not let it soak into the ground.


Dispose of the engine oil according to the applicable national regulations.

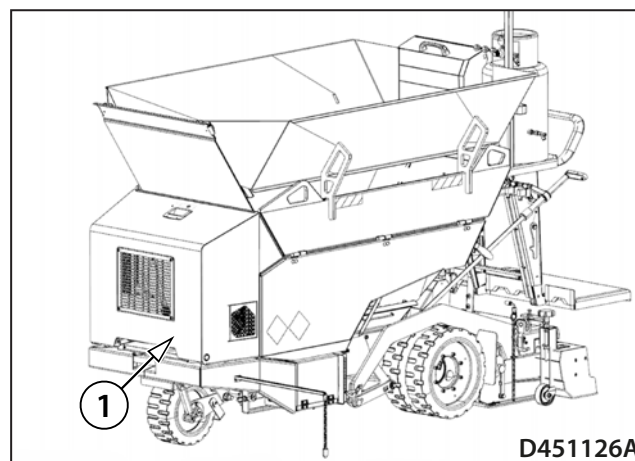


D451126A

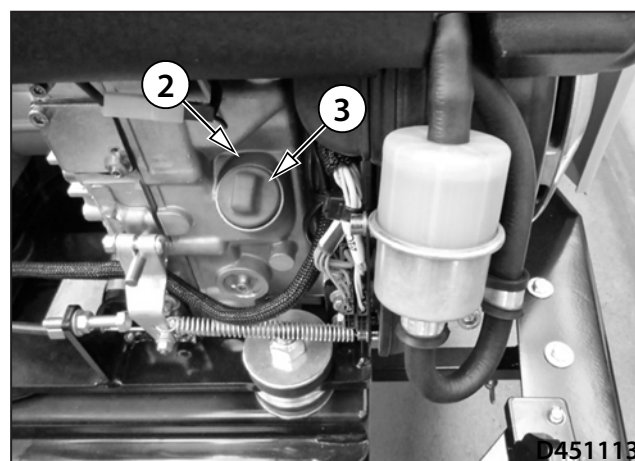

D451113

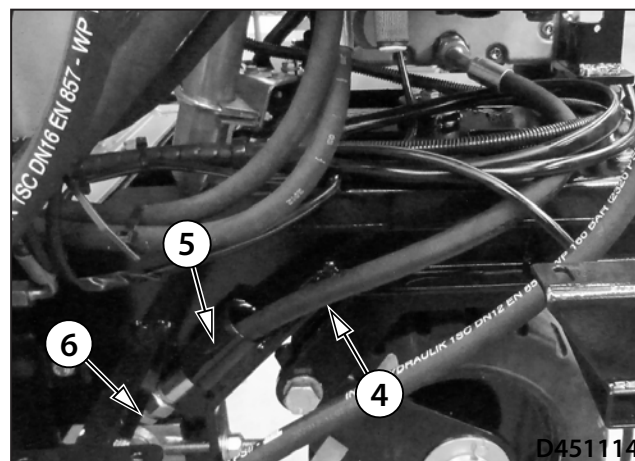

D451114

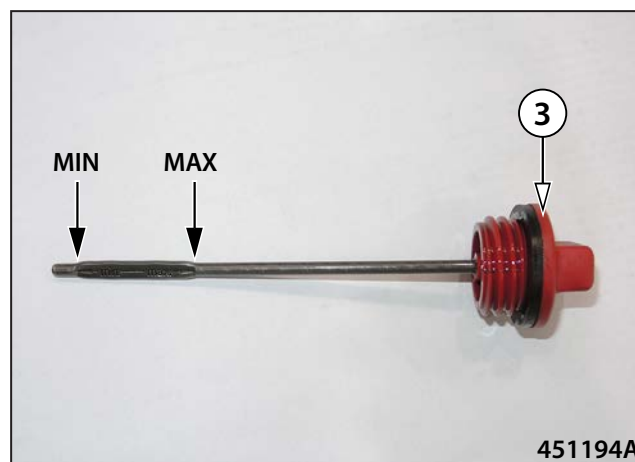

451194A

3.6 Lubrication and maintenance operations

3.6.18 Engine air intake check

Check the engine air intake always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Engine air intake check procedure:

- Check the hole (1) in the engine bonnet (2).
- The hole (1) must be without any dirt.
- Open the engine bonnet (2).
- Check the condition of brushes (3); in case they are excessively worn, replace them.
- Close the engine bonnet (2).



Check the engine air intake when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Wear the prescribed personal protective equipment when checking the engine air intake.



There is a risk of burns from the hot parts of the engine.



Keep the hole in the engine bonnet clean.

Keep the brushes in an undamaged state.

There is a risk of damaging the engine.

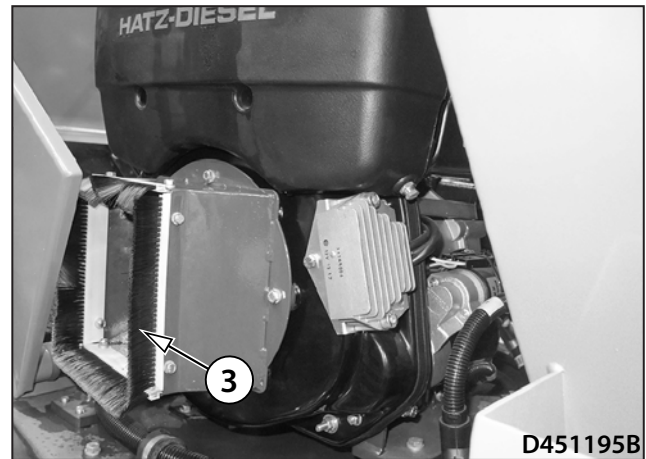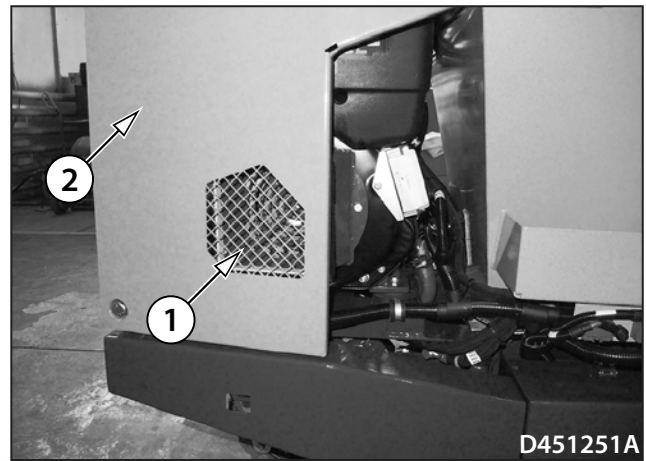

3.6.19 Engine accelerator cable tension check

Check the engine accelerator cable tension always on the machine which is parked on a flat and solid surface, with the machine engine and battery disconnecter off.

Check the correct engine accelerator cable tension; if the cable is loosened, the engine speed can be set in an uncontrolled manner.

If you find out that the cable is loosened, tension it.

Engine accelerator cable tension check procedure:

- Open the engine bonnet (1).
- Loosen the lock nut (2).
- Unscrew the set screw (3) to the required position so that the cable is tensioned.
- Tighten the lock nut (2).
- At the same time, check the correct function of the spring (4).
- At the same time, check tightening of the lock nut (5) of the set screw (6) which regulates the maximum engine speed.
- Close the engine bonnet (1).





Perform engine accelerator cable tension check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Wear the prescribed personal protective equipment when checking the engine accelerator cable tension.

There is a risk of burns from the hot parts of the engine.



Check the correct engine accelerator cable tension; if the cable is loosened, the engine speed can be set in an uncontrolled manner.

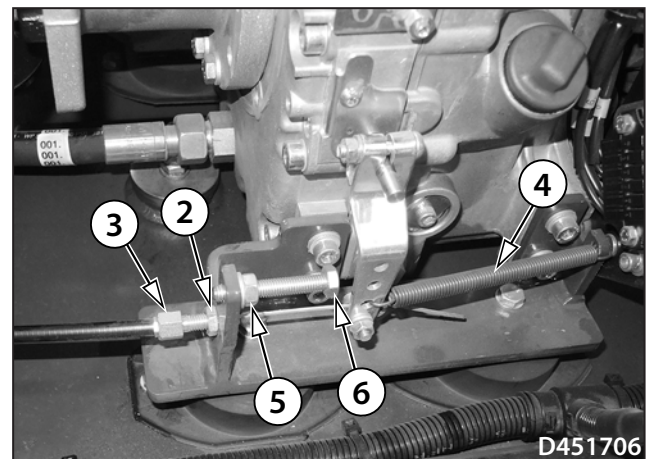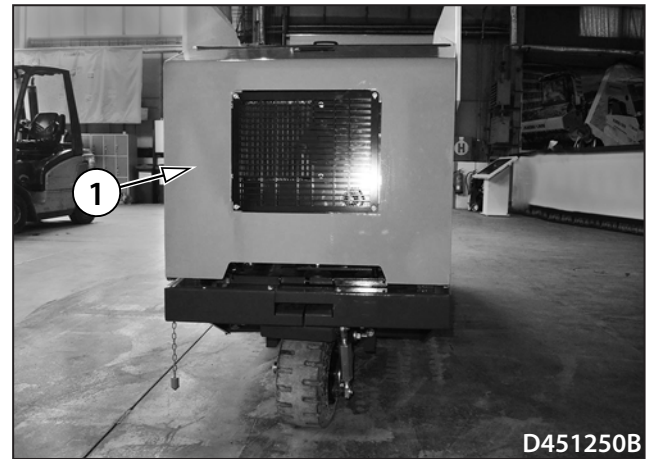

3.6 Lubrication and maintenance operations

3.6.20 Hydraulic oil cooler cleaning

Perform cleaning of the hydraulic oil cooler when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Check the hydraulic oil cooler fins (1) that they are not dirty or clogged.

The cooler clogging results in reduced cooling effect and increased temperature of the hydraulic oil.

When the machine works in a very dusty environment, clean the hydraulic oil cooler daily.

Cooler cleaning procedure:

- Open the engine bonnet (2).
- Disconnect electrical wiring (3).
- Dismount the fan (4) by means of screws (5).
- Clean the hydraulic oil cooler with compressed air, in the direction out of the bonnet.
- Mount the fan (4) using the screws (5).
- Connect electrical wiring (3).
- Close the engine bonnet (2).



Perform cleaning of the hydraulic oil cooler when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.



When cleaning the hydraulic oil cooler, wear the prescribed protective equipment.

There is a risk of burns from the hot parts of the engine.



Clean the hydraulic oil cooler only with compressed air.

Caution! The cooler clogging results in reduced cooling effect and increased temperature of the hydraulic oil.

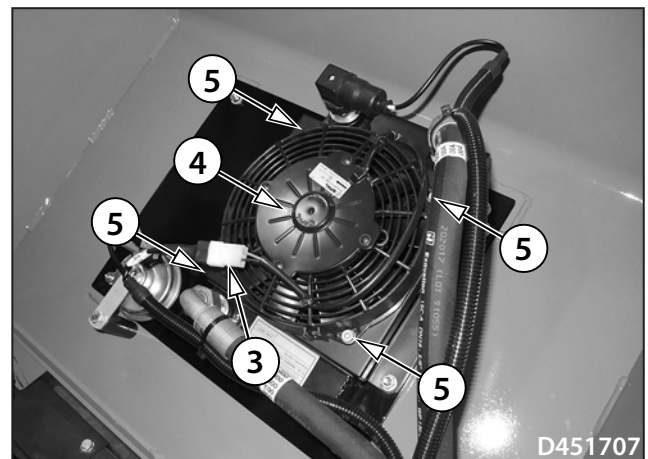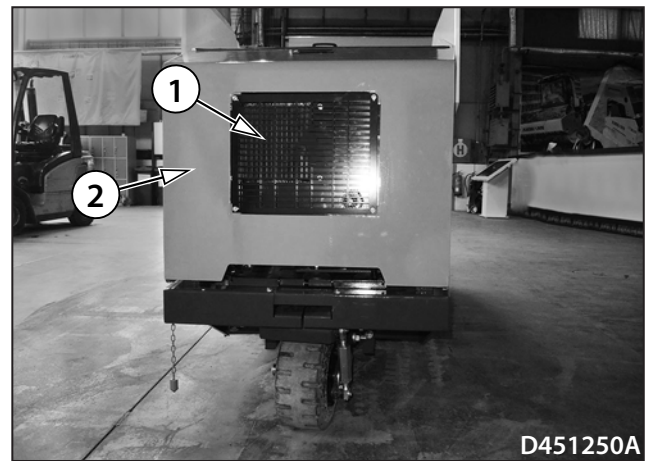

3.6.21 Hydraulic circuit tightness check

Check the hydraulic circuit for leakage when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Hydraulic circuit tightness check procedure:

- Start the engine and let the machine run at idle speed for approx. 3 – 5 minutes.
- Turn off the engine.
- Open the right material hopper side cover (1).
- Open the engine bonnet (2).
- Check all parts of the hydraulic circuit in the engine compartment, in the hydraulic tank compartment, in the rear wheel drive and screed compartment to prevent leaks of the hydraulic oil.
 - All fittings.
 - All hoses.
 - Hydraulic oil filter.
 - Hydraulic pumps.
 - Hydraulic motors.
 - Vibration motors.
 - Control blocks.
 - Linear hydraulic motors.
 - Hydraulic oil tank.
 - Hydraulic oil cooler.
- In case of leaks, have the hydraulic system repaired by qualified maintenance and repair personnel.
- If you find any leaks on the hydraulic circuit, have the repair performed by an authorised service plant or qualified personnel.
- Close the right material hopper side cover (1).
- Close the engine bonnet (2).




Check the hydraulic circuit for leakage when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Wear the prescribed personal protective equipment when checking the hydraulic circuit tightness.

There is a risk of burns from the hot parts of the engine.

There is a risk of burns from the hot parts of the screed.

There is a risk of injury due to the fall of the screed.

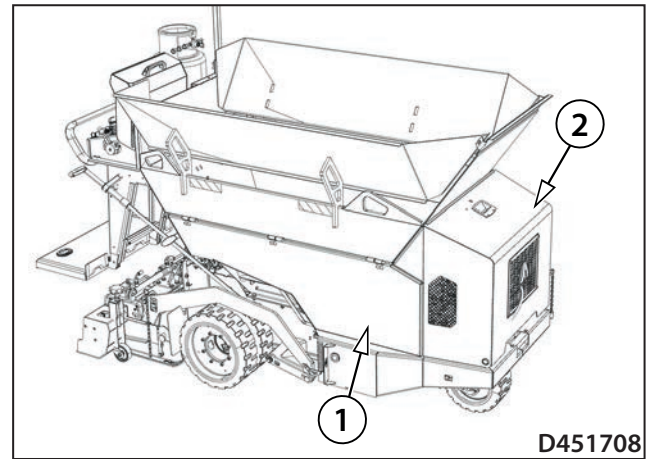

3.6 Lubrication and maintenance operations

3.6.22 Battery check

Perform battery check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

The machine is delivered from the manufacturer with a maintenance-free battery.

If a maintenance-free battery is installed in the machine, it is not necessary to check the electrolyte level and refill the electrolyte for the entire service life of the battery.

Perform battery charging as needed according to instructions of the battery manufacturer.

Note

A rest voltage on clamps is only checked on a maintenance-free battery. The battery cannot be refilled. If the rest voltage is 12.6 V and more, the battery is fully charged. If the rest voltage is below 12.4 V, the battery should be charged. After the battery is charged, leave it to stand for 2 – 3 hours and then measure the voltage again. It is recommended to mount the battery 24 hours after charging.


The rest voltage is the voltage measured at the clamps of the battery, which was at rest for at least 12 hours – it was not either charged or discharged.

Battery check procedure:

- Open the left material hopper side cover (1).
- Clean the battery surface.
- Measure the rest voltage of the battery, and charge the battery if required.
- Check the condition of the (+) pole, (-) pole and clamps.
- Clean the + pole, the - pole and the clamps.
- Apply a thin layer of grease on the clamps.
- Close the left material hopper side cover (1).

Note

In case of a long-term shut-down of the machine or its storage, dismount the battery and store it to be protected from frost. Charge the battery before and during storing and before mounting the battery on the machine.

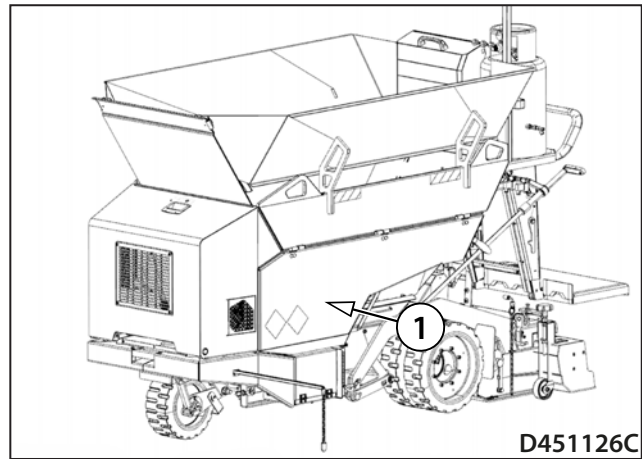

Battery charging procedure:

- Open the left material hopper side cover (1).
- Clean the battery surface.
- Remove the battery from the machine.
- When disconnecting the battery, first disconnect the cable of the (-) pole.
- Charge the battery.
- Mount the battery on the machine.
- Check the condition of the (+) pole, (-) pole and clamps.
- Clean the (+) pole, the (-) pole and the clamps.
- Apply a thin layer of grease on the clamps.
- When connecting the battery, first connect the (+) pole.
- Close the left material hopper side cover (1).

Note

Perform battery charging as needed according to instructions of the battery manufacturer.



Perform battery check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

When checking the battery, use the prescribed protective equipment.

Perform battery charging as needed according to instructions of the battery manufacturer.

Do not eat, drink and smoke and do not use a naked flame while working. Danger of fire!



Keep the battery dry and clean. Charge the battery if it is low.

Perform battery charging outside the machine.

First disconnect the minus pole cable (-) when disconnecting the battery. First connect the plus pole cable (+) when connecting the battery.


Do not disconnect the battery when the engine is running.

Disconnect the battery when repairing the machine wiring.

Disconnect the battery when welding on the machine.

Caution! Never make direct conductive connection between both poles of the battery to avoid a short circuit and a hazard of explosion of the battery.

Do not check live wires by touching the machine frame.

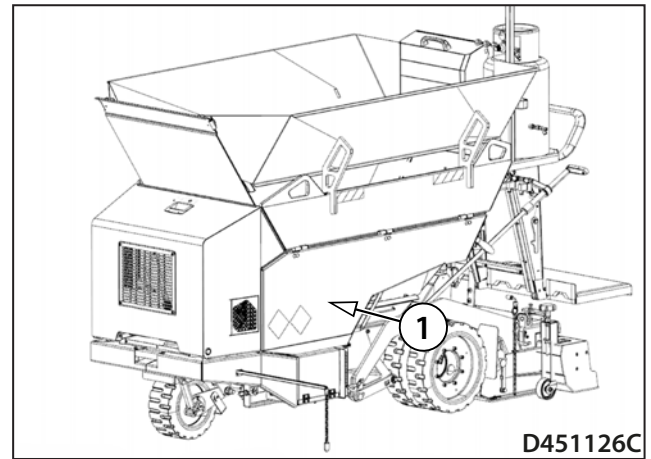

In case of electrolyte spillage, wash the affected area with water and neutralize with lime.

Hand over the old inoperative battery for disposal according to the national regulations.

3.6 Lubrication and maintenance operations

Every 500 hours of operation (every 6 months)

3.6.23 Fuel filter replacement





Perform the fuel filter replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Fuel filter replacement procedure:

- Open the left material hopper side cover (1).
- Open the engine bonnet (2).
- Place a transparent drain container resistant to engine fuel under the water separator (3).
- Hold the water separator (3) with a spanner by the nut (4).
- Loosen the water separator drain screw (5) with a screwdriver (about 3 – 4 turns) until the liquid starts to flow out.
- Check if there is a dividing line in the drain container between the condensed water (bottom) and engine fuel (top).
- When clean engine fuel flows out, firmly hold the water separator (3) by the nut (4) with a spanner and tighten the water separator drain screw (5).
- Unlock the lever (7) of the fuel tank cap (8) on the fuel tank (6) to speed up draining of the fuel.
- Dismount the fuel filter (9) from the holder by removing the nut (10).
- Dismount the fuel filter (9) from the hose (11) and drain the remaining fuel.
- Dismount the fuel filter (9) from the hose (12).
- Mount the fuel filter (9) on the hose (12).
- Connect the hose (11) to the fuel filter (9).
- Mount the fuel filter (9) from the holder by tightening the nut (10).
- Fill the tank with fuel.
- Start the engine and let it run briefly.
- Stop the engine.
- Check the tightness of the fuel filter (9).
- Close the engine bonnet (2).
- Close the left material hopper side cover (1).

Fuel filter

Order number: 4812088420

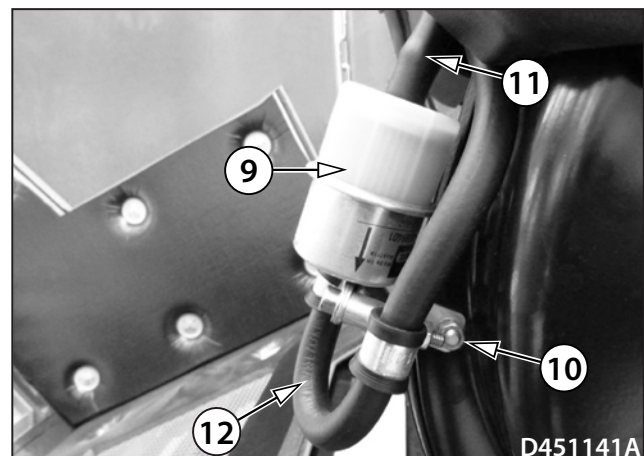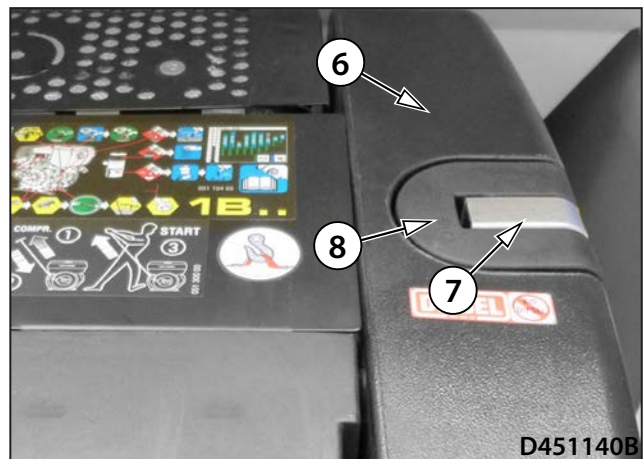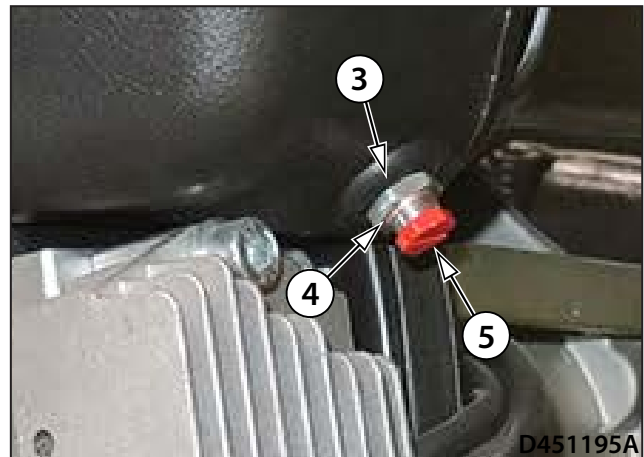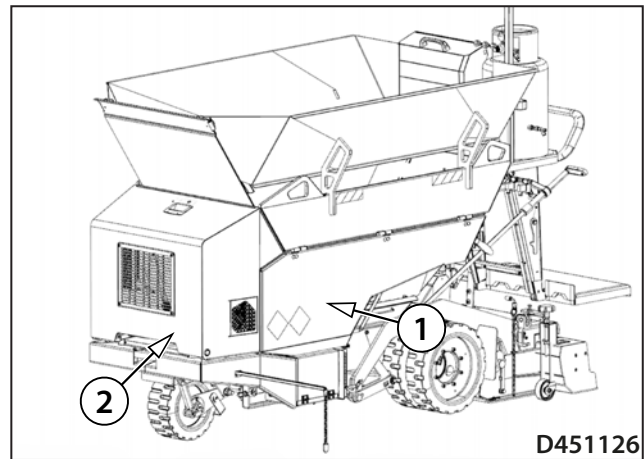



Replace the fuel filter when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Do not smoke and do not use a naked flame while working. Danger of fire!

Avoid inhaling vapours and avoid skin contact with diesel fuel.

Use personal protective equipment.

Caution! There is a risk of burns from the hot parts of the machine.

Do not refuel when the engine is running; the machine must be parked on a flat and solid surface, the engine and the battery disconnecter must be off and the gas bottle closed.

Caution! When draining the condensate, fuel can come in contact with hot parts of the engine and catch fire.

There is a risk of burns from the hot parts of the engine.



Refill the same fuel grade; see Chapter 3.2.2

Check the fuel tank and the fuel circuit for leaks.

In case of detecting water condensation in the fuel tank, drain the condensate according to Chapter 3.6.12.

When loosening the drain screw, firmly hold the water separator using a spanner. There is a risk of damage by the water separator.



Catch the drained fuel and do not let it soak into the ground.

Stop the fluid soaking into the ground.

3.6 Lubrication and maintenance operations

3.6.24 Air filter replacement

Perform air filter replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Air filter replacement procedure:

- Open the left material hopper side cover (1).
- Open the engine bonnet (2).
- Unlock the air filter cap (3) and remove the inlet air filter cover (4).
- Remove the nut (5) and the air filter (6).
- Tighten the inlet openings (7) and (8) are free of dirt and foreign objects.
- Clean the air filter body (9) and the air filter cover (4).
- Mount a new air filter (6) and screw the nut (5).
- Mount the air filter cover (4) and lock the air filter cap (3).

Air filter

Order number: 4812088419



Perform air filter replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

When replacing the air filter, use the prescribed protective equipment.





There is a risk of burns from the hot parts of the engine.



Do not use compressed air to clean the air filter body and cover; there is a risk of ingress of foreign objects to suction holes of air inlets.



Hand over the dismantled air filter for disposal according to the national regulations.

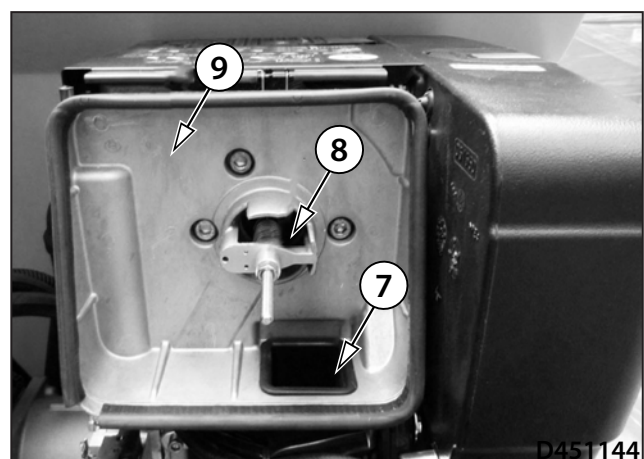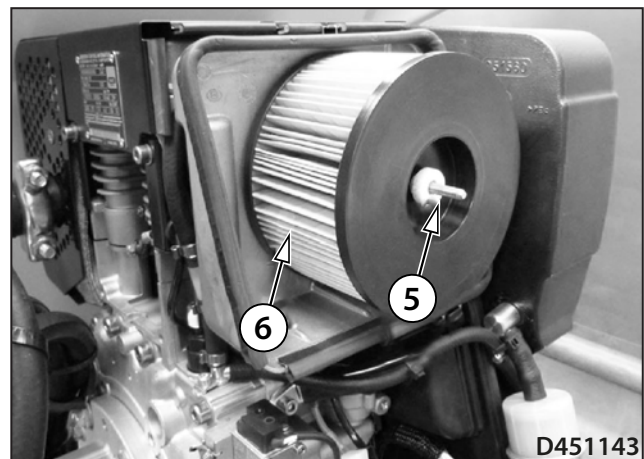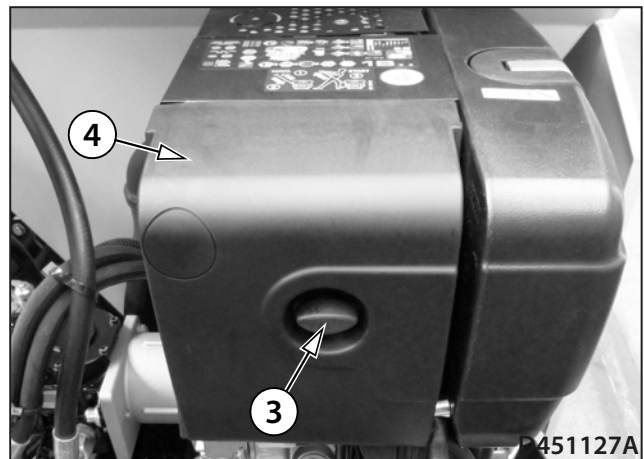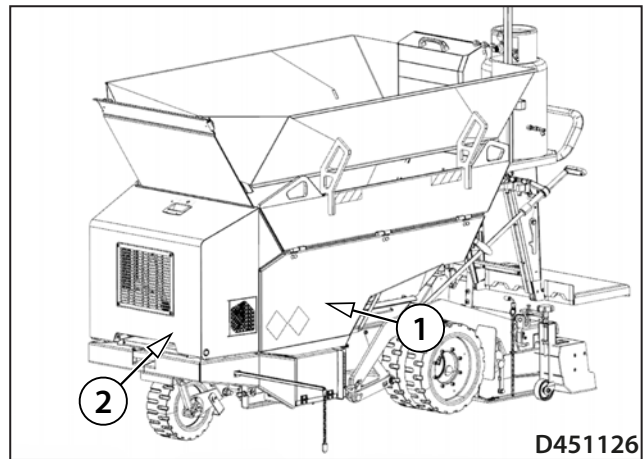

3.6.25 Front and rear wheel condition check

Perform front and rear wheel condition check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Front and rear wheel condition check procedure:

- Park the machine on a solid and flat surface.
- Lower the screed to the ground.
- Check the front wheel pattern condition (1).
- Check the rear wheel pattern condition (2) on the left and right side.
- Replace the front or rear wheels as needed.

Note

When replacing the rear wheels (2) on the left or right side of the machine, tighten the wheel bolts (3) at the tightening torque value of 48 Nm (35.4 lbft).

Front wheels

Order number: 4812088025

Rear wheels



Order number: 4812088026



Perform front and rear wheel condition check when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Wear the prescribed personal protective equipment when checking or replacing the front and rear wheels.

There is a risk of injury due to the fall of the screed.

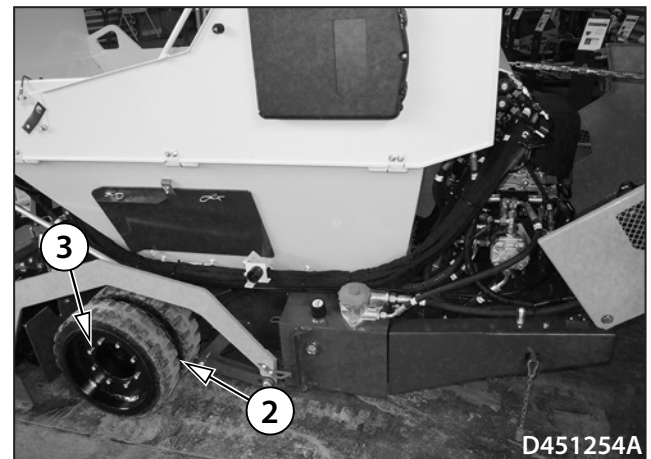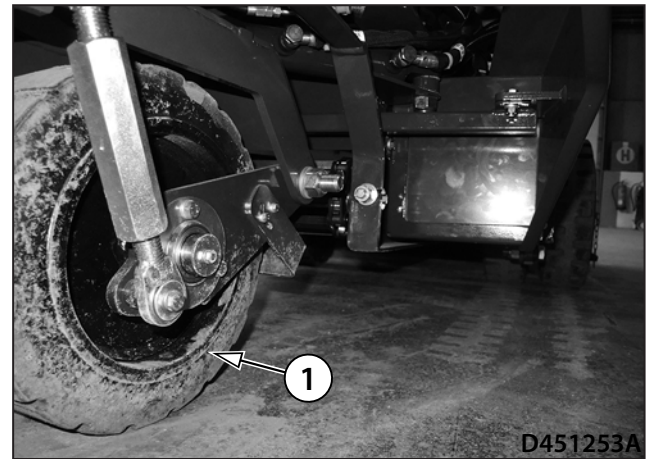

3.6 Lubrication and maintenance operations

Every 1000 hours (yearly)

3.6.26 Engine oil filter cleaning

Clean the engine oil filter when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Engine oil draining and engine oil filter removal procedure:

- Open the engine bonnet (1).
- To catch the flowing out engine oil, place a vessel with a volume of at least 2 l (0.53 gal US) under the outlet (2).
- Loosen the engine oil filter lock screw (3) by 5 turns and remove the engine oil filter (4).

Note

The drained engine oil volume is 1.8 l (0.5 US gal).

Engine oil filter cleaning procedure:

- Clean the engine oil filter (4) with compressed air.
- Check the engine oil filter (4) and sealing O-Rings (5) and (6).
- Replace the engine oil filter (4) and sealing O-Rings (5) and (6) if they are damaged.
- Mount the engine oil filter (4) and push it to the stop.
- Place the tension spring (7) so it abut the engine oil filter (4) with both ends.
- Tighten the lock screw of the engine oil filter (3) by 5 turns.
- Clean the motor from oil residues.
- Take out the oil dipstick gauge (8) and fill up oil to the engine through the filling hole (9).

Note

The total engine oil volume is 1.8 l (0.5 gal US).





The sealing O-Ring (5) forms part of the engine oil filter (4).

Engine oil filter and O-Ring

Order number: 4812088562

O-Ring (6)

Order number: 4812088564

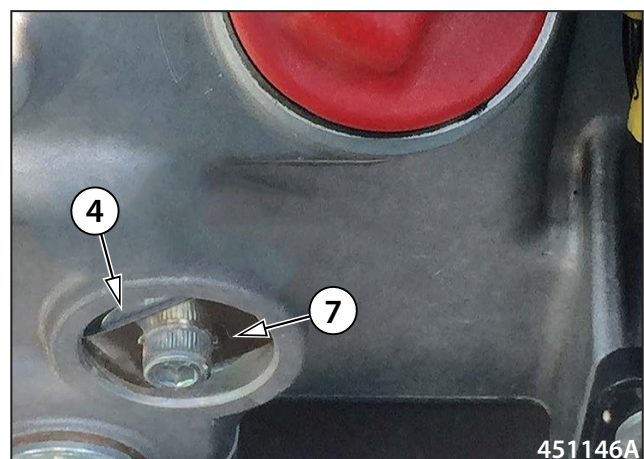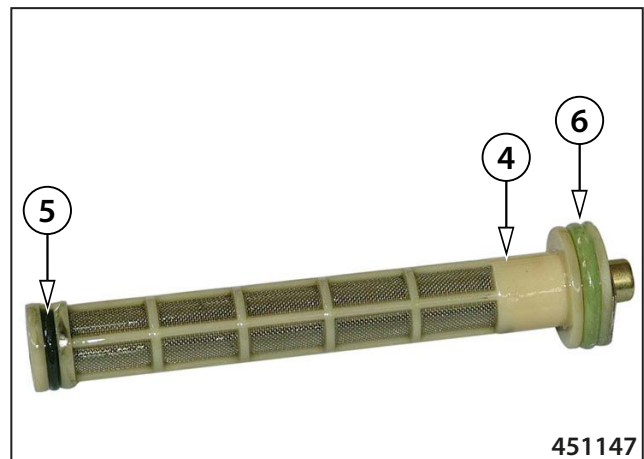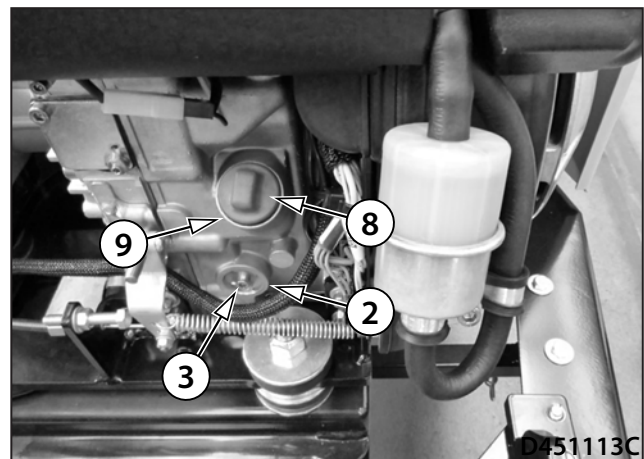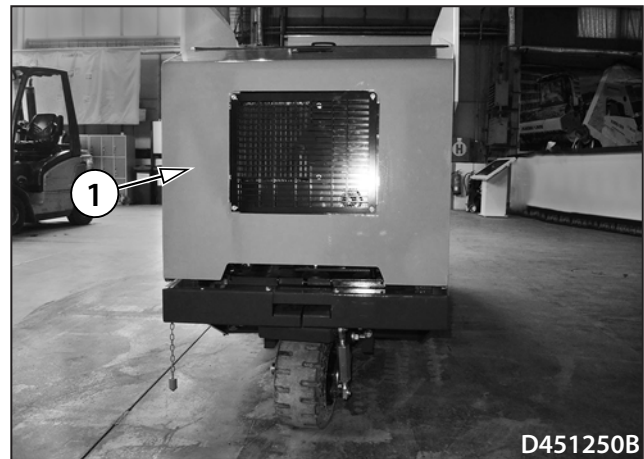

Procedure for oil volume check in the engine:

- Start the engine.
- Leave the engine to idle for at least for 5 minutes.
- Turn off the engine.
- Wait approximately for 5 minutes before oil flows to the sump and check the level again.
- Pull out the oil dipstick gauge (8), wipe it.
- Put it back up to the stop, pull out again and read height of the level.
- If required, fill up the oil through the filler neck (9) after taking out the oil dipstick gauge (8).

Note

- The lower "MIN" mark shows the lowest possible oil level, the upper "MAX" mark the highest possible oil level.
- After refilling, wait approximately for 5 minutes before oil flows to the sump and check the level again.





Clean the engine oil filter when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

When cleaning the engine oil filter, wear the prescribed protective equipment.

There is a risk of burns from the hot parts of the engine.

There is a risk of eye injury when cleaning the engine oil filter with compressed air.

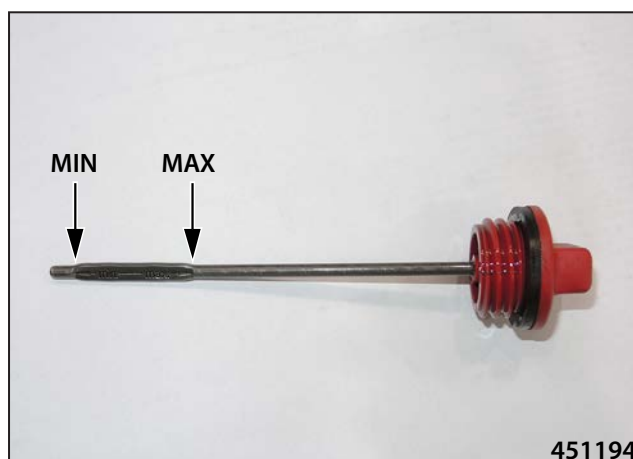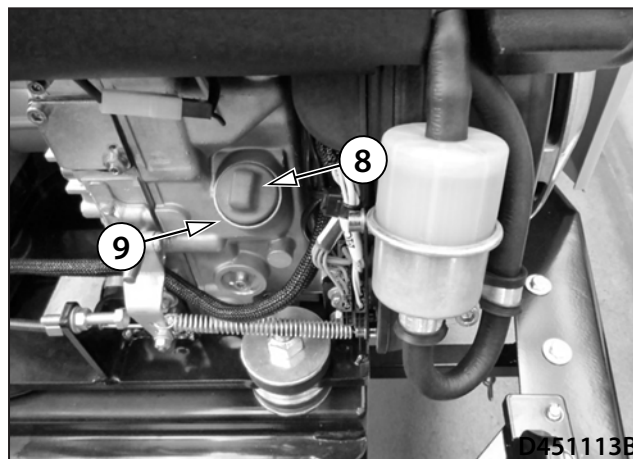

Do not use the engine unless the oil level in the engine is correct.

The oil level should be maintained between the marks stamped on the oil-gauge rod.

Use the same type of oil for refilling as given in Chapter 3.2.1



Stop the oil soaking into the ground.

3.6 Lubrication and maintenance operations

3.6.27 Hydraulic oil and hydraulic oil filter replacement



Change the hydraulic oil when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Hydraulic oil change and ventilation filter replacement procedure:

- Open the right material hopper side cover (1).
- Remove the ventilation filter (2).
- Place a vessel with a volume of at least 21 l (5.5 gal US) under the hydraulic oil drain plug (3).
- Remove the drain plug (3) from the hydraulic tank.
- Drain the oil into the prepared container.
- Mount the drain plug (3) onto the hydraulic tank and tighten.
- Fill in new oil to the hydraulic tank through the hole (4).
- The prescribed oil volume is 20 l (5.3 gal US).
- Check the oil level on the oil gauge (5).
- The hydraulic oil level must be between the MIN and MAX marks.
- Apply oil on the sealing O-Ring (6) on the ventilation filter (2).
- Mount a new ventilation filter (2).

Set of hydraulic oil filters

Order number: 4812088089

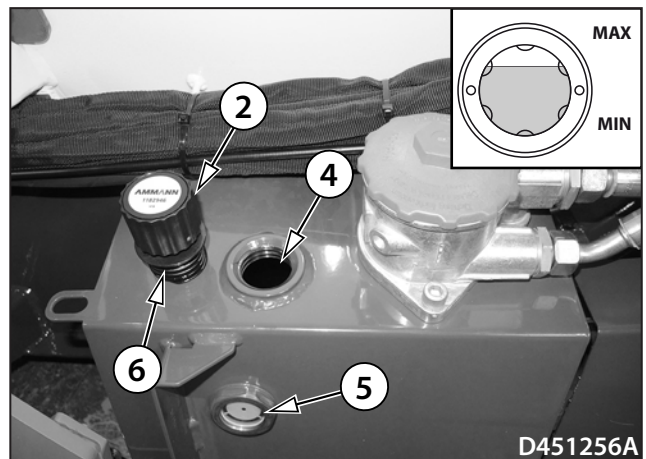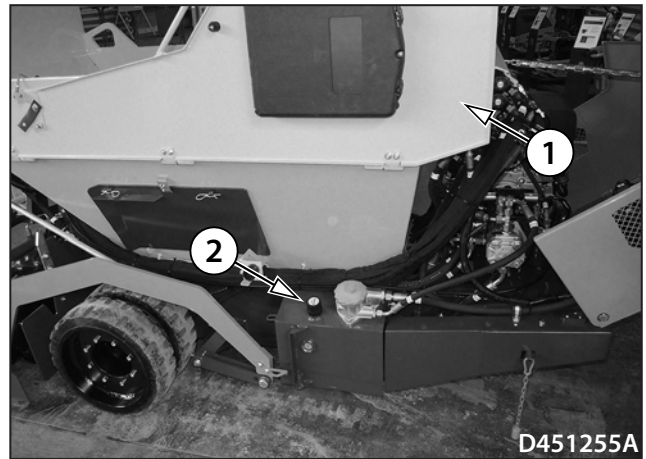

Hydraulic oil filter element replacement:

- Remove filter cap (1).
- Unlock the filter element (2).
- Pull out the filter element from the filter housing (3).
- Insert a new filter element (4).
- Turn the filter element clockwise up to the stop (4.1).
- Lock the filter element (5).
- Apply oil on the sealing O-Ring on the filter cap (7).
- Mount the cap onto the filter (8) and tighten it using the torque spanner; the maximum tightening torque value is 20 Nm (14.75 lbft).

Set of hydraulic oil filters

Order number: 4812088089



Change the hydraulic oil when the machine is parked on a flat and solid surface, the engine and the battery disconnecter are off and the gas bottle is closed.

Wear the prescribed protective equipment when replacing the hydraulic oil and hydraulic oil filters.






Carry out the oil change when the oil is warm, preferably after operation of the machine.

Refill the hydraulic oil with the prescribed hydraulic oil according to Chapter 3.2.3.



Stop the oil soaking into the ground.

Hand over the dismantled hydraulic oil filter for disposal according to the national regulations.

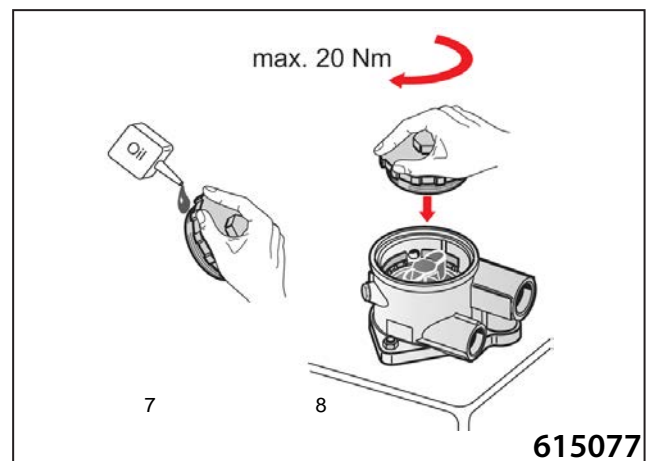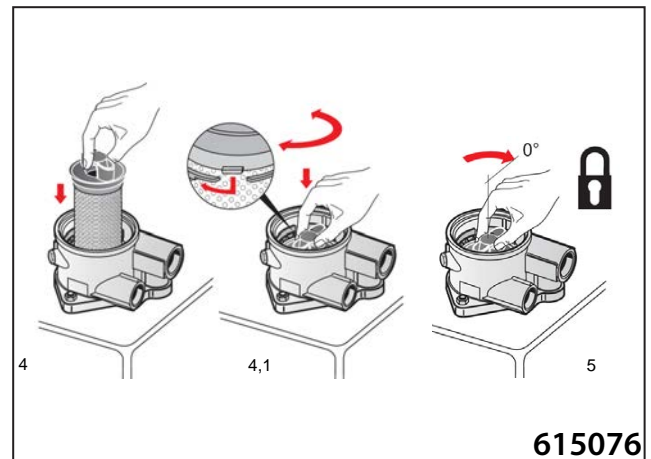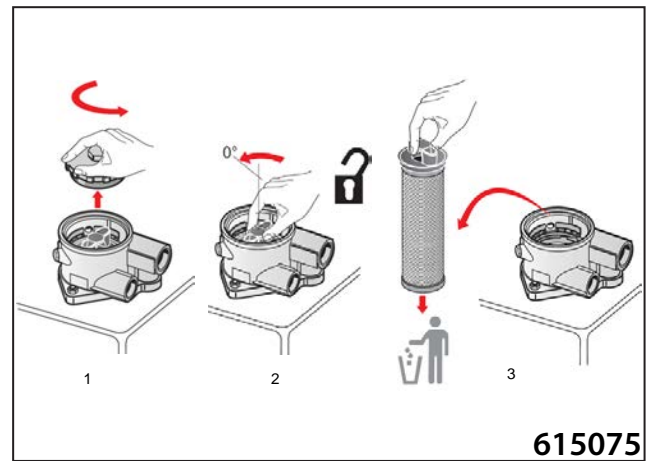

3.6 Lubrication and maintenance operations

3.6.28 Gas line hose replacement

Perform gas line hose replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off and with the closed gas bottle shut-off valve.

Have the gas line hose replacement performed by an authorised service plant or qualified personnel.

Gas line hose removal procedure:

- Close the gas bottle (2) shut-off valve (1).
- Remove the gas line hose (3) from the safety valve (4).
- Remove the gas line hose (3) from the solenoid valve of the gas supply (5).
- Remove the gas line hoses (6) from the gas supply distributor (7).
- Remove the gas line hoses (6) from the burners (8).

Gas line hose mounting procedure:

- Mount the new gas line hoses (6) on the burners (8).
- Mount the new gas line hoses (6) on the gas supply distributor (7).
- Mount the new gas line hose (3) on the solenoid valve of the gas supply (5).
- Mount the new gas line hose (3) on the safety valve (4).

Procedure to check the hoses of the gas distribution for leakage.

- Perform the gas equipment tightness check according to Chapter 3.6.8.
- In case you detect a leak on the gas system again, repeat the gas equipment tightness check procedure.



Perform gas line hose replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off and with the closed gas bottle shut-off valve.

The machine must be equipped with a fire extinguisher. Have the fire extinguisher ready on the driver's stand at a place intended for this purpose.

Pay extra attention to potential gas leaks and in doubt, shut off the gas supply.





Check the tightness of the gas equipment, e.g. with a gas leak detector.

If you detect gas leakage, immediately shut off the gas bottle shut-off valve and have the gas equipment repaired by an authorised service plant or qualified personnel.

Follow safety regulations for handling gas bottles.

There is a risk of burns. Use protective equipment.

Have the gas equipment tightness check performed by an authorised service plant or qualified personnel.

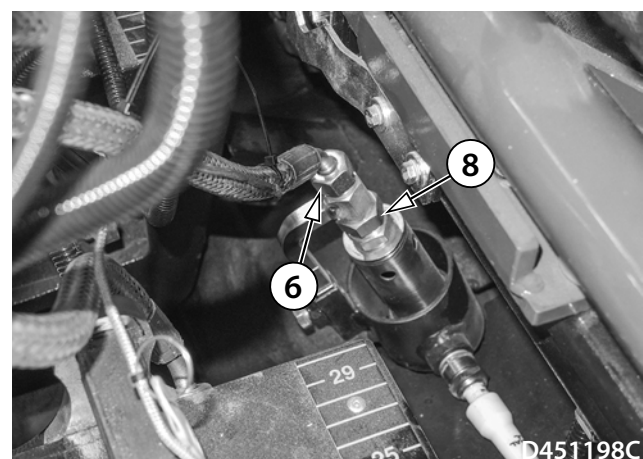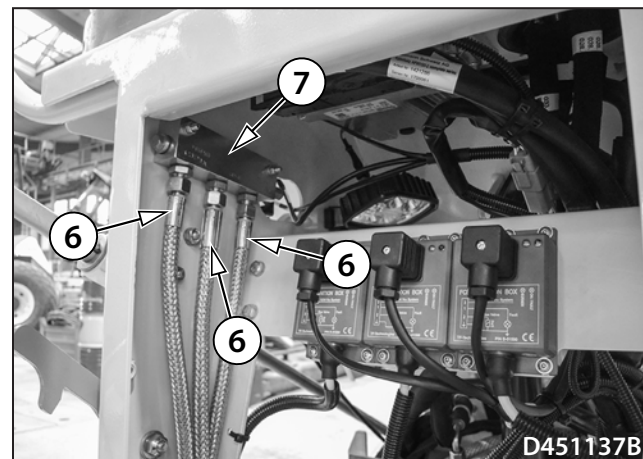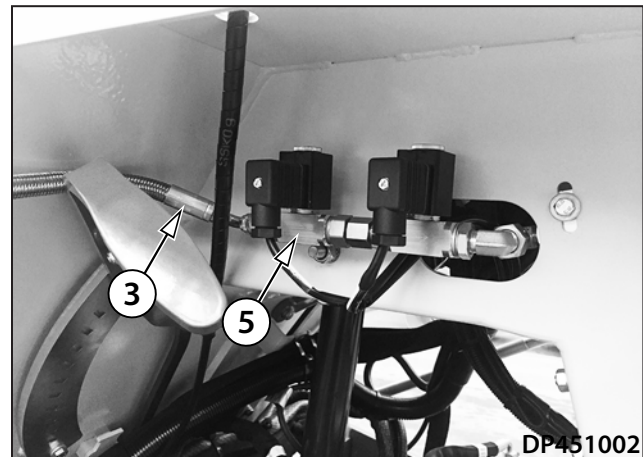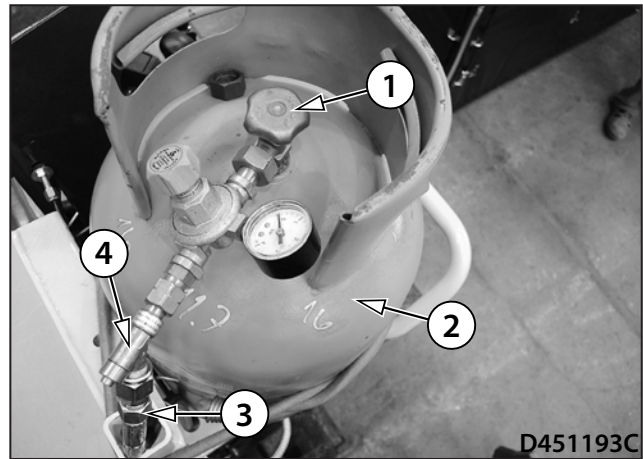

Maintenance as required

3.6.29 Battery replacement

Perform battery replacement when the machine is parked on a flat and solid surface with the engine and battery disconnecter off.

Battery replacement procedure:



- Open the left material hopper side cover (1).
- Open the battery cover (2).
- First, remove the clamp from the (-) pole on the battery, and then remove the clamp from the (+) pole.
- Remove the screw (3) of the battery holder (4).
- Remove the battery from the machine.
- Mount a new battery on the machine.
- Mount the battery holder (4) and the screw (3).
- First, mount the clamp on the (+) pole, and then mount the clamp on the (-) pole.
- Close the battery cover (2).
- Close the left material hopper side cover (1).



Replace the battery when the machine is parked on a flat and solid surface when the engine and the battery disconnecter are off and the gas bottle closed.

When replacing the battery, use the prescribed protective equipment.

There is a risk of explosion if the battery is mounted incorrectly!

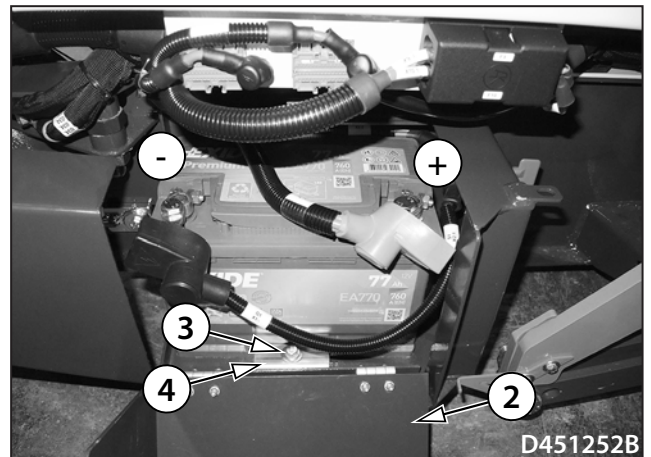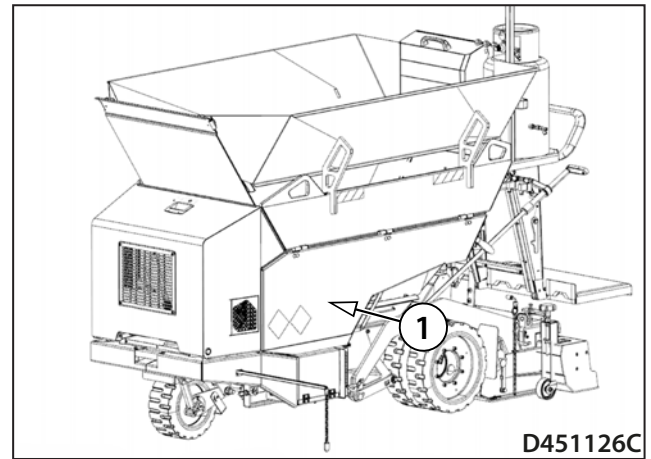

First disconnect the minus pole cable (-) when disconnecting the battery. First connect the plus pole cable (+) when connecting the battery.

Do not disconnect the battery when the engine is running.

Caution! Never make direct conductive connection between both poles of the battery to avoid a short circuit and a hazard of explosion of the battery.



Hand over the old inoperative battery for disposal according to the national regulations.

3.6 Lubrication and maintenance operations

3.6.30 Screw connections tightness check

- Check regularly whether the screwed joints are not loosened.
- Use the torque spanner for tightening.

	TIGHTENING TORQUE VALUES					TIGHTENING TORQUE VALUES			
	For the screws 8.8 (8G)		For the screws 10.9 (10K)			For the screws 8.8 (8G)		For the screws 10.9 (10K)	
Thread	Nm	lb ft	Nm	lb ft	Thread	Nm	lb ft	Nm	lb ft
M6	10	7.4	14	10.3	M18x1.5	220	162.2	312	230.1
M8	24	25.0	34	25.0	M20	390	287.6	550	405.6
M8x1	19	14.0	27	19.9	M20x1.5	312	230.1	440	324.5
M10	48	35.4	67	49.4	M22	530	390.9	745	549.4
M10x1.25	38	28.0	54	39.8	M22x1.5	425	313.4	590	435.1
M12	83	61.2	117	86.2	M24	675	497.8	950	700.6
M12x1.25	66	48.7	94	69.3	M24x2	540	398.2	760	560.5
M14	132	97.3	185	136.4	M27	995	733.8	1400	1032.5
M14x1.5	106	78.2	148	109.1	M27x2	795	586.3	1120	826.0
M16	200	147.5	285	210.2	M30	1350	995.7	1900	1401.3
M16x1.5	160	118.0	228	168.1	M30x2	1080	796.5	1520	1121.0
M18	275	202.8	390	287.6					

Values given in the table mean torque values with the dry thread (friction coefficient = 0.14). The values are not applicable to lubricated threads.

Table of tightening torque values of cap nuts with sealing O-rings – hoses



			Tightening torque values of cap nuts with O-ring - hoses					
			Nm			lb ft		
Spanner size	Thread	Pipe	Nominal	Min	Max	Nominal	Min	Max
14	12x1.5	6	20	15	25	15	11	18
17	14x1.5	8	38	30	45	28	22	33
19	16x1.5	8	45	38	52	33	28	38
		10						
22	18x1.5	10	51	43	58	38	32	43
		12						
24	20x1.5	12	58	50	65	43	37	48
27	22x1.5	14	74	60	88	55	44	65
		15						
30	24x1.5	16	74	60	88	55	44	65
32	26x1.5	18	105	85	125	77	63	92
36	30x2	20	135	115	155	100	85	114
		22						
41	36x2	25	166	140	192	122	103	142
46		28						
50	42x2	30	240	210	270	177	155	199
50	45x2	35	290	255	325	214	188	240
	52x2	38	330	280	380	243	207	280
		42						

Table of tightening torque values for necks with tightening edge, or with flat packing

G-M	Tightening torques of the neck	
	Nm	lb ft
G 1/8	25	18
G 1/4	40	30
G 3/8	95	70
G 1/2	130	96
G 3/4	250	184
G 1	400	295
G 1 1/4	600	443
G 1 1/2	800	590
10 x 1	25	18
12 x 1.5	30	22
14 x 1.5	50	37
16 x 1.5	60	44
18 x 1.5	60	44
20 x 1.5	140	103
22 x 1.5	140	103
26 x 1.5	220	162
27 x 1.5	250	184
33 x 1.5	400	295
42 x 1.5	600	443
48 x 1.5	800	590

Table of tightening torque values for plugs with flat packing

G-M	Tightening torques of the plug	
	Nm	lb ft
G 1/8	15	11
G 1/4	33	24
G 3/8	70	52
G 1/2	90	66
G 3/4	150	111
G 1	220	162
G 1 1/4	600	443
G 1 1/2	800	590
10 x 1	13	10
12 x 1.5	30	22
14 x 1.5	40	30
16 x 1.5	60	44
18 x 1.5	70	52
20 x 1.5	90	66
22 x 1.5	100	74
26 x 1.5	120	89
27 x 1.5	150	111
33 x 1.5	250	184
42 x 1.5	400	295
48 x 1.5	500	369

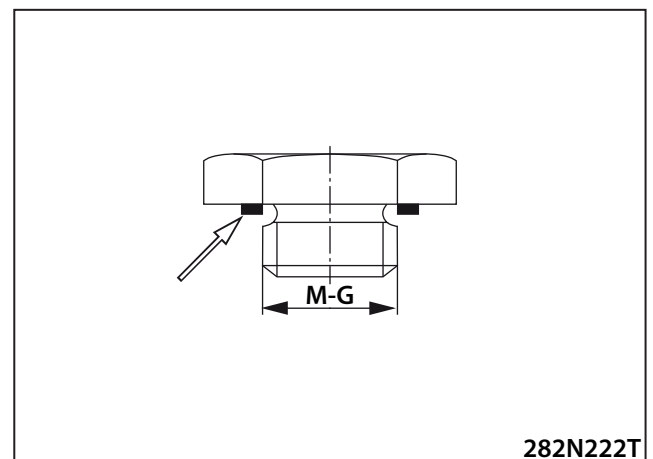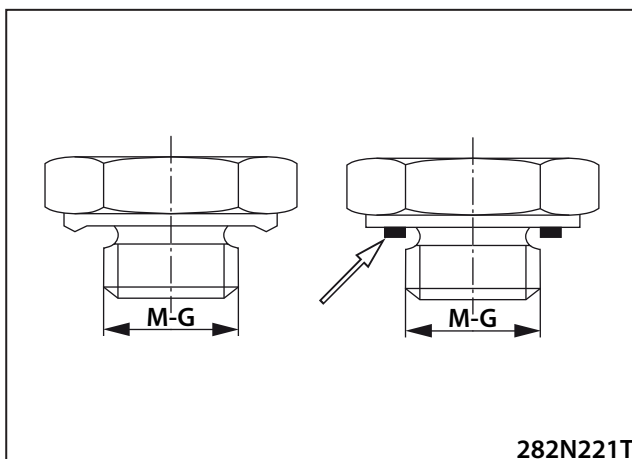

3.7 Troubleshooting

3.7.1 Troubleshooting



The defects are usually caused by incorrect operation of the machine. Therefore in case of any defect read carefully instructions given in the operation and maintenance manual for your machine and engine. If you cannot identify a cause of the defect, contact an authorised service plant or qualified personnel.

Troubleshooting in hydraulic and electric wiring systems requires knowledge of hydraulic systems and electrical installations; therefore contact an authorised service plant or qualified personnel for troubleshooting.

3.7.2 Troubleshooting engine faults when indicator lamps are lit on the display

Fault	Possible causes	Corrective action
The battery charging indicator lamp does not turn off after engine is started	<ul style="list-style-type: none">Idle engine revolutions are too lowBattery faultAlternator fault	<ul style="list-style-type: none">Have the idle revolutions of the engine increasedHave the open circuit voltage of the battery checkedHave the battery charge status checkedHave the battery charging circuit checked
Engine lubrication indicator lamp lights up while engine running	<ul style="list-style-type: none">Not enough engine oilEngine air intake hole dirtied	<ul style="list-style-type: none">Refill the engine oil to the prescribed quantityHave the air intake of the engine cleaned

3.7.3 Troubleshooting the hydraulic system

Fault	Possible causes	Corrective action
No hydraulic oil can be seen on the oil gauge of the hydraulic oil.	<ul style="list-style-type: none">Not enough hydraulic oilLeak in hydraulic system	<ul style="list-style-type: none">Check the hydraulic oil level and refill the oilCheck the hydraulic system and have it repaired
Pumps are too noisy during machine operation	<ul style="list-style-type: none">Not enough hydraulic oilLeak in hydraulic systemAir in hydraulic systemToo high hydraulic oil viscosityFaulty seal of the drive or operating pumps	<ul style="list-style-type: none">Check the hydraulic oil level and refillCheck the hydraulic system and have it repairedHave the hydraulic system repairedHave the hydraulic oil replaced with an oil with a viscosity suitable for the climatic conditions under which the machine is operated.Have the pumps repaired
Linear hydraulic motors are extended too slowly	<ul style="list-style-type: none">Leak between cylinder and pistonLeak of the solenoid valve	<ul style="list-style-type: none">Have the components repairedHave the components repaired

Fault	Possible causes	Corrective action
Decreased machine performance	<ul style="list-style-type: none"> • Leak of the solenoid valve • Leak of the linear hydraulic motor • Leak of the drive pump or the operating pump 	<ul style="list-style-type: none"> • Have the components repaired • Have the linear hydraulic motor repaired • Have the drive or operating pumps repaired
Incorrect response of the servo-device	<ul style="list-style-type: none"> • Insufficient pump revs • Incorrectly calibrated valves 	<ul style="list-style-type: none"> • Increase speed of the engine • Have the valves repaired

3.7.4 Troubleshooting the electrical system

Fault	Possible causes	Corrective action
Electrical system not operating	<ul style="list-style-type: none"> • Connections or clamps on battery loose or corroded • Discharged battery • The battery disconnecter is turned off • A faulty fuse 	<ul style="list-style-type: none"> • Have connections cleaned, lubricated and tightened • Check the battery and charge it • Turn on the battery disconnecter • Identify the cause and replace the fuse
Incorrect starter function	<ul style="list-style-type: none"> • Loose or corroded battery connections and clamps • Insufficient power supply from battery • Incorrect engine oil viscosity 	<ul style="list-style-type: none"> • Have the battery connections and clamps cleaned and tightened • Have the open circuit voltage of the battery checked. • Have the oil replaced with a manufacturer-approved oil
The battery charging indicator lamp does not turn off after engine is started.	<ul style="list-style-type: none"> • Idle engine revolutions are too low • Battery not operating correctly • Alternator not operating correctly 	<ul style="list-style-type: none"> • Have the idle revolutions of the engine increased • Have the open circuit voltage of the battery checked • Have the alternator repaired
During engine operation, the battery charging indicator lamp glows	<ul style="list-style-type: none"> • Alternator not operating correctly 	<ul style="list-style-type: none"> • Have maintenance and repairs performed on the alternator

3.7 Eliminação de defeitos

3.7.5 Troubleshooting of screed heating when active error indicator lamp is lit and an error code is shown on the display

Fault	Possible causes	Corrective action
The active error indicator lamp and an error code light up on the display immediately after the screed heating is switched on.	<ul style="list-style-type: none">• Closed gas supply• No gas• Safety valve	<ul style="list-style-type: none">• Open gas supply• Replace the gas bottle• Safety valve test and pressure check.
The active error indicator lamp and an error code light up on the display during screed heating	<ul style="list-style-type: none">• No gas, little gas in the bottle• Flame ignition system fault	<ul style="list-style-type: none">• Replace the gas bottle• Have the screed gas-heating system repaired.

3.7.6 List of error codes displayed on the display

Code F	Short description	Causes and troubleshooting
F01	hydraulic oil sensor	short circuit to the ground detected – check the connection (X41, RD 141, WH 227)
F02	material feed sensor	short circuit to the ground detected – check the connection (X43, RD 143, WH 229)
F03	F03 brake pressure sensor	short circuit to the ground detected – check the connection (X42, RD 142, WH 228)
F04	engine cooling sensor	"short circuit on the battery detected – check the connection (X18:5, X35)"
F05	engine oil level sensor	"short circuit on the battery detected – check the connection (X17:4)"
F06	engine air filter sensor	"short circuit on the battery detected – check the connection (X18:3)"
F07	drive pump sensor	"short circuit to the ground or on the battery detected or no connection – check the connection (X38, WH 214, WH 217, WH 222)"
F11	controller	"the most frequent cause: the controller is not calibrated; - parameter error 1 through 6: redundancy fault; - parameter error 7: not calibrated; - parameter error 8: error in the main channel; - parameter error 9: error in the redundant channel (X36)"
F12	speed potentiometer	"the most frequent cause: an error in the main channel; - parameter error 1 through 6: redundancy fault; - parameter error 8: error in the main channel; - parameter error 9: error in the redundant channel (X37)"
F13	travel mode switch	short circuit to the ground detected – check the connection (X53, RD 153, WH 243)
F14	material feed mode switch	short circuit to the ground detected – check the connection (X52, RD 152, WH 242)
F15	material feed direction switch	short circuit to the ground detected – check the connection (X51, RD 151, WH 240, WH 241)
F16	screed height switch	short circuit to the ground detected – check the connection (X48, RD 148, WH 236, WH 237)
F19	screed vibration switch	short circuit to the ground detected – check the connection (X49, RD 149, WH 238)
F21	horn button	short circuit to the ground detected – check the connection (X45, RD 145, WH 231)
F22	engine start switch	short circuit to the ground detected – check the connection (137)
F23	safety button	short circuit to the ground detected – check the connection (X44, RD 144, WH 230)
F24	screed extension switch – left, inside	short circuit to the ground detected – check the connection (X46, RD 146, WH 233)
F25	screed extension switch – left, outside	short circuit to the ground detected – check the connection (X46, RD 146, WH 232)
F26	screed extension switch – right, inside	short circuit to the ground detected – check the connection (X47, RD 147, WH 234)
F27	screed extension switch – right, outside	short circuit to the ground detected – check the connection (X47, RD 147, WH 235)
F28	forward control switch	short circuit to the ground detected – check the connection (X36)
F29	rearward control switch	short circuit to the ground detected – check the connection (X36)
F30	control neutral position switch	short circuit to the ground detected – check the connection (X36)
F31	travel pump – forward	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X65, Y12, WH 263, WH 265, WH 266)"
F32	travel pump - rearward	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X66, Y13, WH 264, WH 266)"
F33	drive pump safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X65, X66, Y12, Y13, WH 263, WH 264, WH 265, WH 266)"
F34	brake release output	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X60, Y7, WH 256, WH 257)"
F35	brake release safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X60, Y7, WH 256, WH 257)"
F36	material feed forward valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X54, Y1, WH 244, WH 246, WH 247)"
F37	material feed rearward valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X55, Y2, WH 245, WH 247)"
F38	material feed safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X54, X55, Y1, Y2, WH 244, WH 245, WH 246, WH 247)"

3.7 Eliminação de defeitos

F39	floating mode valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X61, Y8, WH 258, WH 259)"
F40	floating mode safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X61, Y8, WH 258, WH 259)"
F41	screed activation valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X62, Y9, WH 260, BN 326)"
F42	screed lifting valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X63, Y10, WH 261, BN 327)"
F43	extension valve – to the left, outside	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X56, Y3, WH 248, WH 250, WH 251)"
F44	extension valve – to the left, inside	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X57, Y4, WH 249, WH 251)"
F45	left extension safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X56, X57, Y3, Y4, WH 248, WH 249, WH 250, WH 251)"
F46	extension valve – to the right, outside	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X59, Y6, WH 253, WH 255)"
F47	extension valve – to the right inside	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X58, Y5, WH 252, WH 254, WH 255)"
F48	right extension safety	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X58, X59, Y5, Y6, WH 252, WH 253, WH 254, WH 255)"
F49	vibration valve	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X64, Y11, WH 262, BN 328)"
F50	cooling fan output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X68, K2, WH 268, BN 330)"
F51	alarm backup output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X70, K4, WH 270, BN 332)"
F52	engine start output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X67, K1, WH 267, BN 329)"
F53	fuel valve output	"short circuit to the ground or on the battery detected or no connection – check the connection (X17:5, WH 205)"
F54	conveyor output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X54, X55, Y1, Y2, WH 244, WH 245, WH 246, WH 247)"
F55	left extension output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X56, X57, Y3, Y4, WH 248, WH 249, WH 250, WH 251)"
F56	right extension output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X58, X59, Y5, Y6, WH 252, WH 253, WH 254, WH 255)"
F57	drive pump output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X65, X66, Y12, Y13, WH 263, WH 264, WH 265, WH 266)"
F58	brake release output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X60, Y7, WH 256, WH 257)"
F59	floating screed output, lower side	"short circuit to the ground or on the battery detected or no connection – check the connection and the coil (X61, Y8, WH 258, WH 259)"
F60	brake not adjusted	"pressure in the brake release hydraulic system although it should be zero – check the sensor and the pressure valve (X42, X60, S6, Y7, RD 142, WH 228, WH 256, WH 257)"
F61	brake not released	"zero pressure in the brake release hydraulic system although it should not be zero – check the sensor and the pressure valve (X42, X60, S6, Y7, RD 142, WH 228, WH 256, WH 257)"
F62	beacon light output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X71, K5, WH 271, BN 333)"
F63	neutral switch general error	"control safety check failed – check control connection (X36)"
F64	forward switch general error	"control safety check failed – check control connection (X36)"
F65	rearward switch general error	"control safety check failed – check control connection (X36)"
F70	screed temperature sensor	"short circuit to the ground detected or no connection – check the connection and the sensor"


F71	glowing of ignition 1	short circuit to the ground detected – check the connection (X27, A6, RD 126, WH 206)
F72	glowing of ignition 2	short circuit to the ground detected – check the connection (X28, A7, RD 127, WH 207)
F73	glowing of ignition 3	short circuit to the ground detected – check the connection (X29, A8, RD 128, WH 208)
F74	glowing switch	short circuit to the ground detected – check the connection (X50, S14, RD 150, WH 239)
F75	fault of ignition 1	"ignition box 1 indicates a fault – check the gas flow and burner ignition 1 (X73, X76, I1)"
F76	fault of ignition 2	"ignition box 2 indicates a fault – check the gas flow and burner ignition 2 (X74, X77, I2)"
F77	fault of ignition 3	"ignition box 3 indicates a fault – check the gas flow and burner ignition 3 (X75, X78, I3)"
F78	glowing output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X72, K6, WH 272, BN 334)"
F79	horn output	"short circuit to the ground or on the battery detected or no connection – check the connection and the relay (X69, K3, WH 269, BN 331)"
F80	electronics temperature too high	the internal temperature of the electronic control unit exceeds 80°C
F81	air filter service required	the diesel engine requires air filter service

3.8 Appendices

3.8.1 Machine wiring diagram

Legend:

A1 Diesel engine	S6 Brake pressure switch
A2 Control unit Bodas RC	S7 Feed switch
A3 Display	S8 Foot switch
A4 Drive lever	S9 Horn button
A5 Diagnostic socket	S10 Paving width switch left
A6 Screed gas heating controller 1 (left)	S11 Paving width switch right
A7 Screed gas heating controller 2 (middle)	S12 Screed lift/lower switch
A8 Screed gas heating controller 3 (right)	S13 Vibration switch
F1 - F8 Fuses	S14 Screed heating switch
F9 Main fuse	S15 Conveyor direction switch
F10 Starter fuse	S16 Mode selector
G1 Battery	S17 Transport/operating mode switch
H1 Warning beacon	S18 Screed temperature switch
H2 Auger lighting	Y1 Conveyor/auger right
I1 Burner ignition (left)	Y2 Conveyor/auger reverse
I2 Burner ignition (middle)	Y3 Screed extension left ejection
I3 Burner ignition (right)	Y4 Screed extension left retraction
K1 - K6 Relay	Y5 Screed extension right retraction
K10 Relay	Y6 Screed extension right ejection
M1 Oil cooling fan	Y7 Brake release
P1 Horn	Y8 Screed floating position
P2 Reverse beeper	Y9 Screed release
R1 Speed control POT wiper	Y10 Screed lift
R2 Pump angle POT wiper	Y11 Screed vibration
R3 - R6 Resistor	Y12 Drive pump forward
S1 Disconnecter	Y13 Drive pump back ward
S2 Emergency brake button	Y14 Solenoid of the gas shut-off valve
S3 Ignition switch	Y15 Solenoid of the gas shut-off valve
S5 Oil temperature switch	

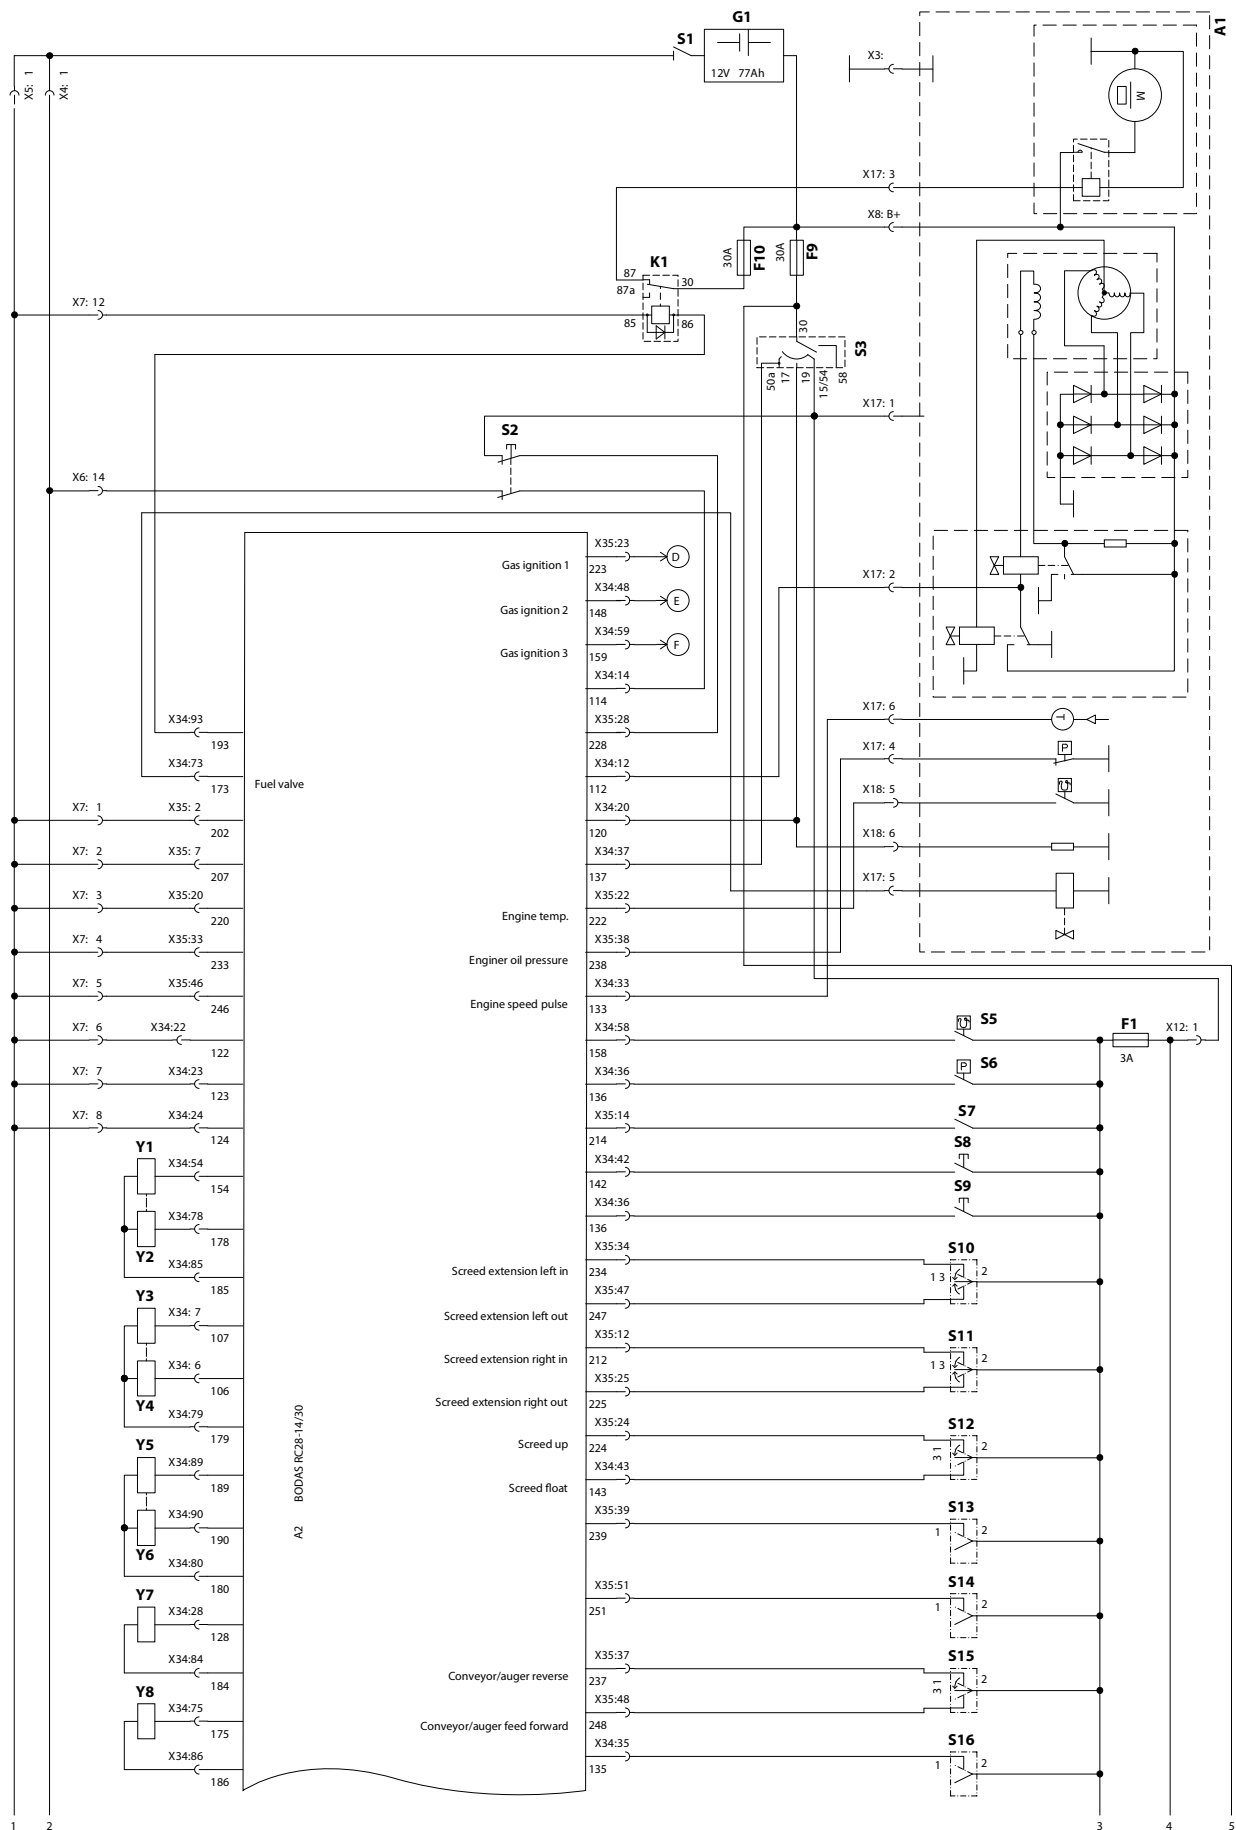


37156_1en

3.8 Appendices

Machine wiring diagram

Legend:

A1 Diesel engine	S6 Brake pressure switch
A2 Control unit Bodas RC	S7 Feed switch
A3 Display	S8 Foot switch
A4 Drive lever	S9 Horn button
A5 Diagnostic socket	S10 Paving width switch left
A6 Screed gas heating controller 1 (left)	S11 Paving width switch right
A7 Screed gas heating controller 2 (middle)	S12 Screed lift/lower switch
A8 Screed gas heating controller 3 (right)	S13 Vibration switch
F1 - F8 Fuses	S14 Screed heating switch
F9 Main fuse	S15 Conveyor direction switch
F10 Starter fuse	S16 Mode selector
G1 Battery	S17 Transport/operating mode switch
H1 Warning beacon	S18 Screed temperature switch
H2 Auger lighting	Y1 Conveyor/auger right
I1 Burner ignition (left)	Y2 Conveyor/auger reverse
I2 Burner ignition (middle)	Y3 Screed extension left ejection
I3 Burner ignition (right)	Y4 Screed extension left retraction
K1 - K6 Relay	Y5 Screed extension right retraction
K10 Relay	Y6 Screed extension right ejection
M1 Oil cooling fan	Y7 Brake release
P1 Horn	Y8 Screed floating position
P2 Reverse beeper	Y9 Screed release
R1 Speed control POT wiper	Y10 Screed lift
R2 Pump angle POT wiper	Y11 Screed vibration
R3 - R6 Resistor	Y12 Drive pump forward
S1 Disconnecter	Y13 Drive pump back ward
S2 Emergency brake button	Y14 Solenoid of the gas shut-off valve
S3 Ignition switch	Y15 Solenoid of the gas shut-off valve
S5 Oil temperature switch	

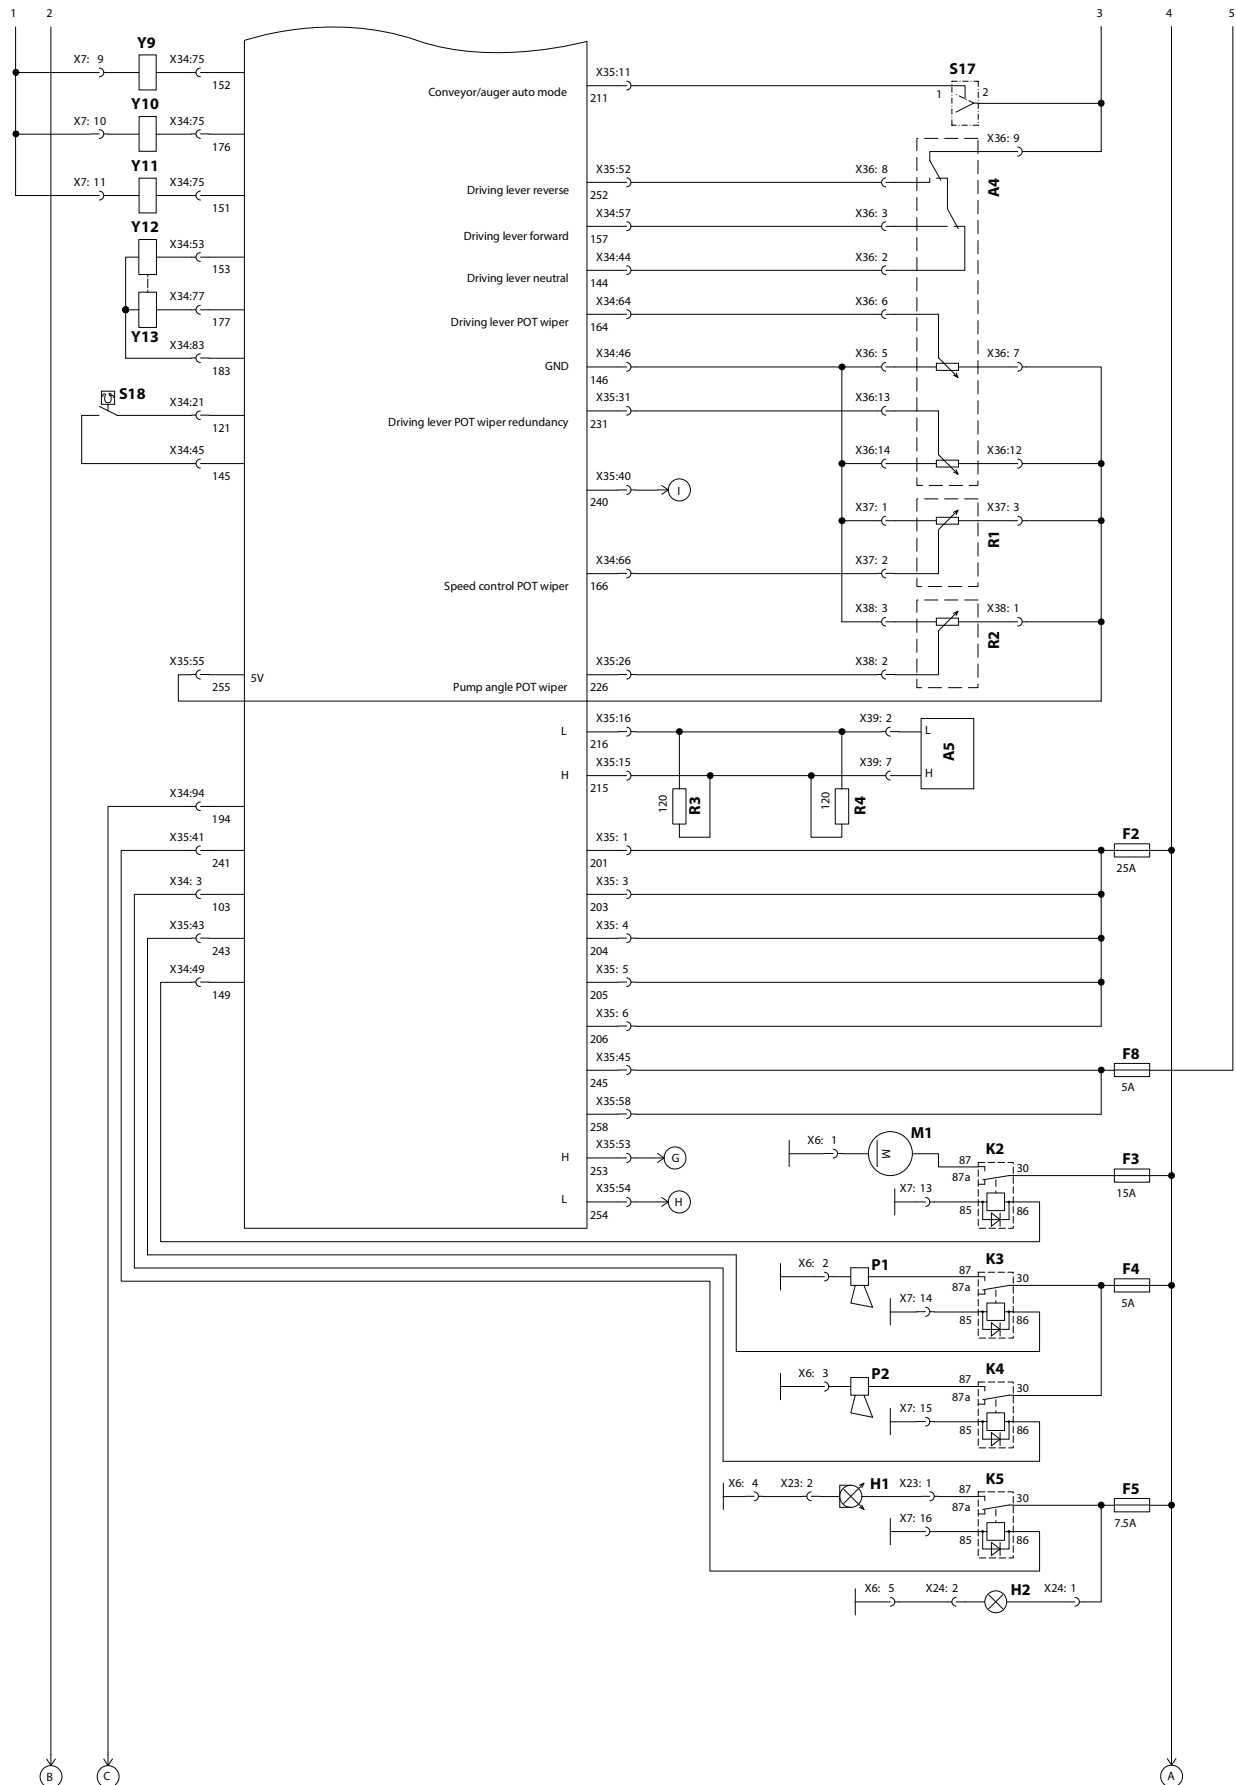


37156_2en

3.8 Appendices

Machine wiring diagram

Legend:

A1 Diesel engine	S6 Brake pressure switch
A2 Control unit Bodas RC	S7 Feed switch
A3 Display	S8 Foot switch
A4 Drive lever	S9 Horn button
A5 Diagnostic socket	S10 Paving width switch left
A6 Screed gas heating controller 1 (left)	S11 Paving width switch right
A7 Screed gas heating controller 2 (middle)	S12 Screed lift/lower switch
A8 Screed gas heating controller 3 (right)	S13 Vibration switch
F1 - F8 Fuses	S14 Screed heating switch
F9 Main fuse	S15 Conveyor direction switch
F10 Starter fuse	S16 Mode selector
G1 Battery	S17 Transport/operating mode switch
H1 Warning beacon	S18 Screed temperature switch
H2 Auger lighting	Y1 Conveyor/auger right
I1 Burner ignition (left)	Y2 Conveyor/auger reverse
I2 Burner ignition (middle)	Y3 Screed extension left ejection
I3 Burner ignition (right)	Y4 Screed extension left retraction
K1 - K6 Relay	Y5 Screed extension right retraction
K10 Relay	Y6 Screed extension right ejection
M1 Oil cooling fan	Y7 Brake release
P1 Horn	Y8 Screed floating position
P2 Reverse beeper	Y9 Screed release
R1 Speed control POT wiper	Y10 Screed lift
R2 Pump angle POT wiper	Y11 Screed vibration
R3 - R6 Resistor	Y12 Drive pump forward
S1 Disconnecter	Y13 Drive pump back ward
S2 Emergency brake button	Y14 Solenoid of the gas shut-off valve
S3 Ignition switch	Y15 Solenoid of the gas shut-off valve
S5 Oil temperature switch	




3.8 Appendices

3.8.2 Machine hydraulic system diagram

Legend:

- 1 Travel pump
- 2 Operating pump
- 3 Left travel motor
- 4 Right travel motor
- 5 Suction return filter
- 6 Hydraulic oil cooler
- 7 Hydraulic system block
- 8 Augers
- 9 Screed lifting/lowering hydraulic cylinder
- 10 Left paving width hydraulic cylinder
- 11 Right paving width hydraulic cylinder
- 12 Control unit
- 13 Steering
- A.1 *Vibration unit right
- A.2 *Vibration unit left

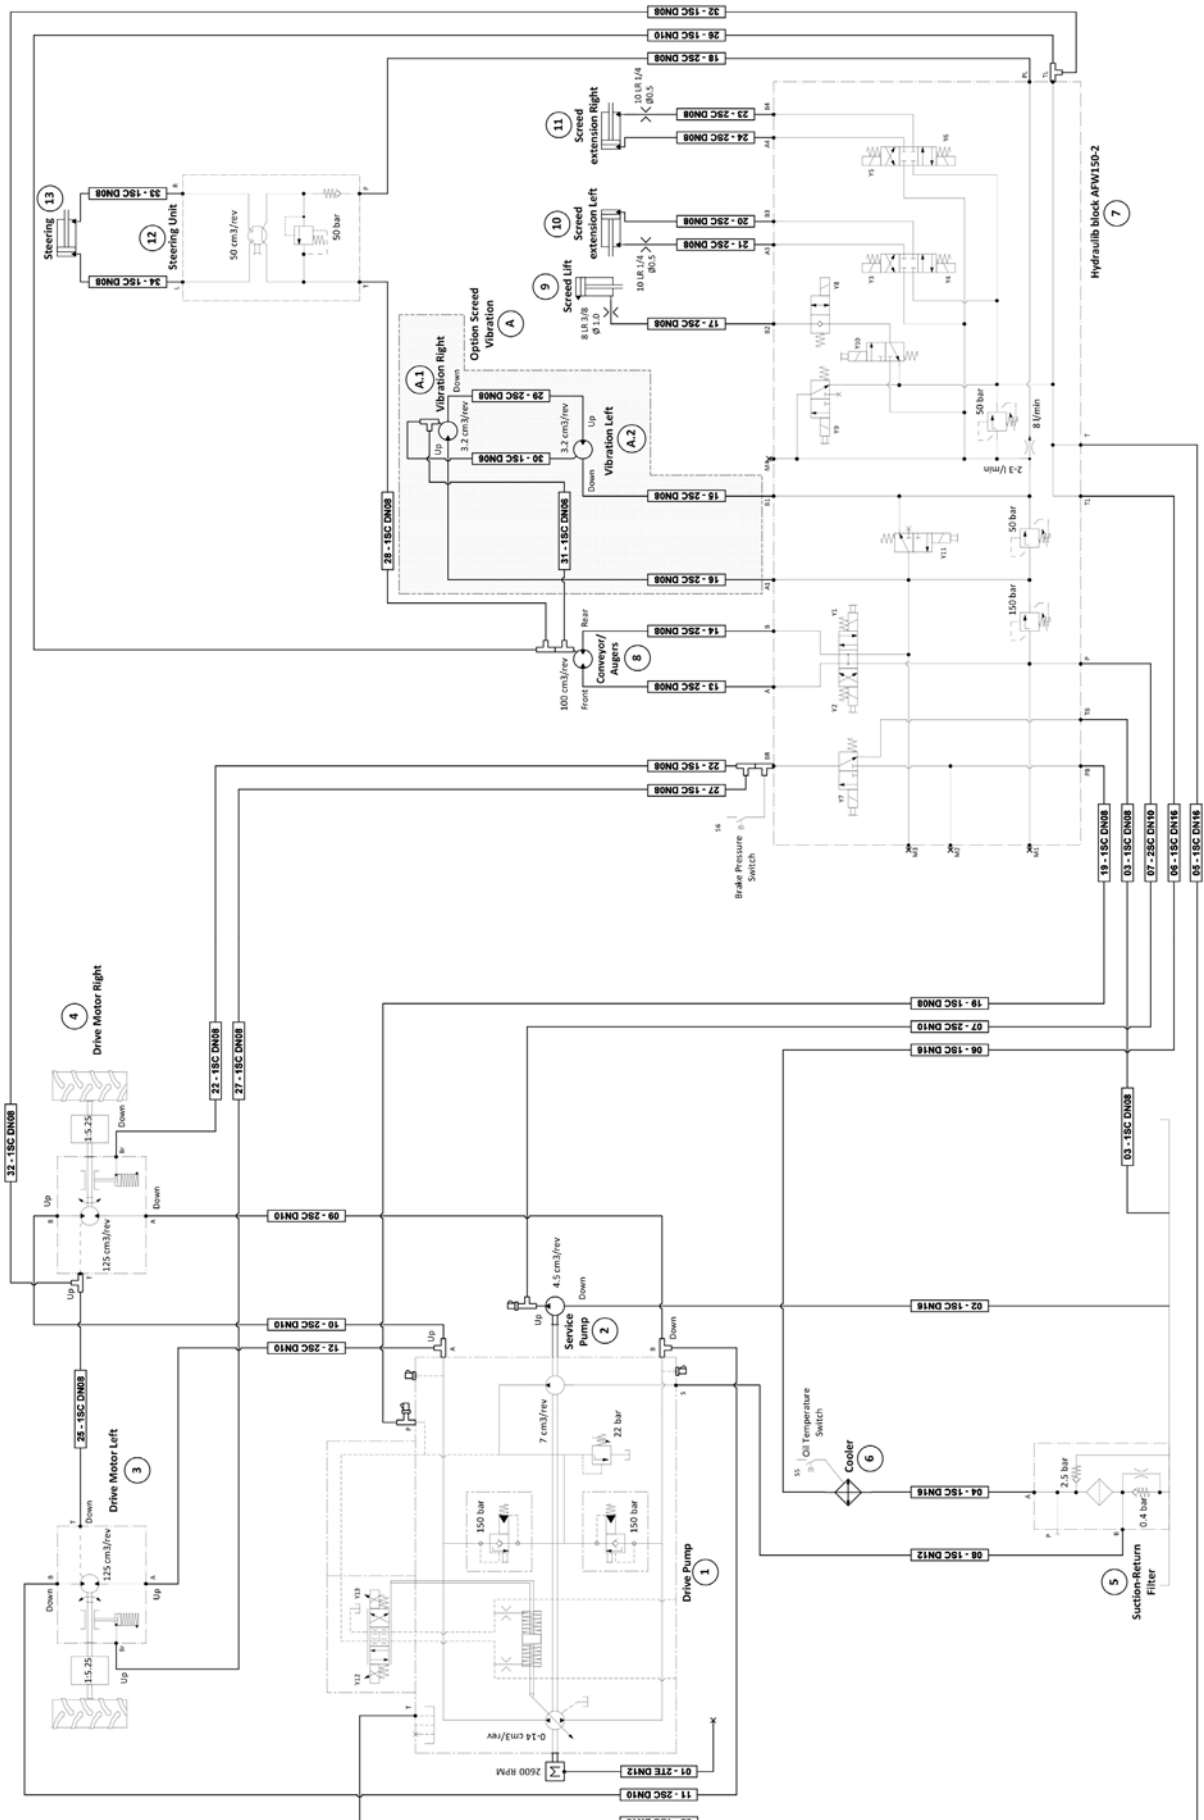

451190

3.8 Appendices



3.8.2.1 Measuring points of the hydraulic circuit


The table shows the list of the hydraulic circuit measuring points located on the machine.

Note

See the procedure for measuring the pressure in the hydraulic circuit in the workshop manual delivered upon a special order.

	Mode	Pressure (bar)
Measuring point no. 1	Conveyor (maximum speed)	155±5
	Auger (maximum speed)	100±4
	Screed lifting (maximum speed)	55±5
	Screed extension (maximum speed)	55±5
	Vibrations + travel (maximum speed)	55±5
	Steering (maximum speed)	55±5
Measuring point no. 2	Forward travel	172±10
Measuring point no. 3	Refilling pressure (maximum speed)	20±2
	Refilling pressure (idle speed)	22+4/-2
Measuring point no. 4	Reverse travel	172±10

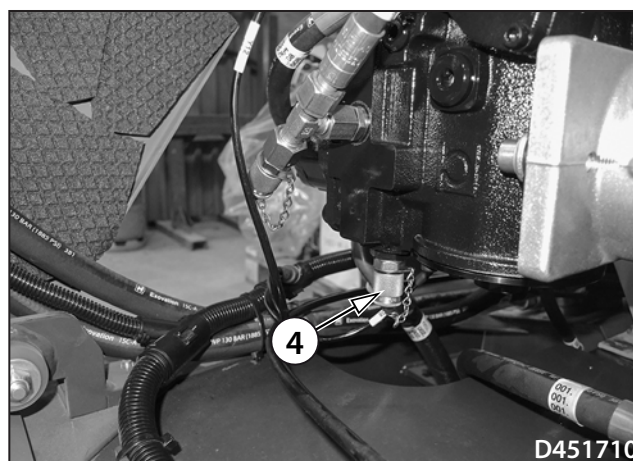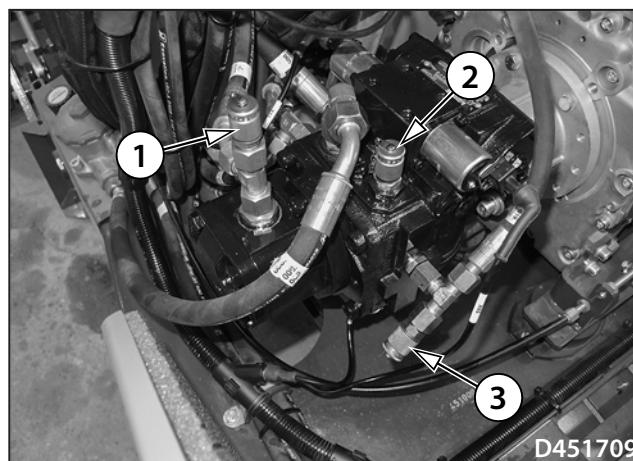

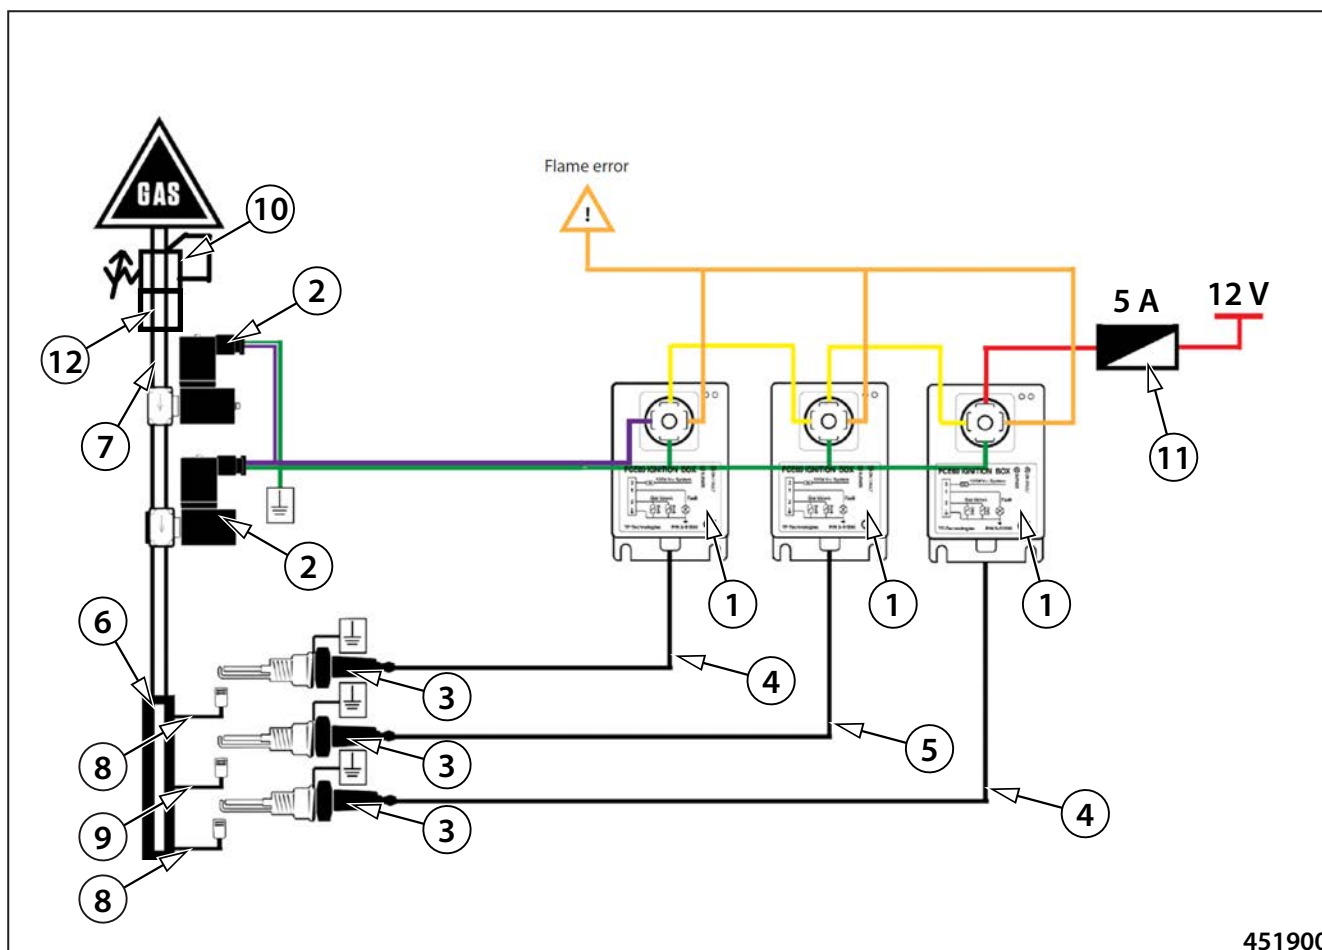

451900

3.8.3 Screed gas heating system diagram

Legend:

- 1 Screed heating system ignition units
- 2 Gas supply solenoid valves
- 3 Spark plugs
- 4 Cables
- 5 Cable
- 6 Gas supply manifold
- 7 Gas hose
- 8 Gas hose
- 9 Gas hose
- 10 Reducing valve
- 11 Screed heating fuse, 5 A
- 12 Safety valve

3.8 Appendices

3.8.4 Table of spare parts for regular maintenance

Chapter	Spare part	Order number
3.6.23	Fuel filter	4812088420
3.6.24	Air filter	4812088419
3.6.25	Front wheels	4812088025
3.6.25	Rear wheels	4812088026
3.6.26	Engine oil filter and O-Ring	4812088562
3.6.26	O-Ring	4812088564
3.6.27	Set of hydraulic oil filters	4812088089

3.8.5 Content of the filter set after 500 hours (4812088533)

Chapter	Spare part	Number of parts	Order number
3.6.23	Fuel filter	1 pc	4812088420
3.6.24	Air filter	1 pc	4812088419

3.8.6 Content of the filter set after 1000 hours (4812088534)

Chapter	Spare part	Number of parts	Order number
3.6.23	Fuel filter	1 pc	4812088420
3.6.24	Air filter	1 pc	4812088419
3.6.25	Set of hydraulic oil filters	1 pc	4812088089

3.8.7 Table of optional equipment

Chapter	Optional equipment	Order number
1.4.2	Mechanical screed extension	4812061017
1.4.3	Dual wheels	4812061018
1.4.4	Front wheel scraper	4812061021
1.4.5	Material hopper extension	4812061019
1.4.6	Additional lighting	4812061020

3.8 Appendices

[illegible]

