


DYNAPAC
CC122
SPARE PARTS
CATALOGUE
SCC122-1EN3

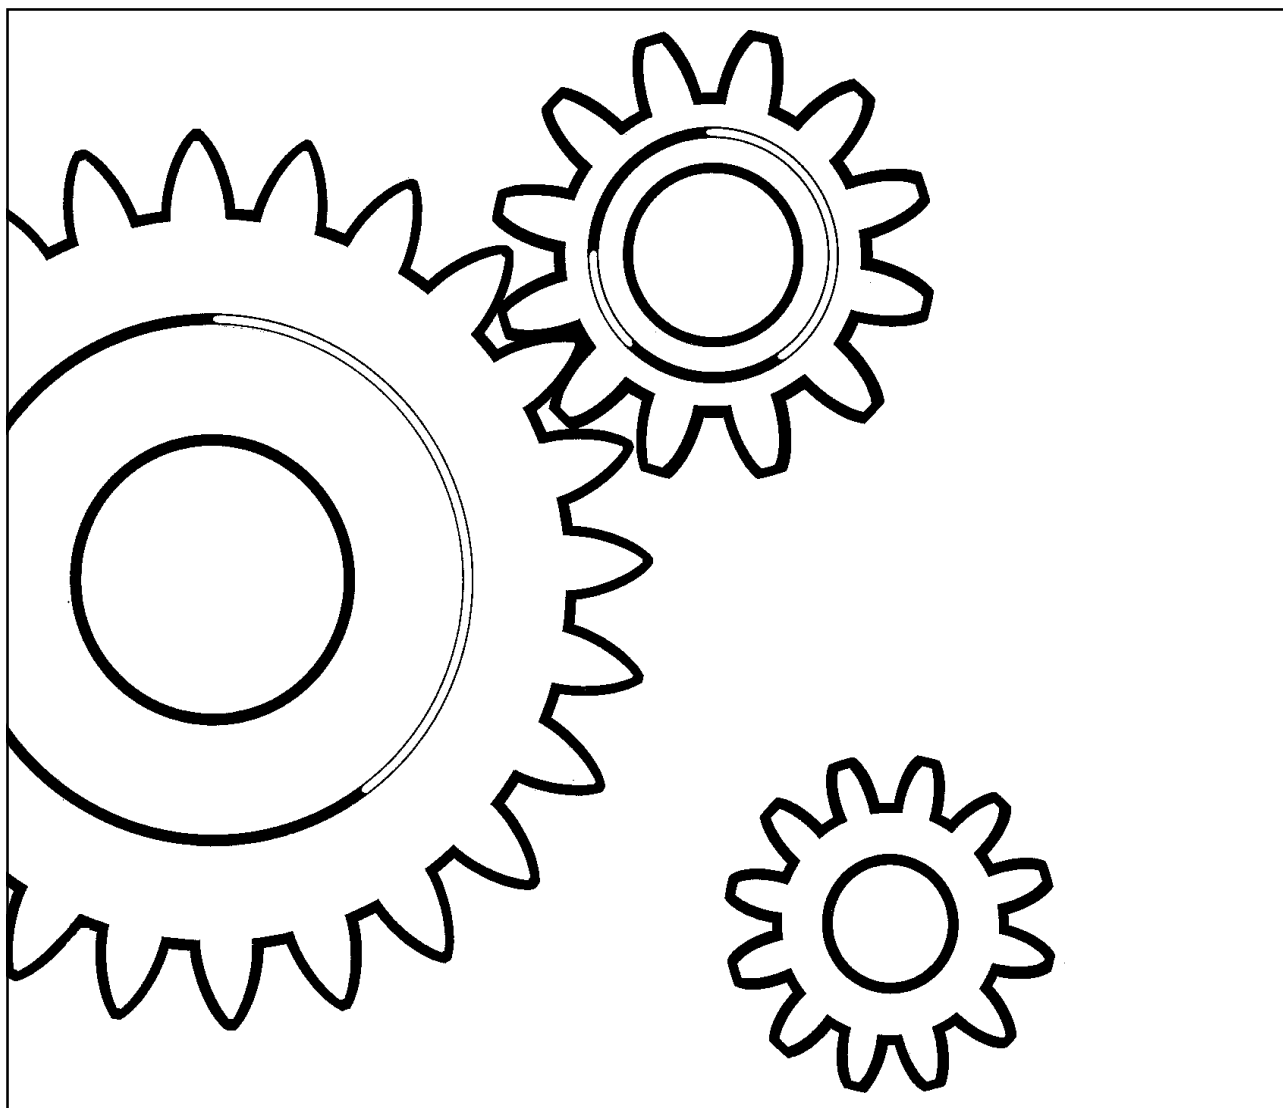

DYNAPAC

Metso Dynapac AB

Box 504, SE-371 23 Karlskrona, Sweden

Phone: +46 455 30 60 00, Fax: +46 455 30 60 10

www.dynapac.com

Vibratory Roller CC122

Spare Parts Catalogue SCC122-1EN3

Valid from roller serial number:

**60110102* CC122 DEUTZ*

**60121691* CC122 ISUZU*

**6019xxxx* CC122 ISUZU*

Diesel engines:

DEUTZ F2L 1011/1011F

ISUZU 3LD1 PW-05

Published catalogue issues valid for these rollers:

<i>Catalogue</i>	<i>Issue date</i>	<i>Valid for serial numbers</i>
<i>S-251-1</i>	<i>1992-12</i>	<i>Replaced by S-251-2</i>
<i>S-251-2</i>	<i>1994-08</i>	<i>Replaced by S102EN1</i>
<i>S102EN1</i>	<i>1996-10</i>	<i>Replaced by S102EN2</i>
<i>S102EN2</i>	<i>1999-01</i>	<i>Replaced by SCC122-1EN1</i>
<i>SCC122-1EN1</i>	<i>1999-10</i>	<i>Replaced by SCC122-1EN2</i>
<i>SCC122-1EN2</i>	<i>2001-12</i>	<i>Replaced by SCC122-1EN3</i>
<i>SCC122-1EN3</i>	<i>2003-05</i>	<i>See above</i>



RESERVDELSBESTÄLLNING

Följande uppgifter ska lämnas vid beställning av reservdelar för att undvika leveransfel:

1. Maskintyp.
2. Vältensserienummer.
3. Antal av önskad reservdel.
4. Reserdelens artikelnummer.
5. Reservdelens benämning.
6. Måttuppgifter vid beställning av metervara.

ORDERING SPARE PARTS

To avoid errors in delivery, please give the following information when ordering spare parts:

1. Type of machine.
2. Roller serial number.
3. Quantity required.
4. Part number.
5. Parts denomination.
6. Dimensions when ordering per length.

ERSATZTEILBESTELLUNG

Zur Vermeidung von Fehllieferungen sind bei der Bestellung von Ersatzteilen folgende Angaben zu machen:

1. Maschinentyp.
2. Herstellungsnummer.
3. Bestellmenge. (Quantity)
4. Ersatzteilnummer. (Part N°)
5. Ersatzteilbenennung. (Denomination)
6. Massangaben bei Bestellung von Meterware.

ORDINI DI RICAMBI

Per evitare errori nelle consegne di ricambi, Vi preghiamo di comunicarci le seguenti informazioni al momento dell'ordinazione:

1. Tipo di macchina.
2. Numero di serie della macchina.
3. Quantità dei pezzi desiderati. (Quantity)
4. Numero di codice del pezzo. (Part N°)
5. Descrizione del pezzo di ricambio. (Denomination)
6. Misura, in caso di ordine per metro.

PEDIDO DE RECAMBIOS

Para evitar errores en las entregas, deberán indicarse los siguientes datos al hacer un pedido de recambios:

1. Tipo de máquina.
2. Número de serie.
3. Cantidad de piezas deseadas. (Quantity)
4. Número de artículo de la pieza de recambio. (Part N°)
5. Denominación de la pieza. (Denomination)
6. Indíquese la medida al solicitar un artículo que se expide por metros.

COMMANDE DE PIÉCES DE RECHANGE

Les indications suivantes doivent être fournies lors de la commande de pièces de rechange, afin d'éviter toute erreur de livraison:

1. Type de machine.
2. Numéro de série.
3. Quantité désirée de pièce de rechange. (Quantity)
4. Numéro de la pièce de rechange. (Part N°)
5. Dénomination de la pièce de rechange. (Denomination)
6. Longueur en cas de commande au mètre.

YOUR AGENT/DEALER:

DYNAPAC

Text pages

The text pages is structured as the picture on the right.

1. This is the remarks for specific items and the descriptions of the remarks is at the bottom of the parts list.

2. Parts indicated by a dot and moved to the right are included when buying the assembled unit above.

3. Spare parts and service code for a specific part, mainly for internal use at Dynapac. "A" = Service part, "B" = Fast moving part, "C" = Suggested exchanged part and "D" = Regular spare part.

DYNAPAC					Metso Dynapac AB
Cooling system					
Ref. No.	Part No.	Rem.	Qty	Description	Code
1	223047		1	Water cooler	③ C
2	935852		1	Radiator cap	D
3	935851	①	1	Cock	
4	373263	A	1	Radiator hose	D
5	313009		6	Clamp	
6	205058	B	1XL	Rubber clotch	
7	373261	C	1	Radiator hose	D
8			1	Oil cooler	D
9	223289		1	Plate	
10	902166	D	1XL	Edge trim	
11	223287	E	1	Holder	
12	223288	F	1	Holder	
13	908168		1	Fan guard	
14	908170		1	Fan shroud	
15	908171		2	Mounting bar	
16	908169		1	Fan guard	
17	500021		14	Screw	
18	902286		14	Nut	
19	600006		14	Washer	
20	313102		2	Cable strap	

A) Upper
 B) L=060MM
 C) Lower
 D) L=2280MM
 E) Left
 F) Right

Changes

PARTS INFO	SERVICE INFO	GROUP	PAGE	NOTES

Notes

Notes

[illegible]

PÄRMETIKETT

För att undvika fel vid reservdelsbeställning finns här nedan två etiketter som passar i fickorna på pärmarnas ryggar. På dessa kan man se från vilket vältnummer av aktuell maskin reservdelskatalogen gäller. Gör så här:

1. Tag denna sida ur pärm.
2. Klipp ut etiketten till **VÄNSTER** (1) och sätt in den i fickan på **DENNA** pärmens rygg.
3. Finns det en etikett till **HÖGER** (2), kan denna användas på pärmerna för **FÖREGÅENDE** utgåva av denna katalog.
4. Kasta detta papper.

KATALOG-BESCHRIFTUNG

Zur Vermeidung von Fehlern bei der Ersatzteilbestellung benutzen Sie bitte die unteren Beschriftungen, um die Kataloge auf der Rückseite zu kennzeichnen. Auf der Beschriftung ist angegeben, für welche Maschinennummern der jeweilige Katalog gültig ist. Ablauf:

1. Nehmen Sie dieses Blatt aus dem Katalog.
2. Schneiden Sie die **LINKE** Beschriftung (1) aus. Schieben Sie die Beschriftung in die tasche auf **DEM** Katalogrücke.
3. Sollte die Beschriftung unten **RECHTS** (2) mitgeliefert werden, kennzeichnen Sie damit bitte die **ÄLTERE** Ausführung dieses Kataloges.
4. Den Rest dieses Blattes bitte vernichten.

ETIQUETA PARA LA CARPETA

Para evitar errores al pedir repuestos utilicen las etiquetas abajo descritas para identificar los catálogos en la parte trasera de la carpeta. En la etiqueta se ven los números de referencia de la serie para la cual es válido el catálogo. Instrucciones:

1. Quitar esta página de la carpeta.
2. Corta la etiqueta **IZQUIERDA** (1) y ponerla en la parte trasera de la carpeta.
3. Si hay una etiqueta en la parte **DERECHA** (2) se puede utilizar en la carpeta para el catálogo que **PRECEDE** a esta.
4. Tirar esta hoja.

BINDER LABEL

To avoid errors when ordering spare parts use the labels below to identify the catalogues on the back of the binder. The label contain the serial number range for which the catalogue is valid. Do like this:

1. Remove this page from the binder.
2. Cut out the **LEFT** label (1) and put it on **THIS** binders back.
3. If there is a label to the **RIGHT** (2), it can be used on the binder for **PRECEDING** issue of this catalogue.
4. Throw away this paper.

ETICHETTA POSTA SUL RACCOLGITORE

Per evitare errori quando ordinate pezzi di ricambio, usate le etichette in calce che servono ad identificare i cataloghi sul retro del raccoglitore. L'etichetta indica il numero di matricola delle macchine prese in considerazione nel catalogo.


1. Rimuovete questa pagina dal raccoglitore.
2. Ritagliate l'etichetta posta a **SINISTRA** (1) e ponetela sul retro **DEL** raccoglitore.
3. Se trovate anche un'etichetta sulla **DESTRA** (2), ritagliatela e ponetela sul raccoglitore relativo alla **PRECEDENTE** edizione del catalogo.
4. Distruggete questo foglio.

ETIQUETAGE DU CATALOGUE

Afin d'éviter des erreurs lors de commandes de pièces de rechange, nous vous conseillons d'apposer les marquages ci-dessous à l'arrière du classeur, pour identifier les catalogues. Ce marquage indique les numéros de série pour lesquels le catalogue est adapté. Il convient de procéder de la façon suivante:

1. Retirez cette page du classeur.
2. Découpez l'étiquette de **GAUCHE** (1), et apposez-la à l'arrière de **CE** catalogue.
3. Si il y a une étiquette à **DROITE** (2), vous pourrez l'apposer sur le classeur de l'édition **PRECEDENTE** du catalogue.
4. Détruire cette feuille.

1.



CC122 SN 601X0102 -	2
Service kits	4
938542 Service kit, Deutz F2L 1011F 50 h From 60111643	6
938539 Service kit, Isuzu 50 h	8
938543 Service kit, Deutz F2L 1011F 500 h From 60111643	10
938540 Service kit, Isuzu 500 h	12
938544 Service kit, Deutz F2L 1011F 1000 h From 60114543	14
938541 Service kit, Isuzu 1000 h From 60124658	16
Repair kits	18
938908 Eccentric shaft kit	20
938892 Drum rotation kit	22
938914 Scraper kit CC122/132 - (12 mm)	24
938885 Shock absorber kit, drum	26
Frame CC122	28
Frames CC122	30
Scrapers, standard drums CC122	32
Scrapers, spring loaded, drum front/rear Up to 601X6576	34
Scrapers, spring loaded, front drum From 601X6577	36
Scrapers, spring loaded, rear drum From 601X6577	38
Steering hitch	40
Structure DEUTZ, F2L Up to 60113599	42
Structure DEUTZ, F2L From 60113600	46
Structure ISUZU	50
Sprinkler system Up to 60111642	54
Sprinkler system From 601X1643 Up to 601X5580	58
Sprinkler system Front tank From 601X5581	62
Sprinkler, front/rear From 601X5581	64
923690 Water pump	66
903987 Sprinkling pump	68
Drum CC122	70
Drum	72
Engine CC122	74
Engine DEUTZ F2L 1011 Up to 60111642	76
Engine DEUTZ F2L 1011 F From 60111643	78
Engine ISUZU	82
Cooling system ISUZU	84
Intake system DEUTZ Up to 60114542	86
Intake system DEUTZ From 60114543	88
Intake system ISUZU Up to 60124657	90
Intake system ISUZU From 60124658	92
Fuel system DEUTZ	94
Fuel system ISUZU	96
Exhaust system DEUTZ Up to 60111906	98
Exhaust system DEUTZ From 60111907	100
Exhaust system ISUZU Up to 60125279	102
Exhaust system ISUZU From 60125280	104
Hydraulic system CC122	106
Hydraulic diagram	108
Propulsion system DEUTZ Up to 60110342	110

	Propulsion system DEUTZ From 60110343 Up to 60111898	112
	Propulsion system DEUTZ From 60111902 Up to 60111909	112
	Propulsion system DEUTZ From 60111912 Up to 60111912	112
	Propulsion system DEUTZ From 60111914 Up to 60111914	112
	Propulsion system DEUTZ From 60111899 Up to 60111901	114
	Propulsion system DEUTZ From 60111910 Up to 60111911	114
	Propulsion system DEUTZ From 60111913 Up to 60111913	114
	Propulsion system DEUTZ From 60111915 Up to 60113599	114
	Propulsion system ISUZU Up to 60123599	118
	Propulsion system DEUTZ / ISUZU From 601X3600	122
358225	Hydraulic pump, propulsion Up to 60110342	126
358470	Hydraulic pump, propulsion From 60110343 Up to 60113599	130
	Control unit, hydraulic pump From 60110343 Up to 60113599	134
357008	Hydraulic pump, propulsion Up to 60123599	136
372352	Hydraulic pump, propulsion From 601X3600	140
	Rotating group, valves, charge pump. From 601X3600	142
	Control unit, cpl From 601X3600	144
357023	Hydraulic motor, propulsion, drum Up to 601X1898	146
357023	Hydraulic motor, propulsion, drum From 601X1902 Up to 601X1909	146
357023	Hydraulic motor, propulsion, drum From 601X1912 Up to 601X1912	146
357023	Hydraulic motor, propulsion, drum From 601X1914 Up to 601X1914	146
371542	Hydraulic motor, propulsion, drum From 601X1899 Up to 601X1901	150
371542	Hydraulic motor, propulsion, drum From 601X1910 Up to 601X1911	150
371542	Hydraulic motor, propulsion, drum From 601X1913 Up to 601X1913	150
371542	Hydraulic motor, propulsion, drum From 601X1915 Up to 601X4046	150
375631	Hydraulic motor, propulsion, drum From 6019XXXX	152
375631	Hydraulic motor, propulsion, drum From 601X4047	152
380736	Junction block From 601X4872	154
	Vibration system DEUTZ Up to 60111642	156
	Vibration system DEUTZ From 60111643 Up to 60113599	160
	Vibration system DEUTZ From 601X3600	164
	Vibration system ISUZU Up to 60122599	168
	Vibration system ISUZU From 60122600 Up to 60123599	172
	Vibration system ISUZU From 601X3600	176
357009	Hydraulic pump, vibration DEUTZ Up to 60111642	180
359524	Hydraulic pump, vibration DEUTZ From 60111643	182
370172	Hydraulic pump, vibration ISUZU Up to 601X4277	184
375649	Hydraulic pump, vibration ISUZU From 601X4278	186
370173	Vibration valve ISUZU	188
	Steering system Up to 601X3599	190
	Steering system From 601X3600	192
902099	Steering valve	194
357014	Steering cylinder Up to 601X3466	196
374603	Steering cylinder From 601X3467	198
	Brake system DEUTZ Up to 60110342	200
	Brake system DEUTZ From 60110343 Up to 60113599	202
	Brake system ISUZU Up to 60123599	204
	Brake system DEUTZ / ISUZU From 601X3600	206
	Electrical equipment CC122	208
	Electrical equipment DEUTZ Up to 60111175	210
	Electrical equipment DEUTZ From 60111176 Up to 60113599	212
	Electrical equipment DEUTZ From 60113600	214
	Electrical equipment ISUZU Up to 60123599	218
	Electrical equipment ISUZU From 601X3600	222
	Electrical equipment ISUZU From 60124658 Up to 60125890	226
	Electrical equipment ISUZU From 60125891	230
	Control panel Up to 601X2184	234

Control panel From 601X2190 Up to 601X2208	234
Control panel From 601X2185 Up to 601X2189	238
Control panel From 601X2209 Up to 601X3599	238
Control panel DEUTZ From 60113600	242
Control panel ISUZU From 601X3600	246
Electrical battery switch DEUTZ From 60115963	250
Sprinkler timer	252
Driving & side direction lights Up to 601X3599	254
Driving & side direction lights From 601X3600	258
Working lights	262
Licence plate light, parking lights	264
Rotating beacon	266
Drivers platform CC122	268
Drivers platform Up to 601X3599	270
Drivers platform From 601X3600	274
Control panel From 601X3600 Up to 601X6577	276
Control panel From 601X6578	278
Arm rests, seat belt, laterally adjusting Up to 601X3599	280
Arm rests, seat belt, laterally adjusting From 601X3600	282
Comfort drivers seat, laterally adjusting and seat belt Up to 601X5732	284
Comfort drivers seat, laterally adjusting and seat belt	286
Bench	288
Engine and forward/reverse controls DEUTZ Up to 60111740	290
Engine and forward/reverse controls DEUTZ From 60111741 Up to 60113599	292
Engine and forward/reverse controls DEUTZ From 60113600	294
Engine and forward/reverse controls ISUZU Up to 60123599	296
Engine and forward/reverse controls ISUZU From 60123600	298
F/r controls dual, control panel, mounted	300
F/r control dual left side, platform mounted	302
Rops and fops	304
Decals CC122	306
Plates and decals, ce-marking approved From 601X1175	308
Standard equipment CC122	312
Standard equipment	314
Optional equipment CC122	316
Cab, exterior	318
Cab, interior	324
Cab, heater	326
Canopy	328
SMV sign	330
Tool equipment	332
Noise suppression DEUTZ , 78 dB	334
Noise suppression DEUTZ , 73 dB	336
Noise suppression ISUZU	338
Back-up alarm	340
Rear mirror	342
Brake release, propulsion motor	344
Cassette receiver	346
Shut-off valve, propulsion Up to 601X3599	348
Towing valve From 601X3600	350
Flow divider Up to 601X3599	352
Flow divider From 601X3600	354
Vibration shut-off, electr./man Up to 601X3599	356

TABLE OF CONTENTS**Page**



	Vibration shut-off, front drum DEUTZ From 60113600	358
	Vibration shut-off, front drum ISUZU From 601X3600	360
	Vibration shut-off, rear drum DEUTZ From 60113600	362
	Vibration shut-off, rear drum ISUZU	364
	Automatic vibration control	366
	Service brake	368
	Driving, restriction	370
	Bio-hydraulic oil lock	372
	High torque drum drive " Long"	374
372118	Hydraulic motor high torque	376
	High torque drum drive " Short"	378
380594	Hydraulic motor, propulsion, drum	380
	Brake release, propulsion motor	382



Ref. No.	Part No.	Rem.	Qty	Description	Code
				Service kits (Page 4)	
				Repair kits (Page 18)	
10				Frame CC122 (Page 28)	
20				Drum CC122 (Page 70)	
30				Engine CC122 (Page 74)	
50				Hydraulic system CC122 (Page 106)	
60				Electrical equipment CC122 (Page 208)	
70				Drivers platform CC122 (Page 268)	
80				Decals CC122 (Page 306)	
90				Standard equipment CC122 (Page 312)	
91				Optional equipment CC122 (Page 316)	



Service kits

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	938542			Service kit, Deutz F2L 1011F 50 h From 60111643 (Page 6)	
	938539			Service kit, Isuzu 50 h (Page 8)	
2	938543			Service kit, Deutz F2L 1011F 500 h From 60111643 (Page 10)	
	938540			Service kit, Isuzu 500 h (Page 12)	
3	938544			Service kit, Deutz F2L 1011F 1000 h From 60114543 (Page 14)	
	938541			Service kit, Isuzu 1000 h From 60124658 (Page 16)	

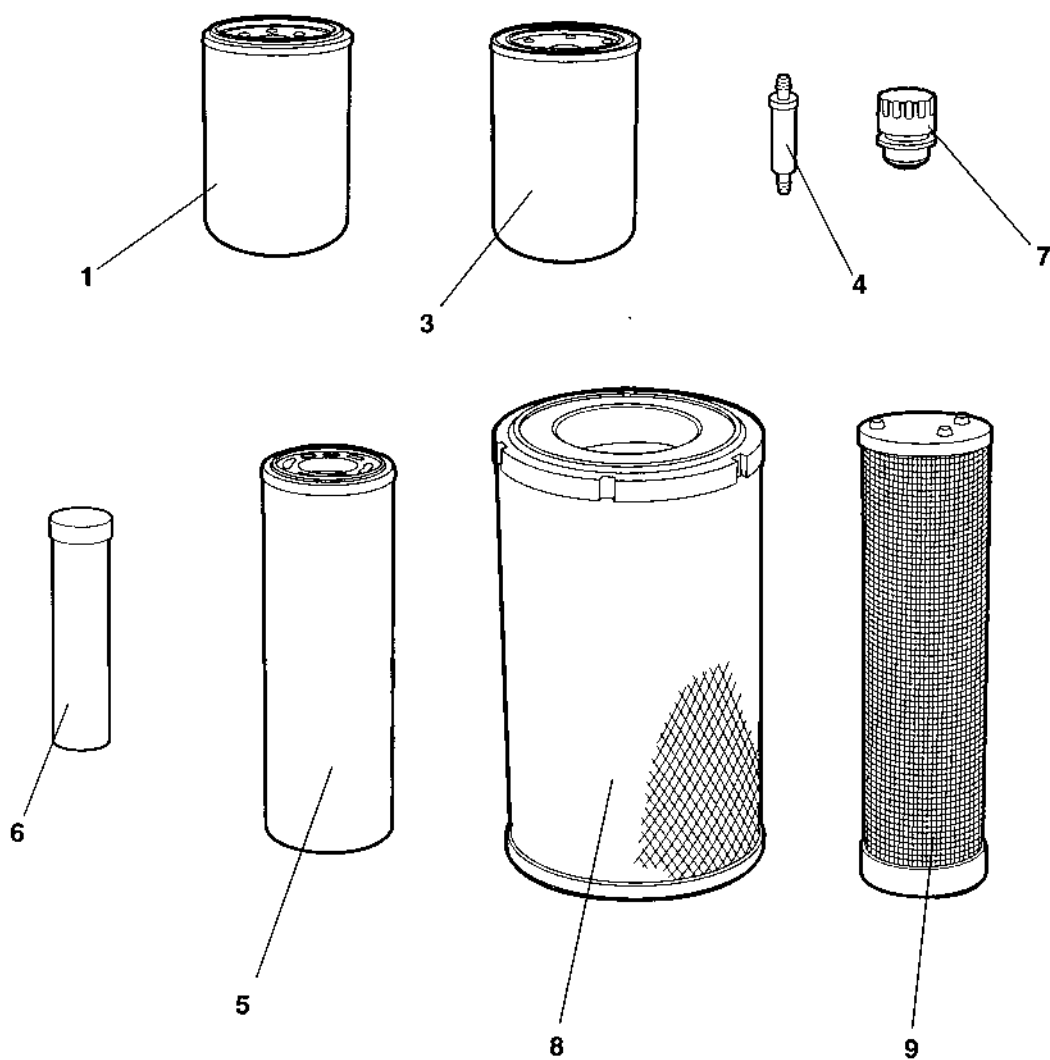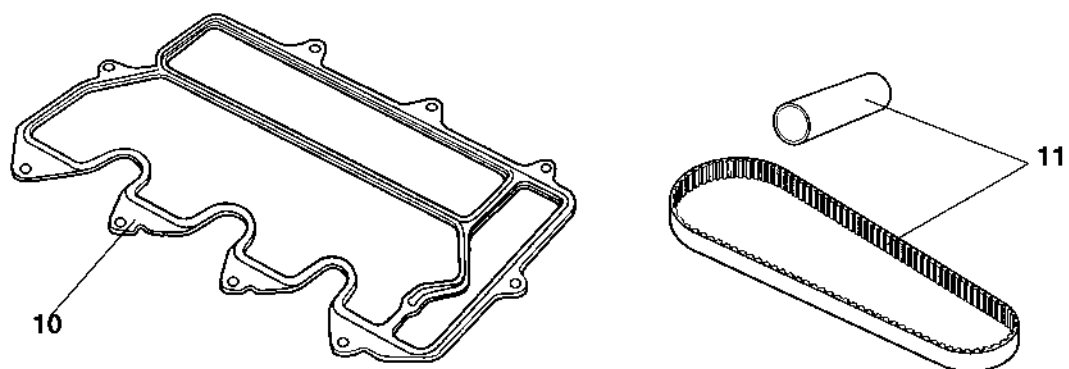



938542 Service kit, Deutz F2L 1011F 50 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	925678		1	Oil filter	A
3	903938		1	Fuel filter	A
4	929322		1	Fuel strainer	A
5	903247		1	Filter element	A
6	938534		1	Lube grease	

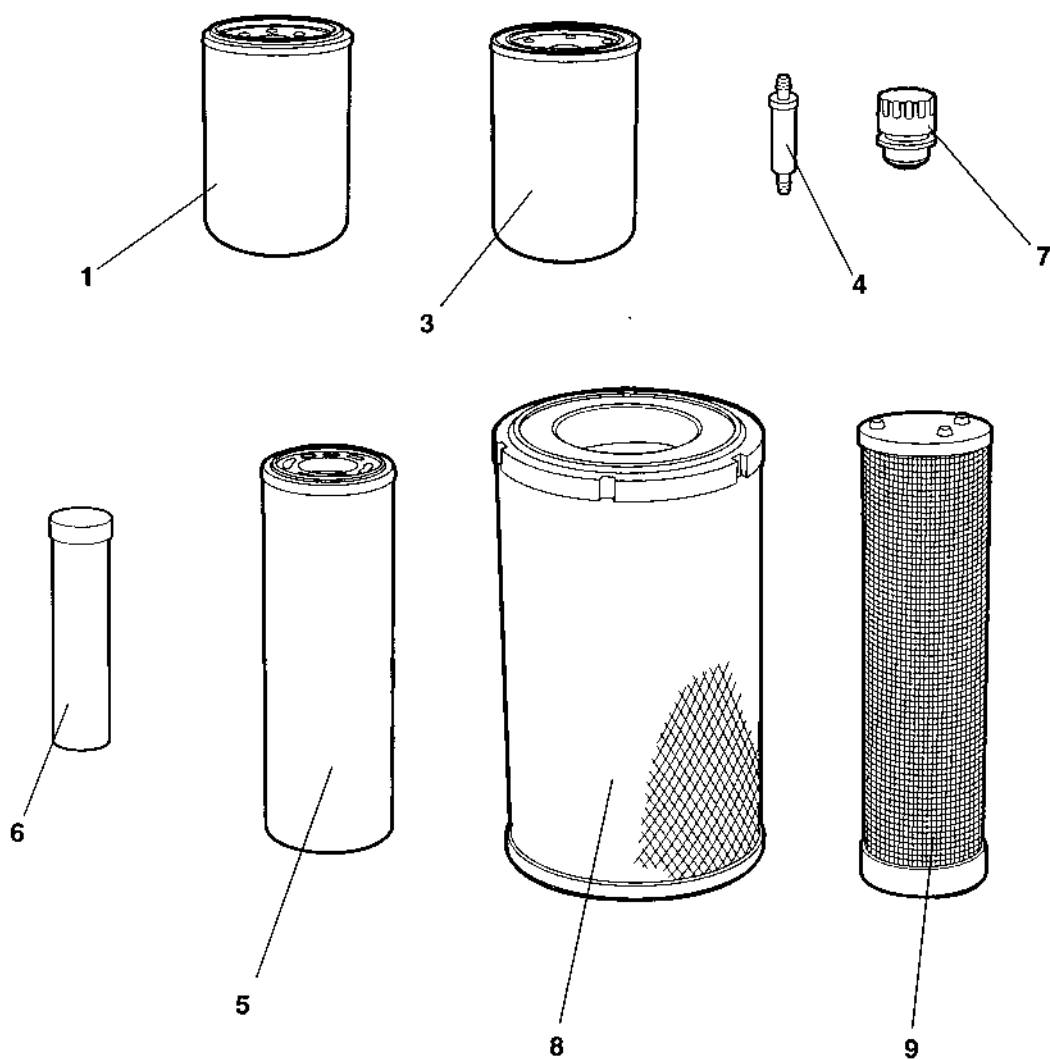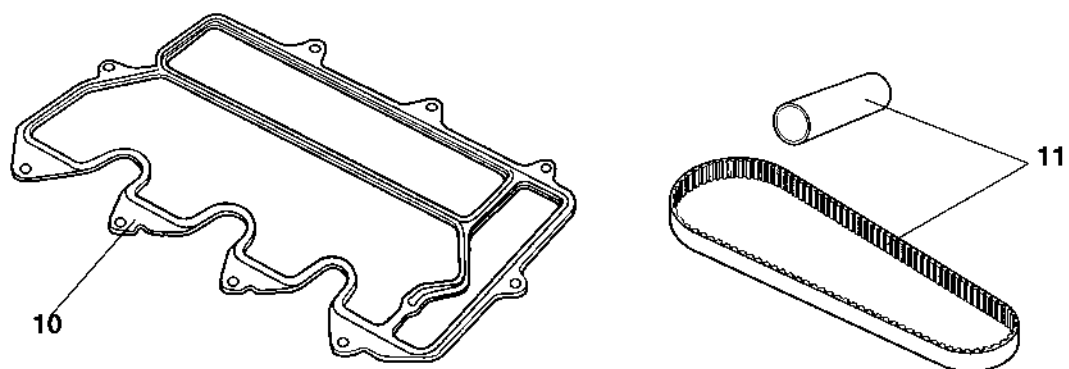




938539 Service kit, Isuzu 50 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	908404		1	Oil filter	A
3	908405		1	Fuel filter	A
5	903247		1	Filter element	A
6	938534		1	Lube grease	

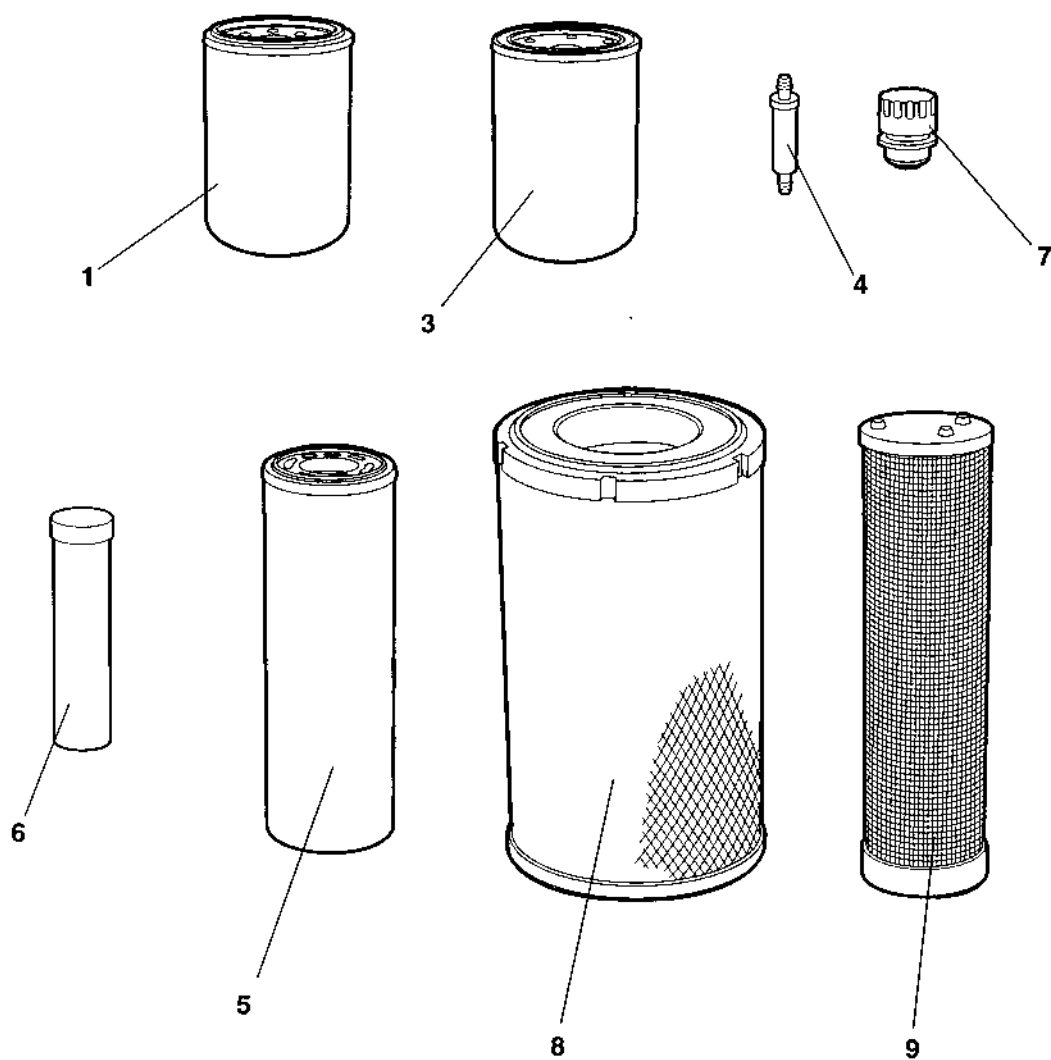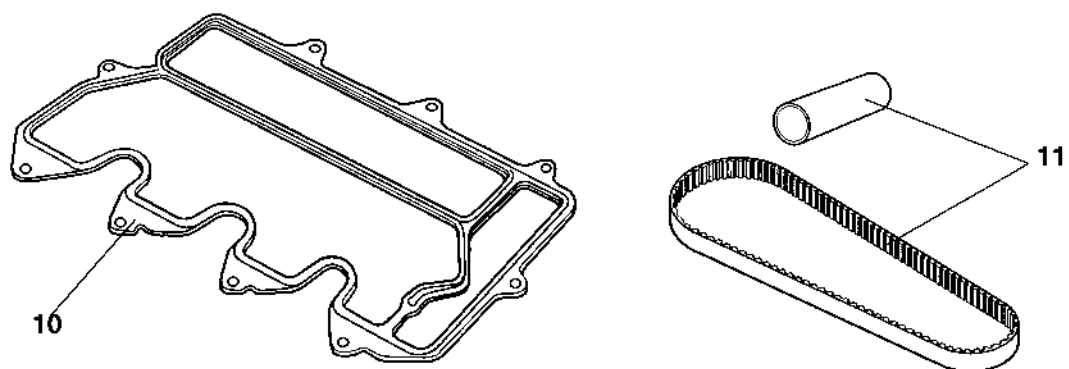


938543 Service kit, Deutz F2L 1011F 500 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	925678		1	Oil filter	A
6	938534		1	Lube grease	

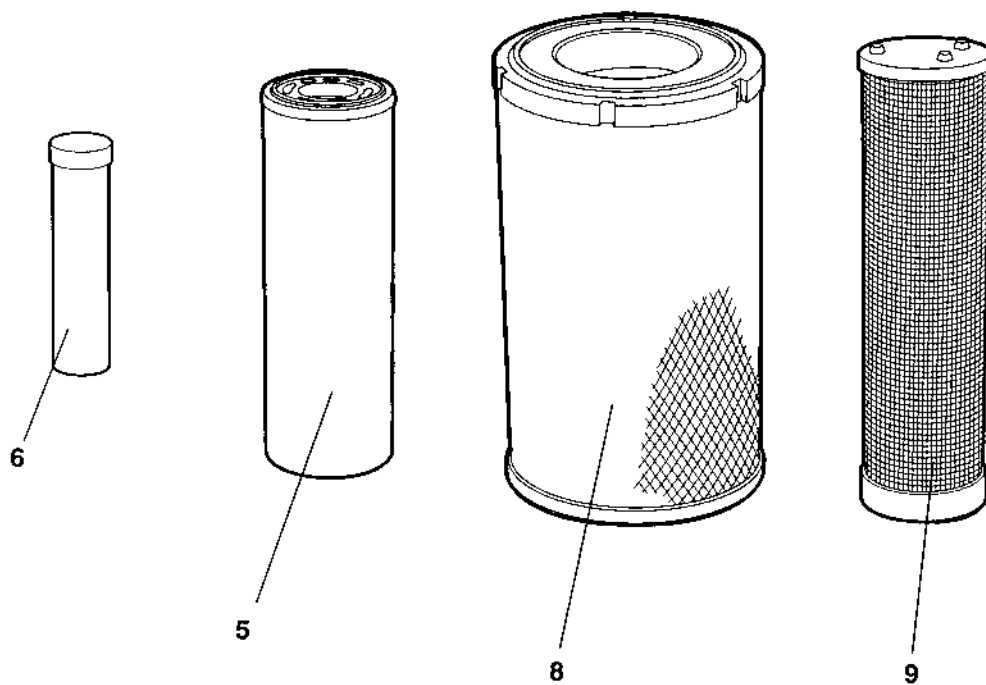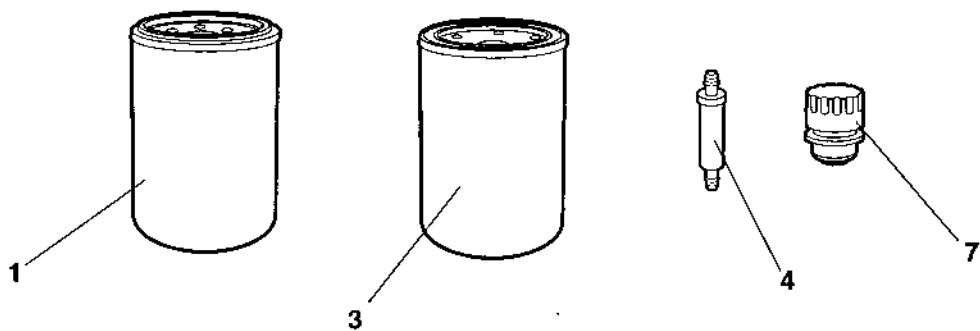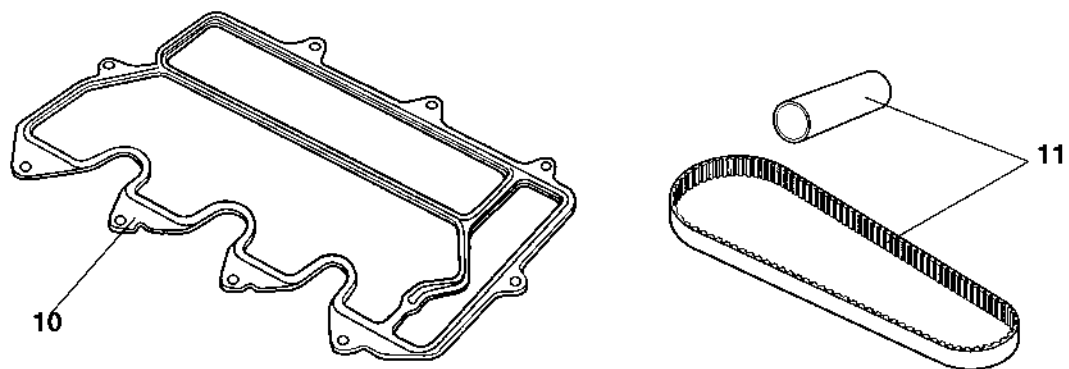



938540 Service kit, Isuzu 500 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	908404		1	Oil filter	A
3	908405		1	Fuel filter	A
6	938534		1	Lube grease	

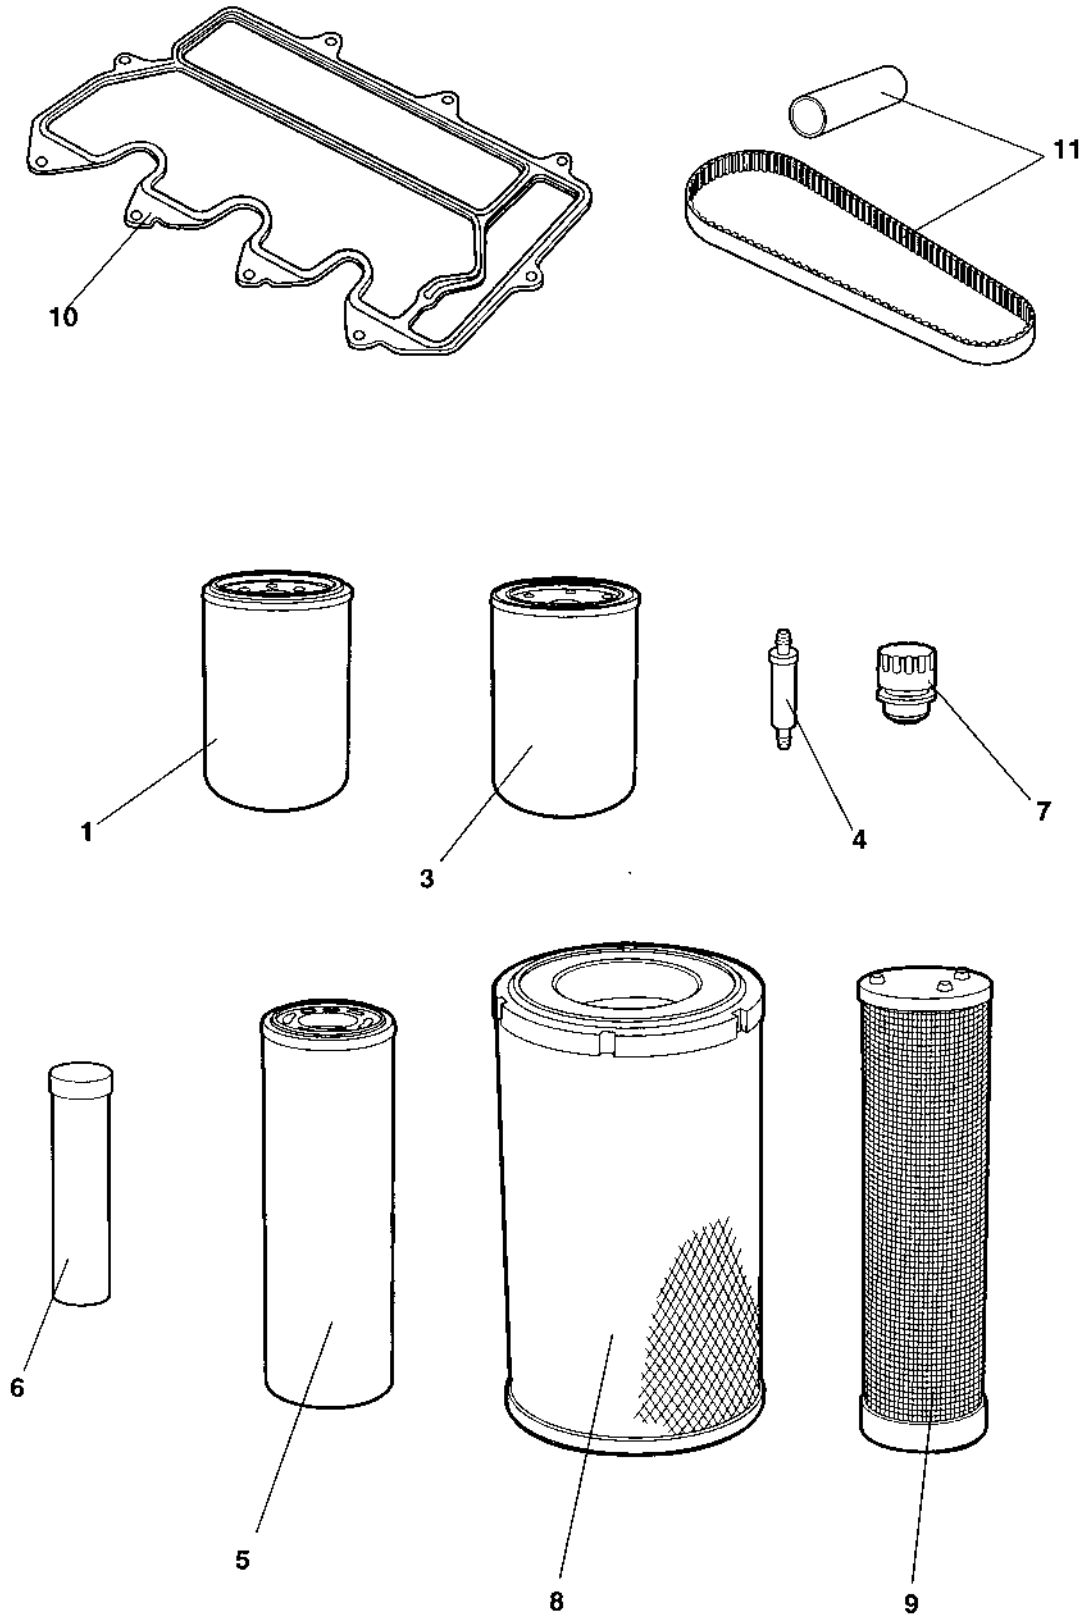

938544 Service kit, Deutz F2L 1011F 1000 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	925678		1	Oil filter	A
3	903938		1	Fuel filter	A
4	929322		1	Fuel strainer	A
5	903247		1	Filter element	A
6	938534		1	Lube grease	
7	357138		1	Ventilating filter	B
8	380295		1	Main filter	A
9	380294		1	Safety filter	A
10	938584		1	Valve cover gasket	

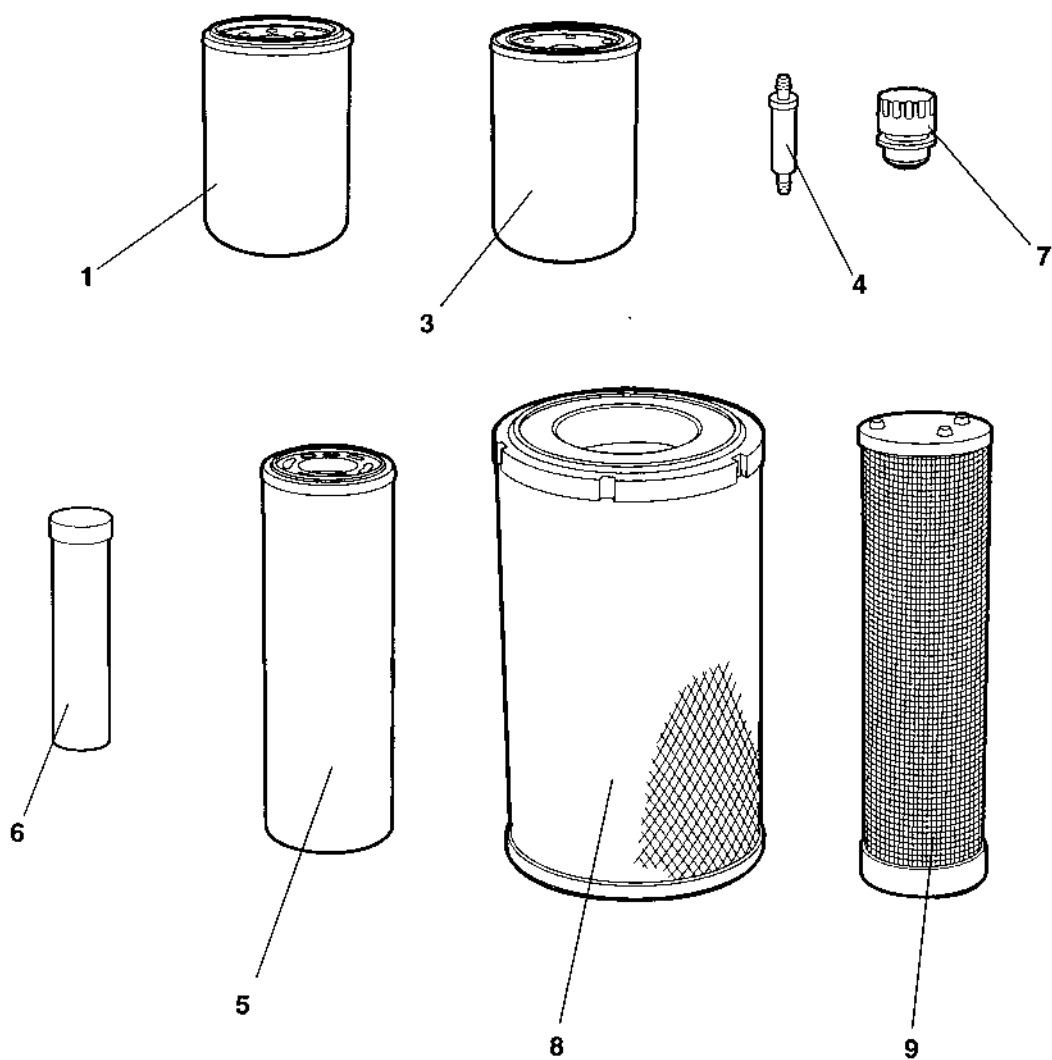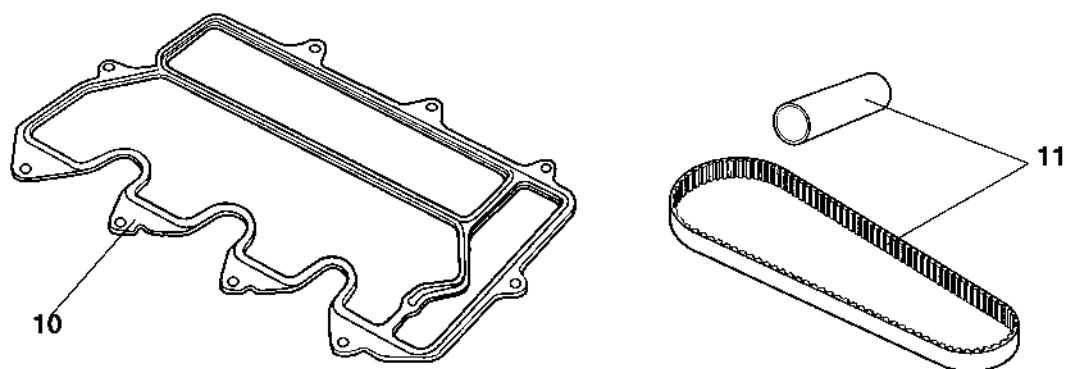


938541 Service kit, Isuzu 1000 h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	908404		1	Oil filter	A
3	908405		1	Fuel filter	A
5	903247		1	Filter element	A
6	938534		1	Lube grease	
7	357138		1	Ventilating filter	B
8	380295		1	Main filter	A
9	380294		1	Safety filter	A
10	938581		1	Valve cover gasket	


Repair kits

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	938908		2	Eccentric shaft kit (Page 20)	
2	938892		2	Drum rotation kit (Page 22)	
3	938914			Scraper kit CC122/132 - (12 mm) (Page 24)	
4	938885		2	Shock absorber kit, drum (Page 26)	

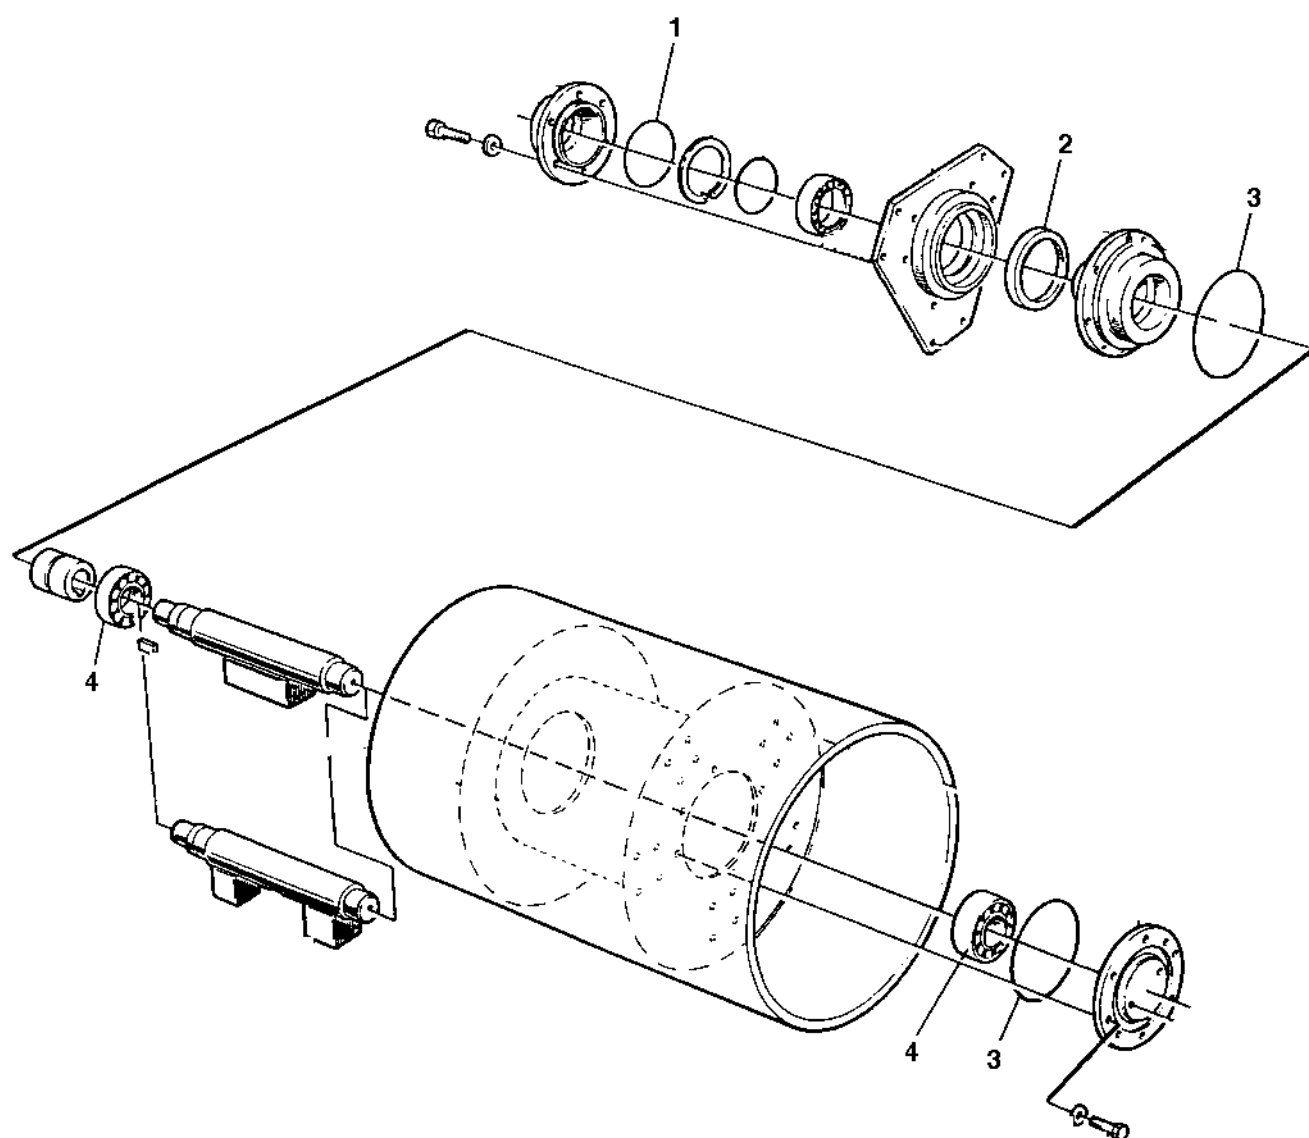

938908 Eccentric shaft kit

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	160132		1	O-ring	D
2	163049		1	Sealing	D
3	923951		2	O-ring	D
4	904258		2	Spherical roller bearing	D

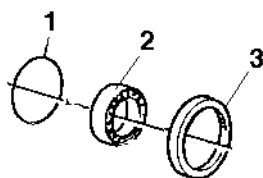


938892 Drum rotation kit

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	160132		1	O-ring	D
2	111018		1	Ball bearing	D
3	163049		1	Sealing	D


938914 Scraper kit CC122/132 - (12 mm)

SCRAPER

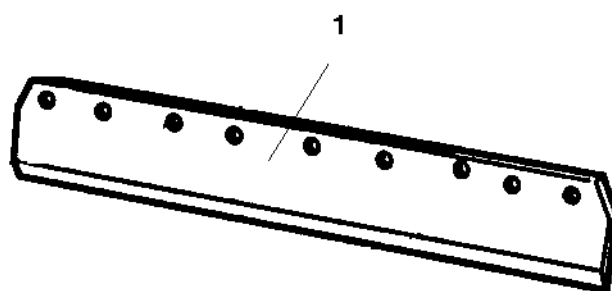

938914 Scraper kit CC122/132 - (12 mm)

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	385675		4	Scraper	

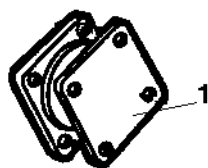


938885 Shock absorber kit, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	345215		8	Shock absorber	B

Frame CC122

Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Frames CC122 (Page 30)	
200				Scrapers, standard drums CC122 (Page 32)	
225				Scrapers, spring loaded, drum front/rear Up to 601X6576 (Page 34)	
250				Scrapers, spring loaded, front drum From 601X6577 (Page 36)	
275				Scrapers, spring loaded, rear drum From 601X6577 (Page 38)	
300				Steering hitch (Page 40)	
400				Structure DEUTZ, F2L Up to 60113599 (Page 42)	
410				Structure DEUTZ, F2L From 60113600 (Page 46)	
450				Structure ISUZU (Page 50)	
500				Sprinkler system Up to 60111642 (Page 54)	
510				Sprinkler system From 601X1643 Up to 601X5580 (Page 58)	
515				Sprinkler system Front tank From 601X5581 (Page 62)	
520				Sprinkler, front/rear From 601X5581 (Page 64)	
600	923690			Water pump Model STD (Page 66)	C
601	903987			Sprinkling pump Model OPTION (Page 68)	C

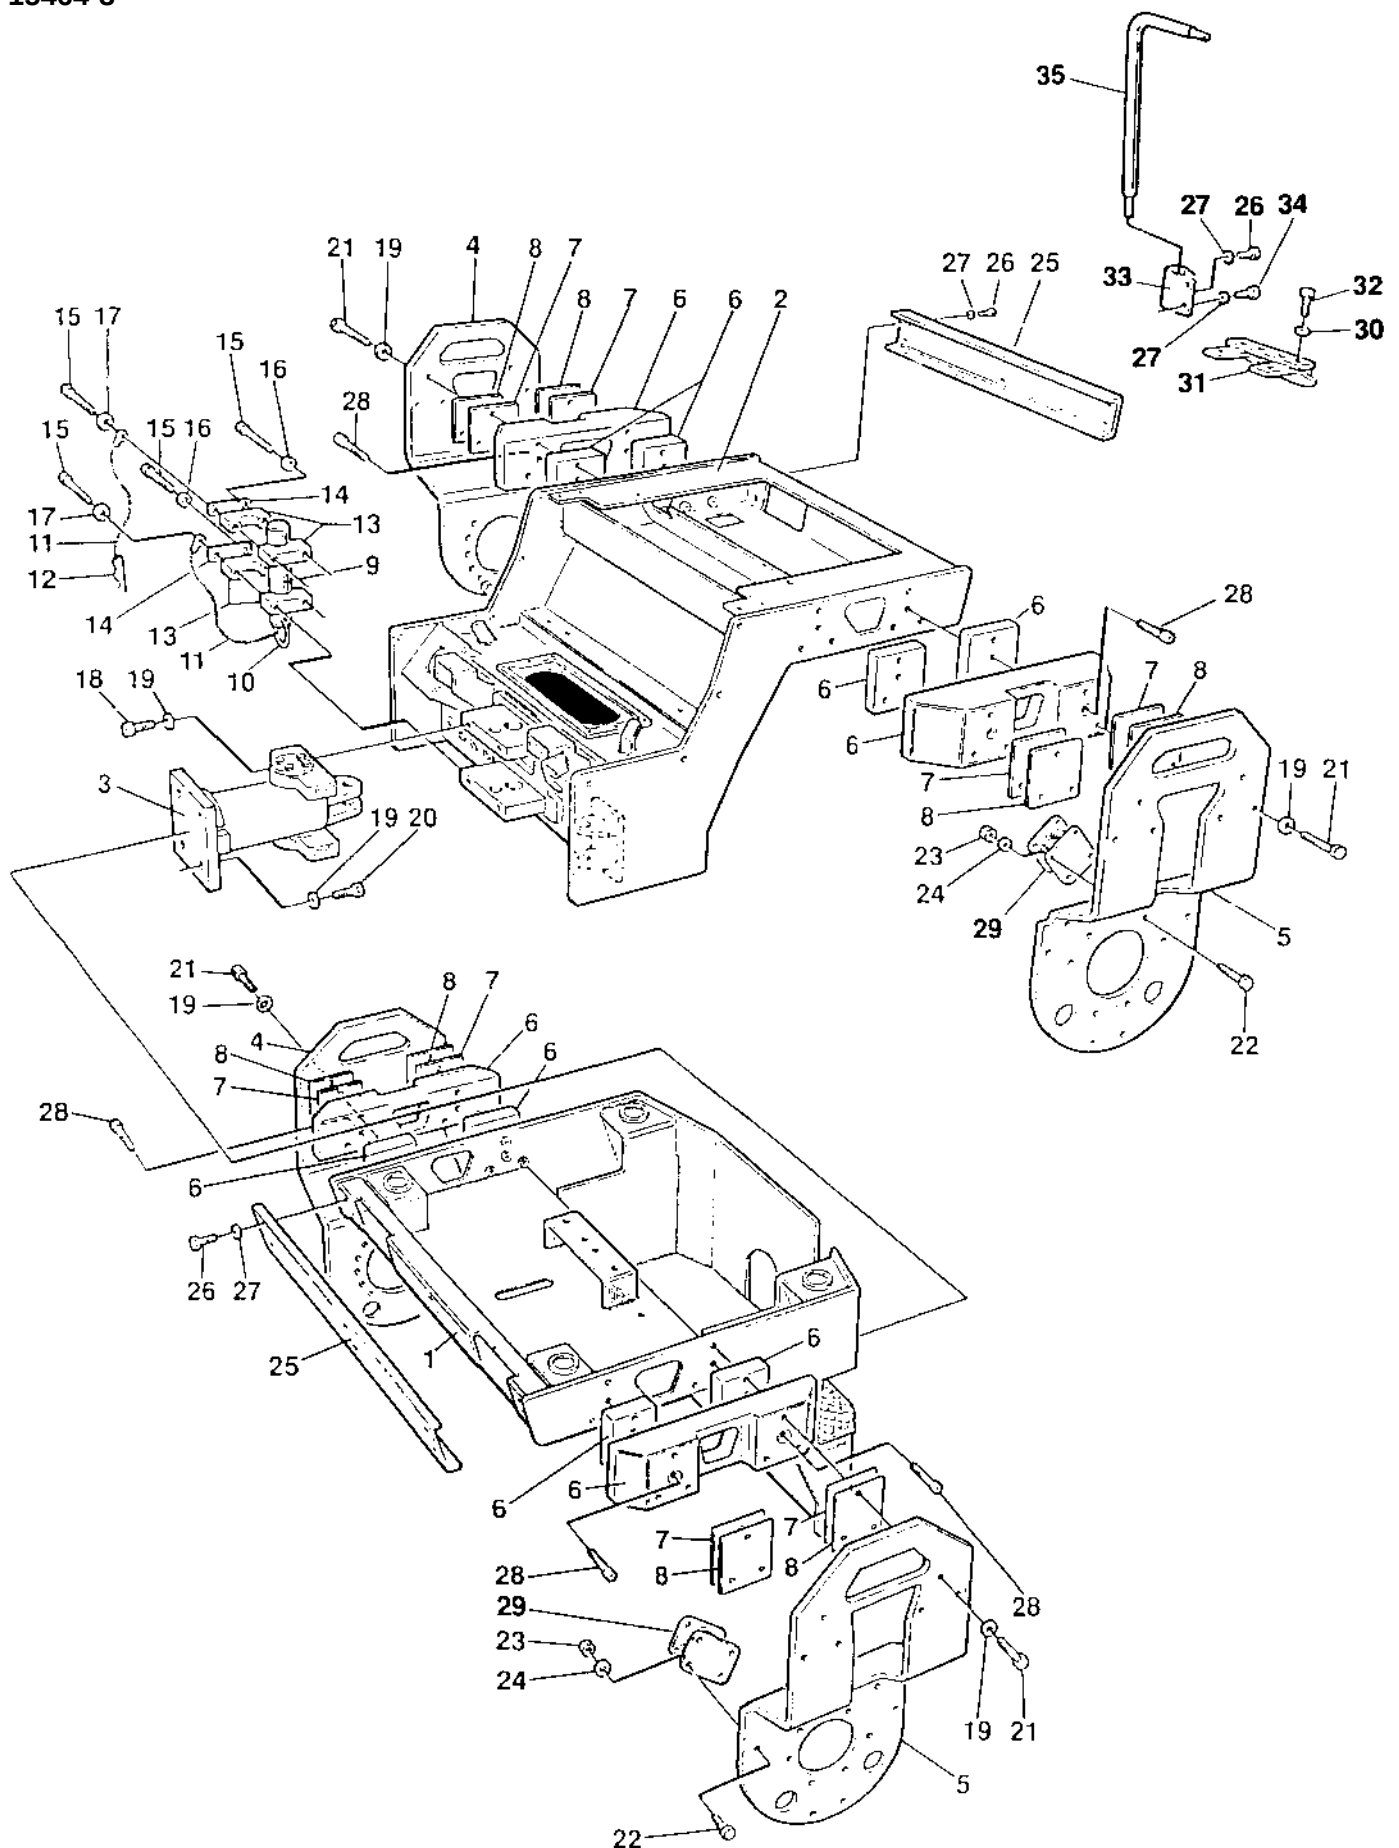

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357190		1	Frame, rear	
2	357120		1	Frame, front	
3			1	Steering hitch (Page 40)	
4	357235		2	Fork	
5	357236		2	Fork	
6	357216		4	Spacer block	
7	357222		N	Shim T=1 mm	
8	357221		N	Shim T=3 mm	
9	357486		1	Shaft	
10	357488		1	Spring	
11	343775		2	Wire	
12	357483		1	Hair pin	
13	902171	A	2	Clamp	
14	902172		2	Cover plate	
15	500016		4	Screw M6-1,0x55 8,8	
16	600004		2	Washer	
17	615076		2	Washer 7,0x25x1,5	
18	902100		4	Screw	
19	904232		32	Washer 17x30x3	
20	927396		4	Screw	
21	923247		24	Screw	
22	500030		24	Screw M10-1,5x35H 8,8	
23	586018		24	Lock nut M10	
24	904230		24	Washer 10,5x22x2	
25	357370	B	2	Cover	
	373628	C	2	Cover	
26	500053		12	Screw M8-1,25x20 8,8	
27	904229		12	Washer 8,4x16x1,5	
28	902101		8	Screw	
29			16	Shock absorber See group 20	
30	904231		6	Washer 13x24x2	
31	358743	D	1	Towing device	
32	947687	E	6	Screw M12-1,75x30 10,9	
33	358861	E	1	Mirror bracket	
34	500188	E	1	Screw M8-1,25x14 8,8	
35	373999	E	1	Rod	


A) 2 pcs

B) Old

C) New, reinforced

D) Option, fornt/rear


E) Option

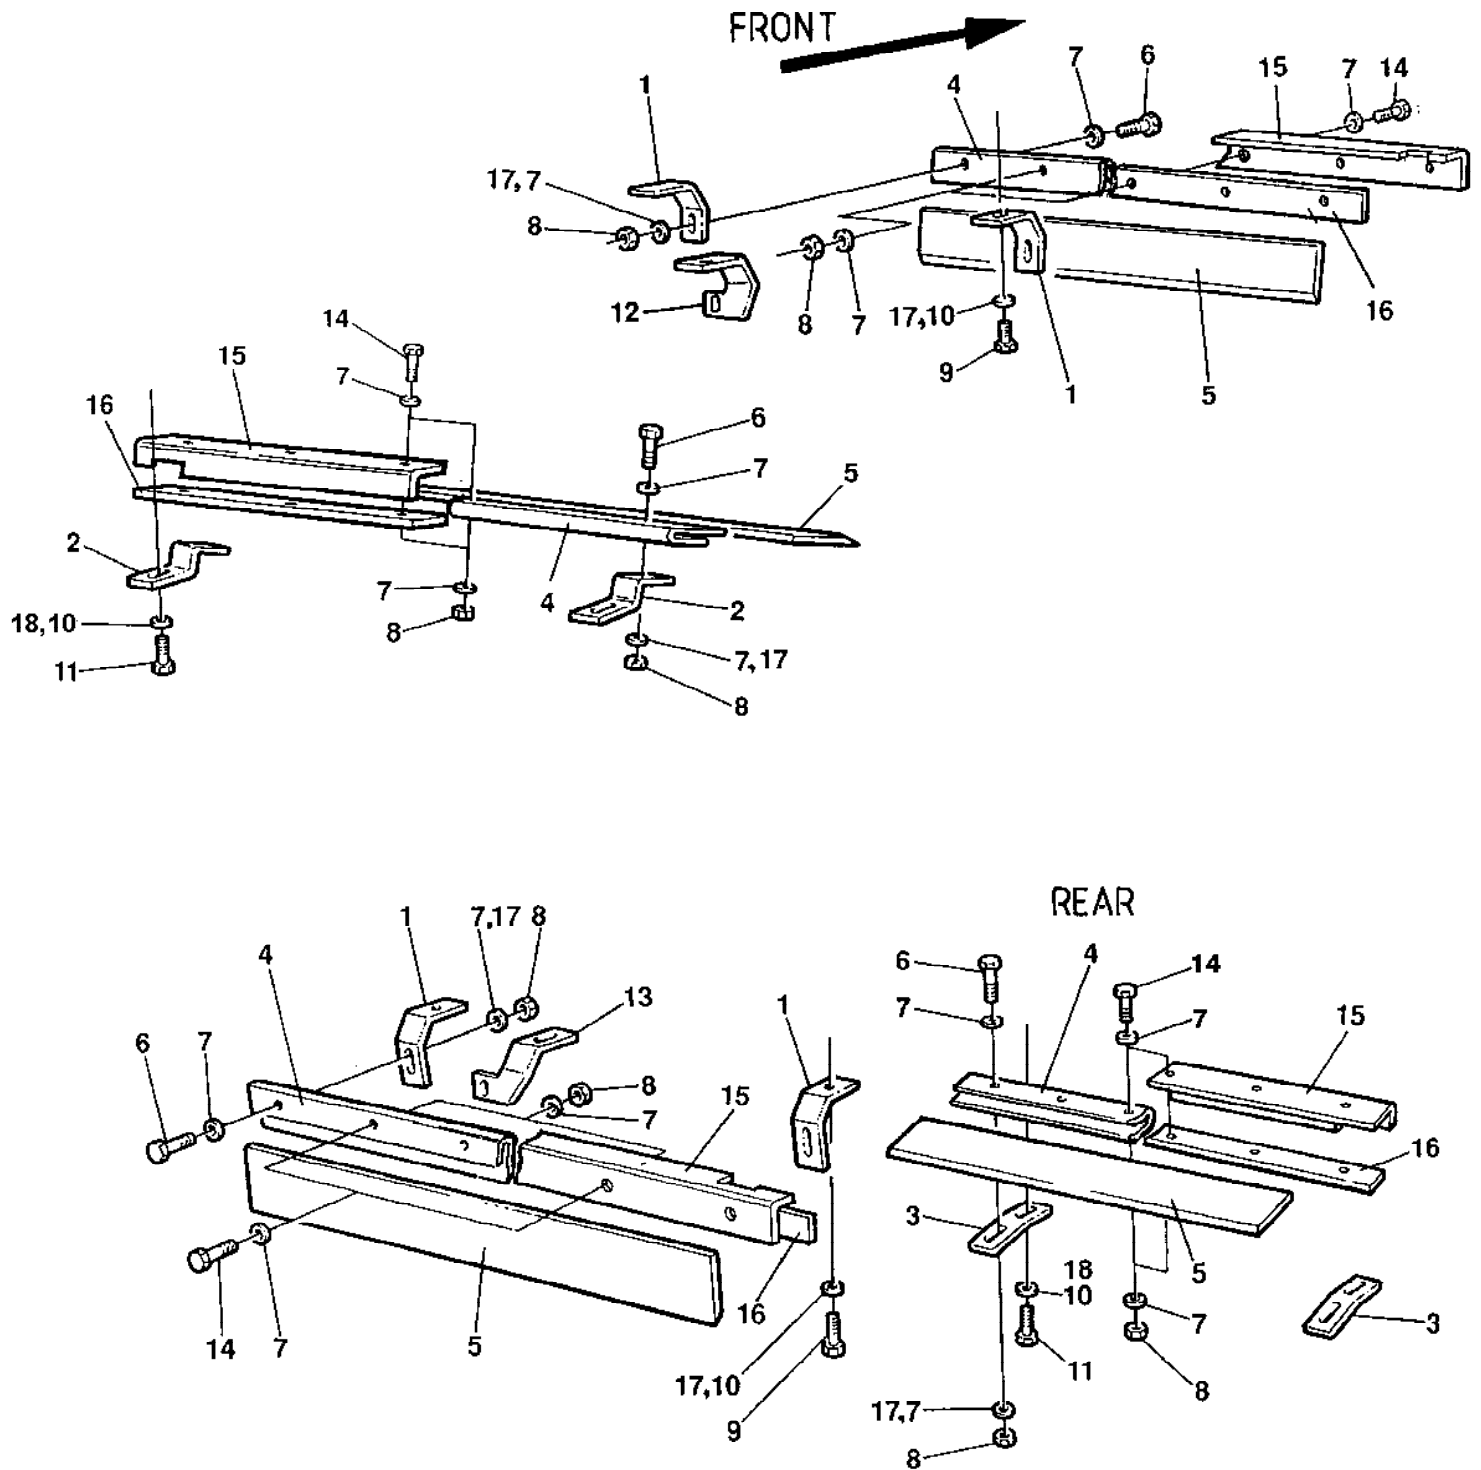

Scrapers, standard drums CC122

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358590		4	Scraper bracket Up to 601X2870	
	358590		4	Scraper bracket From 601X2872 Up to 601X2877	
	358590		4	Scraper bracket From 601X2880 Up to 601X2884	
	374018		4	Scraper bracket From 601X2871 Up to 601X2871	
	374018		4	Scraper bracket From 601X2878 Up to 601X2879	
	374018		4	Scraper bracket From 601X2885	
2	358588		2	Scraper bracket	
3	358589		2	Scraper bracket	
4	357309	1	4	Scraper bracket Up to 601X6123	
5	357306		4	Scraper Up to 601X6123	B
	385217		4	Scraper From 601X6124	B
6	500111		10	Screw M12x55 8,8 Up to 601X6123	
	500049		8	Screw M12-1,75x60 8.8 From 601X6124	
7	904703		40	Washer 13x24x4 Up to 601X6123	
	904231		32	Washer 13x24x2 From 601X6124	
8	586019		20	Lock nut M12	
9	500046		6	Screw M12x30H 8,8 FZB Up to 601X6123	
	500046		4	Screw M12x30H 8,8 FZB From 601X6124	
10	904703		10	Washer 13x24x4 Up to 601X6123	
11	500046		4	Screw M12x30H 8,8 FZB Up to 601X6123	
	500056		4	Screw M12-1,75x45 8,8 From 601X6124	
12	371670		1	Scraper bracket Up to 601X2736	
	373380		1	Scraper bracket From 601X2737 Up to 601X2870	
	373380		1	Scraper bracket From 601X2872 Up to 601X2877	
	373380		1	Scraper bracket From 601X2880 Up to 601X2884	
	374020		1	Scraper bracket From 601X2871 Up to 601X2871	
	374020		1	Scraper bracket From 601X2878 Up to 601X2879	
	374020		1	Scraper bracket From 601X2885 Up to 601X6123	
13	371709		1	Scraper bracket Up to 601X2736	
	373381		1	Scraper bracket From 601X2737 Up to 601X2870	
	373381		1	Scraper bracket From 601X2872 Up to 601X2877	
	373381		1	Scraper bracket From 601X2880 Up to 601X2884	
	374019		1	Scraper bracket From 601X2871 Up to 601X2871	
	374019		1	Scraper bracket From 601X2878 Up to 601X2879	
	374019		1	Scraper bracket From 601X2885 Up to 601X6123	
14	500056		10	Screw M12-1,75x45 8,8 Up to 601X6123	
	500056		12	Screw M12-1,75x45 8,8 From 601X6124	
15	384029		4	Scraper bracket From 601X6124	
16	384030		4	Scraper bracket From 601X6124	
17	904213		12	Washer 13x30x4 From 601X6124	
18	384493		4	Spacer sleeve From 601X6124	


1) Replaced as spare part by PN 384029 and 384030.

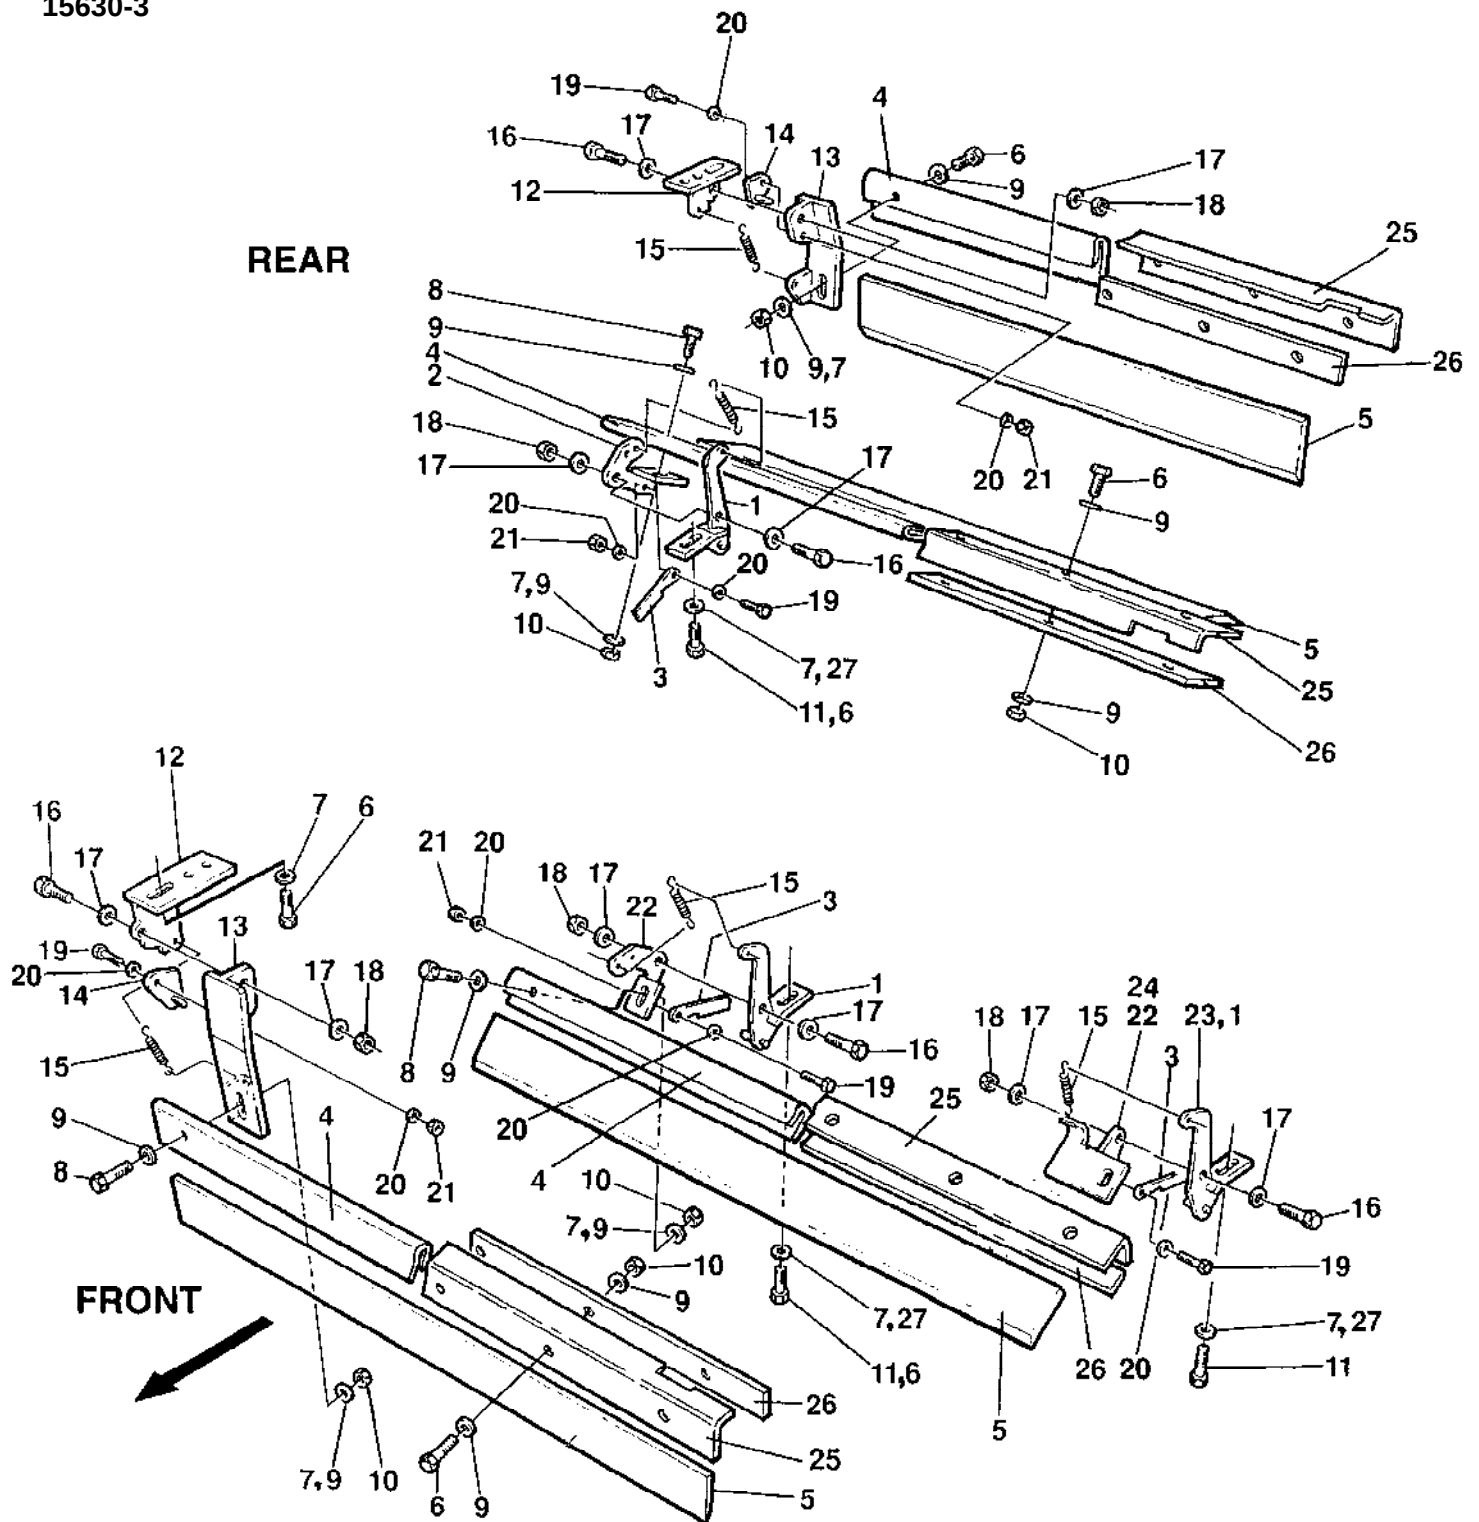

Scrapers, spring loaded, drum front/rear


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358848		3	Bracket Up to 601X6123	
	358848		4	Bracket From 601X6124	
2	358853		2	Scraper bracket	
3	358864		4	Locking lever	
4	357309	1	4	Scraper bracket Up to 601X6123	
5	357306		4	Scraper Up to 601X6123	B
	385217		4	Scraper From 601X6124	B
6	500056		12	Screw M12-1,75x45 8,8 Up to 601X6123	
	500056		16	Screw M12-1,75x45 8,8 From 601X6124	
7	904703		8	Washer 13x24x4 Up to 601X6123	
	904703		12	Washer 13x24x4 From 601X6124	
8	500111		8	Screw M12x55 8,8 Up to 601X6123	
	500049		8	Screw M12-1,75x60 8.8 From 601X6124	
9	904703		40	Washer 13x24x4 Up to 601X6123	
	904231		32	Washer 13x24x2 From 601X6124	
10	586019		20	Lock nut M12	
11	500046		8	Screw M12x30H 8,8 FZB Up to 601X6123	
	500046		4	Screw M12x30H 8,8 FZB From 601X6124	
12	358836		4	Scraper bracket	
13	358839		4	Scraper bracket	
14	358874		4	Stop	
15	358876		8	Spring	
16	380255		8	Screw	
17	904230		16	Washer 10,5x22x2	
18	586018		8	Lock nut M10	
19	500015		8	Screw M6-1x30 8,8	
20	904228		16	Washer 6,4x12x1,5	
21	586002		8	Lock nut M6	
22	358854		1	Scraper bracket Up to 601X6123	
	358854		2	Scraper bracket From 601X6124	
23	358871		1	Bracket Up to 601X6123	
24	358868		1	Scraper bracket Up to 601X6123	
25	384029		4	Scraper bracket From 601X6124	
26	384030		4	Scraper bracket From 601X6124	
27	384493		4	Spacer sleeve From 601X6124	

1) Replaced as spare part by PN 384029 and PN 384030.

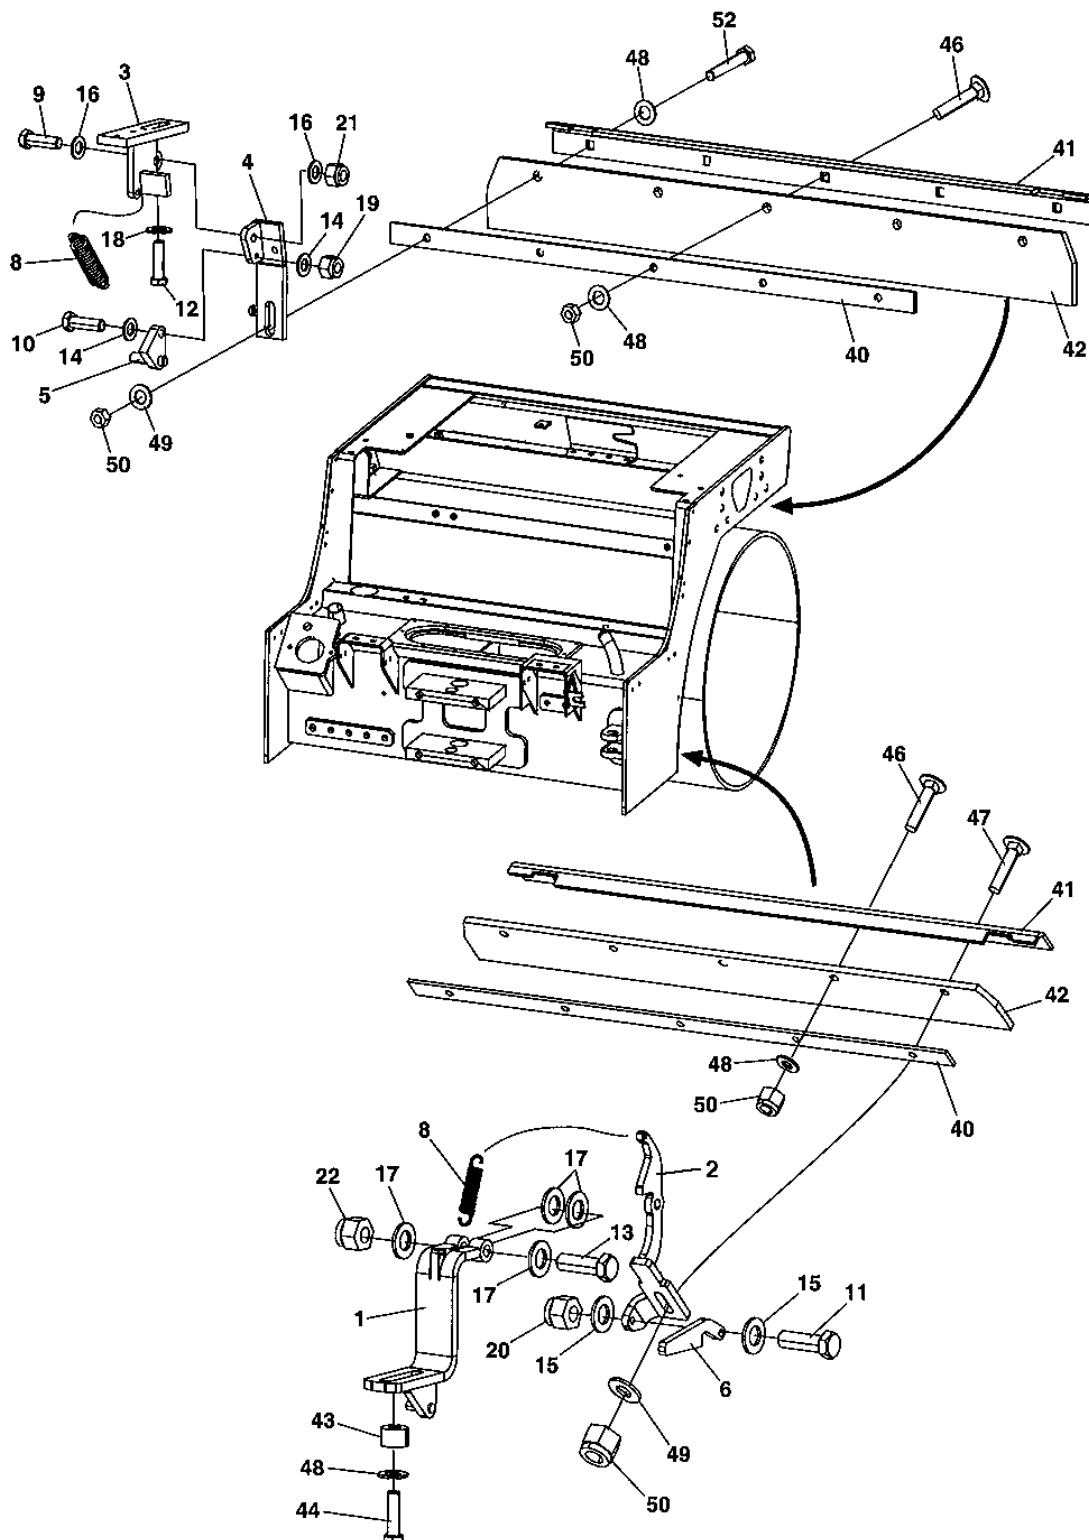


Scrapers, spring loaded, front drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	385626		2	Scraper bracket	
2	385627		2	Scraper bracket	
3	358836		2	Scraper bracket	
4	358839		2	Scraper bracket	
5	358874		2	Stop	
6	385613		2	Hook	
8	358876		4	Spring	
9	380255		2	Screw	
10	500015		2	Screw M6-1x30 8,8	
11	500047		2	Screw M8-1,25x35 8,8	
12	500046		2	Screw M12x30H 8,8 FZB	
13	500133		2	Screw M12x70	
14	904228		4	Washer 6,4x12x1,5	
15	904229		4	Washer 8,4x16x1,5	
16	904230		4	Washer 10,5x22x2	
17	904231		4	Washer 13x24x2	
18	904703		2	Washer 13x24x4	
19	586002		2	Lock nut M6	
20	791182		2	Lock nut M8	
21	586018		2	Lock nut M10	
22	586019		2	Lock nut M12	
40	385674		2	Scraper bracket	
41	385672		2	Scraper bracket	
42	385675		2	Scraper	
43	384493		2	Spacer sleeve	
44	500056		2	Screw M12-1,75x45 8,8	
46	904342		10	Screw	
47	904343		2	Screw	
48	904231		14	Washer 13x24x2	
49	904703		4	Washer 13x24x4	
50	586019		14	Lock nut M12	
52	500111		2	Screw M12x55 8,8	

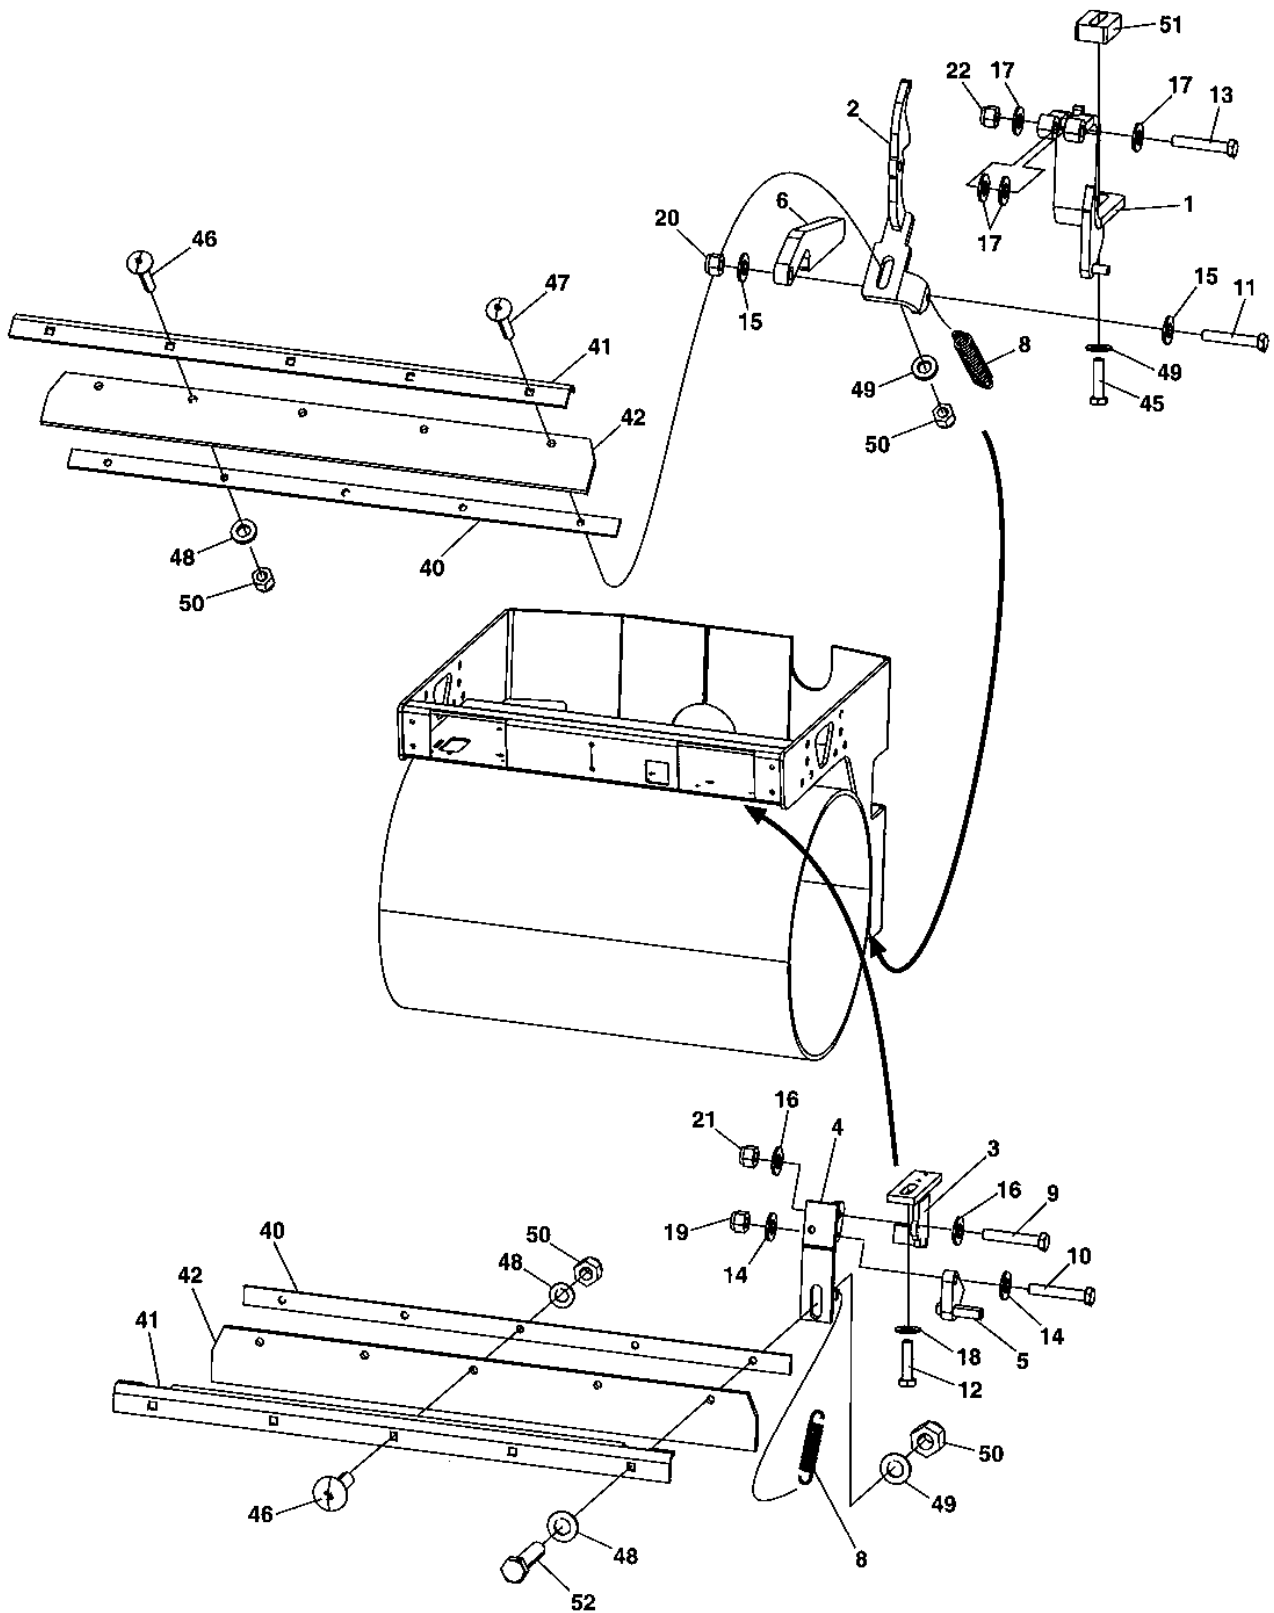


Scrapers, spring loaded, rear drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	385626		2	Scraper bracket	
2	385627		2	Scraper bracket	
3	358836		2	Scraper bracket	
4	358839		2	Scraper bracket	
5	358874		2	Stop	
6	385613		2	Hook	
8	358876		4	Spring	
9	380255		2	Screw	
10	500015		2	Screw M6-1x30 8,8	
11	500047		2	Screw M8-1,25x35 8,8	
12	500046		2	Screw M12x30H 8,8 FZB	
13	500133		2	Screw M12x70	
14	904228		4	Washer 6,4x12x1,5	
15	904229		4	Washer 8,4x16x1,5	
16	904230		4	Washer 10,5x22x2	
17	904231		4	Washer 13x24x2	
18	904703		2	Washer 13x24x4	
19	586002		2	Lock nut M6	
20	791182		2	Lock nut M8	
21	586018		2	Lock nut M10	
22	586019		2	Lock nut M12	
40	385674		2	Scraper bracket	
41	385672		2	Scraper bracket	
42	385675		2	Scraper	
45	500049		2	Screw M12-1,75x60 8.8	
46	904342		10	Screw	
47	904343		2	Screw	
48	904231		12	Washer 13x24x2	
49	904703		6	Washer 13x24x4	
50	586019		14	Lock nut M12	
51	385628		2	Spacer	
52	500111		2	Screw M12x55 8,8	

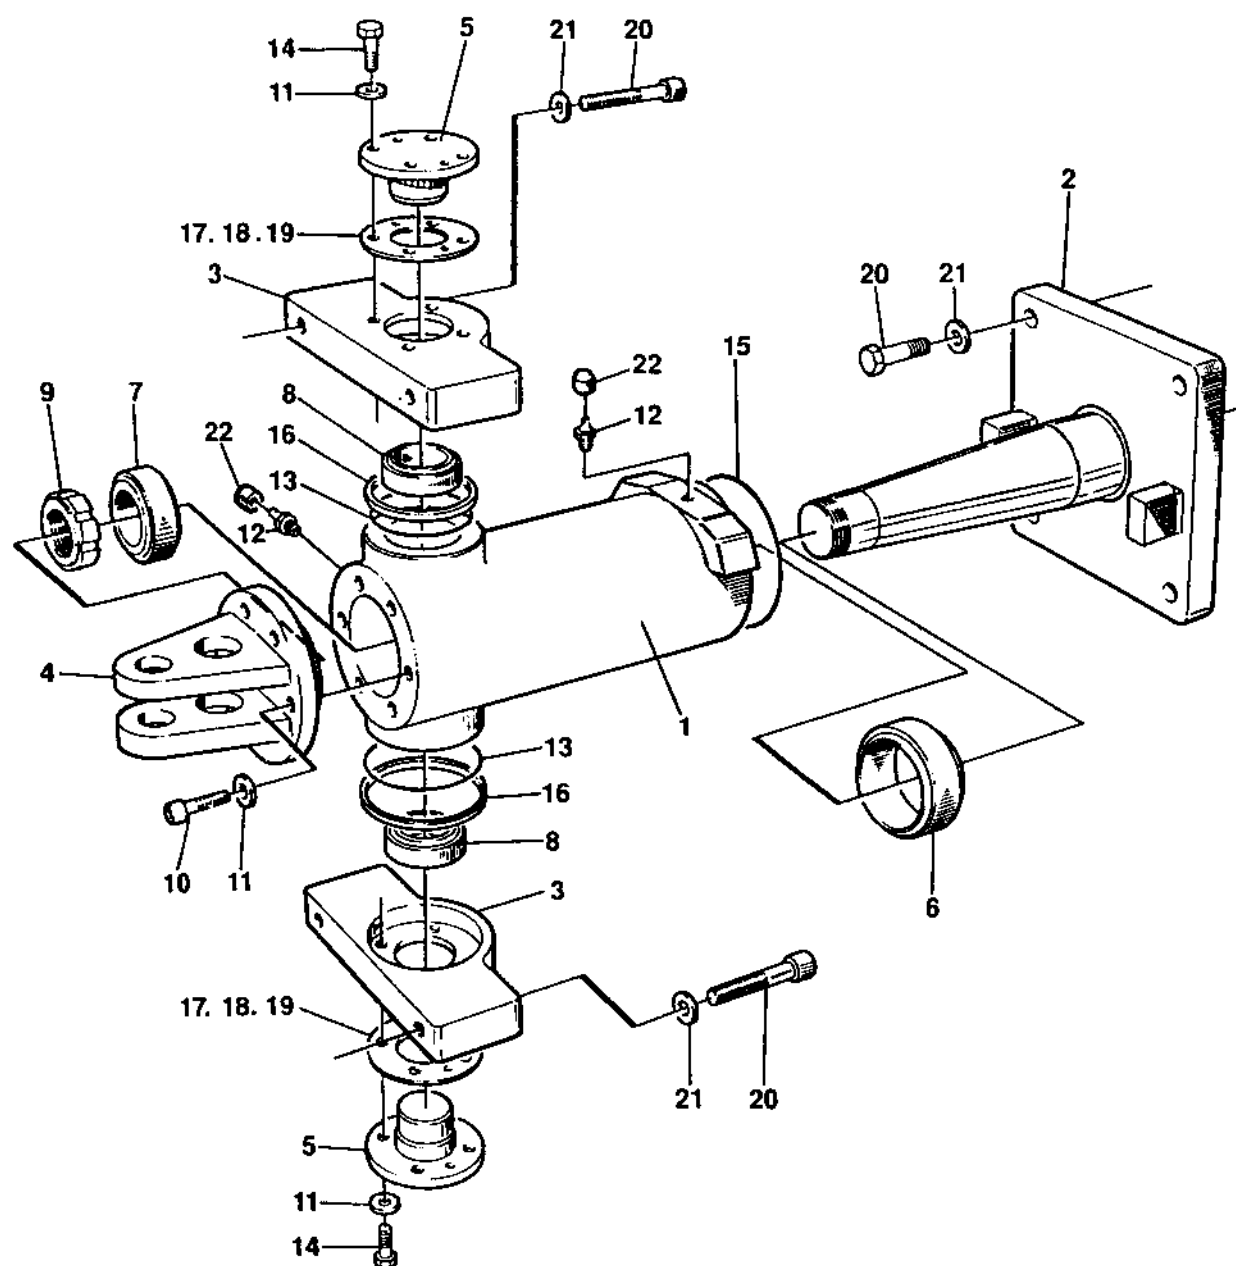


Steering hitch

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357025		1	Bearing housing Up to 60111131	
	358976		1	Bearing housing From 601X1132	
2	357026		1	Hitch shaft Up to 60111131	
	358978		1	Hitch shaft From 601X1132	
3	357031		2	Bracket	
4	357038		1	Bracket	
5	357039		2	Shaft	
6	902063		1	Bushing	D
7	902062		1	Bushing	D
8	902061		2	Bushing	D
9	902060		1	Lock nut	
10	902059		6	Screw	
11	600008		14	Washer	
12	926214		2	Grease fitting	D
13	160032		2	O-ring	D
14	500028		8	Screw M10-1,5x25 8,8	
15	160112		1	O-ring Up to 60111131	D
	892179		1	O-ring From 601X1132	D
16	357418		2	Sealing	D
17	347153		N	Shim T=0,2 mm	
18	347154		N	Shim T=0,4 mm	
19	347155		N	Shim T=0,8 mm	
20			8	Screw	
21			8	Washer	
22	902576		2	Cover	

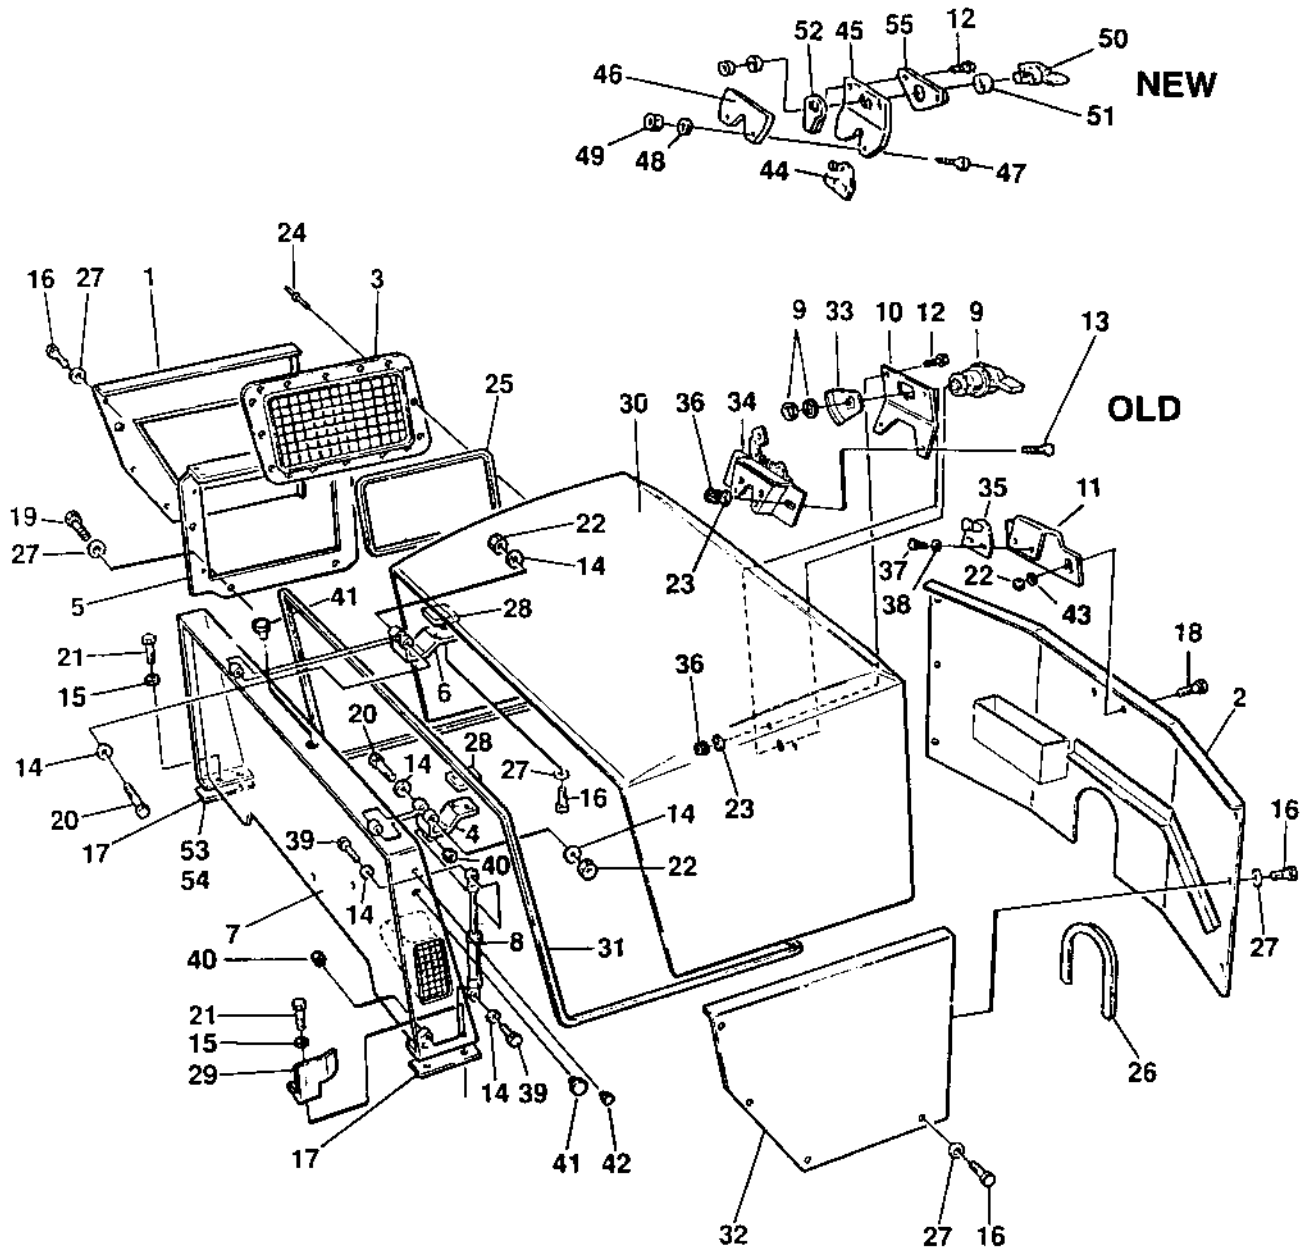


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358197	A	1	Cover	
2	357263		1	Cover	
3	357146		1	Grid	
4	357276		1	Hinge	
5	357298		1	Cooler frame	
6	357280		1	Hinge	
7	357248		1	Hood frame	
8	902256		1	Gas spring	D
9	902591		1	Lock, outer	D
	903064	B	1	Key Marked "624"	
10	358162		1	Bracket	
11	358160		1	Bracket	
12	900485		2	Screw	D
13	513012		2	Screw	
14	904229		7	Washer 8,4x16x1,5	
15	904557		4	Washer 10,5x22x4	
16	500053		18	Screw M8-1,25x20 8,8	
17	371994		N	Shim T=2 mm	
18	500021		2	Screw M8-1,25x25 8,8	
19	500047		3	Screw M8-1,25x35 8,8	
20	500249		2	Screw	
21	500029		4	Screw M10-1,5x30 8,8	
22	586003		4	Lock nut M8	
23	904228		4	Washer 6,4x12x1,5	
24	903369		16	Rivet	
25	902166	C	1XL	Edge trim	
26	202028	D	1XL	Edge trim	
27	615043		20	Conical spring washer 8,4x18x2	
28	357863		N	Shim T=2 mm	
29	357866		1	Stop	
30	357173		1	Hood	
31	902166	E	1XL	.Edge trim	
32	357259	F	1	Cover	
33	358161		1	Lever	
34	902585		1	Lock, inner	D
35	902586		1	Lock pin	
36	586002		4	Lock nut M6	
37	500059		2	Screw M6x10	
38	904639		2	Washer 6,7x14x1,5	
39	500047		2	Screw M8-1,25x35 8,8	
40	570005		2	Nut M8	
41	900519		3	Plug	
42	902804		4	Plug	
43	904705		2	Washer	
44	374403		1	Lock pin From 60113120	
45	374400		1	Holder plate From 60113120	
46	371380		1	Lock From 60113120	
47	904374		2	Screw From 60113120	
48	600003		2	Washer From 60113120	
49	586001		2	Lock nut M5 From 60113120	
50	904368		1	Lock, outer From 60113120	D
	902866		1	Key Marked "455" From 60113120	D
51	374401		1	Spacer sleeve From 60113120	
52	374402		1	Lever From 60113120	

- A) Right
B) Marked ``624``
C) L=0,998 m
D) L=0,457 m
E) L=3,680 m
F) Left

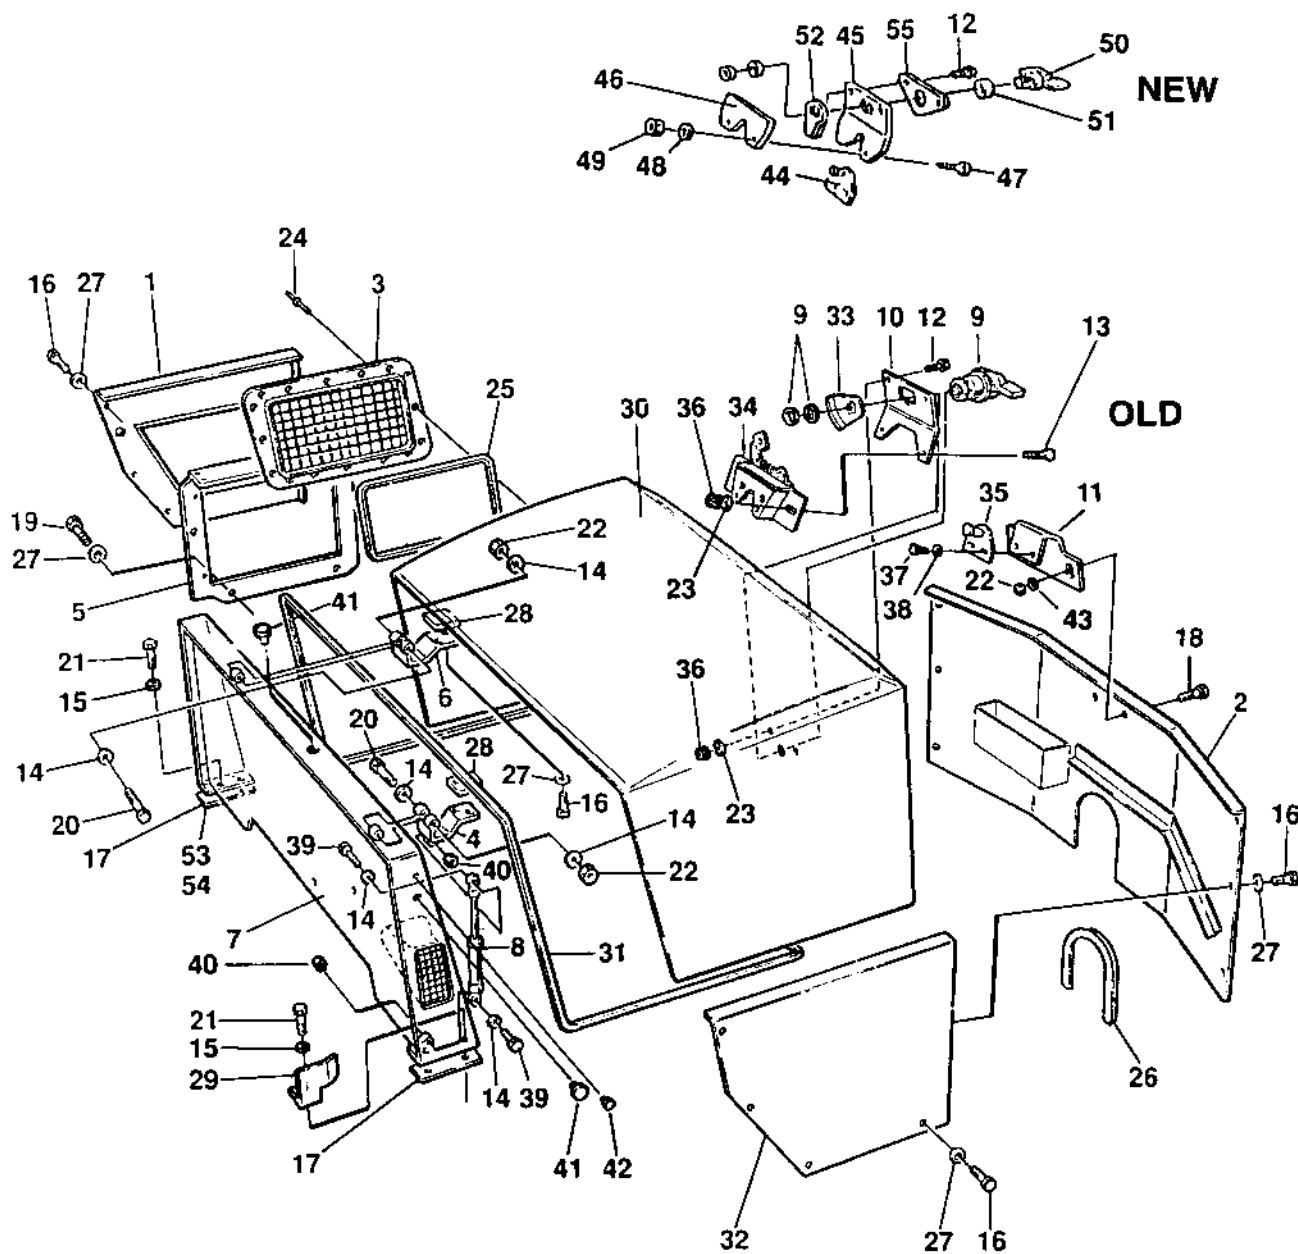


Ref. No.	Part No.	Rem.	Qty	Description	Code
53	904090	N		Washer From 60113120	
54	904091	N		Washer From 60113120	
55	376129	1		Spacer	

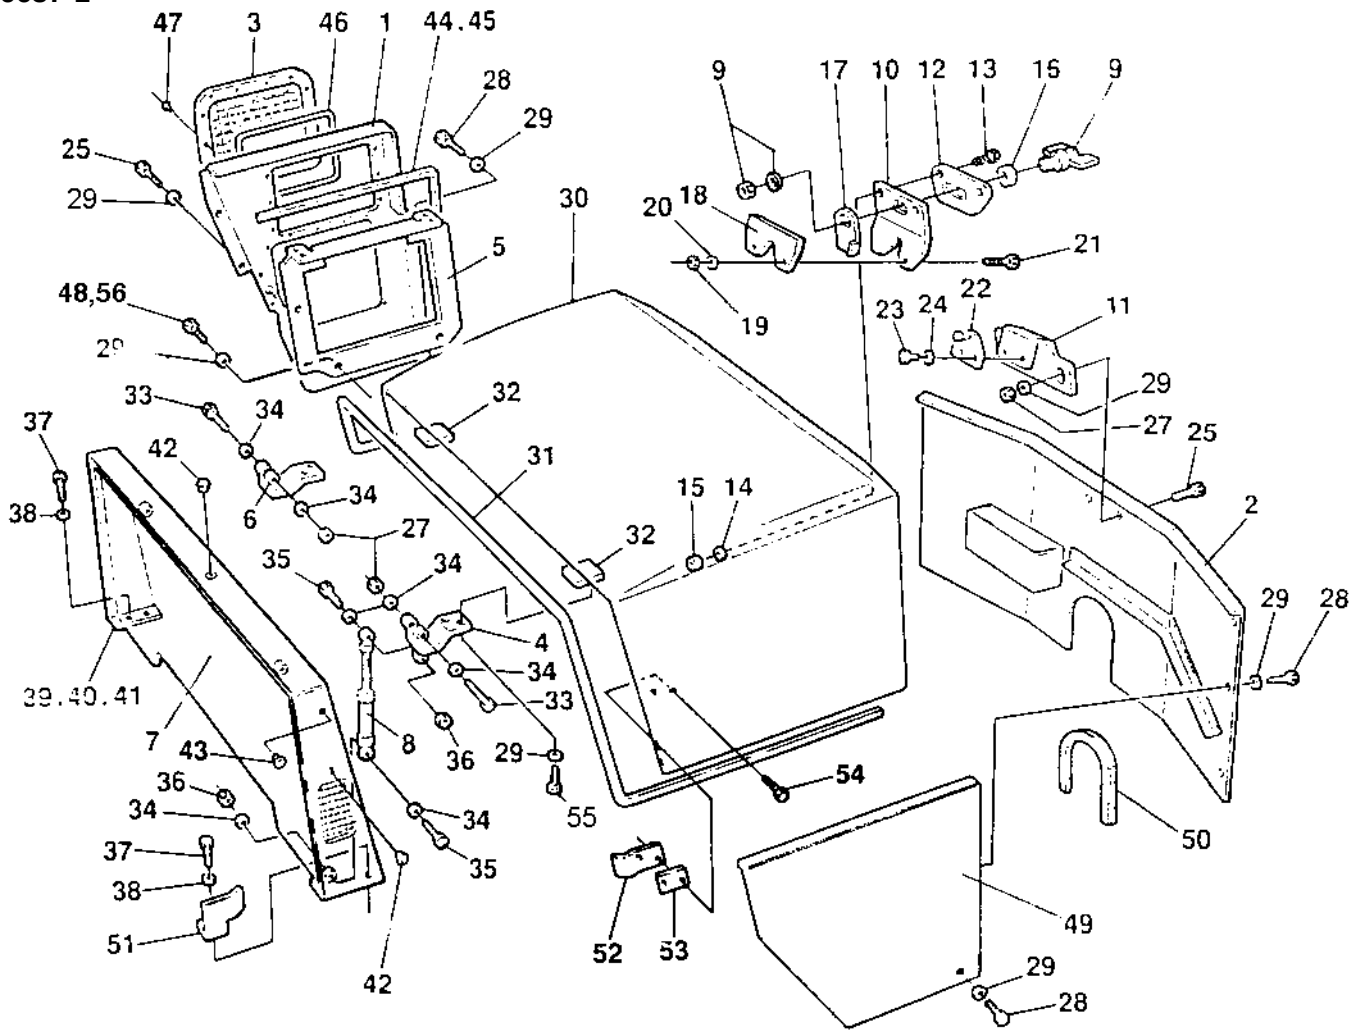


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	374657	A	1	Cover	
	904206	1	4	Screw	
	373476	1	4	Washer	
2	357263		1	Cover Up to 60115580	
	382565		1	Cover From 60115581	
3	374627		1	Grid	
4	357276		1	Hinge	
5	374625		1	Cooler frame	
6	357280		1	Hinge	
7	357248		1	Hood frame	
8	902256		1	Gas spring	D
9	904368		1	Lock, outer	D
	902866		1	Key Marked "455"	D
10	374400		1	Holder plate	
11	358160		1	Bracket	
12	376129		1	Spacer	
13	900485		2	Screw	D
14	904228		2	Washer 6,4x12x1,5	
15	586002		2	Lock nut M6	
16	374401		1	Spacer sleeve	
17	374402		1	Lever	
18	371380		1	Lock	
19	586001		2	Lock nut M5	
20	600003		2	Washer	
21	904374		2	Screw	
22	374403		1	Lock pin	
23	500059		2	Screw M6x10	
24	904639		2	Washer 6,7x14x1,5	
25	500021		2	Screw M8-1,25x25 8,8	
27	586003		4	Lock nut M8	
28	500053		16	Screw M8-1,25x20 8,8	
29	904640		22	Washer 8,4x22x3	
30	370645		1	Engine hood	
31	902166	C	1XL	.Edge trim	
32	357863		N	Shim T=2 mm	
33	500249		2	Screw	
34	904229		7	Washer 8,4x16x1,5	
35	508027		2	Screw	
36	570005		2	Nut M8	
37	500029		4	Screw M10-1,5x30 8,8	
38	904557		4	Washer 10,5x22x4	
39	371994		N	Shim T=2 mm	
40	904090		N	Washer	
41	904091		N	Washer	
42	900519		3	Plug	
43	902804		4	Plug	
44	202042	D	1XL	Rubber strip	
45	202046	E	1XL	Rubber strip 25x10	
46	904076	F	1XL	Edge trim	
47	624018		14	Rivet	
48	500047		2	Screw M8-1,25x35 8,8	
49	357259	G	1	Cover	

- 1) For absorbent
A) Right
C) L=3,680 m
D) L=0,800 m
E) L=0,850 m
F) L=0,998 m
G) Left

16637-1

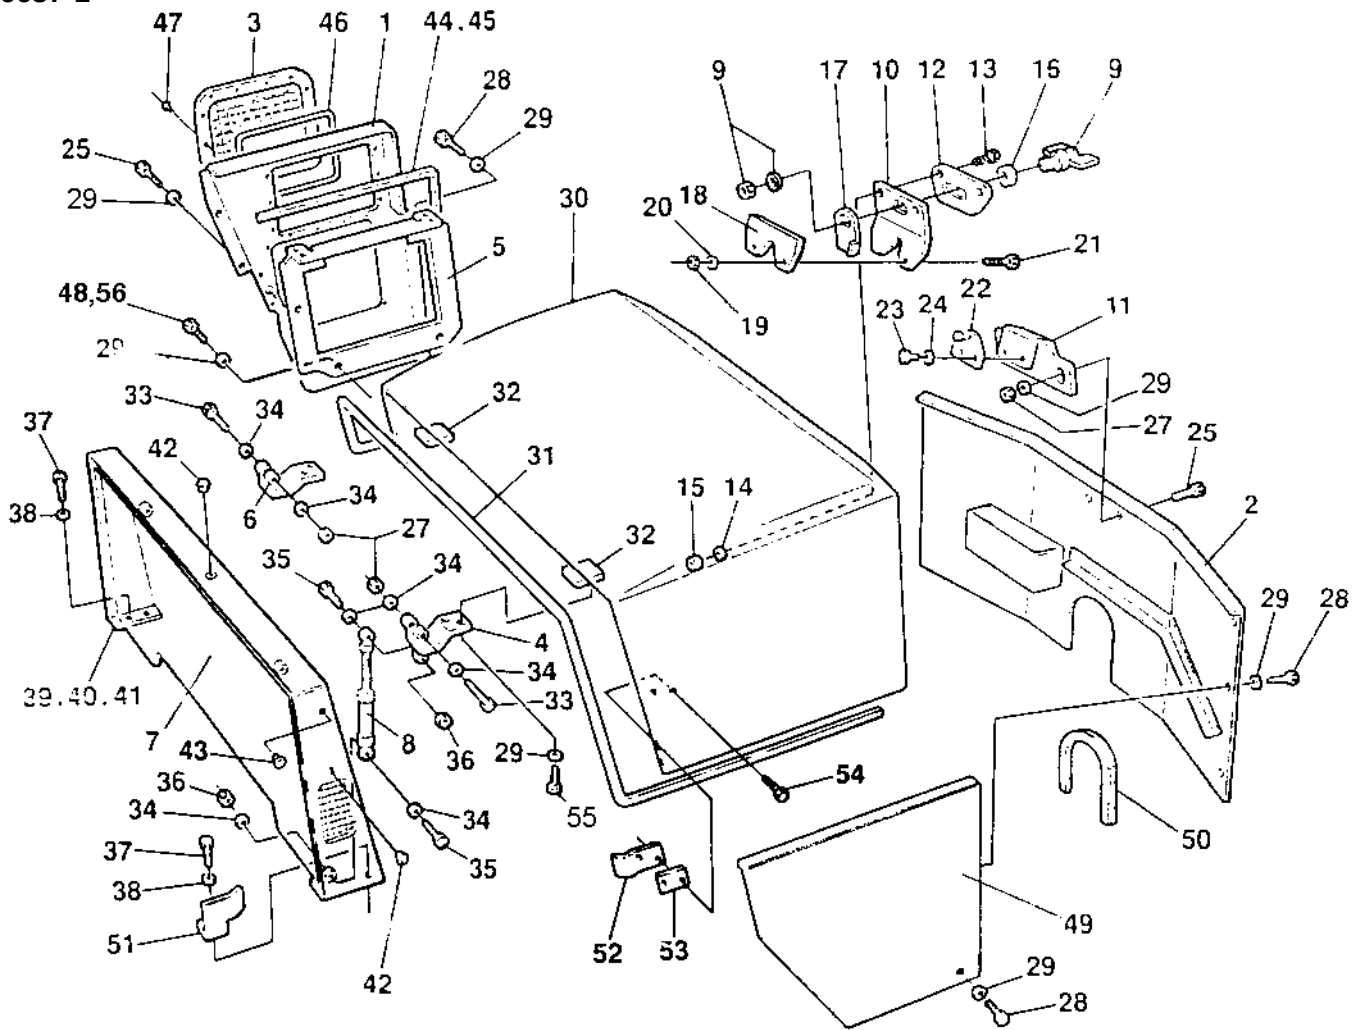


Ref. No.	Part No.	Rem.	Qty	Description	Code
50	202028	H	1XL	Edge trim	
51	357866		1	Stop	
52	375594		1	Holder	
53	375595		1	Spacer	
54	904206		2	Screw	
55	500020		4	Screw M8-1,25x22	8,8
56	500022		1	Screw M8-1,25x30	8,8
H)	L=0,457 m				

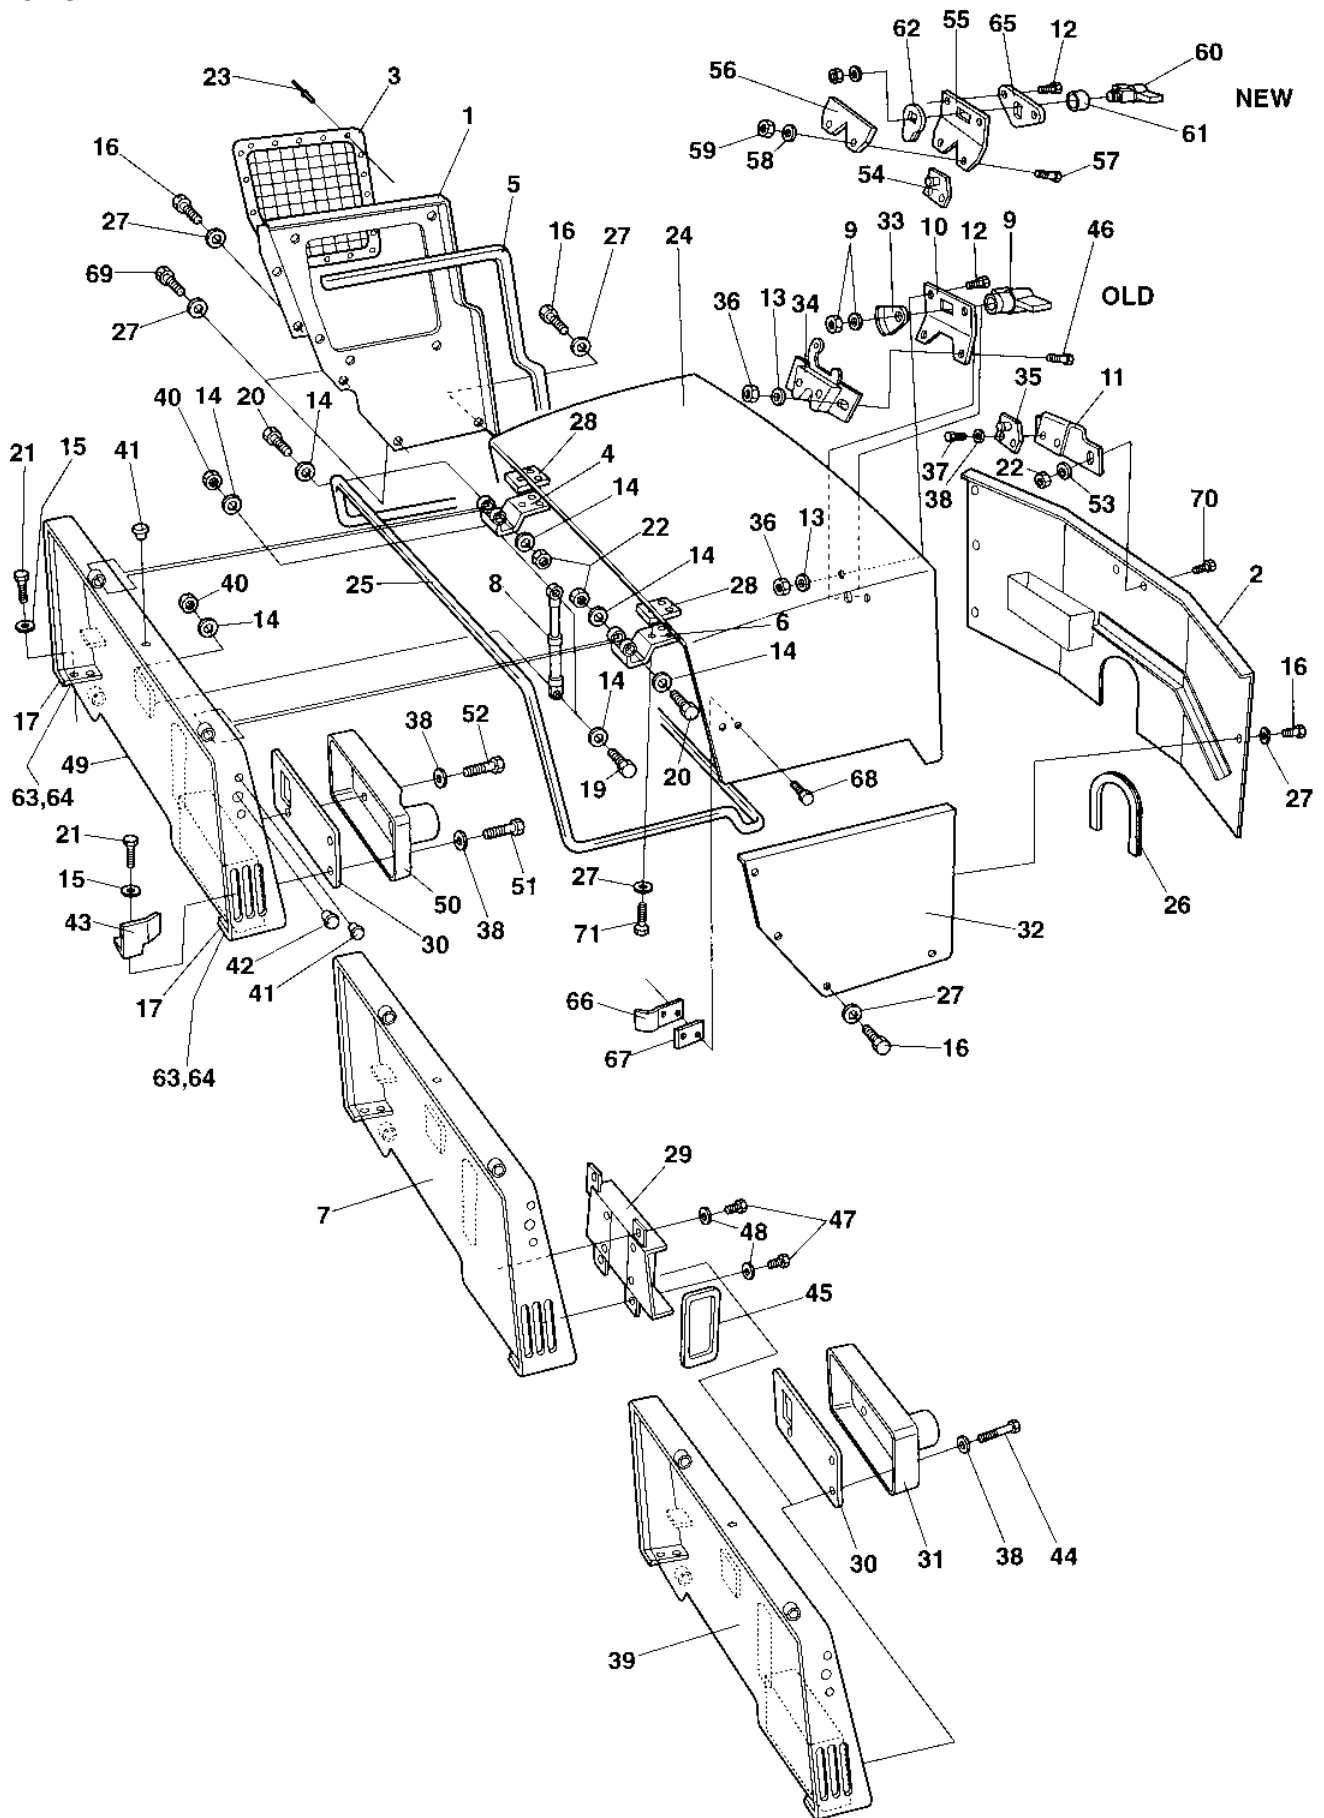


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370647	A	1	Cover	
2	357263		1	Cover Up to 60125580	
	382565		1	Cover From 60125581	
3	370646		1	Grid	
4	370638		1	Hinge	
5	202043	B	1XL	Rubber strip	
6	357280		1	Hinge	
7	371090		1	Hood frame From 60121960 Up to 60122583	
8	902256		1	Gas spring	D
9	902591		1	Lock, outer	D
	903064	C	1	Key Marked "624"	
10	358162		1	Bracket	
11	358160		1	Bracket	
12	500015		2	Screw M6-1x30 8,8	
13	904228		4	Washer 6,4x12x1,5	
14	904229		7	Washer 8,4x16x1,5	
15	904557		4	Washer 10,5x22x4	
16	500053		14	Screw M8-1,25x20 8,8	
17	371994		N	Shim T=2 mm	
19	508027		2	Screw	
20	500249		2	Screw	
21	500029		4	Screw M10-1,5x30 8,8	
22	586003		4	Lock nut M8	
23	903369		19	Rivet	
24	370645		1	Engine hood	
25	902166	D	1XL	Edge trim	
26	202028	E	1XL	Edge trim	
27	904640		22	Washer 8,4x22x3	
28	357863		N	Shim T=2 mm	
29	370957		1	Air inlet From 60121960 Up to 60122583	
30	370636		1	Plate	
31	370637		1	Cover	
32	357259	F	1	Cover	
33	358161		1	Lever	
34	902585		1	Lock, inner	D
35	902586		1	Lock pin	
36	586002		4	Lock nut M6	
37	500059		2	Screw M6x10	
38	904639		6	Washer 6,7x14x1,5	
39	370627		1	Hood frame Up to 60121959	
40	570005		2	Nut M8	
41	900519		3	Plug	
42	903653		4	Plug	
43	357866		1	Stop	
44	500292		4	Screw	
45	370975		1	Gasket	
46	513012		2	Screw	
47	500059		4	Screw M6x10	
48	615042		4	Conical spring washer	
49	370627		1	Hood frame From 60122584	
50	370637		1	Cover From 60122584	
51	500079		2	Screw M6-1x50 8,8	
52	500292		2	Screw	
53	904229		2	Washer 8,4x16x1,5	

- A) Right
 B) L=1,610 m
 C) Marked ``624``
 D) L=3,680 m
 E) L=0,457 m
 F) Left

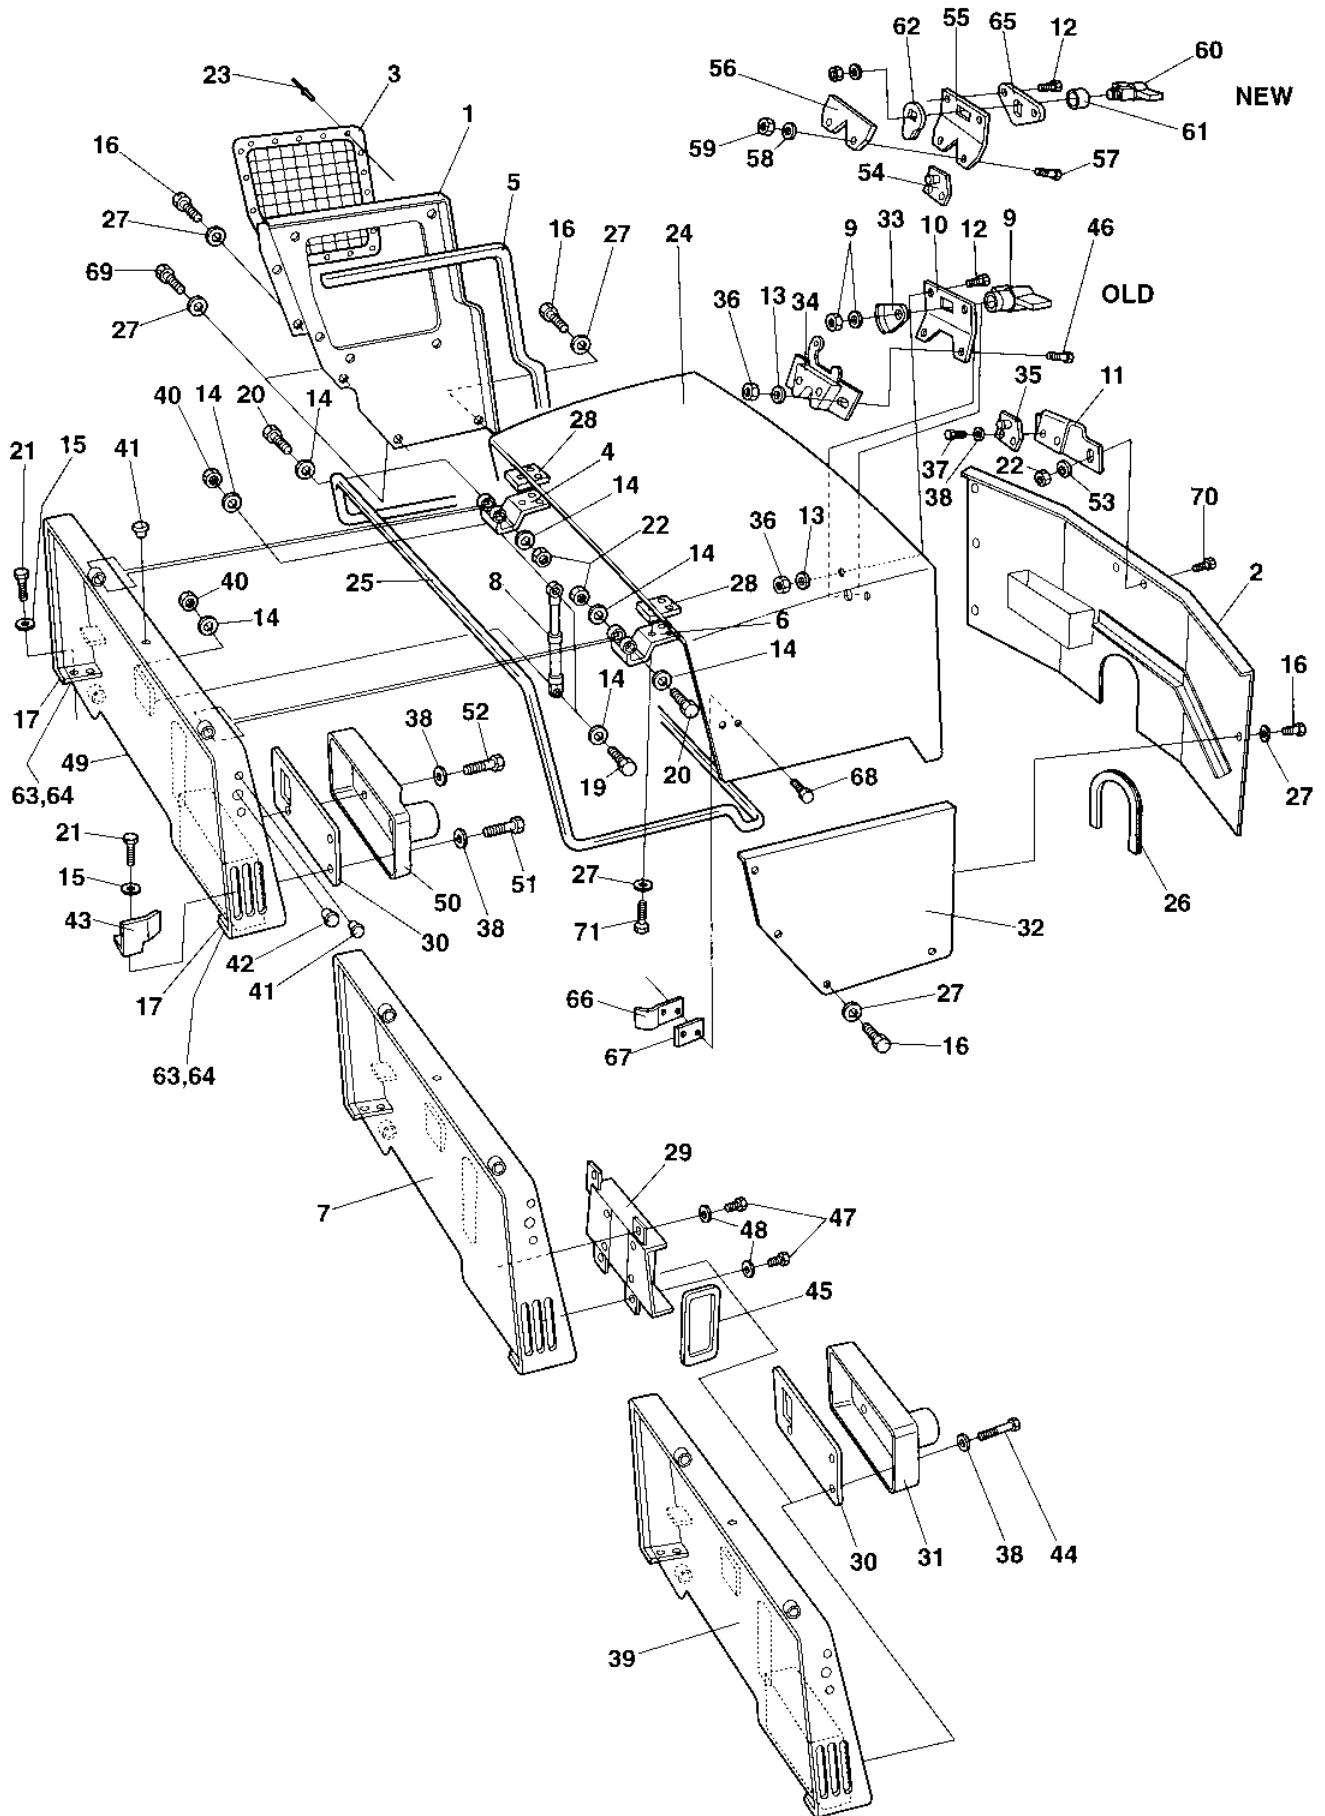


Ref. No.	Part No.	Rem.	Qty	Description	Code
54	374403		1	Lock pin From 60123120	
55	374400		1	Holder plate From 60123120	
56	371380		1	Lock From 60123120	
57	904374		2	Screw From 60123120	
58	904281		2	Washer 5,3x10x1 From 60123120	
59	586001		2	Lock nut M5 From 60123120	
60	904368		1	Lock, outer From 60123120	D
	902866		1	Key Marked "455"	D
61	374401		1	Spacer sleeve From 60123120	
62	374402		1	Lever From 60123120	
63	904090	N		Washer From 60123120	
64	904091	N		Washer From 60123120	
65	376129		1	Spacer	
66	375594		1	Holder	
67	375595		1	Spacer	
68	904206		2	Screw	
69	500188		2	Screw M8-1,25x14 8,8	
70	500021		2	Screw M8-1,25x25 8,8	
71	500020		4	Screw M8-1,25x22 8,8	

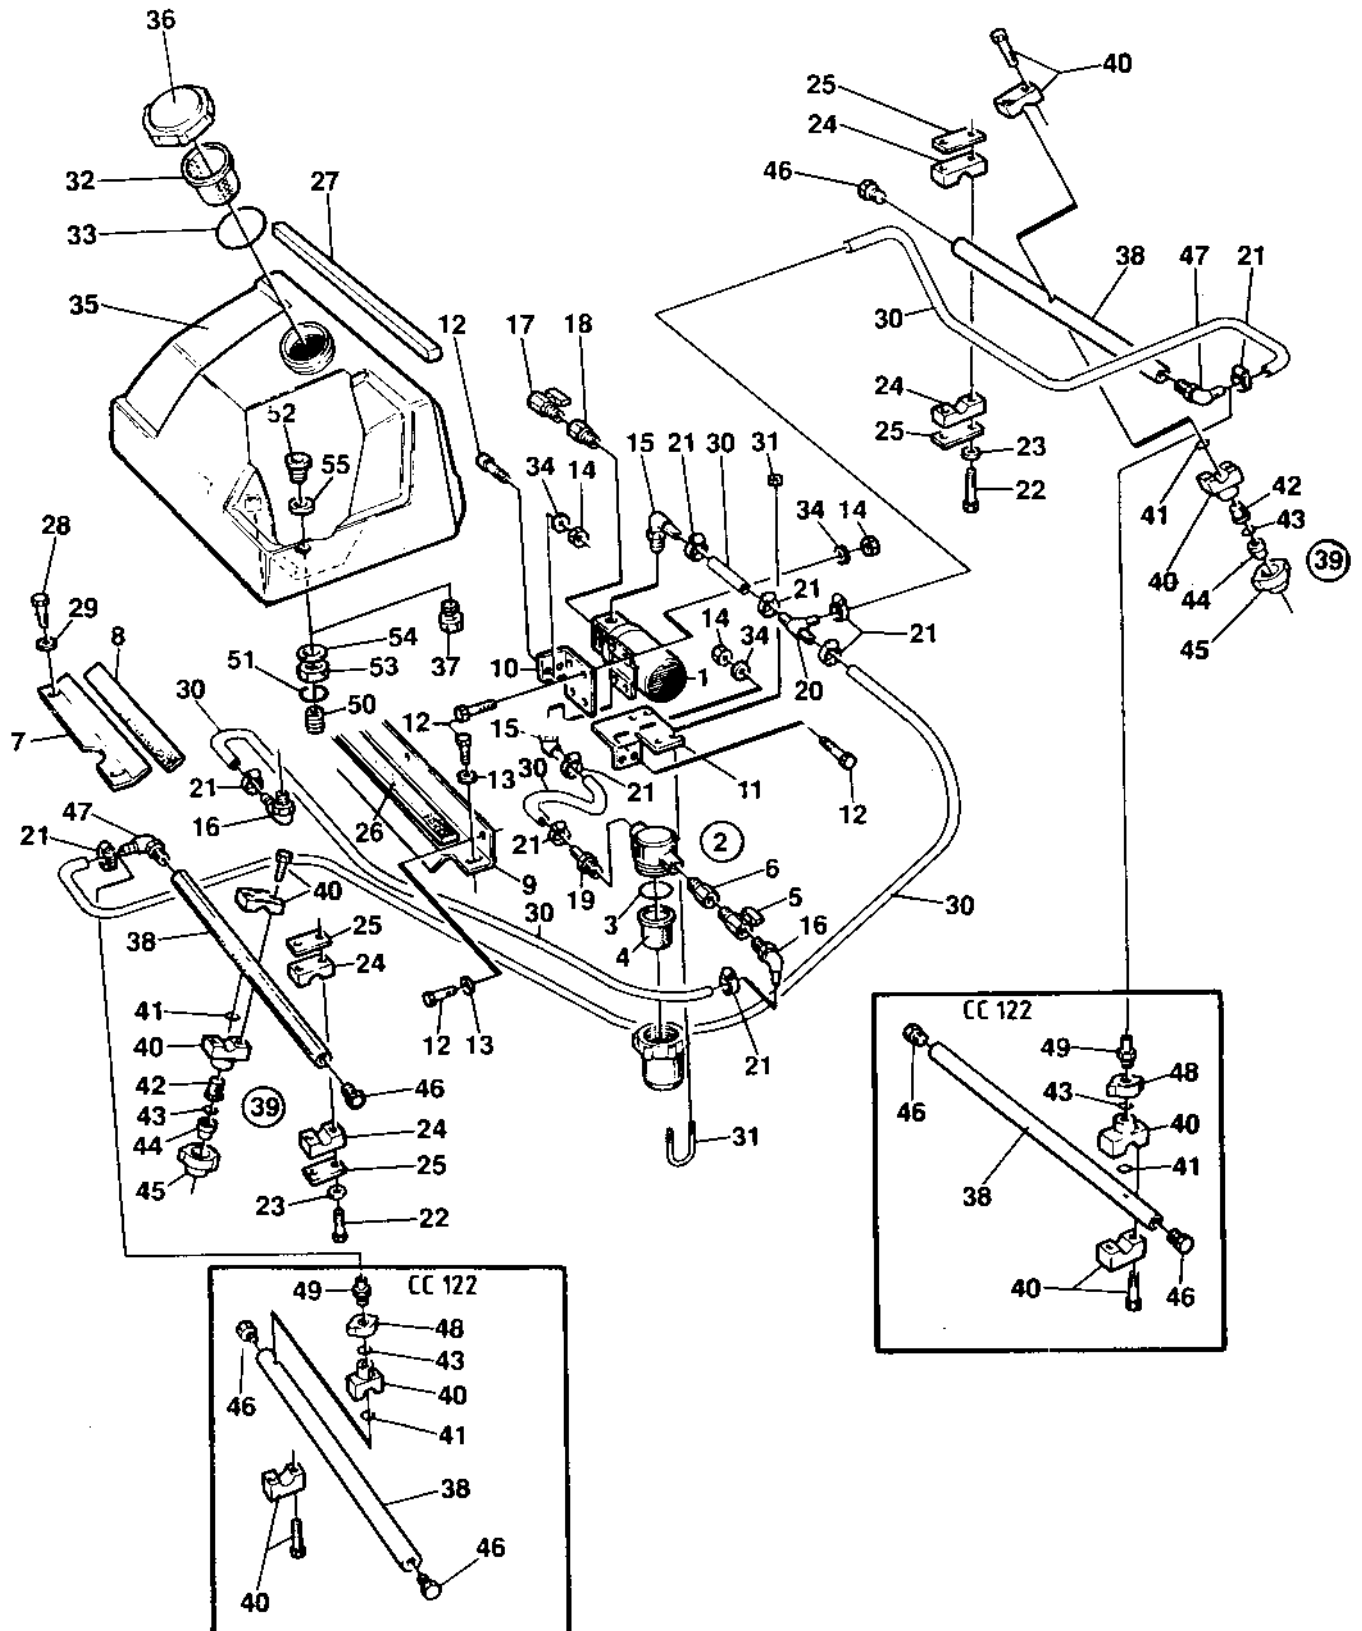

Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	923690	A	1	Water pump (Page 66)	C
	903987	A	1	Sprinkling pump (Page 68)	C
2	920775	A	1	Strainer	
3	921423		1	.Gasket	D
4	901841		1	.Strainer	D
5	924986		1	Valve	
6	929241		1	Connector	
7	357395		1	Holder plate	
8	926911	B	1XL	Rubber strip	
9	357142		1	Holder plate	
10	357128		1	Holder plate	
11	357127		1	Holder plate	
12	500021		13	Screw M8-1,25x25 8,8	
13	615043		5	Conical spring washer 8,4x18x2	
14	586003		8	Lock nut M8	
15	923734		2	Hose connection	
16	924996		2	Hose connection	D
17	901309		1	Valve	
18	901837		1	Connector	
19	924544		1	Hose connection	
	924996	1	1	Hose connection	D
20	923735		1	Hose connection	
21	313002		10	Hose clamp	
22	500079		8	Screw M6-1x50 8,8	
23	600004		8	Washer	
24	923876	C	4	Clamp	
25	923859		8	Cover plate	
26	903478	D	1XL	Absorbent	
27	202043	E	1XL	Rubber strip	
28	500028		2	Screw M10-1,5x25 8,8	
29	615044		2	Conical spring washer	D
30	244054	F	5XL	Hose reinforced	
31	923984		2	Clamp	
32	842664		1	Strainer	
	358846	G	1	Strainer	D
33	160122		1	O-ring	
34	600006		8	Washer	
35	357017		1	Sprinkling tank	
36	333228		1	.Cap	
37	928345	2	1	.Plug Up to 60110259	
38	357405		2	Sprinkler pipe	
39	928781		8	Sprinkler, cpl	D
40	923680		1	.Nozzle clamp	D
41	923962		1	..O-ring	D
42	499444		1	.Strainer	D
	902869	G	1	.Strainer	
43	904116		1	.Gasket	D
	903010	G	1	.Gasket	D
44	923679		1	.Nozzle body	D
45	923681		1	.Coupling, black	D

- 1) Elbow connector, together with flow divider
- 2) Included in watertank mounted
- A) CPL
- B) L=430 MM
- C) 2 pcs
- D) L=670 MM
- E) L=960 MM
- F) Length as required
- G) Option

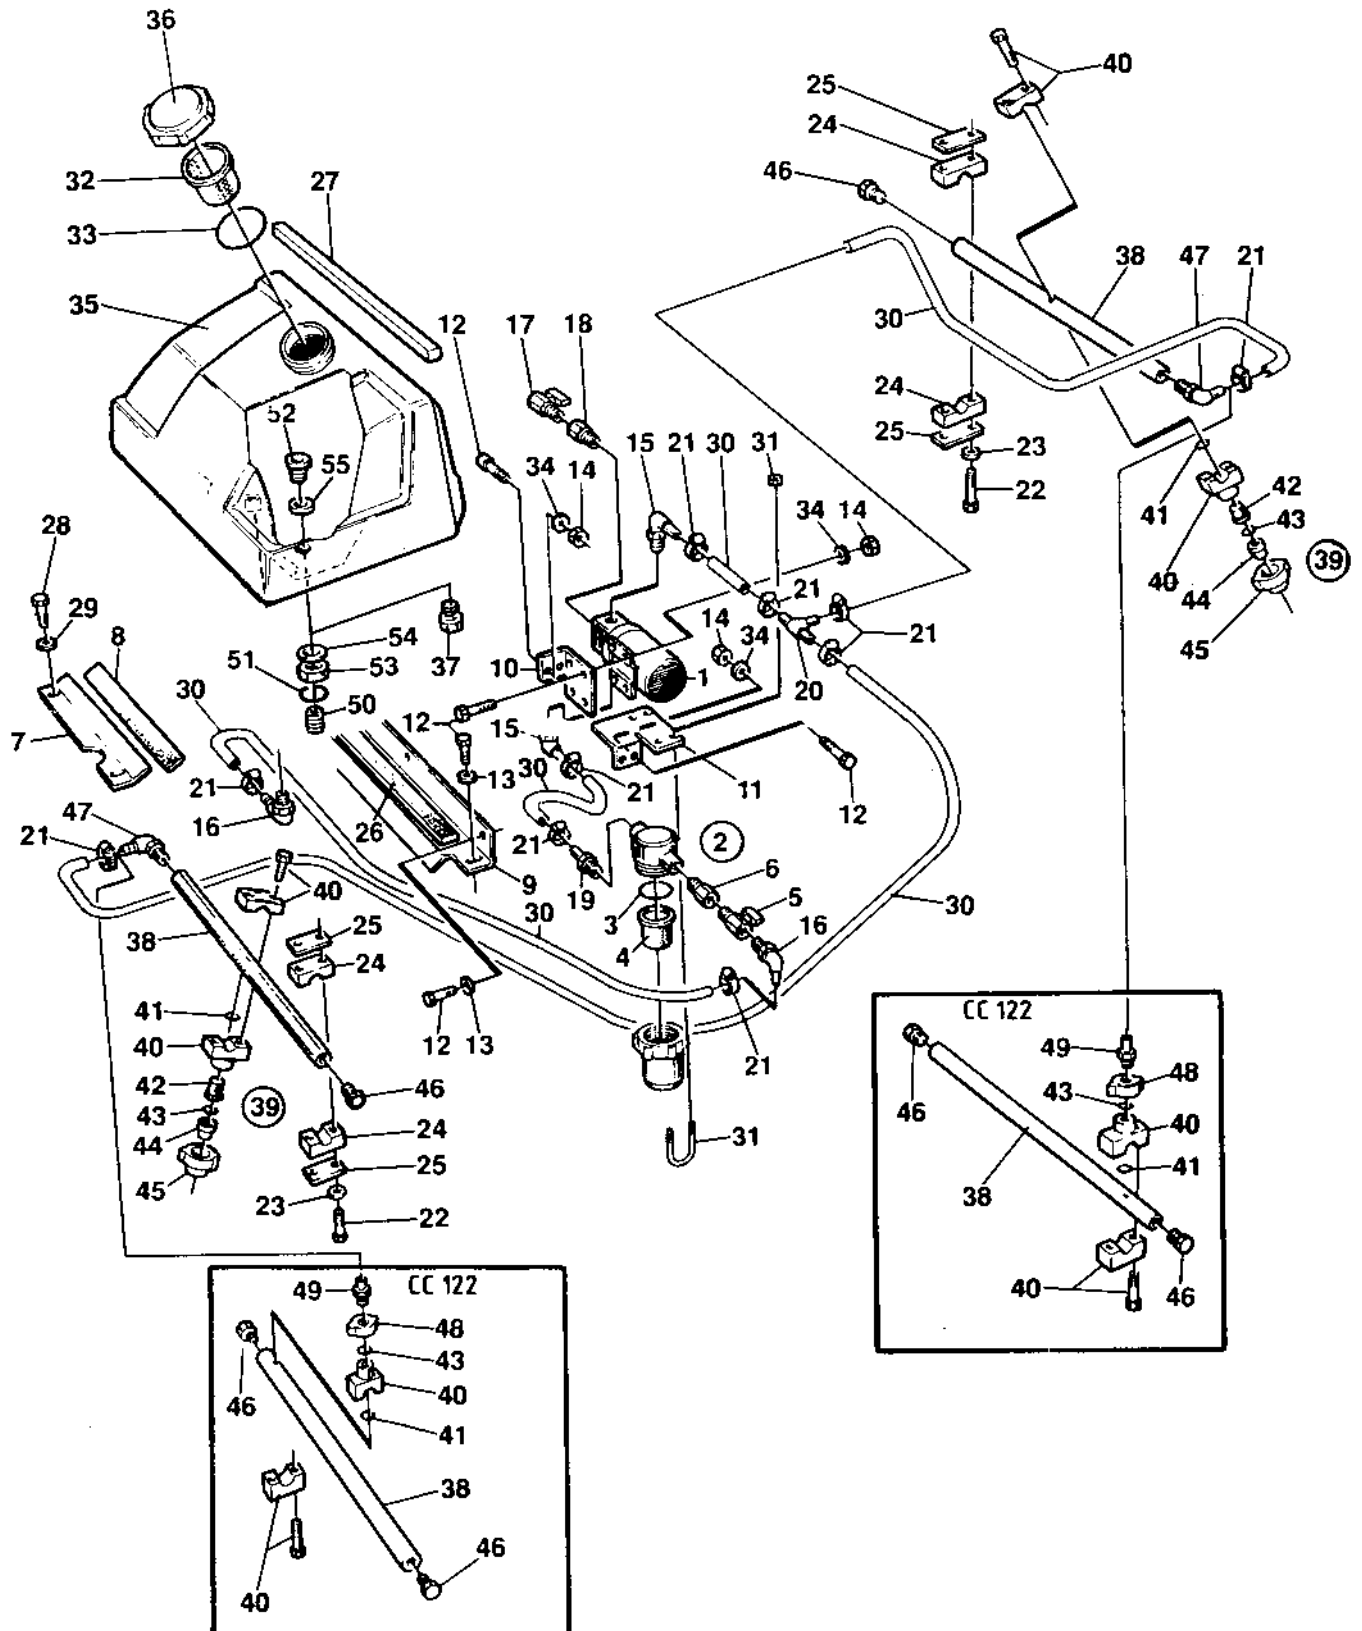


Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
45	902868	G	1	.Coupling, red	
46	923683		4	Plug	
47	923684		2	Hose connection	
48	929419		2	Coupling	
49	929348	3	2	Hose connection From 60110260	
50	902976	3	1	Plug, cpl From 60110260	
		3	1	.Plug From 60110260	
51		3	1	.Gasket From 60110260	
52	902916	3	1	Adapter kit From 60110260	
		3	1	.Pipe fitting From 60110260	
53		3	1	.Nut From 60110260	
54		3	1	.Washer From 60110260	
55		3	1	.Sealing From 60110260	

3) Included in watertank


G) Option

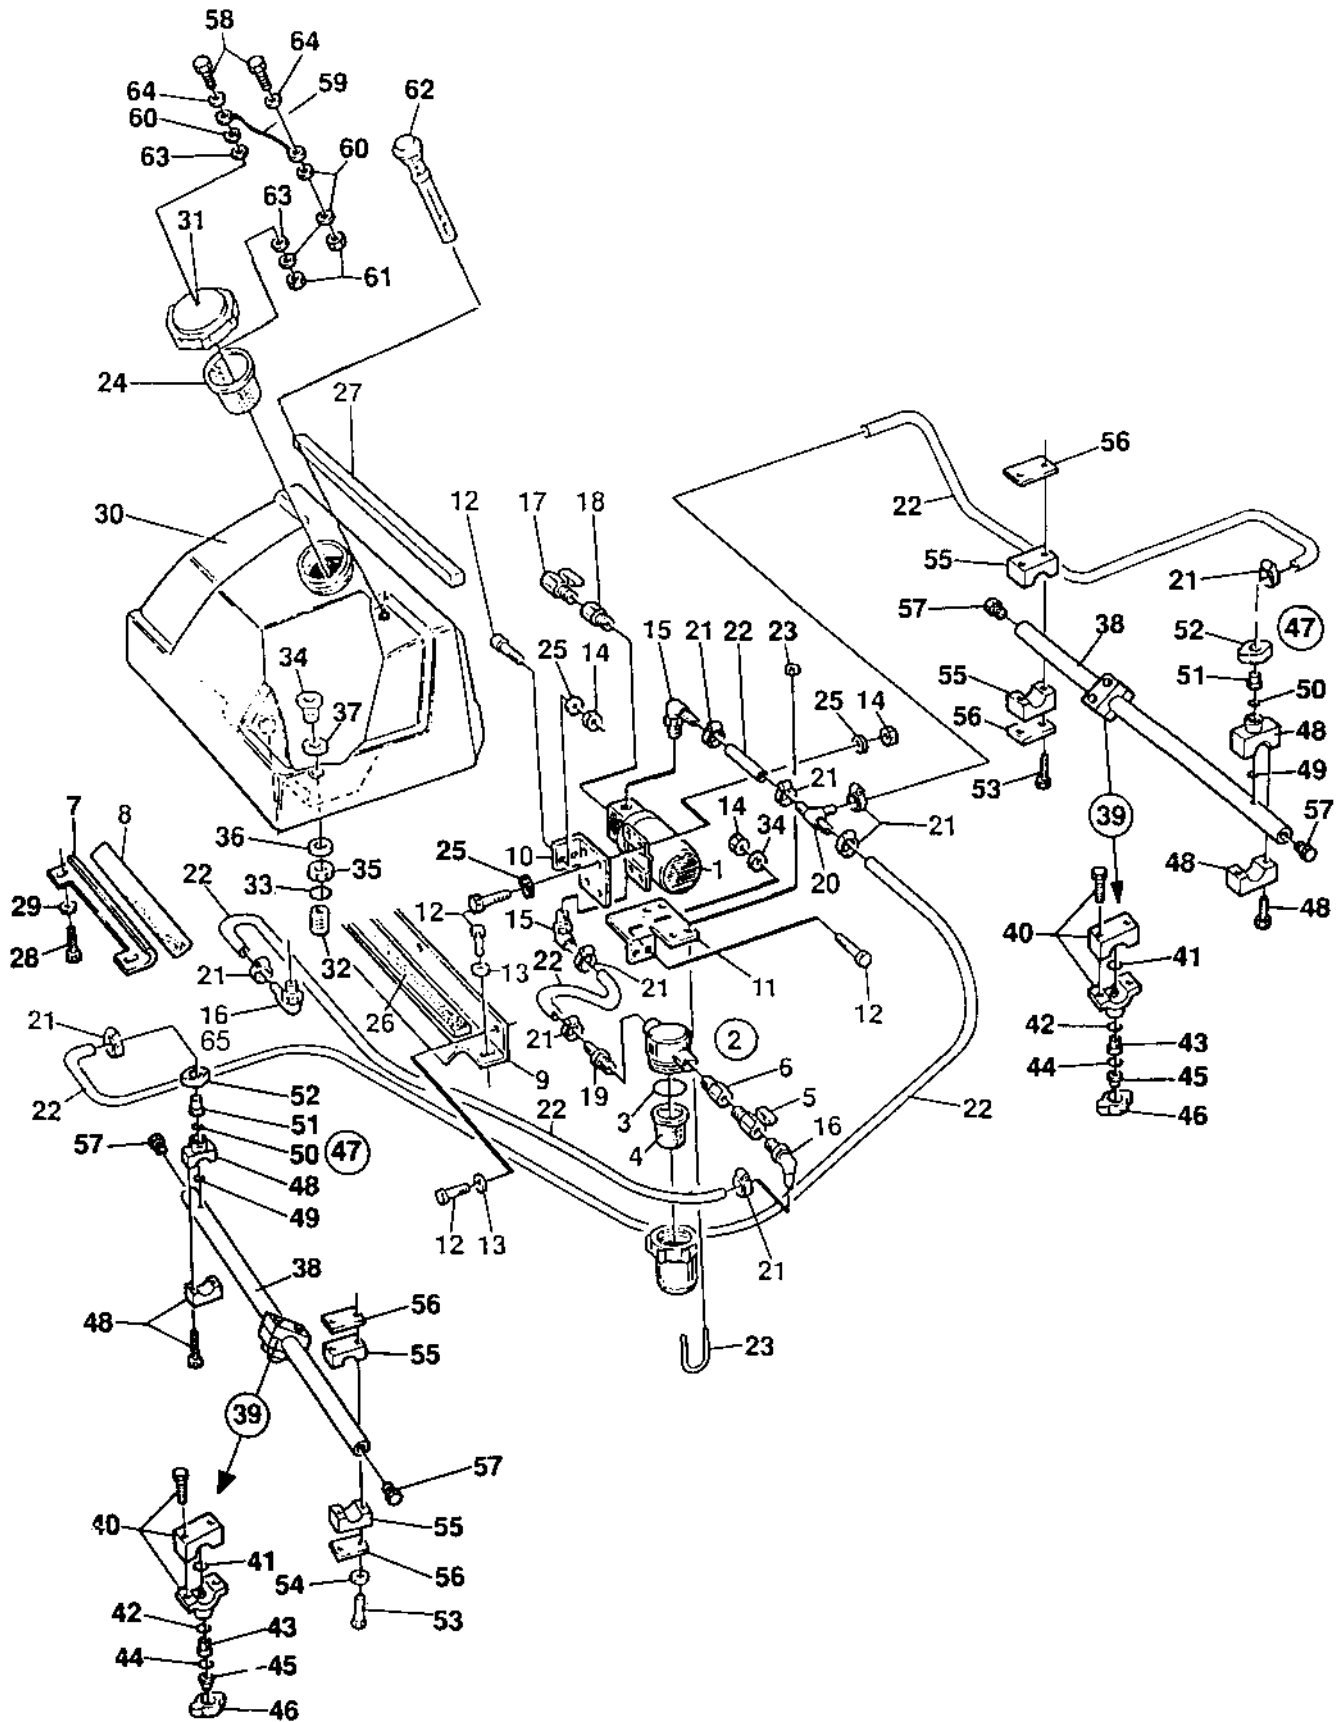

Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	923690	A	1	Water pump Up to 601X5279 (Page 66)	C
	904808	A	1	Water pump From 601X5280	
	903987	A	1	Sprinkling pump (Page 68)	C
2	920775	A	1	Strainer	
3	921423		1	.Gasket	D
4	901841		1	.Strainer	D
5	924986		1	Valve	
6	929241		1	Connector	
7	357395		1	Holder plate	
8	926911	B	1XL	Rubber strip	
9	357142		1	Holder plate	
10	357128		1	Holder plate	
11	357127		1	Holder plate	
12	500021		13	Screw M8-1,25x25 8,8	
13	615043		5	Conical spring washer 8,4x18x2	
14	586003		8	Lock nut M8	
15	923734		2	Hose connection	
16	924996		2	Hose connection	D
17	901309		1	Valve Up to 601X5279	
18	901837		1	Connector Up to 601X5279	
19	924544		1	Hose connection	
	924996	1	1	Hose connection	D
20	923735		1	Hose connection	
21	313002		10	Hose clamp	
22	244054	C	5XL	Hose reinforced	
23	923984		2	Clamp	
24	358846		1	Strainer	D
25	600006		12	Washer	
26	903478	D	1XL	Absorbent	
27	202043	E	1XL	Rubber strip	
28	500028		2	Screw M10-1,5x25 8,8	
29	615044		2	Conical spring washer	D
30	357017		1	Sprinkling tank Up to 601X3802	
	373797		1	Sprinkling tank From 601X3803	
31	333228		1	.Cap Up to 601X3802	
	359003		1	.Cap From 601X3803	D
32	902976	F	1	Plug, cpl Up to 601X3802	
	937053	F	1	Plug, cpl From 601X3803	
			1	.Plug	
33			1	.Gasket	
34	902916	G	1	Adapter kit	
			1	.Pipe fitting	
35			1	.Nut	
36			1	.Washer	
37			1	.Sealing	
38	357405		2	Sprinkler pipe	
	375013	J	2	Sprinkler pipe From SN601X3372	
39	902874		8	Sprinkler, cpl	D
	903543	J	8	Sprinkler, cpl From SN601X3372	D


- 1) Elbow connector, together with flow divider
A) CPL
B) L=0,430 m
C) Length as required
D) L=0,670 m
E) L=0,960 m
F) Item 32 and 33
G) Item 34 to 37
J) US-market

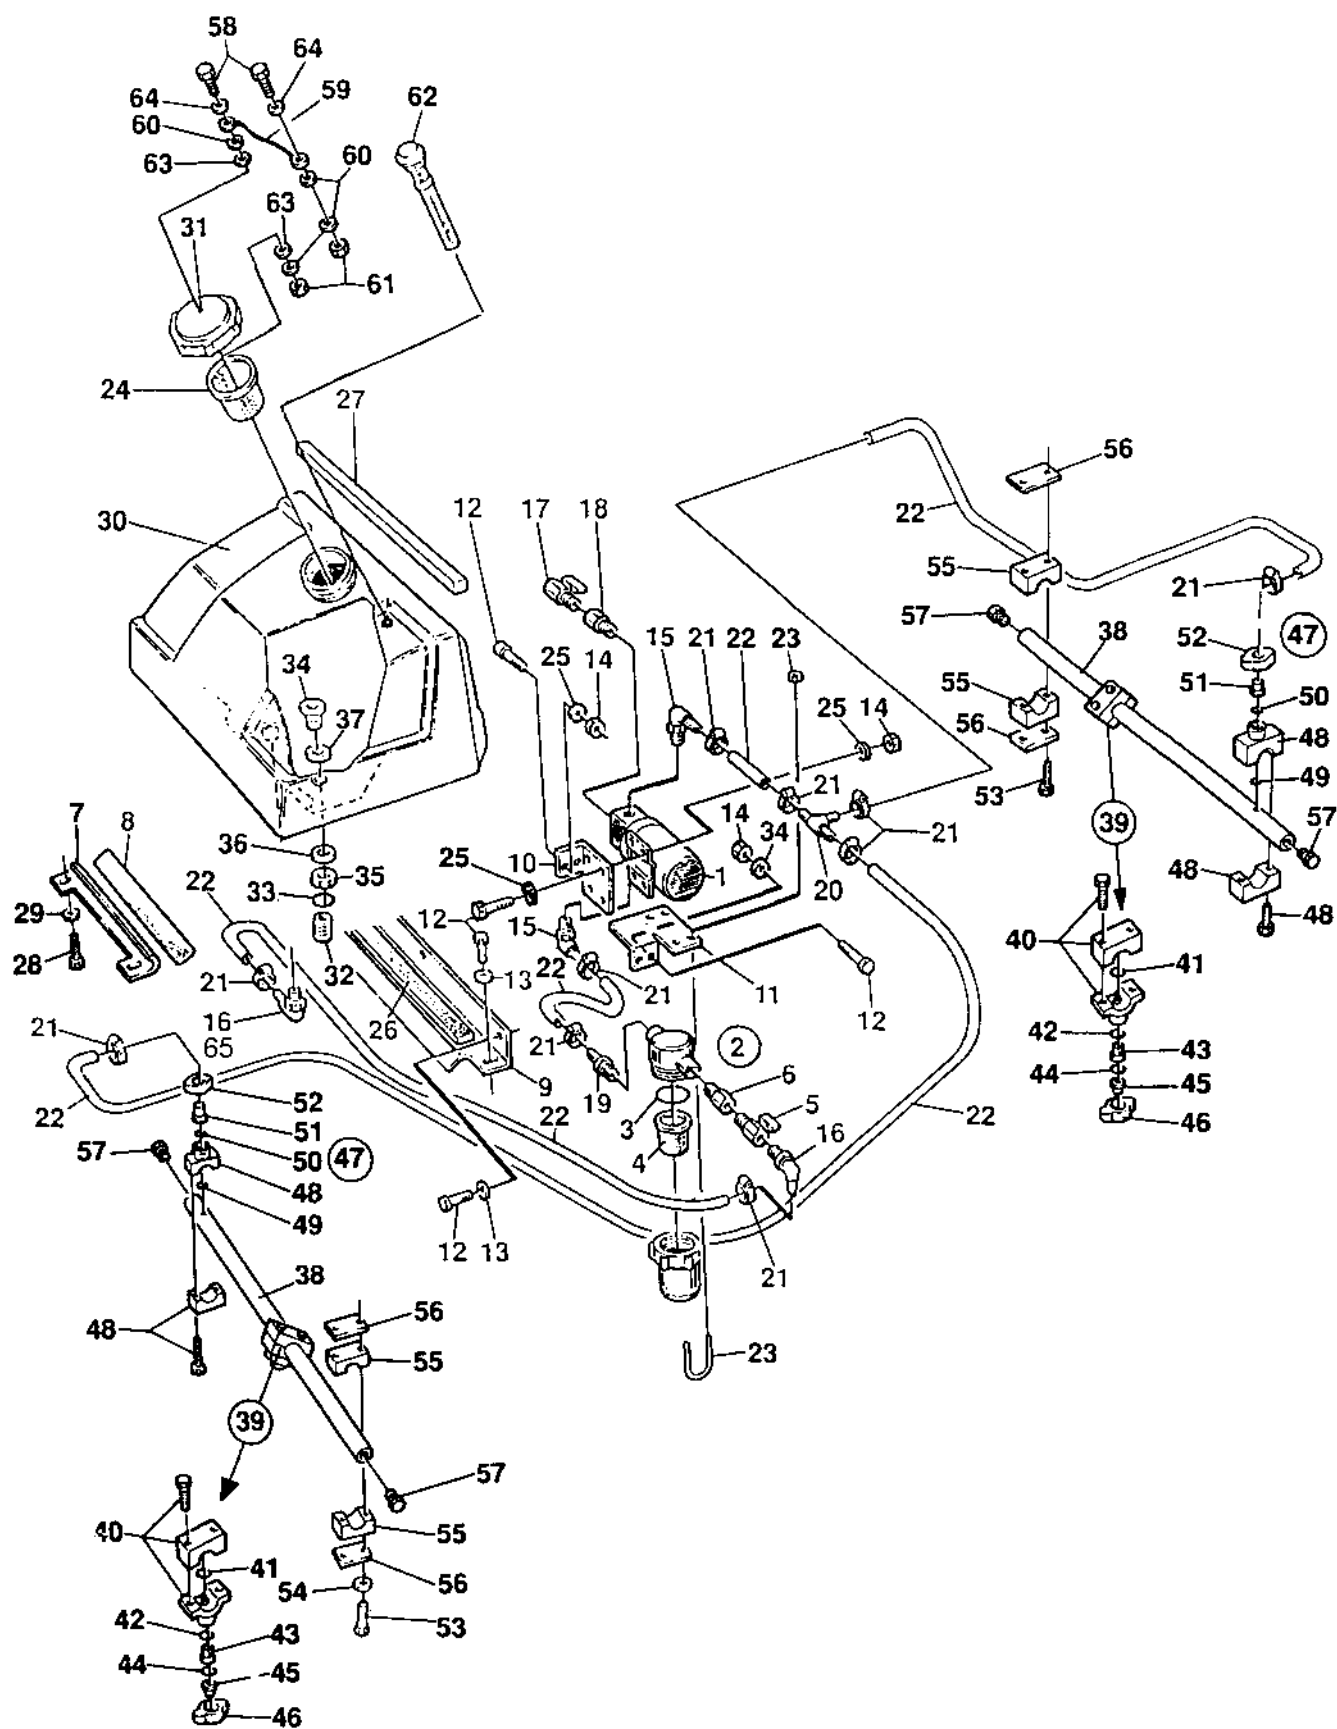

Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
40	923680		1	.Nozzle clamp	D
41	923962		1	..O-ring	D
42	903010		1	.Gasket	D
43	902869		1	.Strainer	
	903541	J	1	Strainer with valve From SN601X3372	D
44	904116		1	.Gasket	D
45	923679		1	.Nozzle body	D
	903540	J	1	Nozzle body Green From SN601X3372	D
46	902868		1	.Coupling, red	
	909267	J	1	Coupling Green From SN601X3372	D
47	903959	A	2	Hose connection	
48	923680		1	.Nozzle clamp	D
49	923962		1	..O-ring	D
50	904116		1	.Gasket	D
51	903957		1	.Hose connection	
52	903958		1	.Coupling	
53	500186		8	Screw M6-1x45 8,8	
54	600004		8	Washer	
55	923876	H	4	Clamp	
56	923859		8	Cover plate	
57	923683		4	Plug	
58	500040	I	2	Screw M6-1x20 8,8	
59	357643	I	1	Wire	
60	615076	I	4	Washer 7,0x25x1,5	
61	586002	I	2	Lock nut M6	
62	359781	I	1	Level gauge	
	903681	I	1	.Grommet	
63	615042		2	Conical spring washer	
64	904228		2	Washer 6,4x12x1,5	
65	375010	J	1	Adapter From SN601X3372	


- A) CPL
 H) 2 pcs
 I) Option
 J) US-market

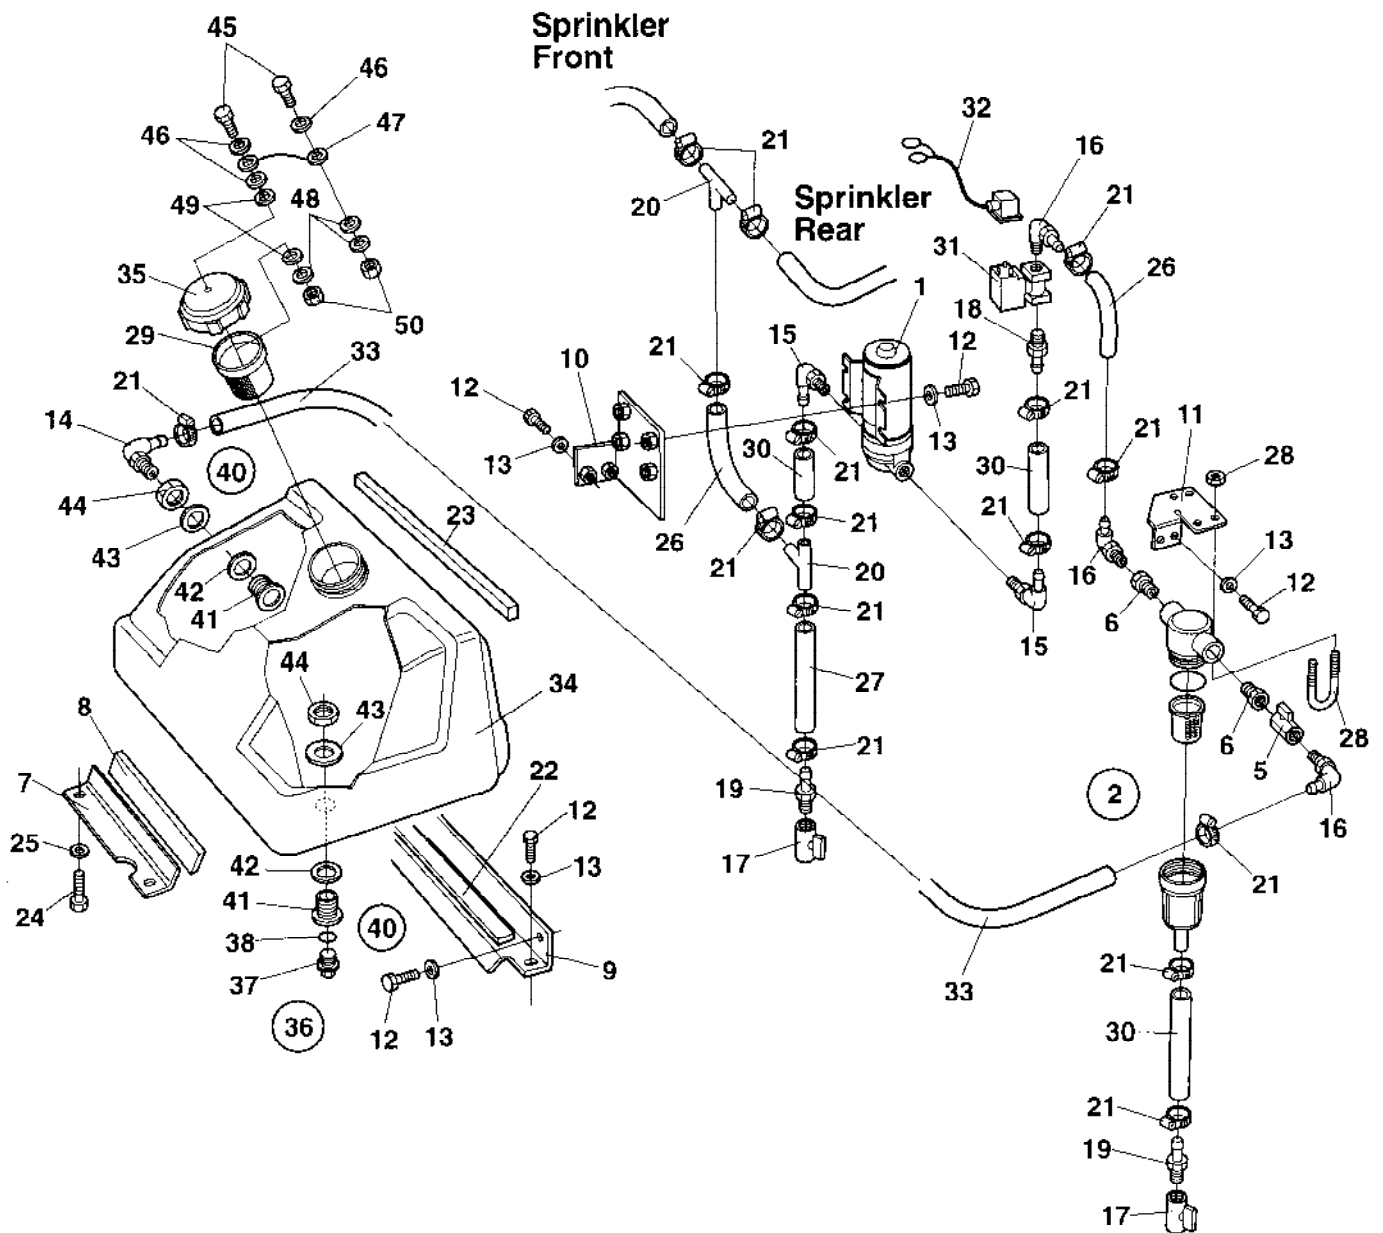

Sprinkler system Front tank


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	904808		1	Water pump	
2	904877		1	Strainer cpl	
3	938307		1	.O-ring	
4	938306		1	.Strainer	
5	924986		1	Valve	
6	903886		2	Connector	
7	357395		1	Holder plate	
8	926911	A	1XL	Rubber strip	
9	357142		1	Holder plate	
10	382181		1	Holder plate	
11	382180		1	Holder plate	
12	500021		13	Screw M8-1,25x25 8,8	
13	904229		13	Washer 8,4x16x1,5	
14	901431		1	Hose connection	
15	923734		2	Hose connection	
16	924996		3	Hose connection	D
17	925599		2	Valve	
18	901432		1	Hose connection	
19	924544		2	Hose connection	
20	923735		2	Hose connection	
21	313002		16	Hose clamp	
22	903478	B	1XL	Absorbent	
23	202042	C	1XL	Rubber strip	
24	500028		2	Screw M10-1,5x25 8,8	
25	904230		2	Washer 10,5x22x2	
26	904878	D	2XL	Hose reinforced	
27	904878	D	1XL	Hose reinforced	
28	927568		2	Clamp	
29	358846		1	Strainer	D
30	904878	E	3XL	Hose reinforced	
31	287713		1	Solenoid valve	
32	358809		1	Cable harness	
33	904878	C	1XL	Hose reinforced	
34	373797		1	Sprinkling tank	
35	359003		1	.Cap	D
36	937053		1	.Plug, cpl	
37			1	..Plug	
38			1	..Gasket	
40	902916		2	.Adapter kit	
41			1	..Pipe fitting	
42			1	..Sealing	
43			1	..Washer	
44			1	..Nut	
45	500040		2	Screw M6-1x20 8,8	
46	904228		3	Washer 6,4x12x1,5	
47	357643		1	Wire	
48	615042		3	Conical spring washer	
49	615076		2	Washer 7,0x25x1,5	
50	586002		2	Lock nut M6	

- A) L=0,430 m
B) L=0,670 m
C) Length as required
D) L=0,300 m
E) L=0,070 m

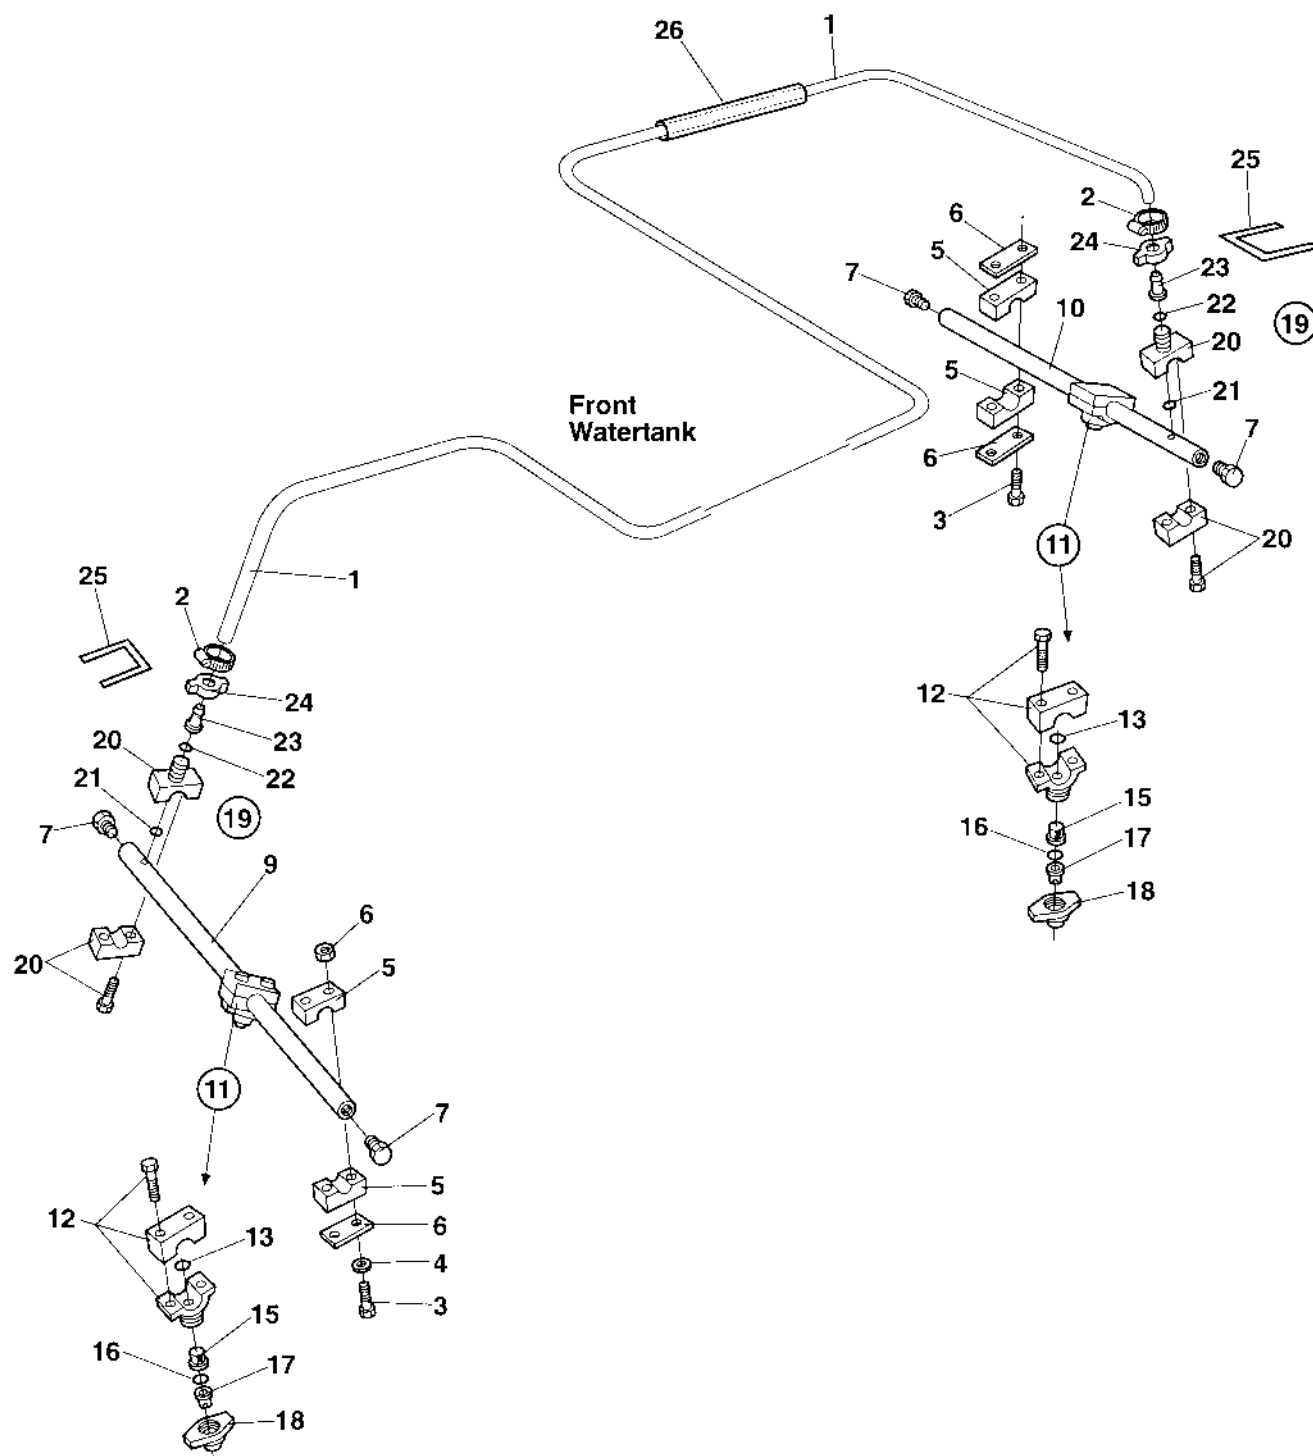


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	904878	A	2XL	Hose reinforced	
2	313002		2	Hose clamp	
3	500079		8	Screw M6-1x50 8,8	
4	904228		8	Washer 6,4x12x1,5	
5	923876	B	4	Clamp	
6	923859		8	Cover plate	
7	923683		4	Plug	
9	382467	C	1	Sprinkler pipe	
	382468	F,C	1	Sprinkler pipe	
10	382467	D	1	Sprinkler pipe	
	382468	F,D	1	Sprinkler pipe	
11	928781		8	Sprinkler, cpl	D
12	923680		1	.Nozzle clamp	D
13	923962		1	..O-ring	D
15	499444		1	.Strainer	D
16	904116		1	.Gasket	D
17	923679		1	.Nozzle body	D
	791117	1	1	.Nozzle body Orange	
18	923681		1	.Coupling, black	D
19	903959		2	Hose connection	
20	923680		1	.Nozzle clamp	D
21	923962		1	..O-ring	D
22	904116		1	.Gasket	D
23	903957		1	.Hose connection	
24	903958		1	.Coupling	
25	902379	A	2XL	Edge trim	
26	901191	E	1XL	Protective hose	

- 1) Can replace PN 923679.
A) Length as required
B) 2 pieces
C) Front
D) Rear
E) L=0,340 m
F) US-market

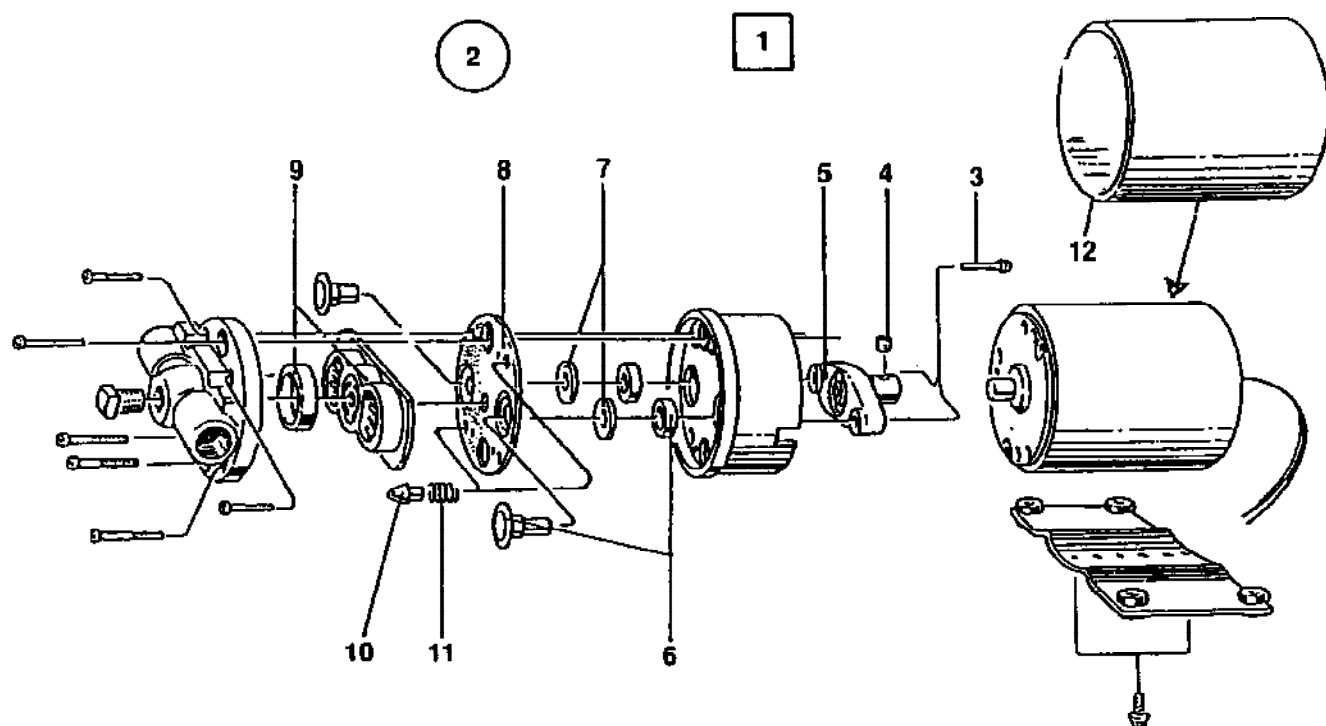

Ref. No.	Part No.	Rem.	Qty	Description	Code
2	902303		1	.Repair kit	D
3			1	..Screw, set	D
4			1	..Screw	D
5			1	..Rotor, cpl	D
6			1	..Piston, set	D
7			2	..Wear washer	D
8			1	..Diaphragm	D
9			1	..Check valve	D
10			2	..Poppet	D
11			2	..Spring	D
12			1	.Protection	
	929881				

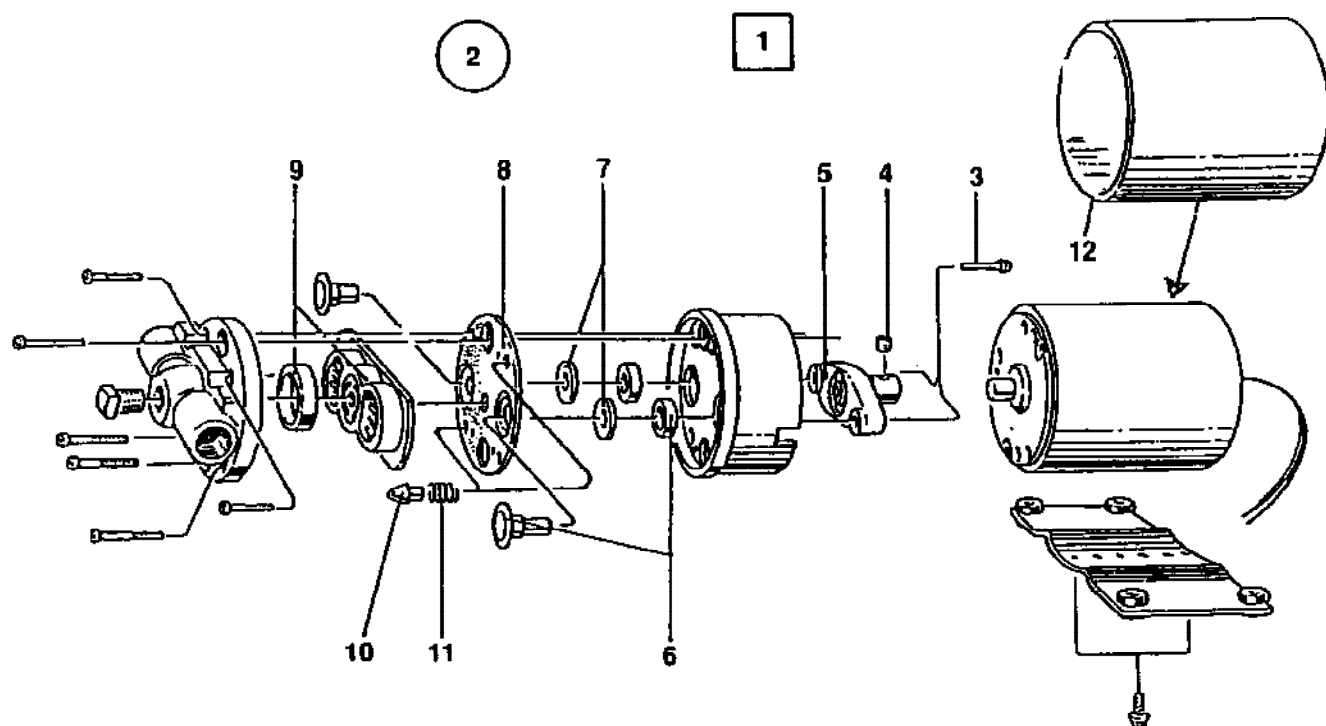


903987 Sprinkling pump

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Sprinkling pump	
2	909533		1	..Repair kit	D
3			1	..Screw kit	D
4			1	..Screw	D
5		A	1	..Rotor	D
6			1	..Piston, set	D
7			2	..Wear washer	D
8			1	..Diaphragm	D
9			1	..Check valve	D
10			1	..Poppet	D
11			1	..Spring	D
12				Not used on this model	D
A)	CPL				

Ref. No.	Part No.	Rem.	Qty	Description	Code
100			1	Drum (Page 72)	

Drum

15468-1

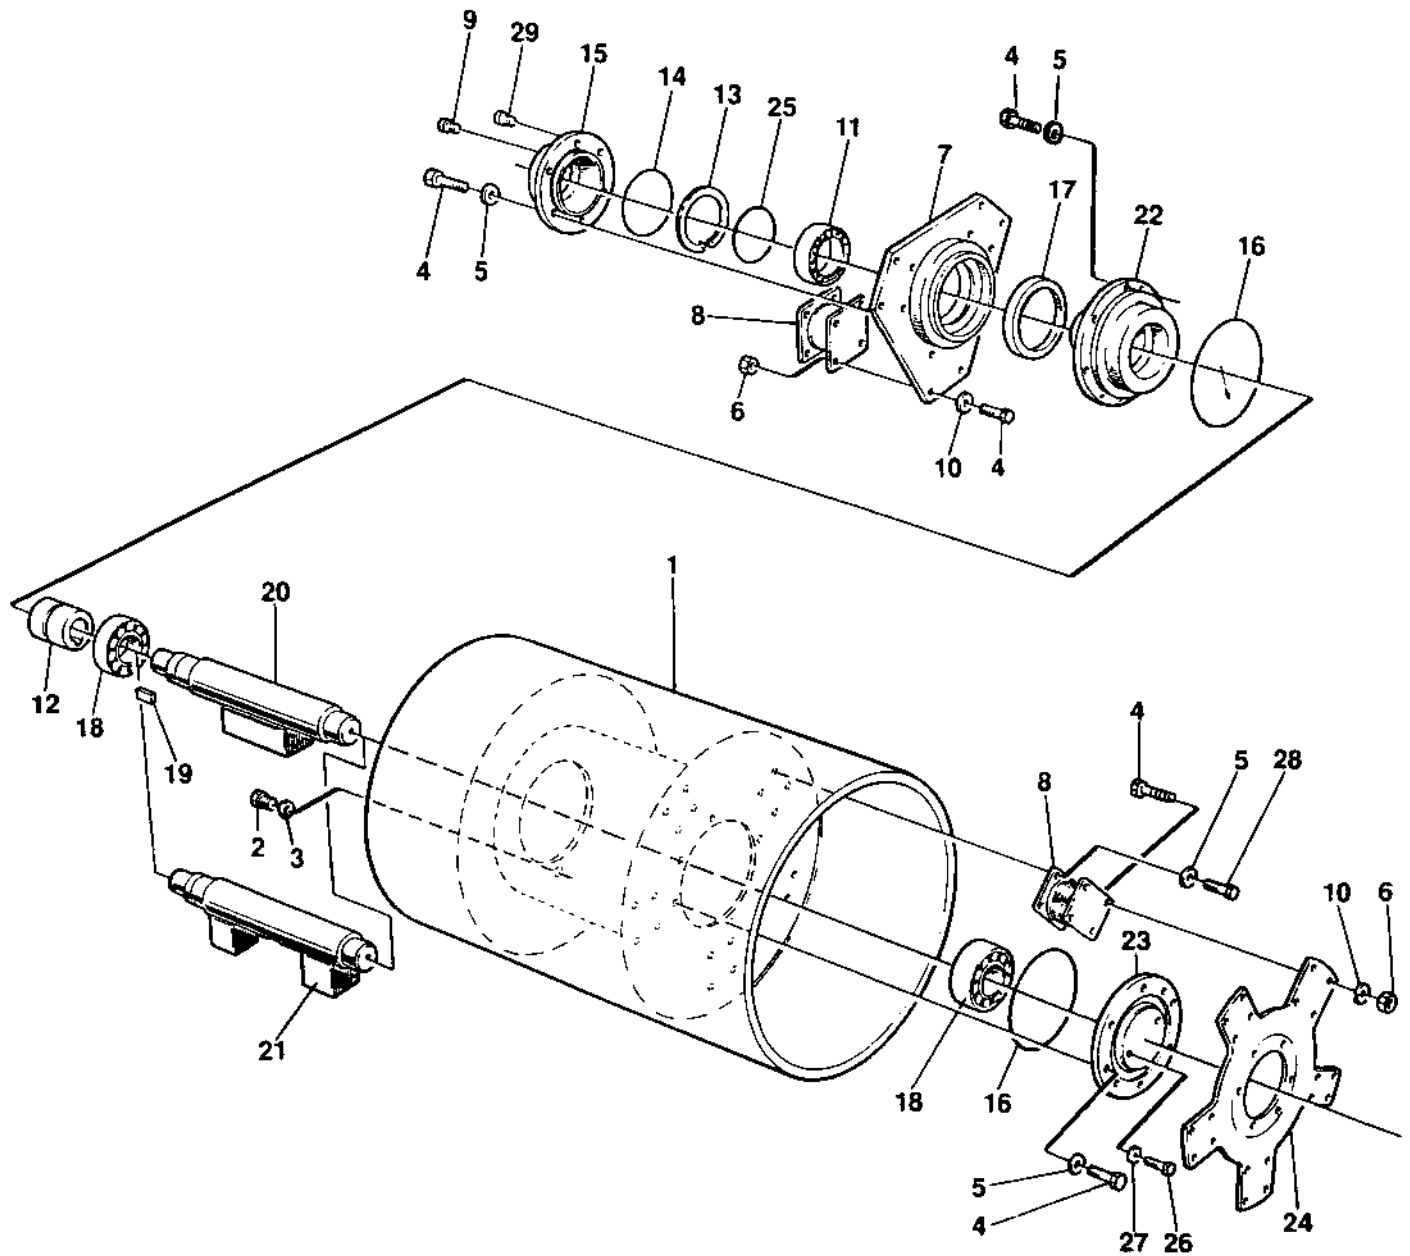


Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357058		1	Drum	D
2	343744		1	Magnetic plug M30	D
3	162017		1	Seal ring M30	D
4	500029		50	Screw M10-1,5x30 8,8	
5	904230		38	Washer 10,5x22x2	
6	586018		32	Lock nut M10	
7	346505		1	Mounting plate	
8	345215		8	Shock absorber	B
9	343490		1	Air breather	D
10	904230		32	Washer 10,5x22x2	
11	111018		1	Ball bearing	D
12	349202	A	1	Coupling	D
	212160		1	.Flexible element	D
13	150028		1	Snap ring Up to 60110978	
	903154		1	Retaining ring From 601X0979	
14	160132		1	O-ring	D
15	358666		1	Adapter	
16	923951		2	O-ring	D
17	163049		1	Sealing	D
18	902300		2	Bearing	D
19	350029		1	Key	
20				Not used on this model	
21	357060		1	Eccentric shaft	
22	357021		1	Bearing housing Up to 60110978	
	358587		1	Bearing housing From 601X0979	
23	357020		1	Bearing housing	
24	357055		1	Drive disc	
25	357114		1	Spacer ring Up to 60110978	
	358689		1	Spacer ring From 601X0979	
26	500044		2	Screw M6x8	
27	904228		2	Washer 6,4x12x1,5	
28	500048		20	Screw M10-1,5x20 8,8 Up to 60111148	
	508028		20	Screw From 601X1149	
29	903287		7	Plug	


A) CPL

Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Engine DEUTZ F2L 1011 Up to 60111642 (Page 76)	
110				Engine DEUTZ F2L 1011 F From 60111643 (Page 78)	
150				Engine ISUZU (Page 82)	
200				Cooling system ISUZU (Page 84)	
300				Intake system DEUTZ Up to 60114542 (Page 86)	
305				Intake system DEUTZ From 60114543 (Page 88)	
350				Intake system ISUZU Up to 60124657 (Page 90)	
355				Intake system ISUZU From 60124658 (Page 92)	
400				Fuel system DEUTZ (Page 94)	
450				Fuel system ISUZU (Page 96)	
500				Exhaust system DEUTZ Up to 60111906 (Page 98)	
510				Exhaust system DEUTZ From 60111907 (Page 100)	
550				Exhaust system ISUZU Up to 60125279 (Page 102)	
555				Exhaust system ISUZU From 60125280 (Page 104)	

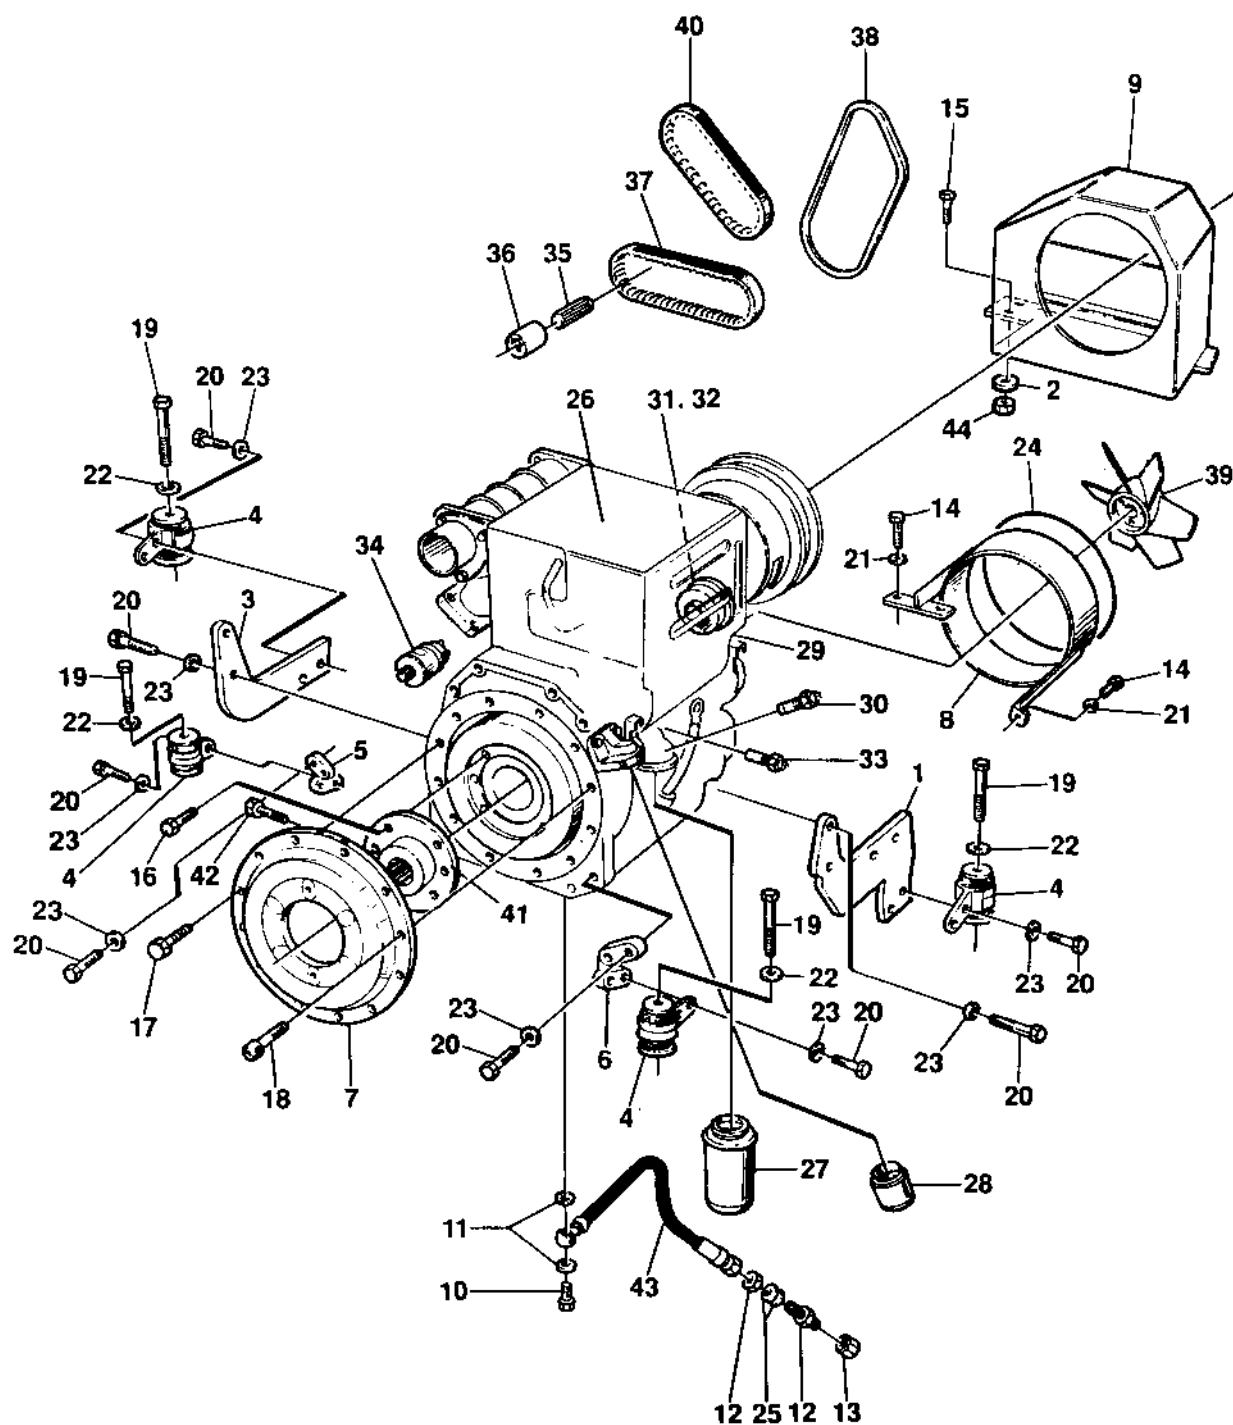

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358370		1	Engine bracket	
2	600006		2	Washer	
3	358371		1	Engine bracket	
4	357506	1	4	Shock absorber Up to 60111204	D
	902902	A	4	Shock absorber From 60111205	D
5	357165		1	Engine bracket	
6	357166		1	Engine bracket	
7	357005		1	Pump bracket	
8	357282		1	Cover	
9	358556		1	Cover	
10	747691		1	Hollow screw	
11	330331		2	Washer 18,2x23,9x1,5	
12	230515		1	Connector	
13	330383		1	Cap hydraulic	
14	500019		3	Screw M8-1,25x16 8,8	
15	508048		2	Screw	
16	500021		6	Screw M8-1,25x25 8,8	
17	508096		9	Screw M10-1,5x25H 8,8	
18	508029		2	Screw M10-1,5x30H 8,8	
19	500122		4	Screw	
20	500274		12	Screw	
21	615043		3	Conical spring washer 8,4x18x2	
22	615045		4	Conical spring washer 13x29	
23	600017		16	Washer	
24	902212		1XL	Edge trim	
25	603013		2	Washer	
26	357000	C	1	Diesel engine	
27	902498		1	.Oil filter	A
28	747487		1	.Fuel filter	A
29	902499	D	1	.Solenoid	D
30	902500		1	.Oil temp guard	D
31	902501		1	.Alternator	C
32	902502		1	..Charging regulator	D
33	747770		1	.Oil pressure sender	D
34	902503		1	.Starter	C
35	902504	E	1	.Splined shaft	
36	902505	E	1	.Splined sleeve	
37	902559	E	1	.Toothed belt	B
38	902521		1	.V-belt	B
39	902548		1	.Fan	
40	903335		1	.Toothed belt	B
41	357003		1	Coupling Up to 60110342	D
	357002		1	Coupling From 60110343	D
42	508095		1	.Screw	
43	357507		1	Hydraulic hose	
44	586003		2	Lock nut M8	

- 1) Included in engine cpl, item 26
A) Stiffer rubber, included in engine cpl, item 26
C) CPL
D) Engine shut-off
E) For vibration pump drive

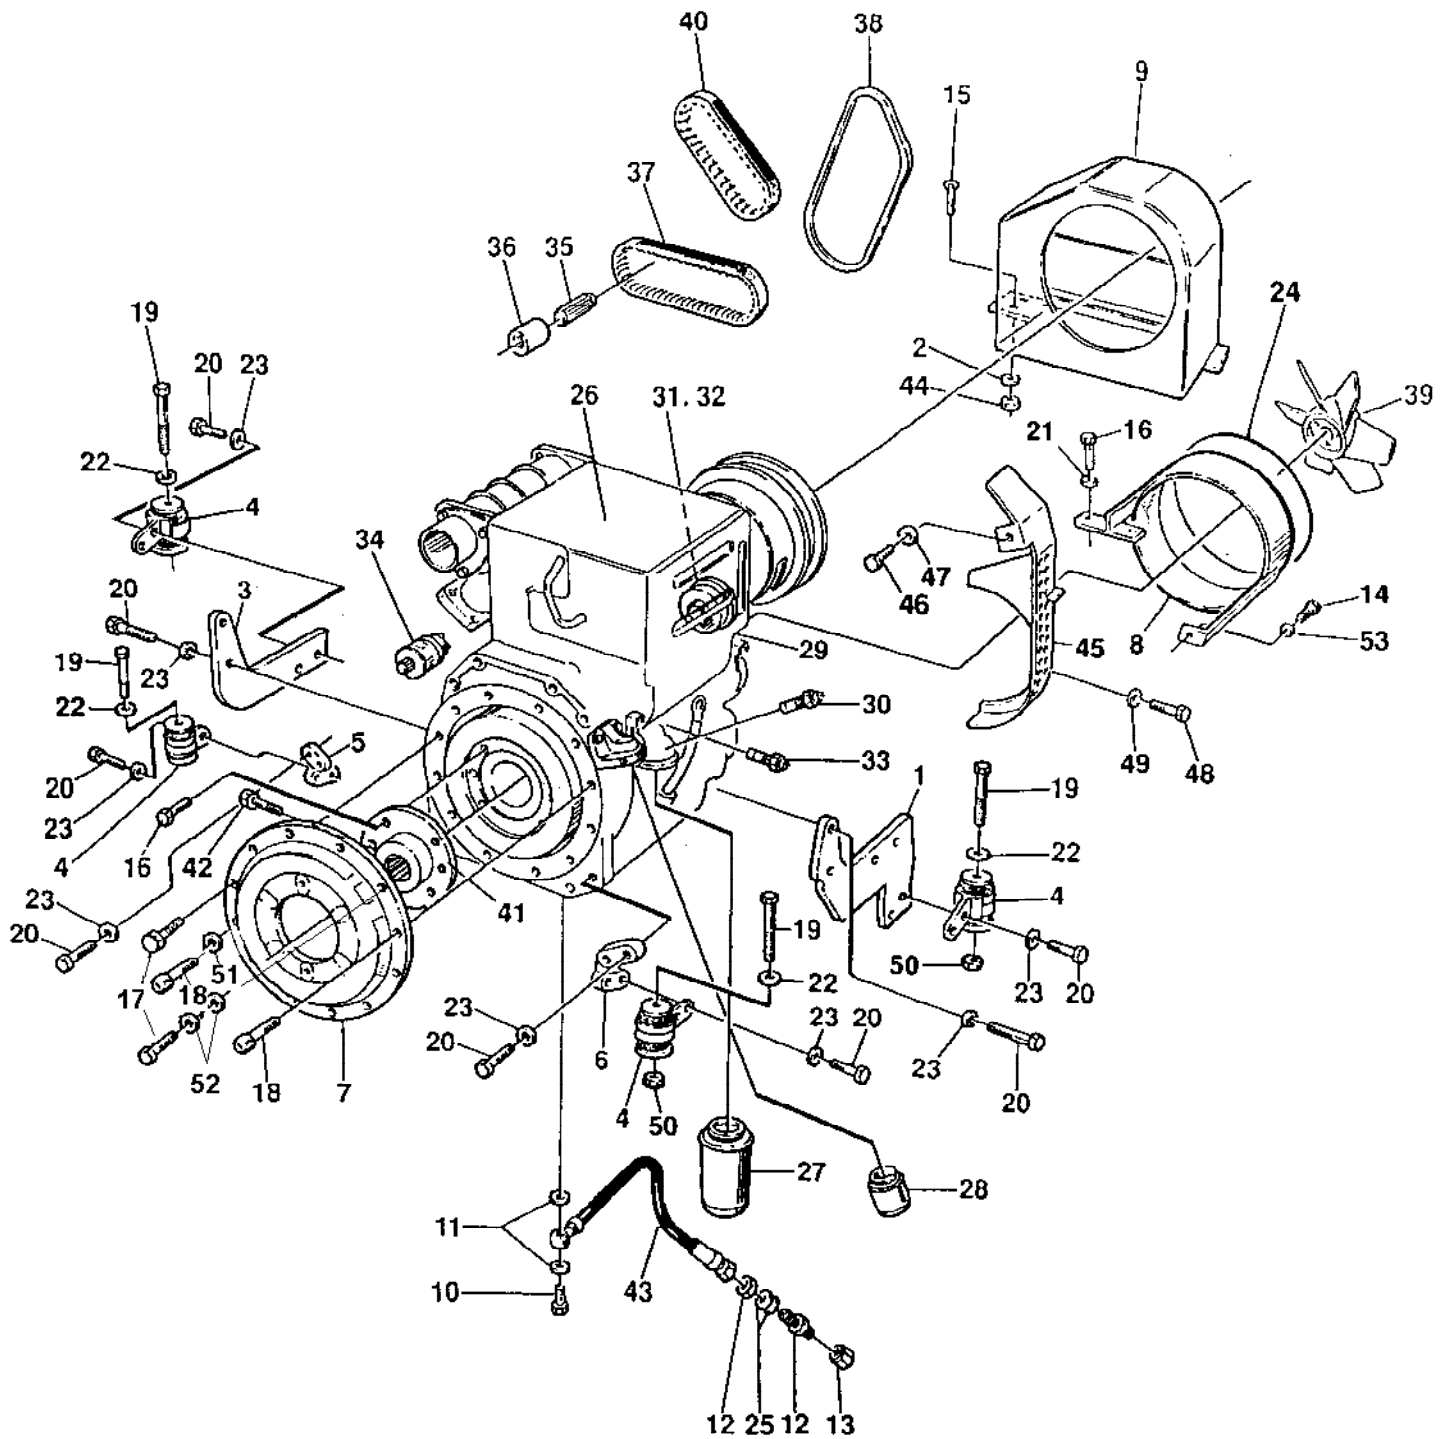

Engine DEUTZ F2L 1011 F

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358370		1	Engine bracket	
2	904640		2	Washer 8,4x22x3	
3	358371		1	Engine bracket	
4	902902	A	4	Shock absorber	D
5	357165		1	Engine bracket	
6	357166		1	Engine bracket	
7	357005		1	Pump bracket	
8	357282		1	Cover Up to 60113599	
	374641		1	Cover From 60113600	
9	370355		1	Cover	
10	904292		1	Hollow screw	
11	330331		2	Washer 18,2x23,9x1,5	
12	230515		1	Connector	
13	330383		1	Cap hydraulic	
14	500053		1	Screw M8-1,25x20 8,8	
15	500047		2	Screw M8-1,25x35 8,8	
16	500021		8	Screw M8-1,25x25 8,8	
17	508096		6	Screw M10-1,5x25H 8,8	
	508029		3	Screw M10-1,5x30H 8,8	
18	508053		2	Screw M10-1,5x35H 8,8	
19	500122		4	Screw	
20	500050		16	Screw	
21	904640		5	Washer 8,4x22x3	
22	904231		4	Washer 13x24x2	
23	600017		16	Washer	
24	902212		1XL	Edge trim	
25	904233		2	Washer 21x36x3	
26	359415		1	Diesel engine, cpl Up to 60115827	
	384697	G	1	Diesel engine, cpl From 60115828	
27	925678		1	.Oil filter	A
28	747487		1	.Fuel filter	A
29	909369	D	1	.Solenoid	D
30	908295		1	.Oil temp guard	D
31	909370		1	.Alternator	C
32	908708		1	..Charging regulator	D
33	909371		1	.Oil pressure sender	D
34	902503	1	1	.Starter	C
	939098	2	1	.Starter	
35	902504	E	1	.Splined shaft	
36	902505	E	1	.Splined sleeve	
37	902559	E	1	.Toothed belt	B
38	902521		1	.V-belt	B
39	902548		1	.Fan	
40	935339	F	1	.Toothed belt kit	B
41	357002		1	Coupling Up to 60113599	D
	357003		1	Coupling From 60113600	D
42	508095		1	.Screw	
43	386133		1	Hydraulic hose	
44	586003		2	Lock nut M8	
45	359869		1	Protection cover	
46	508025		1	Screw	
47	904228		1	Washer 6,4x12x1,5	
48	500185		2	Screw M6-1x14 8,8	

1) Valid for engines up to SN 608696.

2) Valid for engines from SN 608697.


A) Included in item 26

D) Engine shut-off


E) For vibration pump drive

F) Belt and roller

G) Certified

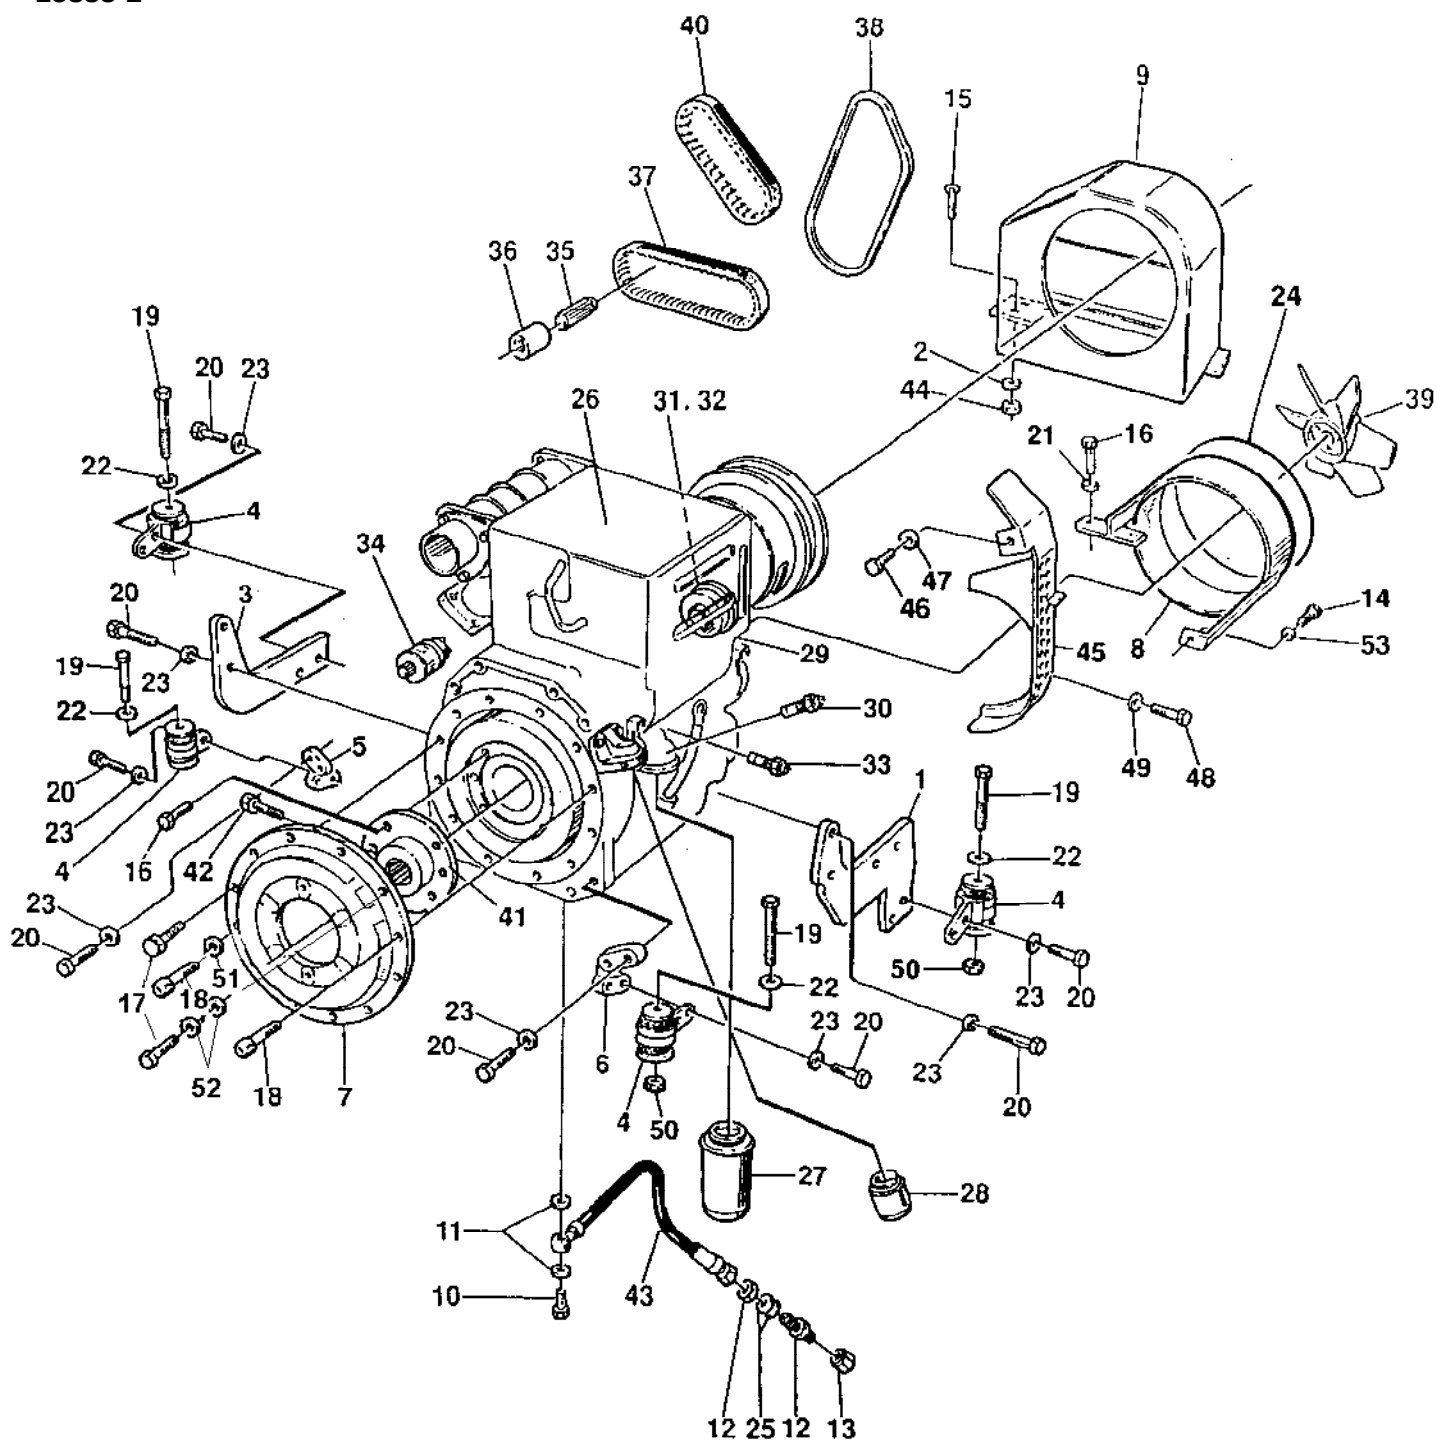


Ref. No.	Part No.	Rem.	Qty	Description	Code
49	904228		2	Washer 6,4x12x1,5	
50	586019		2	Lock nut M12	
51	904557		2	Washer 10,5x22x4	
52	904230		2	Washer 10,5x22x2	
53	904229		1	Washer 8,4x16x1,5	

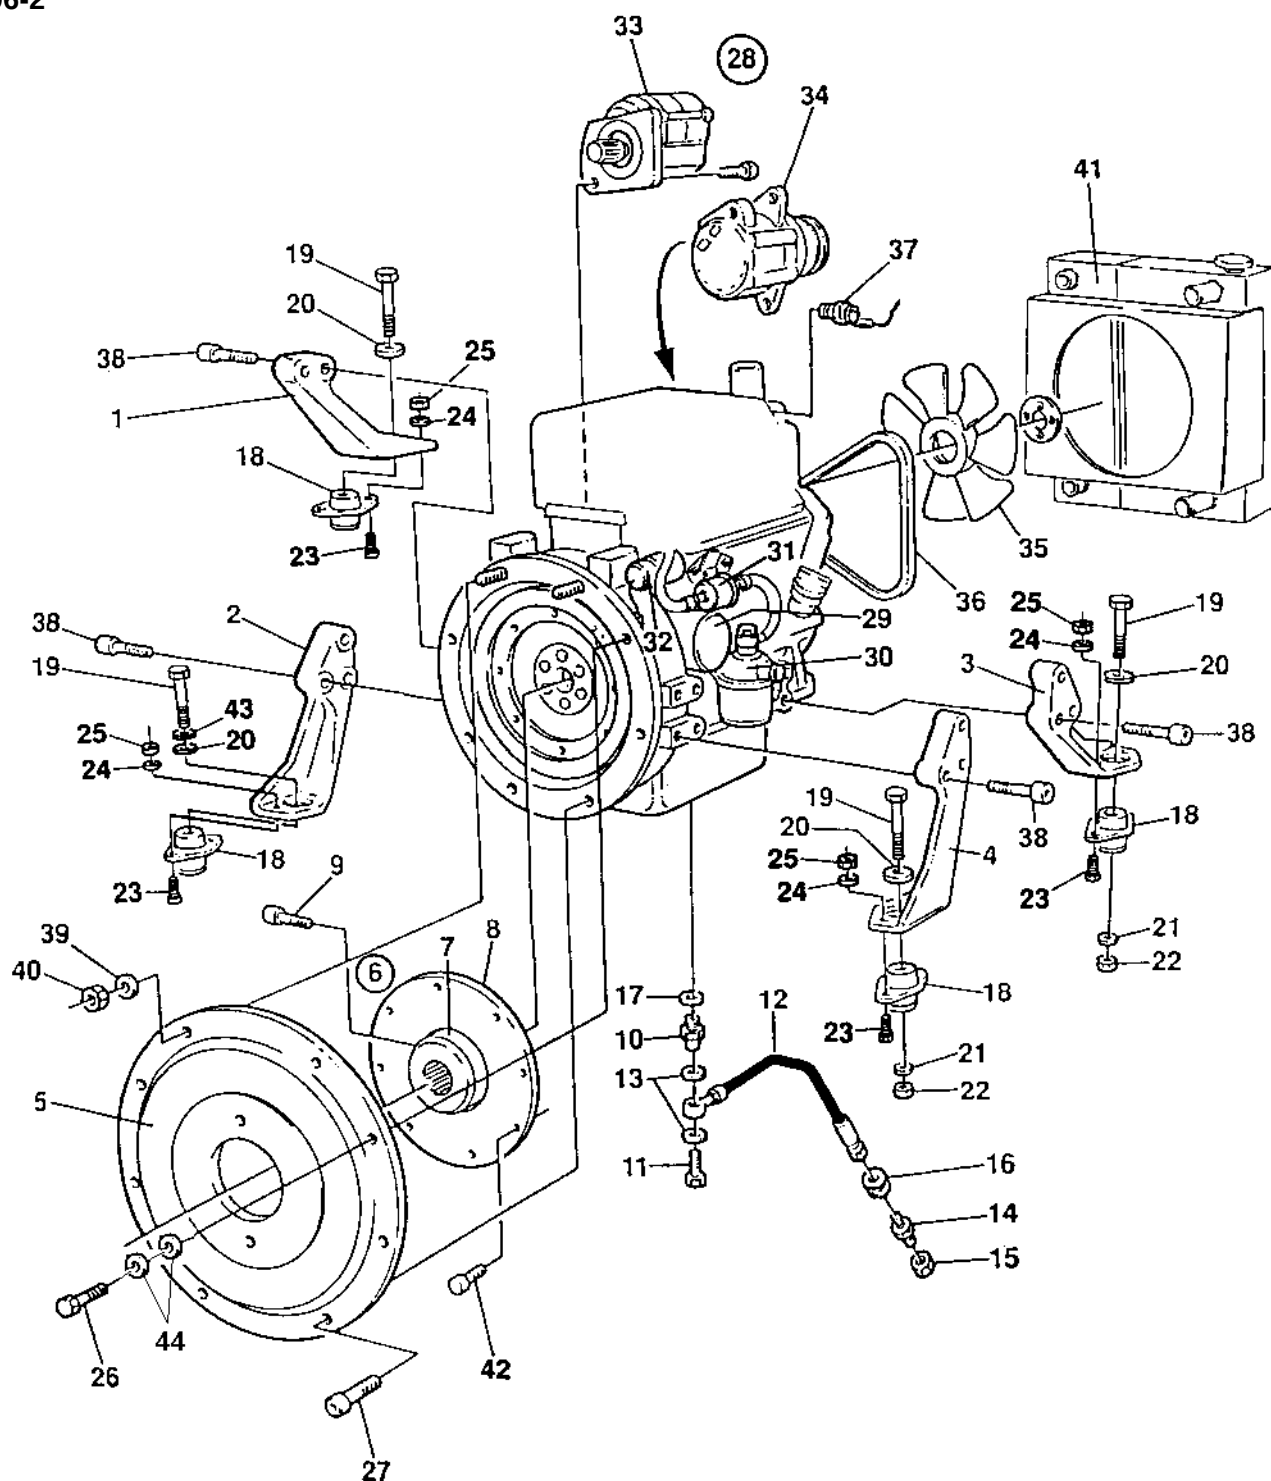


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	372143		1	Engine bracket Up to 60126604	
	386477		1	Engine bracket From 60126605	
2	372142		1	Engine bracket	
3	372141		1	Engine bracket	
4	372140		1	Engine bracket	
5	370083		1	Pump bracket	
6		A	1	Coupling	
7	902844		1	.Hub	
8	903624		1	.Flange	D
9	508095		1	.Screw	
10	370142		1	Nipple	
11	904292		1	Hollow screw	
12	386133		1	Hydraulic hose	
13	330331		2	Washer 18,2x23,9x1,5	
14	230515		1	Connector	
15	330383		1	Cap hydraulic	
16	904233		2	Washer 21x36x3	
17	330332		1	Washer	
18	900478		4	Shock absorber	D
19	500117		4	Screw M12x80H 8,8	
20	903912		4	Washer	
21	904231		2	Washer 13x24x2	
22	586019		2	Lock nut M12	
23	500029		8	Screw M10-1,5x30 8,8	
24	904230		8	Washer 10,5x22x2	
25	586018		8	Lock nut M10	
26	508029		1	Screw M10-1,5x30H 8,8 Up to 60126604	
	508053		2	Screw M10-1,5x35H 8,8 From 60126605	
27	508096		5	Screw M10-1,5x25H 8,8 Up to 60126604	
	508096		3	Screw M10-1,5x25H 8,8 From 60126605	
	508029		1	Screw M10-1,5x30H 8,8 From 60126605	
28	370109		1	Diesel engine	
	384699	D	1	Diesel engine	
	908411		3	.Glow plug	
	937060		1	.Oil pressure switch	
29	908404		1	.Oil filter	A
30	908405		1	.Fuel filter	A
31	903704		1	.Fuel pump	
32	903706		1	.Stop solenoid	D
33	908410		1	.Starter	C
34	908412		1	.Alternator PCD = 65mm	C
	939494		1	.Alternator PCD = 70 mm	
35	908653		1	.Fan	
36	908413		1	.Fan belt POC = 890 mm, HM	B
	939495		1	.Fan belt POC = 915 mm, A-type	
37	903707		1	Thermo sensor	
38	508053		11	Screw M10-1,5x35H 8,8 Up to 60126604	
	902059		12	Screw From 60126605	
39	904557	B	1	Washer 10,5x22x4	
	904637	C	1	Washer 10x18x2	
40	586018		2	Lock nut M10	
41				Cooling system ISUZU (Page 84)	
42	500021		8	Screw M8-1,25x25 8,8	
43	904703		1	Washer 13x24x4	
44	904230		2	Washer 10,5x22x2	

- A) CPL
B) Left
C) Right
D) Certified

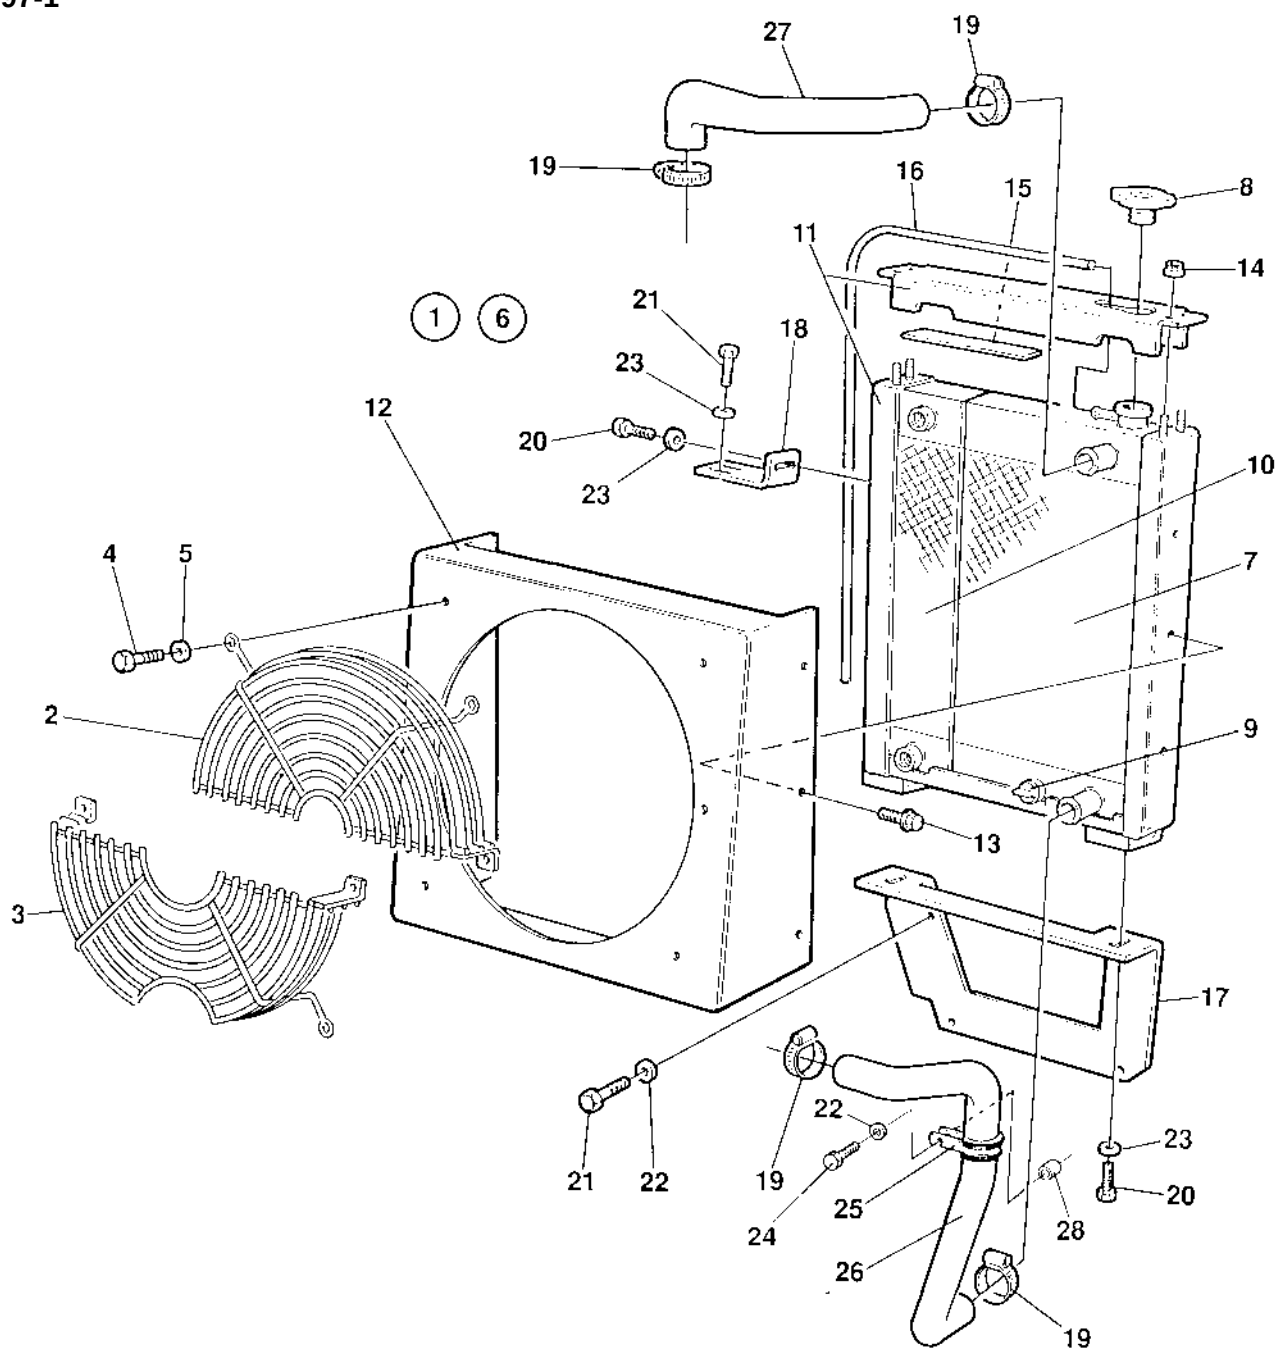


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370360	A	1	Radiator	
2	370139	B	1	.Fan guard	D
3	370323	C	1	.Fan guard	D
4	500053		6	.Screw M8-1,25x20 8,8	
5	904229		6	.Washer 8,4x16x1,5	
6			1	.Radiator	
7	908629		1	..Water radiator	C
8	908630		1	...Cap	D
9			1	...Plug	D
10	908631		1	..Oil cooler	
11	908633		1	..Frame	C
12	908634		1	..Cover	
13	902989		6	..Screw	
14	570102		4	..Nut M8	
15	908632		1	..Rubber strip	
16			1	..Plastic hose	
17	370140		1	Radiator bracket	
18	370141		1	Radiator bracket	
19	313008		4	Hose clamp	D
20	500053		4	Screw M8-1,25x20 8,8	
21	500021		5	Screw M8-1,25x25 8,8	
22	904229		4	Washer 8,4x16x1,5	
23	904640		5	Washer 8,4x22x3	
24	508056		1	Screw M8x40	
25	921118		1	Clamp	
26	370138		1	Radiator hose	D
27	370137		1	Radiator hose	D
28	343748		1	Spacer sleeve	

- A) CPL
B) Upper
C) Lower

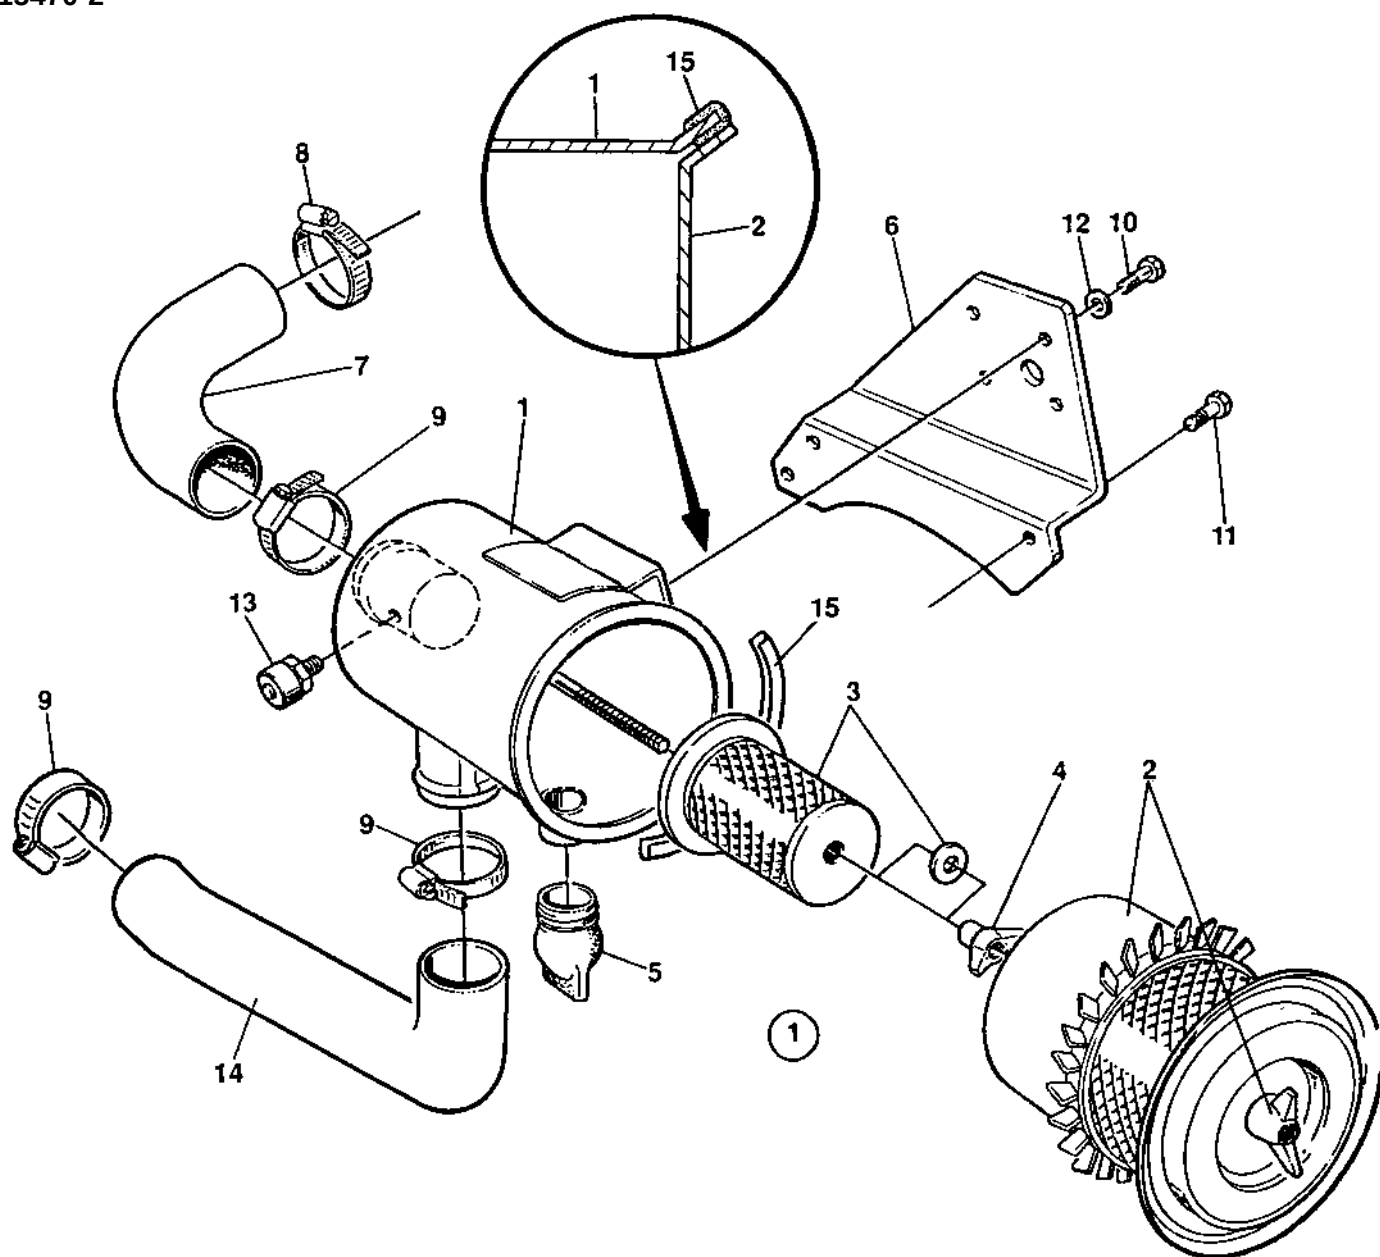

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357006	A	1	Air cleaner	
2	902198		1	.Main element	A
	903384	B	1	..Wing nut	
3	902199		1	.Safety element	A
	909491	1	1	..Seal	
4	903384		1	.Wing nut	
5	902201		1	.Vacuator valve	D
6	357435		1	Holder plate	
7	357430		1	Air inlet hose	D
8	313022		1	Hose clamp	
9	313023		3	Hose clamp	
10	500053		4	Screw M8-1,25x20 8,8	
11	500509		3	Screw	
12	615043		4	Conical spring washer 8,4x18x2	
13	902168		1	Indicator	D
14	357433		1	Air inlet hose	D
15	909490		1	Seal	


- 1) A seal is included with each safety element & shall only be used when item 4 is made of metal
A) CPL
B) Plastic

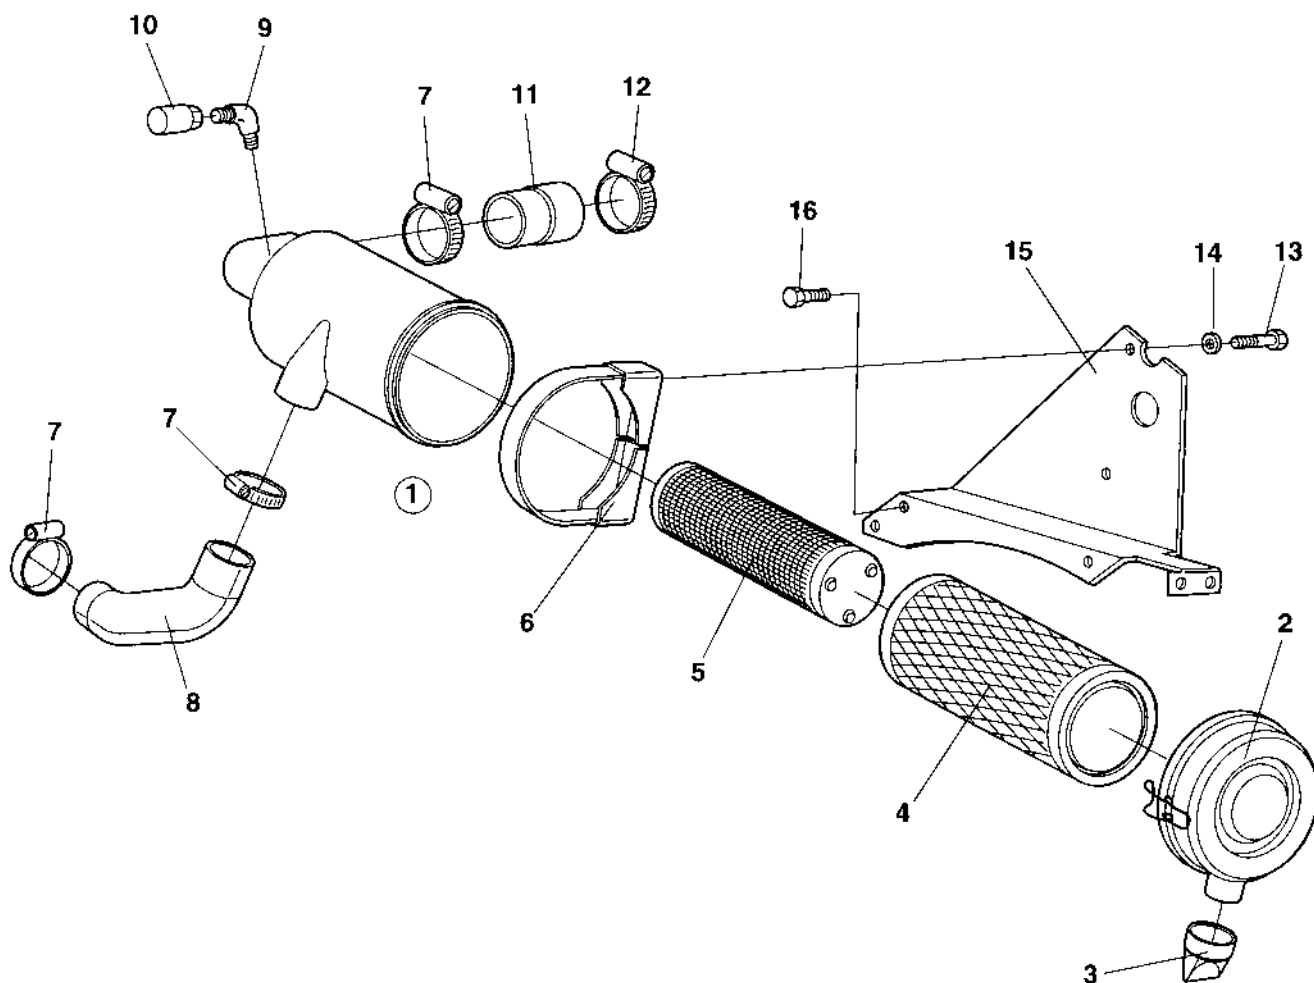

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	380290	1	1	Air cleaner, cpl	
	385712		1	Air cleaner, cpl	
2	380292	2	1	.Service cover	
	385713		1	.Service cover	
3	380293		1	.Vacuator valve	D
4	380295		1	.Main filter	A
5	380294		1	.Safety filter	A
6	380296		1	Holder	
7	313023		3	Hose clamp	
8	380297		1	Air inlet hose	D
9				Not used on this model	D
10	902168		1	Indicator	D
11	380299		1	Air inlet hose	
12	313022		1	Hose clamp	
13	500022		2	Screw M8-1,25x30 8,8	
14	904640		2	Washer 8,4x22x3	
15	380300		1	Bracket	
16	500509		3	Screw	


1) Replaced as Spare Part by PN 385712.

2) Replaced as Spare Part by PN 385713.

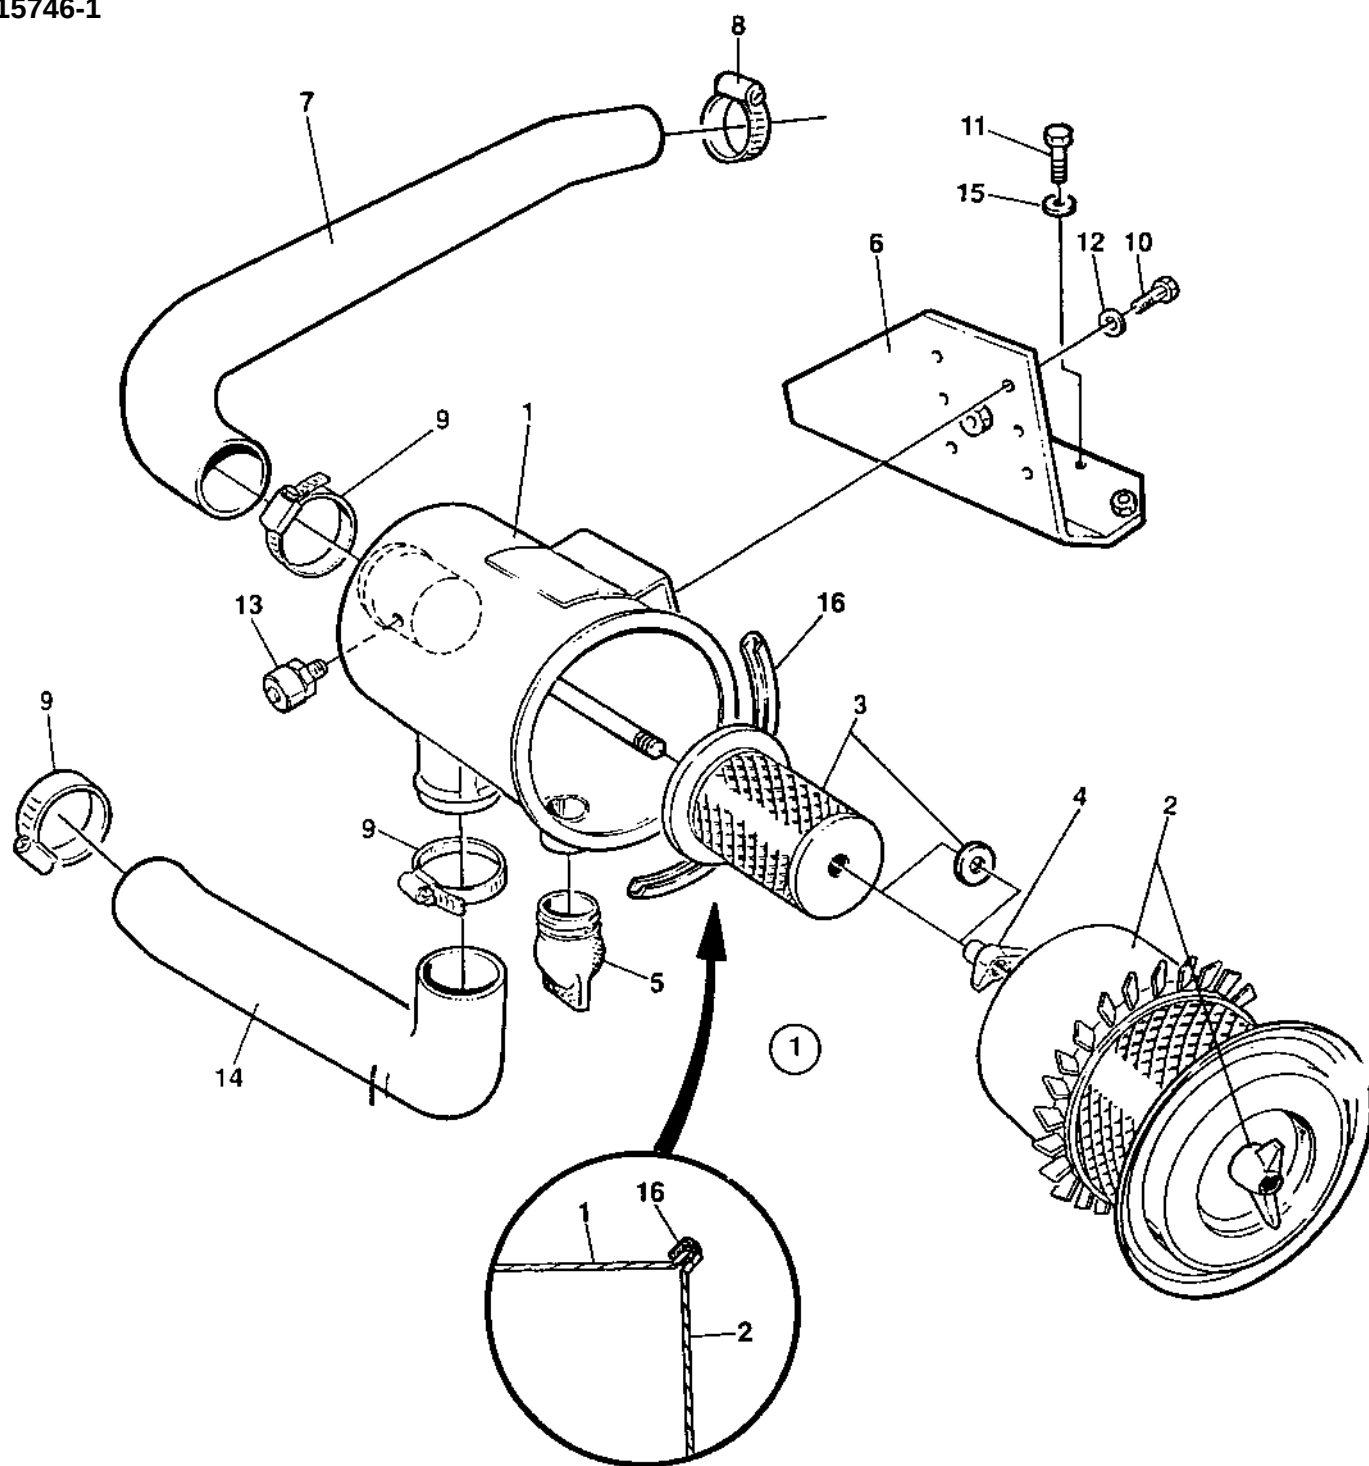

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357006	A	1	Air cleaner	
2	902198		1	.Main element	A
	903384	B	1	..Wing nut	
3	902199		1	.Safety element	A
	909491	1	1	..Seal	
4	903384	B	1	.Wing nut	
5	902201		1	.Vacuator valve	D
6	370133		1	Holder plate	
7	370108		1	Air inlet hose	D
8	313009		1	Hose clamp	
9	313023		3	Hose clamp	
10	500053		4	Screw M8-1,25x20 8,8	
11	500048		4	Screw M10-1,5x20 8,8	
12	904229		4	Washer 8,4x16x1,5	
13	499497		1	Indicator	D
14	370134		1	Air inlet hose	D
15	904230		4	Washer 10,5x22x2	
16	909490		1	Seal	


- 1) A seal is included with each safety element & shall only be used when item 4 is made of metal
A) CPL
B) Plastic

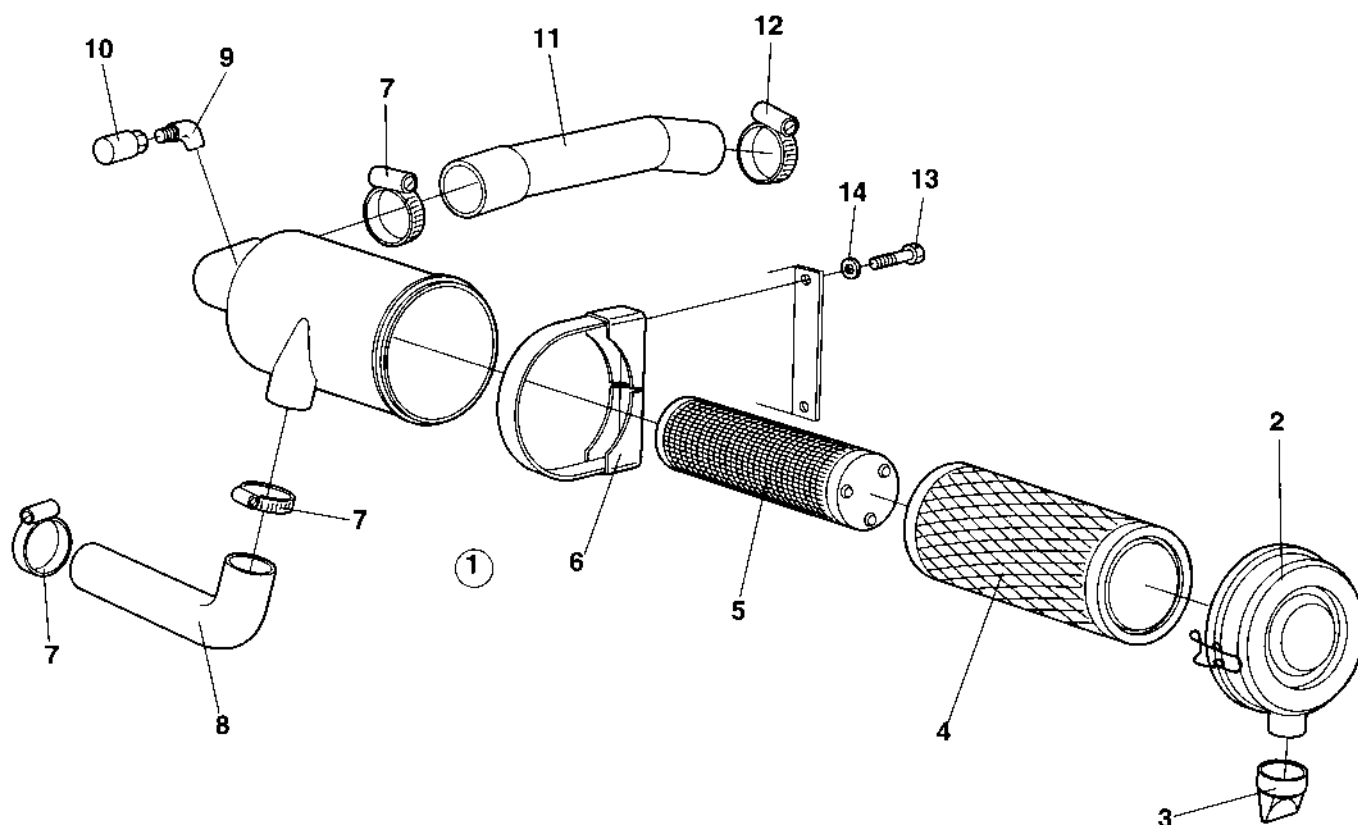

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	380290	1	1	Air cleaner, cpl	
	385712		1	Air cleaner, cpl	
2	380292	2	1	.Service cover	
	385713		1	.Service cover	
3	380293		1	.Vacuator valve	D
4	380295		1	.Main filter	A
5	380294		1	.Safety filter	A
6	380296		1	Holder	
7	313023		3	Hose clamp	
8	380602		1	Air inlet hose	D
9	891228		1	Adapter	
10	499497		1	Indicator	D
11	380601		1	Air inlet hose	
12	313009		1	Hose clamp	
13	500022		2	Screw M8-1,25x30 8,8	
14	904640		2	Washer 8,4x22x3	

1) Replaced as Spare Part by PN 385712.

2) Replaced as Spare Part by PN 385713.

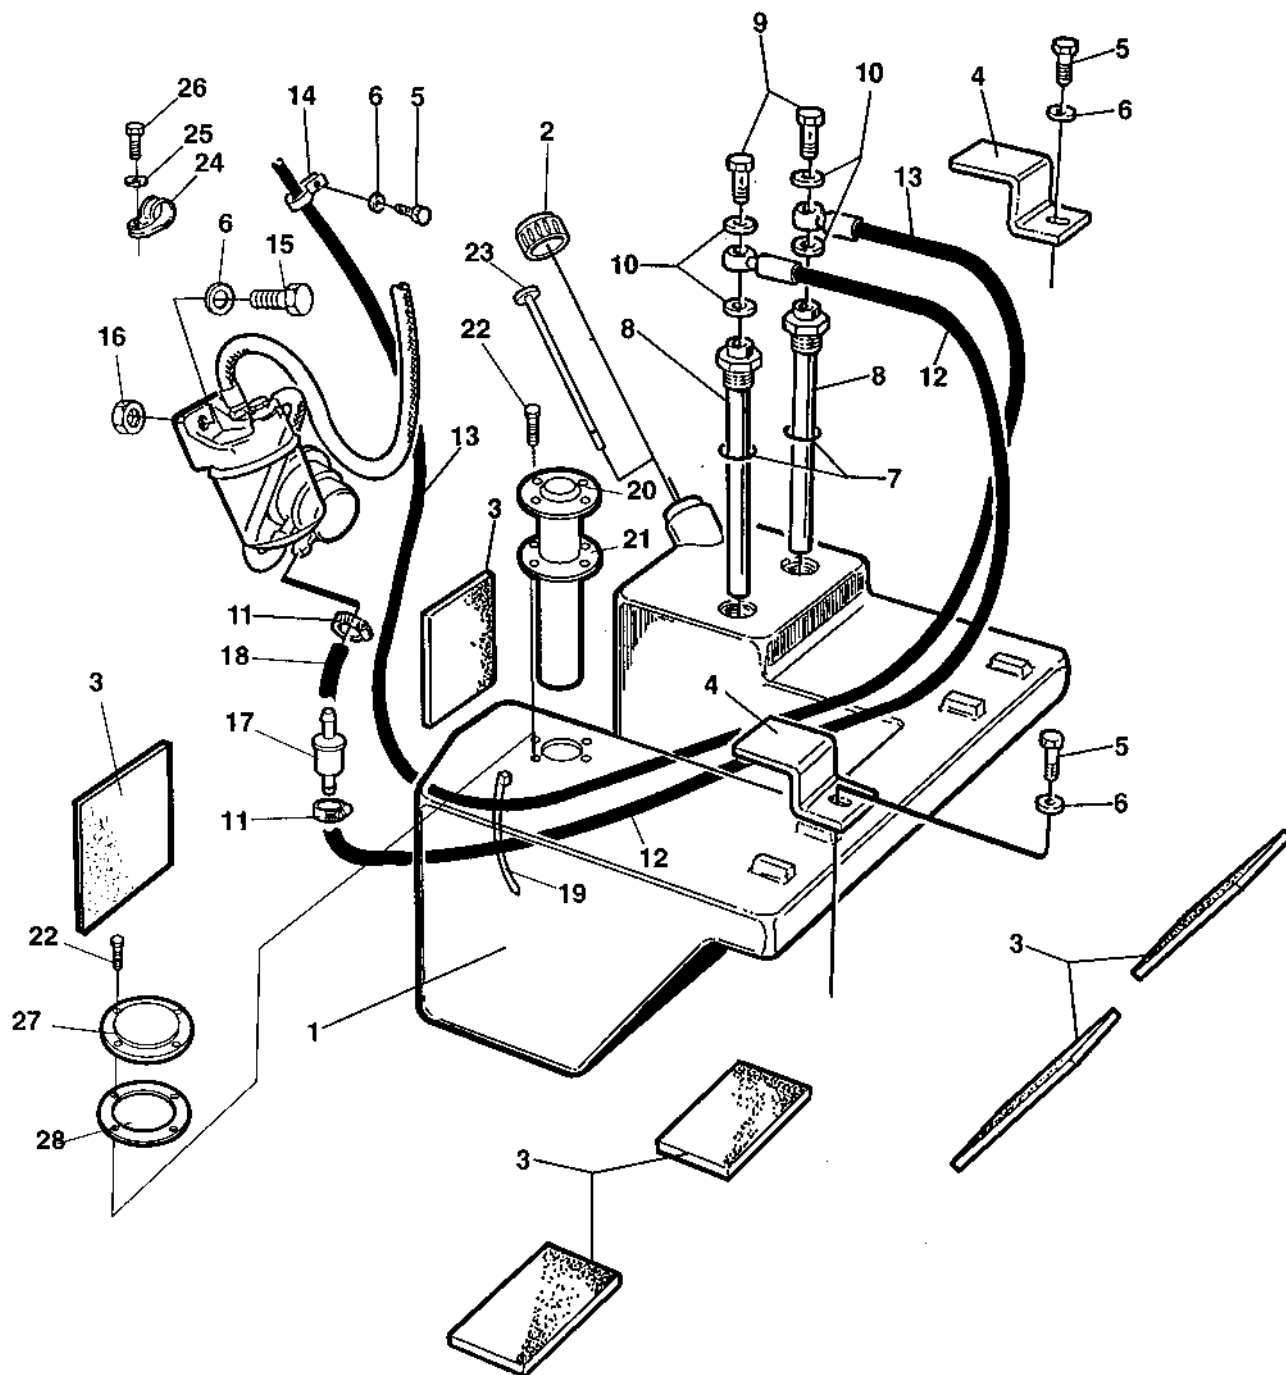


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357016		1	Fuel tank Up to 60115905	
	384726		1	Fuel tank, cpl From 60115906	
2	902167		1	Fuel tank cap Up to 60112979	
	928922		1	.Key Marked "510" Up to 60112979	
	373461		1	Cap From 60112980	D
	902866		1	.Key Marked "455" From 60112980	D
	380459	F	1	Cap From 60112980	
3	357459		6	Rubber cloth	
4	357466		2	Holder plate	
5	500053		3	Screw M8-1,25x20 8,8	
6	904640		5	Washer 8,4x22x3	
7	160012		2	O-ring	D
8	357468		2	Fuel pipe	
9	330171		2	Hollow screw	
10	747282		4	Copper washer	
11	313001		3	Hose clamp	
12	902893		1	Fuel hose	
13	357470		1	Fuel hose	
14	921072		1	Clamp	
15	500021		2	Screw M8-1,25x25 8,8	
16	570005		2	Nut M8	
17	929322		1	Fuel strainer	A
18	904984	C	1XL	Fuel hose	D
19	925802		N	Cable ties L=142 mm	
20	348923	E	1	Level sender	D
21	348924		1	.Gasket	D
22	903236	1	5	Screw	
23	358355	E	1	Dipstick	
24	904780		1	Hose clamp	
25	904229		1	Washer 8,4x16x1,5	
26	500053		1	Screw M8-1,25x20 8,8	
27	372627	1	1	Cover	
28	348924	1	1	Gasket	D

1) Included in Fuel tank, cpl PN 384726.

C) L=200 mm

E) Option

F) Italy market

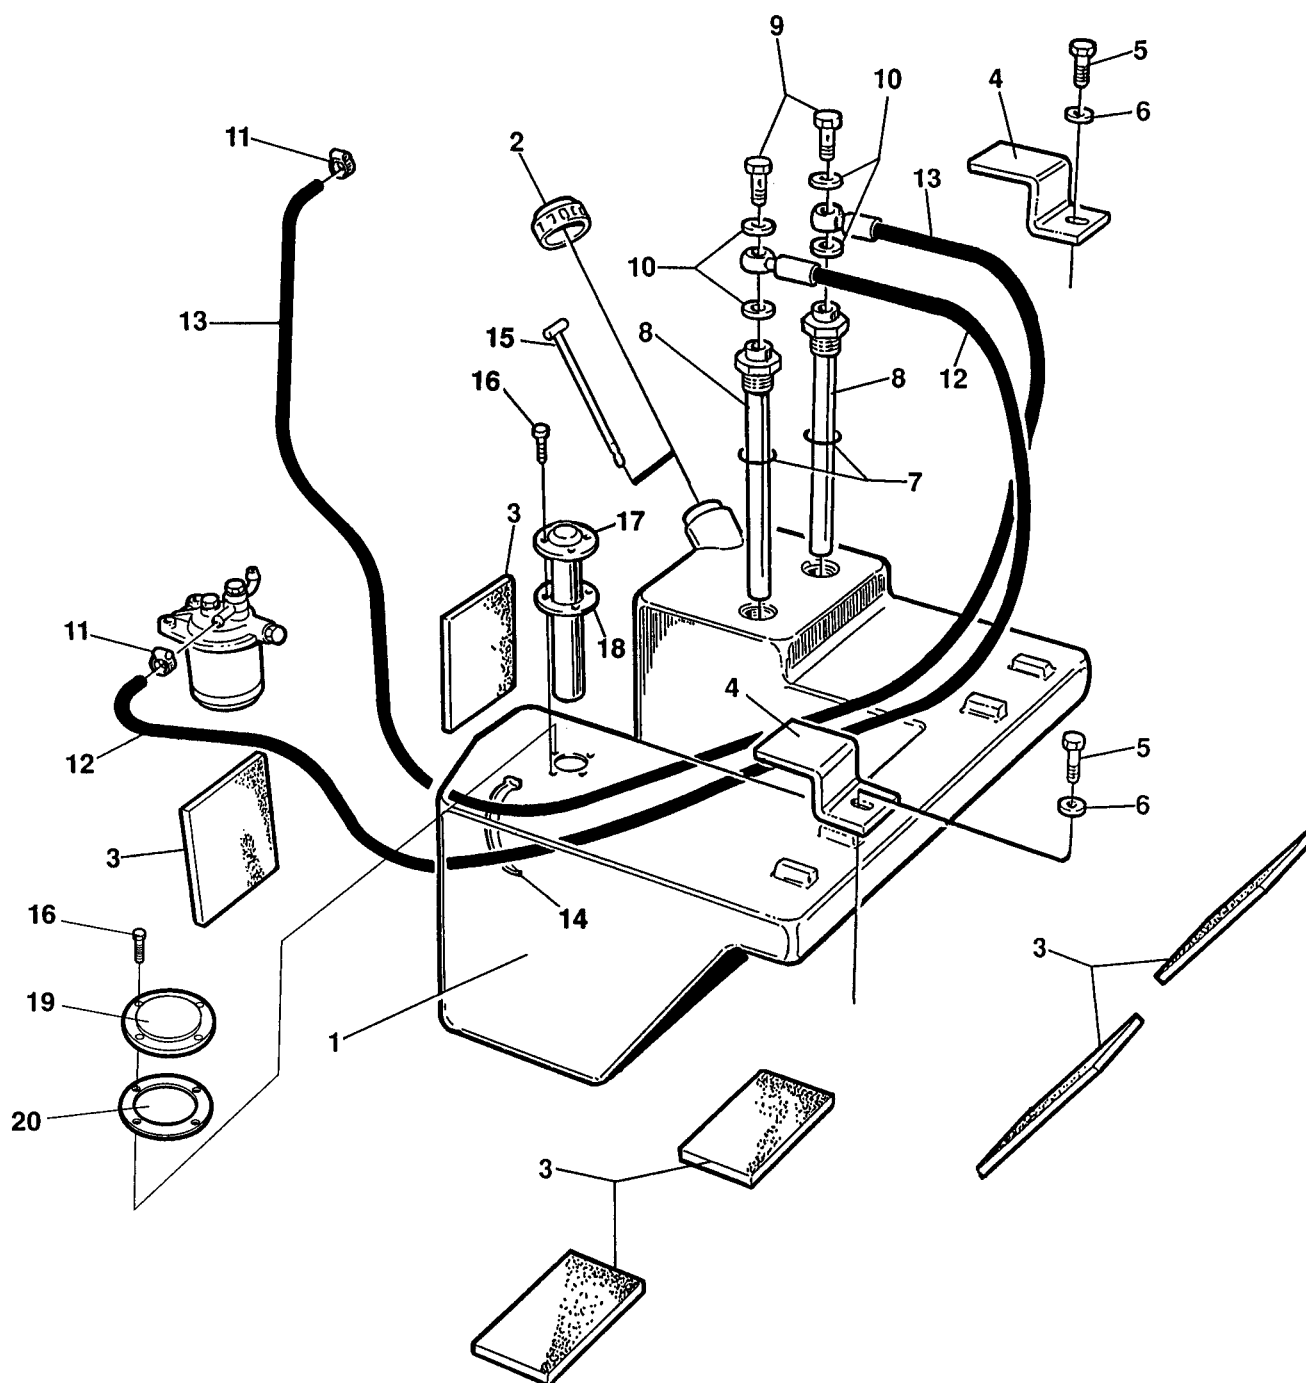


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357016		1	Fuel tank Up to 601X5905	
	384726		1	Fuel tank, cpl From 601X5906	
2	902167		1	Fuel tank cap Up to 60122979	
	928922		1	.Key Marked "510" Up to 60122979	
	373461		1	Cap From 601X2980	D
	902866		1	.Key Marked "455" From 601X2980	D
	380459	E	1	Cap From 601X2980	
3	357459		6	Rubber cloth	
4	357466		2	Holder plate	
5	500053		2	Screw M8-1,25x20 8,8	
6	615043		2	Conical spring washer 8,4x18x2	
7	160012		2	O-ring	D
8	357468		2	Fuel pipe	
9	330171		2	Hollow screw	
10	747282		4	Copper washer	
11	313001		2	Hose clamp	
12	357469		1	Fuel hose	
13	357470		1	Fuel hose	
14	925802		N	Cable ties L=142 mm	
15	358355	D	1	Dipstick	
16	903236	1	5	Screw	
17	348923	D	1	Level sender	D
18	348924		1	.Gasket	D
19	372627	1	1	Cover	
20	348924	1	1	Gasket	D

1) Included in Fuel tank, cpl PN 384726.


D) Option

E) Italy market

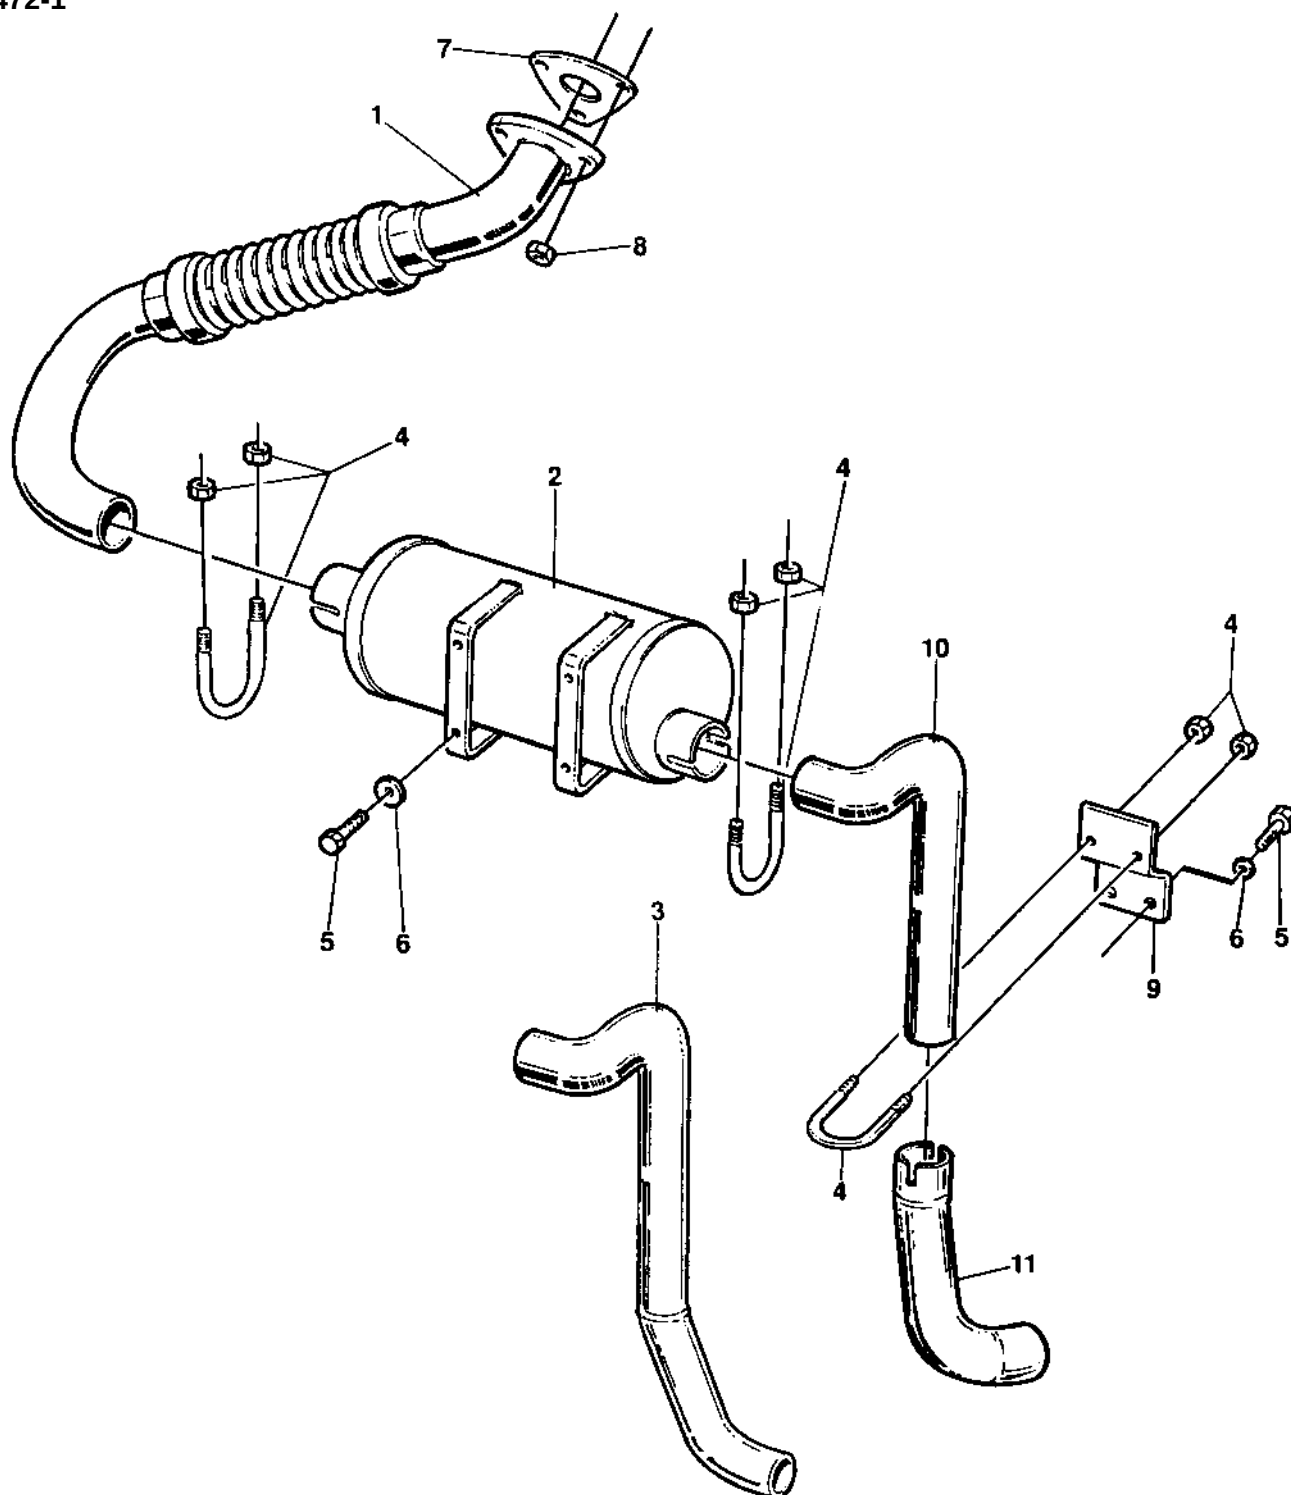


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358957		1	Exhaust pipe Up to 60111054	
	370228		1	Exhaust pipe From 60111055	
2	357010		1	Muffler	D
3		1	1	Exhaust pipe	D
4	313086		3	Clamp	
5	500053		6	Screw M8-1,25x20 8,8	
6	615043		6	Conical spring washer 8,4x18x2	
7	902094		1	Gasket	D
8	570005		3	Nut M8	
9	358394		1	Holder plate	
10	358393		1	Exhaust pipe	
11	358865		1	Exhaust pipe	

1) Replaced by item 4, 9, 10 and 11

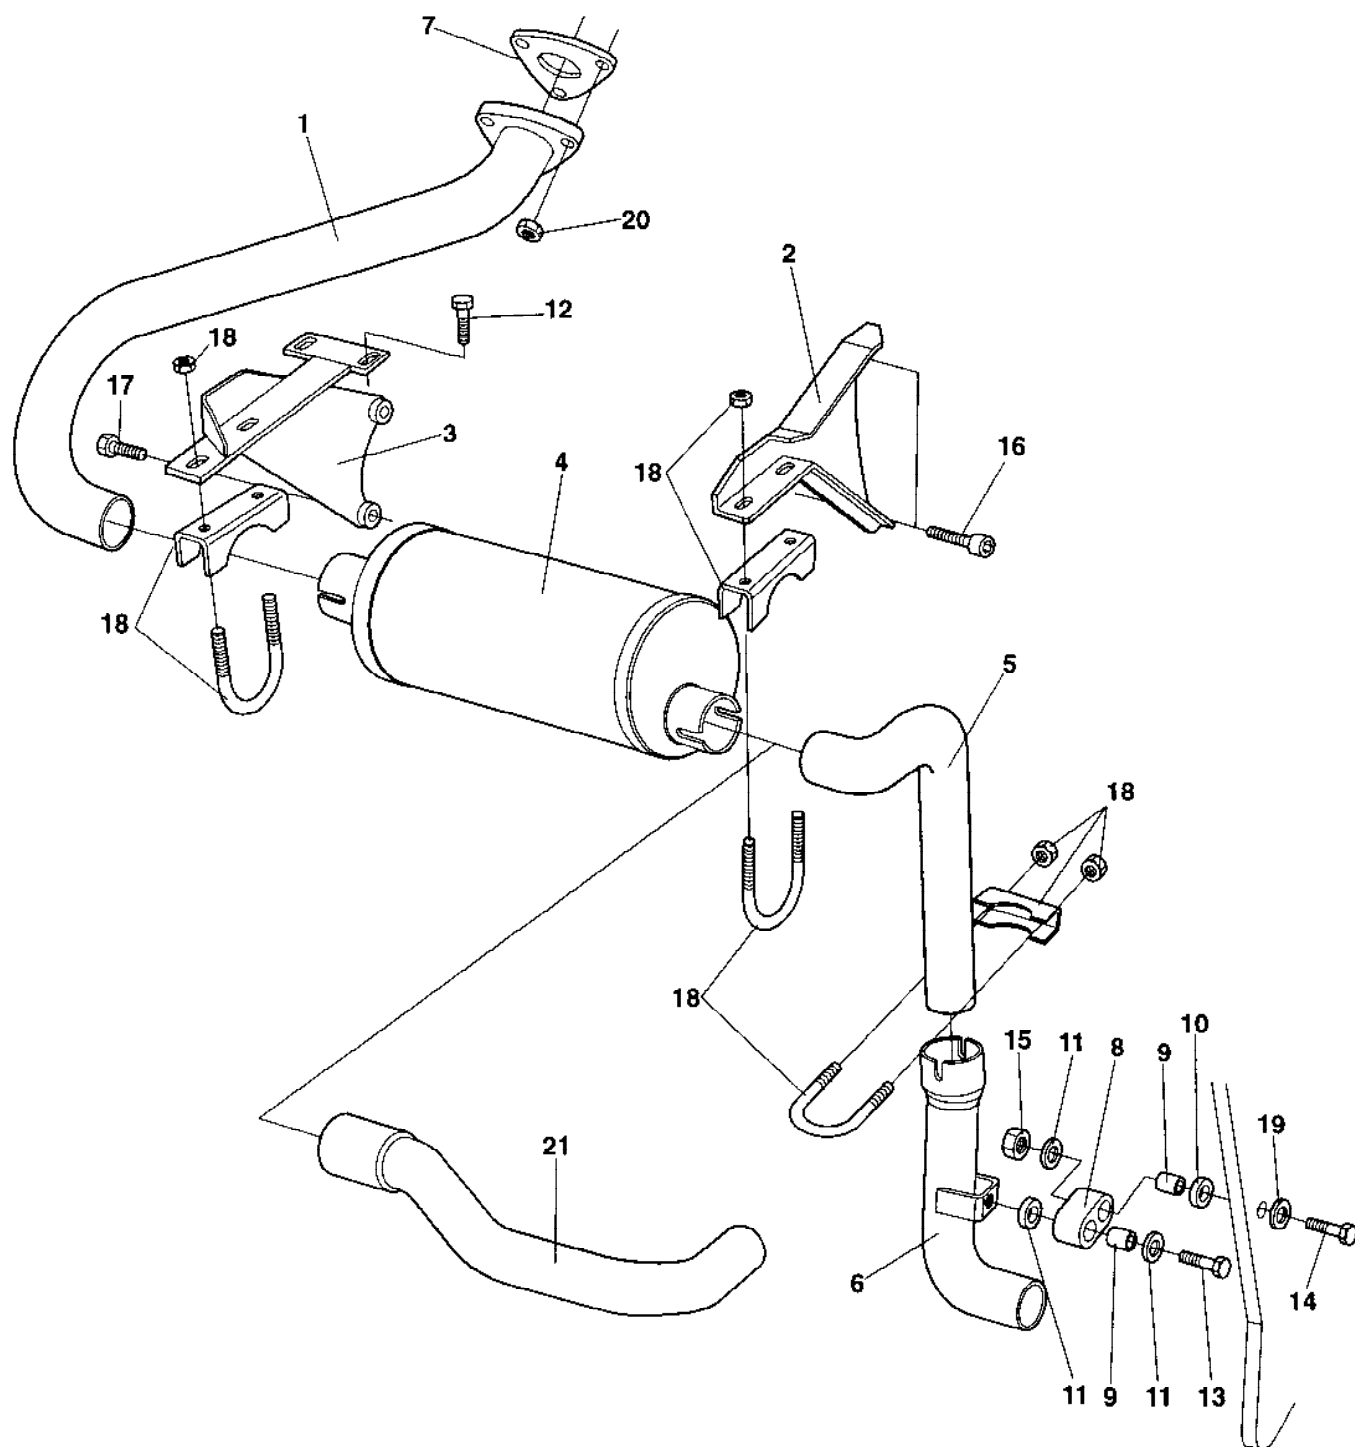


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	359161		1	Exhaust pipe	
2	359119		1	Holder plate	
3	359122		1	Holder plate	
4	359163		1	Muffler	D
5	358393		1	Exhaust pipe	
6	359173		1	Exhaust pipe	
7	902094		1	Gasket	D
8	359175		1	Shock absorber	
9	359176		2	Spacer	
10	603009		1	Washer	
11	601003		3	Washer 8,4x25x2	
12	500021		2	Screw M8-1,25x25 8,8	
13	500067		1	Screw	
14	500189		1	Screw	
15	586003		1	Lock nut M8	
16	508029		2	Screw M10-1,5x30H 8,8	
17	508025		2	Screw	
18	313086		3	Clamp	
19	600006		1	Washer	
20	570005		3	Nut M8	
21	381438	1	1	Exhaust pipe	

1) Can replace item 5, 6, 8-11, 13-15, 19 and one piece of item 18.

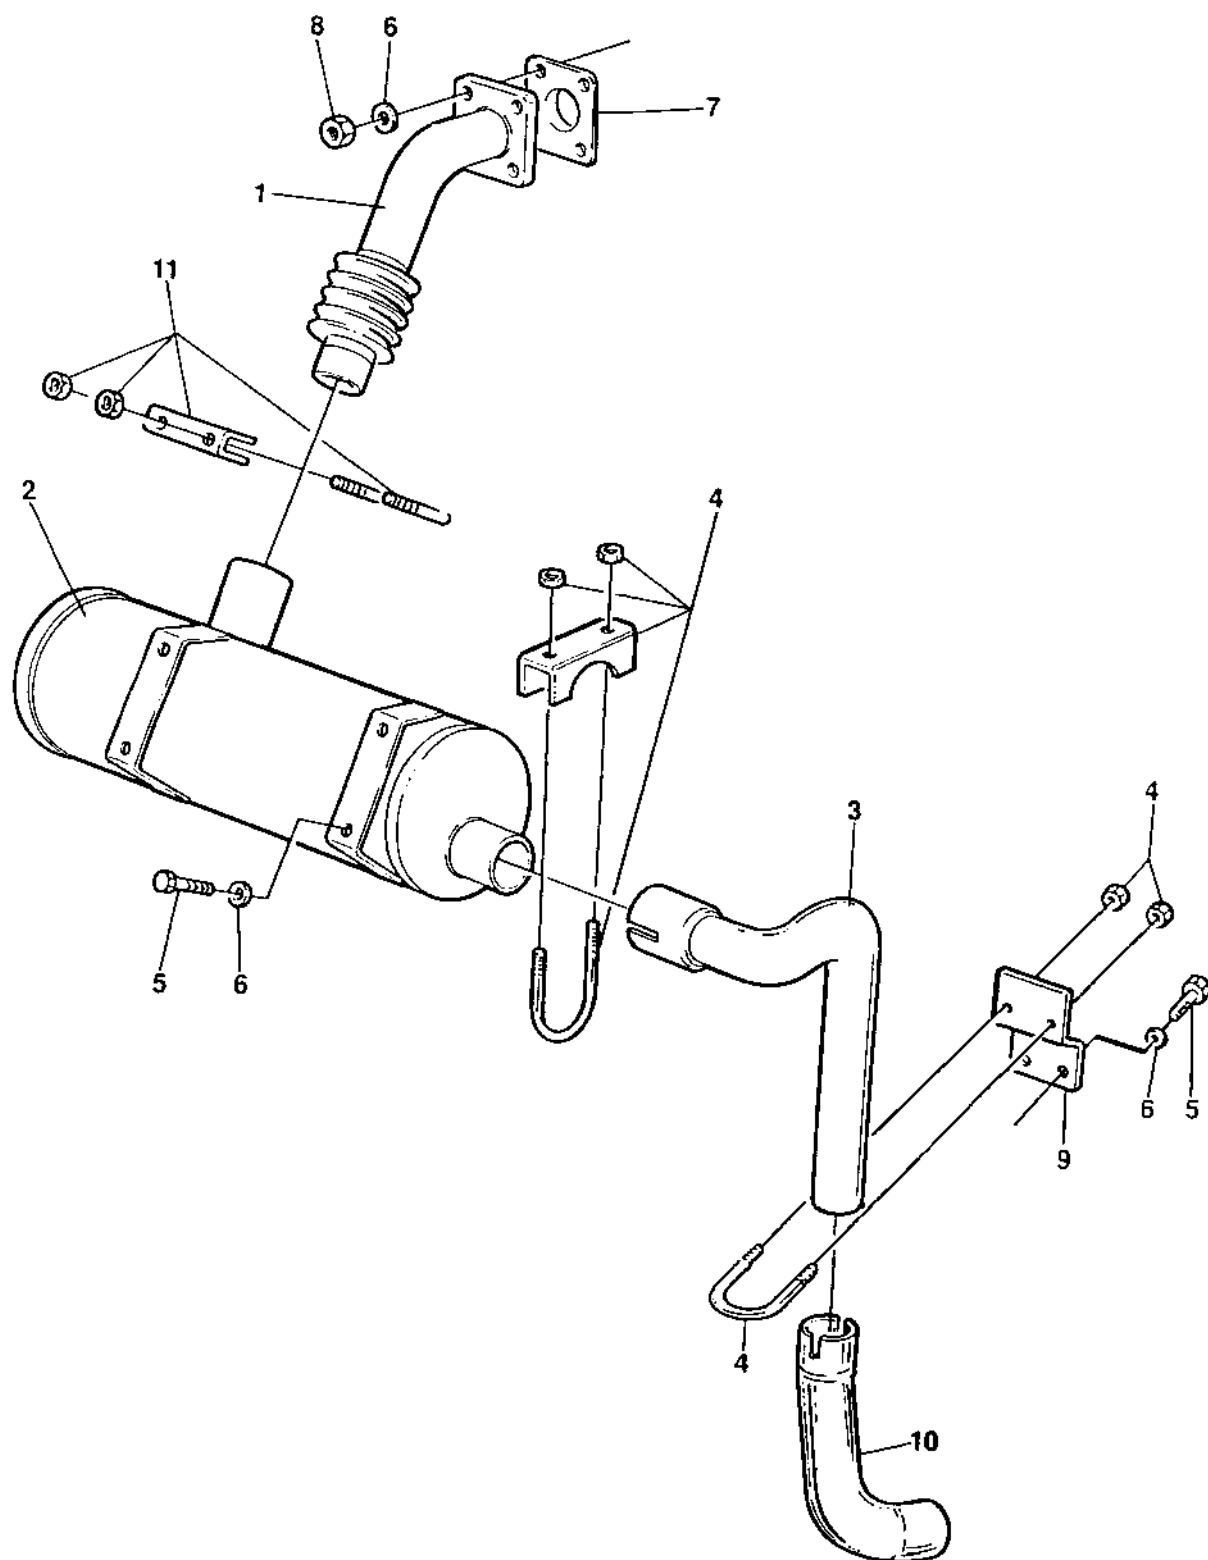

Exhaust system ISUZU


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370251		1	Exhaust pipe	D
2	370250		1	Muffler	
3	358393		1	Exhaust pipe	
4	313086		2	Clamp	
5	500053		6	Screw M8-1,25x20 8,8	D
6	615043		10	Conical spring washer 8,4x18x2	
7	903680		1	Gasket	
8	570005		4	Nut M8	
9	358394		1	Holder plate	
10	358865		1	Exhaust pipe	
11	313100		1	Clamp	

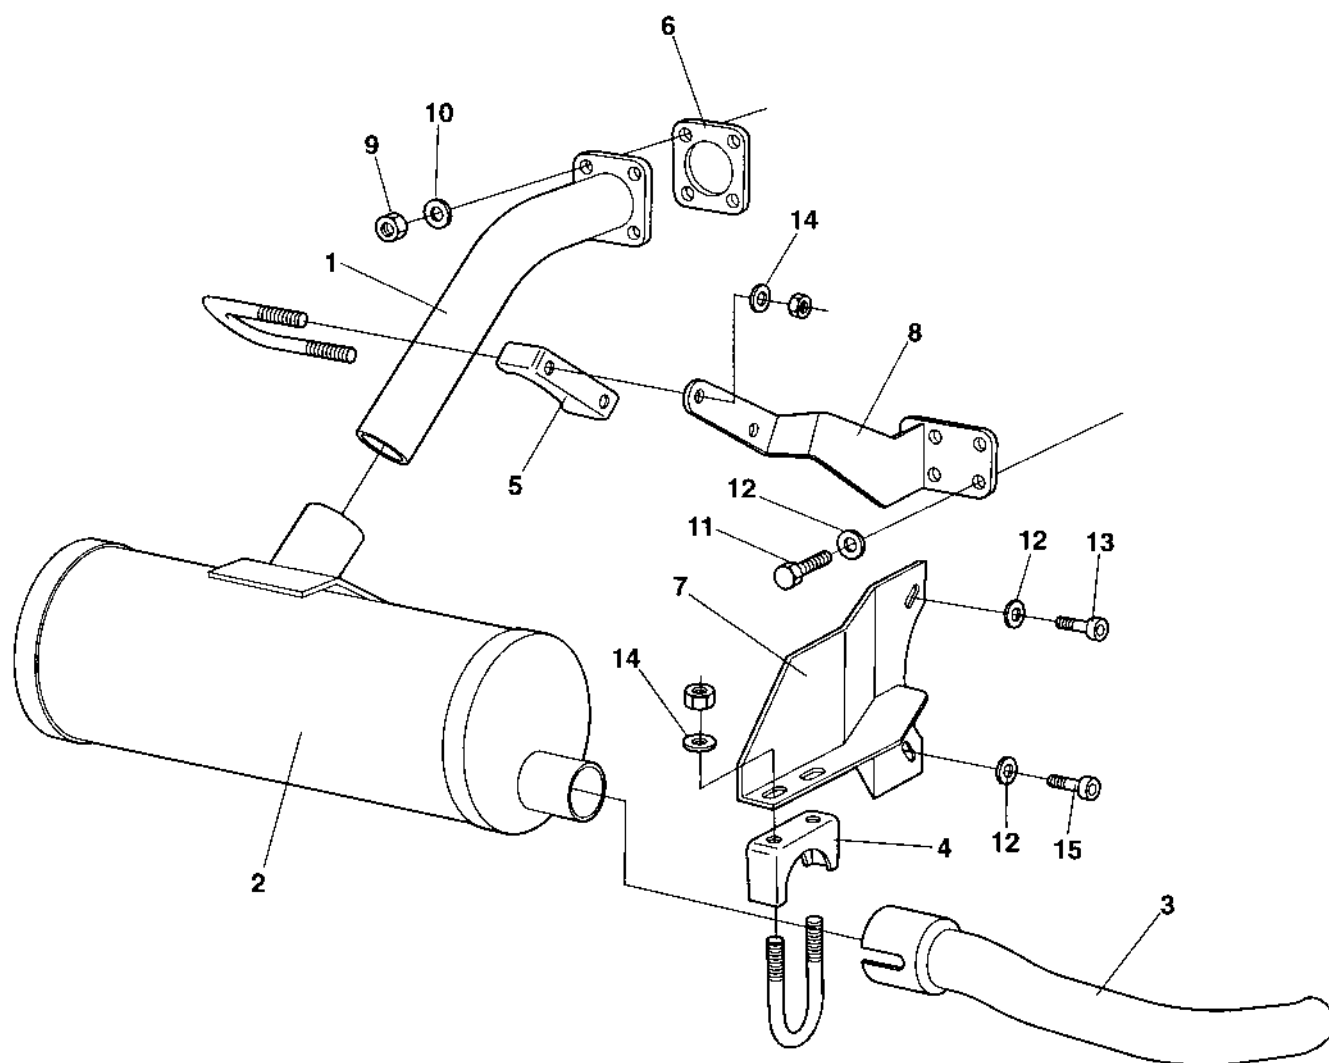

Exhaust system ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	381381		1	Exhaust pipe	
2	381734		1	Muffler	
3	381438		1	Exhaust pipe	
4	313086		1	Clamp	
5	313100		1	Clamp	
6	903680		1	Gasket	D
7	381394		1	Bracket	
8	381521		1	Bracket	
9	570005		4	Nut M8	
10	904229		4	Washer 8,4x16x1,5	
11	500028		4	Screw M10-1,5x25 8,8	
12	904557		6	Washer 10,5x22x4	
13	508029		1	Screw M10-1,5x30H 8,8	
14	904640		4	Washer 8,4x22x3	
15	508053		1	Screw M10-1,5x35H 8,8	


Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Hydraulic diagram (Page 108)	
200				Propulsion system DEUTZ Up to 60110342 (Page 110)	
205				Propulsion system DEUTZ From 60110343 Up to 60111898 (Page 112)	
				Propulsion system DEUTZ From 60111902 Up to 60111909 (Page 112)	
				Propulsion system DEUTZ From 60111912 Up to 60111912 (Page 112)	
				Propulsion system DEUTZ From 60111914 Up to 60111914 (Page 112)	
210				Propulsion system DEUTZ From 60111899 Up to 60111901 (Page 114)	
				Propulsion system DEUTZ From 60111910 Up to 60111911 (Page 114)	
				Propulsion system DEUTZ From 60111913 Up to 60111913 (Page 114)	
				Propulsion system DEUTZ From 60111915 Up to 60113599 (Page 114)	
225				Propulsion system ISUZU Up to 60123599 (Page 118)	
230				Propulsion system DEUTZ / ISUZU From 601X3600 (Page 122)	
300	358225			Hydraulic pump, propulsion Up to 60110342 (Page 126)	
305	358470			Hydraulic pump, propulsion From 60110343 Up to 60113599 (Page 130)	
307				Control unit, hydraulic pump From 60110343 Up to 60113599 (Page 134)	
310	357008			Hydraulic pump, propulsion Up to 60123599 (Page 136)	
315	372352			Hydraulic pump, propulsion From 601X3600 (Page 140)	
316				Rotating group, valves, charge pump. From 601X3600 (Page 142)	
317				Control unit, cpl From 601X3600 (Page 144)	
340	357023			Hydraulic motor, propulsion, drum Up to 601X1898 (Page 146)	
	357023			Hydraulic motor, propulsion, drum From 601X1902 Up to 601X1909 (Page 146)	
	357023			Hydraulic motor, propulsion, drum From 601X1912 Up to 601X1912 (Page 146)	
	357023			Hydraulic motor, propulsion, drum From 601X1914 Up to 601X1914 (Page 146)	
345	371542			Hydraulic motor, propulsion, drum From 601X1899 Up to 601X1901 (Page 150)	
	371542			Hydraulic motor, propulsion, drum From 601X1910 Up to 601X1911 (Page 150)	
	371542			Hydraulic motor, propulsion, drum From 601X1913 Up to 601X1913 (Page 150)	
	371542			Hydraulic motor, propulsion, drum From 601X1915 Up to 601X4046 (Page 150)	
350	375631			Hydraulic motor, propulsion, drum From 6019XXXX (Page 152)	
	375631			Hydraulic motor, propulsion, drum From 601X4047 (Page 152)	
390	380736			Junction block From 601X4872 (Page 154)	
400				Vibration system DEUTZ Up to 60111642 (Page 156)	
410				Vibration system DEUTZ From 60111643 Up to 60113599 (Page 160)	
420				Vibration system DEUTZ From 601X3600 (Page 164)	
450				Vibration system ISUZU Up to 60122599 (Page 168)	
460				Vibration system ISUZU From 60122600 Up to 60123599 (Page 172)	
470				Vibration system ISUZU From 601X3600 (Page 176)	
500	357009			Hydraulic pump, vibration DEUTZ Up to 60111642 (Page 180)	
510	359524			Hydraulic pump, vibration DEUTZ From 60111643 (Page 182)	
550	370172			Hydraulic pump, vibration ISUZU Up to 601X4277 (Page 184)	
552	375649			Hydraulic pump, vibration ISUZU From 601X4278 (Page 186)	
555	370173			Vibration valve ISUZU (Page 188)	
601				Steering system Up to 601X3599 (Page 190)	
611				Steering system From 601X3600 (Page 192)	
650	902099			Steering valve (Page 194)	
700	357014			Steering cylinder Up to 601X3466 (Page 196)	
710	374603			Steering cylinder From 601X3467 (Page 198)	
800				Brake system DEUTZ Up to 60110342 (Page 200)	
810				Brake system DEUTZ From 60110343 Up to 60113599 (Page 202)	
850				Brake system ISUZU Up to 60123599 (Page 204)	
860				Brake system DEUTZ / ISUZU From 601X3600 (Page 206)	

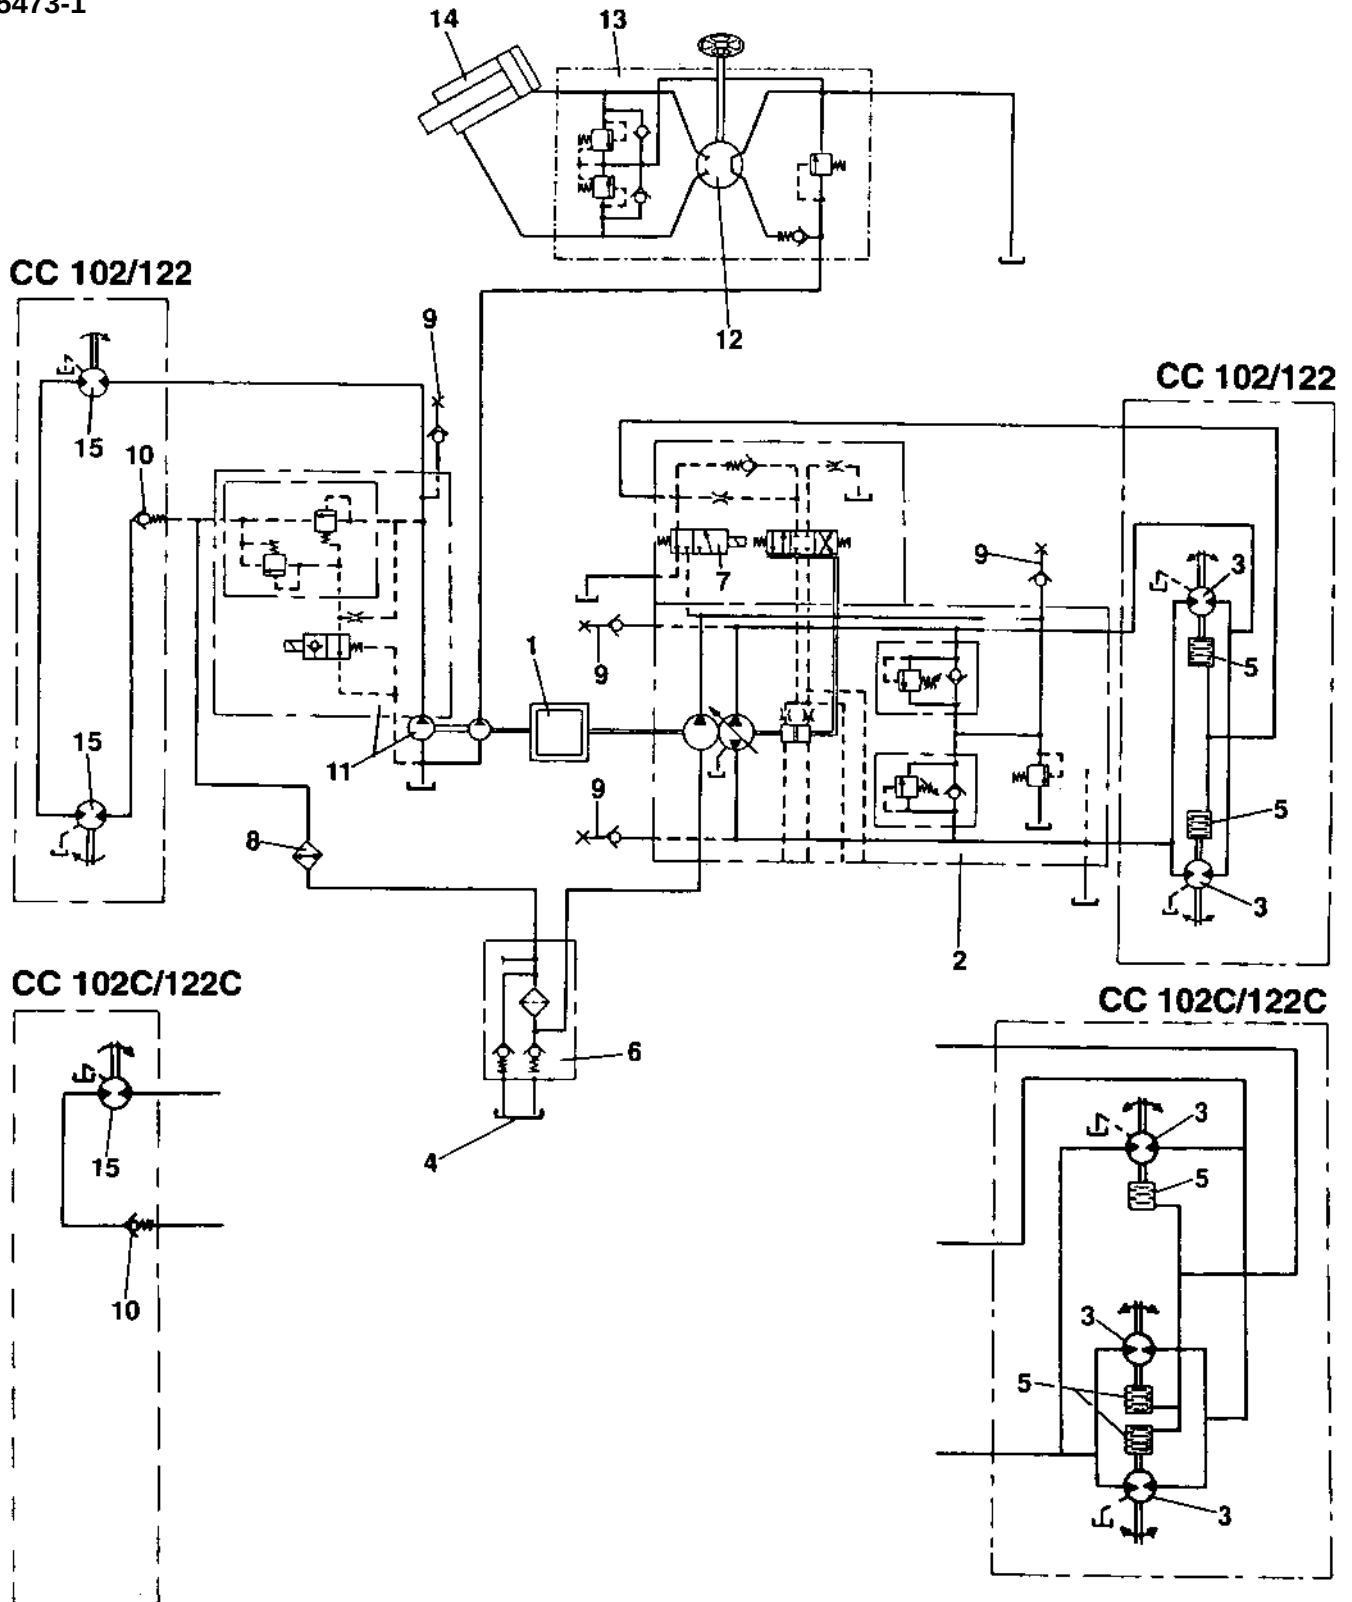

Hydraulic diagram


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Diesel engine	
2			1	Propulsion pump	
3			2	Propulsion motor	
4			1	Hydraulic oil tank	
5			2	Brake	
6			1	Filter	
7			1	Brake valve	
8			1	Oil cooler	
9			4	Measuring nipple	
10			1	Check valve	
11		A	1	Vibration pump	
12			1	Steering valve	
13			1	Valve block	
14			1	Steering cylinder	
15			2	Vibration motor	

A) Incl. steering pump

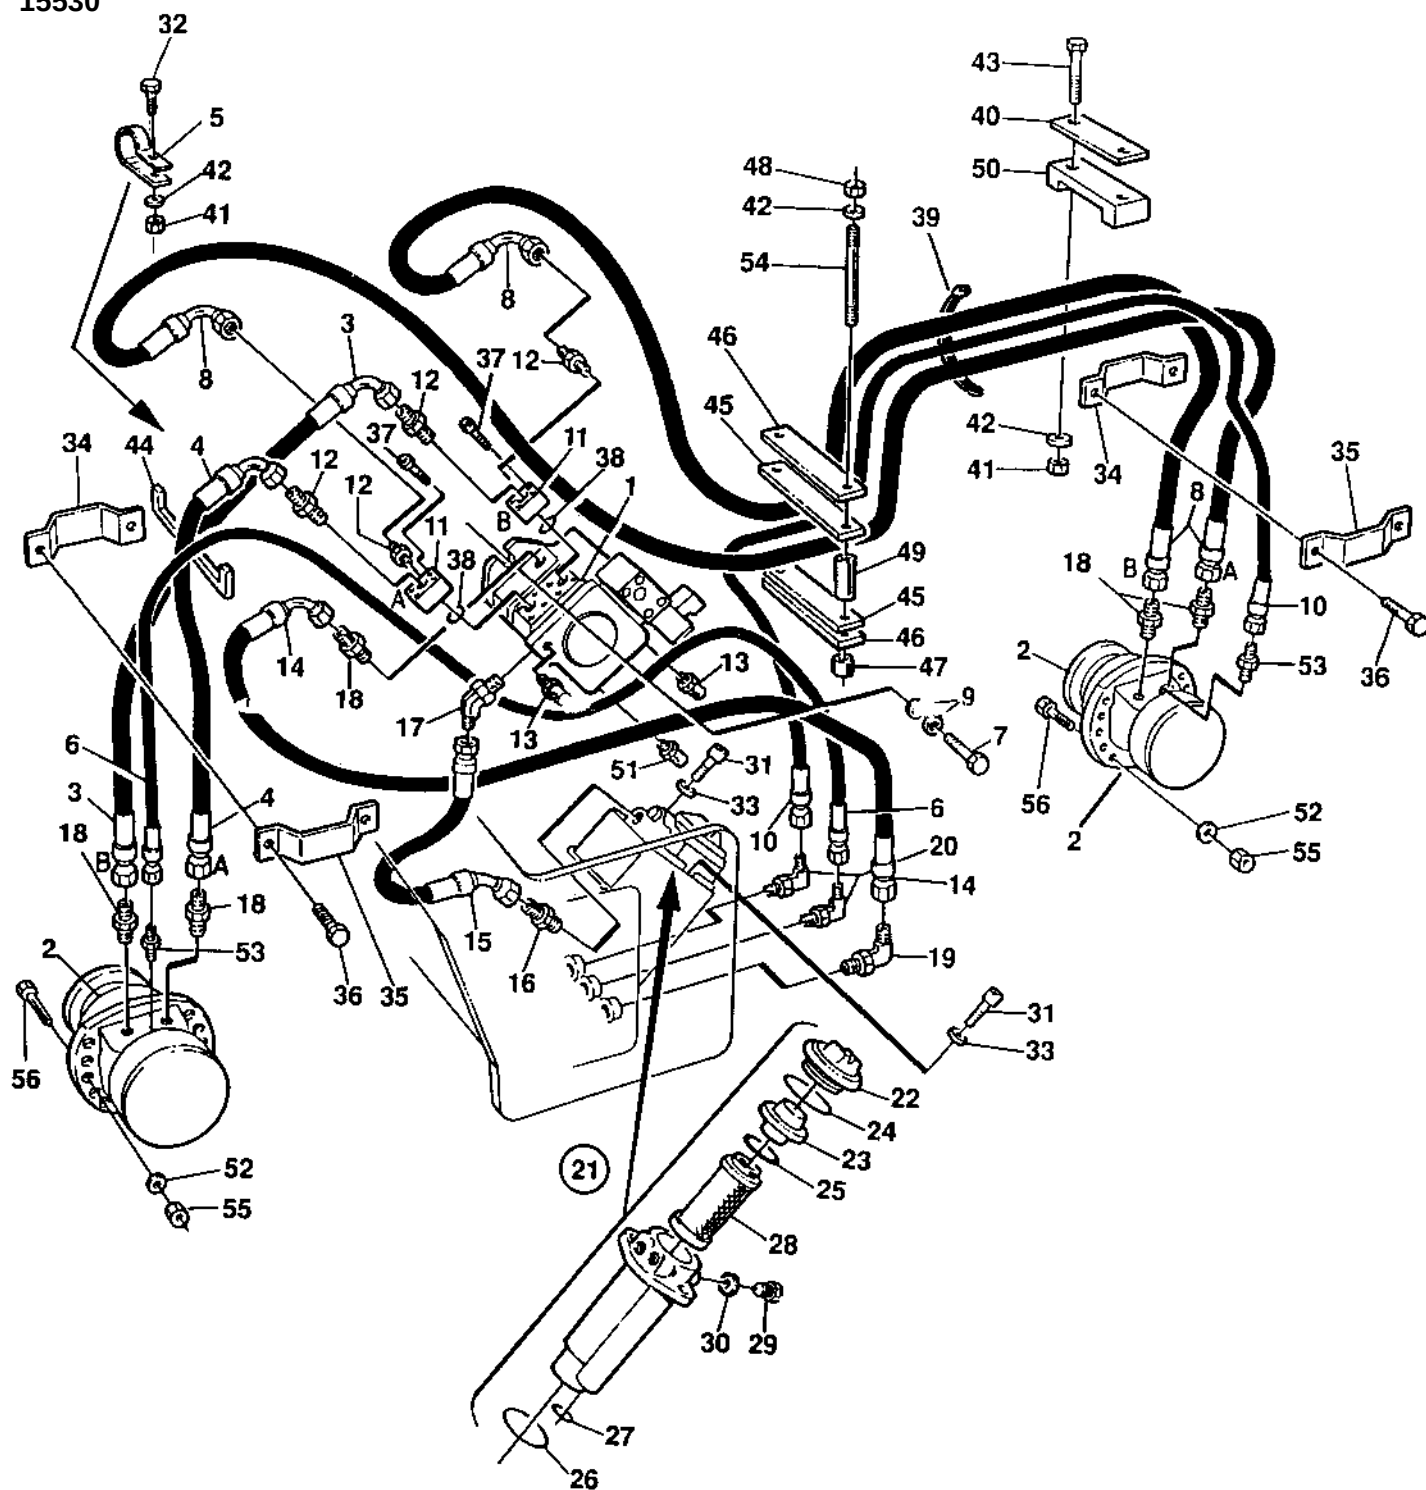


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358225		1	Hydraulic pump, propulsion (Page 126)	
2	357023		2	Hydraulic motor, propulsion, drum (Page 146)	
3	482827		1	Hydraulic hose	
4	482828		1	Hydraulic hose	
5	921119		1	Pipe clamp	
6	482830		1	Hydraulic hose	
7	500037		2	Screw M12-1,75x35 8,8	
8	482829		2	Hydraulic hose	
9	615045		4	Conical spring washer 13x29	
10	482285		1	Hydraulic hose	
11	349442		2	Flange coupling	
12	334121		4	Adapter	
13	910162		2	Measuring nipple	D
14	482329		1	Hydraulic hose	
15	308000020		1	Hydraulic hose	
16	334156		1	Adapter	
17	902126		1	Adapter	
18	334134		5	Connector	
19	813435		1	Adapter	
20	813321		2	Connector	
21	357012	A	1	Hydraulic oil filter	
22	902377		1	.Cover	D
23	902378		1	.Insert	
24	902229		1	.Sealing	D
25	902230		1	.O-ring	D
26	902231		1	.O-ring	D
27	902232		1	.O-ring	D
28	902110		1	.Filter element	
29	901313		1	.Plug	
30	230277		1	.Copper washer	D
31	508029		2	Screw M10-1,5x30H 8,8	
32	500028		1	Screw M10-1,5x25 8,8	
33	615044		2	Conical spring washer	D
34	357328		2	Hose clamp	
35	357329		2	Hose clamp	
36	500505		4	Screw	
37	509035		8	Screw	
38	813443		2	O-ring	D
39	313102		N	Cable ties L=388 mm	
40	335914		1	Cover plate	
41	570006		3	Nut M10	
42	600008		7	Washer	
43	500091		2	Screw M10-1,5x50 8,8	
44	902379	C	1XL	Edge trim	
45	357111		2	Rubber cloth	
46	357112		2	Cover plate	
47	355869		2	Spacer sleeve	
48	586018		2	Lock nut M10	
49	357113		2	Spacer sleeve	
50	343732		1	Hose clamp	
51	902121		1	Measuring nipple	D
52	600009		20	Washer	
53	902551		2	Connector	
54	902233		2	Threaded stud	
55	586019		20	Lock nut M12	
56	500056		20	Screw M12-1,75x45 8,8	

A) CPL
C) L=0,185 m

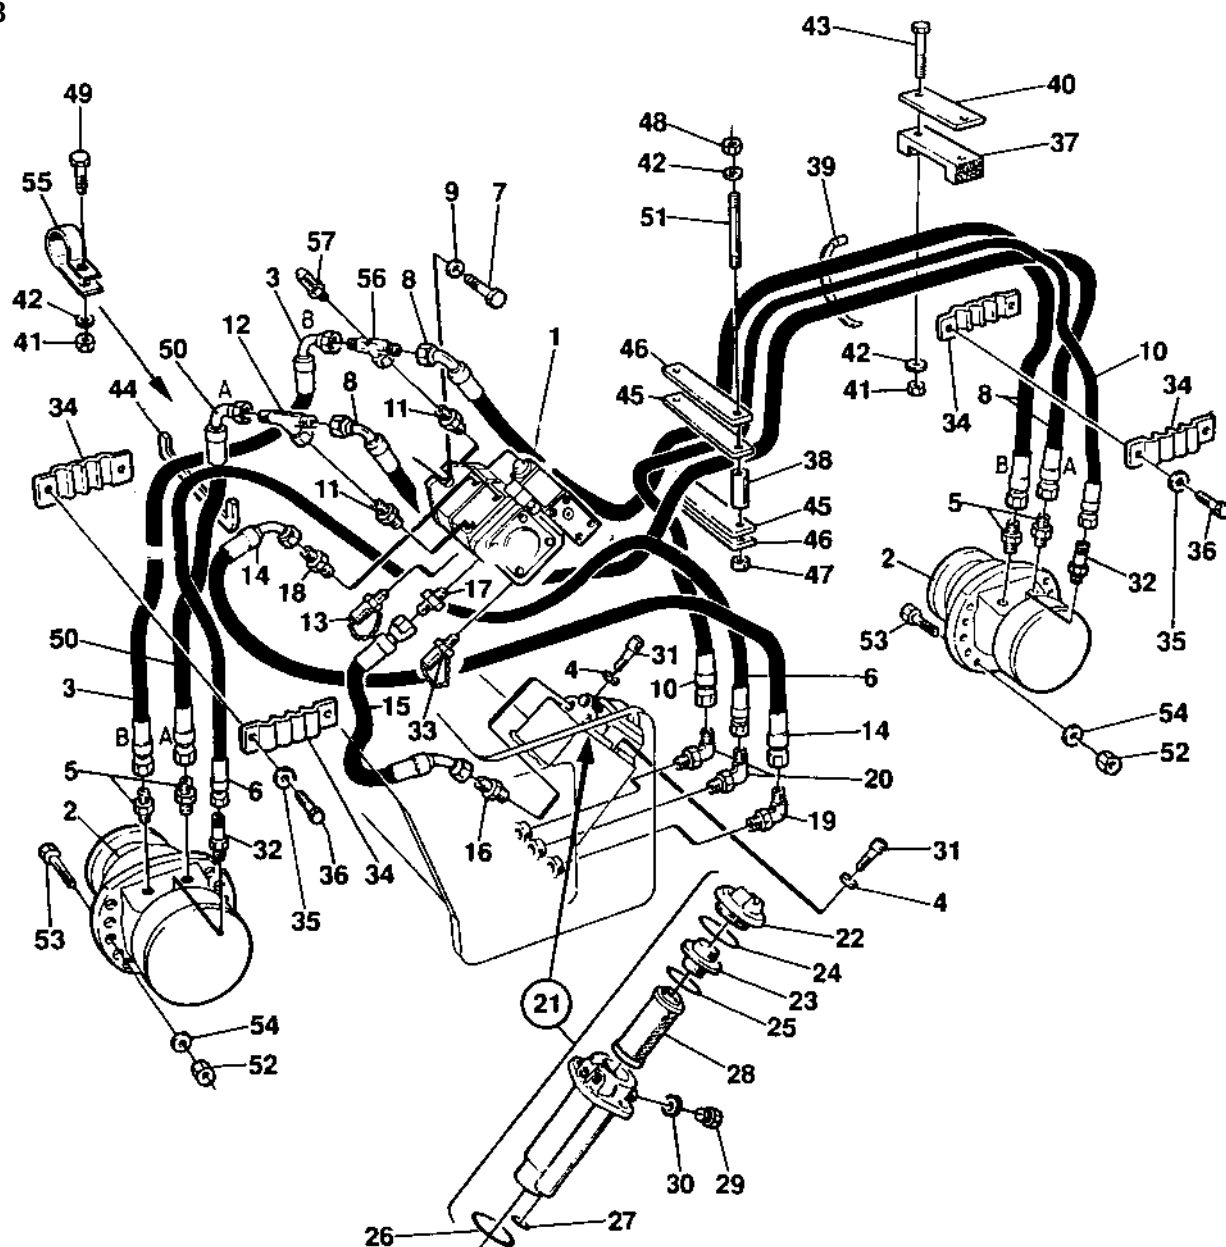


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358470		1	Hydraulic pump, propulsion (Page 130)	
2	357023		1	Hydraulic motor, propulsion, drum (Page 146)	
3	482827		1	Hydraulic hose	
4	615044		2	Conical spring washer	D
5	334134		4	Connector	
6	482830		1	Hydraulic hose	
7	500037		2	Screw M12-1,75x35 8,8	
8	482829		2	Hydraulic hose	
9	615045		4	Conical spring washer 13x29	
10	482285		1	Hydraulic hose	
11	902124		2	Connector	
12	234953		1	Tee-connector	
13	901157		1	Measuring nipple	D
14	482553		1	Hydraulic hose	
15	308000020		1	Hydraulic hose	
16	334156		1	Adapter	
17	902126		1	Adapter	
18	925723		1	Connector	
19	813435		1	Adapter	
20	813321		2	Connector	
21	357012	A	1	Hydraulic oil filter	
22	902377		1	.Cover	D
23	902378		1	.Insert	
24	902229		1	.Sealing	D
25	902230		1	.O-ring	D
26	902231		1	.O-ring	D
27	902232		1	.O-ring	D
28	902110		1	.Filter element	
29	901313		1	.Plug	
30	230277		1	.Copper washer	D
31	508029		2	Screw M10-1,5x30H 8,8	
32	902551		2	Connector	
33	902115		1	Measuring nipple	D
34	358477		4	Hose clamp	
35	600006		4	Washer	
36	500053		4	Screw M8-1,25x20 8,8	
37	343732		1	Hose clamp	
38	357113		2	Spacer sleeve	
39	313102		N	Cable ties L=388 mm	
40	335914		1	Cover plate	
41	570006		3	Nut M10	
42	600008		7	Washer	
43	500091		2	Screw M10-1,5x50 8,8	
44	902379	C	1XL	Edge trim	
45	357111		2	Rubber cloth	
46	357112		2	Cover plate	
47	355869		2	Spacer sleeve	
48	586018		2	Lock nut M10	
49	500028		1	Screw M10-1,5x25 8,8	
50	482828		1	Hydraulic hose	
51	902233		2	Threaded stud	
52	586019		20	Lock nut M12	
53	500056		20	Screw M12-1,75x45 8,8	
54	600009		20	Washer	
55	921119		1	Pipe clamp	
56	358485		1	Connector	
57	910161		1	Measuring nipple	D

A) CPL
C) L=0,185 m

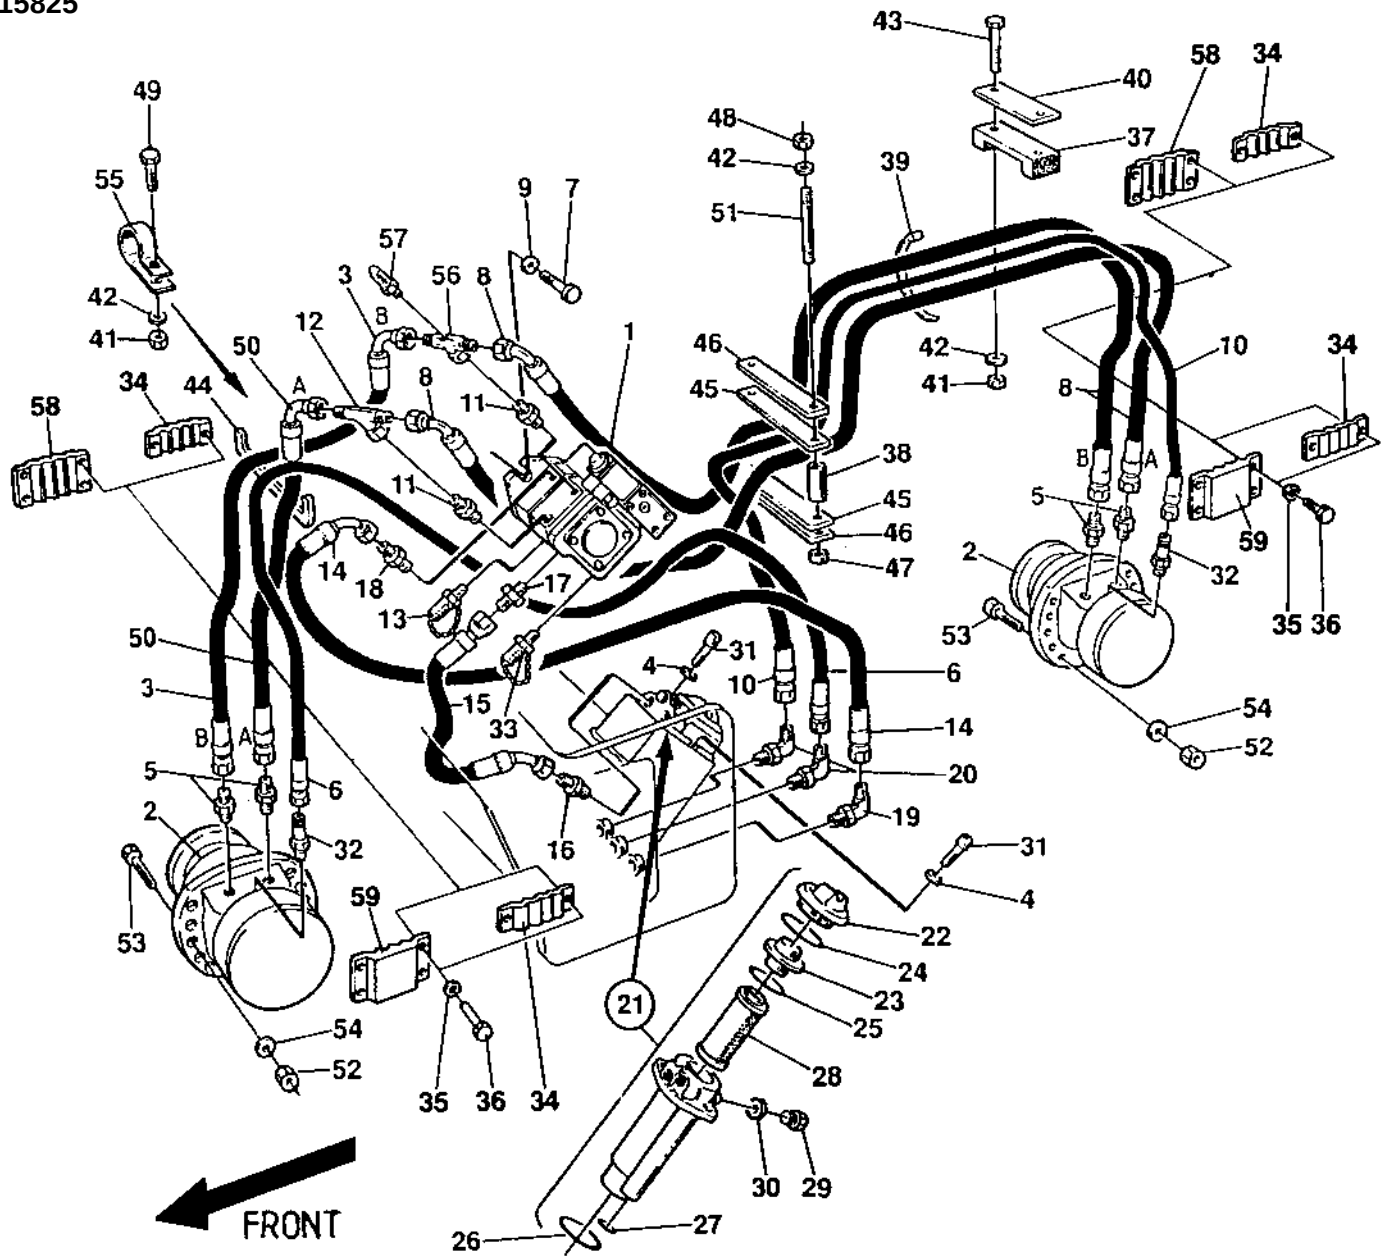


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358470		1	Hydraulic pump, propulsion (Page 130)	
2	371542		1	Hydraulic motor, propulsion, drum (Page 150)	
3	482827		1	Hydraulic hose	
4	615044		2	Conical spring washer	D
5	334134		4	Connector	
6	482830		1	Hydraulic hose	
7	500037		2	Screw M12-1,75x35 8,8	
8	482829		2	Hydraulic hose	
9	615045		4	Conical spring washer 13x29	
10	482285		1	Hydraulic hose	
11	902124		2	Connector	
12	234953		1	Tee-connector	
13	901157		1	Measuring nipple	D
14	482553		1	Hydraulic hose	
15	308000020		1	Hydraulic hose	
16	334156		1	Adapter	
17	902126		1	Adapter	
18	925723		1	Connector	
19	813435		1	Adapter	
20	813321		2	Connector	
21	357012		1	Hydraulic oil filter Up to 60112288	
	371183		1	Hydraulic oil filter From 60112289	
22	902377		1	.Cover	D
23	902378		1	.Insert	
24	902229		1	.Sealing	D
25	902230		1	.O-ring	D
26	902231		1	.O-ring	D
27	902232		1	.O-ring	D
28	902110		1	.Filter element Up to 60112288	
	903247		1	.Filter element From 60112289	A
29	901313		1	.Plug	
30	230277		1	.Copper washer	D
31	508029		2	Screw M10-1,5x30H 8,8	
32	902551		2	Connector	
33	902115		1	Measuring nipple	D
34	358477		4	Hose clamp Up to 60112256	
35	600006		8	Washer	
36	500053		8	Screw M8-1,25x20 8,8	
37	343732		1	Hose clamp	
38	357113		2	Spacer sleeve	
39	313102		N	Cable ties L=388 mm	
40	335914		1	Cover plate	
41	570006		3	Nut M10	
42	600008		7	Washer	
43	500091		2	Screw M10-1,5x50 8,8	
44	902379	B	1XL	Edge trim	
45	357111		2	Rubber cloth	
46	357112		2	Cover plate	
47	355869		2	Spacer sleeve	
48	586018		2	Lock nut M10	
49	500028		1	Screw M10-1,5x25 8,8	
50	482828		1	Hydraulic hose	
51	902233		2	Threaded stud	
52	586019		20	Lock nut M12	
53	500056		20	Screw M12-1,75x45 8,8	
54	600009		20	Washer	
55	921119		1	Pipe clamp	
56	358485		1	Connector	
57	910161		1	Measuring nipple	D

B) L=0,185 m

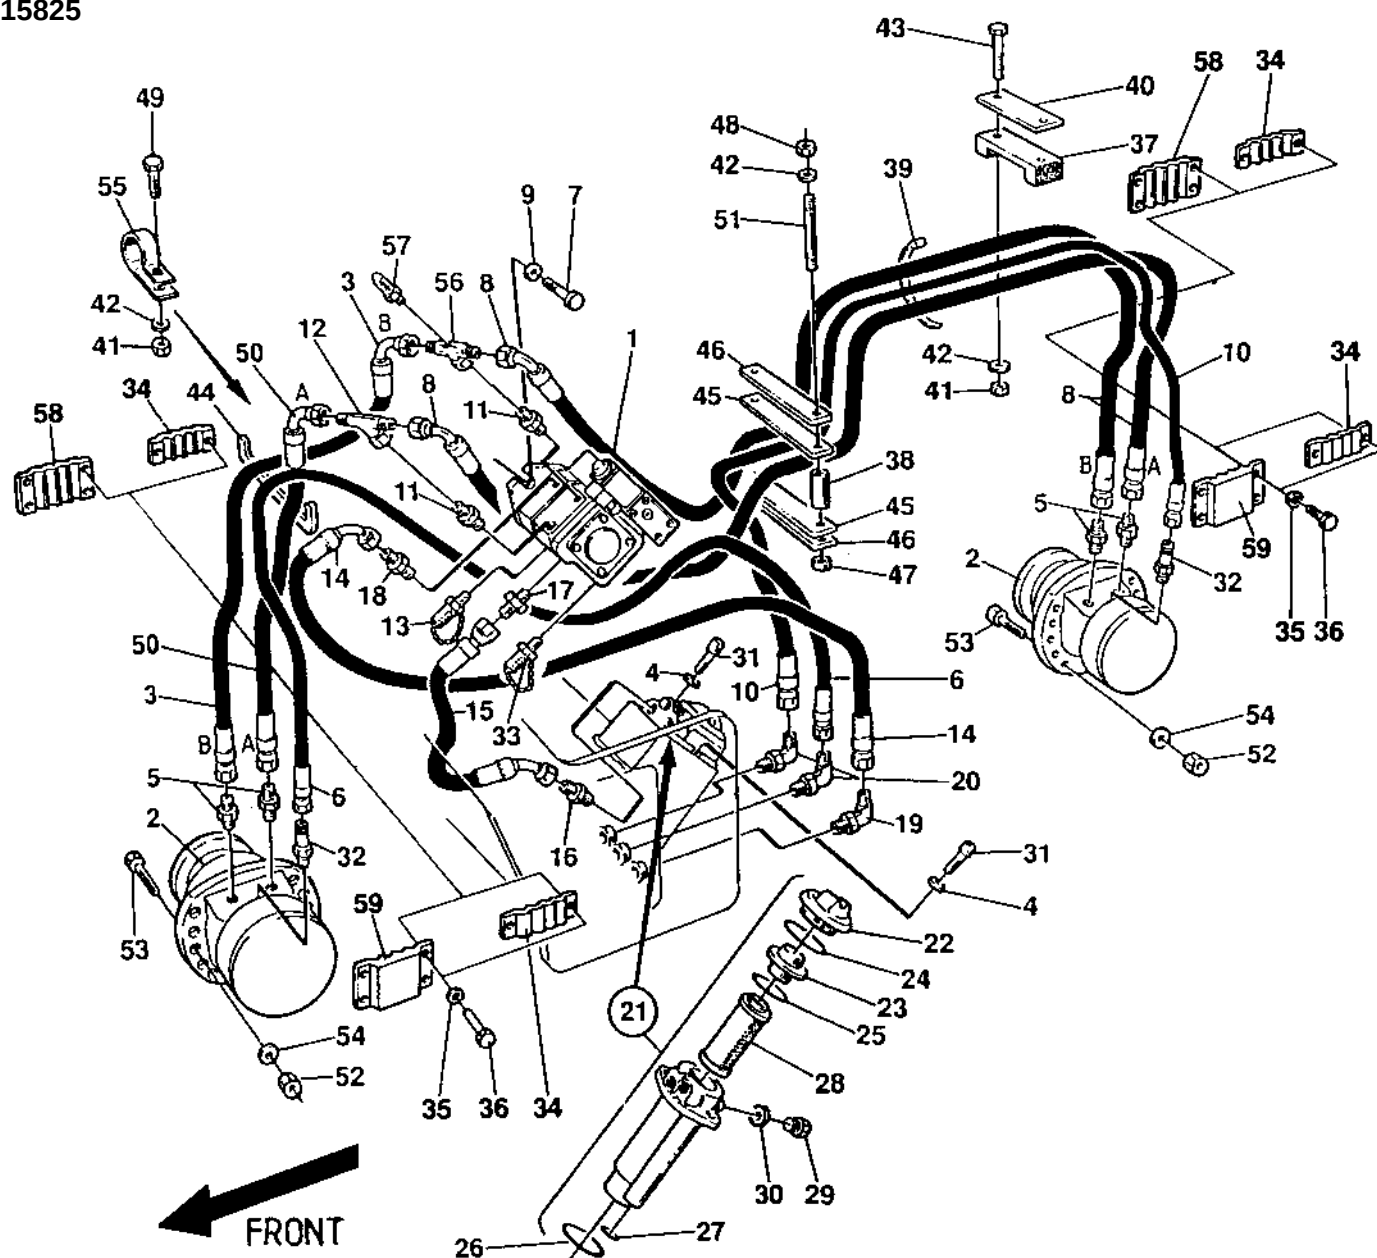


Ref. No.	Part No.	Rem.	Qty	Description	Code
58	371313		2	Hose clamp From 60112257	
59	371314		2	Hose clamp From 60112257	

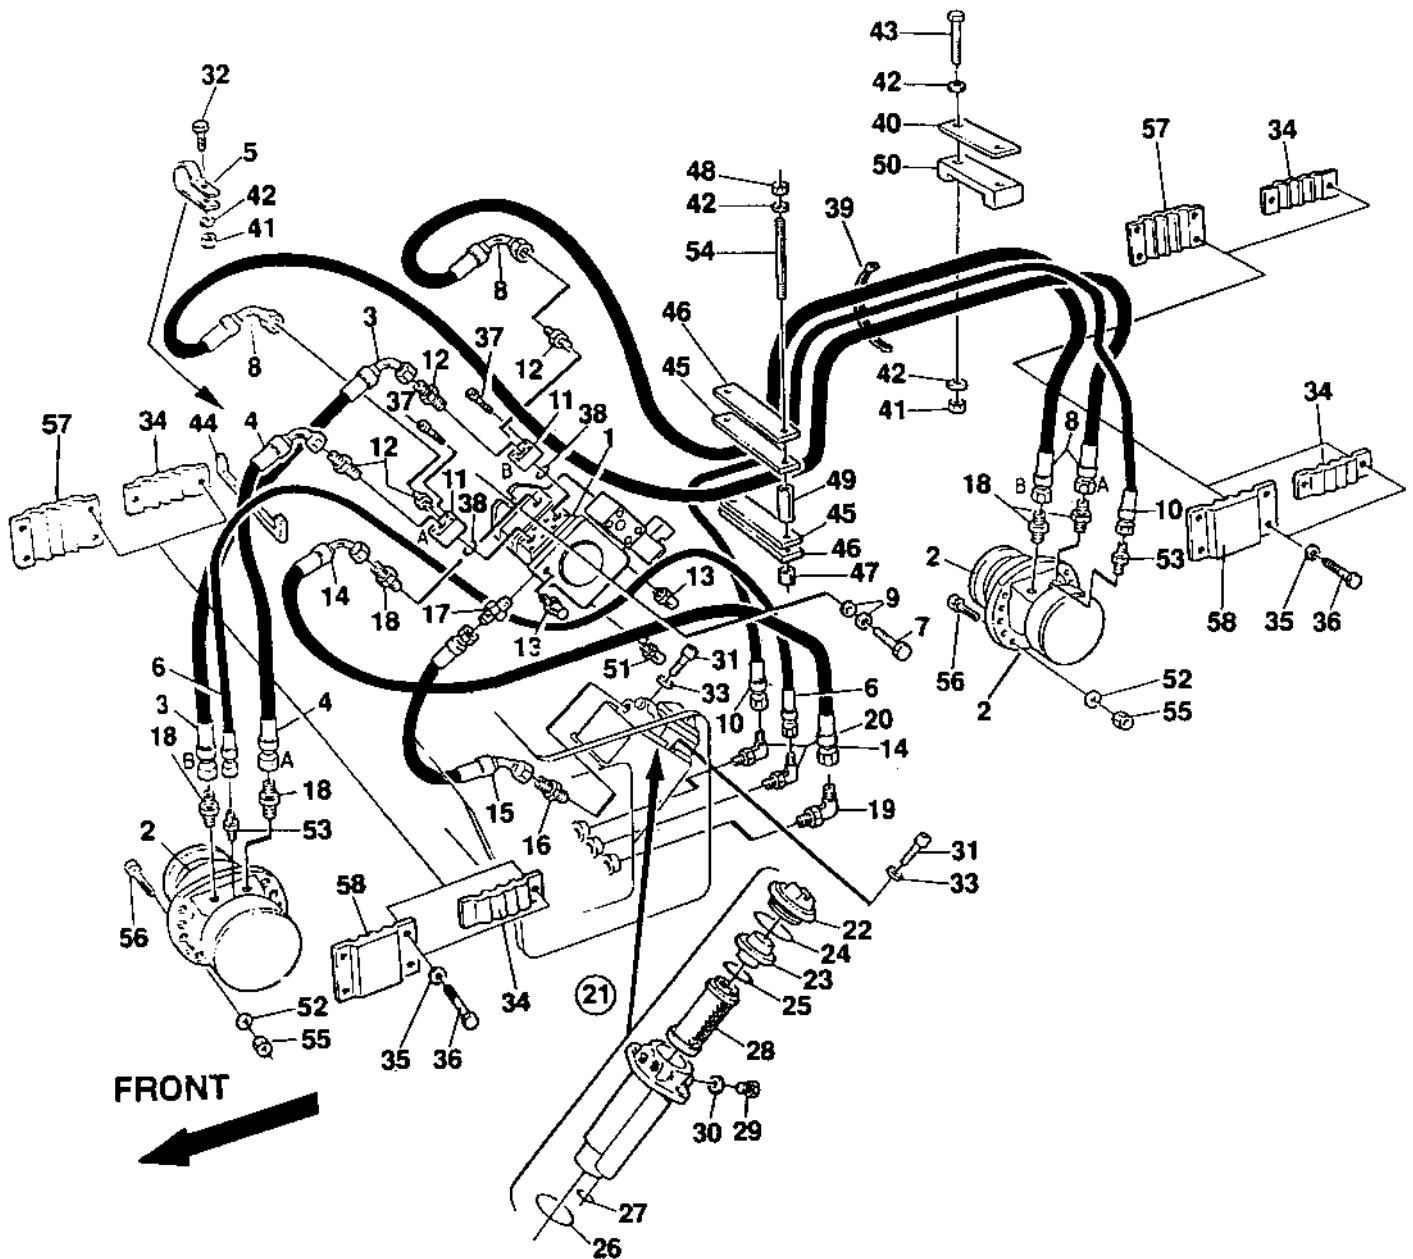

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357008		1	Hydraulic pump, propulsion (Page 136)	
2	357023		1	Hydraulic motor, propulsion, drum (Page 146)	
	371542		1	Hydraulic motor, propulsion, drum (Page 150)	
3	482827		1	Hydraulic hose	
4	482828		1	Hydraulic hose	
5	921119		1	Pipe clamp	
6	482830		1	Hydraulic hose	
7	500037		2	Screw M12-1,75x35 8,8	
8	482829		2	Hydraulic hose	
9	615045		4	Conical spring washer 13x29	
10	482285		1	Hydraulic hose	
11	349442		2	Flange coupling	
12	334121		4	Adapter	
13	910162		2	Measuring nipple	D
14	482245		1	Hydraulic hose Up to 60122809	
	482553		1	Hydraulic hose From 60122810	
15	482779		1	Hydraulic hose	
16	334156		1	Adapter	
17	334132		1	Elbow 45, O-ring	
18	334134		5	Connector	
19	813435		1	Adapter	
20	813321		2	Connector	
21	357012		1	Hydraulic oil filter Up to 60122288	
	371183		1	Hydraulic oil filter From 60122289	
22	902377		1	.Cover	D
23	902378		1	.Insert	
24	902229		1	.Sealing	D
25	902230		1	.O-ring	D
26	902231		1	.O-ring	D
27	902232		1	.O-ring	D
28	902110		1	.Filter element Up to 60122288	
	903247		1	.Filter element From 60122289	A
29	901313		1	.Plug	
30	230277		1	.Copper washer	D
31	508029		2	Screw M10-1,5x30H 8,8	
32	500028		1	Screw M10-1,5x25 8,8	
33	615044		2	Conical spring washer	D
34	358477		4	Hose clamp Up to 60122256	
35	600006		4	Washer Up to 60122256	
	600006		8	Washer From 60122257	
36	500053		4	Screw M8-1,25x20 8,8 Up to 60122256	
	500053		8	Screw M8-1,25x20 8,8 From 60122257	
37	509035		8	Screw	
38	813443		2	O-ring	D
39	313102		N	Cable ties L=388 mm	
40	335914		1	Cover plate	
41	570006		3	Nut M10	
42	600008		7	Washer	
43	500091		2	Screw M10-1,5x50 8,8	
44	902379	B	1XL	Edge trim	
45	357111		2	Rubber cloth	
46	357112		2	Cover plate	
47	355869		2	Spacer sleeve	
48	586018		2	Lock nut M10	
49	357113		2	Spacer sleeve	
50	343732	C	1	Hose clamp	
51	902121		1	Measuring nipple	D
52	600009		20	Washer	


B) L=0,185 m

C) 2 pcs

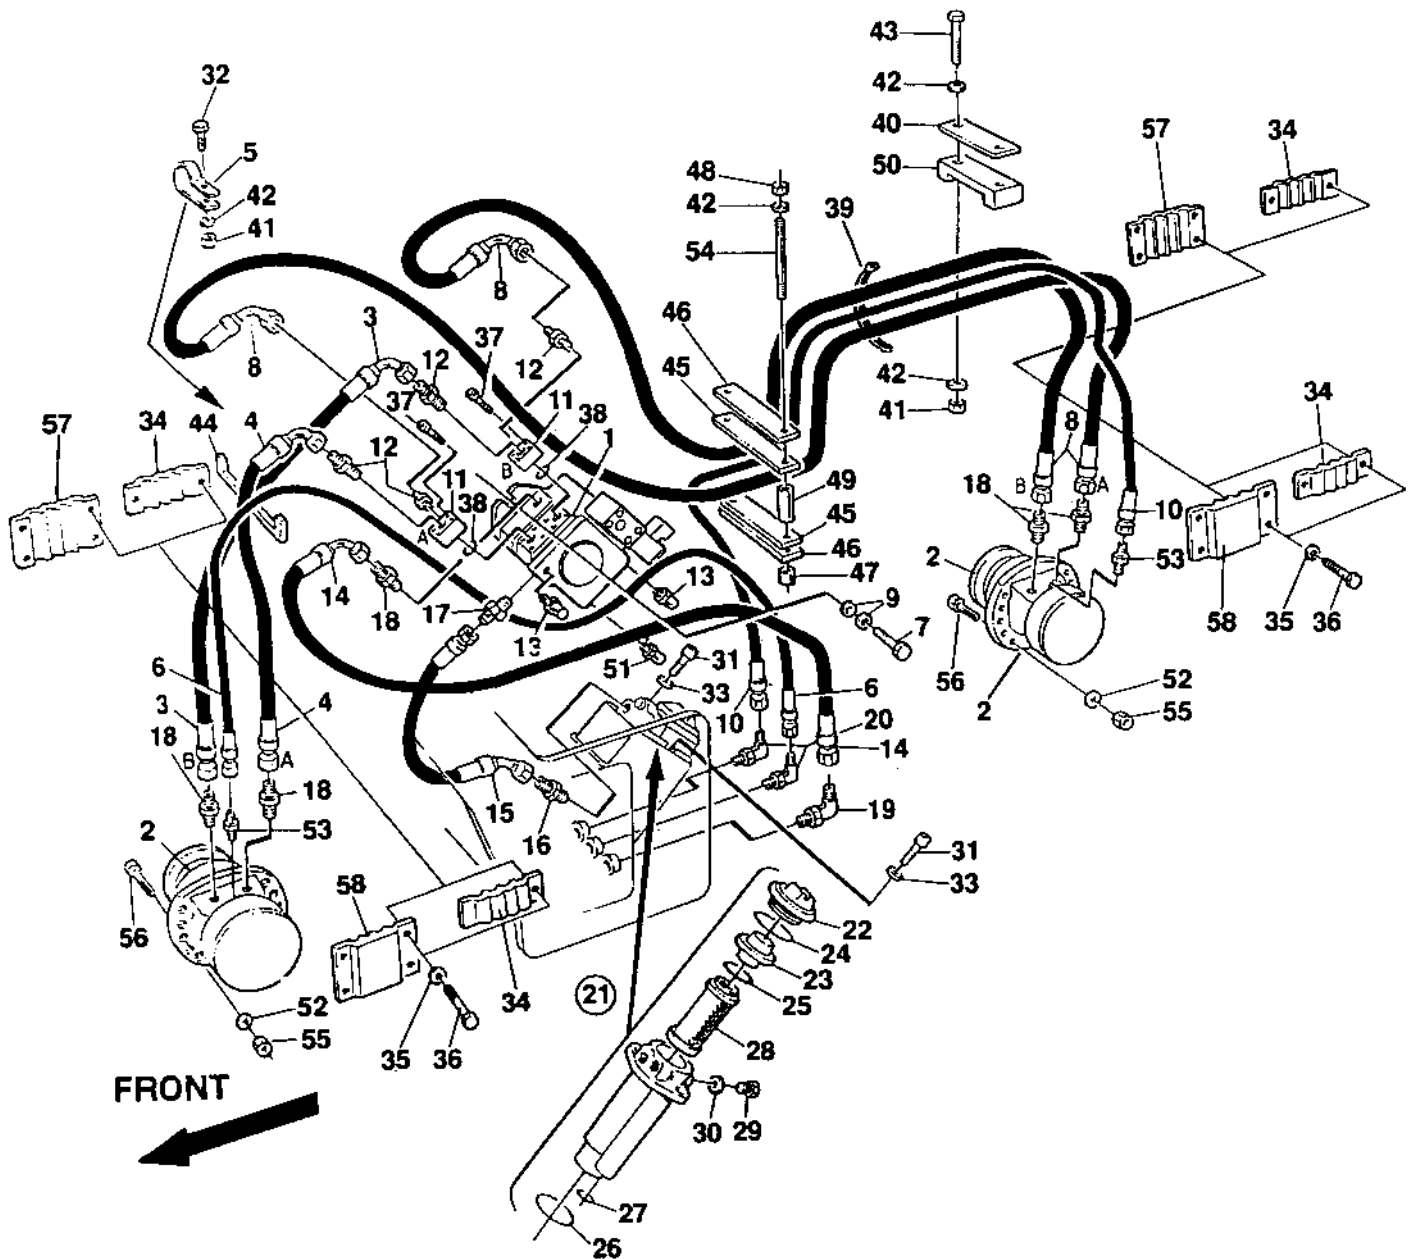

Propulsion system ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
53	902551		2	Connector	
54	902233		2	Threaded stud	
55	586019		20	Lock nut M12	
56	500056		20	Screw M12-1,75x45 8,8	
57	371313		2	Hose clamp From 60122257	
58	371314		2	Hose clamp From 60122257	

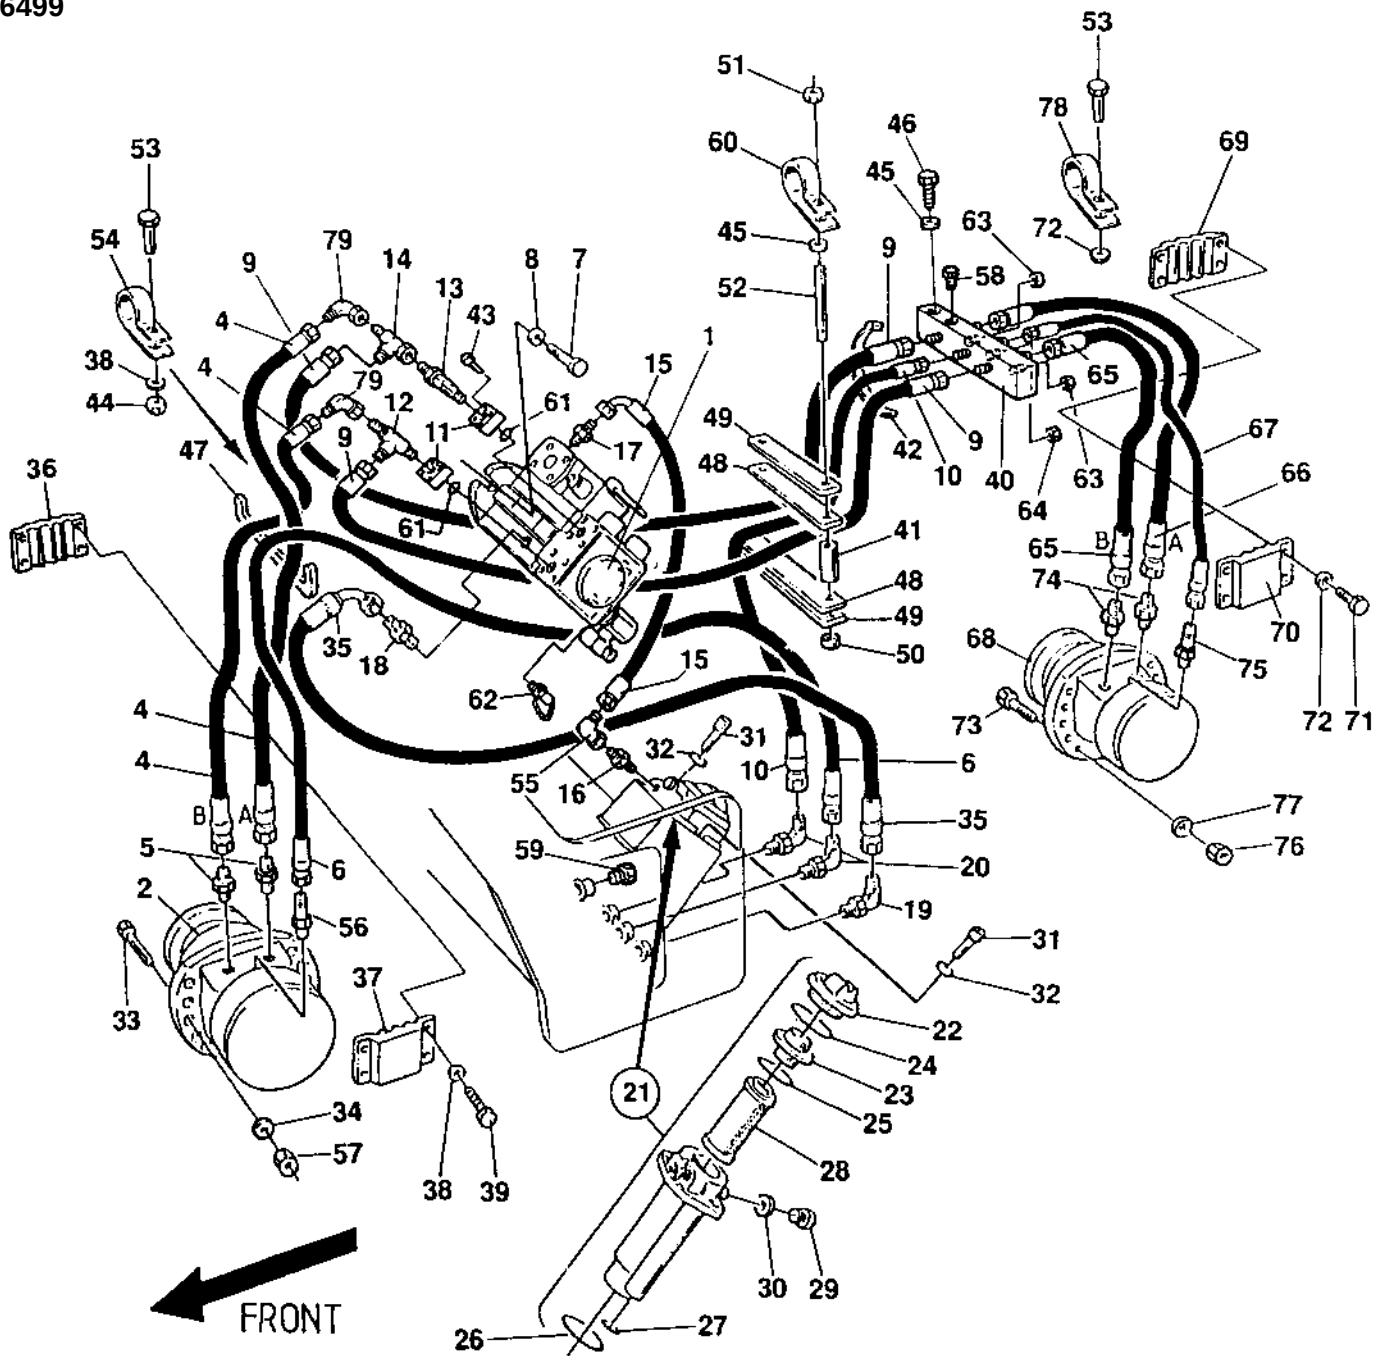


Propulsion system DEUTZ / ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	372352		1	Hydraulic pump, propulsion (Page 140)	
2	371542		1	Hydraulic motor, propulsion, drum Up to 60114046 (Page 150)	
	371542		1	Hydraulic motor, propulsion, drum Up to 60124046 (Page 150)	
	375631		1	Hydraulic motor, propulsion, drum From 601X4047 (Page 152)	
	375631		1	Hydraulic motor, propulsion, drum From 6019XXXX (Page 152)	
4	482998		2	Hydraulic hose	
5	334134		2	Connector	
6	482830		1	Hydraulic hose	
7	500037		2	Screw M12-1,75x35 8,8	
8	904703		2	Washer 13x24x4	
9	482898		2	Hydraulic hose	
10	482452		1	Hydraulic hose	
11	373402		2	Flange	
12	234218		1	Connector	
13	813444		1	Elbow 90, O-ring	
14	334135		1	T-connector	
15	483118		1	Hydraulic hose	
16	334156		1	Adapter	
17	901156		1	Connector	
18	903925		1	Connector	
19	813435		1	Adapter	
20	813321		2	Connector	
21	371183		1	Hydraulic oil filter	
22	902377		1	.Cover	D
23	902378		1	.Insert	
24	902229		1	.Sealing	D
25	902230		1	.O-ring	D
26	902231		1	.O-ring	D
27	902232		1	.O-ring	D
28	903247		1	.Filter element	A
29	901313		1	.Plug	
30	230277		1	.Copper washer	D
31	508029		2	Screw M10-1,5x30H 8,8	
32	615044		2	Conical spring washer	D
33	500056		10	Screw M12-1,75x45 8,8	
34	904231		10	Washer 13x24x2	
35	482553		1	Hydraulic hose	
36	371313		1	Hose clamp	
37	371314		1	Hose clamp	
38	904229		5	Washer 8,4x16x1,5	
39	500020		4	Screw M8-1,25x22 8,8	
40	373266	1	1	Junction block Up to 601X4871	
	380736		1	Junction block From 601X4872 (Page 154)	
41	357113		2	Spacer sleeve	
42	313102		N	Cable ties L=388 mm	
43	508096		8	Screw M10-1,5x25H 8,8	
44	570005		1	Nut M8	
45	904230		6	Washer 10,5x22x2	
46	500109		2	Screw M10-1,5x65 8,8	
47	902379	A	1XL	Edge trim	
48	357111		2	Rubber cloth	
49	357112		2	Cover plate	
50	355869		2	Spacer sleeve	
51	586018		4	Lock nut M10	
52	902233		2	Threaded stud	
53	513013		1	Screw	
54	921119		1	Pipe clamp	
55	334155		1	Connector	


1) Replaced as spare part by PN 380736.

A) L=0,185 m

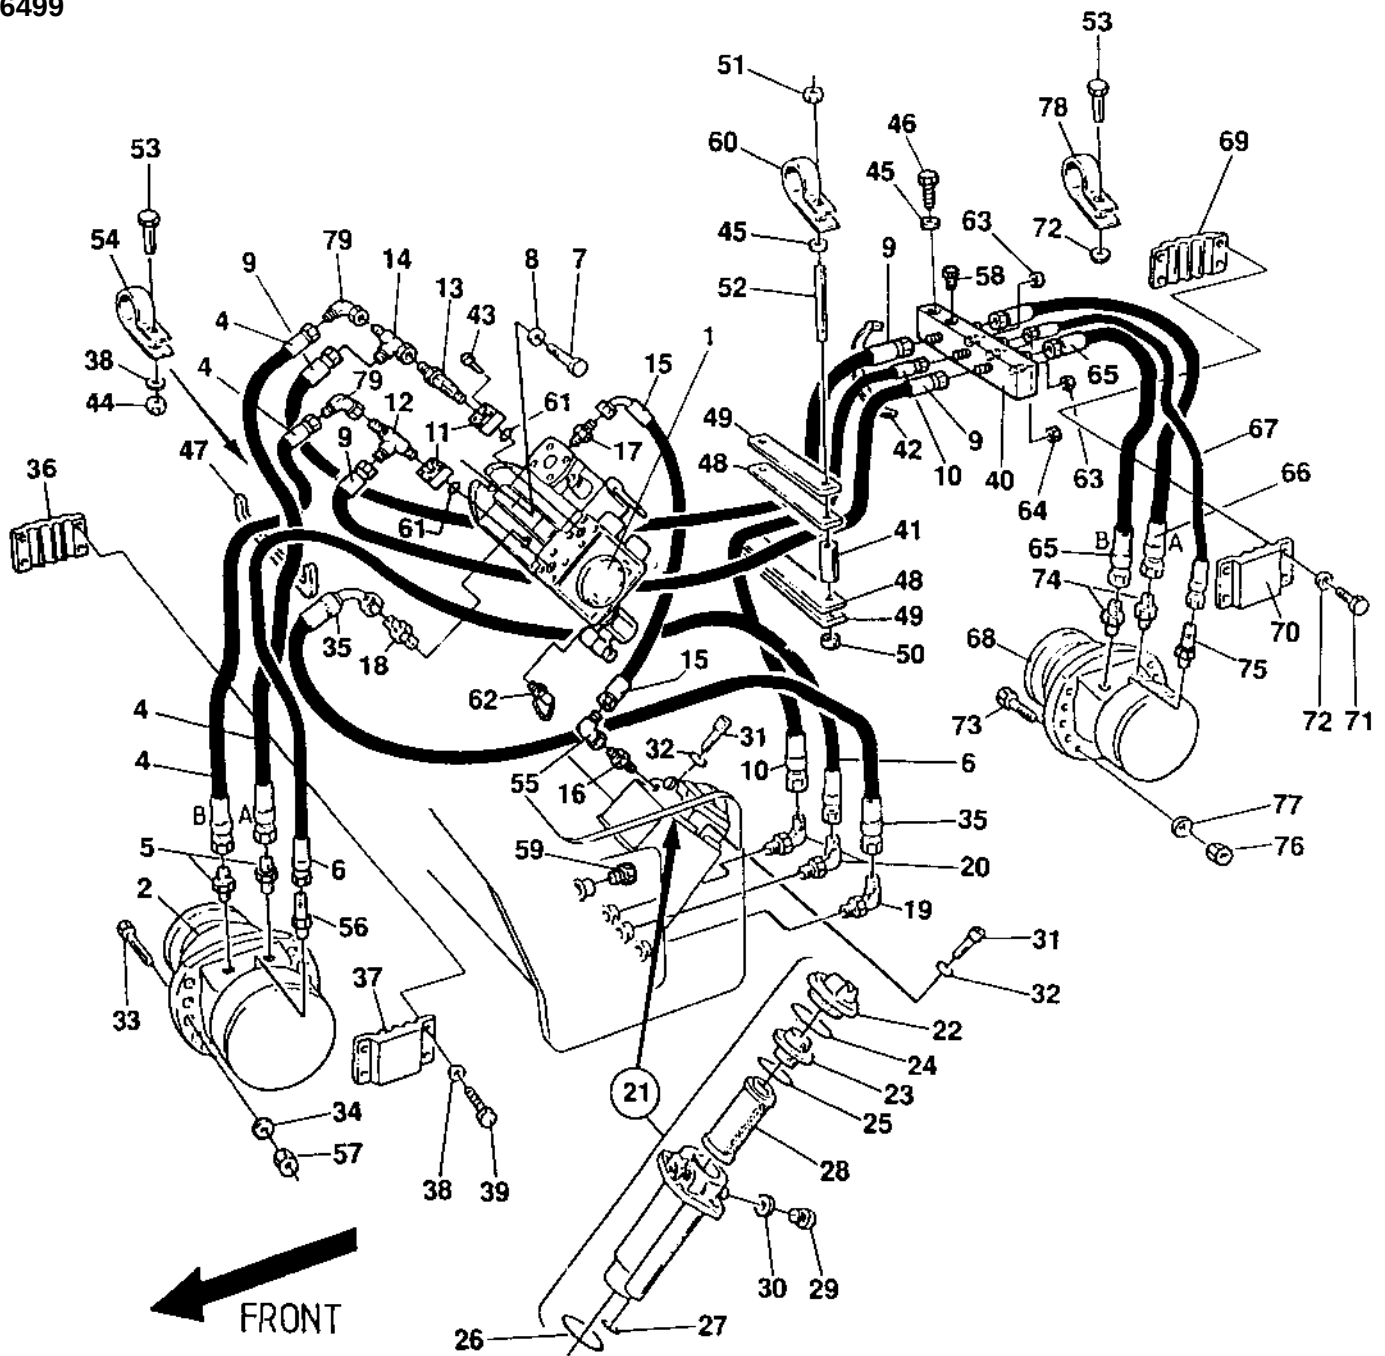

Propulsion system DEUTZ / ISUZU


Ref. No.	Part No.	Rem.	Qty	Description	Code
56	902551		1	Connector	
57	586019		10	Lock nut M12	
58	232070		3	Plug	
59	892446		1	Plug	
60	921099		1	Clamp	
61	813443		2	O-ring	D
62	901157		2	Measuring nipple	D
63	330383		2	Cap hydraulic	
64	230400		1	Cap	D
65	482998		1	Hydraulic hose	
66	483164		1	Hydraulic hose	
67	483069		1	Hydraulic hose	
68	371542		1	Hydraulic motor, propulsion, drum	Up to 60114046 (Page 150)
	371542		1	Hydraulic motor, propulsion, drum	Up to 60124046 (Page 150)
	375631		1	Hydraulic motor, propulsion, drum	From 601X4047 (Page 152)
	375631		1	Hydraulic motor, propulsion, drum	From 6019XXXX (Page 152)
69	371313		1	Hose clamp	
70	371314		1	Hose clamp	
71	500053		5	Screw M8-1,25x20 8,8	
72	904229		5	Washer 8,4x16x1,5	
73	500056		10	Screw M12-1,75x45 8,8	
74	334134		2	Connector	
75	902551		1	Connector	
76	586019		10	Lock nut M12	
77	904231		10	Washer 13x24x2	
78	921119		1	Pipe clamp	
79	334197		2	Elbow 90	

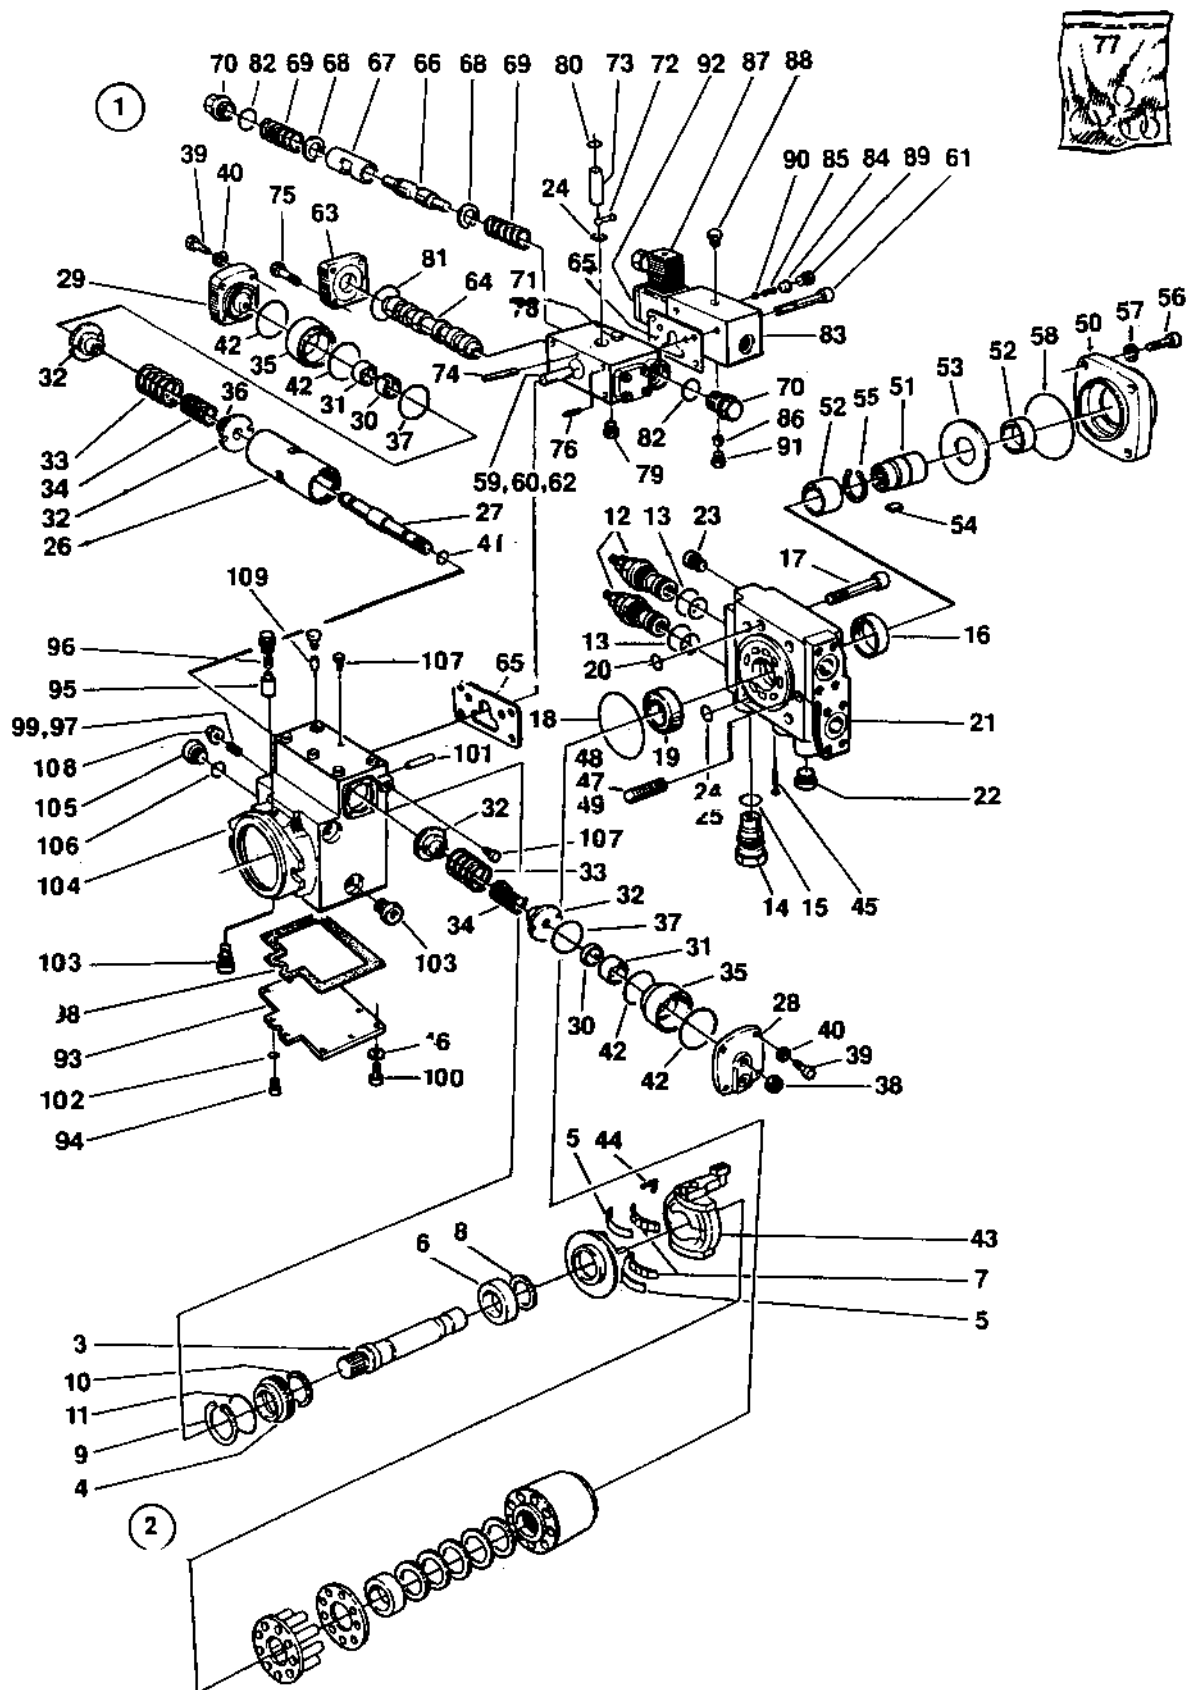

358225 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump	
2	902617		1	.Rotating group	D
3	901748		1	..Shaft	
4	902812		1	..Cover	
5	902618	B	1	..Bearing liner	
6	902619		1	..Roller bearing	D
7	902620		1	..Bearing	D
8	901750		1	..Retaining ring	
9	901749		1	..Snap ring	
10	901740		1	..Shaft seal	D
11	901741		1	..O-ring	D
12	212512	C	2	.Pressure relief valve	D
13	901756		1	..Gasket kit	D
14	212513	D	1	.Pressure relief valve	D
15	901757		1	..O-ring	D
16	902621		1	.Bushing	
17	902622		4	.Screw	
18	902623		1	.O-ring	D
19	901744		1	.Roller bearing	D
20	901758		1	.O-ring	D
21	902624		1	.Screw	
22	902625		1	.Screw	
23	902626		2	.Screw	
24	902813		1	.O-ring	D
25	902627		1	.Pin	
26	902628		1	.Piston	
27	902629		1	.Rod	
28	902630		1	.Cover	
29	902631		1	.Cover	
30	902632		2	.Ring	
31	902633		2	.Sleeve	
32	902634		4	.Spring collar	
33	901753		2	.Spring	
34	901754		2	.Spring	
35	902635		2	.Bushing	
36	902636		1	.Shim	
37	902637		2	.Sealing	D
38	902638		1	.Nut	
39	902639		8	.Screw	
40	902640		8	.Washer	
41	902641		1	.O-ring	D
42	902642		4	.O-ring	D
43	902643	A	1	.Cradle	
44	902644		1	.Wire pin	
45	902697		1	.Screw	
46	902698		2	.Sealing	D
47	902647		1	.Plug	
48	901758		1	.O-ring	D
49	902648		2	.Ring	
50	902649		1	.Cover	
51	902650		1	.Shaft	
52	903557		1	.Bearing bushing	
53	902652		1	.Wheel kit	
54	902653		1	.Key	
55	902654		1	.Retaining ring	
56	902655		4	.Screw	


- A) CPL
B) One pair
C) CPL, 35 MPa
D) CPL, 2 MPa

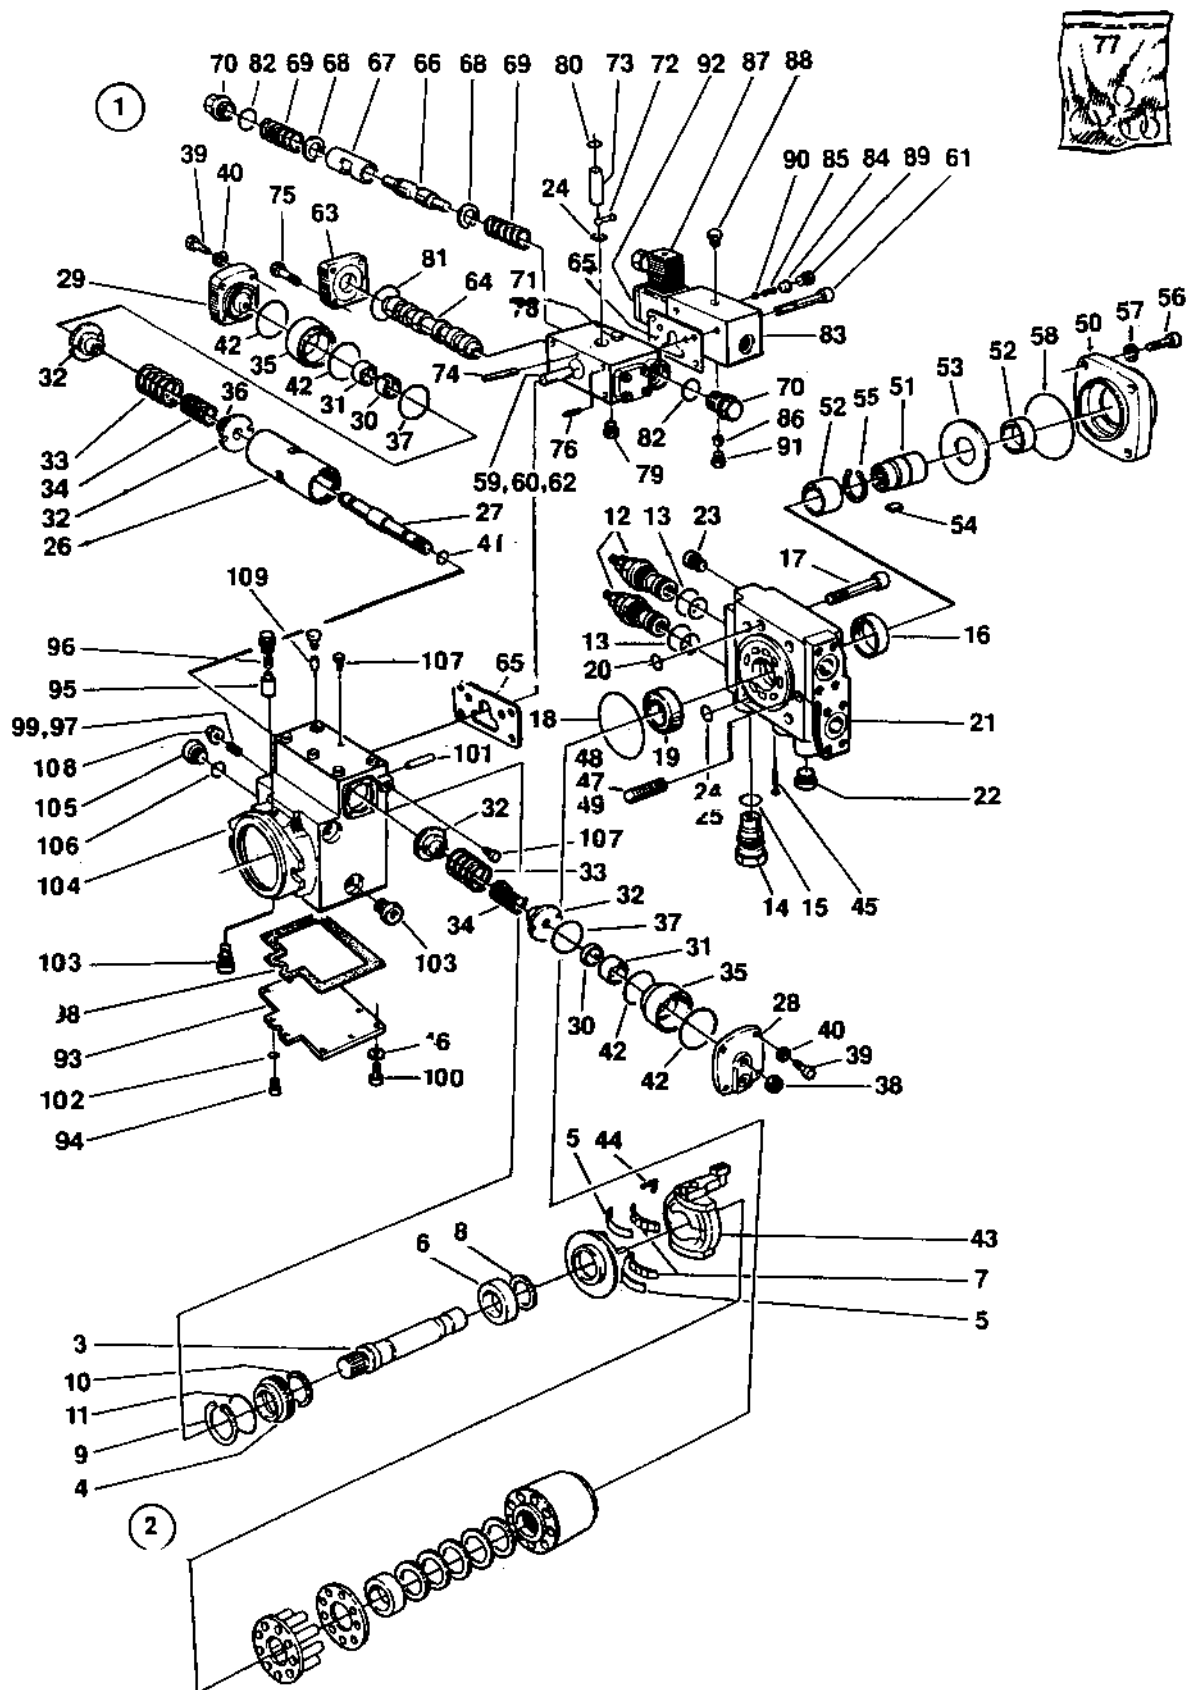

358225 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
57	902656		4	.Washer	
58	902657		1	.O-ring	D
59	902465		1	.Lever	
60	902466		1	.Bolt	
61	902658		4	.Screw	
62	902467		2	.Snap ring	
63	902659		2	.Cover	
64	902660		1	.Piston	
65	902507		2	.Gasket	D
66	902661		1	.Piston	
67	902662		1	.Bushing	
68	902663		2	.Spring collar	
69	902664		2	.Spring	
70	902665		2	.Screw	
71	902666		1	.Pin	
72	902568		1	.Trunnion	
73	902667		1	.Shaft	
74	902668		1	.Pin	
75	902669		8	.Screw	
76	902670		2	.Pin	
77	902671		1	.Seal kit	D
78			1	..Nut	D
79			1	..Screw	D
80			1	..O-ring	D
81			2	..O-ring	D
82			2	..O-ring	D
83	903365		1	.Valve, cpl	
84	902673		1	..Bushing	
85	902674		1	..Spring	
86	902675		1	..Orifice 0,7 mm	
87	902676	A	1	..Valve	D
88	902677		1	..Pin	
89	902678		1	..Screw	
90	902679		1	..Ball	
91	902680		1	..Screw	
92	902681		2	..Screw	
93	902682		1	.Cover	
94	902683		2	.Screw	
95	902684		2	.Pin	
96	902685		2	.Spring	
97	901742		1	.Pin	
98	902686		1	.Gasket	D
99	902687		1	.Pin	
100	902688		11	.Screw	
101	902689		2	.Pin	
102	902690		2	.Ring	
103	902691		3	.Screw	
104	902692		5	.Screw	
105	902693		1	.Screw	
106	902814		1	.O-ring	D
107	902677		2	.Pin	
108	902695		1	.Nut	
109	212571		2	.Orifice	

A) CPL

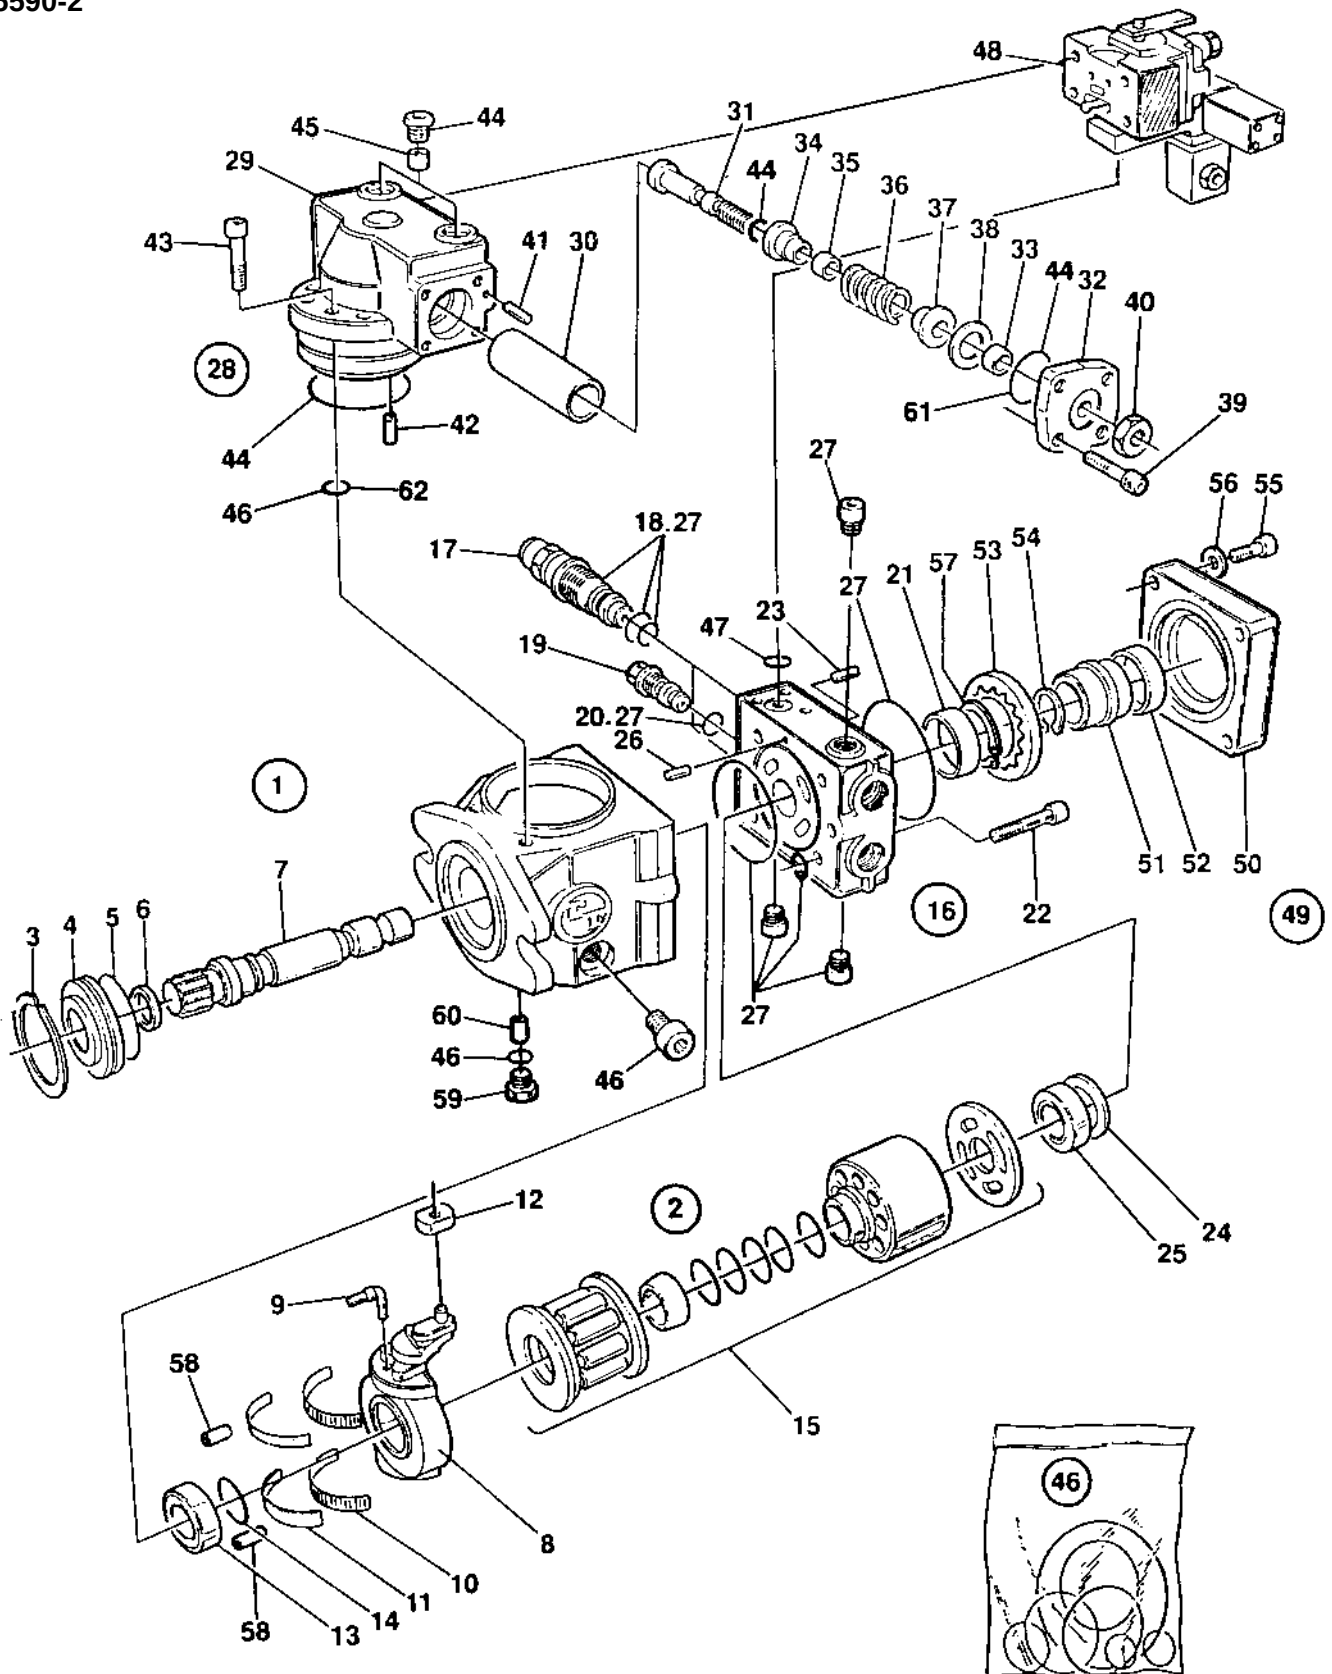

358470 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic pump, Cpl	
2	903202		1	..Rotating group	D
3	902707		1	..Snap ring	
4	902701	B	1	..Cover	
5	902709	B	1	..O-ring	D
6	903203	B	1	..Shaft seal	D
7	902700		1	..Shaft	
8	903204		1	..Cradle	
9	902702		2	..Wire	
10	902705		1	..Bearing	D
11	902703	C	1	..Bearing liner	
12	902645		1	..Slide ring	
13	902704		1	..Bearing	D
14	902706		1	..Snap ring	
15			1	..Cylinder with pistons, cpl	
16	903206	A	1	..Valve block	D
17	902710	A	2	..Valve 35MPa	D
18	902711	B	1	...Seal kit	D
19	902712	A	1	..Valve 2MPa	D
20	902713	B	1	...O-ring	D
21	902714		1	..Bushing	
22	902715		4	..Screw	
23	902716		4	..Pin	
24	902718		1	..Snap ring	
25	902717		1	..Bearing	
26	902719		1	..Pin	
27	903208	B	1	..Seal kit	D
28	903209	A	1	..Control valve	D
29			1	..Housing	D
30	903210		1	..Piston	
31	903211		1	..Rod	
32			1	..Cover	
33	902734		1	..Ring	
34	903213		1	..Spring collar	
35	909513		1	..Spacer	
36	903215		1	..Spring	
37	903216		1	..Spring collar	
38	903217		1	..Snap ring	
39	902737		4	..Screw	
40	903218		1	..Nut	
41	902677		1	..Pin	
42	902670		1	..Pin	
43	903221		4	..Screw	
44	903222	B	1	..Seal kit	D
45	903254	1	2	..Orifice	D
	902675	2	2	..Orifice 0,7 mm	
46	903229		1	..Seal kit	D
47	902783	B	1	..O-ring	D
48			1	..Control unit, hydraulic pump (Page 134)	
49	903224	A	1	..Charge pump	D
50	902747		1	..Bearing cover	
51	902748		1	..Shaft	
52	902714		1	..Bushing	


1) Up to pump SN 33788155

2) From pump SN 33788156

A) CPL


B) Included in item 46

C) One pair

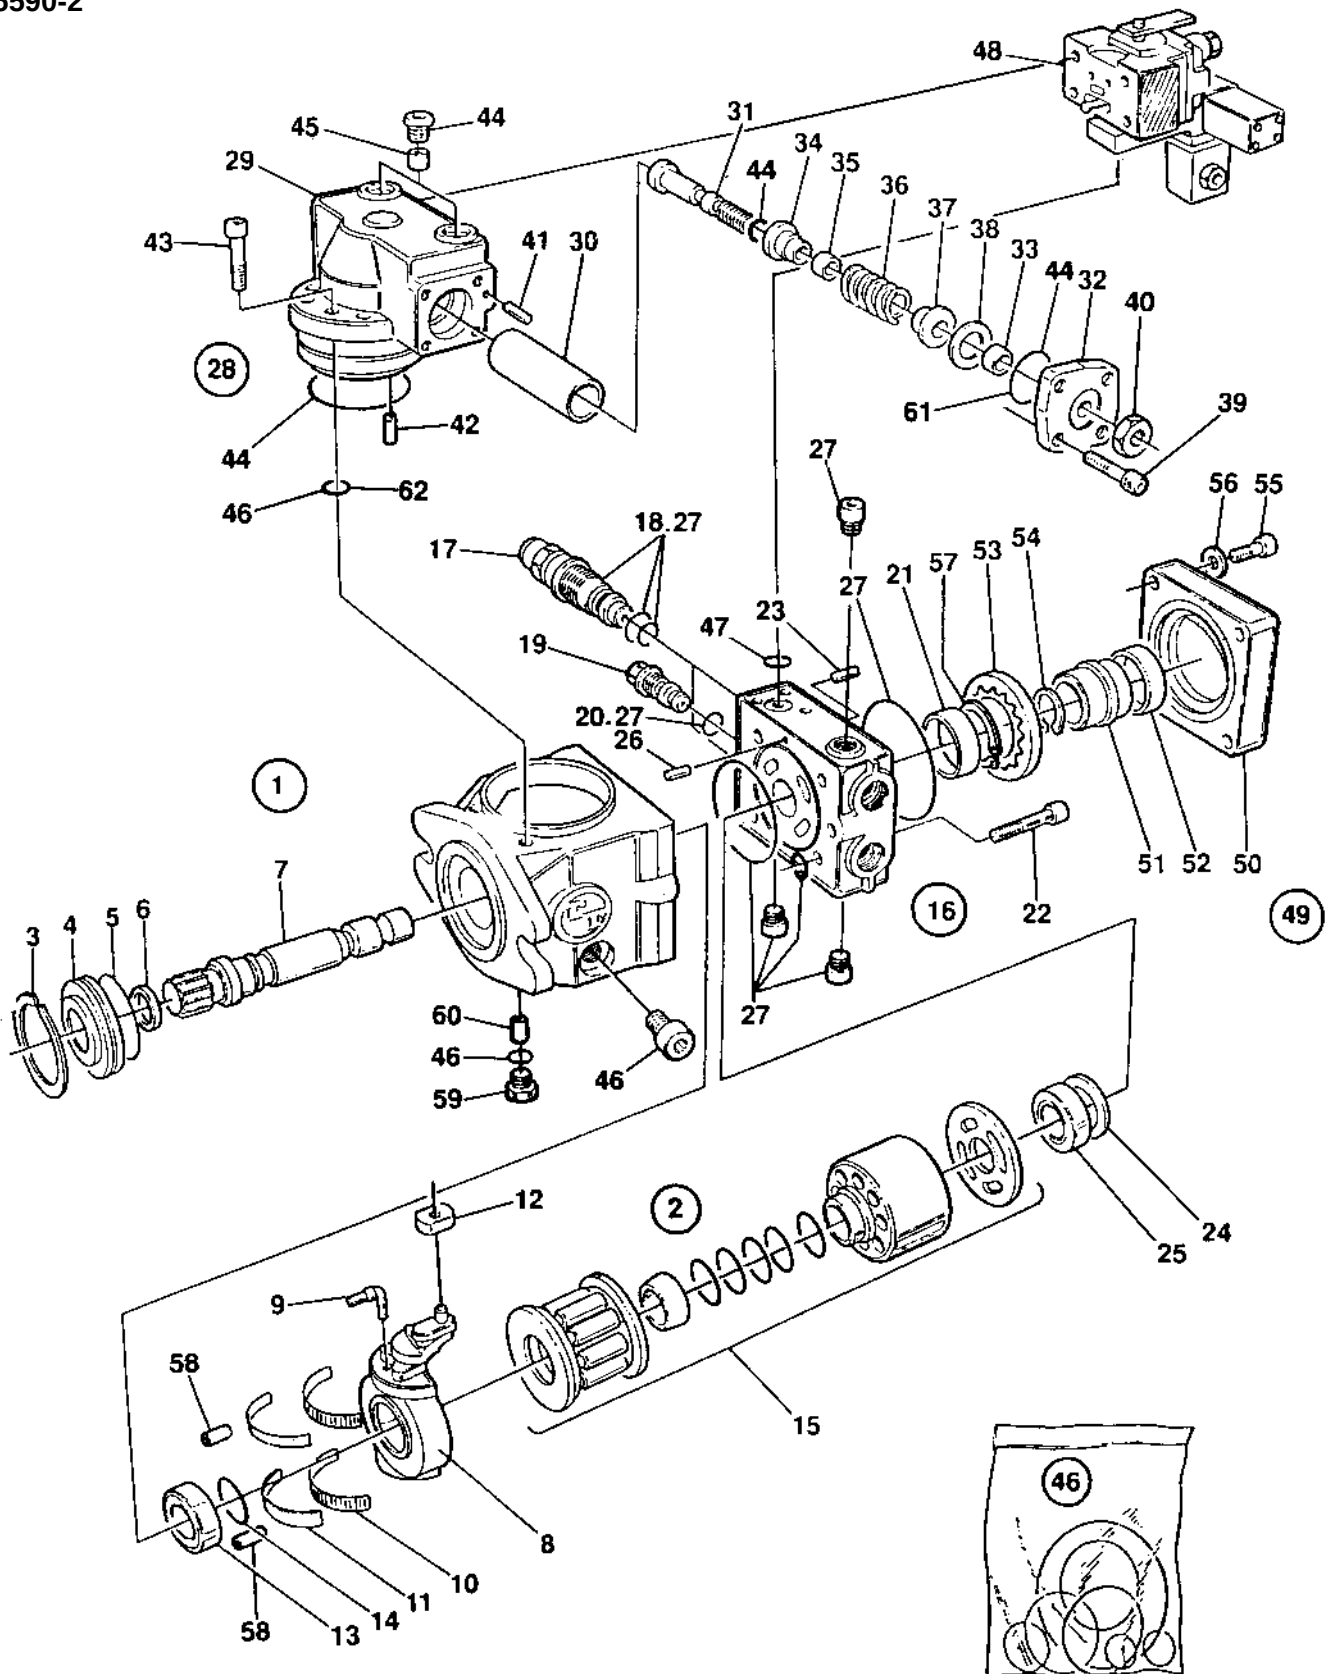

358470 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
53	902750	A	1	..Wheel	
54	902751		1	..Snap ring	
55	902752		4	..Screw	
56	902753		4	..Washer	
57	902754		1	..Snap ring	
58	902792		2	..Pin	
59	902788		1	..Plug	
60	902789		2	..Pin	
61	909468	3	1	.O-ring	
62	909469	4	4	.O-ring	
3)	Up to pump SN 3339515				
4)	Up to pump SN 3254771				
A)	CPL				

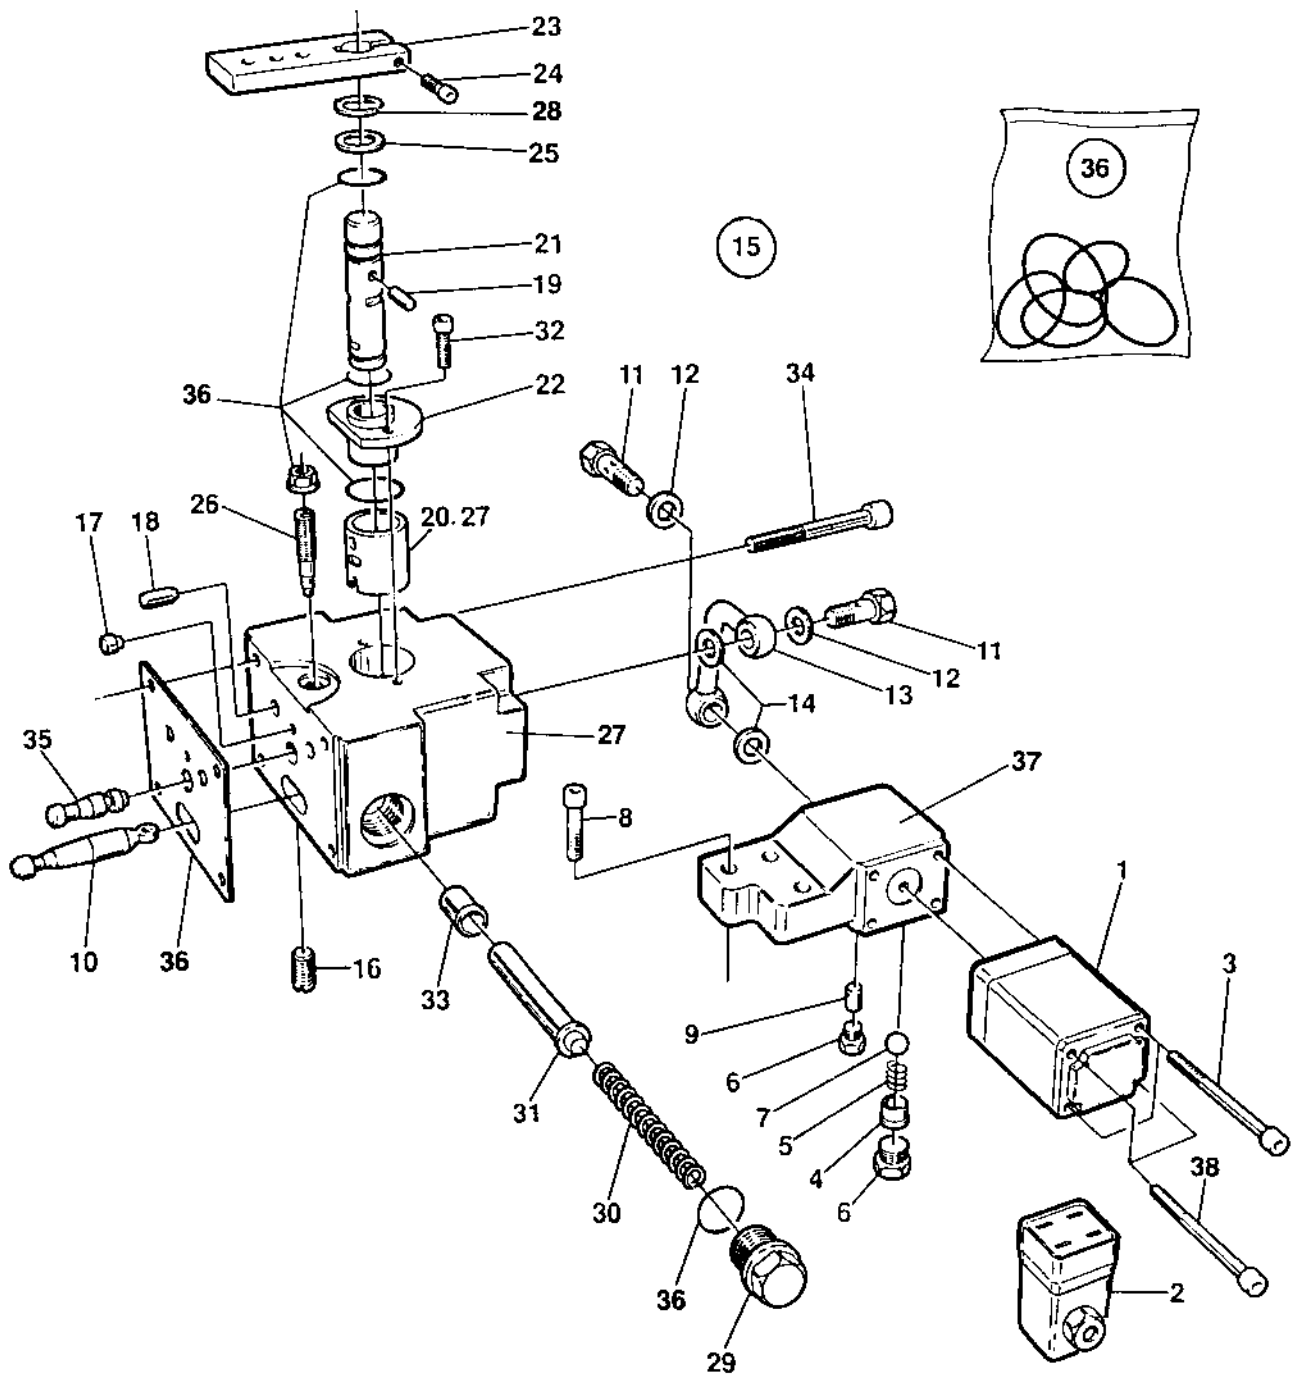

Control unit, hydraulic pump


Ref. No.	Part No.	Rem.	Qty	Description	Code
			1	Control unit	
1	902779		1	.Valve	
2			1	..Connector	
3	902681	A	2	.Screw	
4	902777		1	.Bushing	
5	902778		1	.Spring	
6	902678	1	2	.Screw	
7	902679		1	.Ball	
8	902784		3	.Screw	
9	903228		1	.Valve	D
10	903225		1	.Lever	
11	902744		2	.Screw	
12	902746	1	2	.Seal ring	
13	903223		1	.Line	
14	902745	1	2	.Seal ring	
15	902774	B	1	.Control	D
16	902762		1	..Pin	
17	903373		1	..Throttling 0,8 mm	
18	902670		2	..Pin	
19	902767		1	..Needle roller	
20	902756		1	..Bushing	
21	902757		1	..Shaft	
22	902761		1	..Cover	
23	902763		1	..Lever	
24	902770		1	..Screw	
25	902773		1	..Shim	
26	903560		1	..Pin	
27			1	..Housing	
28	902772		1	..Snap ring	
29	902760		2	..Screw	
30	902764		2	..Spring	
31	902759		2	..Screw	
32	902771		2	..Screw	
33	902766		2	..Bushing	
34	902769		4	..Screw	
35	902758		1	..Lever	
36	903226	1	1	..Seal kit	D
37	903227		1	.Valve plate	
38	901413	D	2	.Screw	

1) Included in kit, item 46

A) L=75 mm

B) CPL


D) L=65 mm

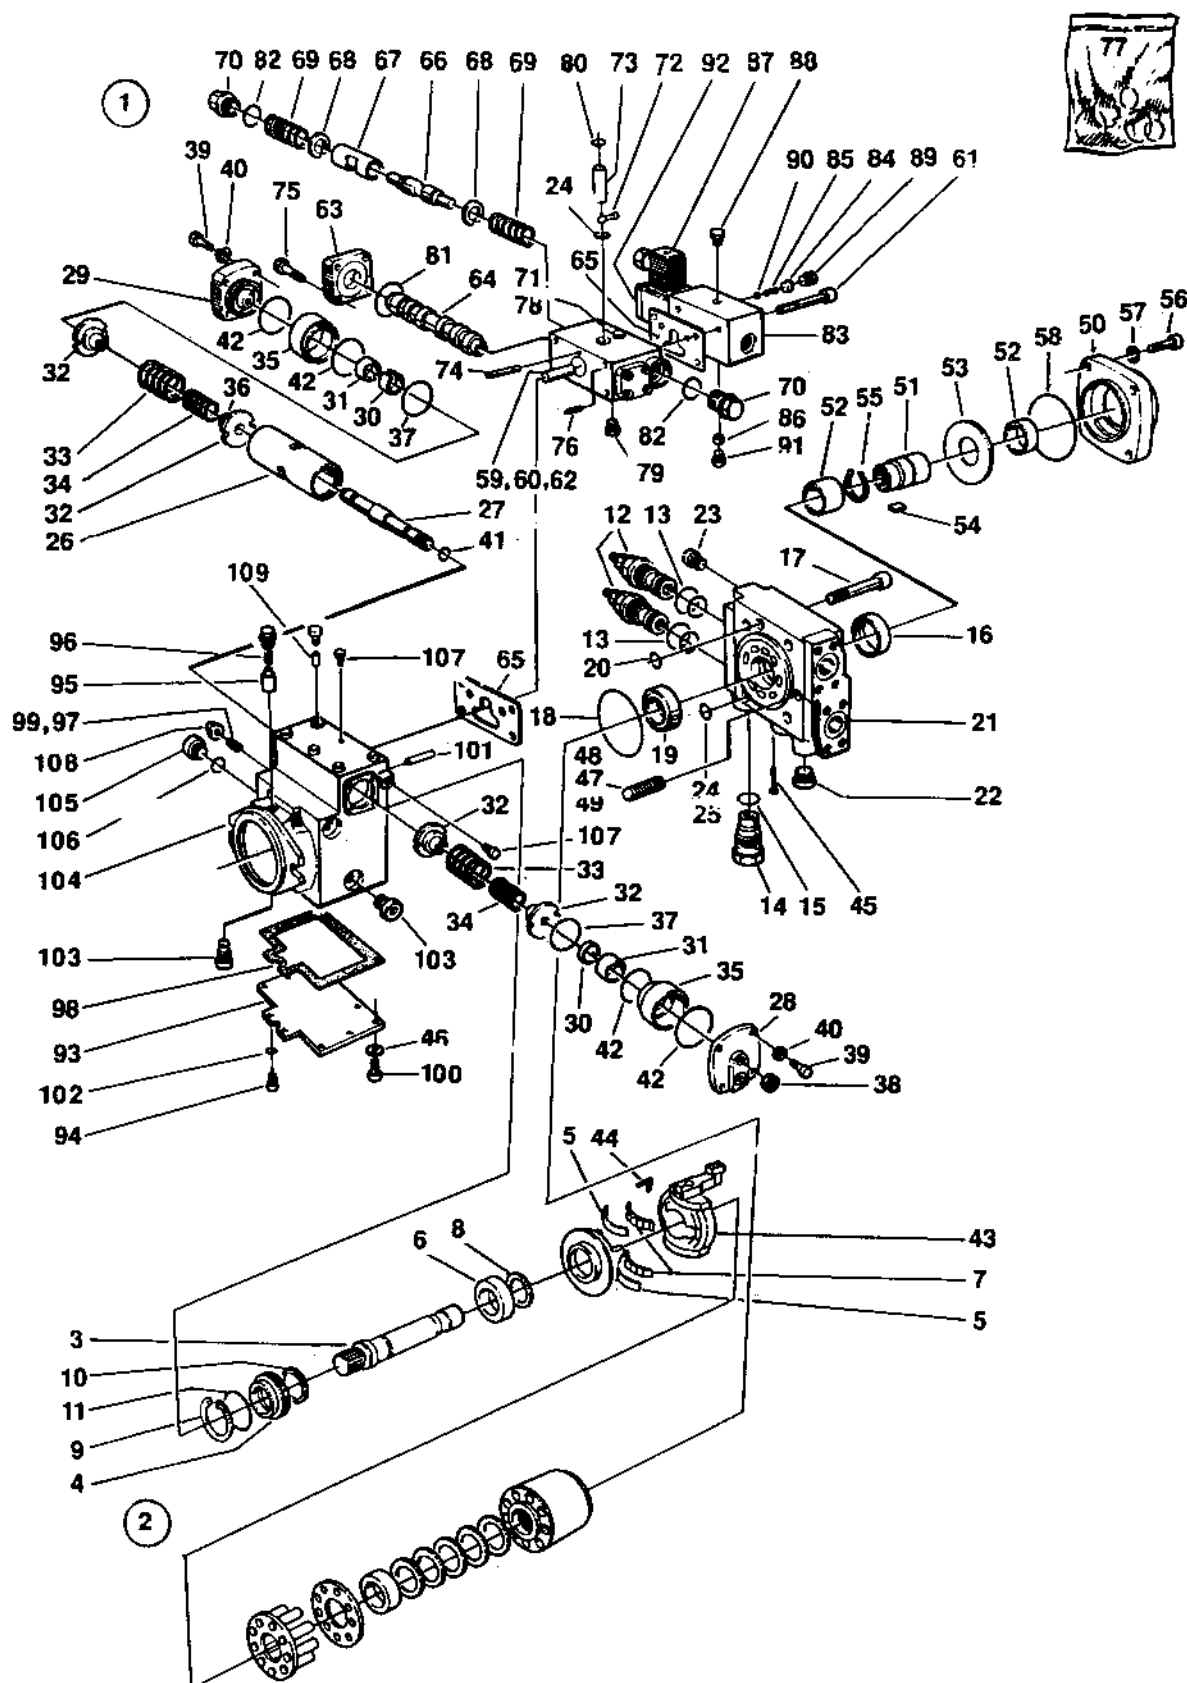

357008 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic pump	
2	902617		1	.Rotating group	D
3	901748		1	..Shaft	
4	902812		1	..Cover	
5	902618	A	1	..Bearing liner	
6	902619		1	..Roller bearing	D
7	902620		1	..Bearing	D
8	901750		1	..Retaining ring	
9	901749		1	..Snap ring	
10	901740		1	..Shaft seal	D
11	901741		1	..O-ring	D
12	212512	B	2	.Pressure relief valve	D
13	901756		1	..Gasket kit	D
14	212513	C	1	.Pressure relief valve	D
15	901757		1	..O-ring	D
16	902621		1	.Bushing	
17	902622		4	.Screw	
18	902623		1	.O-ring	D
19	901744		1	.Roller bearing	D
20	901758		1	.O-ring	D
21	902624		1	.Screw	
22	902625		1	.Screw	
23	902626		2	.Screw	
24	902813		1	.O-ring	D
25	902627		1	.Pin	
26	902628		1	.Piston	
27	902629		1	.Rod	
28	902630		1	.Cover	
29	902631		1	.Cover	
30	902632		2	.Ring	
31	902633		2	.Sleeve	
32	902634		4	.Spring collar	
33	901753		2	.Spring	
34	901754		2	.Spring	
35	902635		2	.Bushing	
36	902636		1	.Shim	
37	902637		2	.Sealing	D
38	902638		1	.Nut	
39	902639		8	.Screw	
40	902640		8	.Washer	
41	902641		1	.O-ring	D
42	902642		4	.O-ring	D
43	902643	D	1	.Cradle	
44	902644		1	.Wire pin	
45	902697		1	.Screw	
46	902698		2	.Sealing	D
47	902647		1	.Plug	
48	901758		1	.O-ring	D
49	902648		2	.Ring	
50	902649		1	.Cover	
51	902650		1	.Shaft	
52	903557		1	.Bearing bushing	
53	902652		1	.Wheel kit	
54	902653		1	.Key	
55	902654		1	.Retaining ring	
56	902655		4	.Screw	


- A) One pair
B) CPL, 35 MPa
C) CPL, 2 MPa
D) CPL

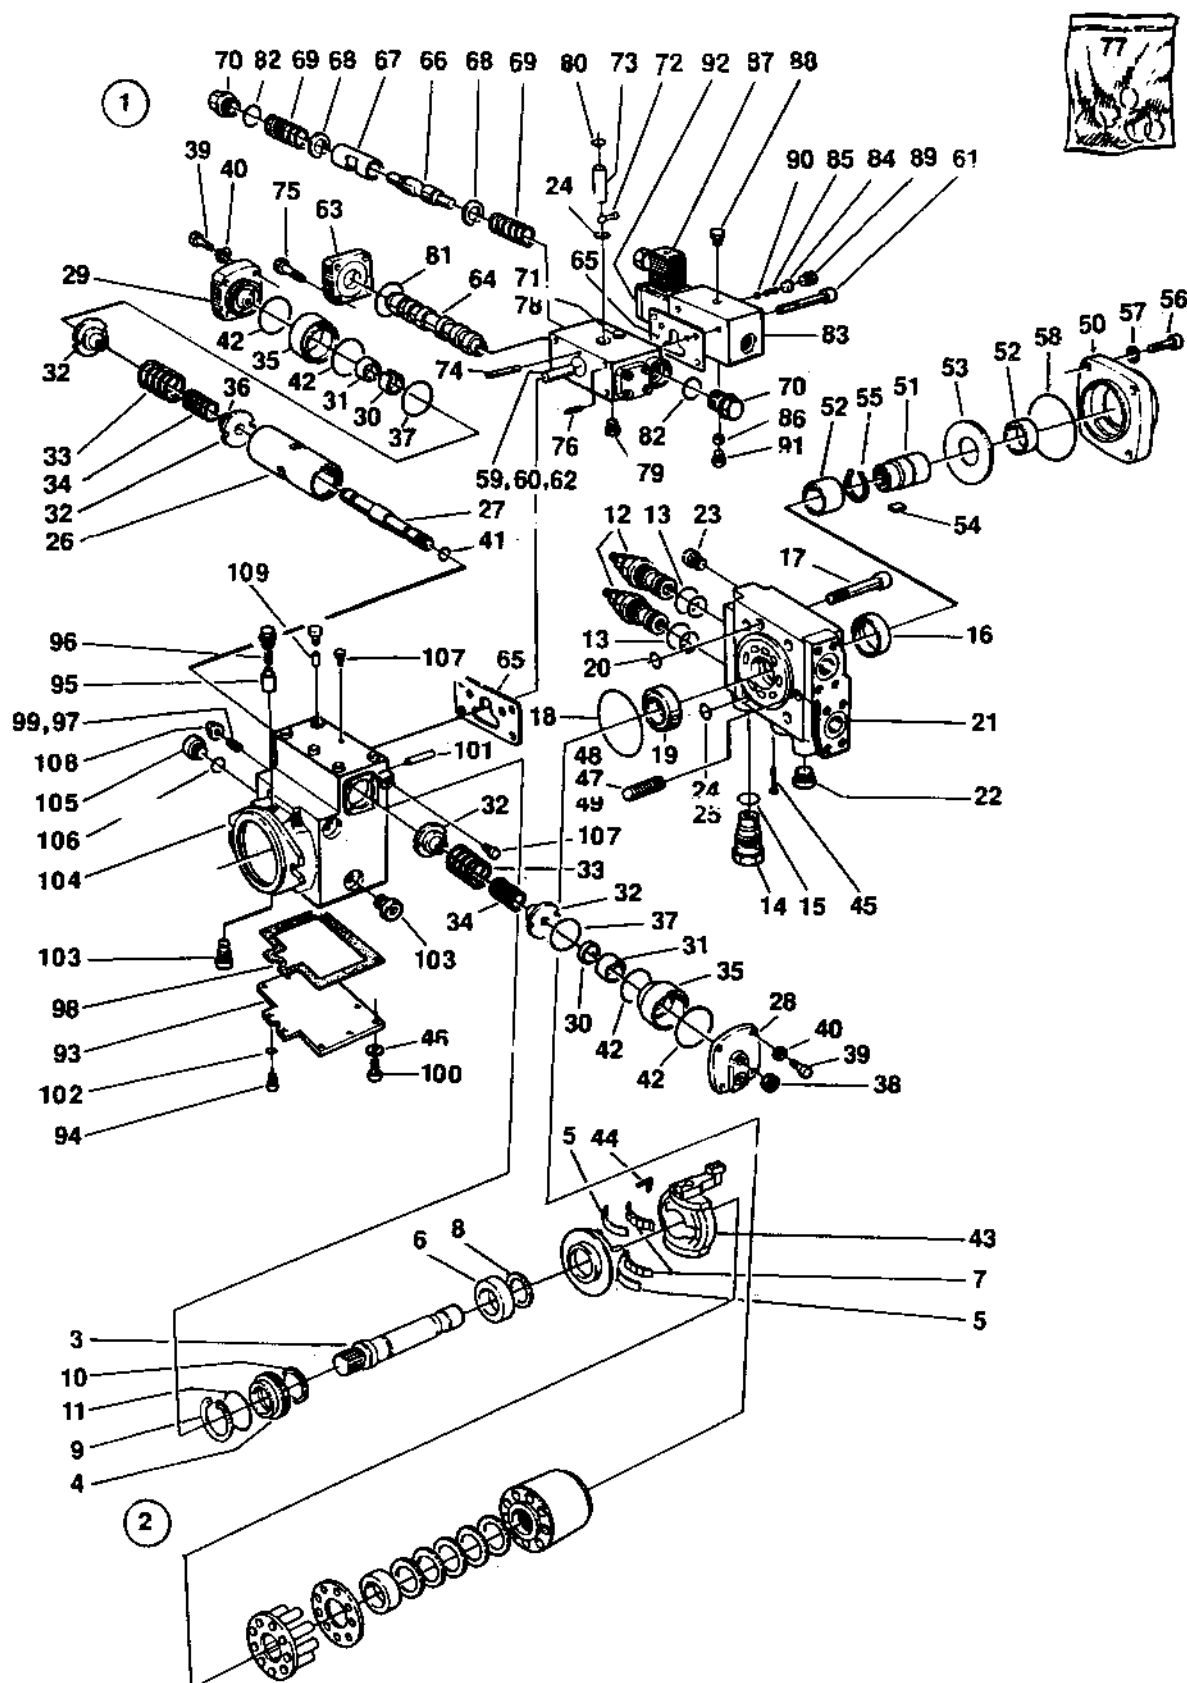

357008 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
57	902656		4	.Washer	
58	902657		1	.O-ring	D
59	902465		1	.Lever	
60	902466		1	.Bolt	
61	902658		4	.Screw	
62	902467		2	.Snap ring	
63	902659		2	.Cover	
64	902660		1	.Piston	
65	902507		2	.Gasket	D
66	902661		1	.Piston	
67	902662		1	.Bushing	
68	902663		2	.Spring collar	
69	902664		2	.Spring	
70	902665		2	.Screw	
71	902666		1	.Pin	
72	902568		1	.Trunnion	
73	902667		1	.Shaft	
74	902668		1	.Pin	
75	902669		8	.Screw	
76	902670		2	.Pin	
77	902671		1	.Seal kit	D
78			1	..Nut	D
79			1	..Screw	D
80			1	..O-ring	D
81			2	..O-ring	D
82			2	..O-ring	D
83	903365		1	.Valve, cpl	
84	902673		1	..Bushing	
85	902674		1	..Spring	
86	902675		1	..Orifice 0,7 mm	
87	902676	D	1	..Valve	D
88	902677		1	..Pin	
89	902678		1	..Screw	
90	902679		1	..Ball	
91	902680		1	..Screw	
92	902681		2	..Screw	
93	902682		1	.Cover	
94	902683		2	.Screw	
95	902684		2	.Pin	
96	902685		2	.Spring	
97	901742		1	.Pin	
98	902686		1	.Gasket	D
99	902687		1	.Pin	
100	902688		11	.Screw	
101	902689		2	.Pin	
102	902690		2	.Ring	
103	902691		3	.Screw	
104	902692		5	.Screw	
105	902693		1	.Screw	
106	902814		1	.O-ring	D
107	902677		2	.Pin	
108	902695		1	.Nut	
109	902696		2	.Orifice	


D) CPL

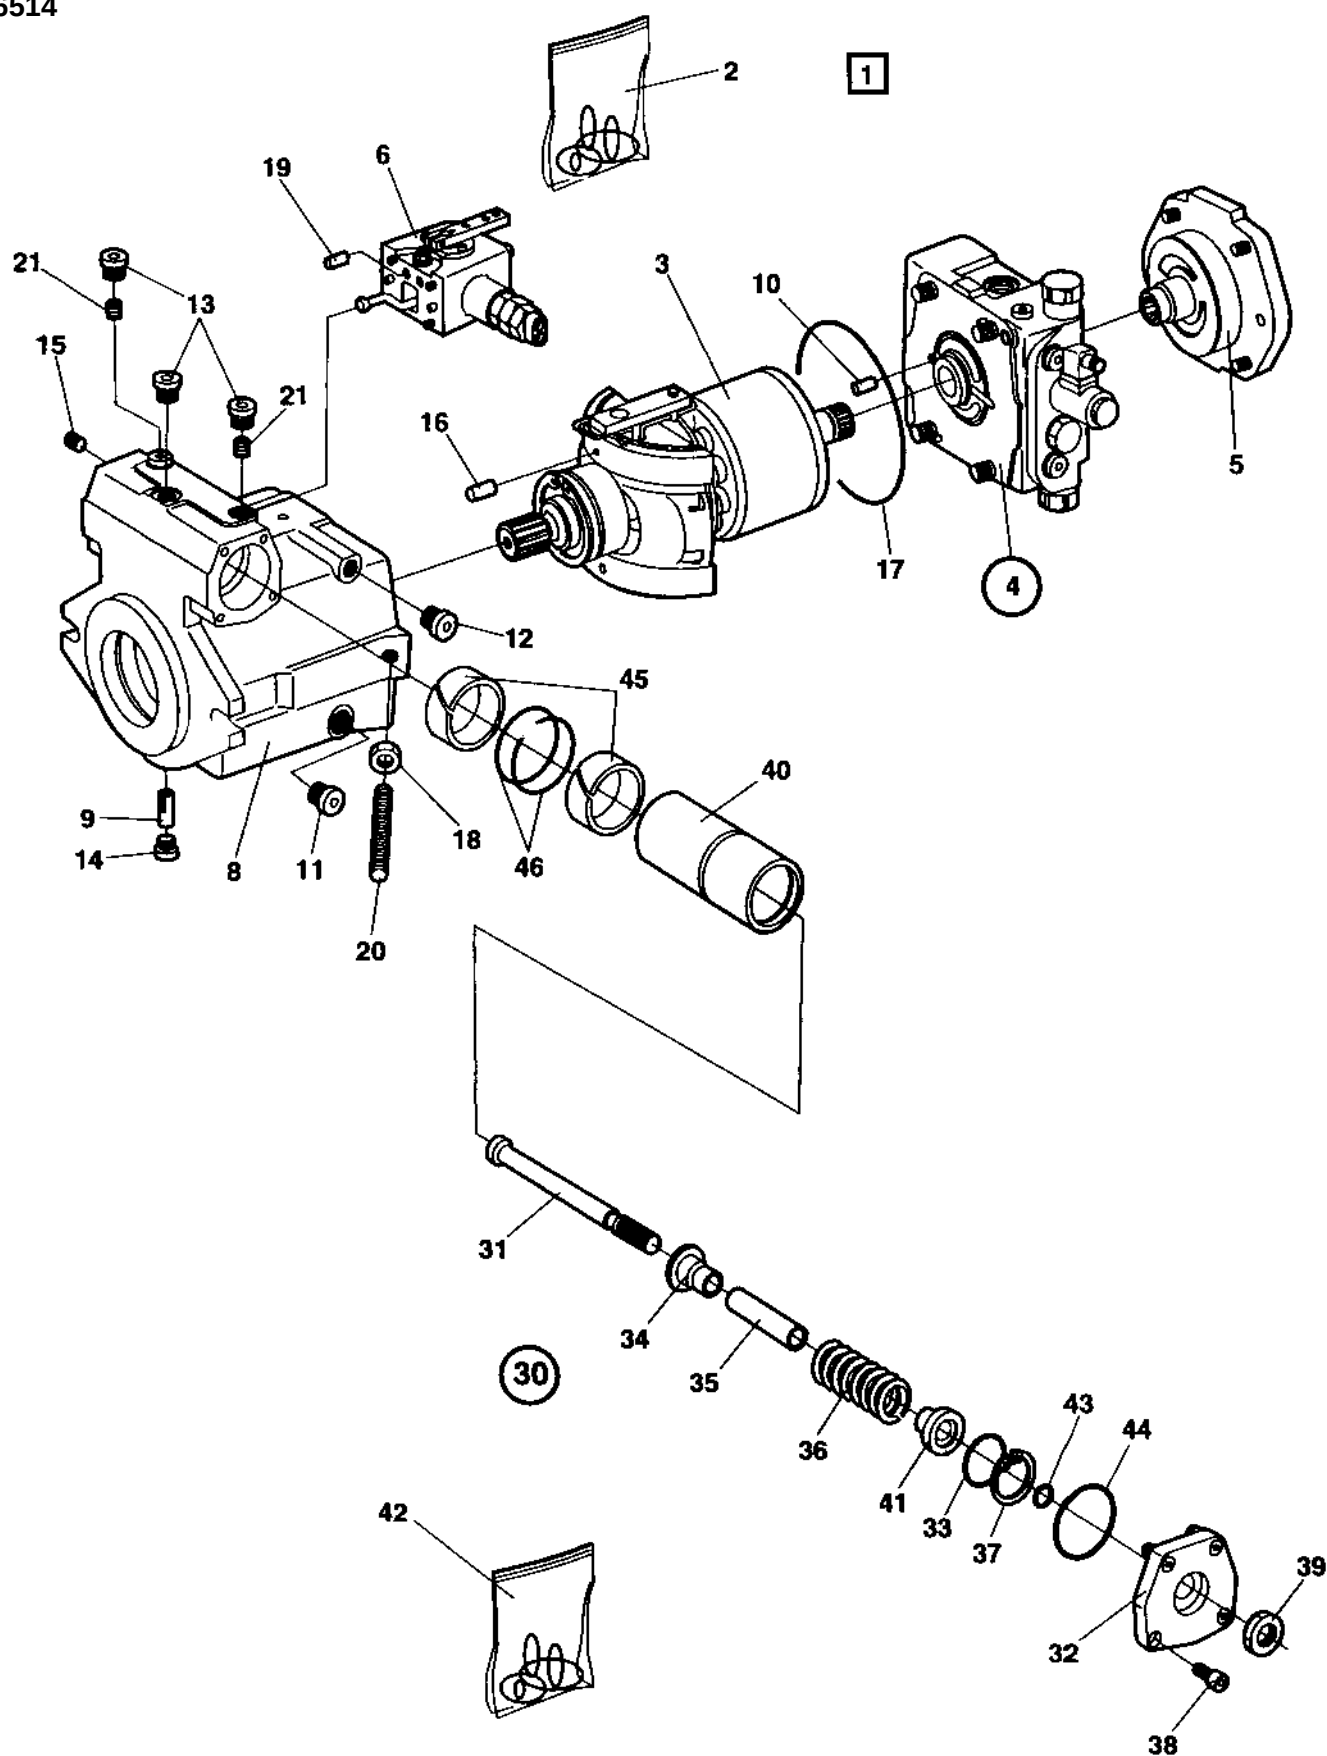

372352 Hydraulic pump, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump	
2	936690	1	1	.Seal kit	
3		2	1	.Rotating group, cpl	
4		2	1	.Valve block, cpl	
5		2	1	.Charge pump, cpl	
6			1	.Control unit, cpl (Page 144)	
8			1	.Housing	
9	935158		1	.Pin	
10	902670		1	.Pin	
11	935219		1	.Plug	
12	902724		1	.Plug	
13	902625		3	.Screw	
14	902624		1	.Screw	
15	909514		1	.Pin	
16	902792		1	.Pin	
17	935159		1	.O-ring	
18	902695		1	.Nut	
19	935160		1	.Orifice	
20	902687		1	.Pin	
21	902696		2	.Orifice	
30	909757		1	.Control valve	
31			1	..Rod	
32			1	..Cover	
33			1	..Ring	
34			1	..Spring collar	
35			1	..Spacer	
36			1	..Spring	
37			1	..Snap ring	
38			4	..Screw	
39			1	..Nut	
40			1	..Piston	
41			1	..Spring collar	
42	909758		1	..Seal kit	D
43			1	...O-ring	D
44			1	...O-ring	D
45			2	...Seal ring	D
46			2	...Seal ring	D

- 1) Includes all gaskets and o-rings for the hydraulic pump
2) Exploded in section "Rotating group, valves, charge pump
A) CPL

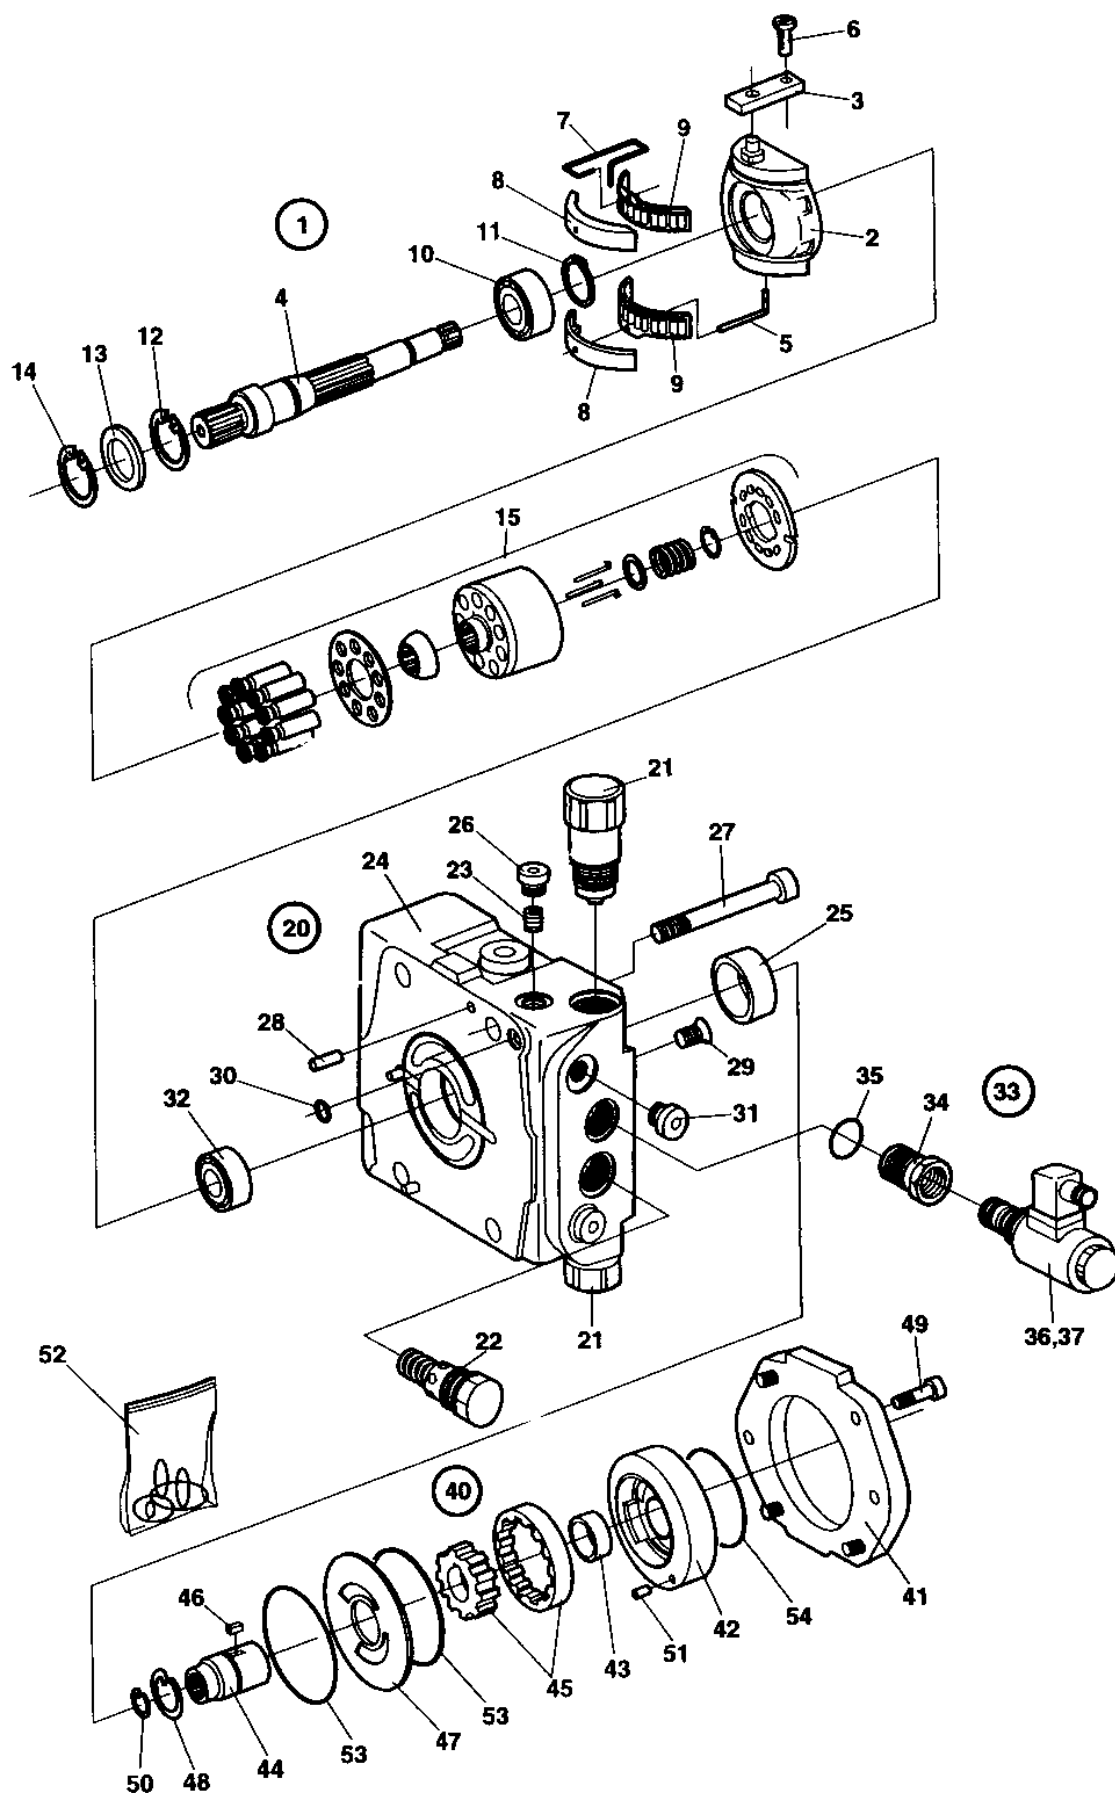


Rotating group, valves, charge pump.

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	935161		1	Rotating group	
2	935171		1	.Cradle	
3	935162		1	.Ring	
4	935163		1	.Shaft	
5	902644		1	.Wire pin	
6	935164		1	.Pin	
7	935165		1	.Wire pin	
8	935166	A	1	.Bearing liner	
9	902620		1	.Bearing	D
10	902619		1	.Roller bearing	D
11	901750		1	.Retaining ring	
12	935170		1	.Retaining ring	
13	936691		1	.Seal ring	
14	935170		1	.Retaining ring	
15	935167		1	.Cylinder with pistons, cpl	
20			1	Valve block	
21	935172		2	.Relief valve	D
22	903471		1	.Relief valve	D
23	936692		1	.Check valve	D
24	936693		1	.Valve block	
25	903557		1	.Bearing bushing	
26	935176		1	.Plug	
27	935177		4	.Screw	
28	908384		2	.Pin	
29	909514		2	.Pin	
30	902641		2	.O-ring	D
31	902625		2	.Screw	
32	901744		1	.Roller bearing	D
33		B	1	.Solenoid valve	D
34	935178		1	..Adapter	
35	927278		1	..O-ring	D
36	935179		1	..Valve, cpl	D
37	935180		1	...Solenoid	D
40			1	Charge pump	D
41	935182		1	.Cover	
42	935183		1	.Housing	
43	903557		1	.Bearing bushing	
44	935184		1	.Shaft	
45	936706		1	.Wheel set	D
46	935186		1	.Key	
47	935187		1	.Wear plate	
48	902654		1	.Retaining ring	
49	935188		4	.Screw	
50	935189		1	.Retaining ring	
51	935190		1	.Cylindrical pin	
52	935191		1	.Seal kit	D
53			2	..Seal	D
54			1	..O-ring	D

A) One pair

B) CPL

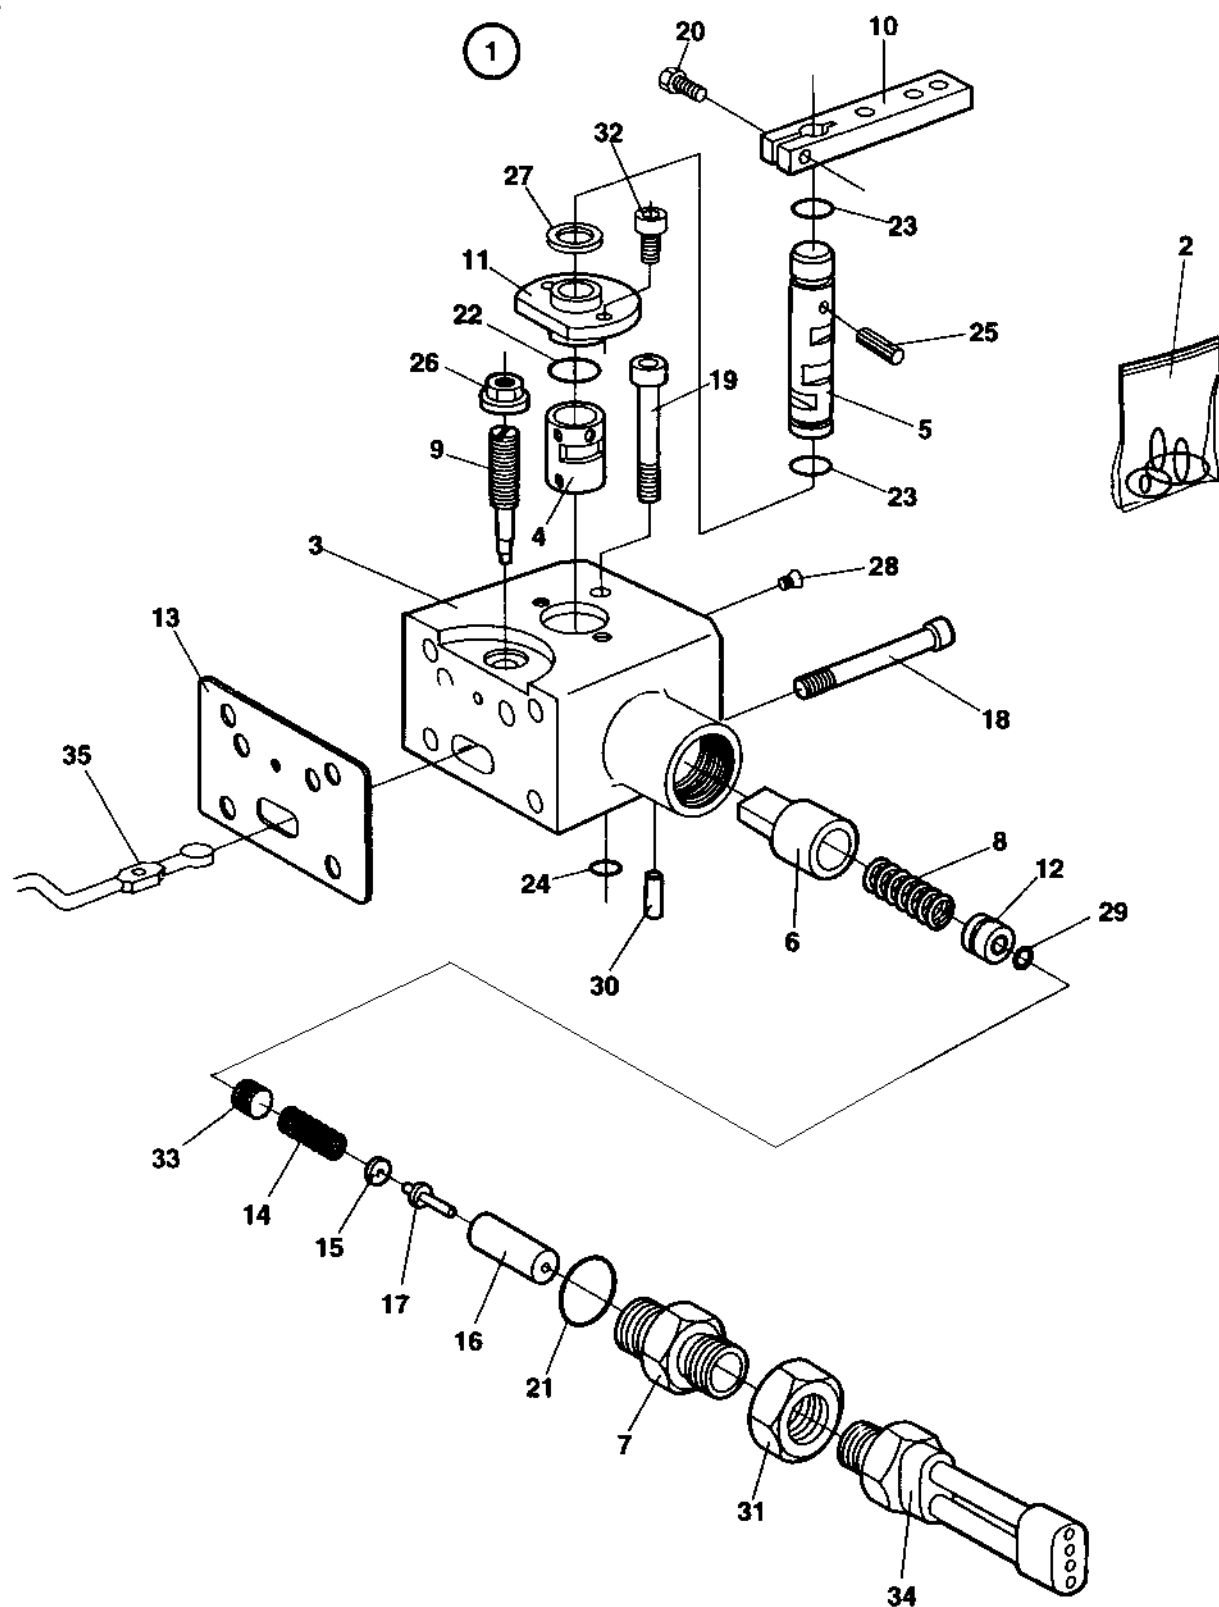


Control unit, cpl

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	935194	A	1	Control unit	D
2	935195		1	.Seal kit	
3	935196		1	.Housing	
4	935197		1	.Bushing	
5	935198		1	.Shaft	
6	935199		1	.Spring bush	
7	935201		1	.Adapter	
8	935202		1	.Pressure spring	
9	935203		1	.Eccentric pin	
10			1	.Lever	
11	935204		1	.Cover	D
12	935205		1	.Bushing	
13	935218	B	1	.Gasket	
14	935206		1	.Spring	
15	935207		1	.Spring collar	
16	935208		1	.Spring cage	
17	935209		1	.Pin	
18	935210		4	.Screw	
19	935211		1	.Screw	
20	902770		1	.Screw	
21		B	1	.O-ring	D
22		B	1	.O-ring	
23		B	3	.O-ring	
24		B	1	.O-ring	
25	902767		1	.Needle roller	
26		B	1	.Nut	
27	902773		1	.Shim	
28	935212		1	.Pin	
29		B	1	.O-ring	
30	935190		1	.Cylindrical pin	
31	935214		1	.Nut	D
32	902771		2	.Screw	
33	935215		1	.Plug	
34	935200		1	.Switch, cpl	
35	935216		1	Lever	

- A) CPL
 B) Incl. in item 2

357023 Hydraulic motor, propulsion, drum

15476-1

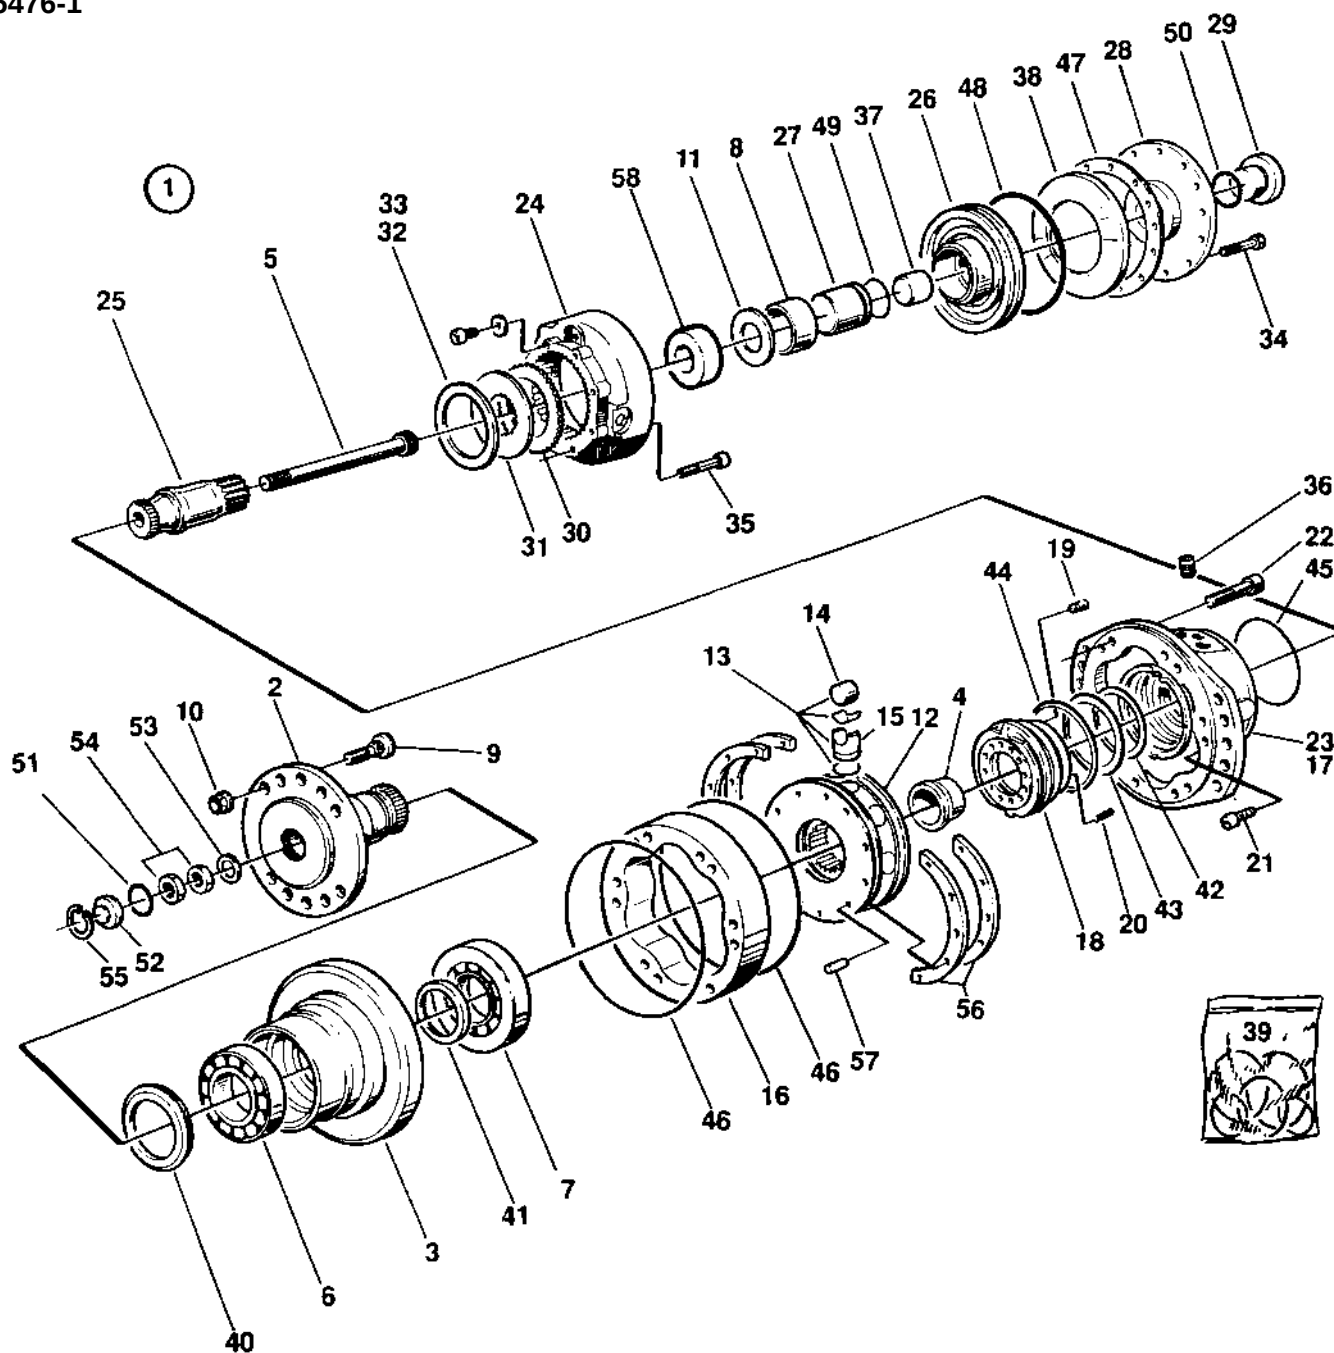

357023 Hydraulic motor, propulsion, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor, Cpl	
2	902385	C	1	.Shaft	
	903291	D	1	.Shaft	
3	902386	C	1	.Housing	
	903292	D	1	.Housing	
4	902871		1	.Spacer	
5	923447		1	.Screw	
6	902389		1	.Bearing	D
7	902390		1	.Bearing	D
8	902418		1	.Sleeve	
9	902391		5	.Wheel stud	
10	902392		5	.Wheel nut	D
11	902417		1	.Thrust washer	
12	902470		1	.Cylinder block	
13			1	.Piston, cpl	
14	903453		1	..Roller	
15	903452		1	..Piston	
16	902394		1	.Piston cam	
17	902395		1	.Housing	
18	902396		1	.Distributor ring	
19	902397		1	.Pin	
20	902398		6	.Spring	
21	902399	A	1	.Plug	
22	902799		6	.Screw	
23	902401		1	.Sign	
24	902402		1	.Brake housing	
25	902872		1	.Shaft	
26	902404		1	.Piston	
27	902405		1	.Rod	
28	902406	A	1	.End cover	
29	902407	C	1	.Plug	
	903295	D	1	.Plug	
30	903449		1	.Disc kit	D
31	903450		8	.Washer	
32	902410	N		.Shim T=0,1 mm	
33	902411	N		.Shim T=0,3 mm	
34	902412		12	.Screw	
35	902413		8	.Screw	
36	902414		1	.Screw	
37	902415		1	.Screw	
38	902416		1	.Spring	
39	903304		1	.Gasket kit	D
40			1	..Sealing	D
41			1	..Shaft seal	D
42			1	..Sealing	D
43			1	..Sealing	D
44			1	..Sealing	D
45			1	..Sealing	D
46			2	..O-ring	D
47	902800	N		..Gasket	
48	903455		1	..Quad ring	D
49			1	..O-ring	D
50			1	..O-ring	D
51			1	..O-ring	D
52	902870		1	.Cover	
53	615045		1	.Conical spring washer 13x29	


A) CPL

C) Up to hydraulic motor SN 136722

D) From Hydraulic motor SN 136723

357023 Hydraulic motor, propulsion, drum


15476-1

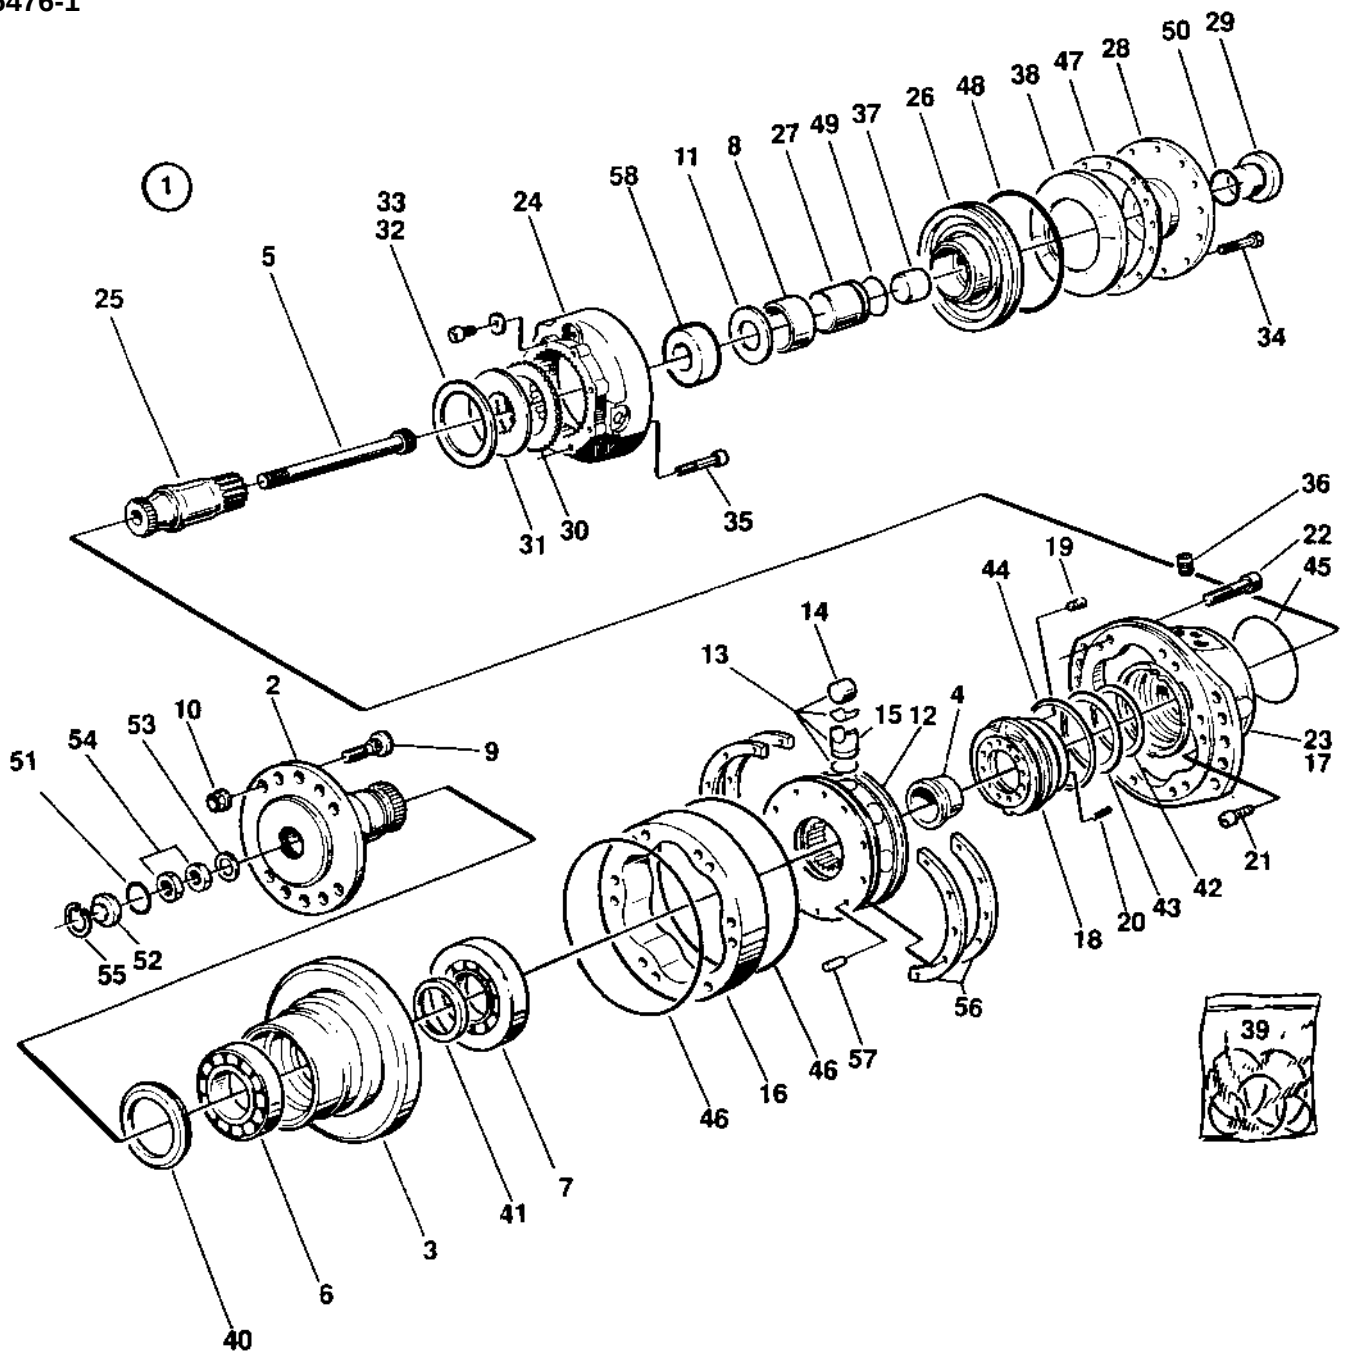

357023 Hydraulic motor, propulsion, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
54	927233		2	.Nut	
55	151043		1	.Snap ring	
56	902473	B	2	.Ring	
57	902472		20	.Pin	
58	903454		1	.Washer	


B) 1 pc = 2 halves

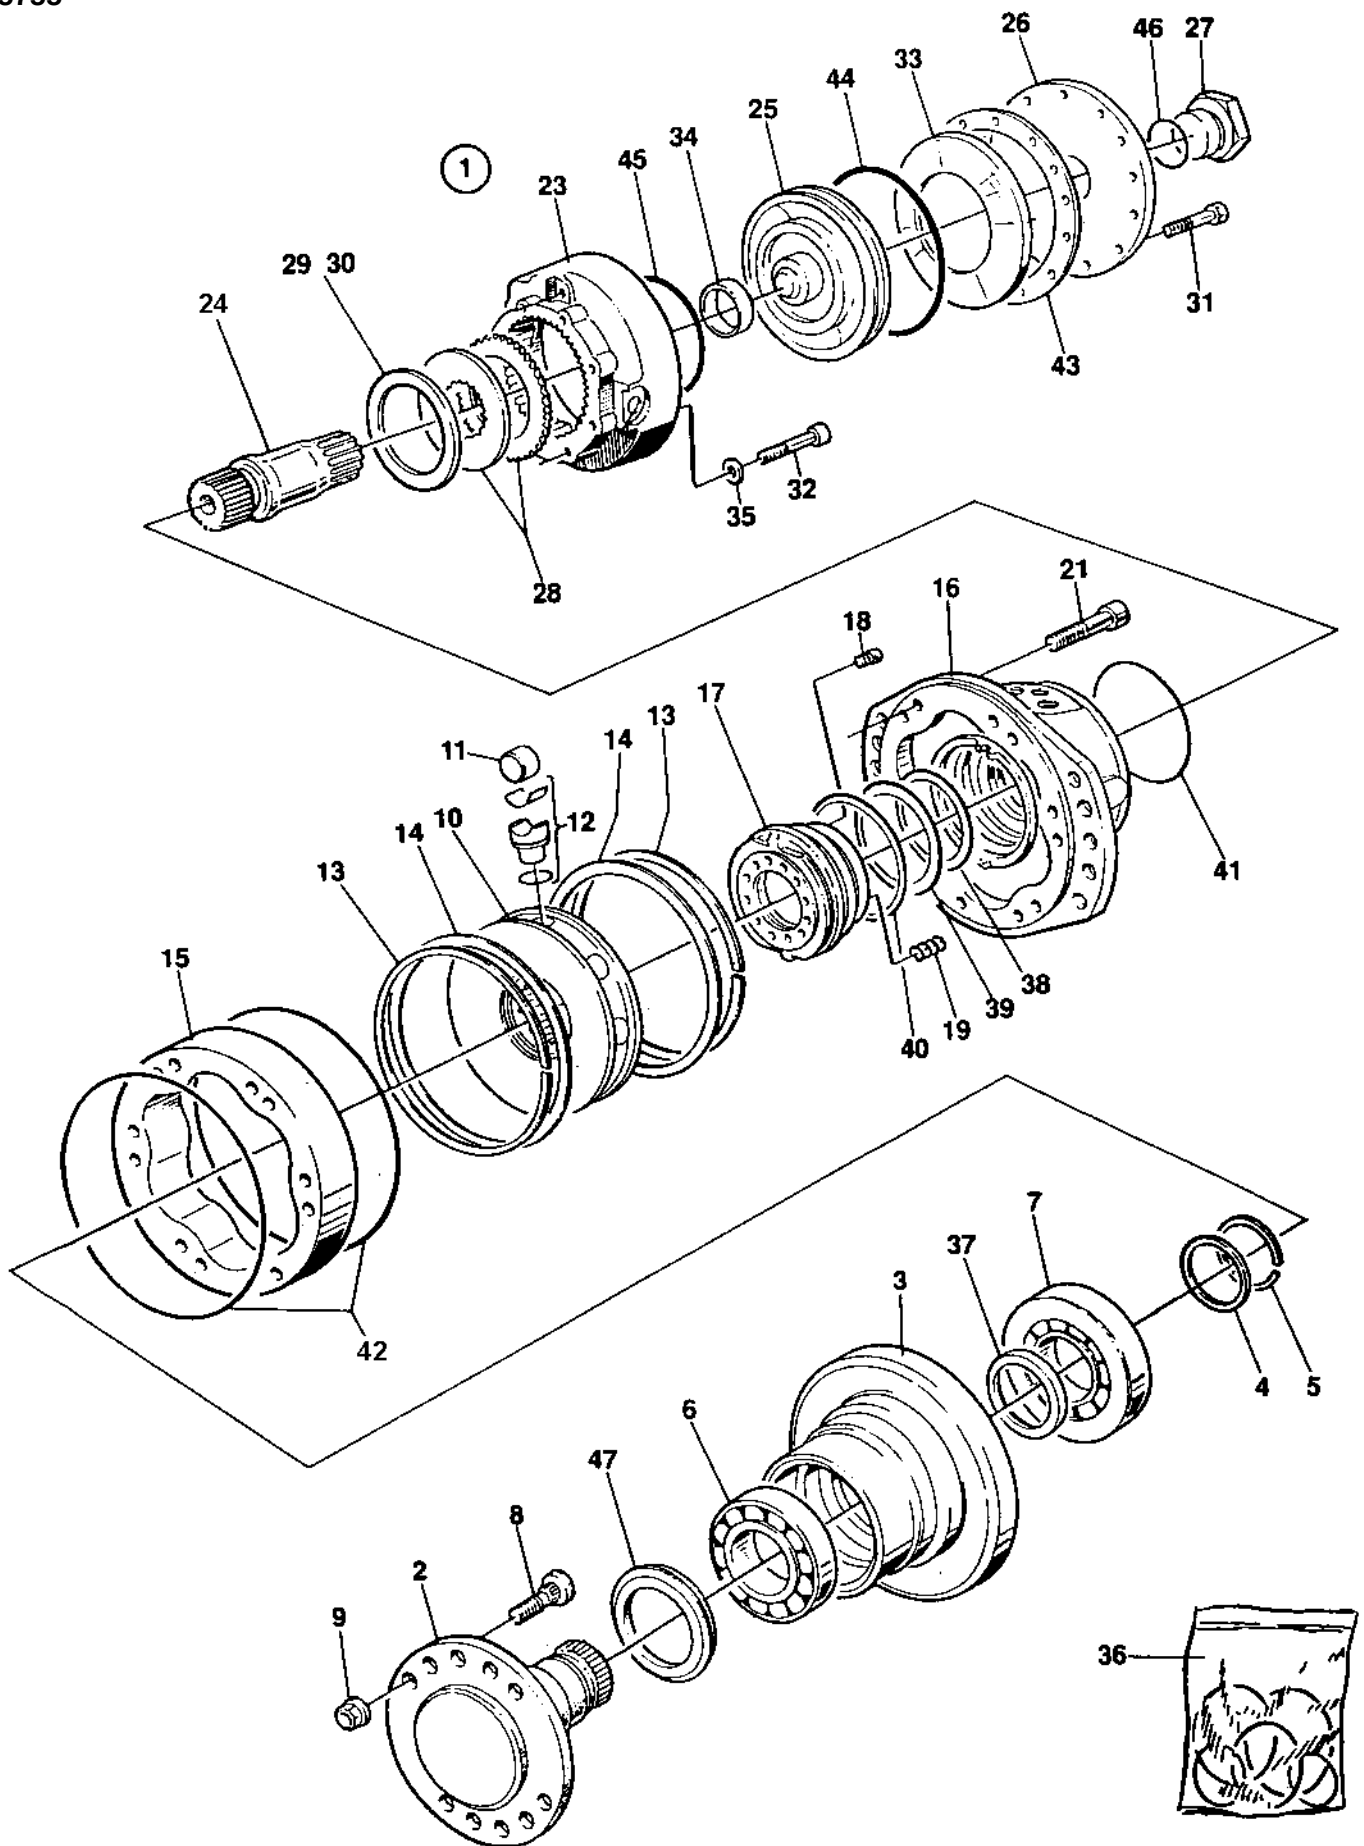

371542 Hydraulic motor, propulsion, drum


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor, Cpl	
2	908788		1	.Shaft	
3	903292		1	.Housing	
4	902387		1	.Washer T=2,0 mm	
5	902388		1	.Split ring	
6	902389		1	.Bearing	D
7	902390		1	.Bearing	D
8	902391		5	.Wheel stud	
9	902392		5	.Wheel nut	D
10	908795		1	.Cylinder block	
11	903453		8	.Roller	
12	908796		8	.Piston	
13	908797		2	.Circlip	
14	908798		2	.Ring	
15	902394		1	.Piston cam	
16	902395		1	.Housing	
17	903325		1	.Distributor ring	
18	902397		1	.Pin	
19	902398		6	.Spring	
20	902399	A	1	.Plug	
21	902799		6	.Screw	
22	902401		1	.Sign	
23	908790		1	.Brake housing	
24	908791		1	.Shaft	
25	908792		1	.Piston	
26	908328	A	1	.End cover	
27	903295		1	.Plug	
28	908800	B	1	.Disc kit	D
29	902410		N	.Shim T=0,1 mm	
30	902411		N	.Shim T=0,3 mm	
31	908801		12	.Screw	
32	902413		8	.Screw	
33	902416		1	.Spring	
34	908794		1	.Nylon buch	
35	903450		8	.Washer	
36	909235		1	.Seal kit	D
37	903324		1	..Shaft seal	
38			1	..Sealing	
39			1	..Sealing	
40			1	..Sealing	
41			1	..O-ring	
42			2	..O-ring	
43	902800		1	..Gasket	
44	903455		1	..Quad ring	D
45			1	..Sealing	D
46	903327		1	..O-ring	
47	937090		1	..Shaft seal	

A) CPL
B) 15+13 pcs

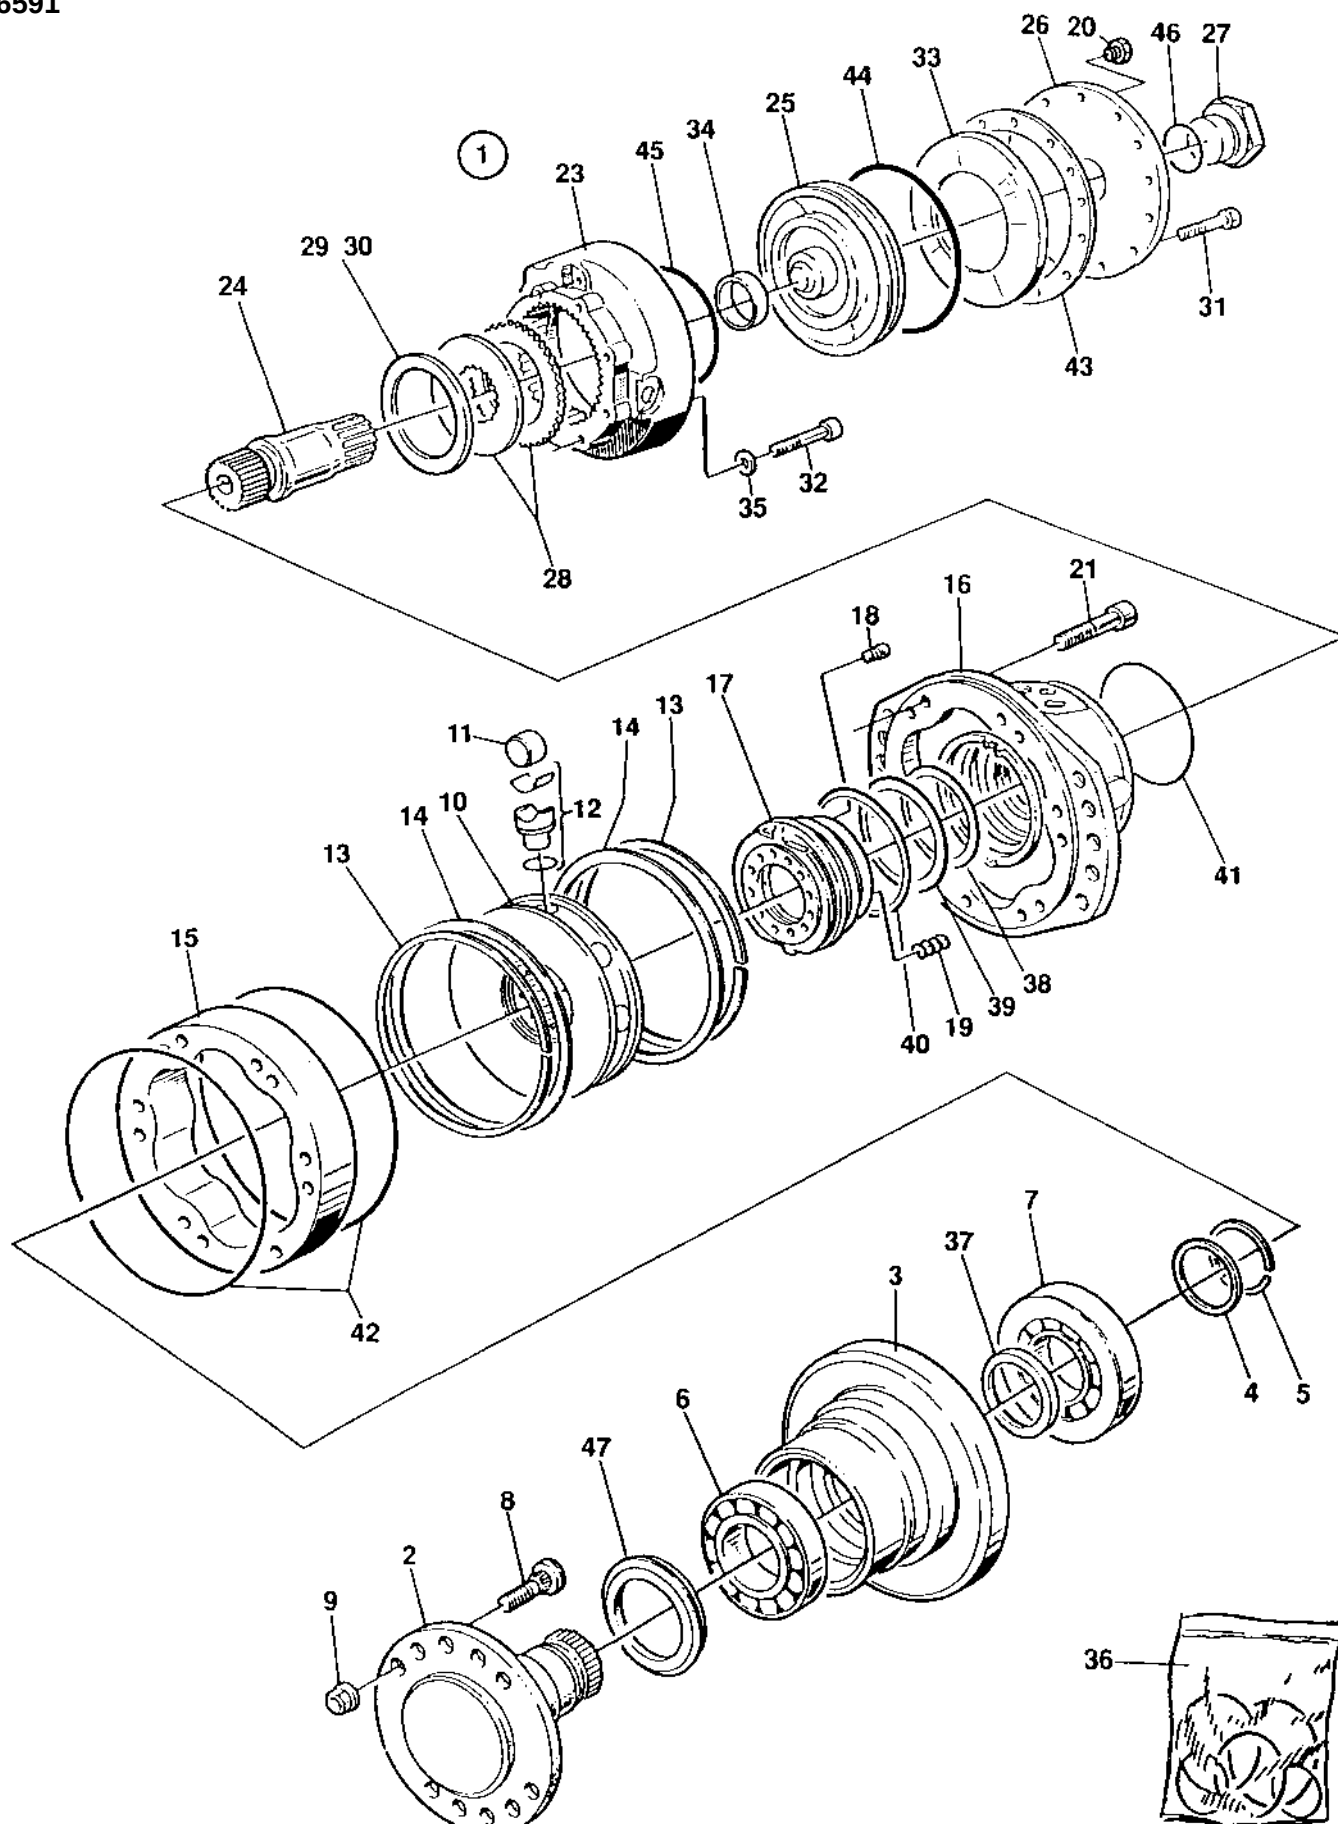

375631 Hydraulic motor, propulsion, drum


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor, Cpl	
2	908788		1	.Shaft	
3	903292		1	.Housing	
4	902387		1	.Washer T=2,0 mm	
5	902388		1	.Split ring	
6	902389		1	.Bearing	D
7	902390		1	.Bearing	D
8	902391		5	.Wheel stud	
9	902392		5	.Wheel nut	D
10	908795		1	.Cylinder block	
11	903453		8	.Roller	
12	937091		8	.Piston	
13	937092		2	.Circlip	
14	908798		2	.Ring	
15	902394		1	.Piston cam	
16	937093		1	.Housing	
17	937094		1	.Distributor ring	
18	902397		1	.Pin	
19	902398		9	.Spring	
20	902399	A	1	.Plug	
21	902799		6	.Screw	
23	908790		1	.Brake housing	
24	908791		1	.Shaft	
25	908792		1	.Piston	
26	908328	A	1	.End cover	
27	903295		1	.Plug	
28	908800	B	1	.Disc kit	D
29	902410		N	.Shim T=0,1 mm	
30	902411		N	.Shim T=0,3 mm	
31	902412		12	.Screw	
32	902413		8	.Screw	
33	902416		1	.Spring	
34	908794		1	.Nylon buch	
35	903450		8	.Washer	
36	937089		1	.Seal kit	D
37	903324		1	..Shaft seal	
38			1	..Sealing	
39			1	..Sealing	
40			1	..Sealing	
41			1	..O-ring	
42			1	..O-ring	
43	902800		1	..Gasket	
44	903455		1	..Quad ring	D
45			1	..Sealing	D
46	903327		1	..O-ring	
47			1	..Shaft seal	
A)	CPL				
B)	15+13 pcs				

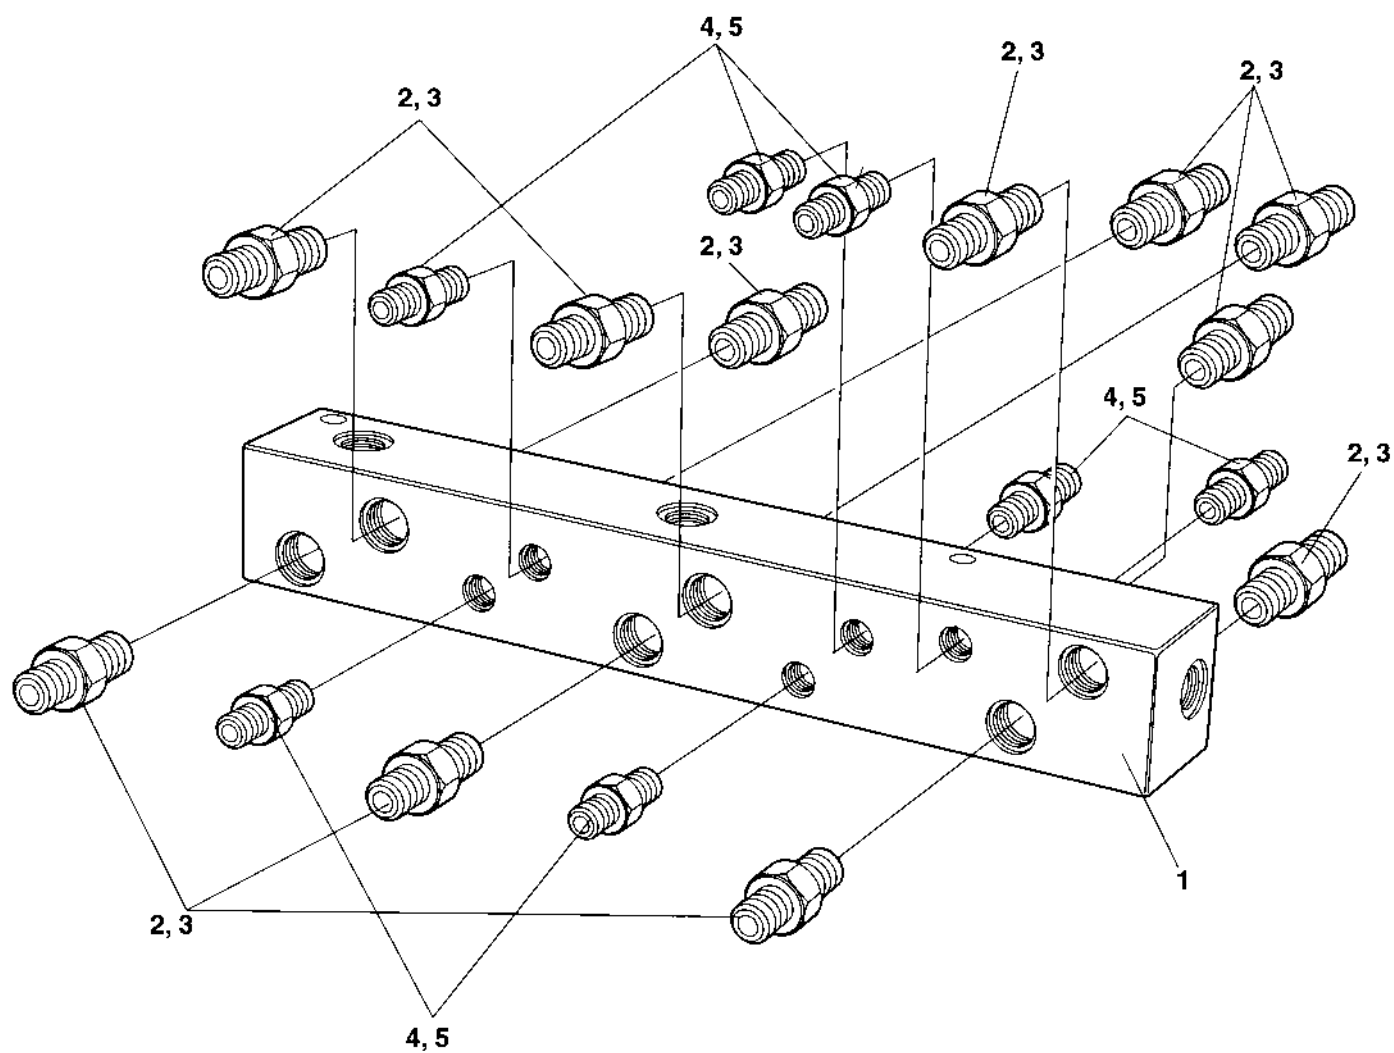

380736 Junction block

Ref. No.	Part No.	Rem.	Qty	Description	Code
			1	Junction block	
1			1	.Body	
2	334121		11	.Adapter	
3	904724		1	..O-ring	
4	234233	1	7	.Adapter	
	234233		5	.Adapter	
5	904725		1	..O-ring	

1) 7 pieces needed when machine is equipped with leakage hoses.

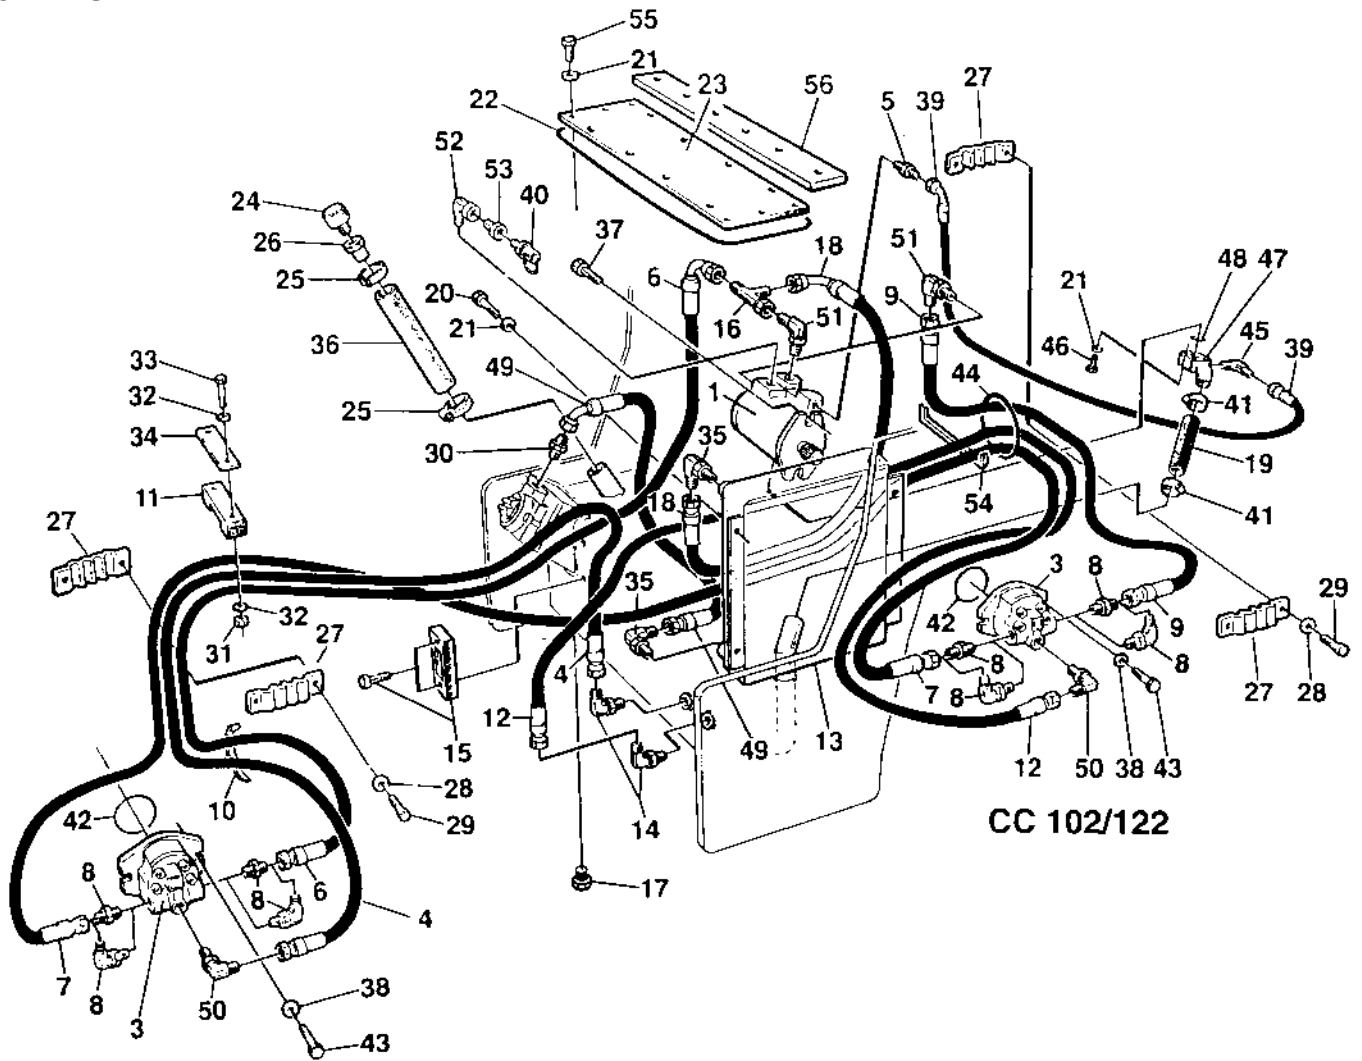


Vibration system DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357009		1	Hydraulic pump, vibration DEUTZ (Page 180)	
3	346521		2	Hydraulic motor	C
	900908		1	.Seal kit	D
4	482832		1	Hydraulic hose Up to 60111302	
	482891		1	Hydraulic hose From 60111303	
5	334144		1	Connector	
6	482833		1	Hydraulic hose Up to 60111302	
	482894		1	Hydraulic hose From 60111303	
7	482822		1	Hydraulic hose Up to 60111302	
	482895		1	Hydraulic hose From 60111303	
8	334116		4	Straight o-ring connector Up to 60111302	
	334238		4	Adapter From 60111303	
9	482213		1	Hydraulic hose Up to 60111302	
	482893		1	Hydraulic hose From 60111303	
10	313102		N	Cable ties L=388 mm	
11	343732		1	Hose clamp	
12	482838		1	Hydraulic hose Up to 60111302	
	482892		1	Hydraulic hose From 60111303	
13	357373		1	Radiator	C
14	813321		2	Connector	
15	989151		1	Oil level gauge	D
16	334135		1	T-connector	
17	232122		1	Plug 3/4NPTF	
18	482835		1	Hydraulic hose	
19	358504	C	1XL	Rubber hose	
20	500188		4	Screw M8-1,25x14 8,8	
21	615043		20	Conical spring washer 8,4x18x2	
22	357141		1	O-ring Up to 60110429	
	349880		1	O-ring From 60110430	D
23	357123		1	Cover Up to 60110429	
	349879		1	Cover From 60110430	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	357139		1	Connector	
27	358477		4	Hose clamp	
28	600006		4	Washer	
29	500053		4	Screw M8-1,25x20 8,8	
30	334156		1	Adapter	
31	570006		2	Nut M10	
32	600008		4	Washer	
33	500091		2	Screw M10-1,5x50 8,8	
34	335914		1	Cover plate	
35	234993		2	Elbow	
36	358505	D	1XL	Rubber hose	
37	500509		2	Screw	
38	603018		4	Washer 10x18x4	
39	482743		1	Hydraulic hose	
40	910161		1	Measuring nipple	D
41	902295		2	Clamp	
42	160032		2	O-ring	D
43	508029		4	Screw M10-1,5x30H 8,8	
44	902379	E	1XL	Edge trim	
45	234342		1	Adapter	
46	500067		4	Screw	
47	357164		1	Flange	
48	160016		1	O-ring	D

C) L=0,260 m

D) L=0,450 m


E) L=0,305 m

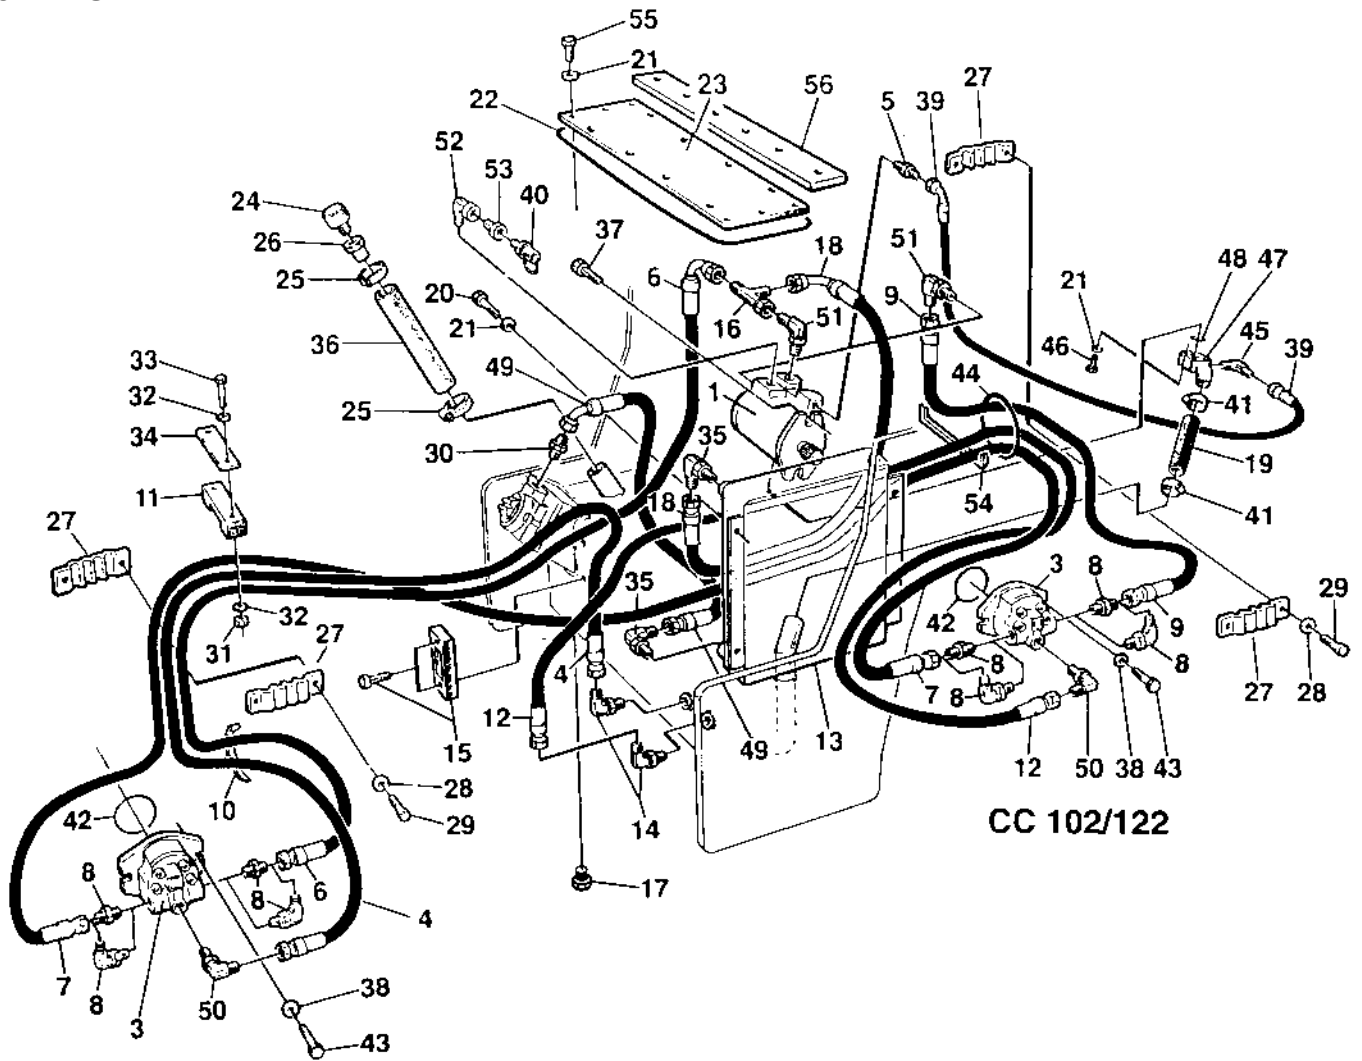

Vibration system DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
49	482817		1	Hydraulic hose	
50	234481		2	Connector	
51	334238		2	Adapter	
52	334203		1	Elbow 90, O-ring	
53	338304		1	Connector	
54	902379	F	1XL	Edge trim	
55	500019		12	Screw M8-1,25x16 8,8	
56	358486		1	Rubber strip From 60110430	

F) L=0,150 m

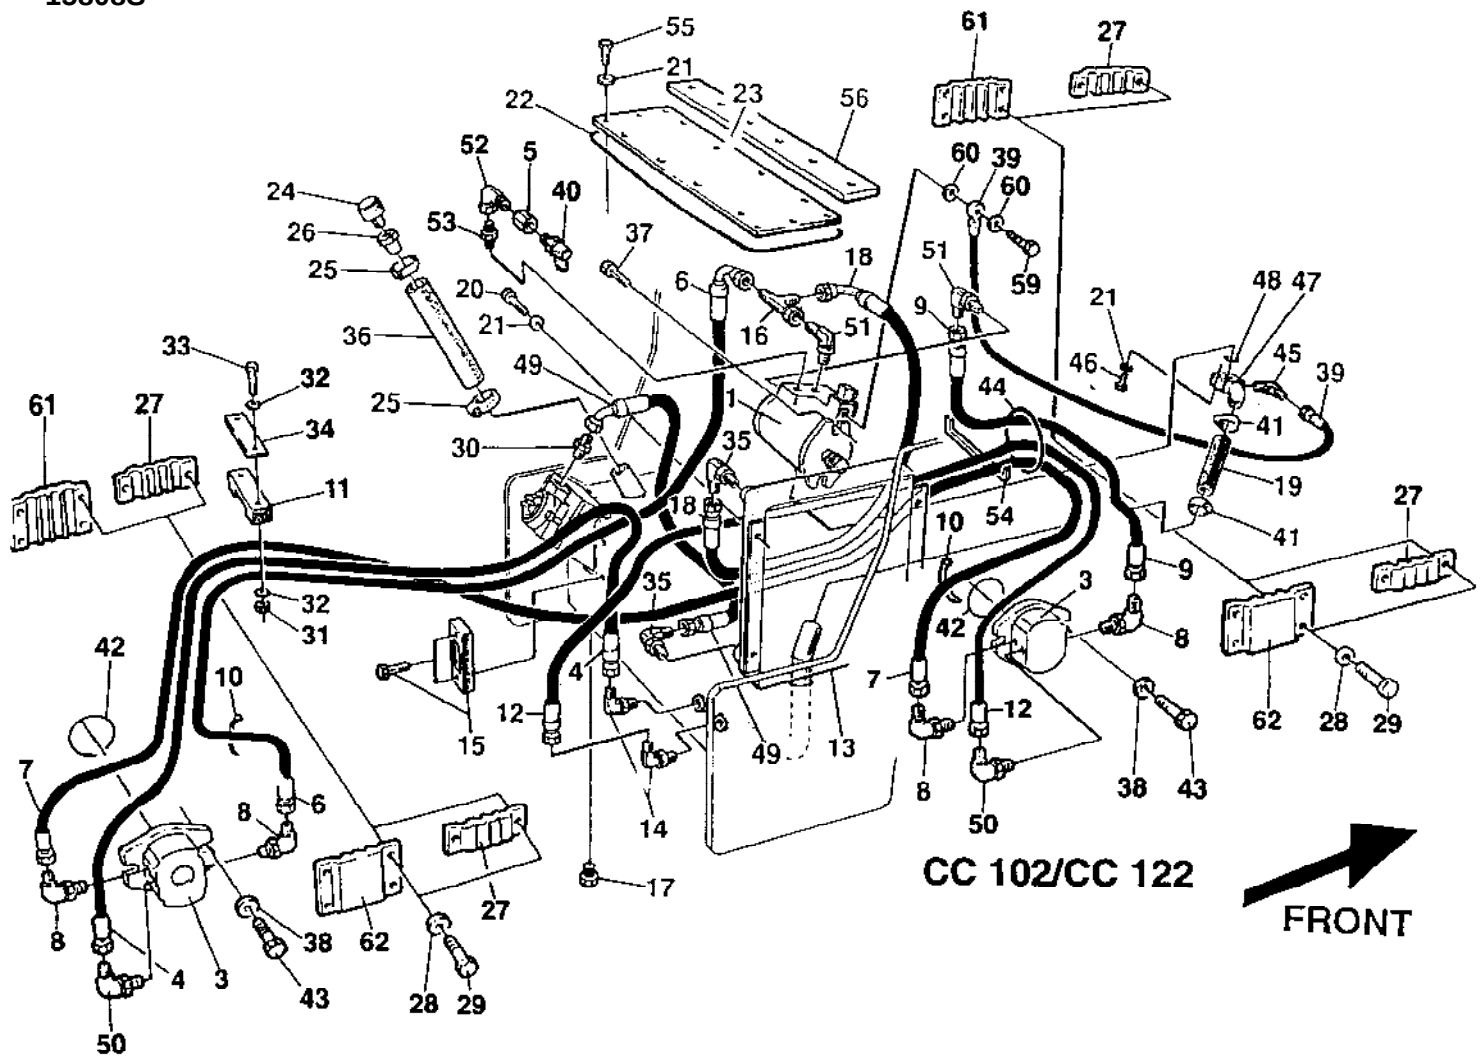

Vibration system DEUTZ


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	359524		1	Hydraulic pump, vibration DEUTZ (Page 182)	
3	359525		2	Hydraulic motor	C
	903431		1	.Seal kit	D
4	482891		1	Hydraulic hose	
5	433830401		1	Connector	
6	482894		1	Hydraulic hose	
7	482895		1	Hydraulic hose	
8	334238		4	Adapter	
9	482889		1	Hydraulic hose	
10	313102		N	Cable ties L=388 mm	
11	343732		1	Hose clamp	
12	482892		1	Hydraulic hose	
13	357373		1	Radiator	C
14	813321		2	Connector	
15	989151		1	Oil level gauge	D
16	334135		1	T-connector	
17	232122		1	Plug 3/4NPTF	
18	483003		1	Hydraulic hose	
19	358504	C	1XL	Rubber hose	
20	500188		4	Screw M8-1,25x14 8,8	
21	904640		20	Washer 8,4x22x3	
22	349880		1	O-ring	D
23	349879		1	Cover	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	357139		1	Connector	
27	358477		4	Hose clamp Up to 60112256	
28	904229		8	Washer 8,4x16x1,5	
29	500053		8	Screw M8-1,25x20 8,8	
30	334156		1	Adapter	
31	570006		2	Nut M10	
32	904228		4	Washer 6,4x12x1,5	
33	500091		2	Screw M10-1,5x50 8,8	
34	335914		1	Cover plate	
35	234993		2	Elbow	
36	358505	D	1XL	Rubber hose	
37	500509		2	Screw	
38	904710		4	Washer	
39	359823		1	Hydraulic hose	
40	910161		1	Measuring nipple	D
41	902295		2	Clamp	
42	160032		2	O-ring	D
43	508029		4	Screw M10-1,5x30H 8,8	
44	902379	E	1XL	Edge trim	
45	234342		1	Adapter	
46	500067		4	Screw	
47	359834		1	Flange	
48	160016		1	O-ring	D
49	482817		1	Hydraulic hose	
50	234481		2	Connector	
51	334238		2	Adapter	
52	334524		1	Connector	
53	234390		1	Connector	
54	902379	F	1XL	Edge trim	
55	500019		12	Screw M8-1,25x16 8,8	
56	358486		1	Rubber strip	

C) L=0,260 m

D) L=0,450 m


E) L=0,305 m

F) L=0,150 m

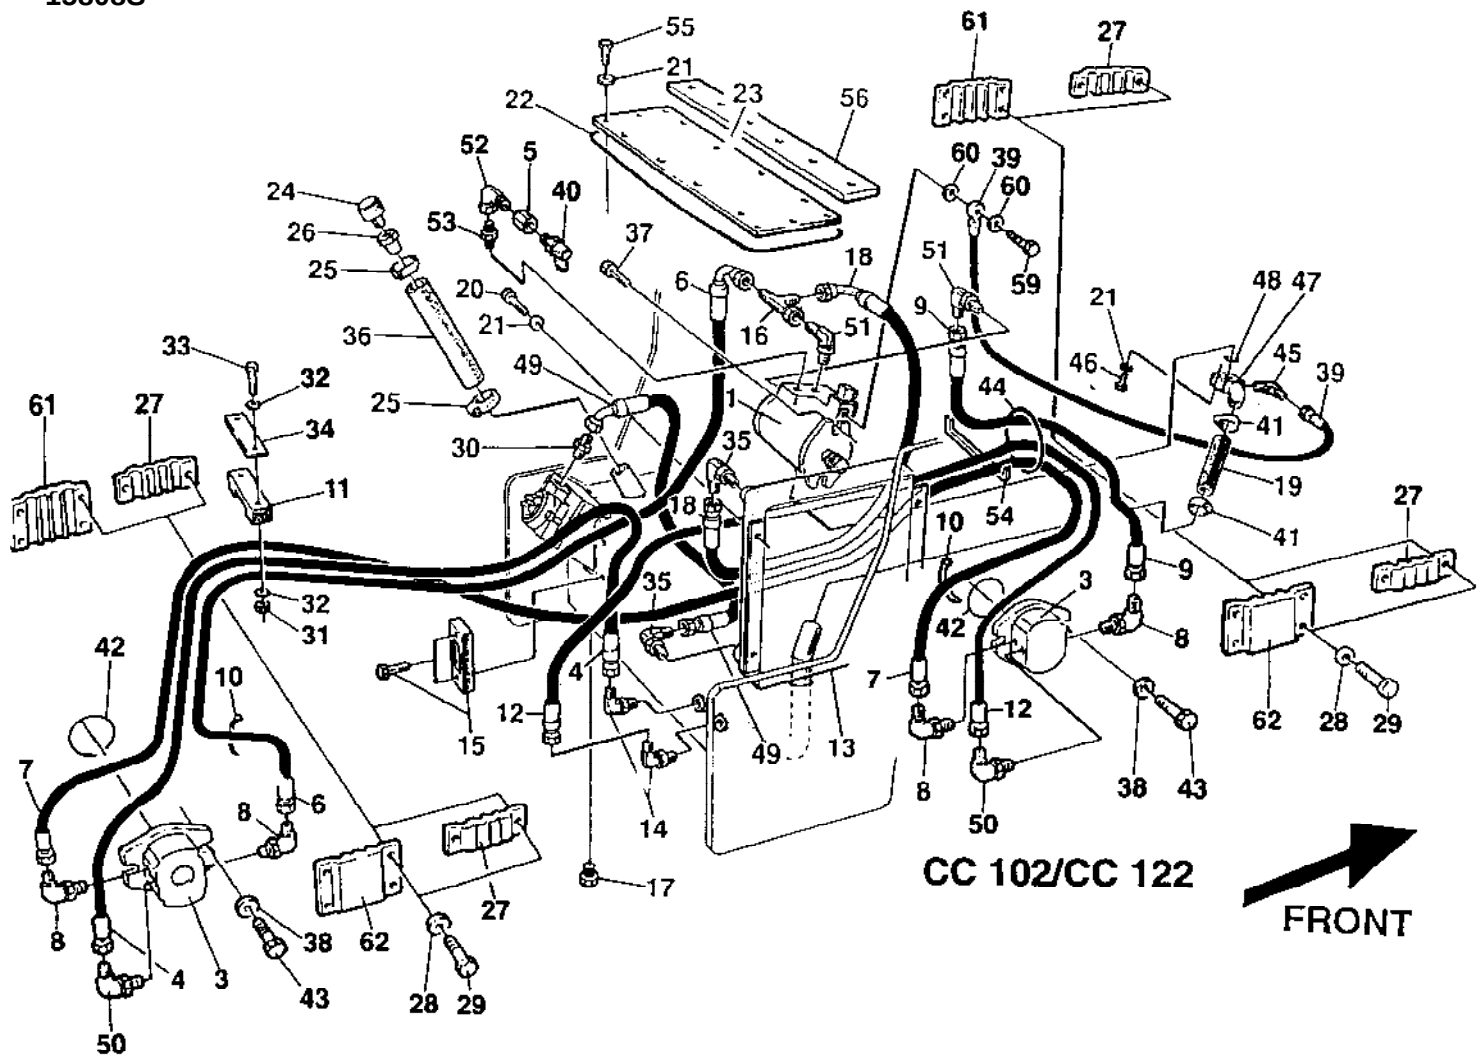

Vibration system DEUTZ


Ref. No.	Part No.	Rem.	Qty	Description	Code
59	901692		1	Screw	
60	480124		2	Washer	
61	371313		2	Hose clamp From 60112257	
62	371314		2	Hose clamp From 60112257	

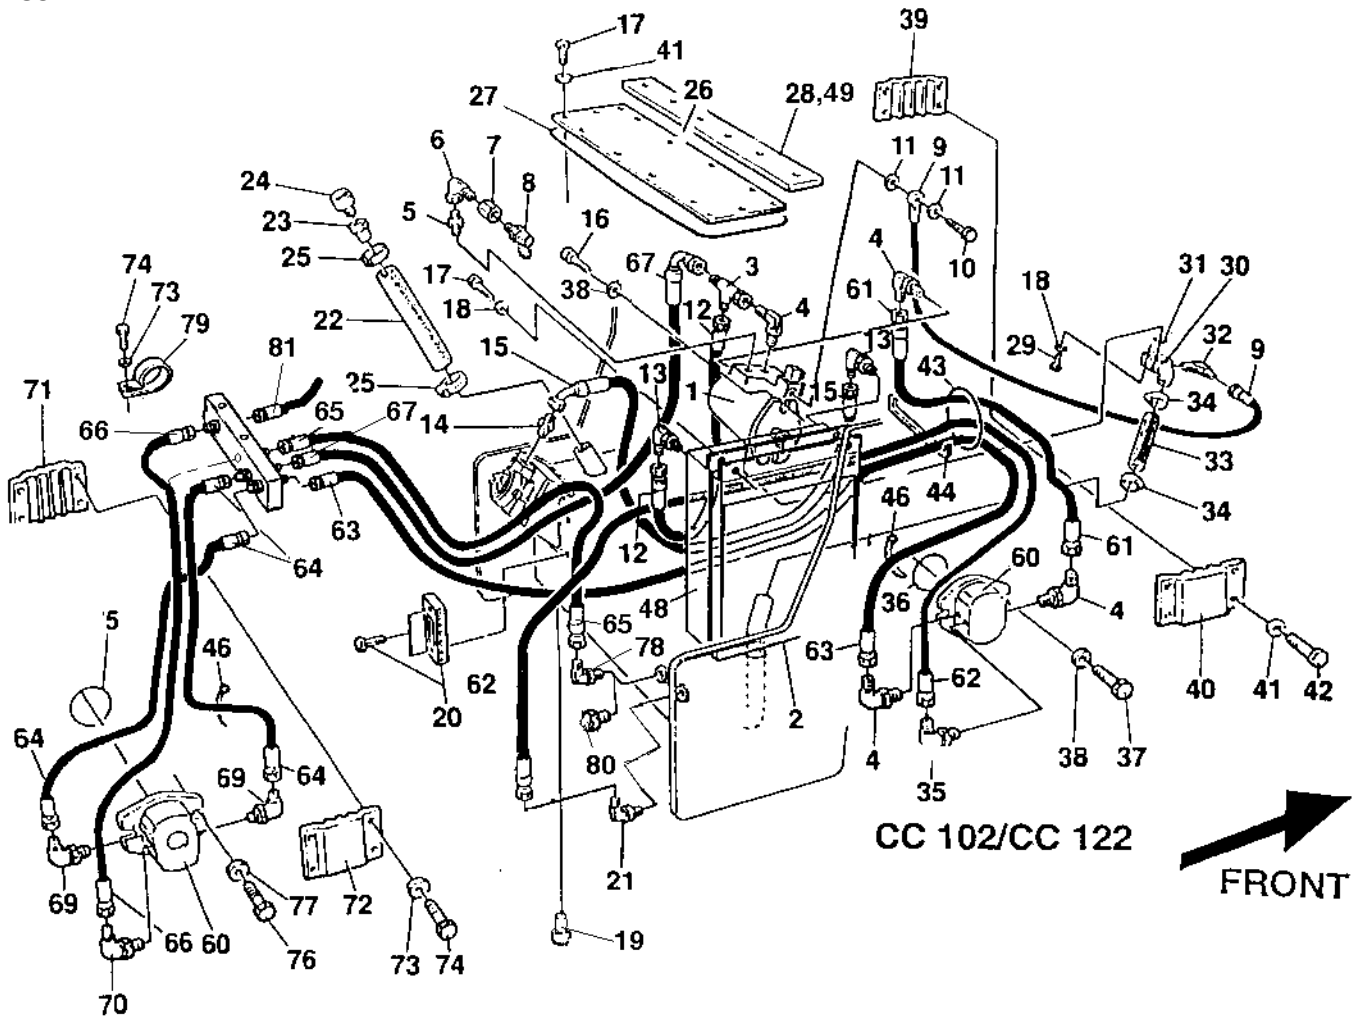

Vibration system DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	359524		1	Hydraulic pump, vibration DEUTZ (Page 182)	
2	357373		1	Radiator	C
3	334135		1	T-connector	
4	334238		4	Adapter	
5	234390		1	Connector	
6	334524		1	Connector	
7	433830401		1	Connector	
8	910161		1	Measuring nipple	D
9	386134		1	Hydraulic hose	
10	901692		1	Screw	
11	480124		2	Washer	
12	482606		1	Hydraulic hose	
13	234993		2	Elbow	
14	334156		1	Adapter	
15	483281		1	Hydraulic hose	
16	508096		2	Screw M10-1,5x25H 8,8	
17	500019		16	Screw M8-1,25x16 8,8	
18	904556		8	Washer 8,4x16x3,0	
19	232122		1	Plug 3/4NPTF	
20	989151		1	Oil level gauge	D
21	813321		1	Connector	
22	373478		1	Rubber hose	
23	357139		1	Connector	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	349879		1	Cover	
27	349880		1	O-ring	D
28	358486		1	Rubber strip	
29	500067		4	Screw	
30	359834		1	Flange	
31	160016		1	O-ring	D
32	234341		1	Elbow 45	
33	358504	A	1XL	Rubber hose	
34	902295		2	Clamp	
35	234481		1	Connector	
36	160032		1	O-ring	D
37	508029		2	Screw M10-1,5x30H 8,8	
38	904557		4	Washer 10,5x22x4	
39	371313		1	Hose clamp	
40	371314		1	Hose clamp	
41	904229		18	Washer 8,4x16x1,5	
42	500021		4	Screw M8-1,25x25 8,8	
43	902379	B	1XL	Edge trim	
44	902379	C	1XL	Edge trim	
46	313102		N	Cable ties L=388 mm	
48	374626		1	Cooling air cover	
49	904901	D	1XL	Tape	
60	359525		2	Hydraulic motor	C
	903431		1	.Seal kit	D
61	482242		1	Hydraulic hose	
62	482892		1	Hydraulic hose	
63	483155		1	Hydraulic hose	
64	483157		2	Hydraulic hose	
65	483156		1	Hydraulic hose Up to 601X6347	

- A) L=0,260 m
B) L=0,305 m
C) L=0,150 m
D) L=2,0 m

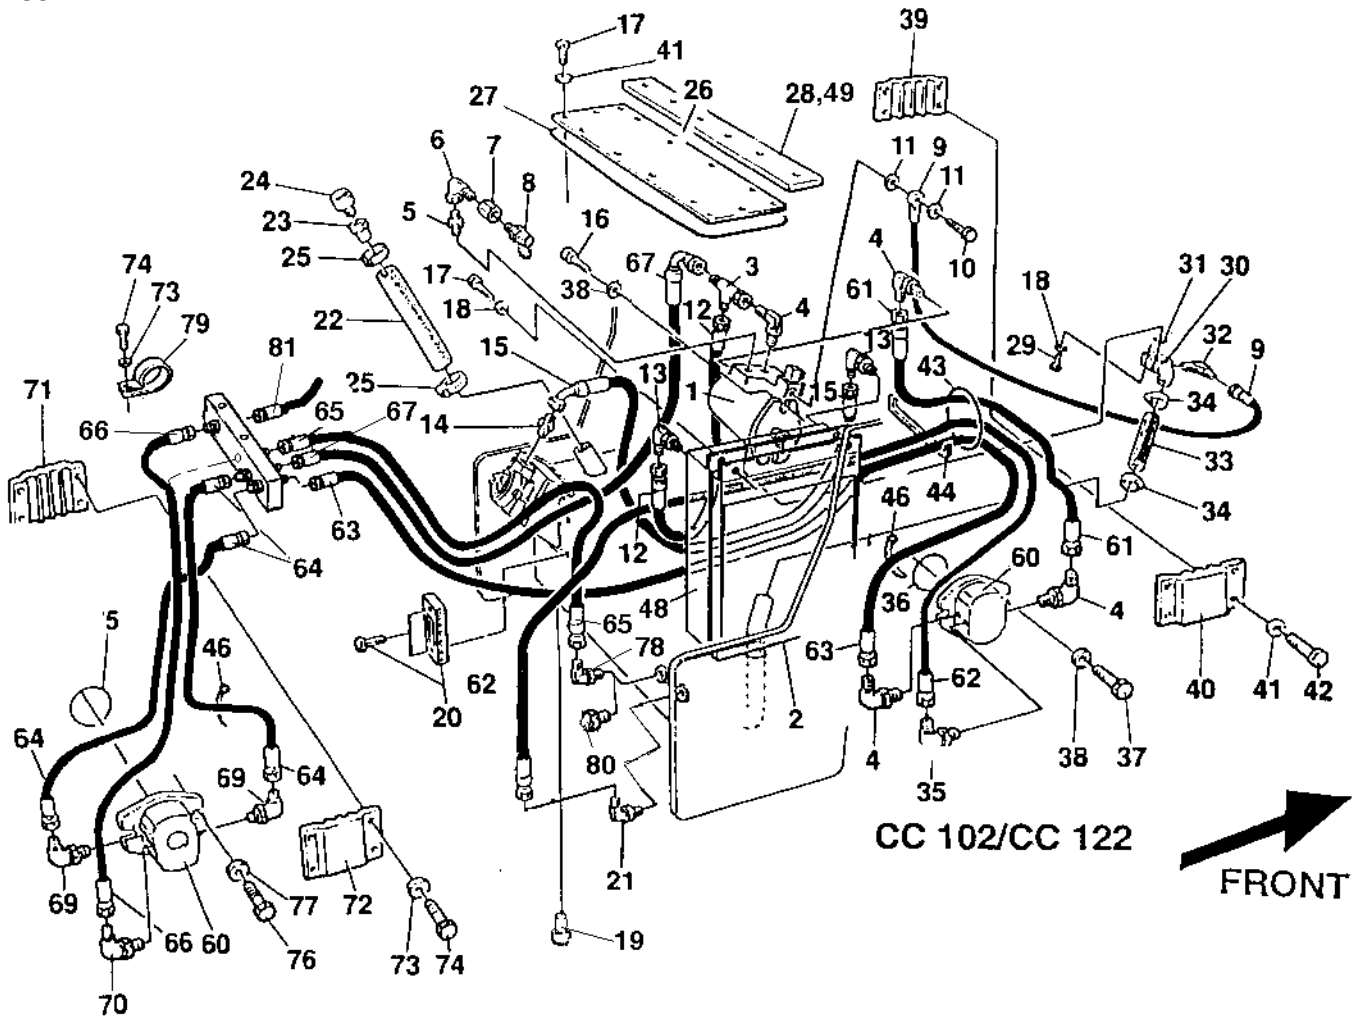


Vibration system DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
66	483158		1	Hydraulic hose Up to 601X6347	
	483162	F	1	Hydraulic hose From 601X6348	
67	483282		1	Hydraulic hose	
69	334238		2	Adapter	
70	234481		1	Connector	
71	371313		1	Hose clamp	
72	371314		1	Hose clamp	
73	904229		5	Washer 8,4x16x1,5	
74	500053		5	Screw M8-1,25x20 8,8	
75	160032		1	O-ring	D
76	508029		2	Screw M10-1,5x30H 8,8	
77	603018		2	Washer 10x18x4	
78	813321		1	Connector Up to 601X6347	
79	921119		1	Pipe clamp	
80	892446		1	Plug From 601X6348	
81		H	1	Hydraulic hose From 601X6348	


F) Moved to new port

H) See section "Propulsion system"

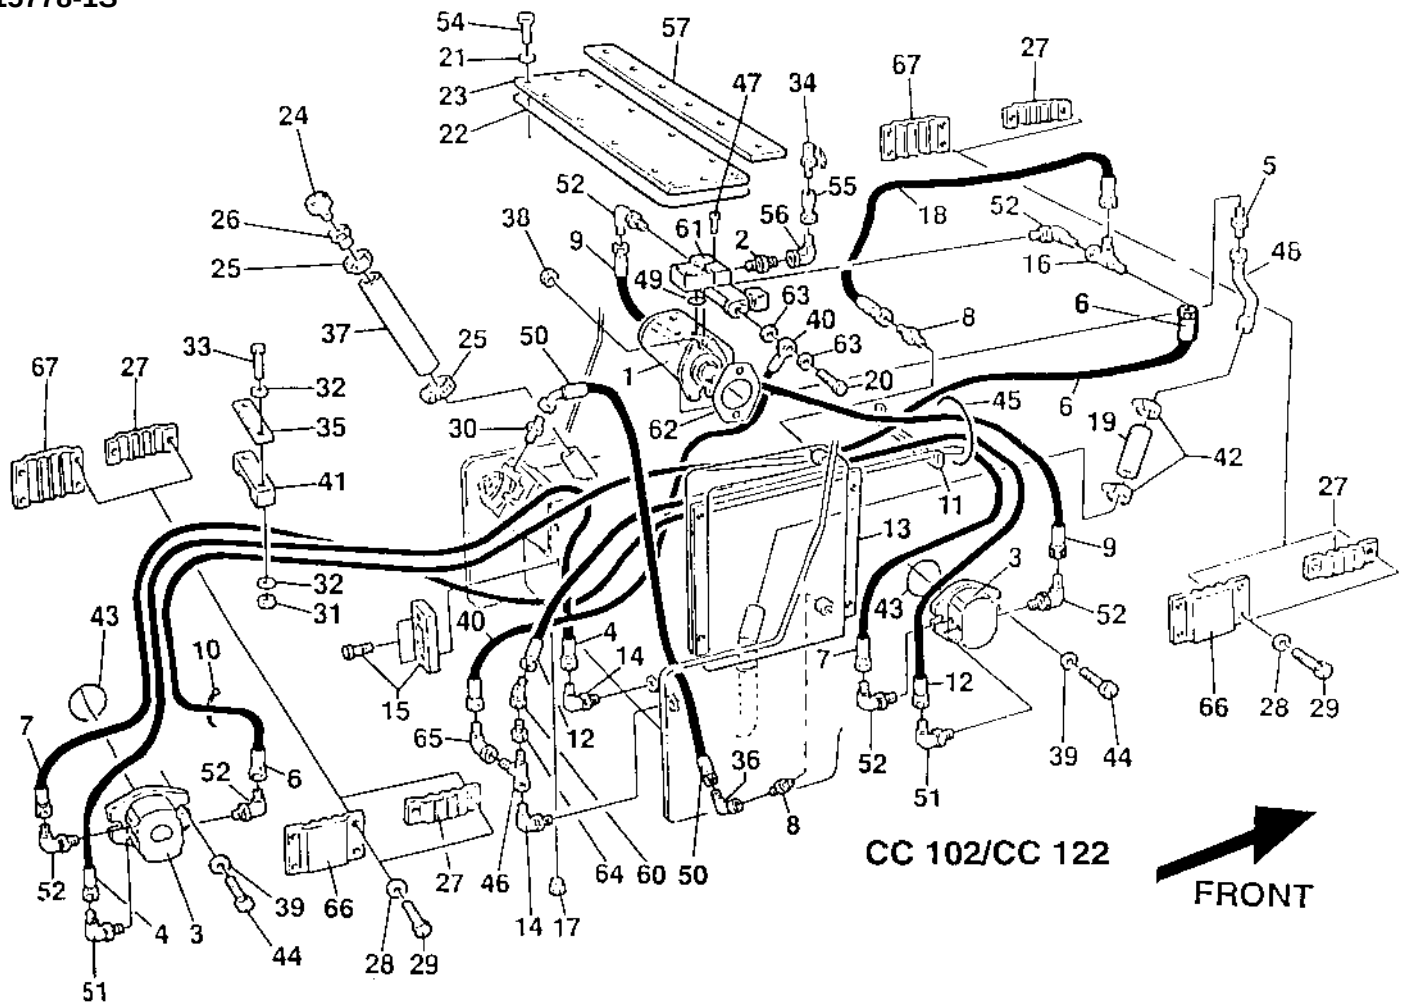


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370172		1	Hydraulic pump, vibration ISUZU (Page 184)	
2	234390		1	Connector	
3	359525		2	Hydraulic motor	C
	903431		1	.Seal kit	D
4	482891		1	Hydraulic hose	
5	234958		1	Connector	
6	482766		1	Hydraulic hose	
7	482895		1	Hydraulic hose	
8	334137		2	Adapter	
9	482893		1	Hydraulic hose	
10	313102		N	Cable ties L=388 mm	
11	902379	B	1XL	Edge trim	
12	482892		1	Hydraulic hose	
13			1	Radiator	
14	813321		2	Connector	
15	989151		1	Oil level gauge	D
16	334135		1	T-connector	
17	232122		1	Plug 3/4NPTF	
18	482963		1	Hydraulic hose	
19	370979		1	Rubber hose	
20	901692		1	Screw	
21	615043		12	Conical spring washer 8,4x18x2	
22	349880		1	O-ring	D
23	349879		1	Cover	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	357139		1	Connector	
27	358477		4	Hose clamp Up to 60122256	
28	600006		8	Washer	
29	500053		8	Screw M8-1,25x20 8,8	
30	334156		1	Adapter	
31	570006		2	Nut M10	
32	600008		4	Washer	
33	500091		2	Screw M10-1,5x50 8,8	
34	910161		1	Measuring nipple	D
35	335914		1	Cover plate	
36	334198		1	Adapter	
37	358505	C	1XL	Rubber hose	
38	570103		2	Nut M10	
39	603018		4	Washer 10x18x4	
40	359823		1	Hydraulic hose	
41	343732		1	Hose clamp	
42	902295		2	Clamp	
43	160032		2	O-ring	D
44	508029		4	Screw M10-1,5x30H 8,8	
45	902379	D	1XL	Edge trim	
46	334234		1	Tee-connector	
47	508057		4	Screw	
48	370305		1	Pipe	
49	903728	E	1	O-ring	D
50	482962		1	Hydraulic hose	
51	234481		2	Connector	
52	334238		6	Adapter	
54	500019		12	Screw M8-1,25x16 8,8	
55	433830401		1	Connector	
56	334524		1	Connector	

B) L=0,150 m
C) L=0,450 m
D) L=0,305 m
E) Deliv. with item 61

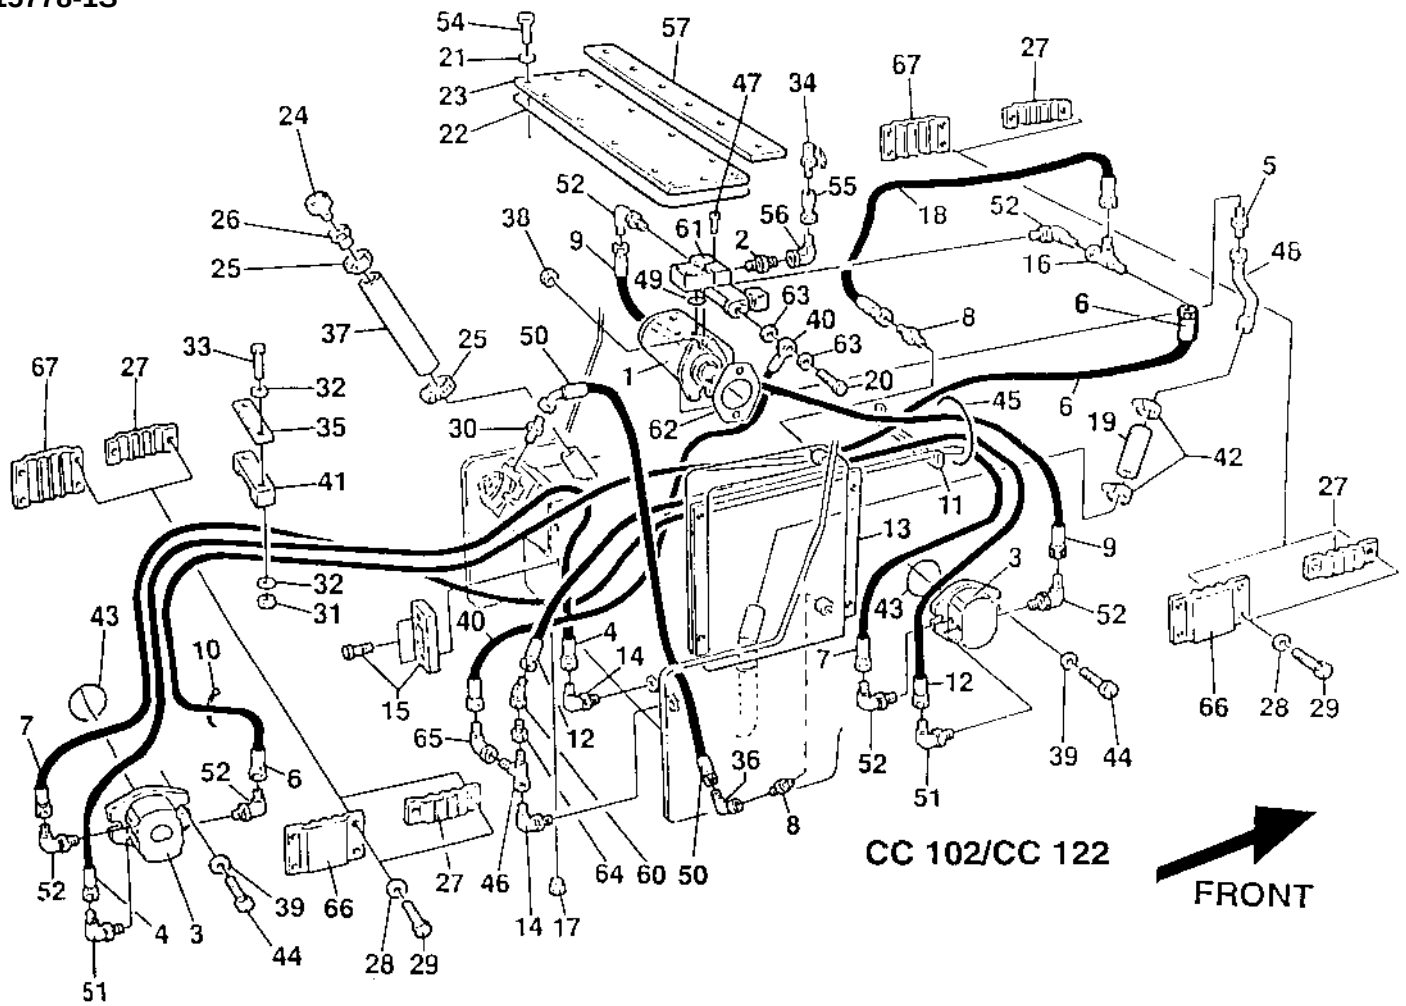


Vibration system ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
57	358486		1	Rubber strip	
60	801781		1	Connector	
61	370173		1	Vibration valve ISUZU (Page 188)	
62	370312		1	Gasket	
63	480124		2	Washer	
64	334523		1	Reducing	
65	334524		1	Connector	
66	371314		2	Hose clamp From 60122257	
67	371313		2	Hose clamp From 60122257	

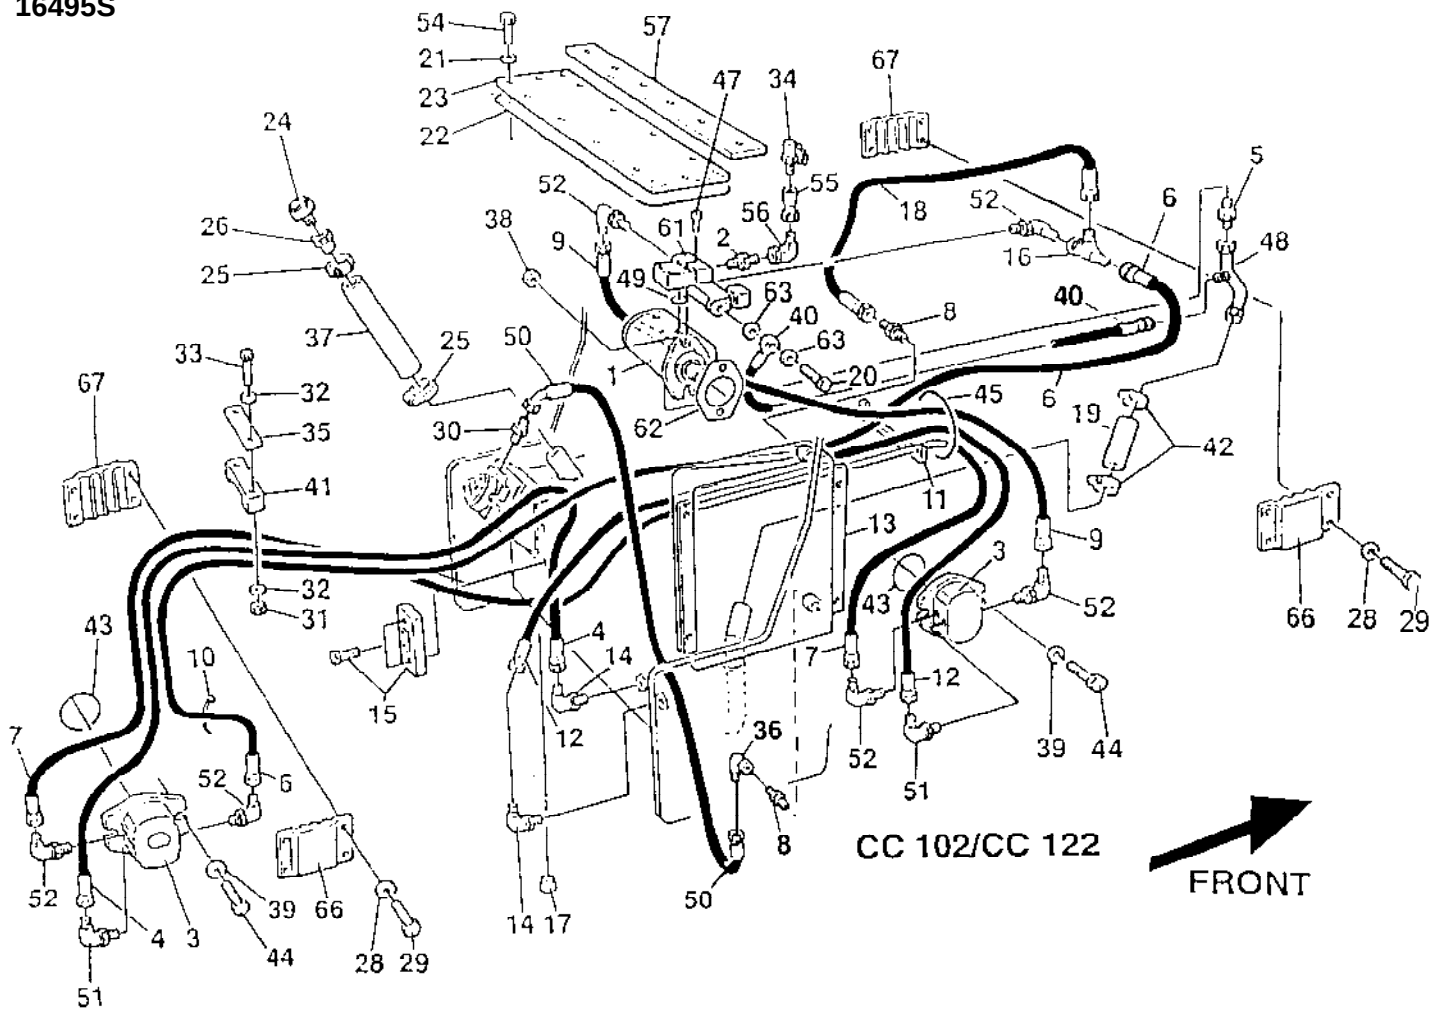

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370172		1	Hydraulic pump, vibration ISUZU (Page 184)	
2	234390		1	Connector	
3	359525		2	Hydraulic motor	C
	903431		1	.Seal kit	D
4	482891		1	Hydraulic hose	
5	234958		1	Connector	
6	482766		1	Hydraulic hose	
7	482895		1	Hydraulic hose	
8	334137		2	Adapter	
9	482893		1	Hydraulic hose	
10	313102		N	Cable ties L=388 mm	
11	902379	B	1XL	Edge trim	
12	482892		1	Hydraulic hose	
13			1	Radiator	
14	813321		2	Connector	
15	989151		1	Oil level gauge	D
16	334135		1	T-connector	
17	232122		1	Plug 3/4NPTF	
18	482963		1	Hydraulic hose	
19	370979		1	Rubber hose	
20	901692		1	Screw	
21	904229		14	Washer 8,4x16x1,5	
22	349880		1	O-ring	D
23	349879		1	Cover	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	357139		1	Connector	
28	904229		8	Washer 8,4x16x1,5	
29	500053		8	Screw M8-1,25x20 8,8	
30	334156		1	Adapter	
31	570006		2	Nut M10	
32	904230		4	Washer 10,5x22x2	
33	500091		2	Screw M10-1,5x50 8,8	
34	910161		1	Measuring nipple	D
35	335914		1	Cover plate	
36	334198		1	Adapter	
37	358505	C	1XL	Rubber hose	
38	570103		2	Nut M10	
39	904710		4	Washer	
40	372720		1	Hydraulic hose	
41	343732		1	Hose clamp	
42	902295		2	Clamp	
43	160032		2	O-ring	D
44	508029		4	Screw M10-1,5x30H 8,8	
45	902379	D	1XL	Edge trim	
47	508057		4	Screw	
48	372721		1	Hydraulic pipe	
49	903728	E	1	O-ring	D
50	482962		1	Hydraulic hose	
51	234481		2	Connector	
52	334238		6	Adapter	
54	500019		14	Screw M8-1,25x16 8,8	
55	433830401		1	Connector	
56	334524		1	Connector	
57	358486		1	Rubber strip	
61	370173		1	Vibration valve ISUZU (Page 188)	


- B) L=0,150 m
C) L=0,450 m
D) L=0,305 m
E) Deliv. with item 61

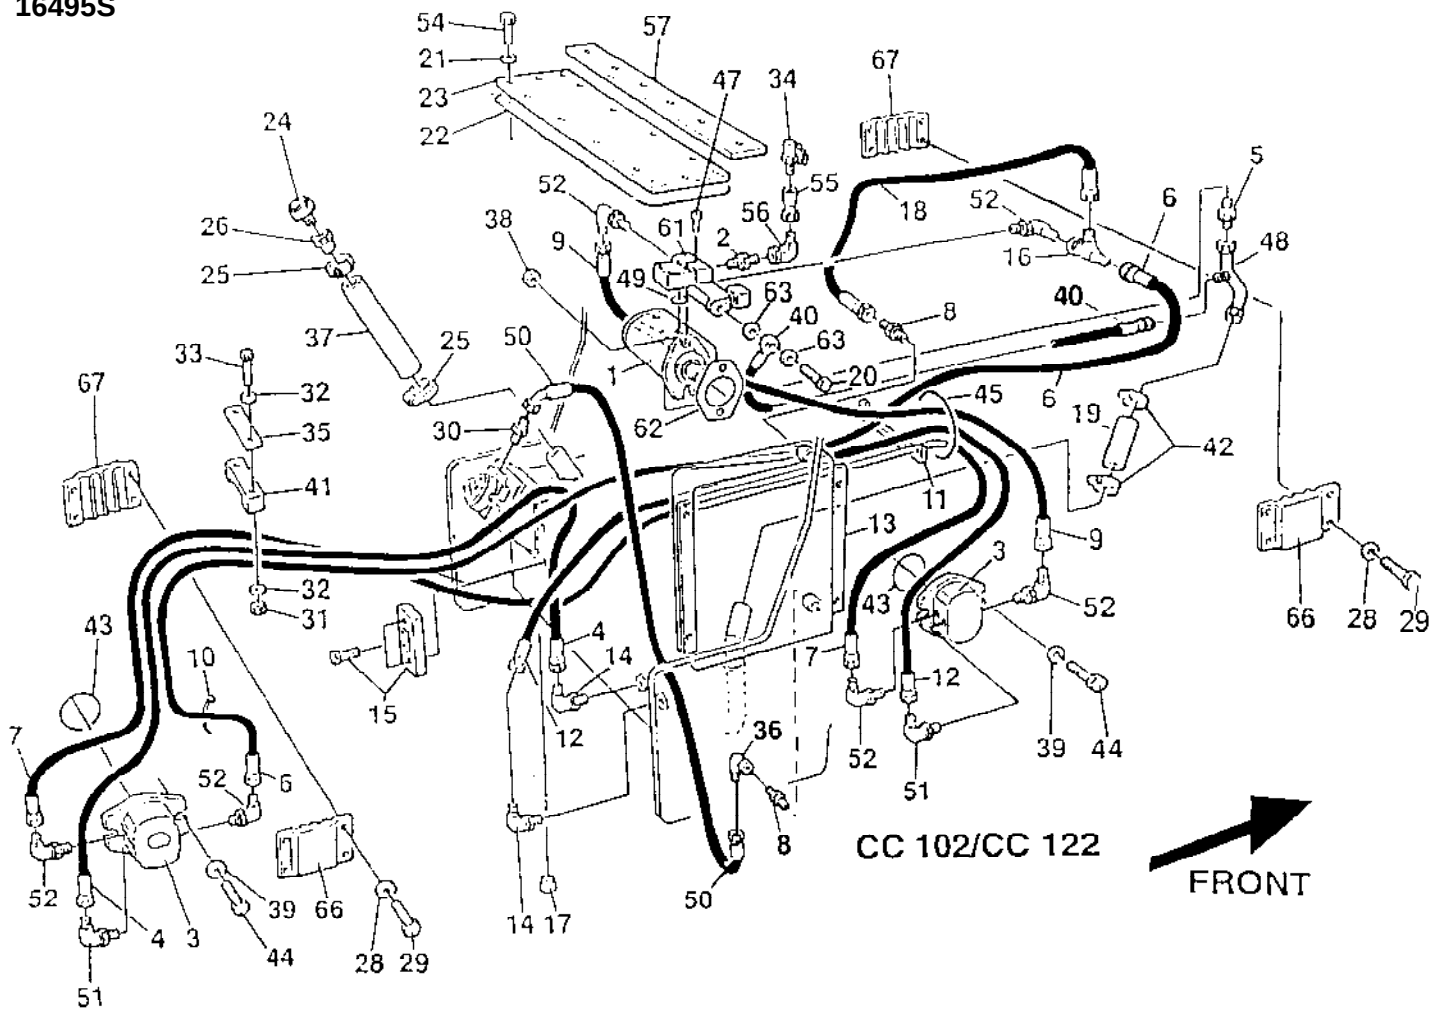

Vibration system ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
62	370312		1	Gasket	
63	480124		2	Washer	
66	371314		2	Hose clamp	
67	371313		2	Hose clamp	

17786

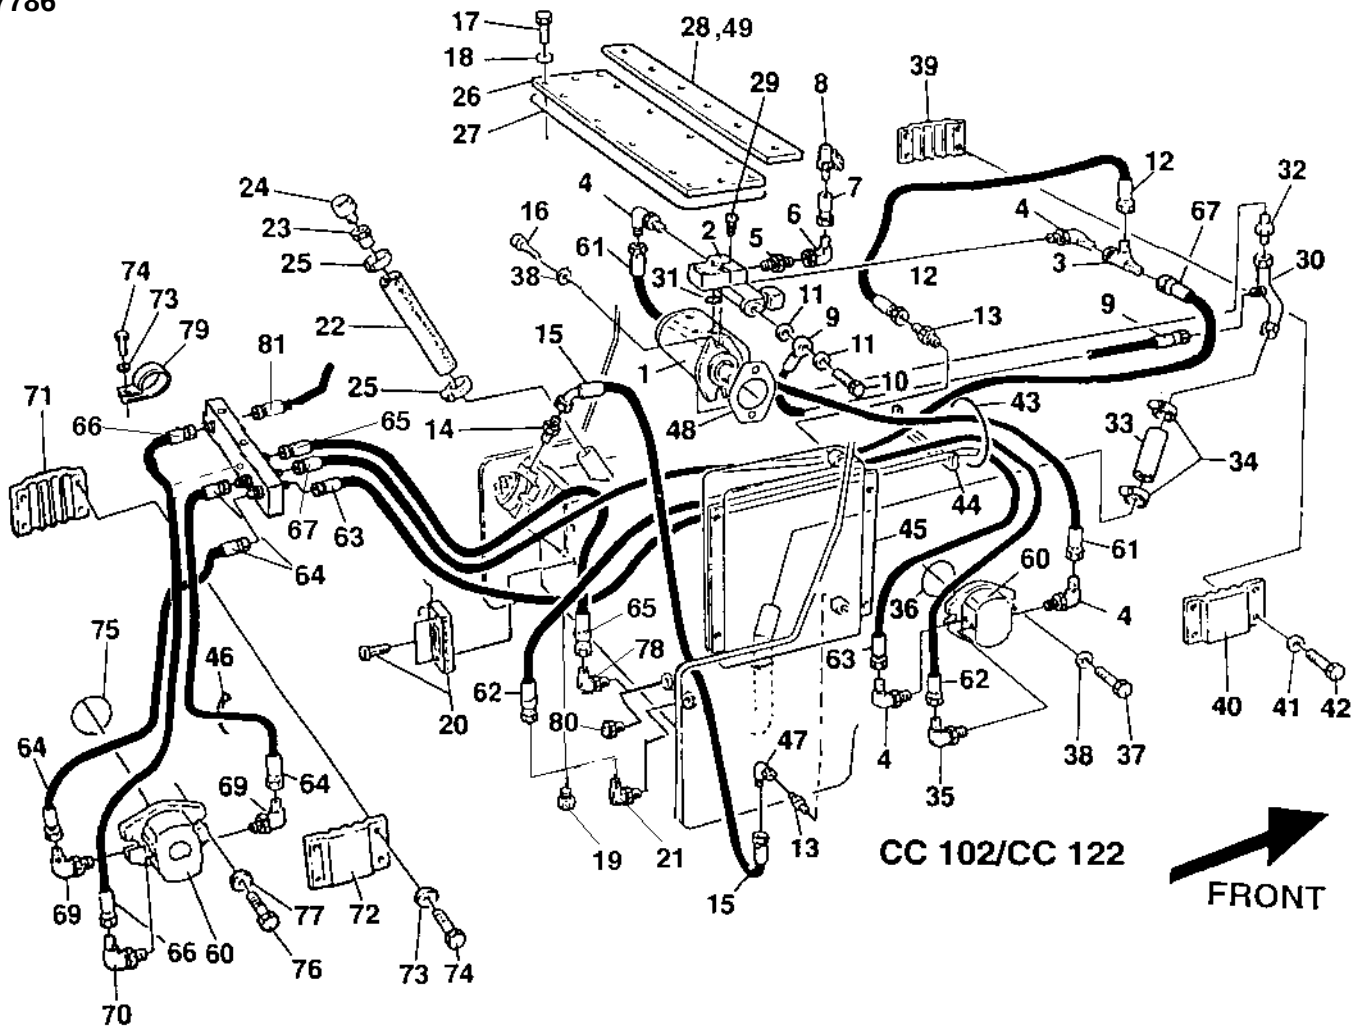

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370172		1	Hydraulic pump, vibration ISUZU Up to 601X4277 (Page 184)	
	375649		1	Hydraulic pump, vibration ISUZU From 601X4278 (Page 186)	
2	370173		1	Vibration valve ISUZU (Page 188)	
3	334135		1	T-connector	
4	334238		4	Adapter	
5	234390		1	Connector	
6	334524		1	Connector	
7	433830401		1	Connector	
8	910161		1	Measuring nipple	D
9	386134		1	Hydraulic hose	
10	901692		1	Screw	
11	480124		2	Washer	
12	482963		1	Hydraulic hose	
13	334137		2	Adapter	
14	334156		1	Adapter	
15	482962		1	Hydraulic hose	
16	508096		2	Screw M10-1,5x25H 8,8	
17	500019		16	Screw M8-1,25x16 8,8	
18	904229		8	Washer 8,4x16x1,5	
19	232122		1	Plug 3/4NPTF	
20	989151		1	Oil level gauge	D
21	813321		1	Connector	
22	373478		1	Rubber hose	
23	357139		1	Connector	
24	357138		1	Ventilating filter	B
25	313008		2	Hose clamp	D
26	349879		1	Cover	
27	349880		1	O-ring	D
28	358486		1	Rubber strip	
29	508057		4	Screw	
30	372721		1	Hydraulic pipe	
31	903728	1	1	O-ring	D
32	234958		1	Connector	
33	370979	A	1XL	Rubber hose	
34	902295		2	Clamp	
35	234481		1	Connector	
36	160032		1	O-ring	D
37	508029		2	Screw M10-1,5x30H 8,8	
38	904557		4	Washer 10,5x22x4	
39	371313		1	Hose clamp	
40	371314		1	Hose clamp	
41	904229		18	Washer 8,4x16x1,5	
42	500021		4	Screw M8-1,25x25 8,8	
43	902379	B	1XL	Edge trim	
44	902379	C	1XL	Edge trim	
45			1	Radiator	
46	313102		N	Cable ties L=388 mm	
47	334198		1	Adapter	
48	370312		1	Gasket	
49	904901	F	1XL	Tape	
60	359525		2	Hydraulic motor	C
	903431		1	.Seal kit	D
61	482242		1	Hydraulic hose	
62	482892		1	Hydraulic hose	

1) Delivered with item 2.


A) L=0,215 m

B) L=0,305 m

C) L=0,150 m

F) L=2,0 m


17786

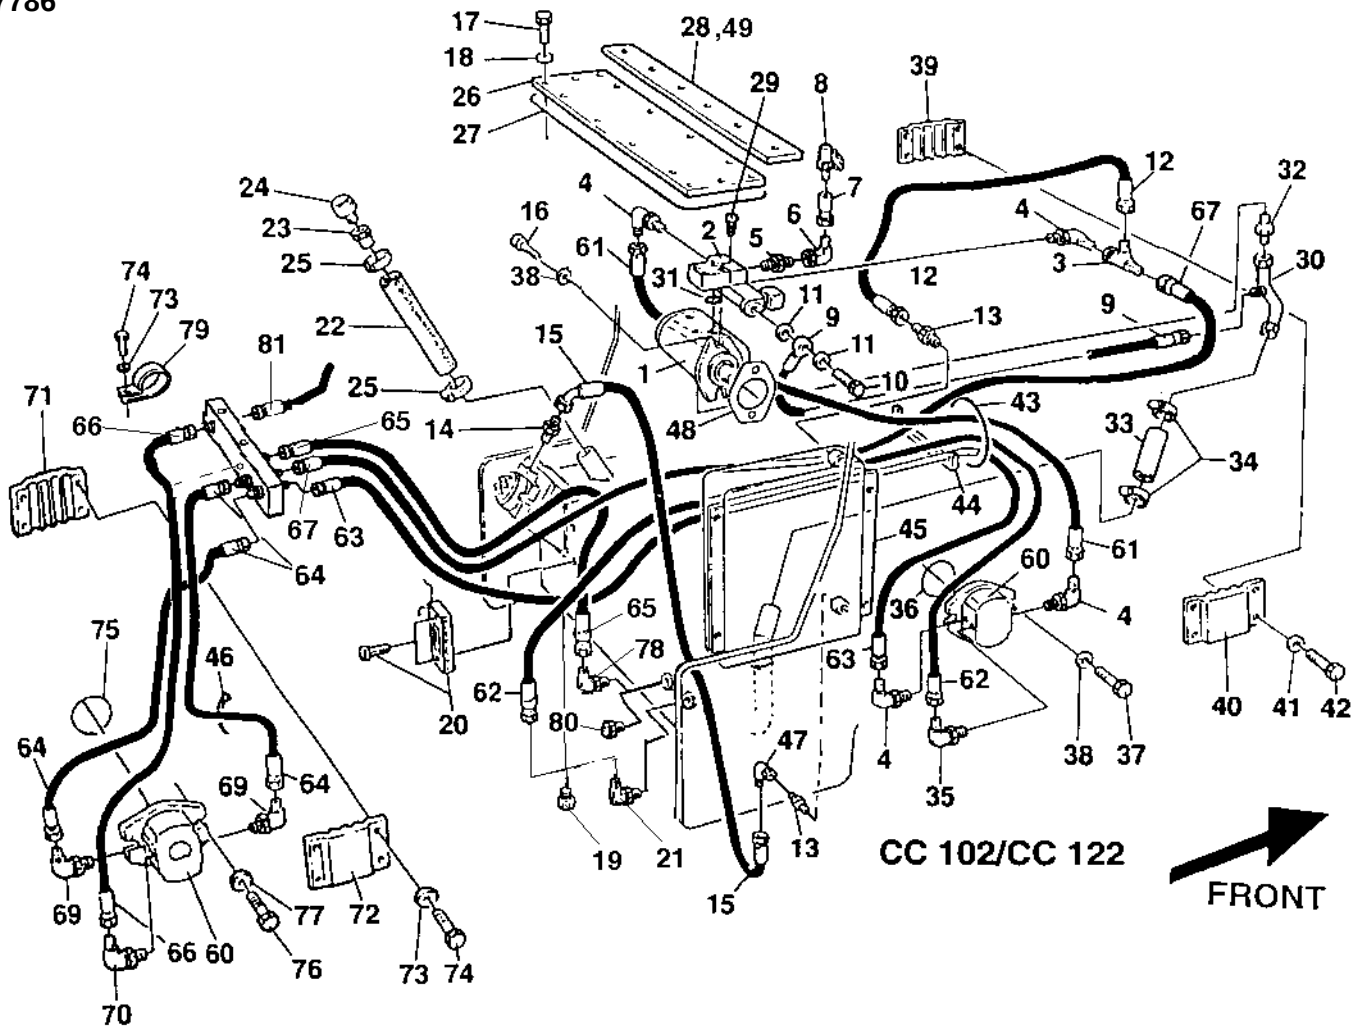

Vibration system ISUZU


Ref. No.	Part No.	Rem.	Qty	Description	Code
63	483155		1	Hydraulic hose	
64	483157		2	Hydraulic hose	
65	483156		1	Hydraulic hose Up to 601X6347	
66	483158		1	Hydraulic hose Up to 601X6347	
	483162	G	1	Hydraulic hose From 601X6348	
67	482897		1	Hydraulic hose	
69	334238		2	Adapter	
70	234481		1	Connector	
71	371313		1	Hose clamp	
72	371314		1	Hose clamp	
73	904229		5	Washer 8,4x16x1,5	
74	500021		5	Screw M8-1,25x25 8,8	
75	160032		1	O-ring	D
76	508029		2	Screw M10-1,5x30H 8,8	
77	603018		2	Washer 10x18x4	
78	813321		1	Connector Up to 601X6347	
79	921119		1	Pipe clamp	
80	892446		1	Plug From 601X6348	
81	482452		1	Hydraulic hose From 601X6348	

G) Moved to new port

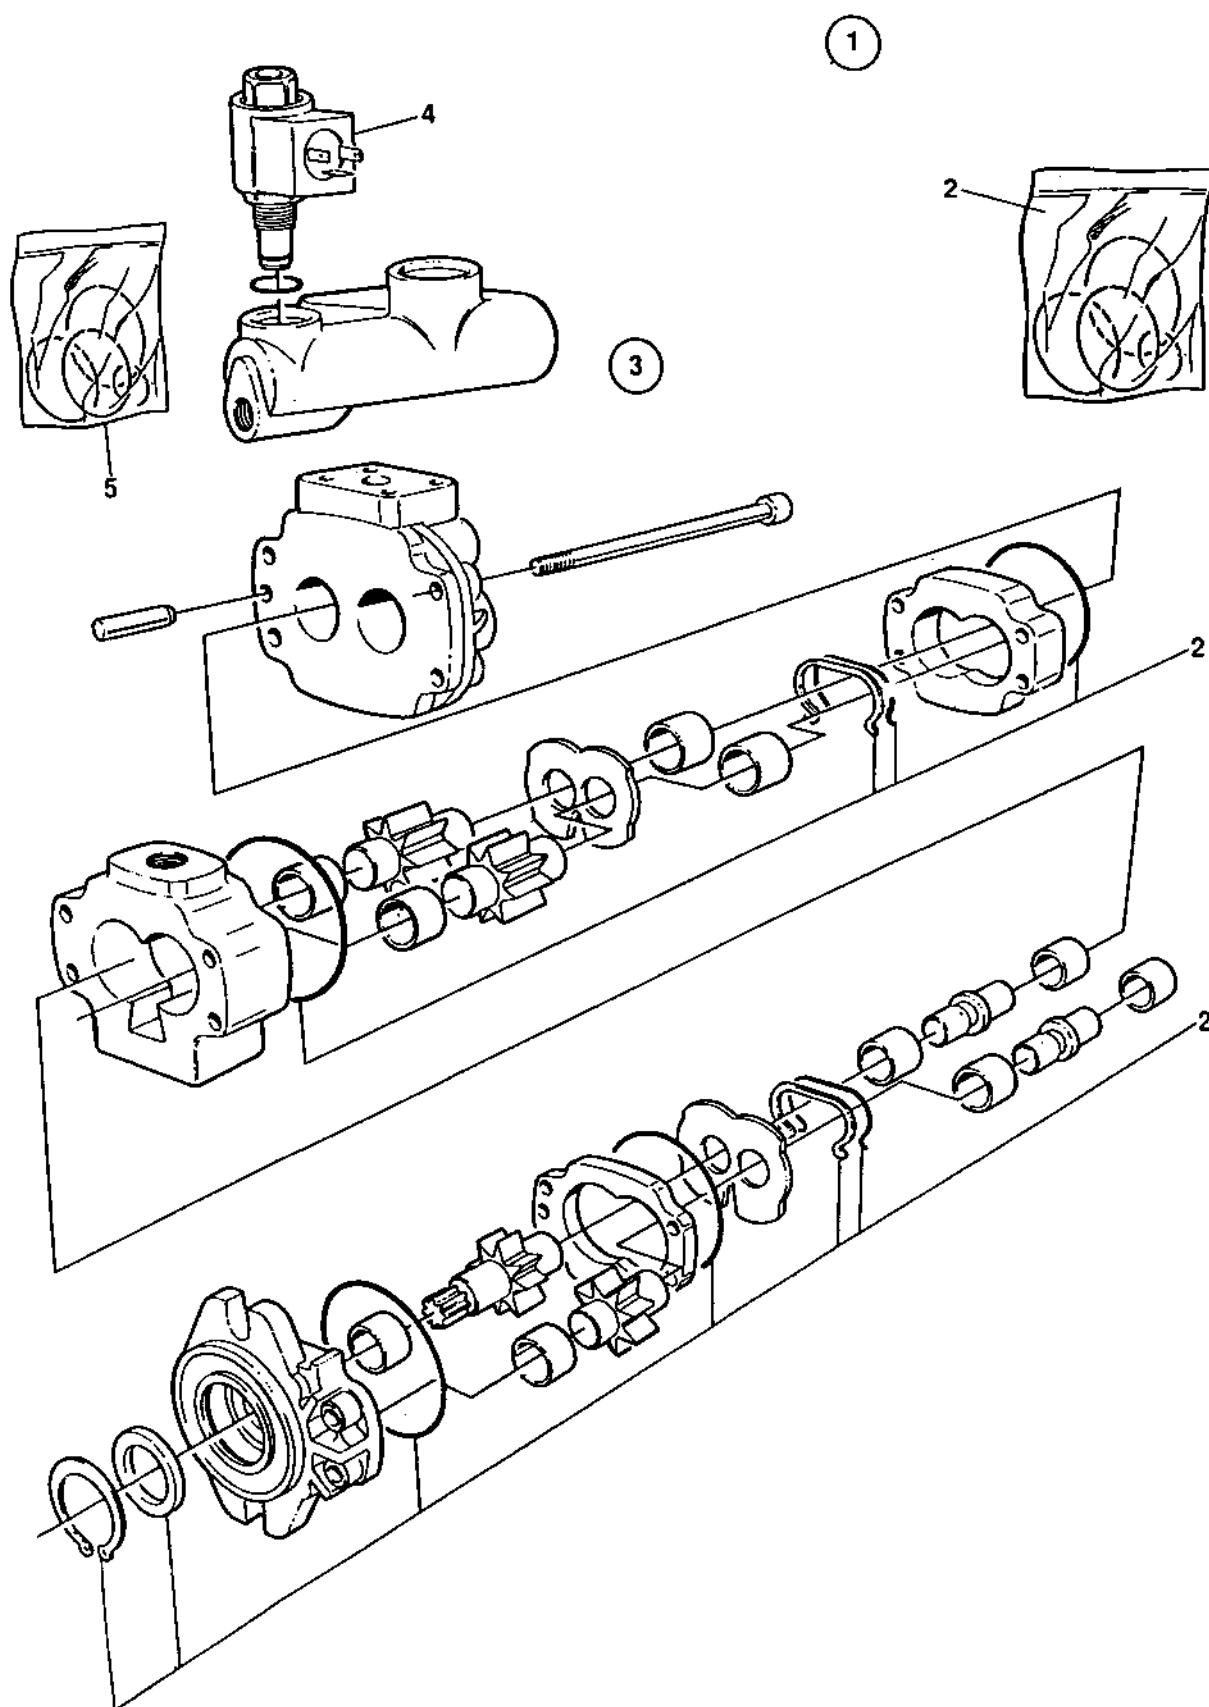


357009 Hydraulic pump, vibration DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump	
			1	.Pump	
2	902808		1	..Seal kit	D
3	902809	B	1	.Valve	D
4	903330		1	..Solenoid valve	D
5	902810		1	..Seal kit	D
A)	CPL				
B)	CPL, 20,5 MPa				

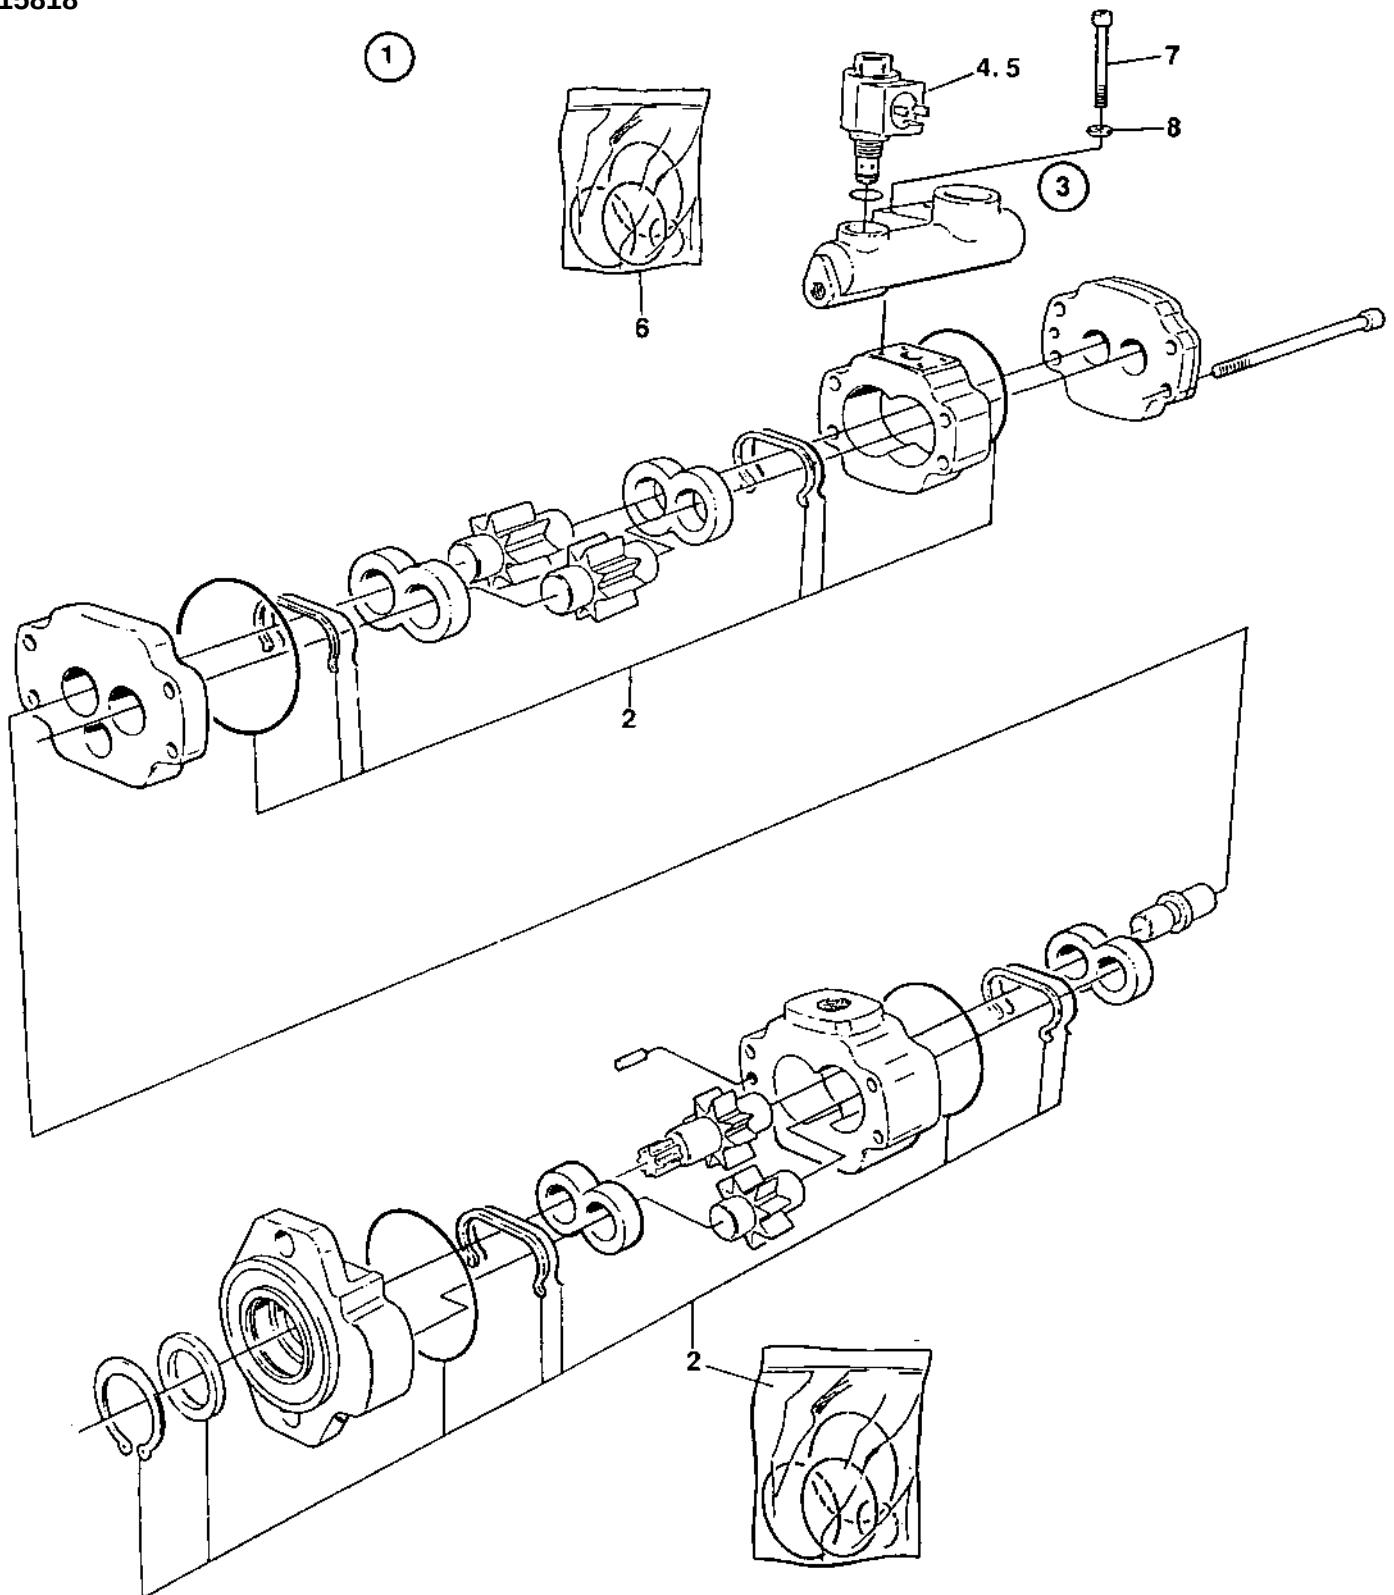


359524 Hydraulic pump, vibration DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump	D
			1	.Pump	D
2	903430		1	..Seal kit	D
3	903637	A	1	.Valve	D
4	903330		1	..Solenoid valve	D
5	908804		1	...Solenoid	D
6	902810		1	..Seal kit	D
7	909483		4	.Screw	
8	909484		4	.Washer	
A)	CPL				

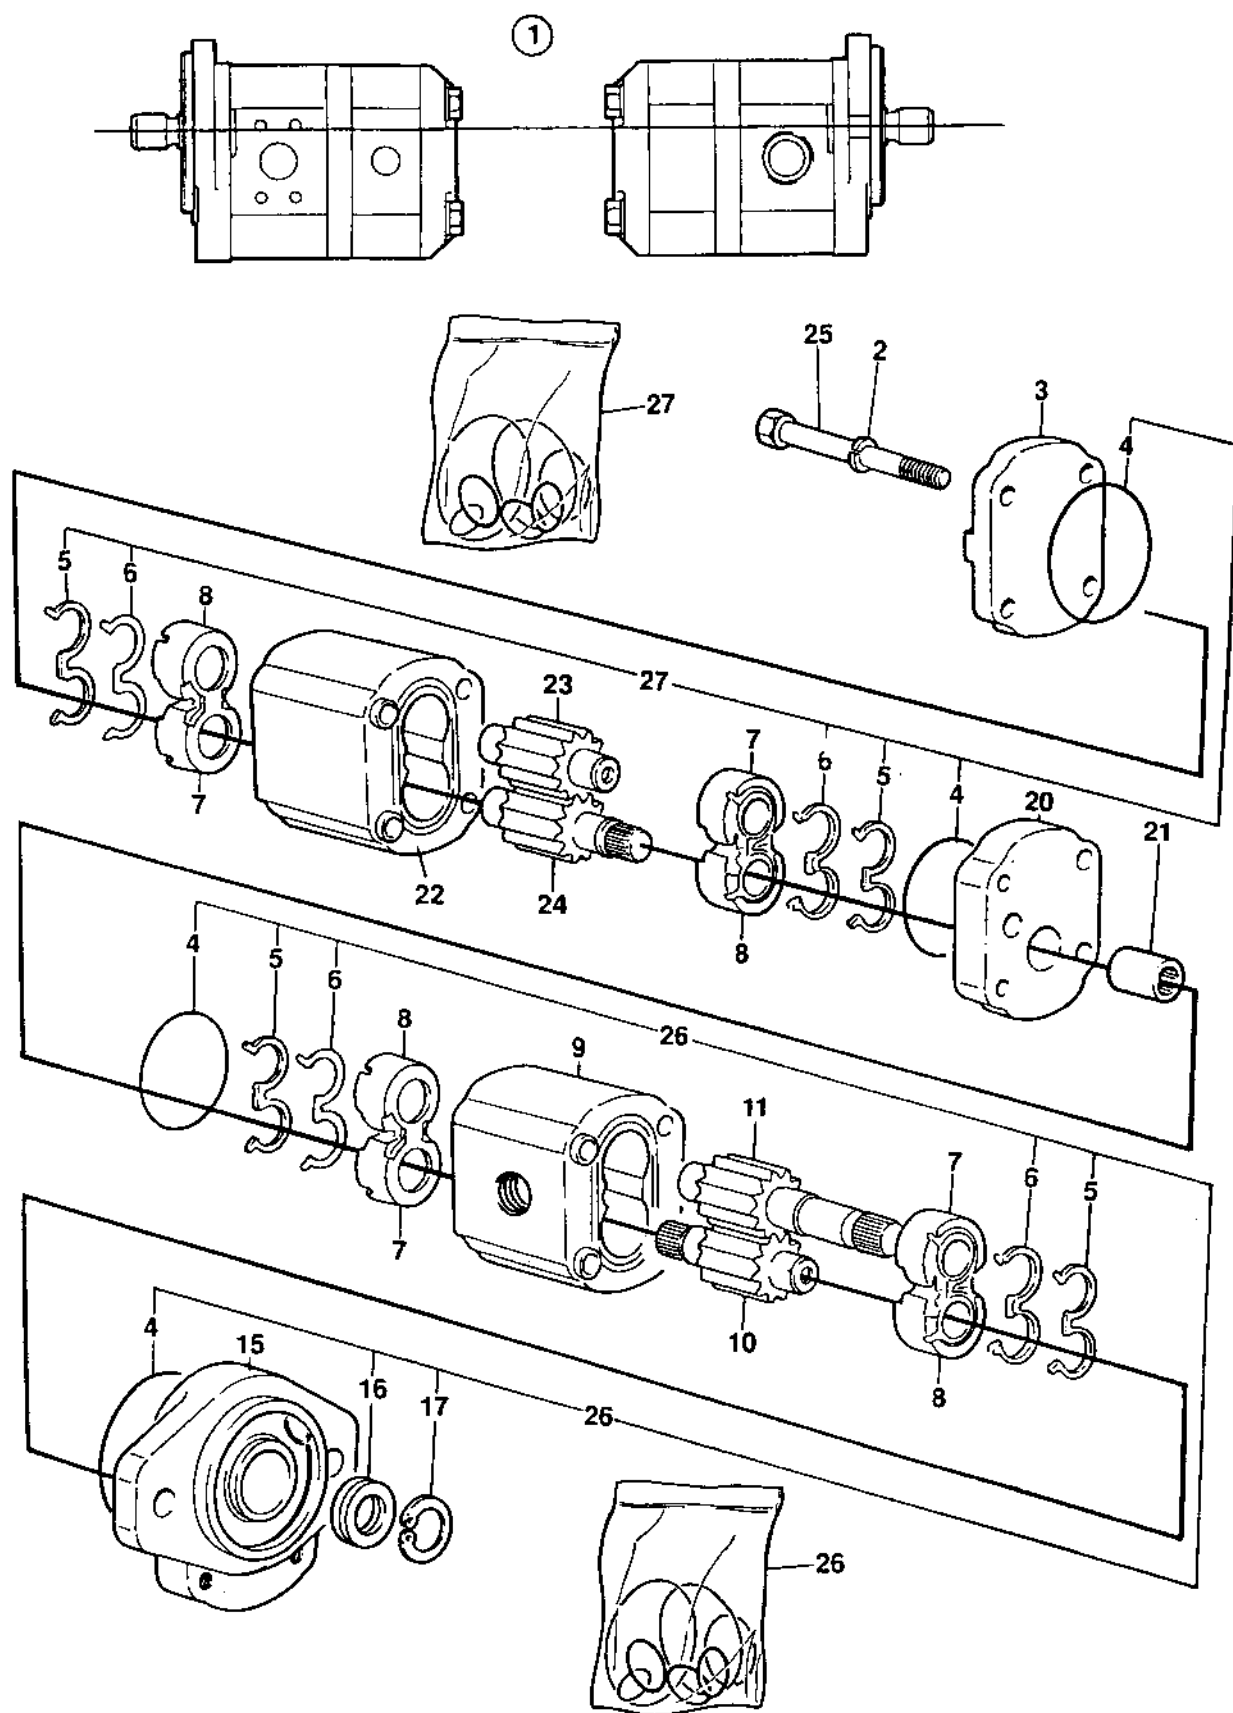


370172 Hydraulic pump, vibration ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump, vibration	
2			4	.Washer	
3			1	.Cover	
4		B	4	.O-ring	
5		B	4	.Back-up seal	
6			4	.Sealing	
7			4	.Bush	
8			4	.Bush	
9			1	.Body	
10			1	.Gear	
11			1	.Drive shaft	
15			1	.Flange	
16	908420	B	1	.Shaft seal	
17		B	1	.Retaining ring	
20			1	.Spacer	
21			1	.Coupling	
22			1	.Body	
23			1	.Gear	
24			1	.Gear	
25			4	.Bolt	
26	908419	C	1	Seal kit	D
27	908985	D	1	Seal kit	D
A)	CPL				
B)	Included in seal kit				
C)	Front pump				
D)	Rear pump				

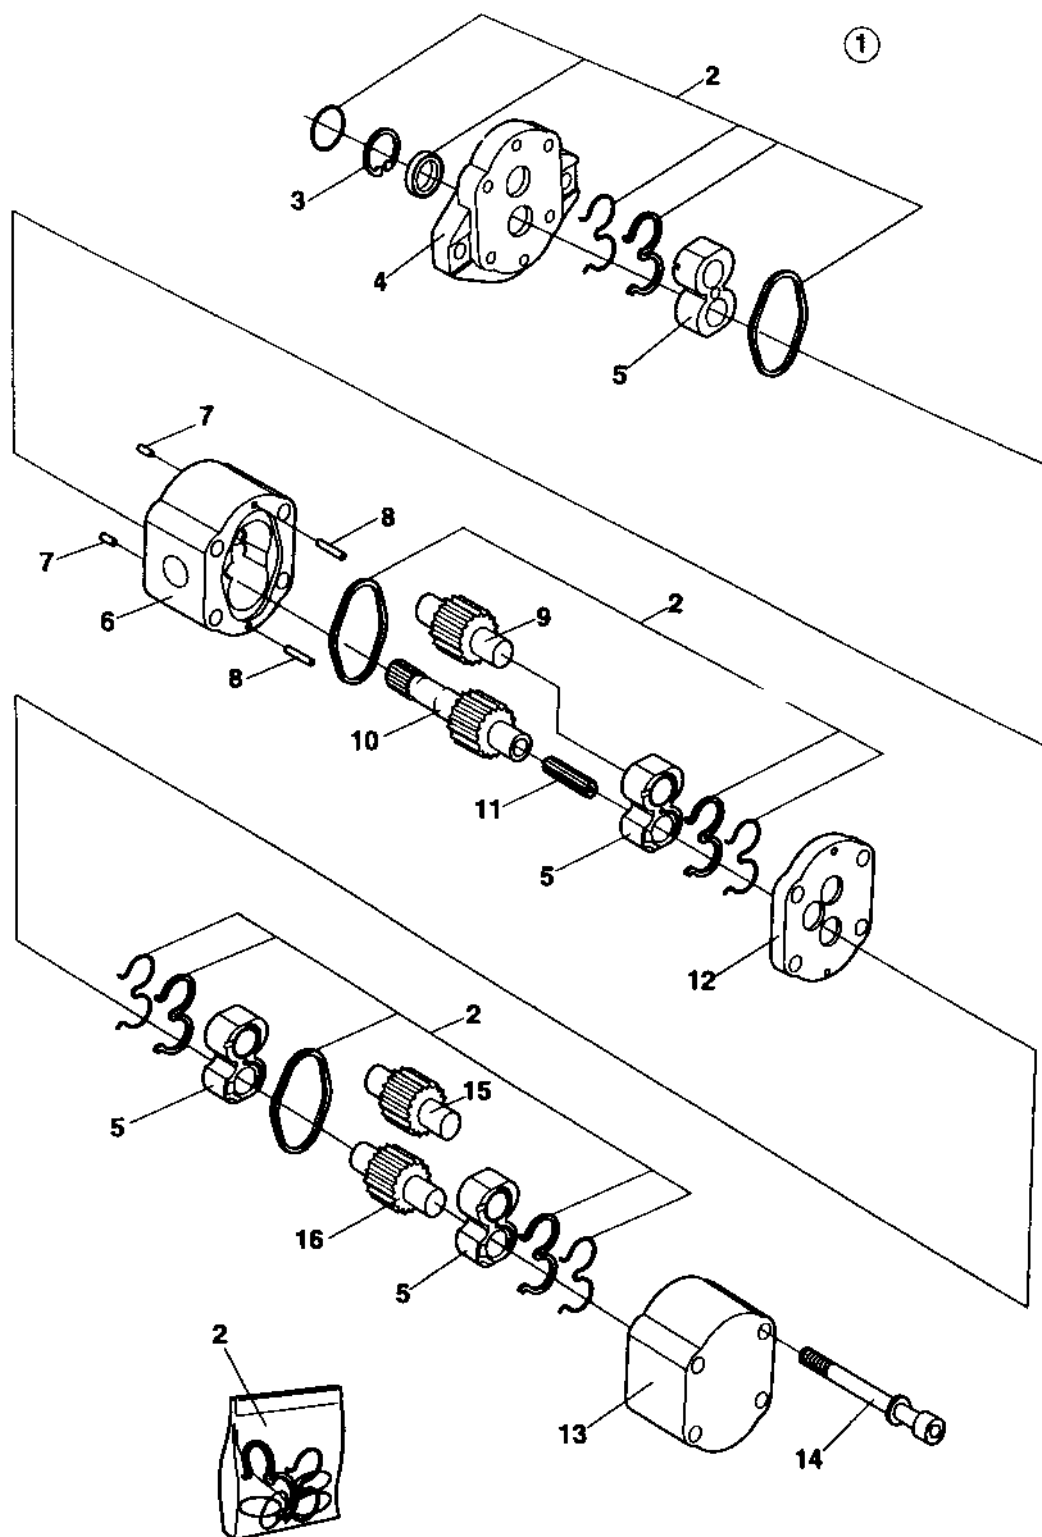


375649 Hydraulic pump, vibration ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic pump	D
2	903430		1	.Seal kit	D
3			1	.Snap ring	D
4			1	.Flange	D
5			4	.Bearing block	D
6			1	.Housing	D
7			2	.Pin	D
8			2	.Pin	D
9			1	.Gear	D
10			1	.Drive shaft	D
11			1	.Coupling	D
12			1	.Distance plate	D
13			1	.End housing	D
14			4	.Bolt	D
15			1	.Gear	D
16			1	.Gear	D
A)	CPL				

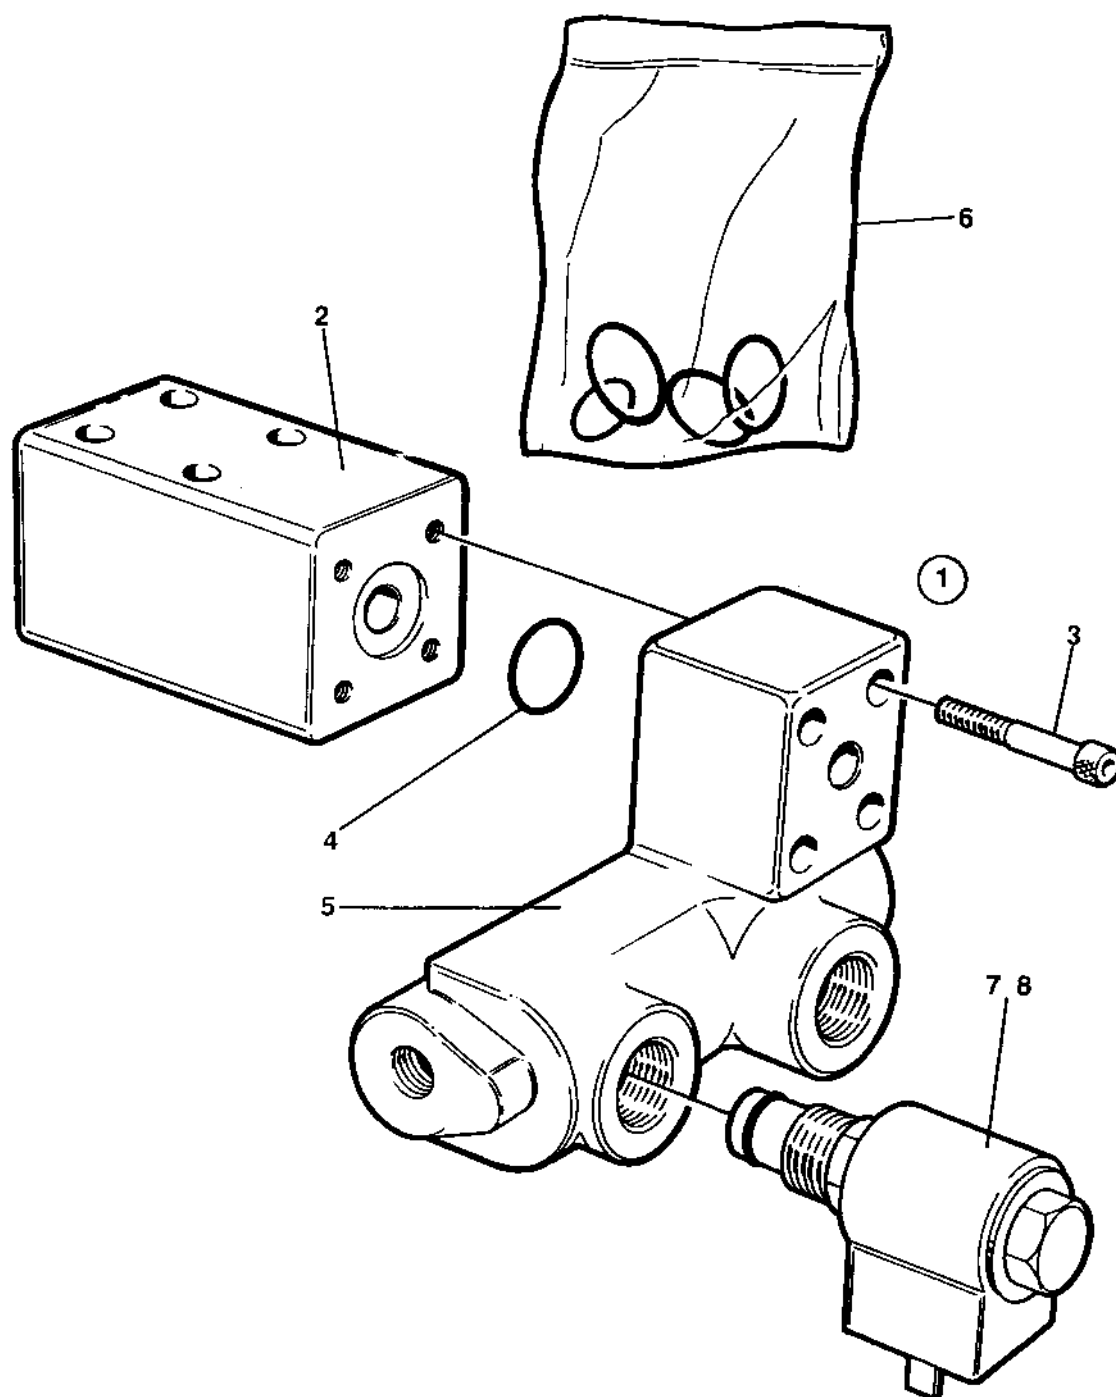

370173 Vibration valve ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Vibration valve	D
2	903730		1	.Adapter	
3	903729		4	.Screw	
4	160145		1	.O-ring	
5	903637	A	1	.Valve	D
6	902810		1	..Seal kit	D
7	903330	A	1	..Solenoid valve	D
8	908804		1	...Solenoid	D
A)	CPL				

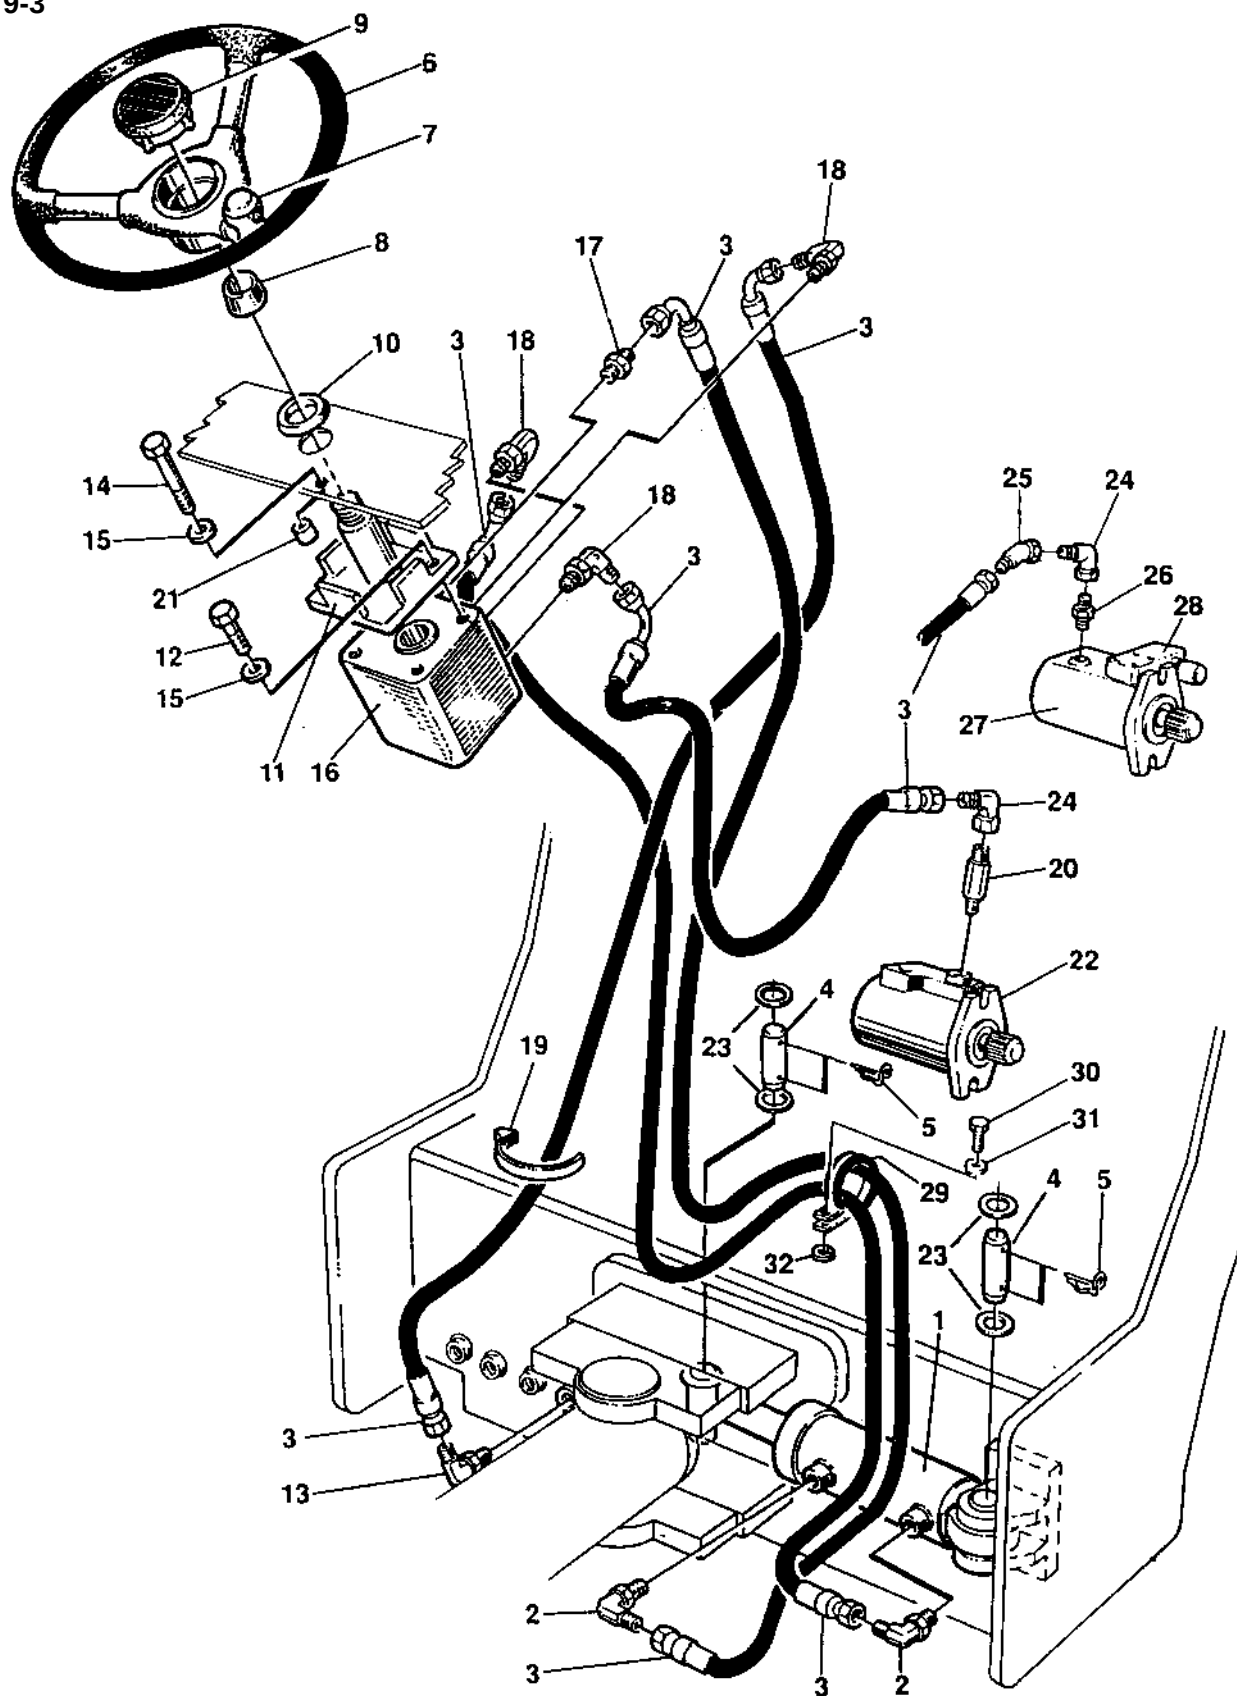


Steering system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357014		1	Steering cylinder Up to 601X3466 (Page 196)	
	374603		1	Steering cylinder From 601X3467 (Page 198)	
2	334235		2	Adapter	
3	831179		4	Hydraulic hose	
4	357419		2	Shaft Up to 601X3466	D
5	630019		4	Split pin	D
6	902183		1	Steering wheel	
7	902184		1	Turning knob	D
8	902185		1	Insert adapter	
9	902186		1	Cover plate	
10	928830		1	Rubber washer	
11	902123		1	Steering column	
12	500048		2	Screw M10-1,5x20 8,8	
13	813321		1	Connector	
14	500030		2	Screw M10-1,5x35H 8,8	
15	615044		4	Conical spring washer	D
16	902099		1	Steering valve (Page 194)	
17	234390		4	Connector	
18	903003		3	Connector	
19	313102		N	Cable ties L=388 mm	
20	357377	1	1	Connector	
21	355869		2	Spacer sleeve	
22	357009		1	Hydraulic pump, vibration DEUTZ Up to 60111642 (Page 180)	
	359524		1	Hydraulic pump, vibration DEUTZ From 60111643 (Page 182)	
23	600020		4	Washer	
24	334524		1	Connector	
25	801781		1	Connector	
26	334236		1	Adapter	
27	370172		1	Hydraulic pump, vibration ISUZU (Page 184)	
28	370173		1	Vibration valve ISUZU (Page 188)	
29	923008	2	1	Clamp	
30	500021	2	1	Screw M8-1,25x25 8,8	
31	904556	2	1	Washer 8,4x16x3,0	
32	904556	2	1	Washer 8,4x16x3,0	

1) For machines with Deutz engine

2) For machines with Isuzu engine

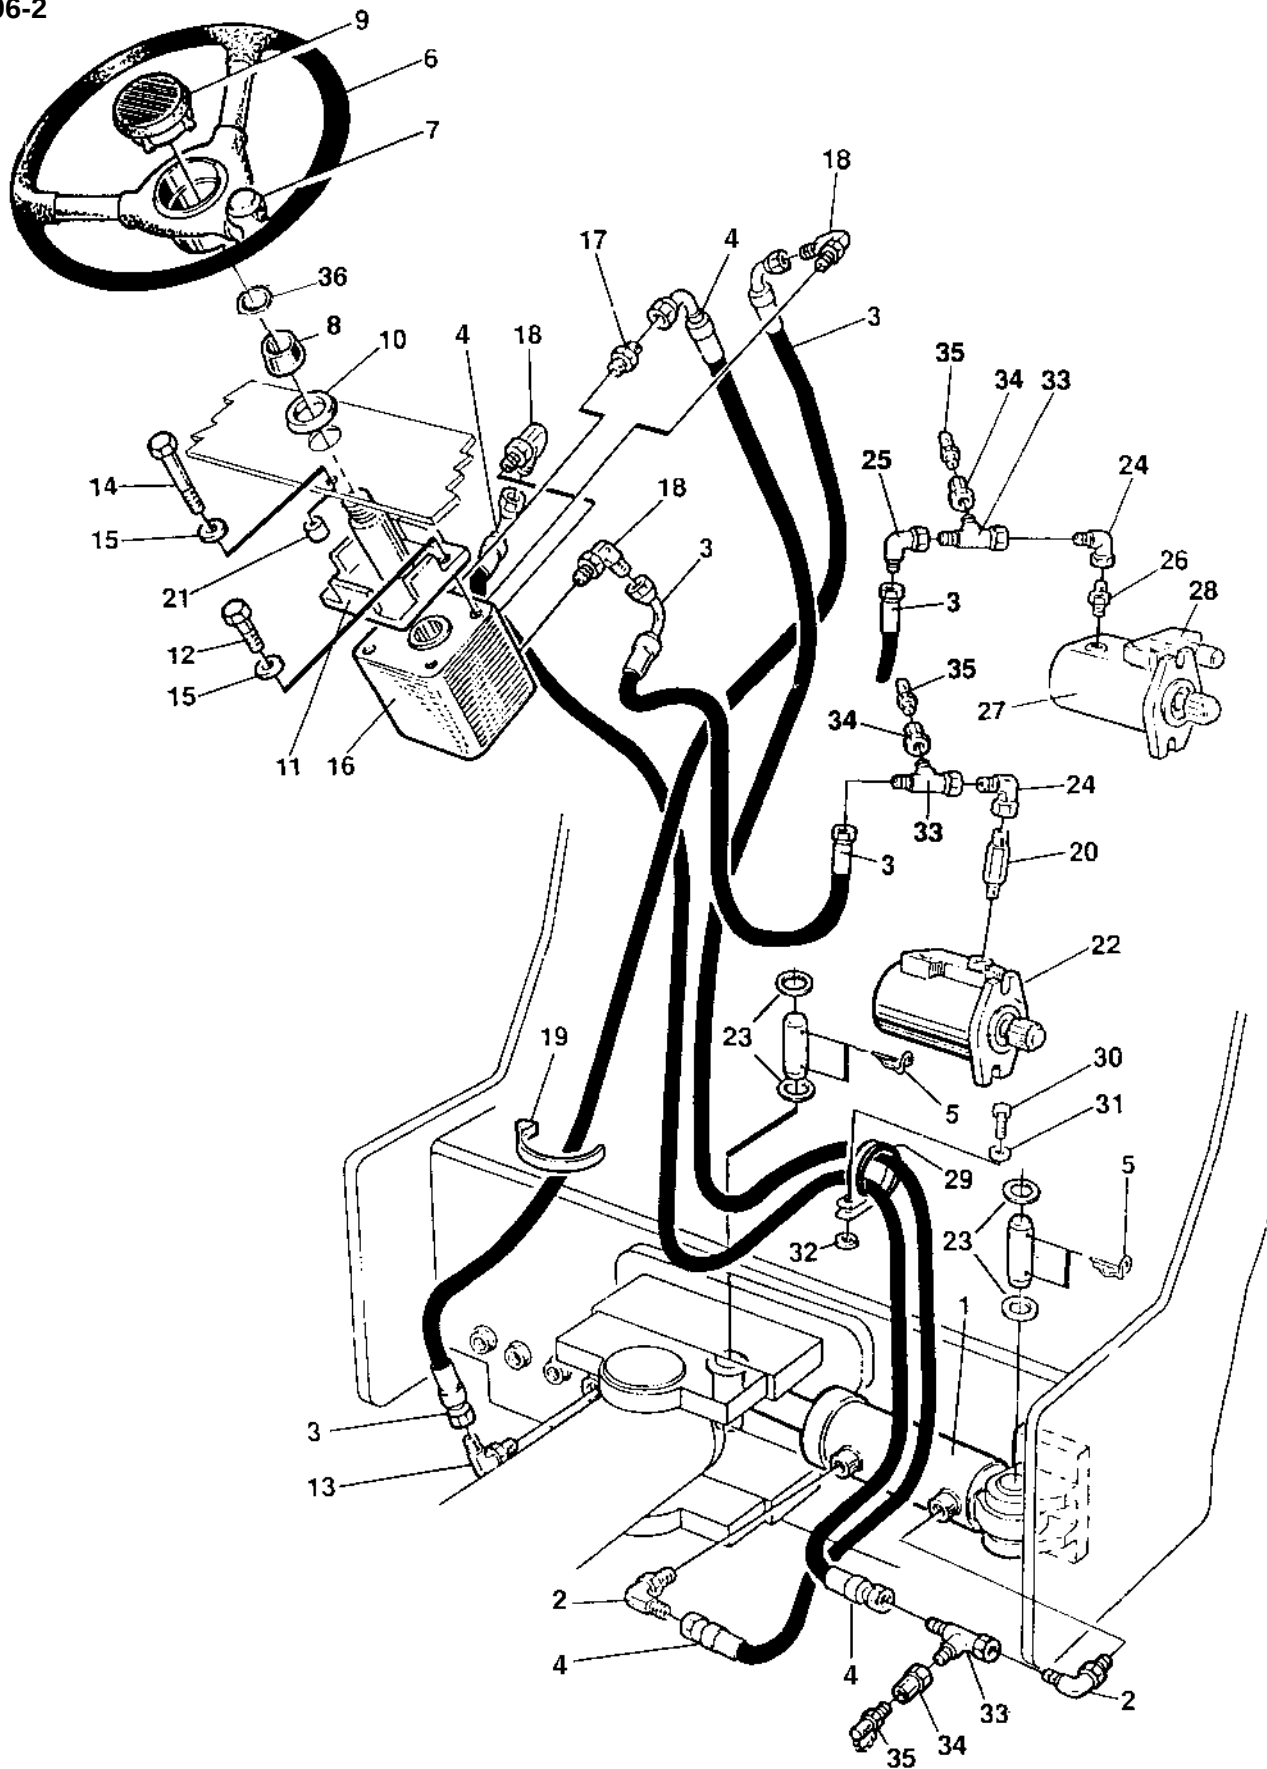

Steering system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	374603		1	Steering cylinder (Page 198)	
2	334235		2	Adapter	
3	831179		2	Hydraulic hose	
4	482398		2	Hydraulic hose	
5	630019		4	Split pin	D
6	902183		1	Steering wheel	
7	902184		1	Turning knob	D
8	902185		1	Insert adapter	
9	902186		1	Cover plate	
10	928830		1	Rubber washer	
11	902123		1	Steering column	
12	500048		2	Screw M10-1,5x20 8,8	
13	813321		1	Connector	
14	500030		2	Screw M10-1,5x35H 8,8	
15	904230		4	Washer 10,5x22x2	
16	902099		1	Steering valve (Page 194)	
17	234390		1	Connector	
18	903003		3	Connector	
19	313102		N	Cable ties L=388 mm	
20	357377	1	1	Connector	
21	355869		2	Spacer sleeve	
22	359524		1	Hydraulic pump, vibration DEUTZ (Page 182)	
23	904234		4	Washer 25x45x4	
24	334524		1	Connector	
25	334524		1	Connector	
26	334236		1	Adapter	
27	370172		1	Hydraulic pump, vibration ISUZU Up to 601X4277 (Page 184)	
	375649		1	Hydraulic pump, vibration ISUZU From 601X4278 (Page 186)	
28	370173		1	Vibration valve ISUZU (Page 188)	
29	923008	2	1	Clamp	
30	500021	2	1	Screw M8-1,25x25 8,8	
31	904556	2	1	Washer 8,4x16x3,0	
32	904556	2	1	Washer 8,4x16x3,0	
33	334234		2	Tee-connector	
34	433830401		2	Connector	
35	910161		2	Measuring nipple	D
36	904703		1	Washer 13x24x4	


1) For machines with Deutz engine

2) For machines with Isuzu engine

902099 Steering valve


Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Steering valve	
2			1	.Spool and sleeve	
3	480468		1	.Ball	
4	480446		1	.Threaded bushing	D
5		B	1	.O-ring	D
6		B	1	.Ring	D
7	911620		1	.Bearing	D
8	480449		1	.Ring	
9	480447		1	.Cross pin	
11	902861		1	.Cardan shaft	
12	903521		1	.Spring kit	D
13		B	1	.O-ring	D
14	902862		1	.Valve plate	
15	902863		1	.Gear kit	D
16		B	1	.O-ring	D
17	480450		1	.End cap	
18		B	1	.Washer	
20	929008		1	.Screw with bore	
21	929009		6	.Screw	
22	481303		1	.Name plate	
23	480464		2	.Drive screw	
24	929010	A	1	.Relief valve 17,0-17,5MPa	D
25	902864		1	.Spring	
26	929012		2	.Shock valve 22,5-24,0 MPa	
27	929013		2	.Ball	
28		B	1	.Seal ring	
29	929014		2	.Rolled pin	
30	480457		1	Spare parts kit	D

- A) CPL
 B) Included in item 30

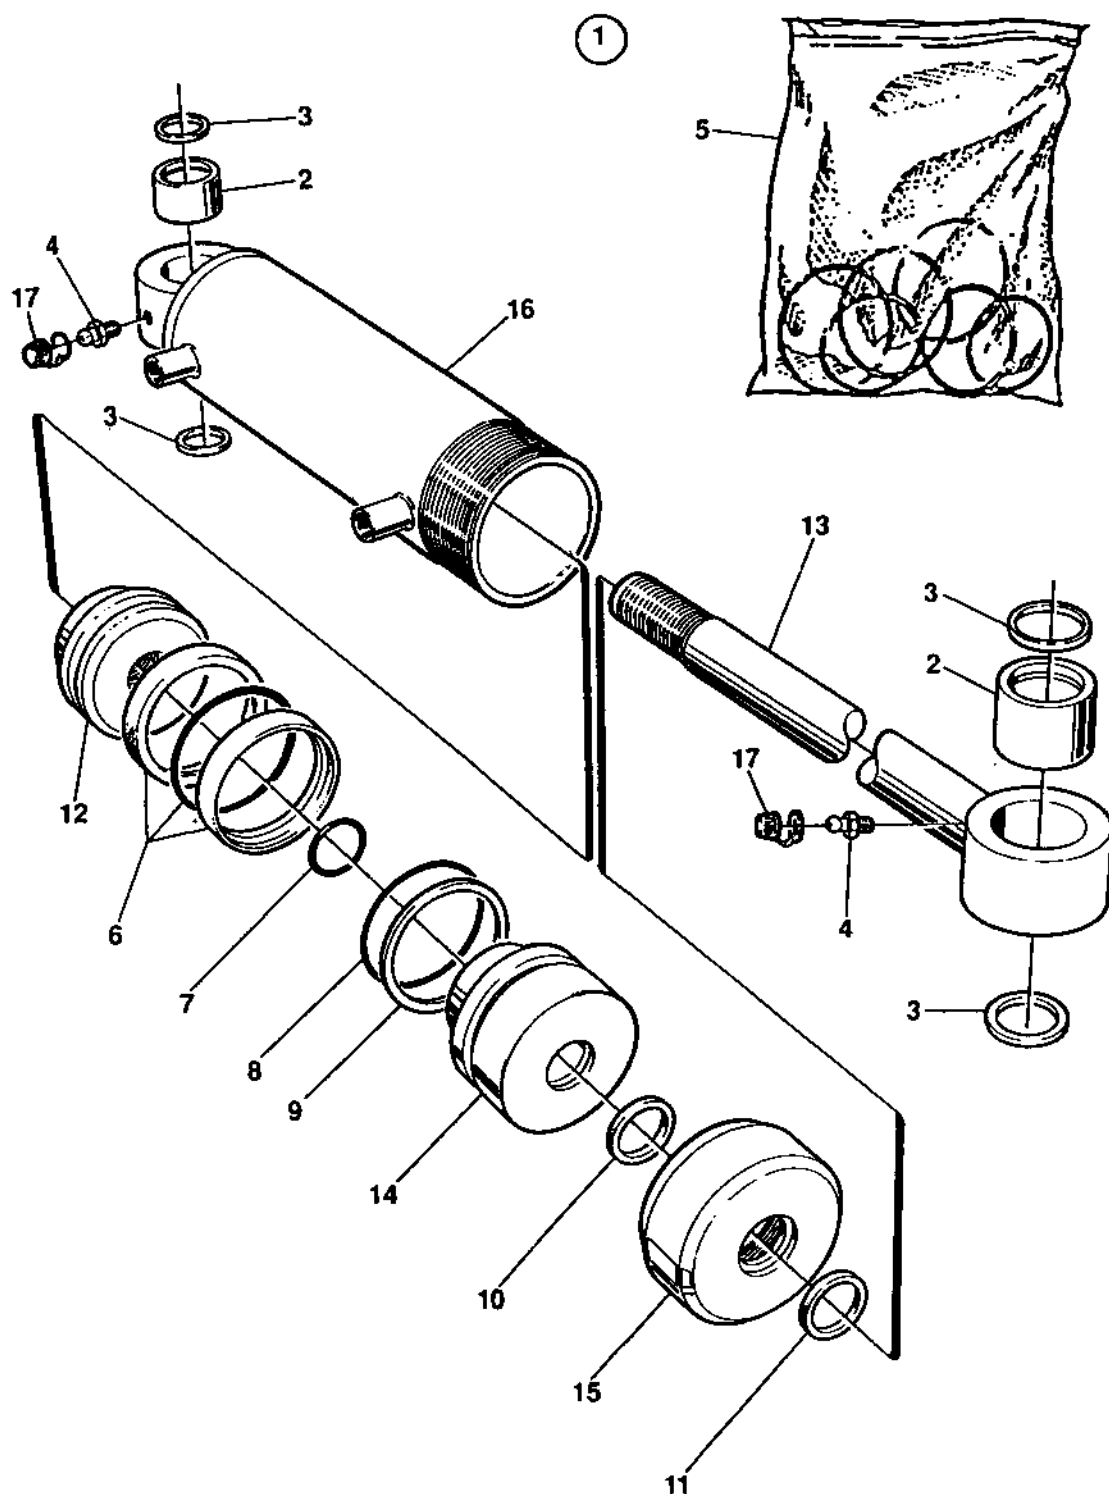

357014 Steering cylinder


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Steering cylinder	D
2	238272		2	.Bearing	D
3	151014		4	.Retaining ring	
4	926214		2	.Grease fitting	D
5	902424		1	.Gasket kit	D
6			1	..Sealing	D
7			1	..O-ring	D
8	160207		1	..O-ring	
9			1	..Back-up ring	
10			1	..Sealing	
11			1	..Scraper ring	
12			1	.Piston	
13			1	.Piston rod	
14			1	.Guide	
15			1	.Nut	
16			1	.Cylinder tube	
17	902576		2	.Cover	

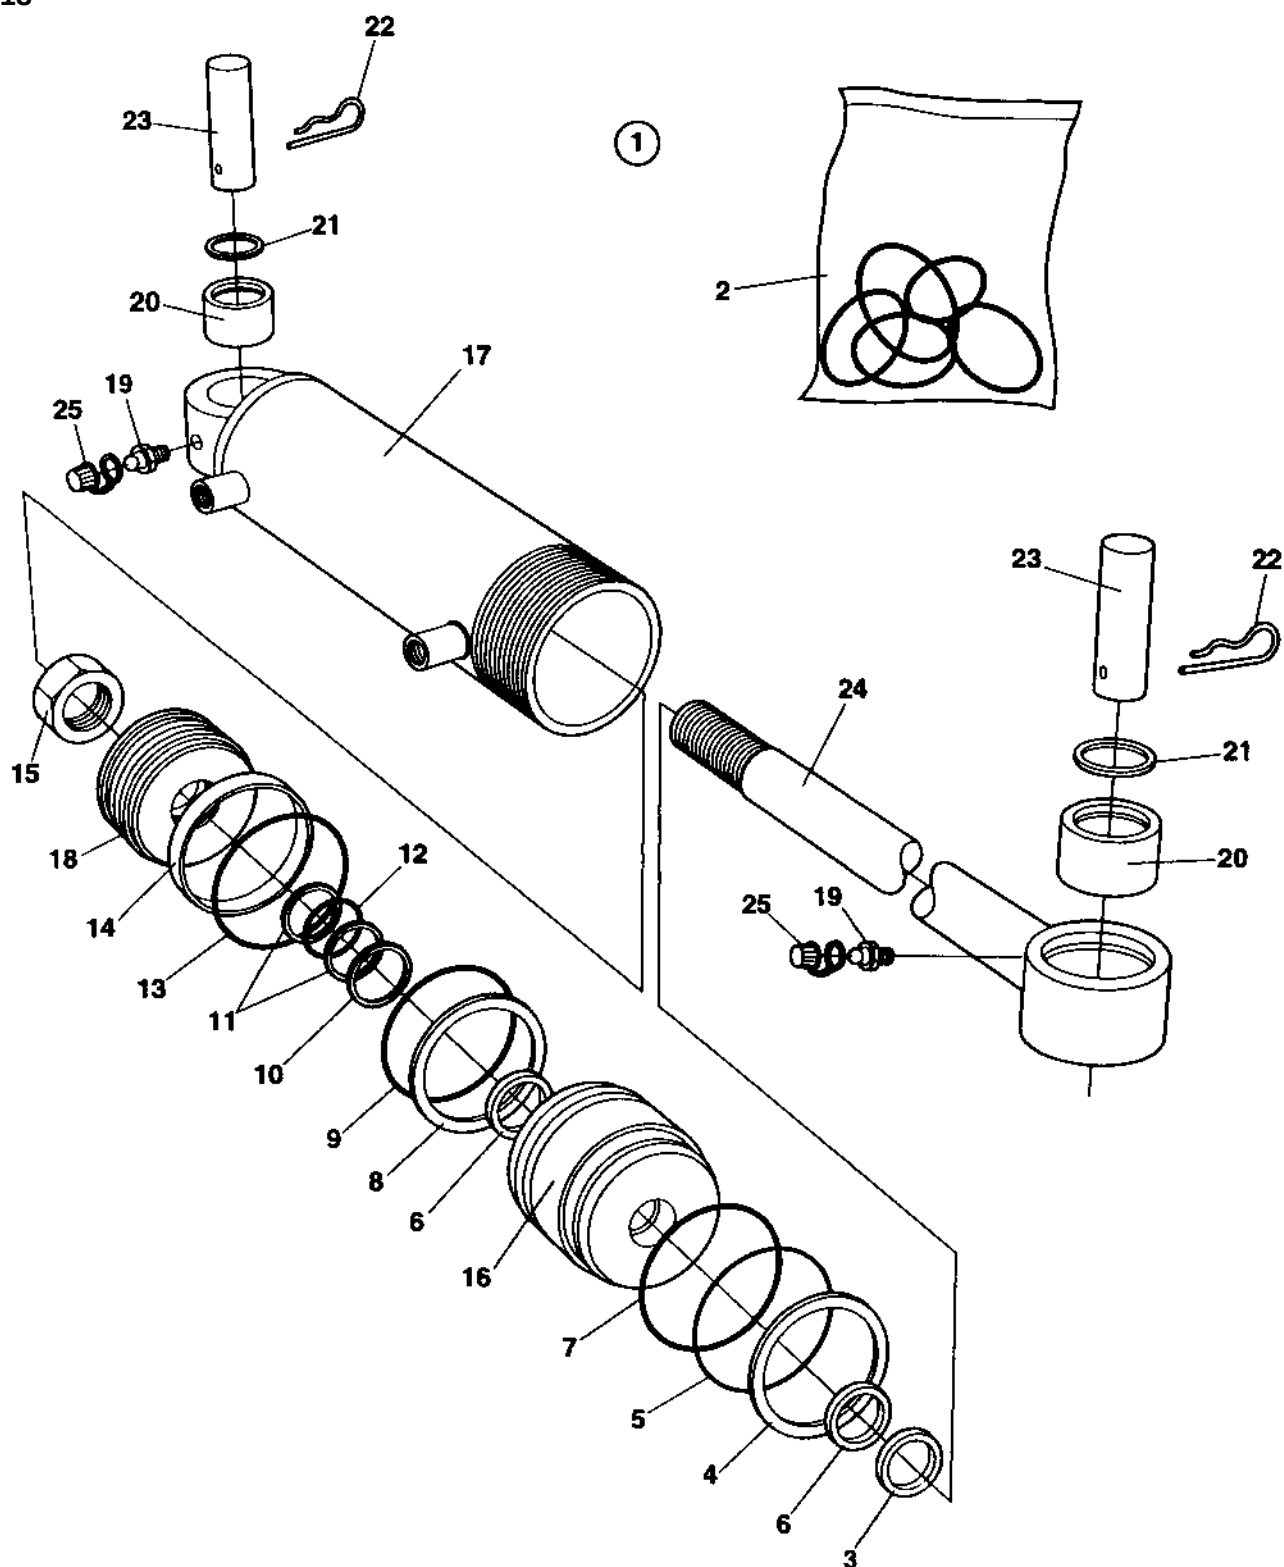


374603 Steering cylinder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Steering cylinder	
2	909760		1	.Seal kit	D
3			1	..Scraper ring	D
4			1	..Retaining ring	D
5			1	..O-ring	D
6			2	..Guide ring	D
7			1	..Lock ring	D
8			1	..Sealing	D
9	160025		1	..O-ring	
10			1	..Sealing	
11			2	..Back-up ring	
12			1	..O-ring	
13			1	..Sealing	
14			1	..Guide ring	
15			1	..Nut	
16	909766		1	.Guide	
17	909765		1	.Cylinder tube	
18	909764		1	.Piston block	
19	926214		2	.Grease fitting	D
20	238272		2	.Bearing	D
21	151012		2	.Retaining ring	
22	635061		4	.Hair clip	D
23	909761		2	.Shaft	
24	909759		1	.Piston rod	
25	902576		2	.Cover	


A) CPL

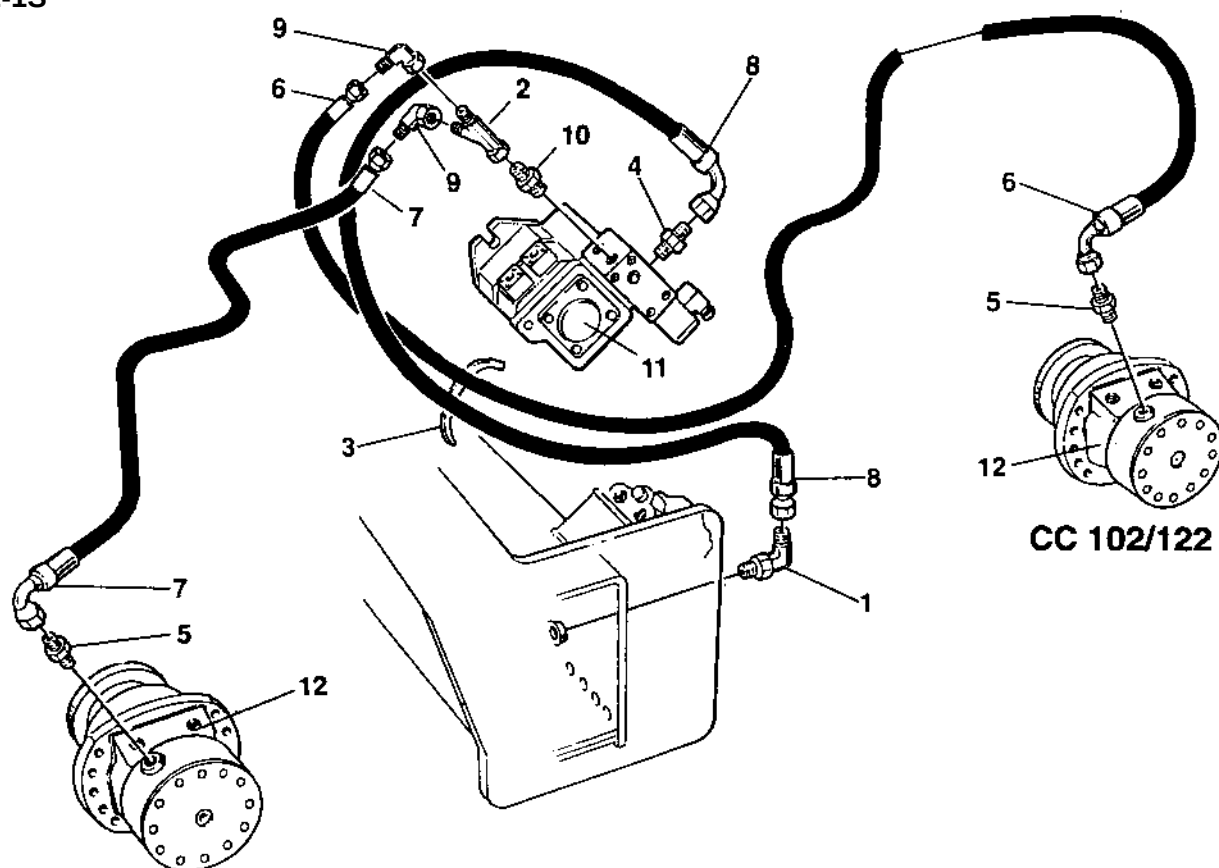


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	813321		1	Connector	
2	334556		1	Tee-connector	
3	313102		N	Cable ties L=388 mm	
4	334232		1	Adapter	
5	234388		2	Connector	
6	482472		1	Hydraulic hose	
7	482836		1	Hydraulic hose	
8	482056		1	Hydraulic hose	
9	334196		2	Elbow 90	
10	334143		1	Straight connector	
11			1	Hydraulic pump, propulsion	
12			1	Hydraulic motor, propulsion	

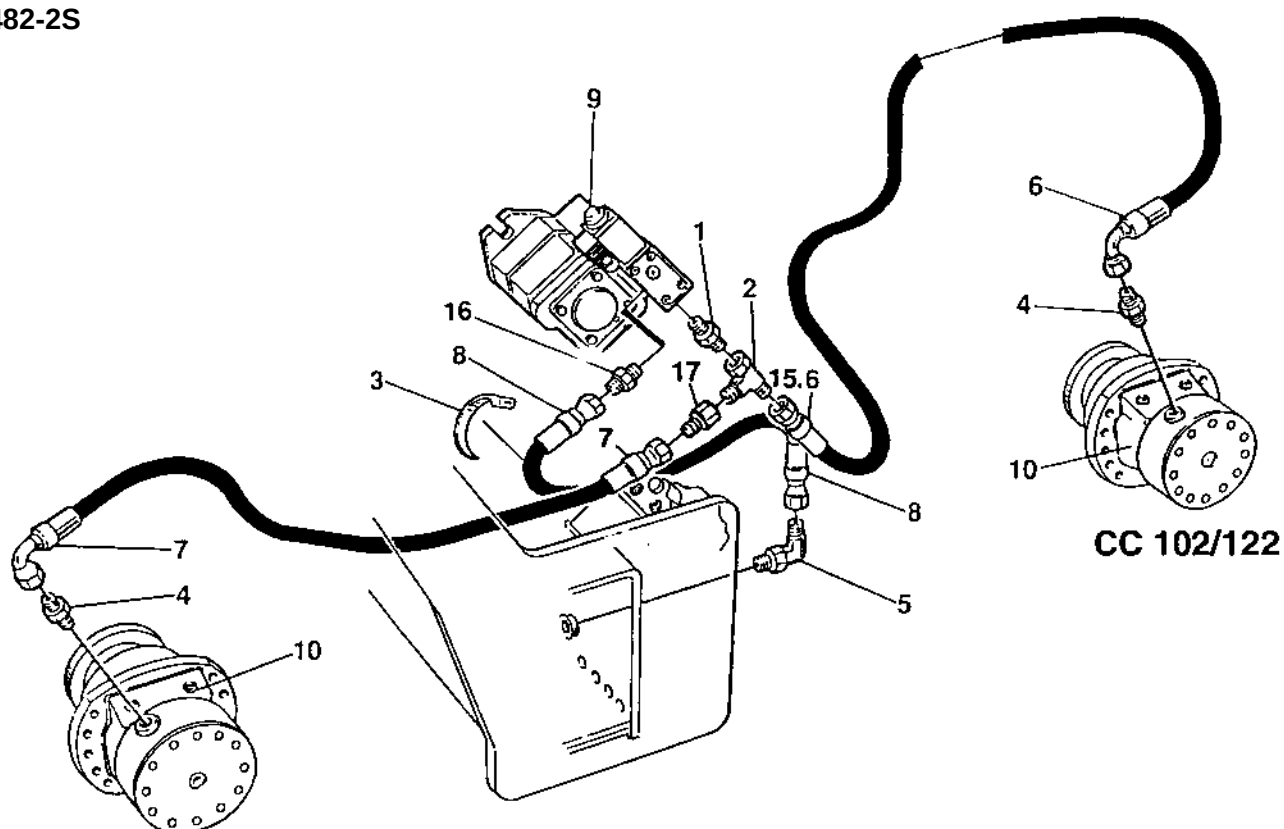

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902125	A	1	Connector	
	903268	B	1	Connector	
2	334556	A	1	Tee-connector	
	334234	B	1	Tee-connector	
3	313102		N	Cable ties L=388 mm	
4	234388	A	2	Connector	
	234233	B	2	Adapter	
5	813321		1	Connector	
6	482472	D	1	Hydraulic hose	
	482482	E	1	Hydraulic hose	
7	482836	D	1	Hydraulic hose	
	482854	E	1	Hydraulic hose	
8	482884		1	Hydraulic hose	
9			1	Hydraulic pump, propulsion	
10			2	Hydraulic motor, propulsion	
16	903268		1	Connector	
A)	Small				
B)	Big				
D)	Small connection				
E)	Big connection				

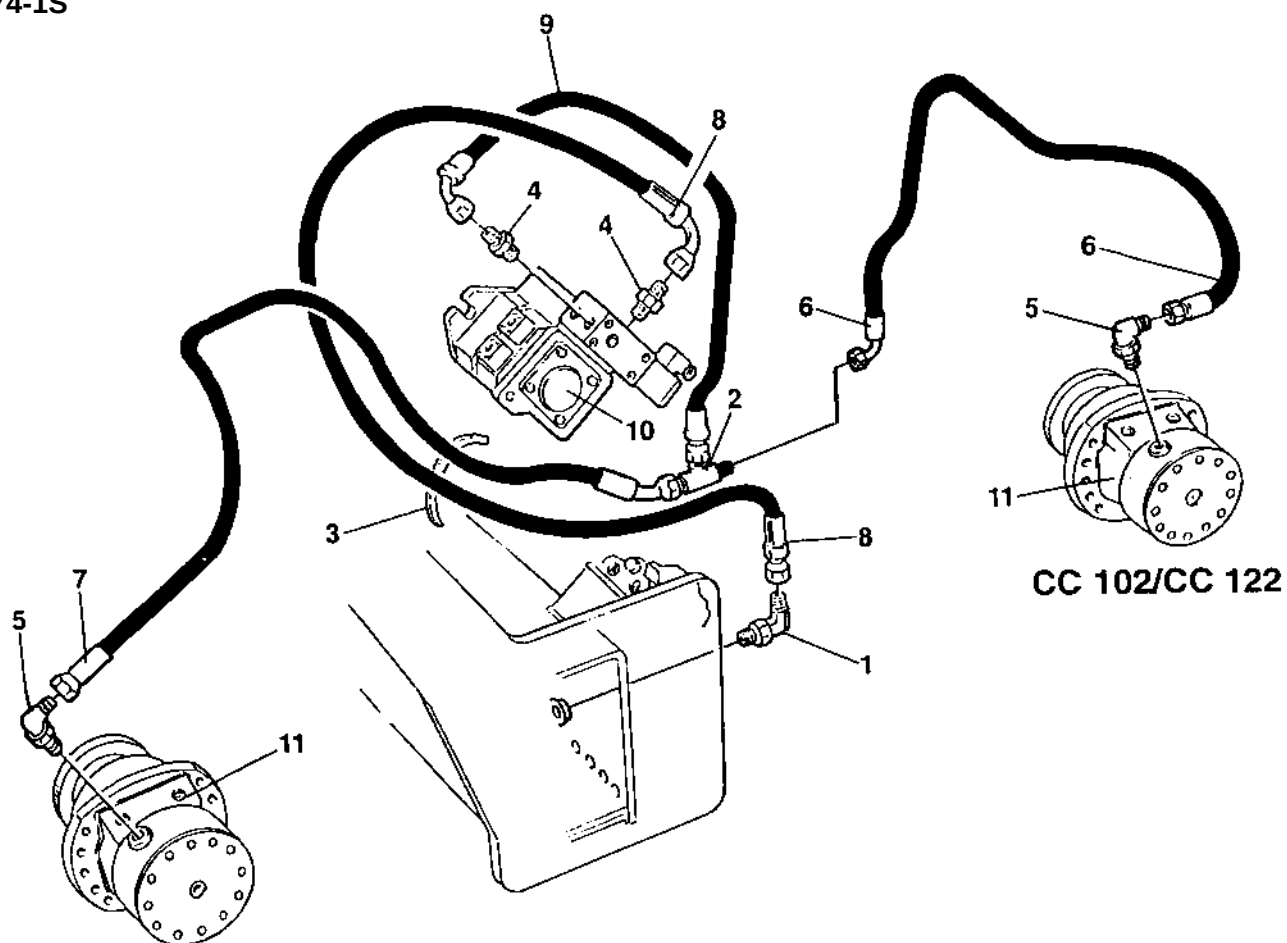

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	813321		1	Connector	
2	234804		1	Connector	
3	313102		N	Cable ties L=388 mm	
4	334232		2	Adapter	
5	334389		2	Connector	
6	482219		1	Hydraulic hose	
7	482855		1	Hydraulic hose	
8	482782		1	Hydraulic hose	
9	482775		1	Hydraulic hose	
10			1	Hydraulic pump, propulsion	
11			2	Hydraulic motor, propulsion	

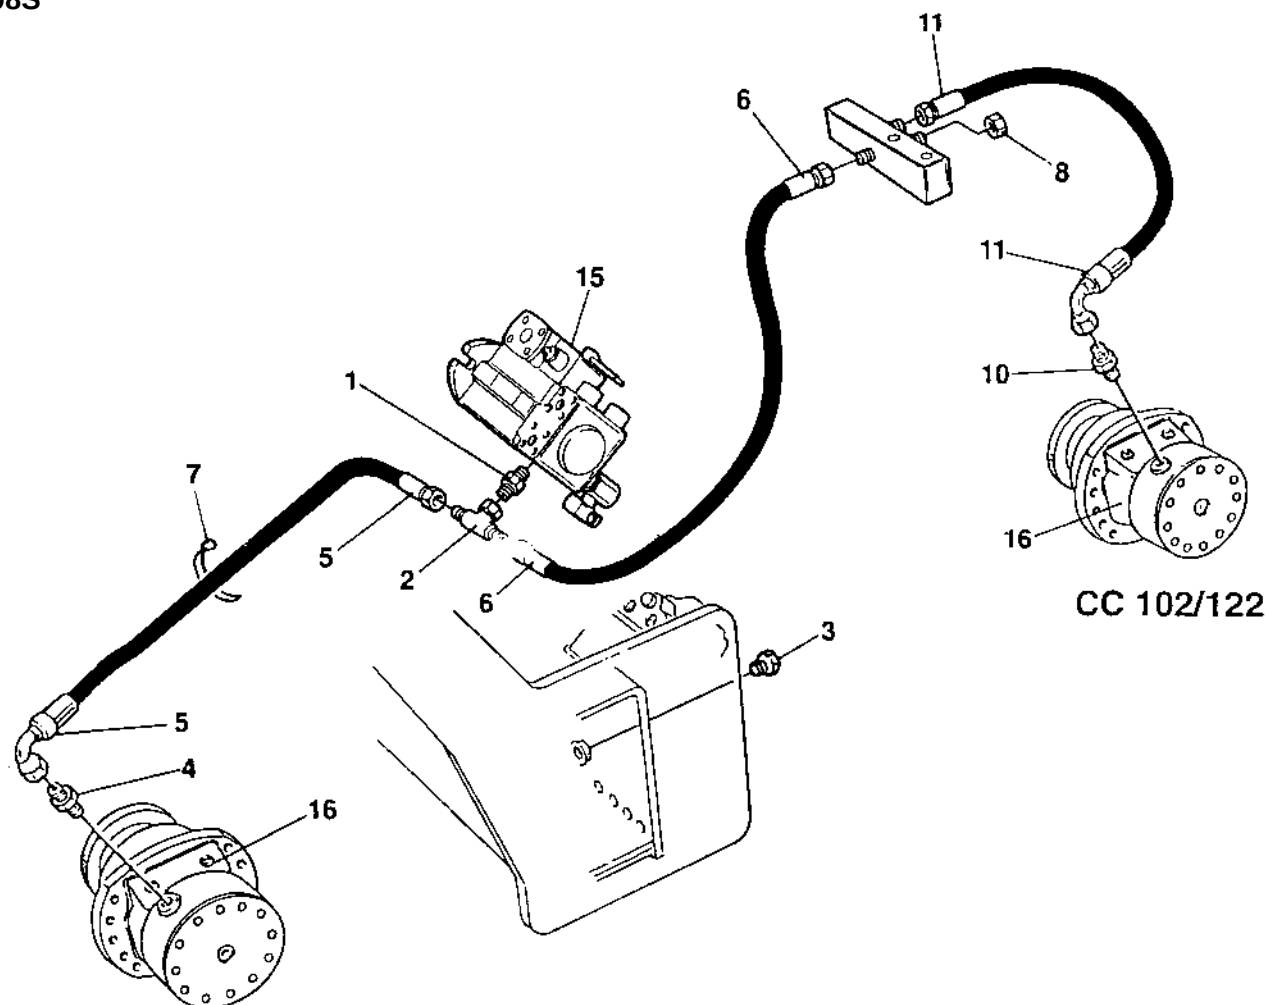


Brake system DEUTZ / ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	334463		1	Connector	
2	234888		1	Tee-connector	
3	892446		1	Plug	
4	234233		1	Adapter	
5	483167		1	Hydraulic hose	
6	482865		1	Hydraulic hose	
7	313102	N		Cable ties L=388 mm	
8	230400		1	Cap	D
10	234233		1	Adapter	
11	223299		1	Hydraulic hose	
15			1	Hydraulic pump, propulsion	
16			2	Hydraulic motor, propulsion	


Electrical equipment CC122

Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Electrical equipment DEUTZ Up to 60111175 (Page 210)	
110				Electrical equipment DEUTZ From 60111176 Up to 60113599 (Page 212)	
120				Electrical equipment DEUTZ From 60113600 (Page 214)	
150				Electrical equipment ISUZU Up to 60123599 (Page 218)	
170				Electrical equipment ISUZU From 601X3600 (Page 222)	
175				Electrical equipment ISUZU From 60124658 Up to 60125890 (Page 226)	
180				Electrical equipment ISUZU From 60125891 (Page 230)	
200				Control panel Up to 601X2184 (Page 234)	
				Control panel From 601X2190 Up to 601X2208 (Page 234)	
210				Control panel From 601X2185 Up to 601X2189 (Page 238)	
				Control panel From 601X2209 Up to 601X3599 (Page 238)	
215				Control panel DEUTZ From 60113600 (Page 242)	
				Control panel ISUZU From 601X3600 (Page 246)	
240				Electrical battery switch DEUTZ From 60115963 (Page 250)	
300				Sprinkler timer (Page 252)	
350				Driving & side direction lights Up to 601X3599 (Page 254)	
352				Driving & side direction lights From 601X3600 (Page 258)	
355				Working lights (Page 262)	
358				Licence plate light, parking lights (Page 264)	
380				Rotating beacon (Page 266)	

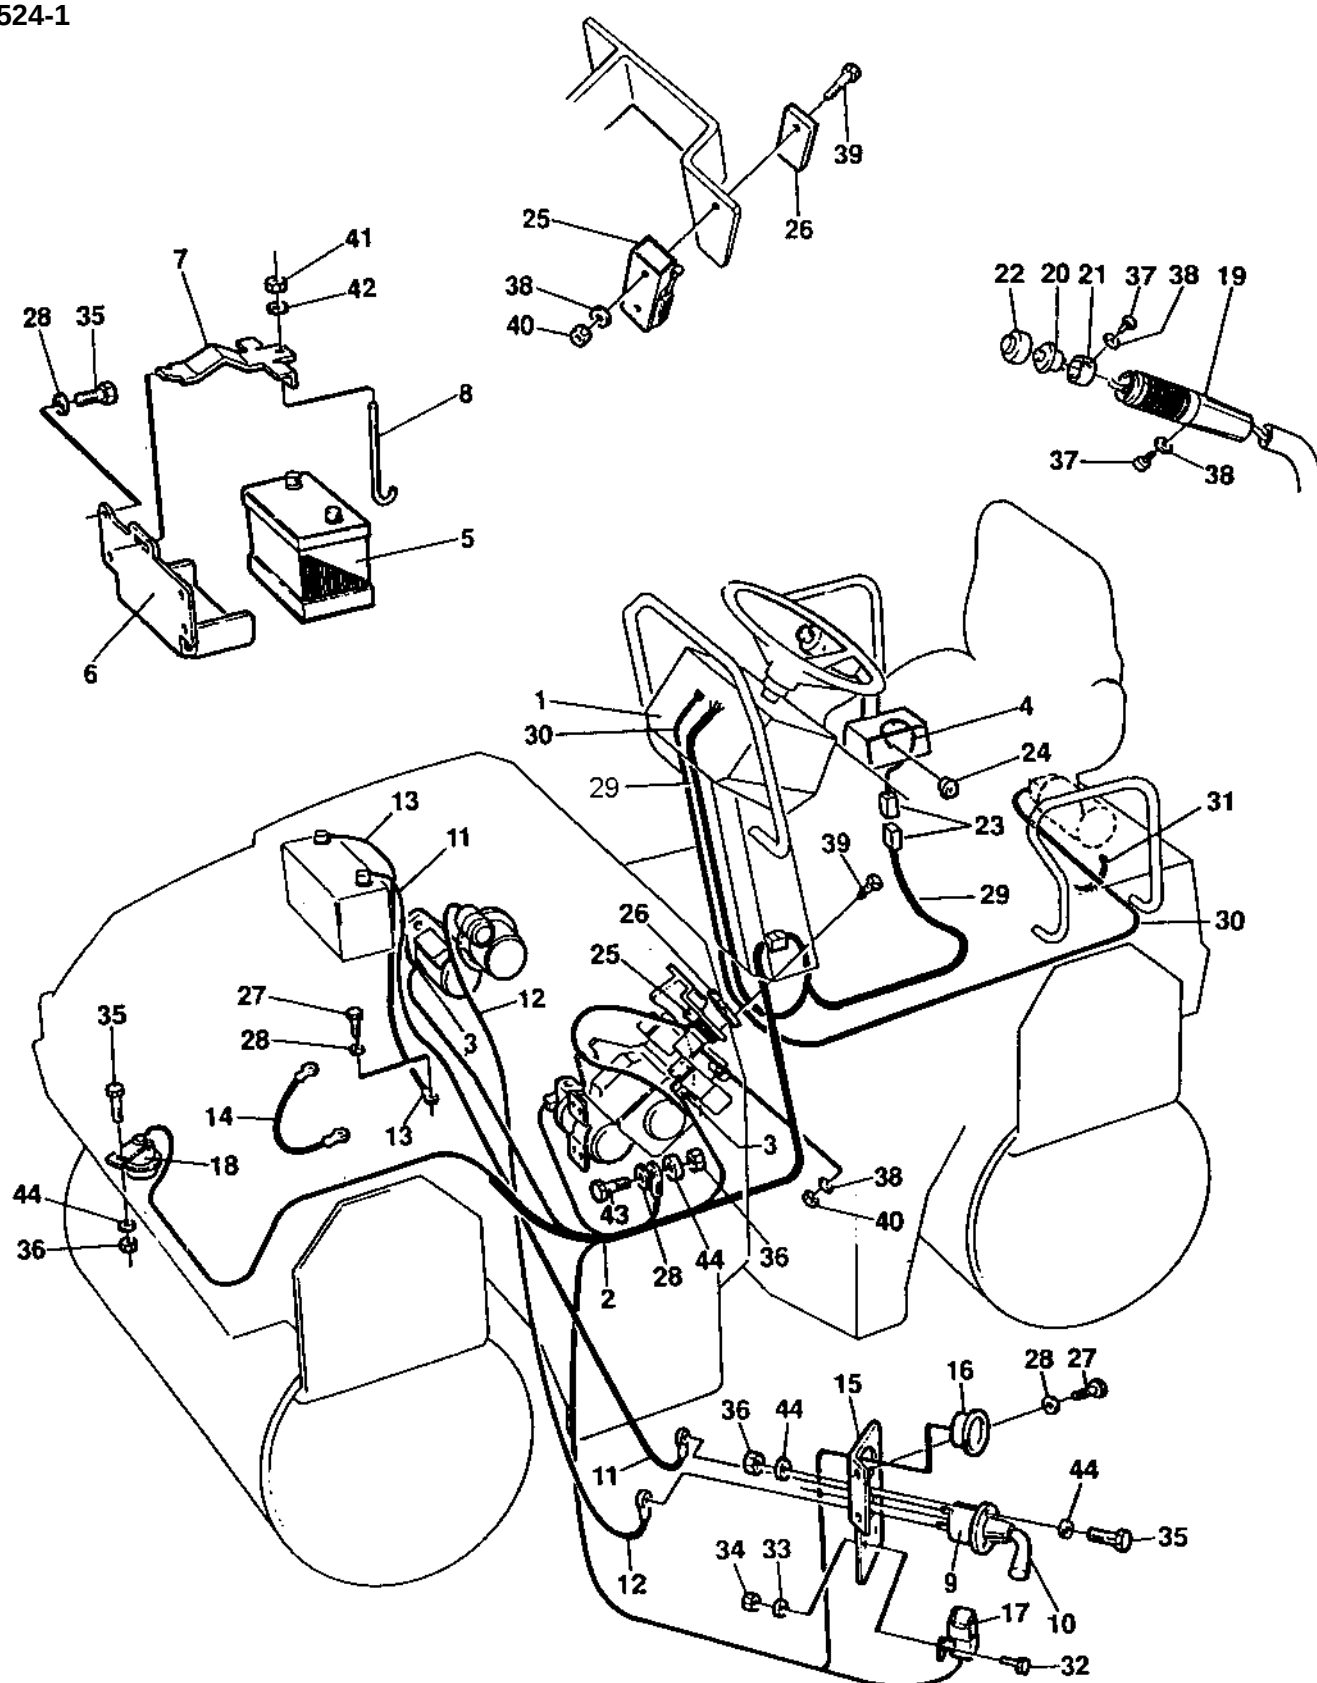

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel (Page 234)	
2	357581	A	1	Cable harness	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	357471		1	Battery shelf	
7	357684		1	Battery holder	
8	550041		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+)	
12	902197	E	1	Connection wire	
13	902384		1	Battery cable (-)	
14	345728		1	Ground cable	
15	357584		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	930046	I	1	Micro switch	D
26	357580		1	Holder	
27	500019		2	Screw M8-1,25x16 8,8	
28	904229		8	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30				Not used on this model	
31				Not used on this model	
32	508020		1	Screw	
33	904281		1	Washer 5,3x10x1	
34	586001		1	Lock nut M5	
35	500053		7	Screw M8-1,25x20 8,8	
36	586003		4	Lock nut M8	
37	533001		3	Screw	
38	904697		5	Washer 3,2x6x0,5	
39	903152		2	Screw	
40	570001		2	Nut	
41	586004		1	Nut	
42	615076		1	Washer 7,0x25x1,5	
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		6	Washer 8,4x16x1,5	


- 1) Dry charged. Have to be filled with battery acid & charged before use.
 2) See section " Control panel "
 A) Engine
 C) F/R control
 E) Switch-starter
 G) Start
 H) Vibration
 I) Neutral

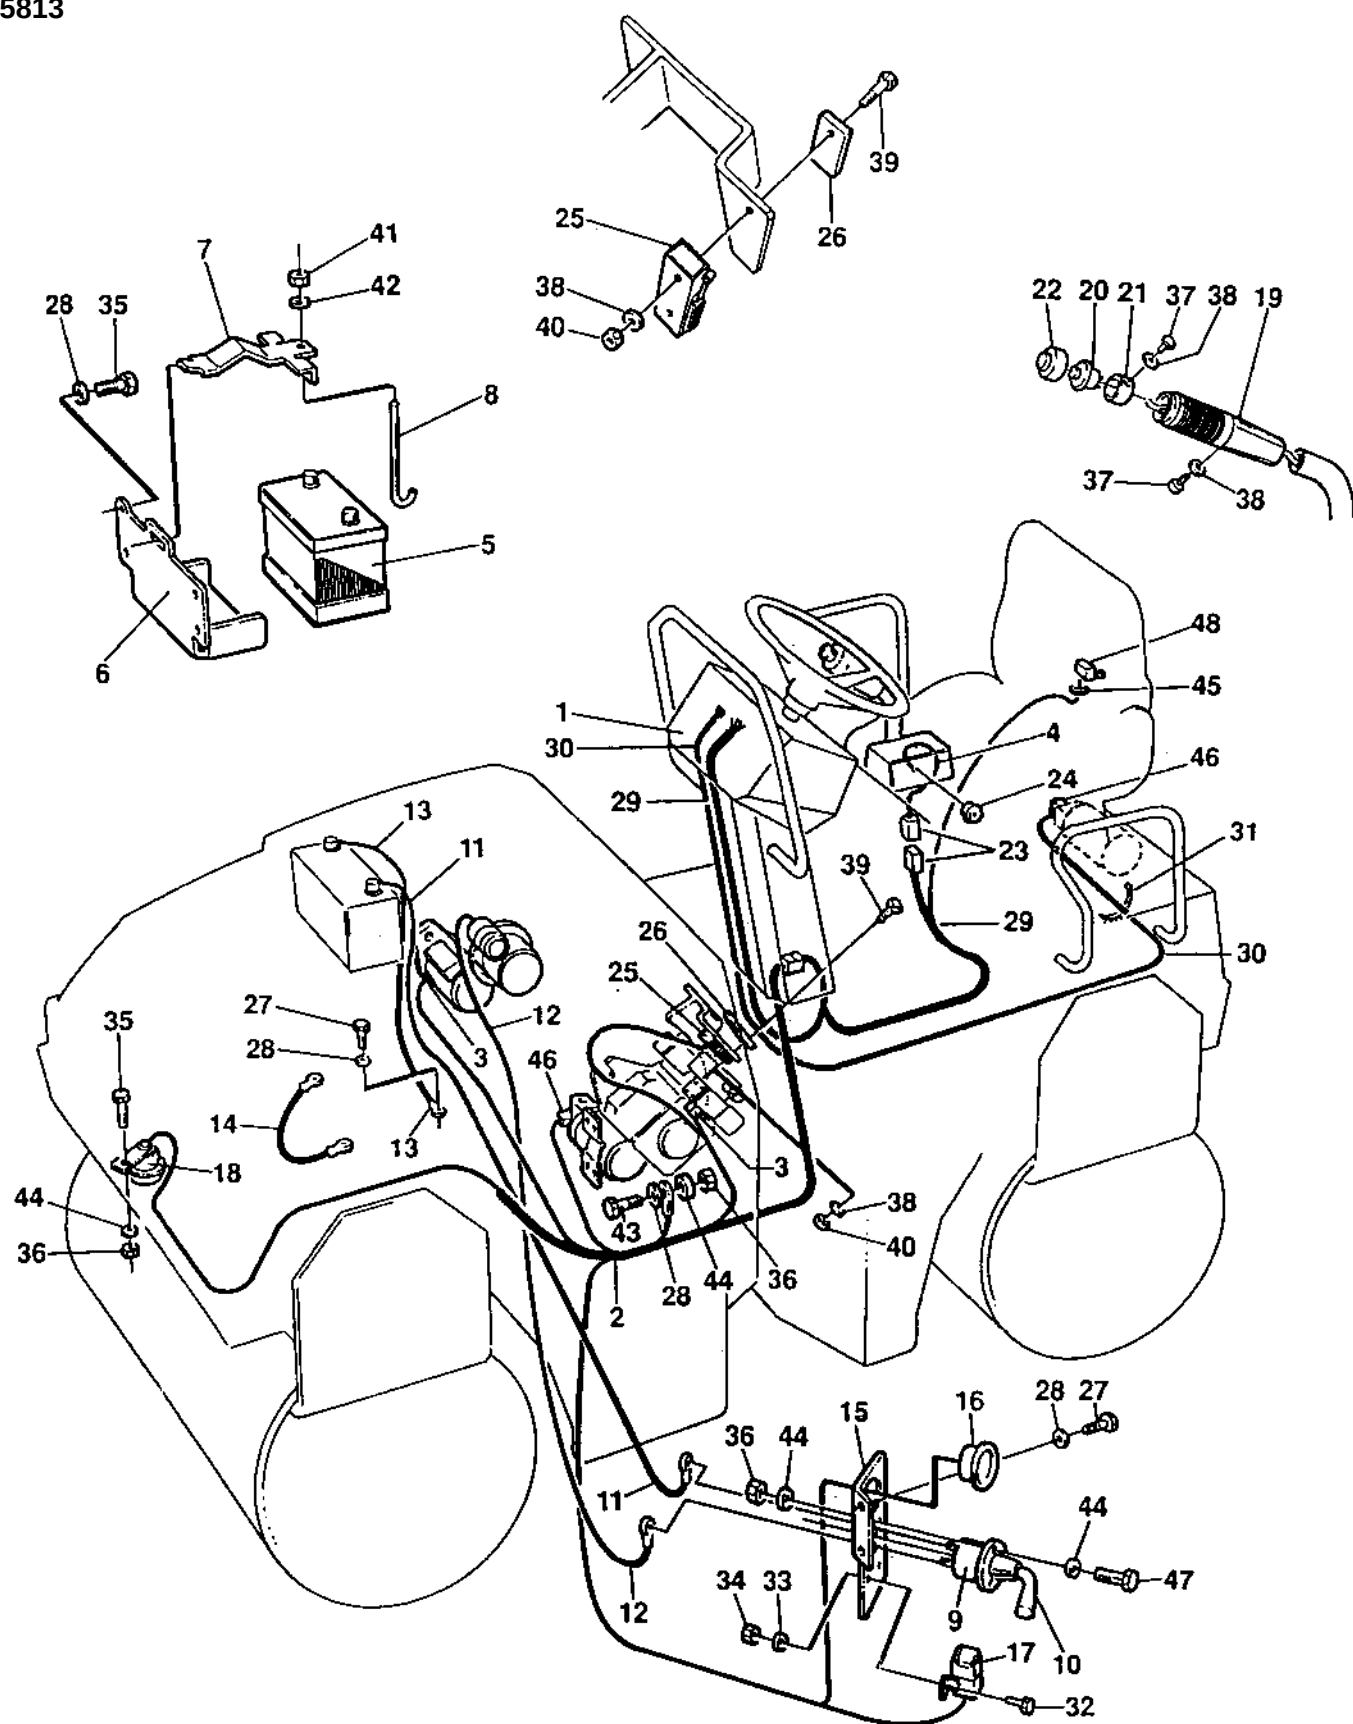

Electrical equipment DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		2	1	Control panel	
2	357581	A	1	Cable harness Up to 60111642	
	359505	A	1	Cable harness From 60111643	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	357471		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+)	
12	902197	E	1	Connection wire	
13	902384		1	Battery cable (-)	
14	345728		1	Ground cable	
15	357584		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	930046	I	1	Micro switch	D
26	357580		1	Holder	
27	500019		2	Screw M8-1,25x16 8,8	
28	904229		8	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30				Not used on this model	
31				Not used on this model	
32	508020		1	Screw	
33	904281		1	Washer 5,3x10x1	
34	586001		1	Lock nut M5	
35	500053		5	Screw M8-1,25x20 8,8	
36	586003		4	Lock nut M8	
37	533001		3	Screw	
38	904697		5	Washer 3,2x6x0,5	
39	903152		2	Screw	
40	570001		2	Nut	
41	586003		1	Lock nut M8	
42	904229		1	Washer 8,4x16x1,5	
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		6	Washer 8,4x16x1,5	
45	909107		1	Grommet	
46	901766		2	Connector 2-POL	D
47	500021		2	Screw M8-1,25x25 8,8	
48		L	1	Seat switch	

- 1) Dry charged. Have to be filled with battery acid and charged before use.
2) See section " Control panel "
A) Engine
C) F/R control
E) Switch-starter
G) Start
H) Vibration
I) Neutral
L) See section "drivers platform"

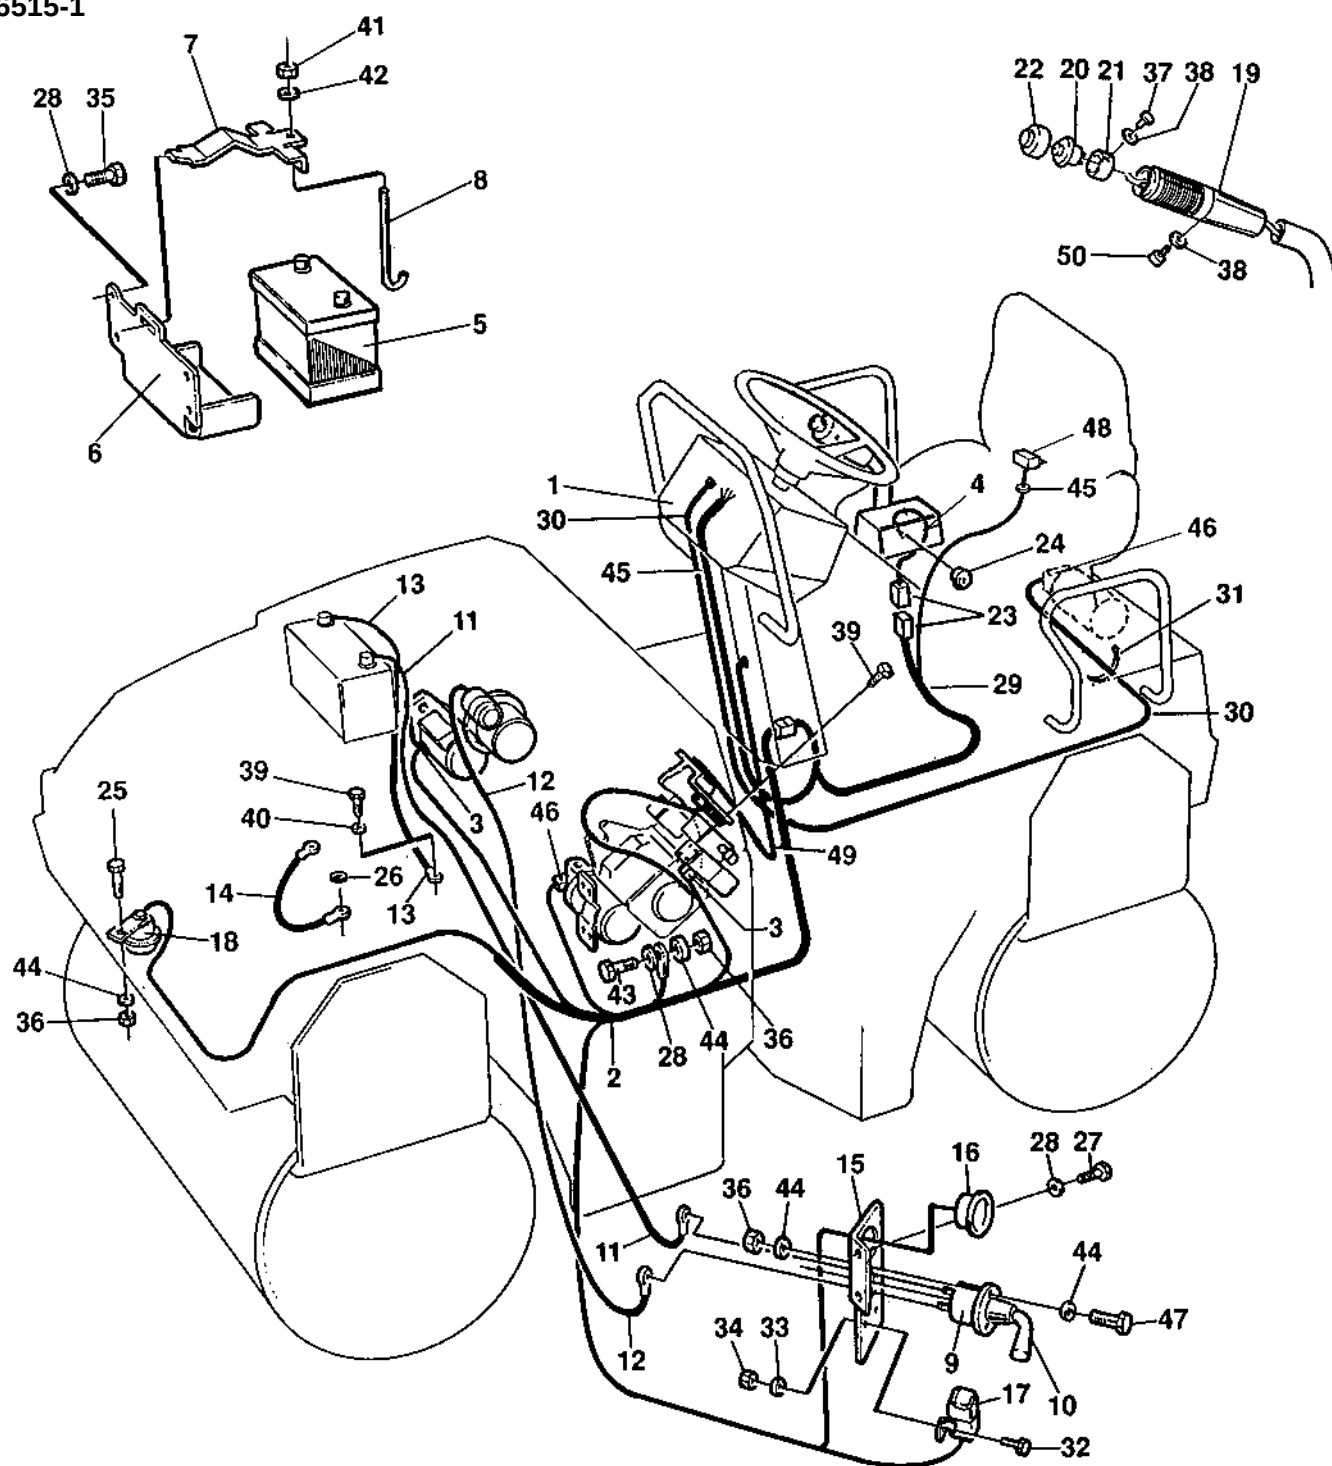

Electrical equipment DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel DEUTZ (Page 242)	
2	373491	A	1	Cable harness Up to 60115962	
	383961		1	Cable harness From 60115963	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	357471		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+) Up to 60115638	
	904961		1	Battery cable (+) From 60115639	
12	902197	E	1	Connection wire Up to 60115638	
	904963		1	Connection wire From 60115639	
13	902384		1	Battery cable (-)	
14	345728		1	Ground cable	
15	357584		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	500020		1	Screw M8-1,25x22 8,8	
26	904557		1	Washer 10,5x22x4	
27	500019		2	Screw M8-1,25x16 8,8	
28	904229		8	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30				Not used on this model	
31				Not used on this model	
32	508020		1	Screw	
33	904281		1	Washer 5,3x10x1	
34	586001		1	Lock nut M5	
35	500053		4	Screw M8-1,25x20 8,8	
36	586003		4	Lock nut M8	
37	533001		3	Screw	
38	904697		5	Washer 3,2x6x0,5	
39	500053		1	Screw M8-1,25x20 8,8	
40	904640		1	Washer 8,4x22x3	
41	586003		1	Lock nut M8	
42	904229		1	Washer 8,4x16x1,5	
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		7	Washer 8,4x16x1,5	
45	909107		1	Grommet	
46	901766		2	Connector 2-POL Up to 60115962	D
	901766		1	Connector 2-POL From 60115963	D
47	500021		2	Screw M8-1,25x25 8,8	
48		3	1	Seat switch	

1) Dry charged. Have to be filled with battery acid and charged before use.

2) See section " Control panel "

3) See section " Drivers platform "


A) Engine

C) F/R control

E) Switch-starter


G) Start

H) Vibration

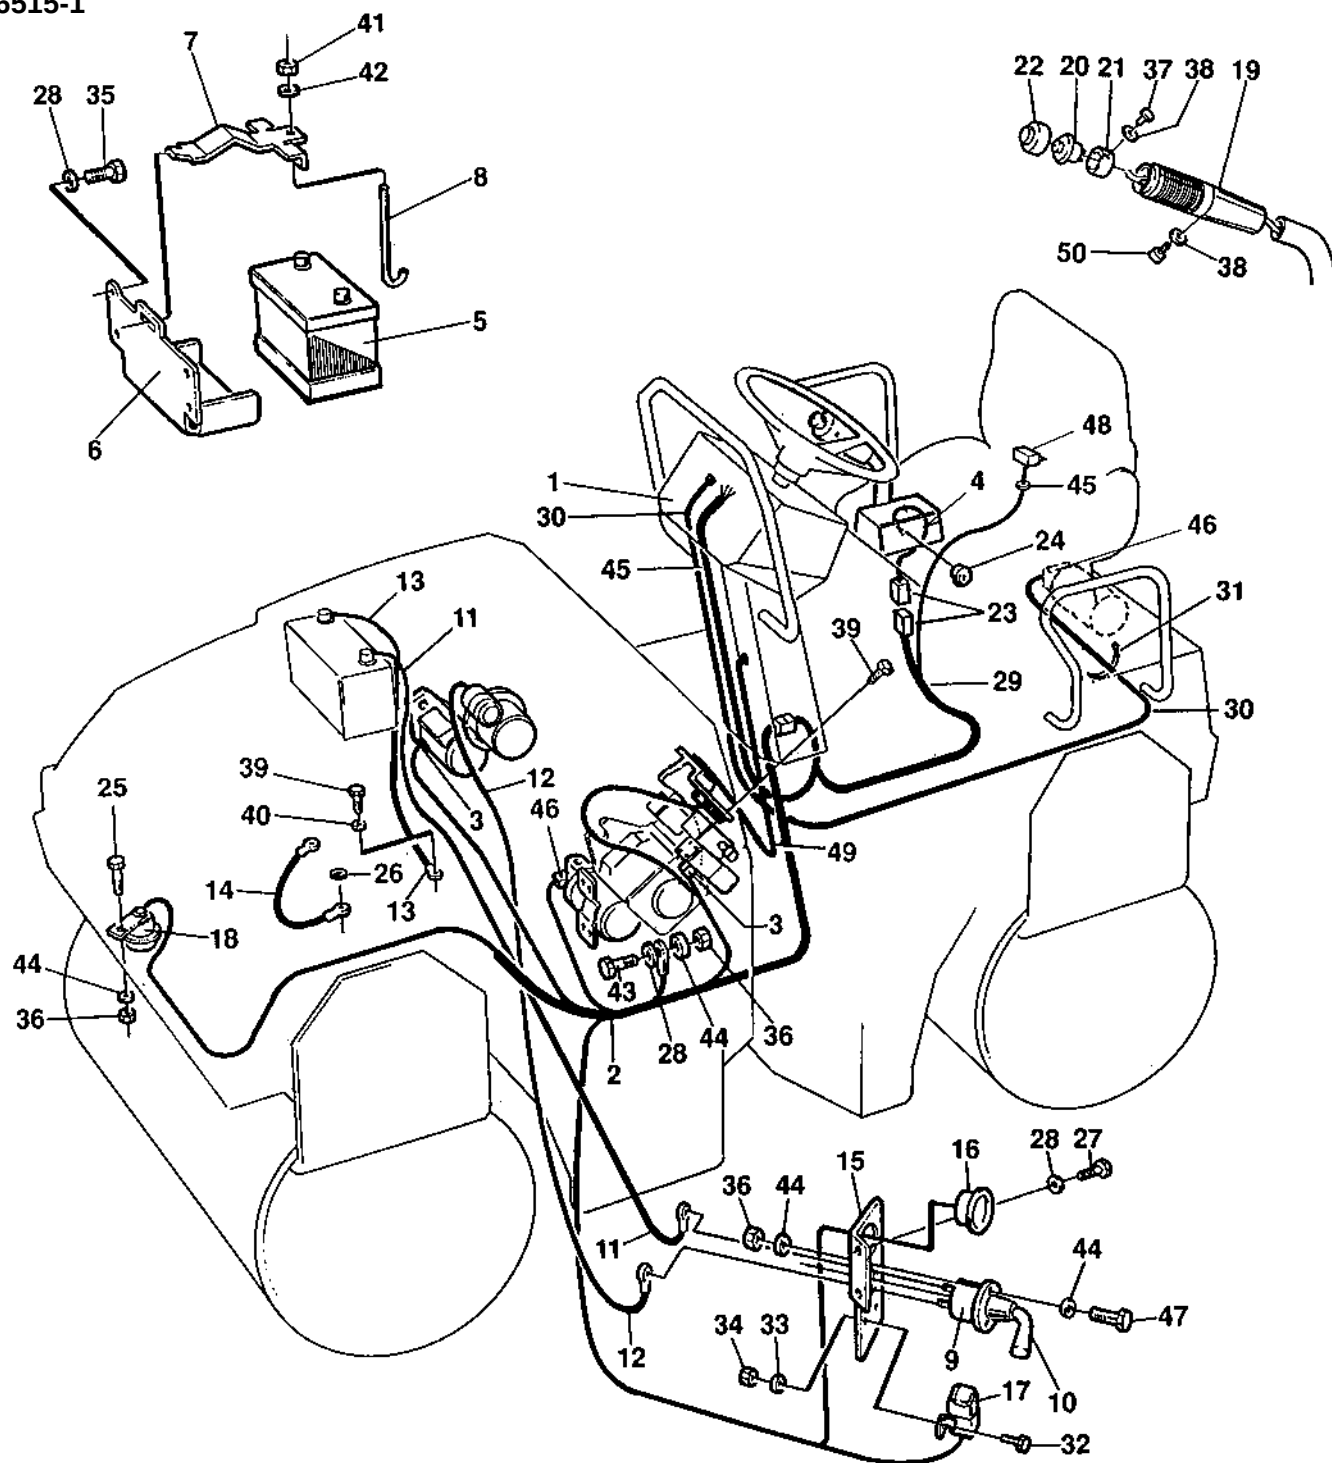

Electrical equipment DEUTZ


Ref. No.	Part No.	Rem.	Qty	Description	Code
49	385580		1	Cable harness	
50	901767		1	Screw	

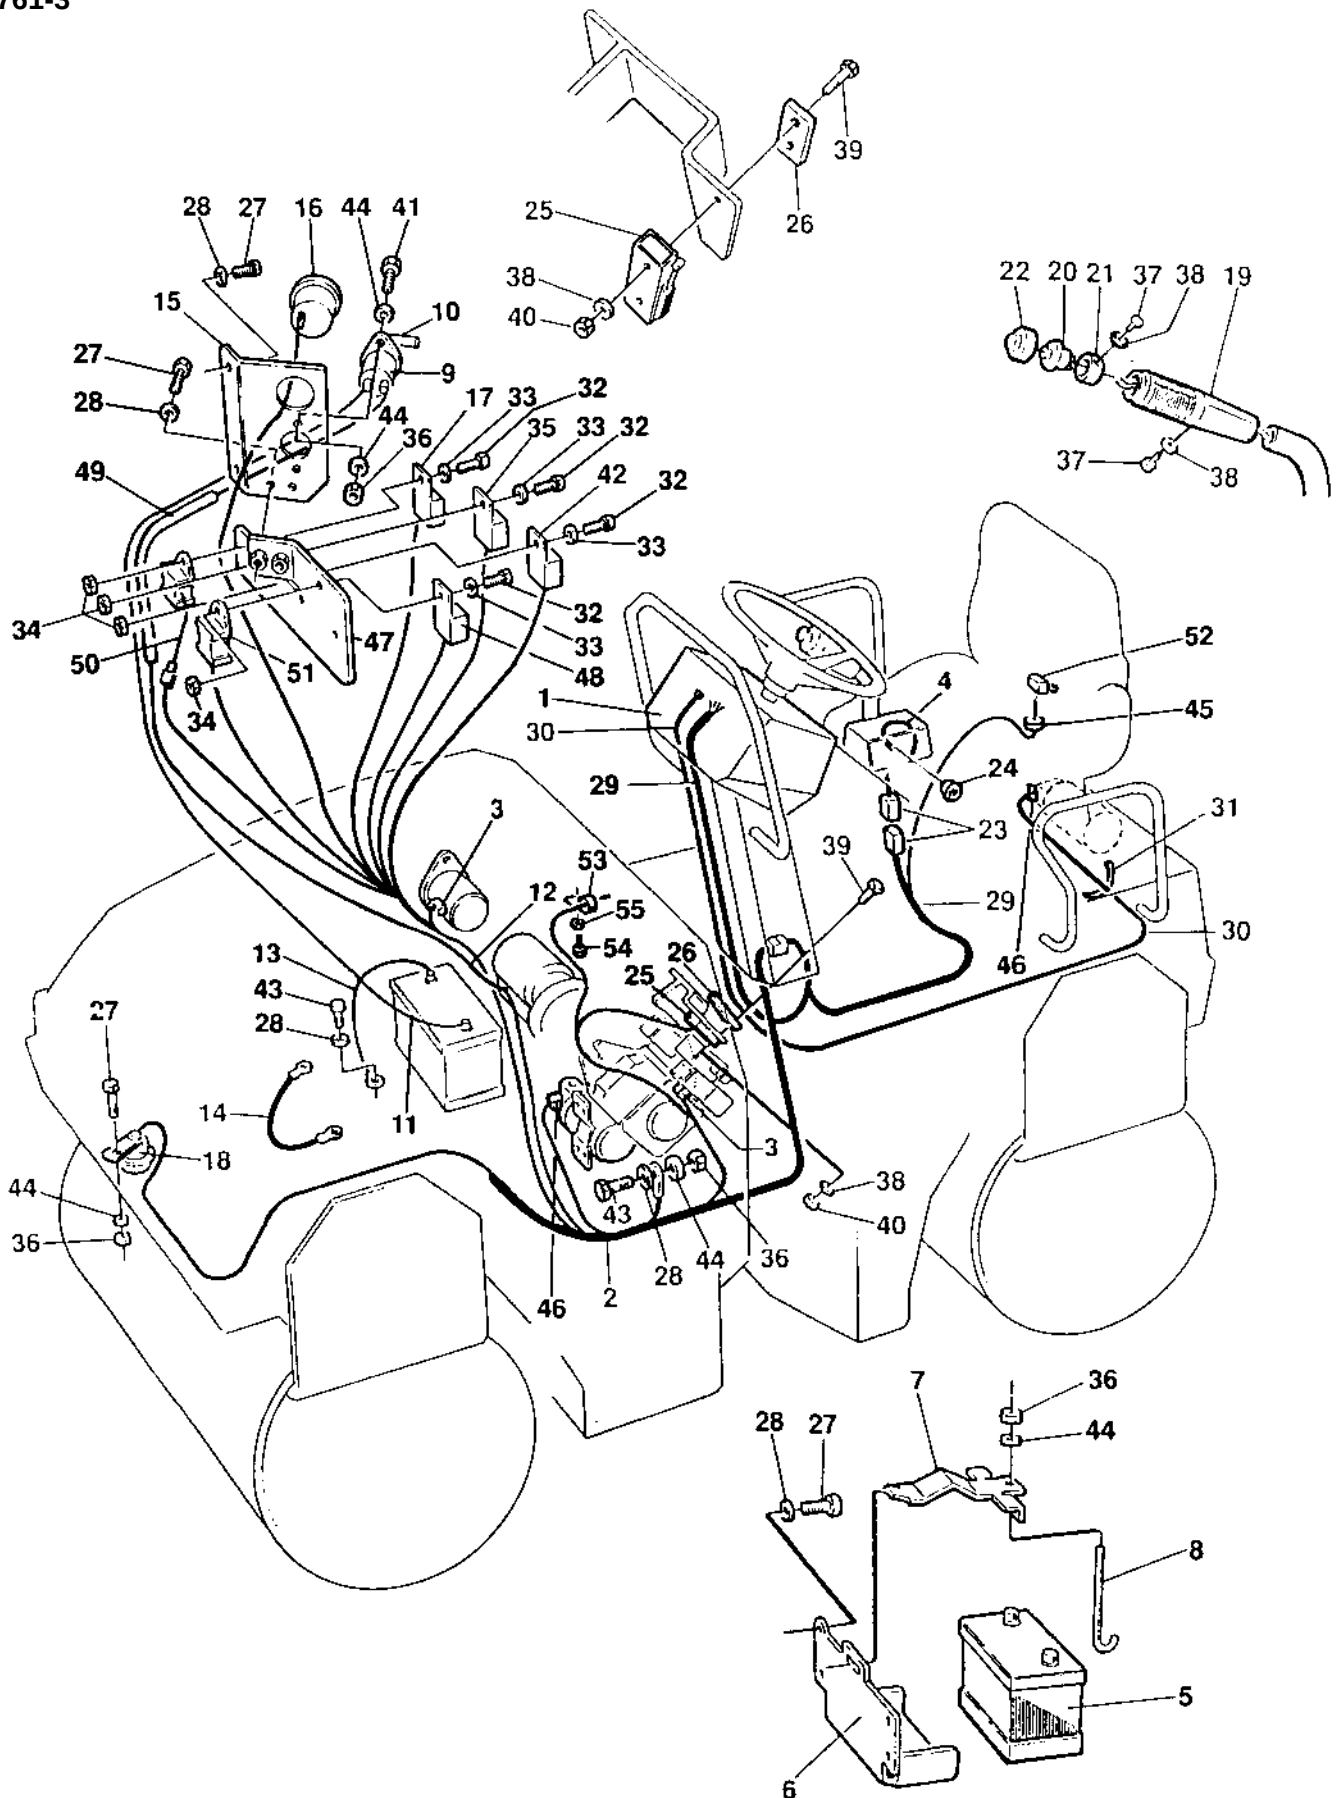

Electrical equipment ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		2	1	Control panel	
2	371834	A	1	Cable harness	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	357471		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+)	
12	902197	E	1	Connection wire	
13	903757		1	Battery cable (-)	
14	345728		1	Ground cable	
15	371892		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	930046	I	1	Micro switch	D
26	357580		1	Holder	
27	500019		9	Screw M8-1,25x16 8,8	
28	904229		10	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30				Not used on this model	
31				Not used on this model	
32	508020		4	Screw	
33	904281		4	Washer 5,3x10x1	
34	586001		4	Lock nut M5	
35	287597	L	1	Relay	D
36	586003		5	Lock nut M8	
37	533001		3	Screw	
38	904697		5	Washer 3,2x6x0,5	
39	903152		2	Screw	
40	570001		2	Nut	
41	500021		2	Screw M8-1,25x25 8,8	
42	287597	M	1	Relay	D
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		7	Washer 8,4x16x1,5	
45	909107		1	Grommet	
46	901766		2	Connector 2-POL	D
47	371893		1	Holder plate	
48	903817	N	1	Relay	D


- 1) Dry charged. Have to be filled with battery acid and charged before use.
- 2) See section " Control panel "
- A) Engine
- C) F/R control
- E) Switch-starter
- G) Start
- H) Vibration
- I) Neutral
- L) Stop
- M) For safety unit
- N) Glow

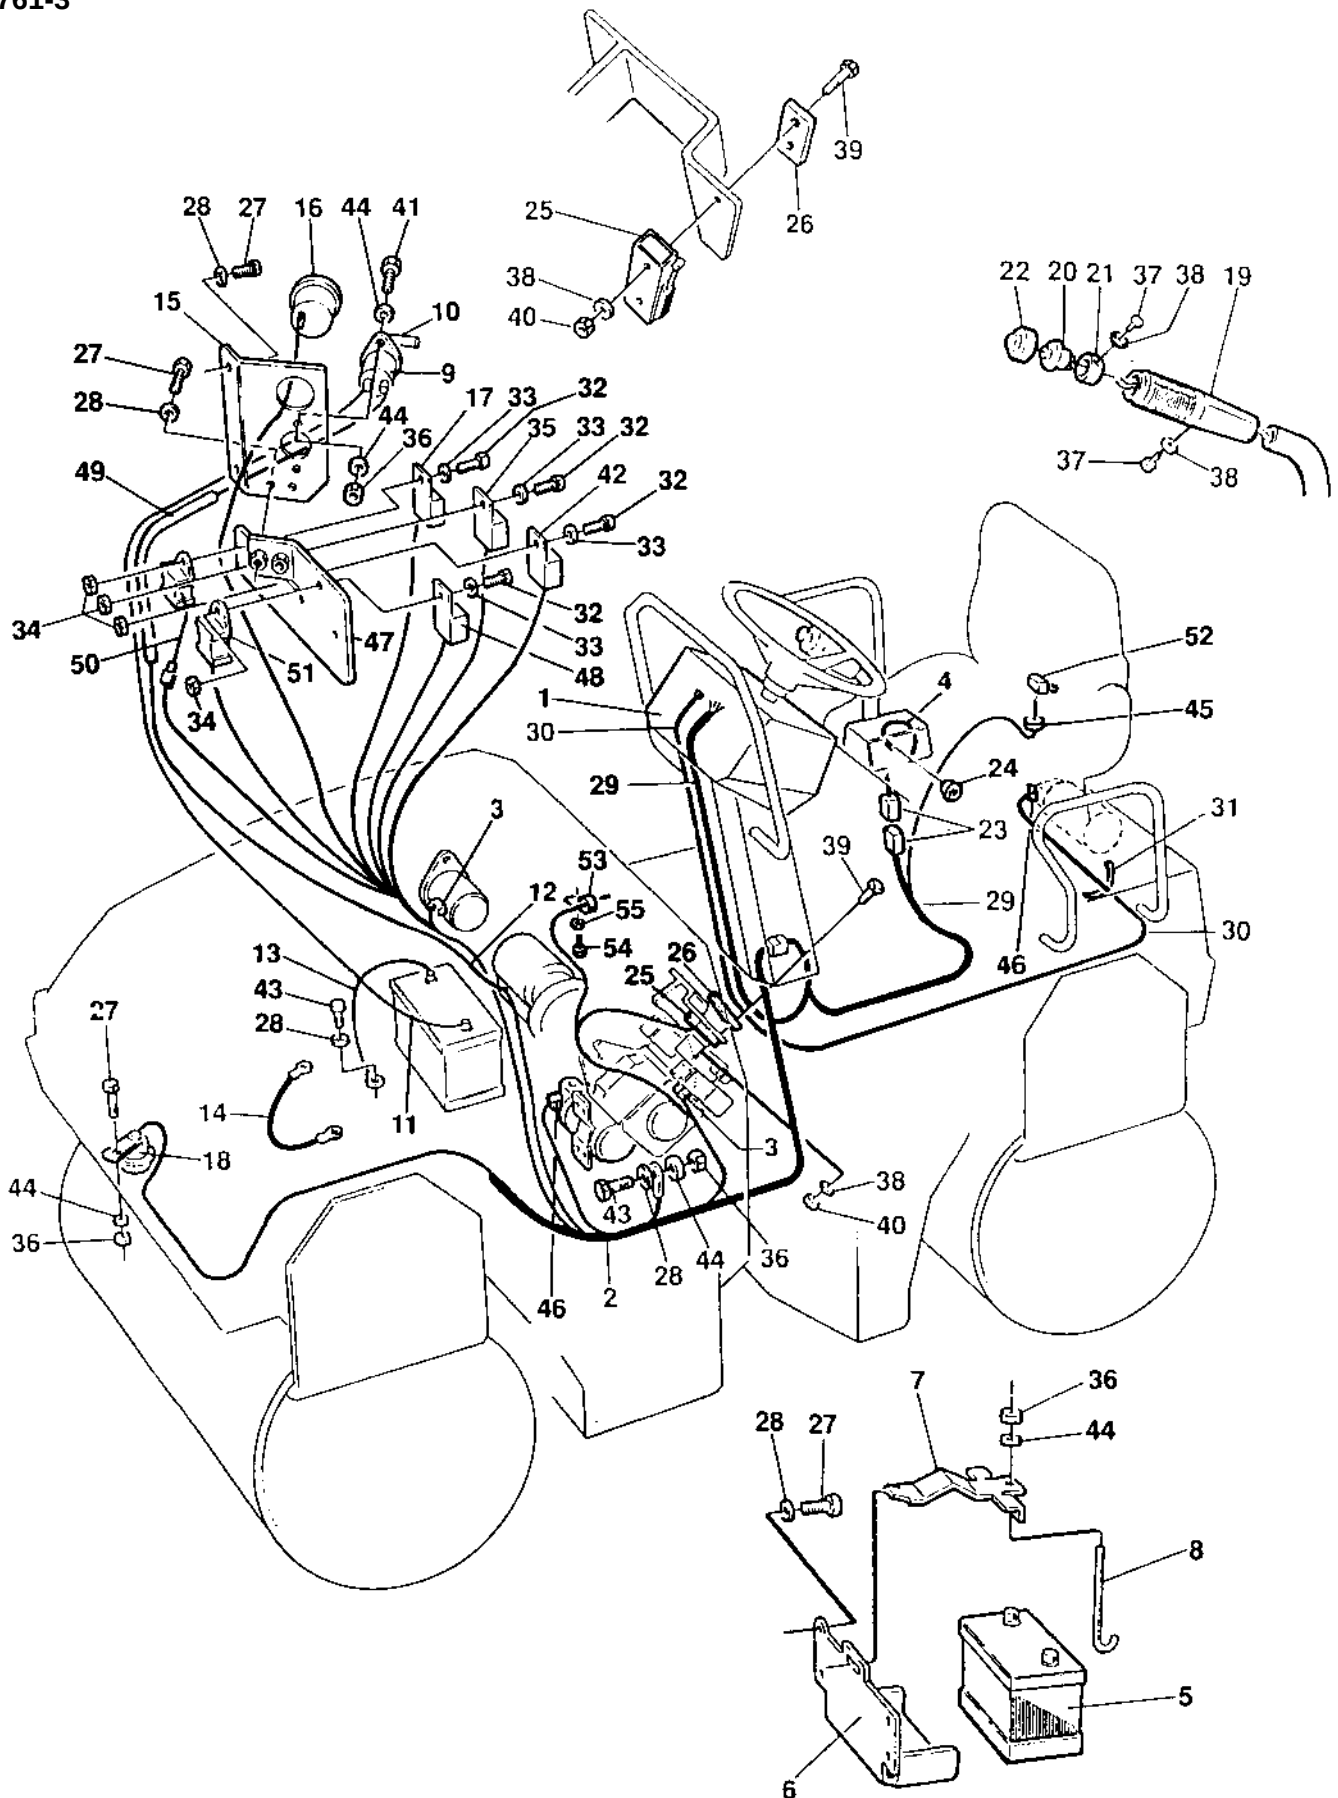

Electrical equipment ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
49	903082		1	Hose shield	
50	903705		1	Safety unit	D
51	903708		1	Timer Glow	
52		P	1	Seat switch	
53	921072		1	Clamp	
54	500013		1	Screw M6-1x16 8,8	
55	600004		1	Washer	


P) See section "Drivers platform"

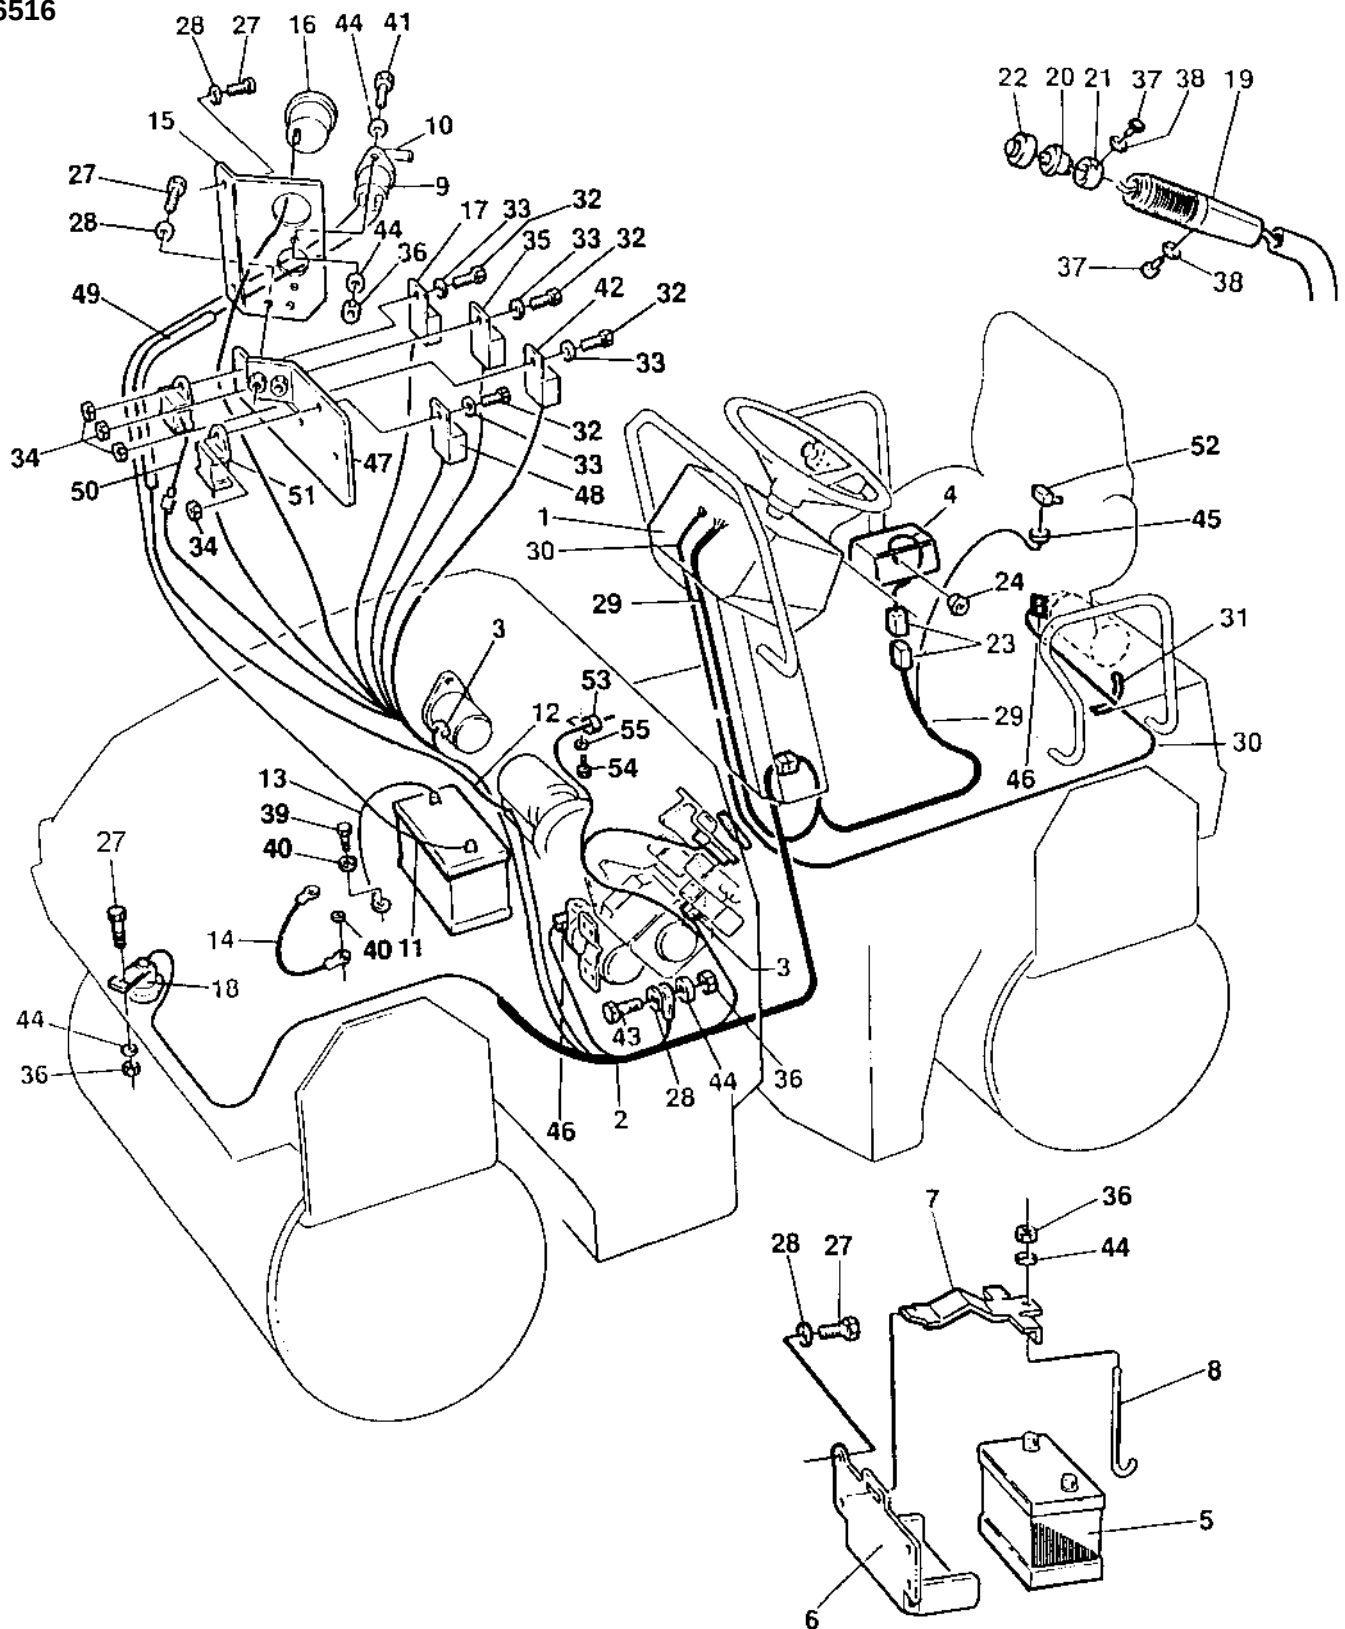

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel ISUZU (Page 246)	
2	373517	A	1	Cable harness	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	357471		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+)	
12	902197	E	1	Connection wire	
	904647	N	1	Connection wire	
13	903757		1	Battery cable (-)	
14	345728		1	Ground cable	
15	371892		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	500020		1	Screw M8-1,25x22 8,8	
27	500019		8	Screw M8-1,25x16 8,8	
28	904229		10	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30				Not used on this model	
31				Not used on this model	
32	508020		4	Screw	
33	904281		4	Washer 5,3x10x1	
34	586001		4	Lock nut M5	
35	287597	K	1	Relay	D
36	586003		5	Lock nut M8	
37	533001		3	Screw	
38	904697		3	Washer 3,2x6x0,5	
39	500048		1	Screw M10-1,5x20 8,8	
40	904637		2	Washer 10x18x2	
41	500021		2	Screw M8-1,25x25 8,8	
42	287597	L	1	Relay	D
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		7	Washer 8,4x16x1,5	
45	909107		1	Grommet	
46	901766		2	Connector 2-POL	D
47	371893		1	Holder plate	
48	903817	M	1	Relay	D


- 1) Dry charged. Have to be filled with battery acid and charged before use.
2) See section " Control panel "
A) Engine
C) F/R control
E) Switch-starter, L=600
G) Start
H) Vibration
K) Stop
L) For safety unit
M) Glow
N) Switch-starter, L=1050

16516

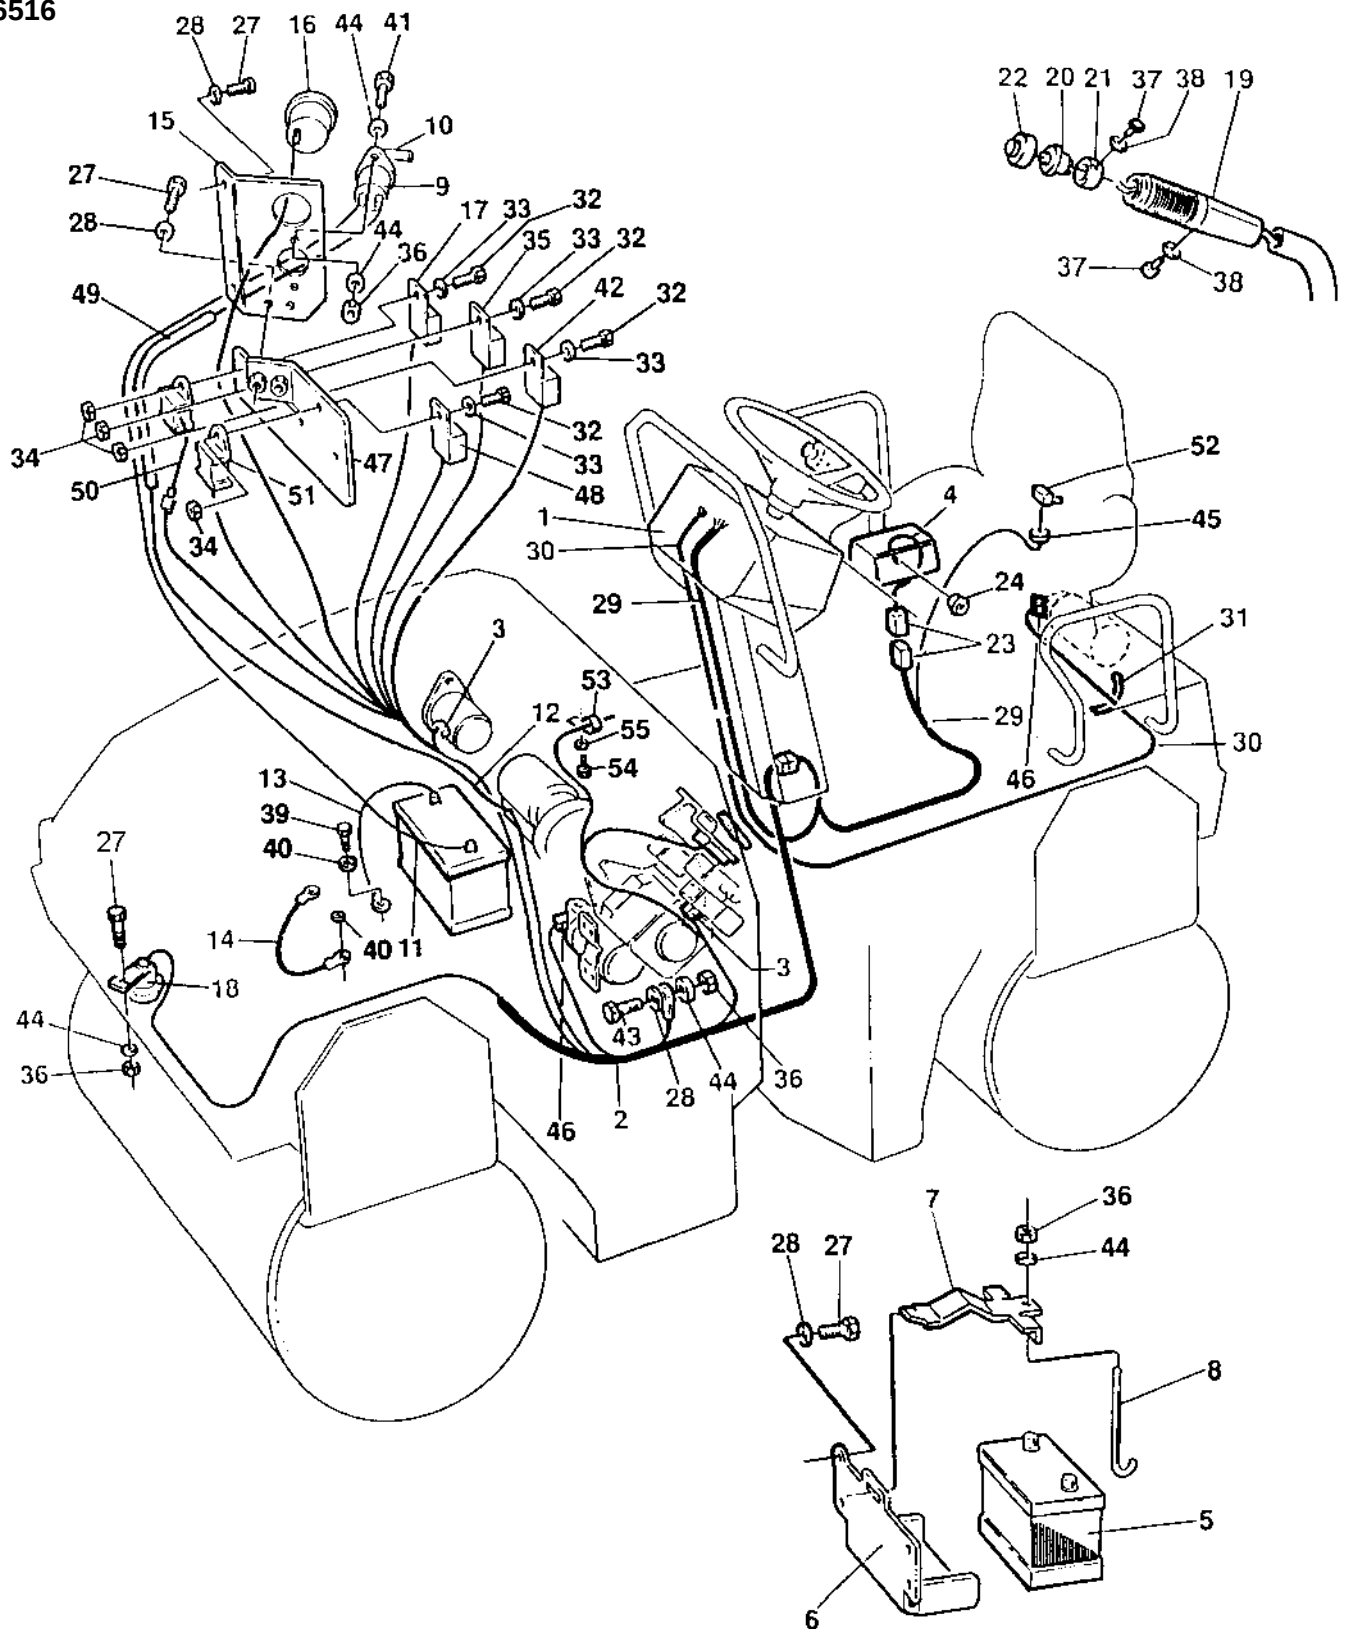


Electrical equipment ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
49	903082		1	Hose shield	D
50	903705		1	Safety unit	
51	903708		1	Timer Glow	
52		3	1	Seat switch	
53	921072		1	Clamp	
54	500013		1	Screw M6-1x16 8,8	
55	600004		1	Washer	
56	923008		1	Clamp	
3)	See section " Drivers platform "				

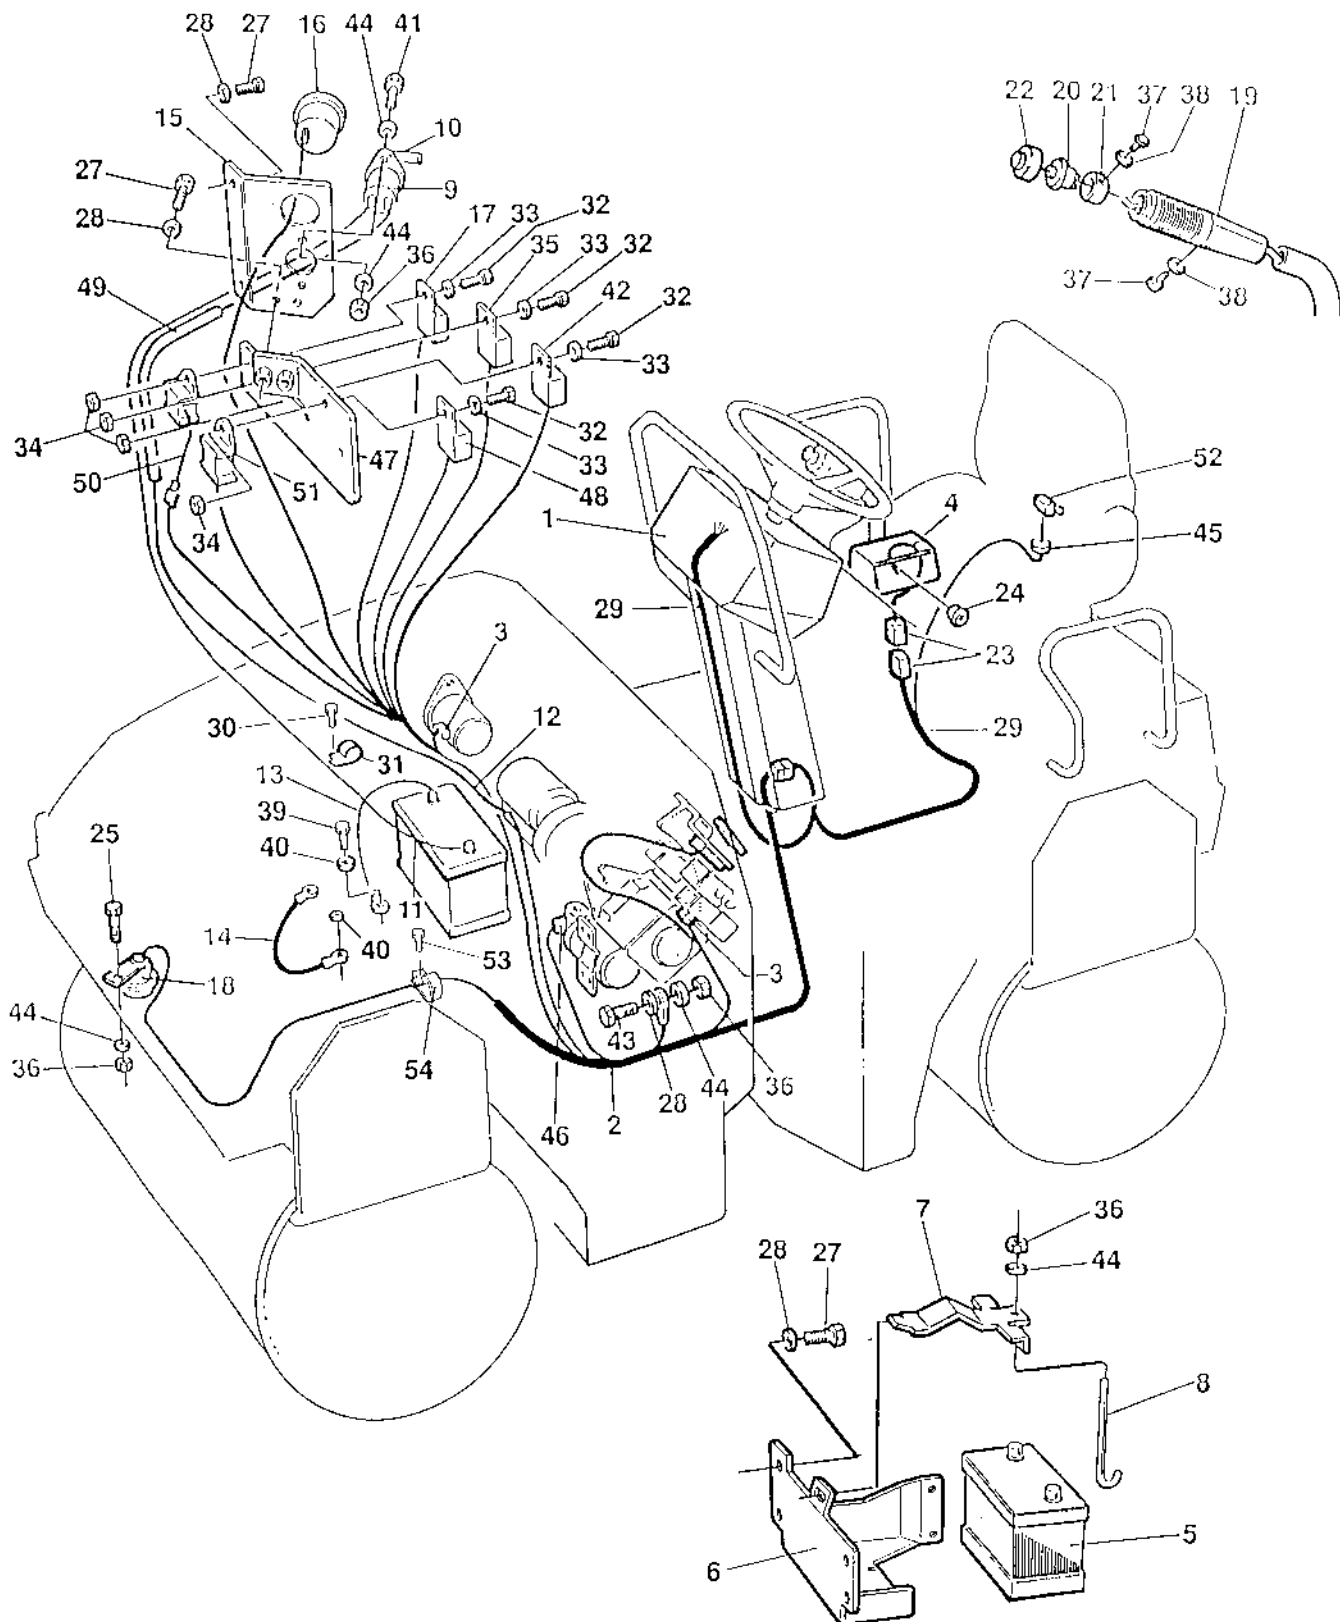

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel ISUZU (Page 246)	
2	373517	A	1	Cable harness	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	380960		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	357567		1	Battery switch, cpl	D
10	902560		1	.Handle	D
11	902174		1	Battery cable (+) Up to 60125698	
	904961		1	Battery cable (+) From 60125699	
12	904647	E	1	Connection wire Up to 60125698	
	904962	E	1	Connection wire From 60125699	
13	903757		1	Battery cable (-)	
14	345728		1	Ground cable	
15	371892		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	500020		1	Screw M8-1,25x22 8,8	
27	500019		8	Screw M8-1,25x16 8,8	
28	904229		10	Washer 8,4x16x1,5	
29		2	1	Cable harness	
30	500153		1	Screw	
31	921028		1	Clamp	
32	508020		4	Screw	
33	904281		4	Washer 5,3x10x1	
34	586001		4	Lock nut M5	
35	287597	K	1	Relay	D
36	586003		5	Lock nut M8	
37	533001		3	Screw	
38	904697		3	Washer 3,2x6x0,5	
39	500048		1	Screw M10-1,5x20 8,8	
40	904637		2	Washer 10x18x2	
41	500021		2	Screw M8-1,25x25 8,8	
42	287597	L	1	Relay	D
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		7	Washer 8,4x16x1,5	
45	909107		1	Grommet	
46	901766		1	Connector 2-POL	D
47	371893		1	Holder plate	
48	903817	M	1	Relay	D


- 1) Dry charged. Have to be filled with battery acid and charged before use.
2) See section " Control panel "
A) Engine
C) F/R control
E) Switch-starter
G) Start
H) Vibration
K) Stop
L) For safety unit
M) Glow

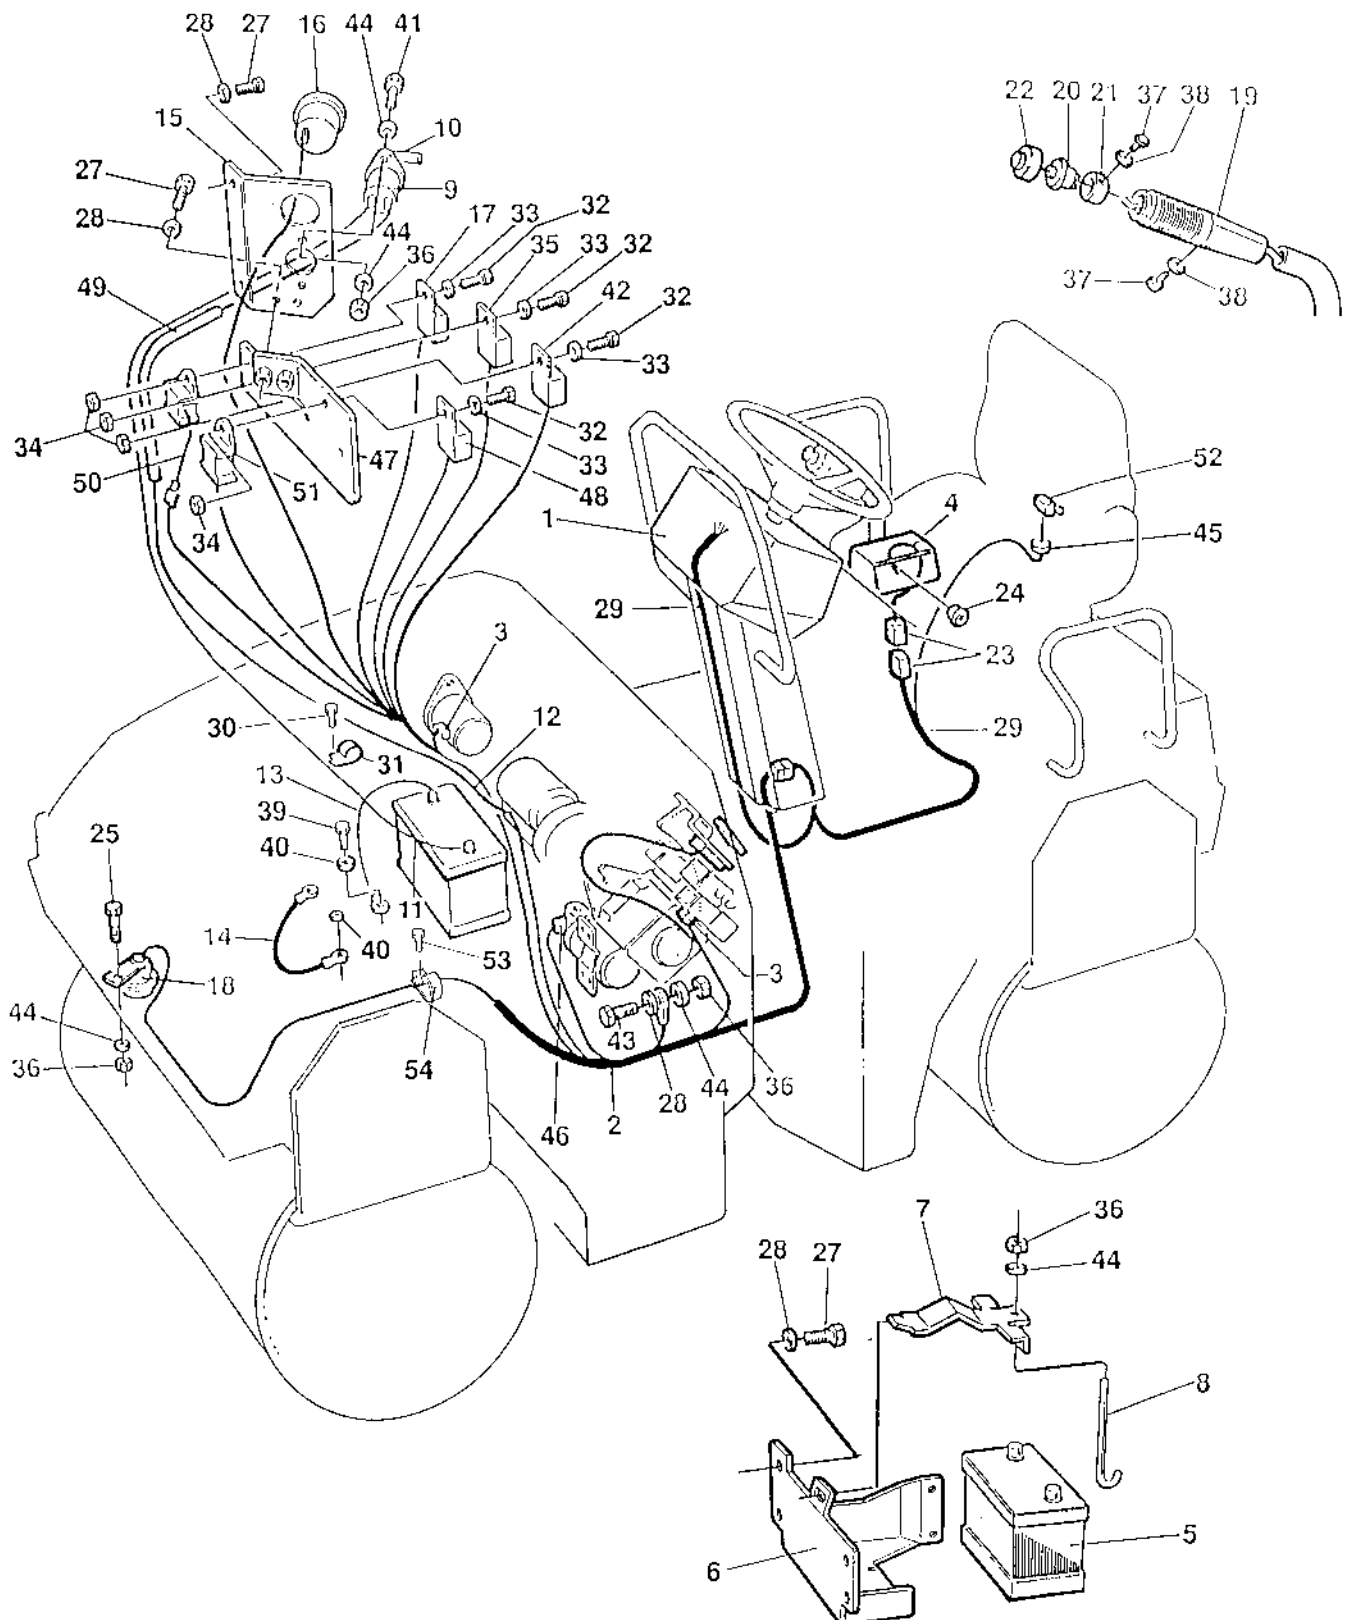

Electrical equipment ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
49	903082		1	Hose shield	
50	903705		1	Safety unit	D
51	903708		1	Timer Glow	
52		N	1	Seat switch	
53	500053		1	Screw M8-1,25x20 8,8	
54	921119		1	Pipe clamp	


N) See Section " Drivers Platform "

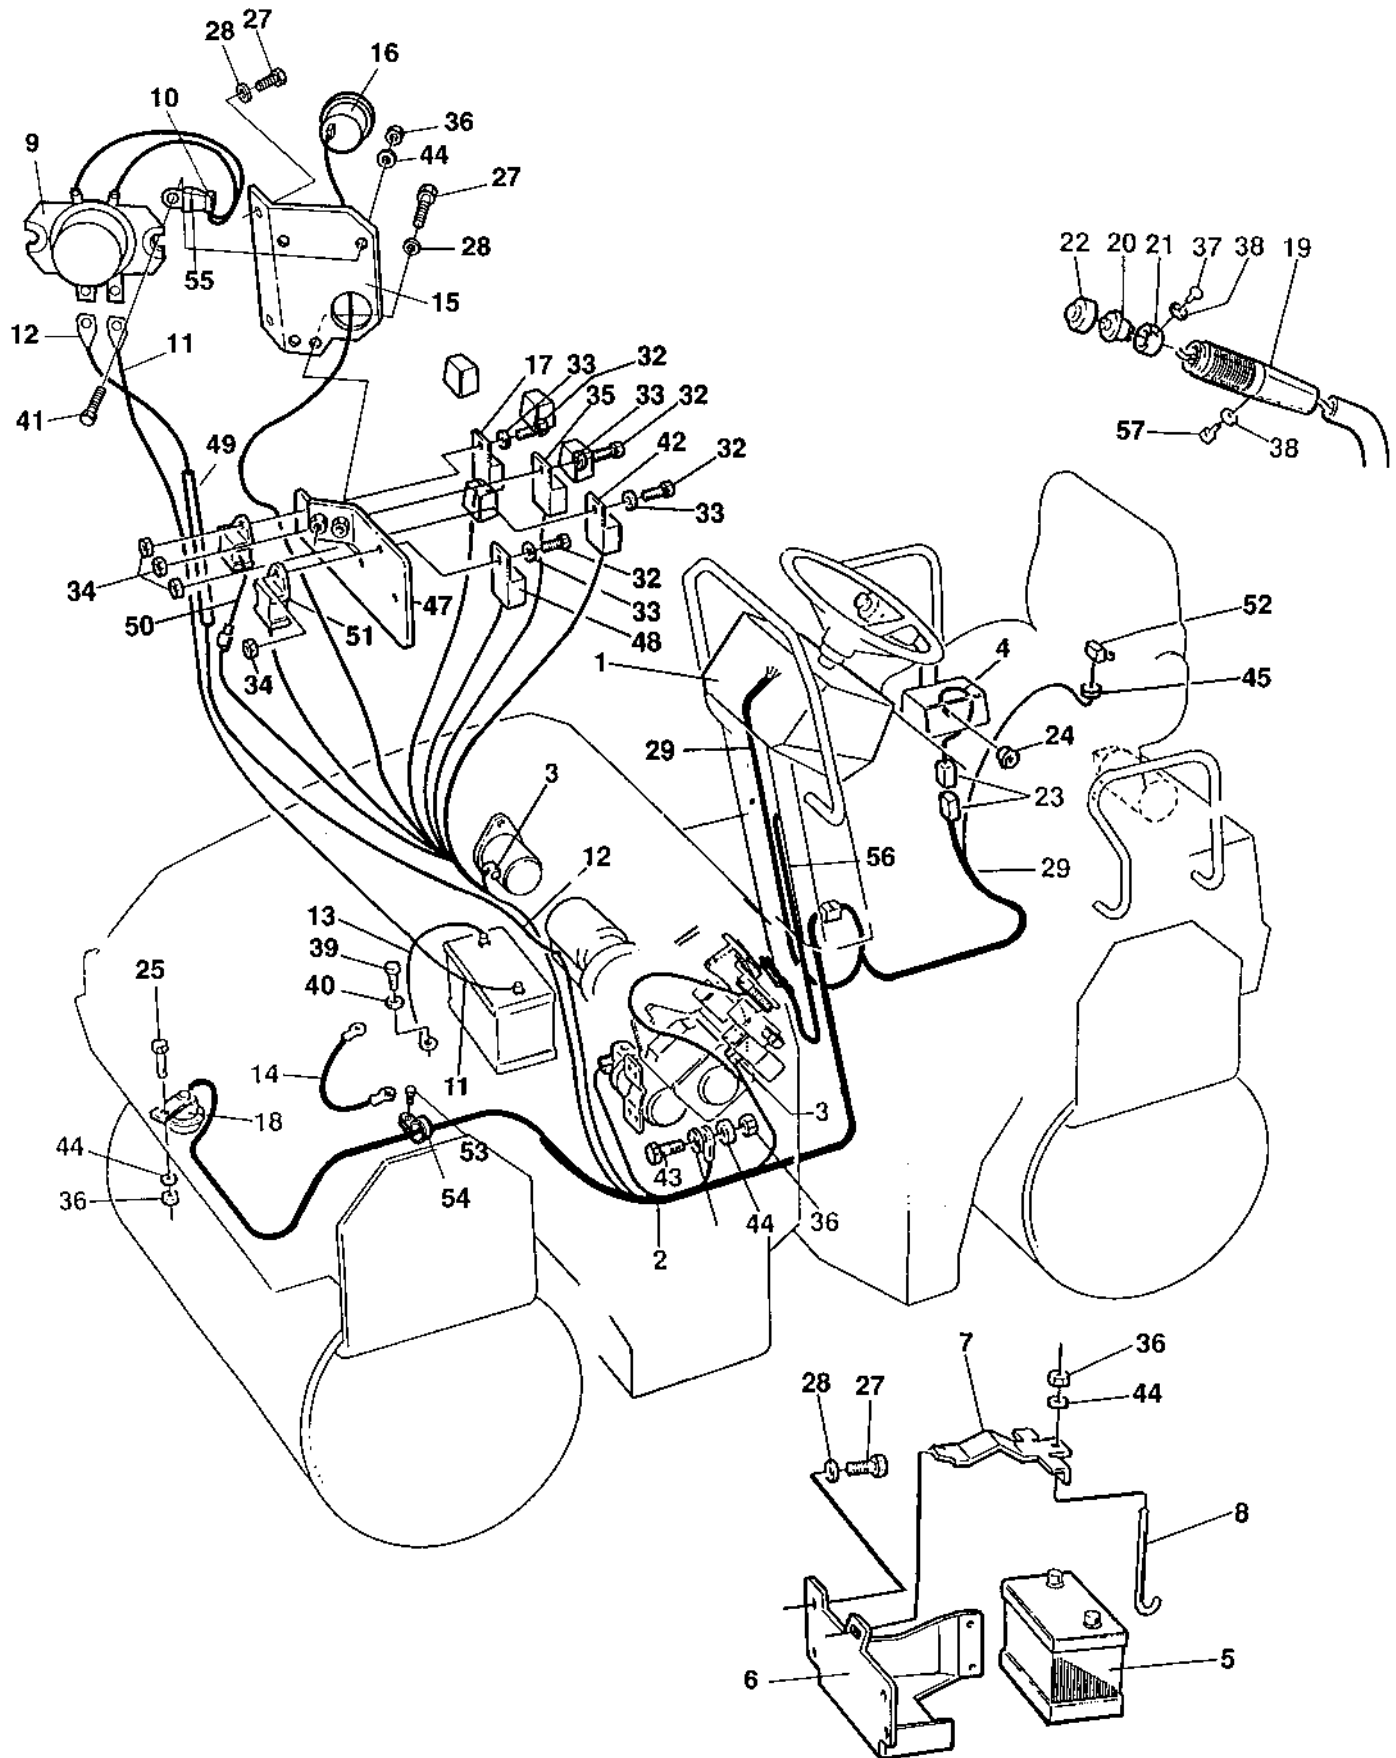

Electrical equipment ISUZU


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel ISUZU (Page 246)	
2	384264	A	1	Cable harness	
3	960796		2	.Connector black, MPM 182 09 ND	D
4	357583	C	1	Cable harness	
5	902550	1	1	Battery	
6	380960		1	Battery shelf	
7	357684		1	Battery holder	
8	903372		1	Battery screw	
9	791078	3	1	Electrical battery switch	D
10	791079	3	1	Diode	D
11	791090		1	Battery cable	
12	791091	E	1	Connection cable	
13	903757		1	Battery cable (-)	
14	345728		1	Ground cable	
15	384099		1	Holder plate	
16	801567		1	Hour meter	
17	287597	G	1	Relay	D
18	999027		1	Horn	D
19	285909		1	Grab handle	D
20	928497	H	1	Push button	D
21	285911		1	Bushing	D
22	348481		1	Cover	D
23	925958		2	Connection	
24	902203		1	Plug	
25	500020		1	Screw M8-1,25x22 8,8	
27	500019		8	Screw M8-1,25x16 8,8	
28	904229		10	Washer 8,4x16x1,5	
29		2	1	Cable harness	
32	508020		4	Screw	
33	904281		4	Washer 5,3x10x1	
34	586001		4	Lock nut M5	
35	287597	K	1	Relay	D
36	586003		5	Lock nut M8	
37	533001		3	Screw	
38	904697		3	Washer 3,2x6x0,5	
39	500048		1	Screw M10-1,5x20 8,8	
40	904637		2	Washer 10x18x2	
41	500022		2	Screw M8-1,25x30 8,8	
42	287597	L	1	Relay	D
43	500047		2	Screw M8-1,25x35 8,8	
44	904229		7	Washer 8,4x16x1,5	
45	909107		1	Grommet	
47	371893		1	Holder plate	
48	903817	M	1	Relay	D
49	903082		1	Hose shield	
50	903705		1	Safety unit	D
51	903708		1	Timer Glow	
52		N	1	Seat switch	

- 1) Dry charged. Have to be filled with battery acid and charged before use.
- 2) See section " Control panel "
- 3) Delivered with engine.
- A) Engine
- C) F/R control
- E) Switch-starter
- G) Start
- H) Vibration
- K) Stop
- L) For safety unit
- M) Glow
- N) See Section " Drivers Platform "

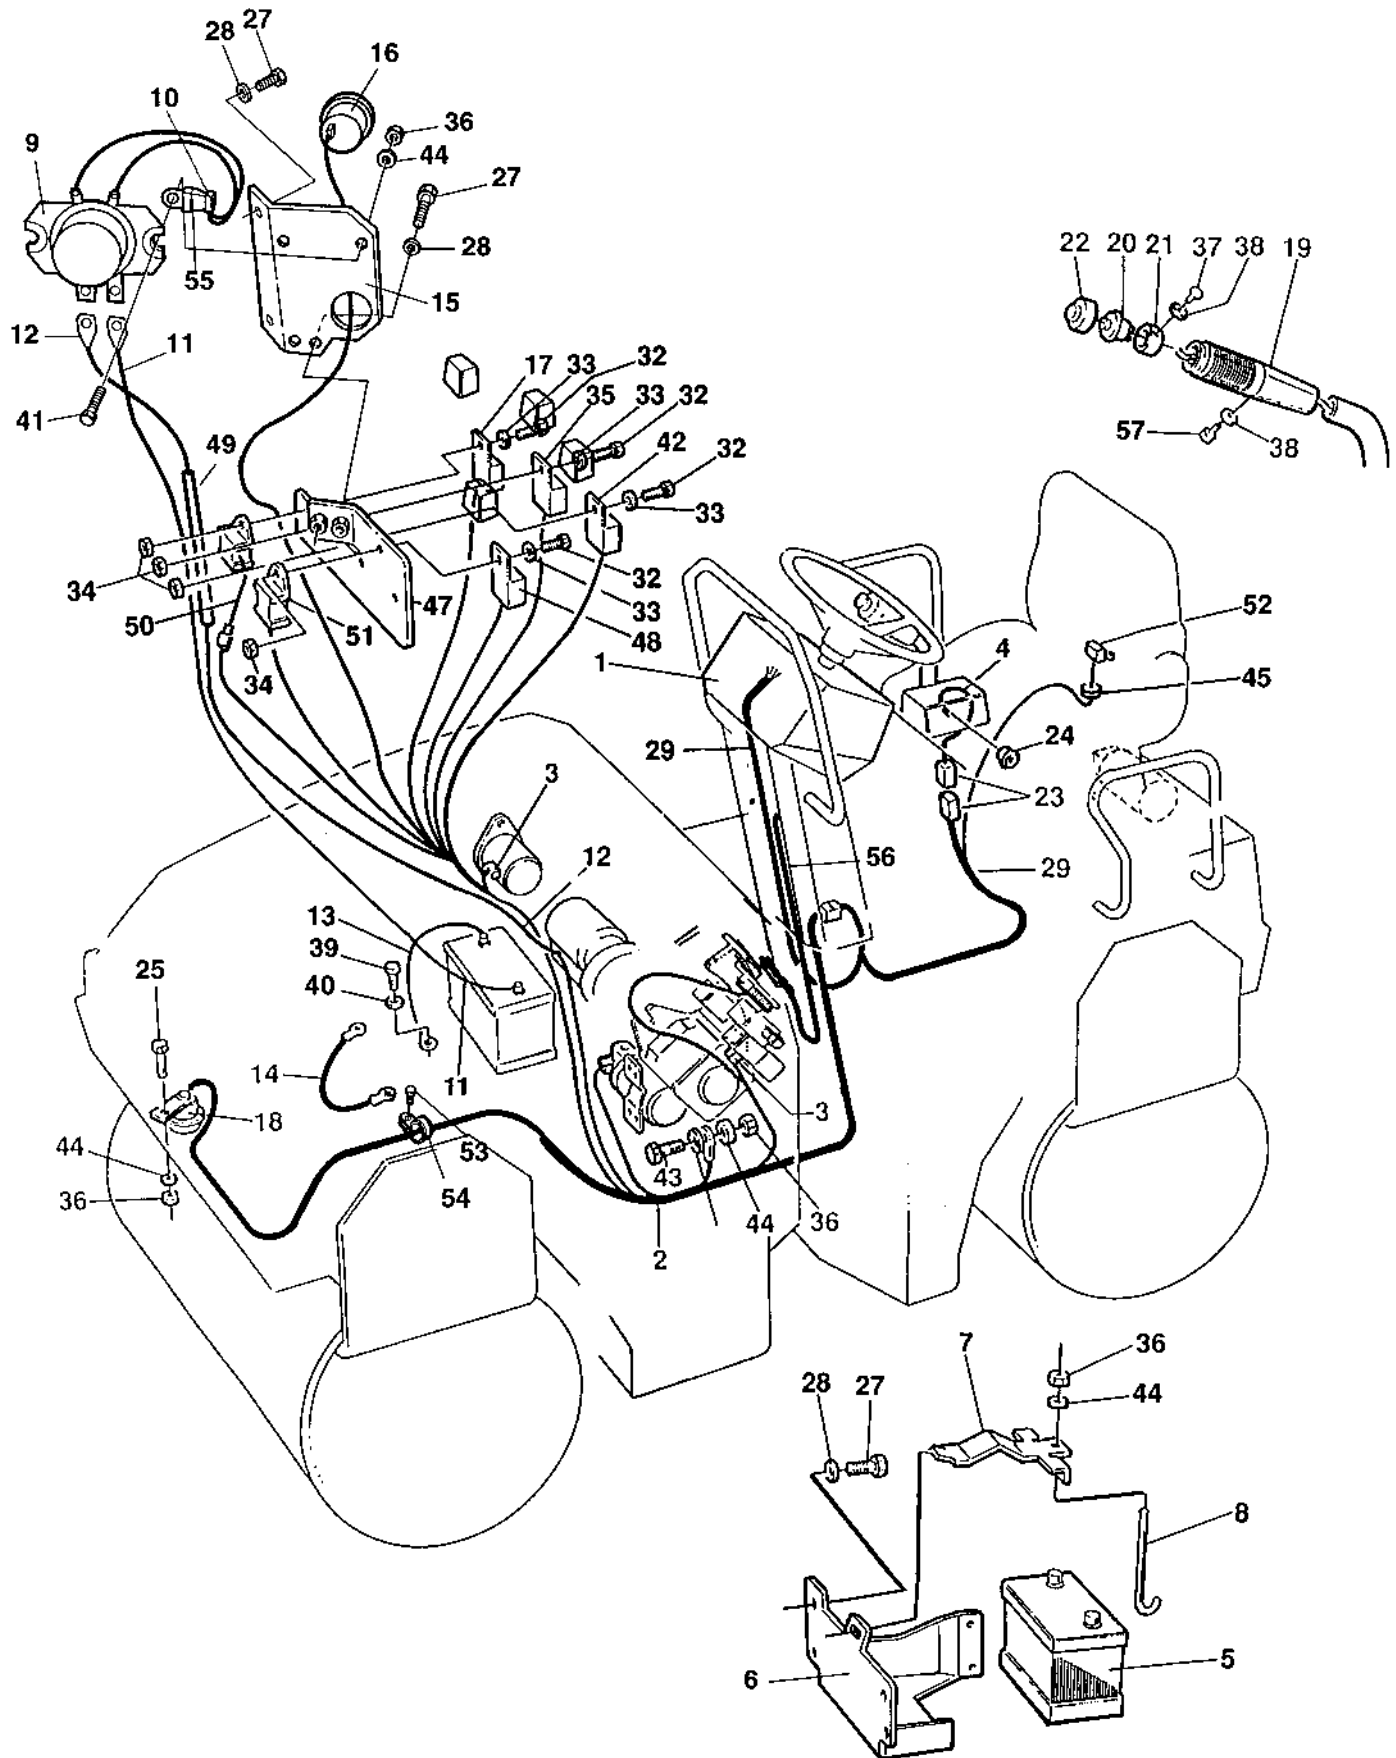


Electrical equipment ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
53	500053		1	Screw M8-1,25x20 8,8	
54	921119		1	Pipe clamp	
55	901225		1	Fuse 5A	D
56	385580		1	Cable harness	
57	901767		1	Screw	

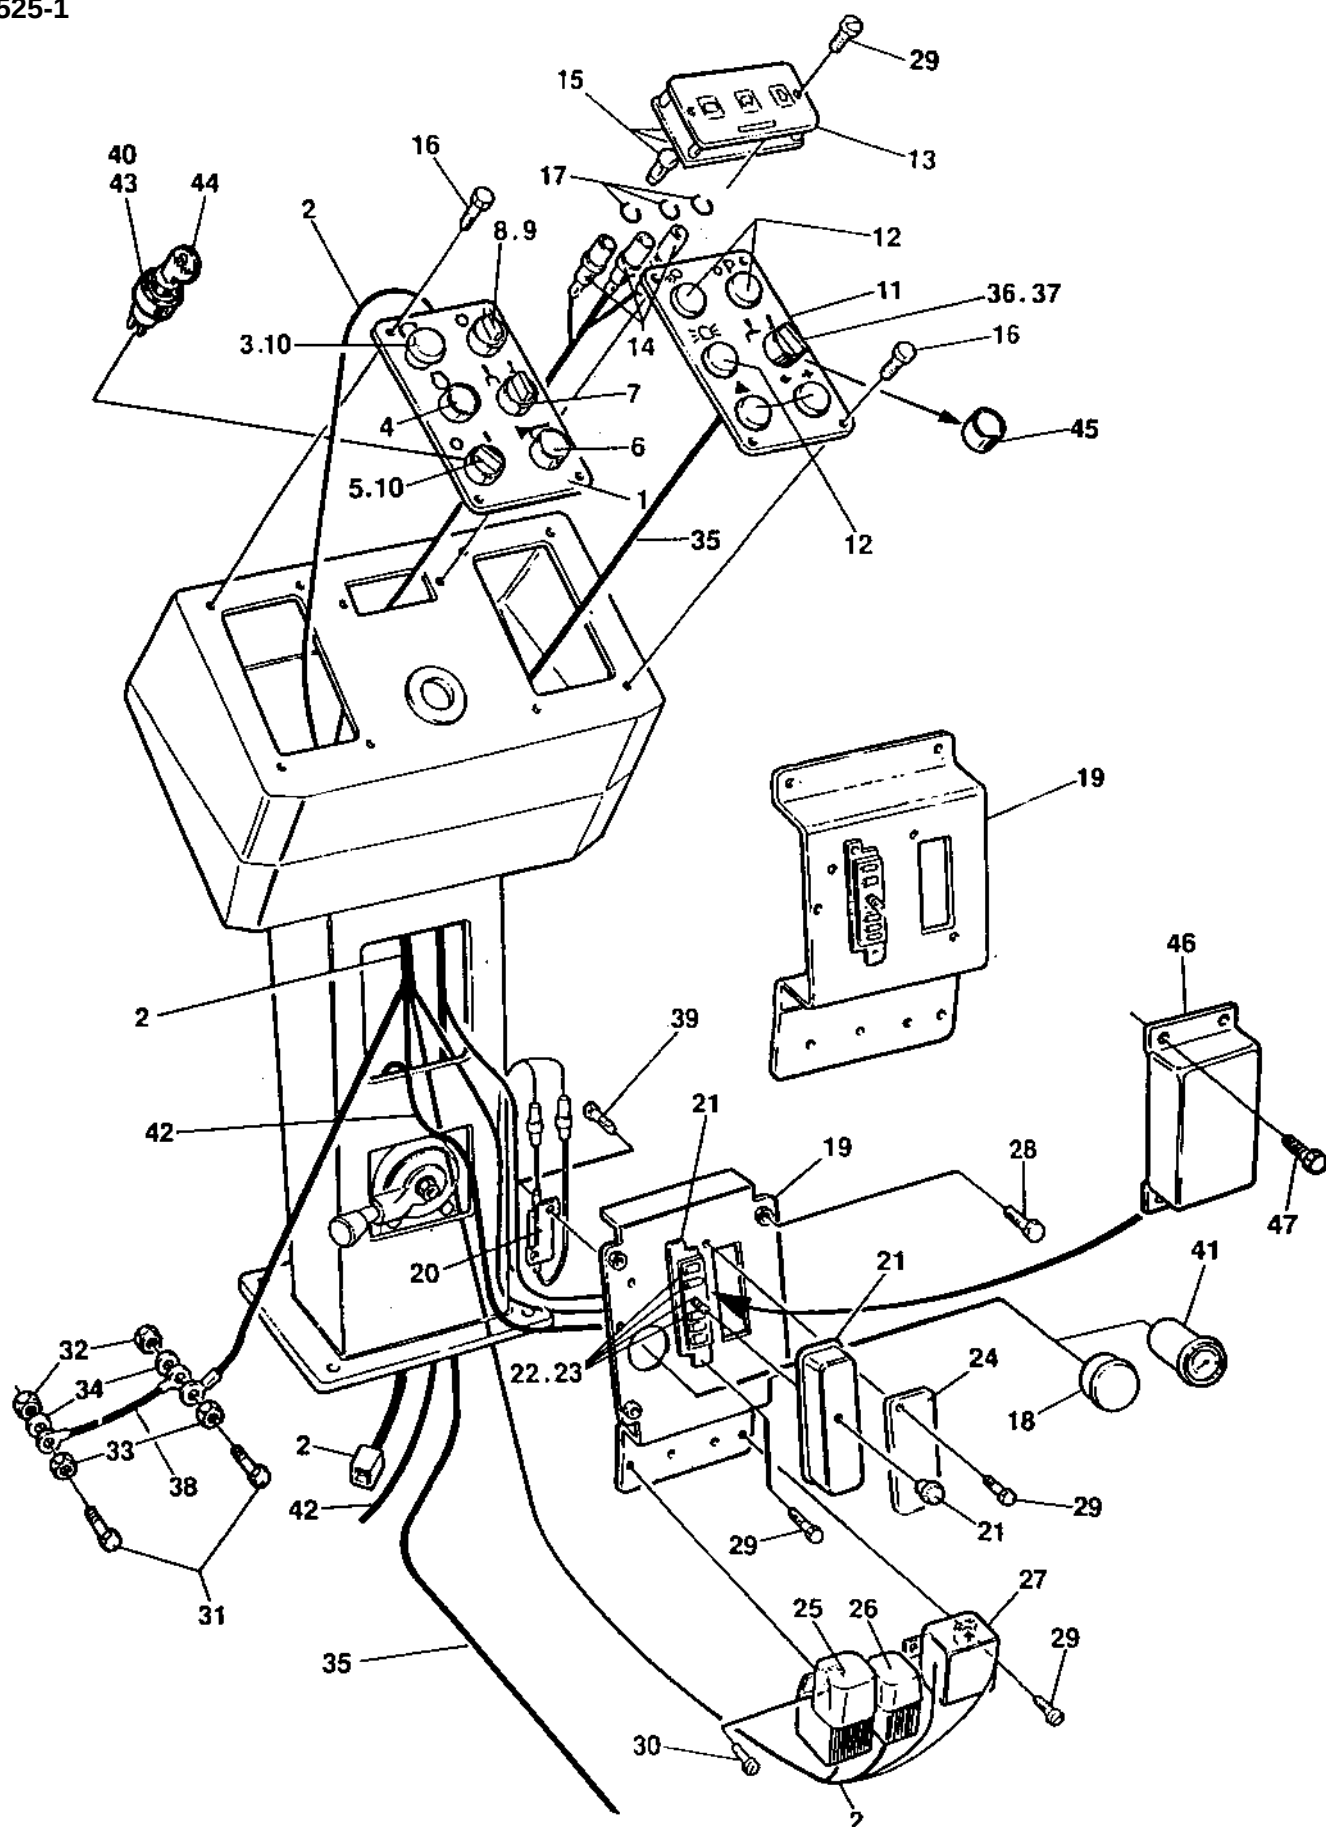

Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357573		1	Control panel plate Up to 60110566	
	358663		1	Control panel plate From 601X0567	
2	357582	A	1	Cable harness	
3	930200		1	Emergency stop	D
4	928928	B	1	Push button	D
5	930151	C	1	Switch	D
6	932032	D	1	Push button	D
7	930153	E	1	Switch	D
8	932058	F	1	Switch	D
9	930155		1	Connector	
10	930163		2	Contact piece	D
11	357574		1	Control panel plate	
12	911456		6	Hole plug	
13	357585		1	Display panel	
14	902225		3	Lamp socket 2-POL	
15	985125		3	Bulb 12V	B
16	902224		8	Screw	
17	160269		3	O-ring	
18	345870		1	Plug From 601X0168	
19	357575		1	Distribution control plate Up to 60110167	
	358146		1	Distribution control plate From 601X0168	
20				Not used on this model	
21	901256		1	Fuse box	
	908110		1	.Cover	
22	901226	G	5	Fuse 7.5A	D
23	901240		3	Connector	
24	356519		1	Cover plate	
25	348485	H	1	Relay unit	
26	287597	I	1	Relay	D
27	927975	F	1	Relay	
28	541702		4	Screw M6x12	
29	901767		8	Screw	
30	902223		2	Screw	
31	500075		2	Screw M6-1x25 8,8	
32	586002		2	Lock nut M6	
33	570004		2	Nut M6	
34	600004		2	Washer	
35				Not used on this model	
36				Not used on this model	
37				Not used on this model	
38	903063		1	Ground cable	
39				Not used on this model	
40	930182	K	1	Contact block	D
41	355468	K	1	Fuel gauge	D
	355258	K	1	.Lamp holder	
	985012	K	1	.Bulb	D
42	358418	L	1	Cable harness	
A)	Control panel				
B)	Starter				
C)	Ignition				
D)	Horn				
E)	Sprinkler				
F)	Vibration				
G)	Other fuses, options				
H)	Neutral start				
I)	Hour meter				
K)	Option				
L)	Option, fuel gauge				

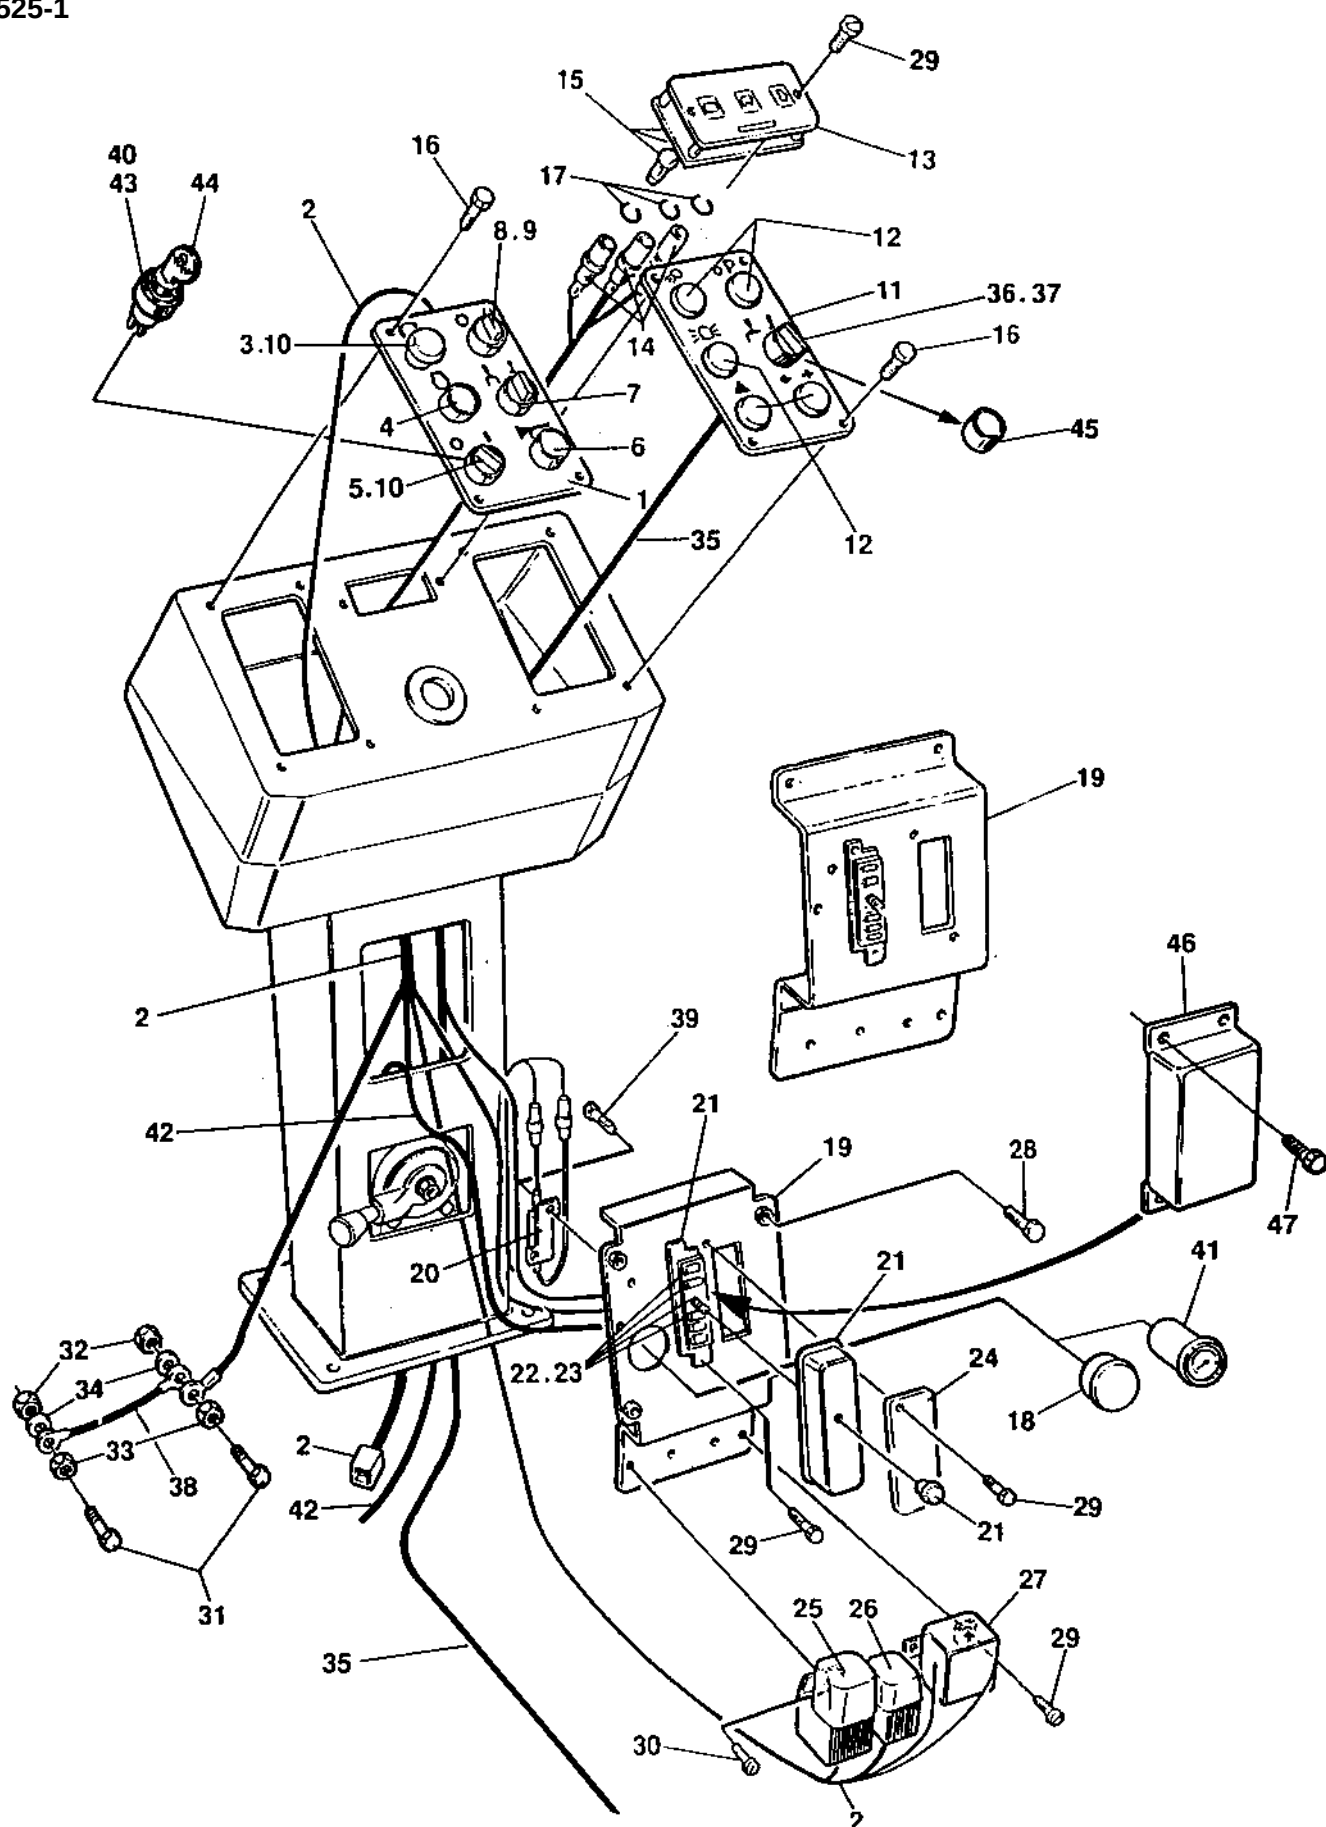


Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
43	903239	M	1	Switch	D
44	902866		1	.Key Marked "455"	D
45				Not used on this model	D
46	359134	K	1	Protection cover	
47	541705	K	4	Screw	
48	901227	P	1	Fuse 10A	D

K) Option

M) Option, key starter


P) Fuse no 1, other fuses, options

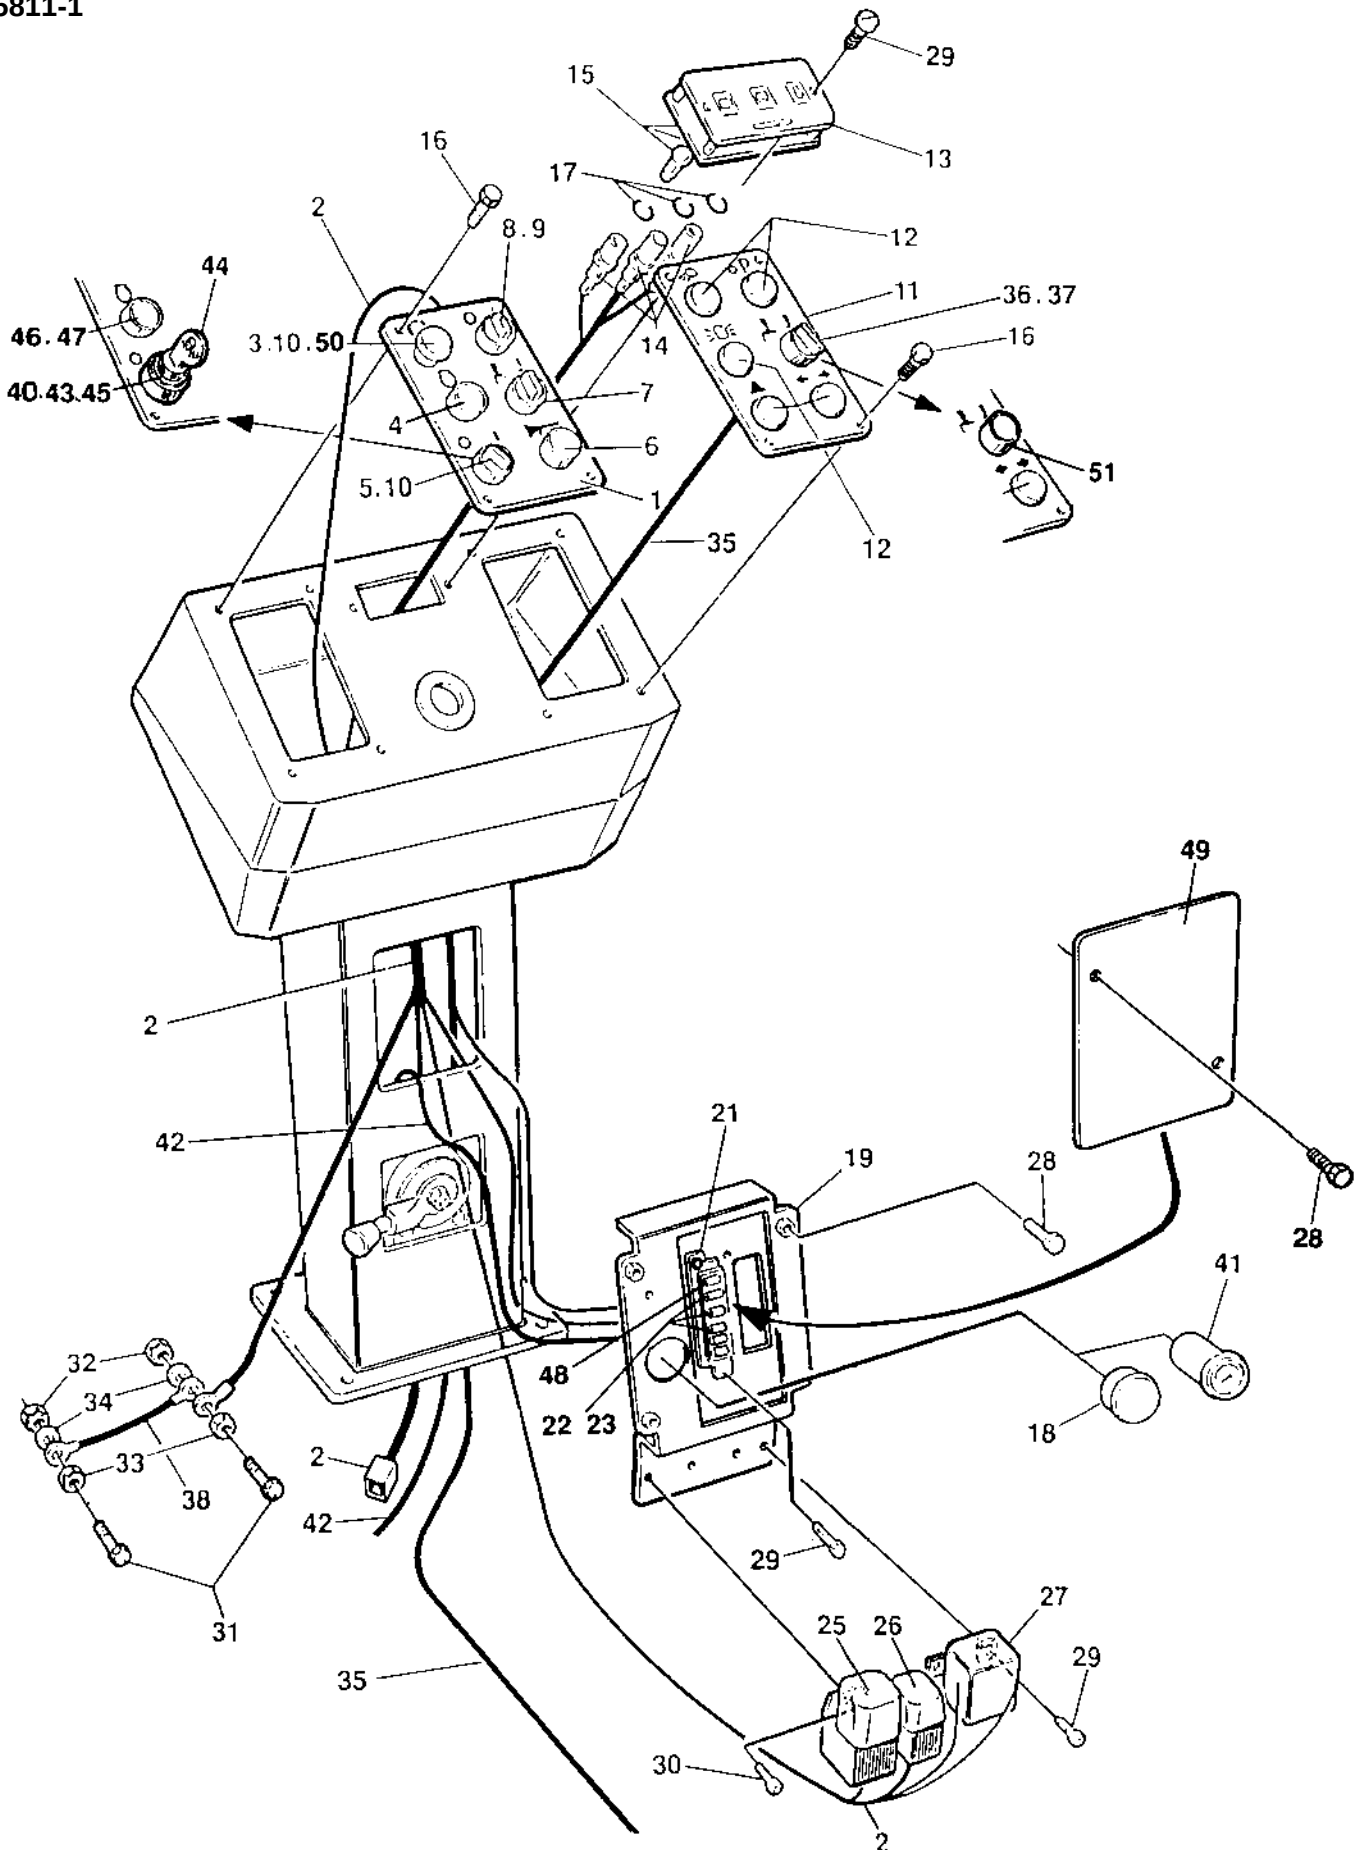

Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358663		1	Control panel plate	
2	359186	A	1	Cable harness	
3	930200		1	Emergency stop	D
4	928928	B	1	Push button	D
5	930151	C	1	Switch	D
6	932032	D	1	Push button	D
7	930153	E	1	Switch	D
8	932058	F	1	Switch	D
9	930155		1	Connector	
10	930163		2	Contact piece	D
11	357574		1	Control panel plate	
12	911456		6	Hole plug	
13	357585		1	Display panel	
14	902225		3	Lamp socket 2-POL	
15	985125		3	Bulb 12V	B
16	902224		8	Screw	
17	160269		3	O-ring	
18	345870		1	Plug	
19	371326		1	Distribution control plate	
21	903820		1	Fuse box	D
	909527		1	.Cover	
22	901226	G	5	Fuse 7.5A	D
23	901240		3	Connector	
25	348485	H	1	Relay unit	
26	287597	I	1	Relay	D
27	927975	F	1	Relay	
28	541702		6	Screw M6x12	
29	901767		6	Screw	
30	902223		2	Screw	
31	500075		2	Screw M6-1x25 8,8	
32	586002		2	Lock nut M6	
33	570004		2	Nut M6	
34	600004		2	Washer	
35				Not used on this model	
36				Not used on this model	
37				Not used on this model	
38	903063		1	Ground cable	
40	930182	J	1	Contact block	D
41	355468	J	1	Fuel gauge	D
	355258	J	1	.Lamp holder	
	985012	J	1	.Bulb	D
42	358418	K	1	Cable harness	
43	903239	L	1	Switch	D
44	902866		1	.Key Marked "455"	D
45	930154		3	Contact piece	
46	932059	J	1	Pilot lamp cpl Yellow	
47	985012	J	1	Bulb	D


- A) Control panel
- B) Starter
- C) Ignition
- D) Horn
- E) Sprinkler
- F) Vibration
- G) Other fuses, options
- H) Neutral start
- I) Hour meter
- J) Option
- K) Option, fuel gauge
- L) Option, key starter

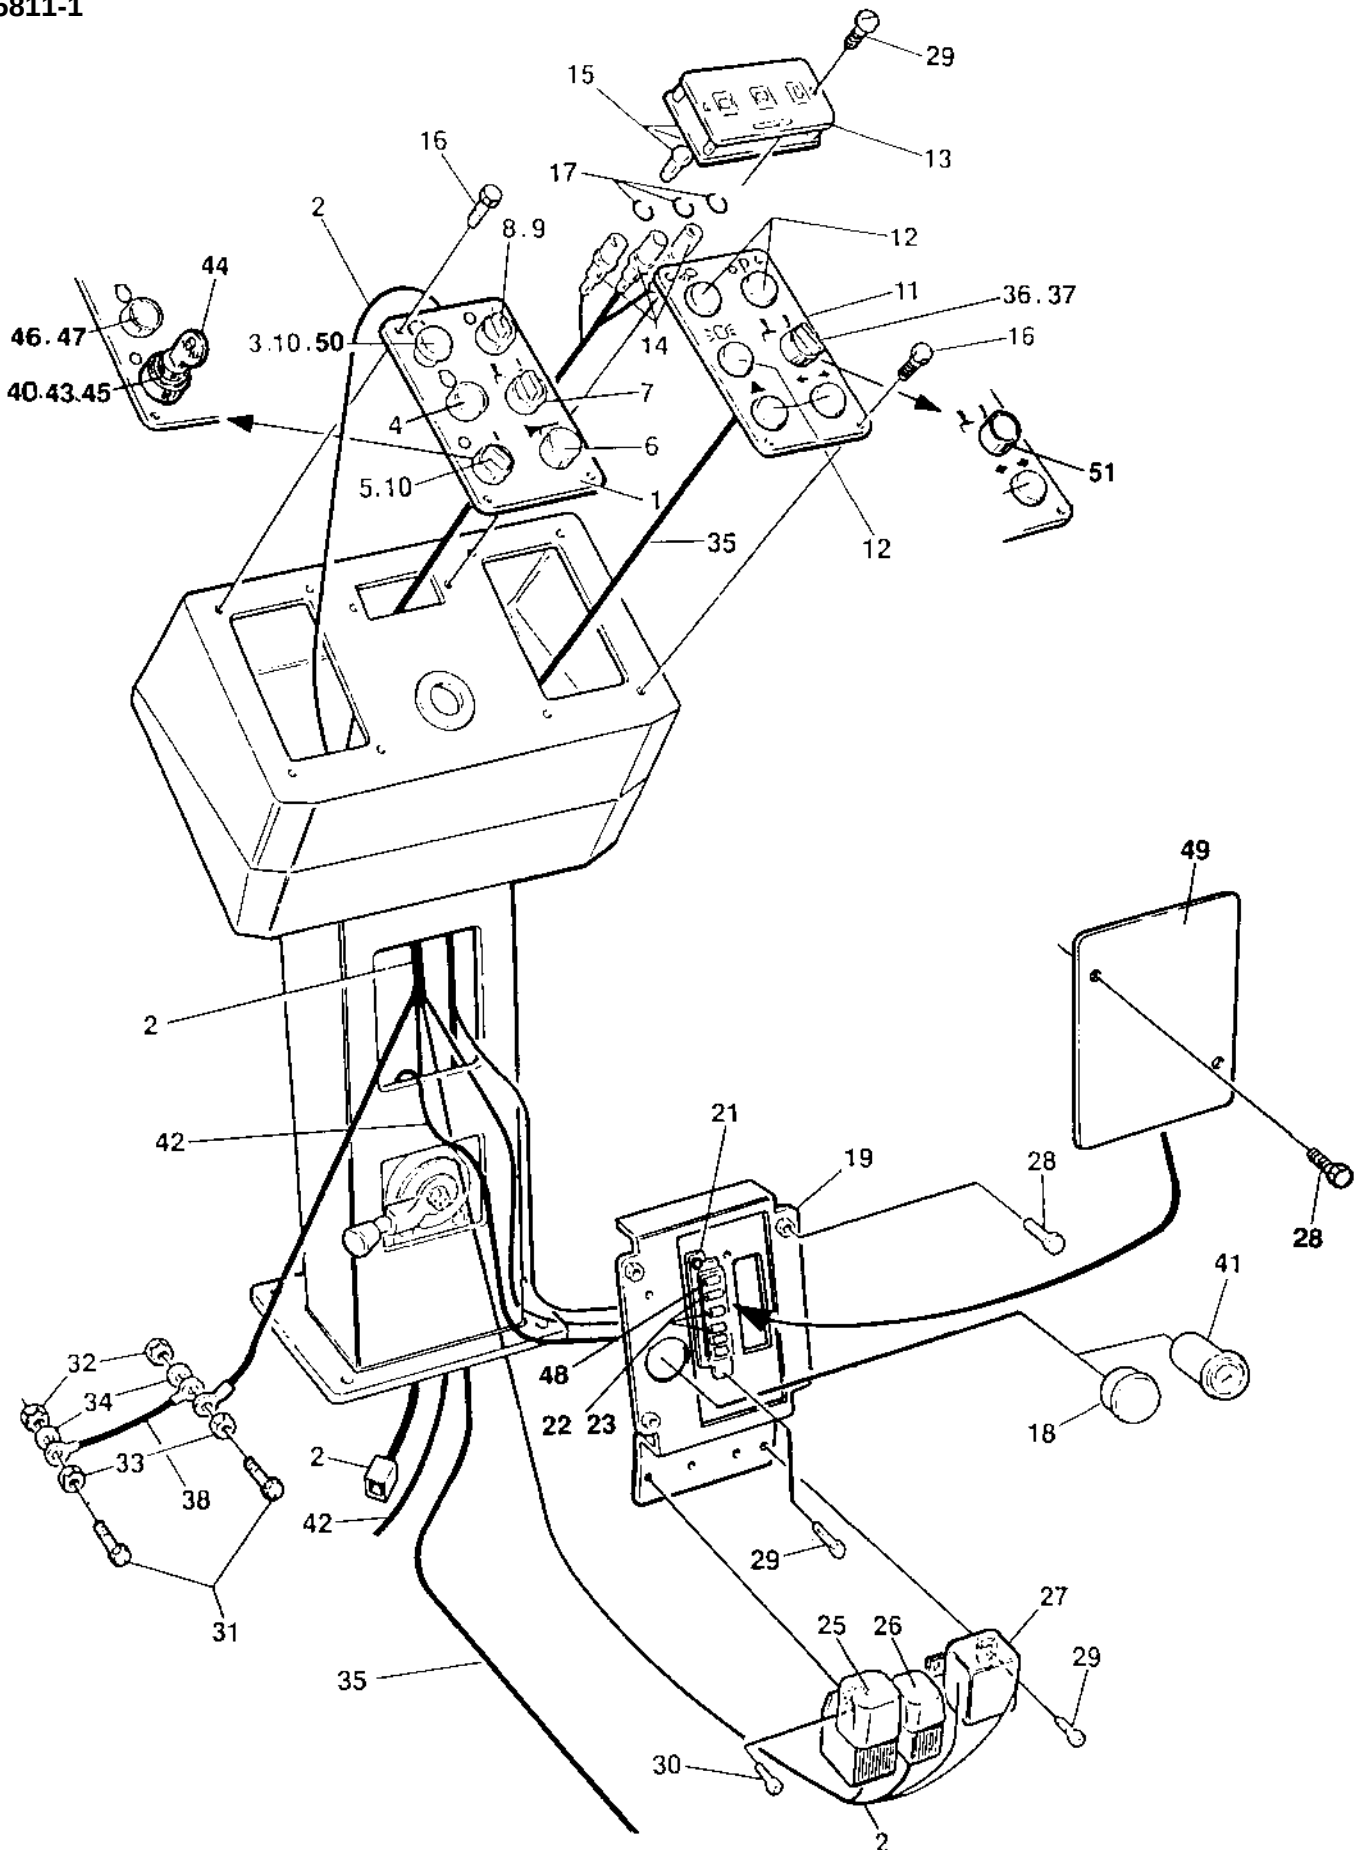

Control panel


Ref. No.	Part No.	Rem.	Qty	Description	Code
48	901227	N	1	Fuse 10A	D
49	371344		1	Cover	
50	930154		1	Contact piece	
51				Not used on this model	

N) Fuse no 1, other fuses, options

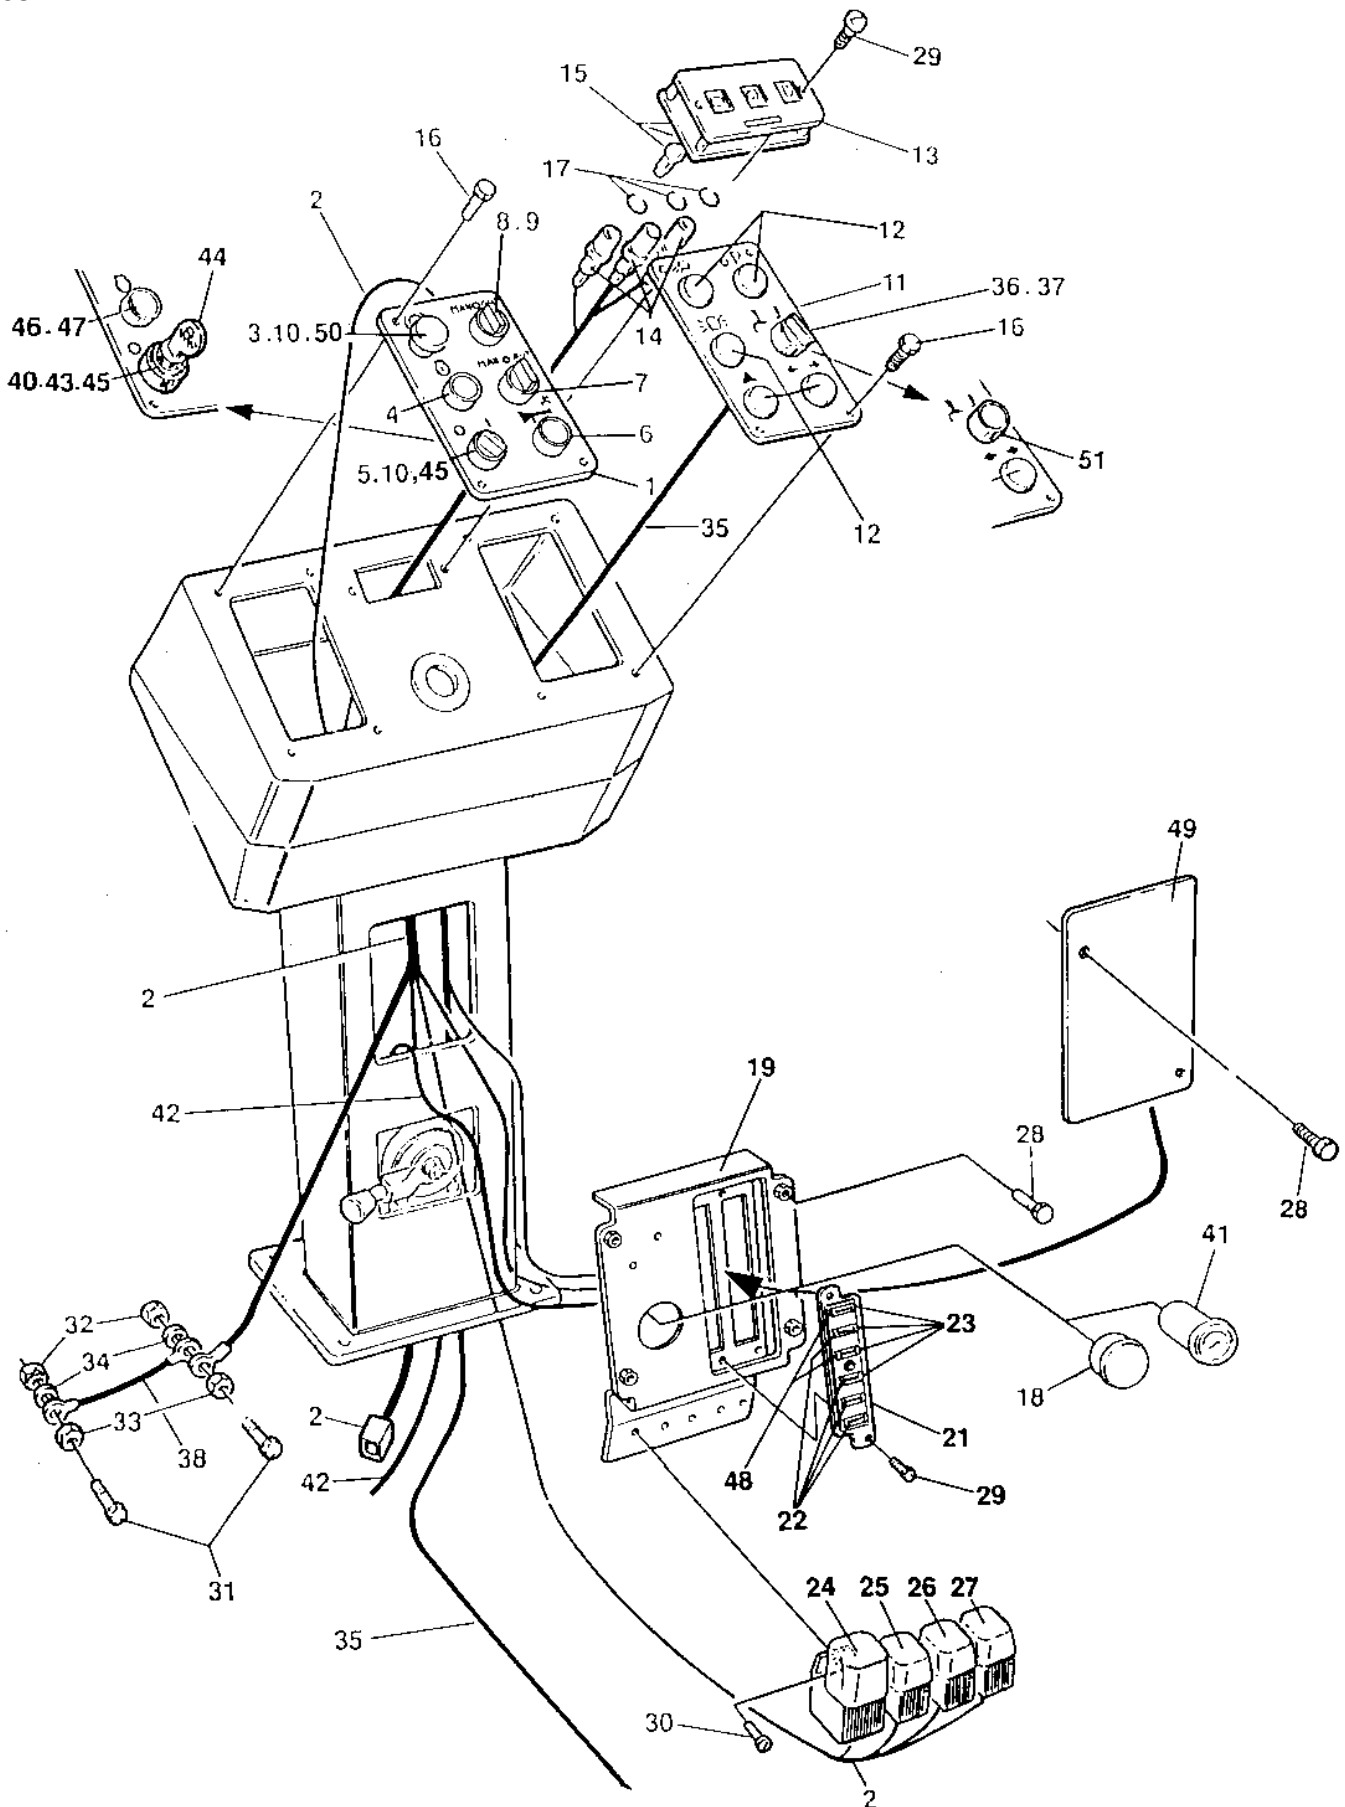


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358663		1	Control panel plate	
2	373492	A	1	Cable harness Up to 60115074	
	381955	A	1	Cable harness From 60115075 Up to 60115962	
	384263		1	Cable harness From 60115963	
3	930200		1	Emergency stop	D
	930154		1	.Contact piece From 60115075	
4	928928	B	1	Push button	D
5	930151	C	1	Switch	D
	930153	H,M	1	Switch	D
	385644		1	Decal Electrical battery switch	
6	932032	D	1	Push button	D
7	930153	E	1	Switch	D
8	932058	F	1	Switch	D
9	930155		1	Connector	
10	930163		2	Contact piece	D
11	357574		1	Control panel plate	
12	911456		6	Hole plug	
13	357585		1	Display panel	
14	902225		3	Lamp socket 2-POL	
15	985125		3	Bulb 12V	B
16	902224		8	Screw	
17	160269		3	O-ring	
18	345870		1	Plug	
19	371326		1	Distribution control plate	
21	903820		1	Fuse box	D
	909527		1	.Cover	
22	901226	G	4	Fuse 7.5A	D
23	901240		3	Connector	
24	370233	1	1	Relay, VBS Up to 60115329	D
	382782		1	Relay, VBS From 60115330	D
25	287597	I	1	Relay	D
26	287597		1	Relay	D
27	287597		1	Relay	D
28	541702		6	Screw M6x12	
29	901767		4	Screw	
30	902223		4	Screw	
31	500075		2	Screw M6-1x25 8,8	
32	586002		2	Lock nut M6	
33	570004		2	Nut M6	
34	904228		2	Washer 6,4x12x1,5	
35				Not used on this model	
36				Not used on this model	
37				Not used on this model	
38	903063		1	Ground cable	
40	930182	J	1	Contact block	D

- 1) Replaced as spare part by PN 382782
- A) Control panel
- B) Starter
- C) Ignition
- D) Horn
- E) Sprinkler
- F) Vibration
- G) Other fuses, options
- H) Ignition, electrical battery switch
- I) Hour meter
- J) Option
- M) Three fixed positions.

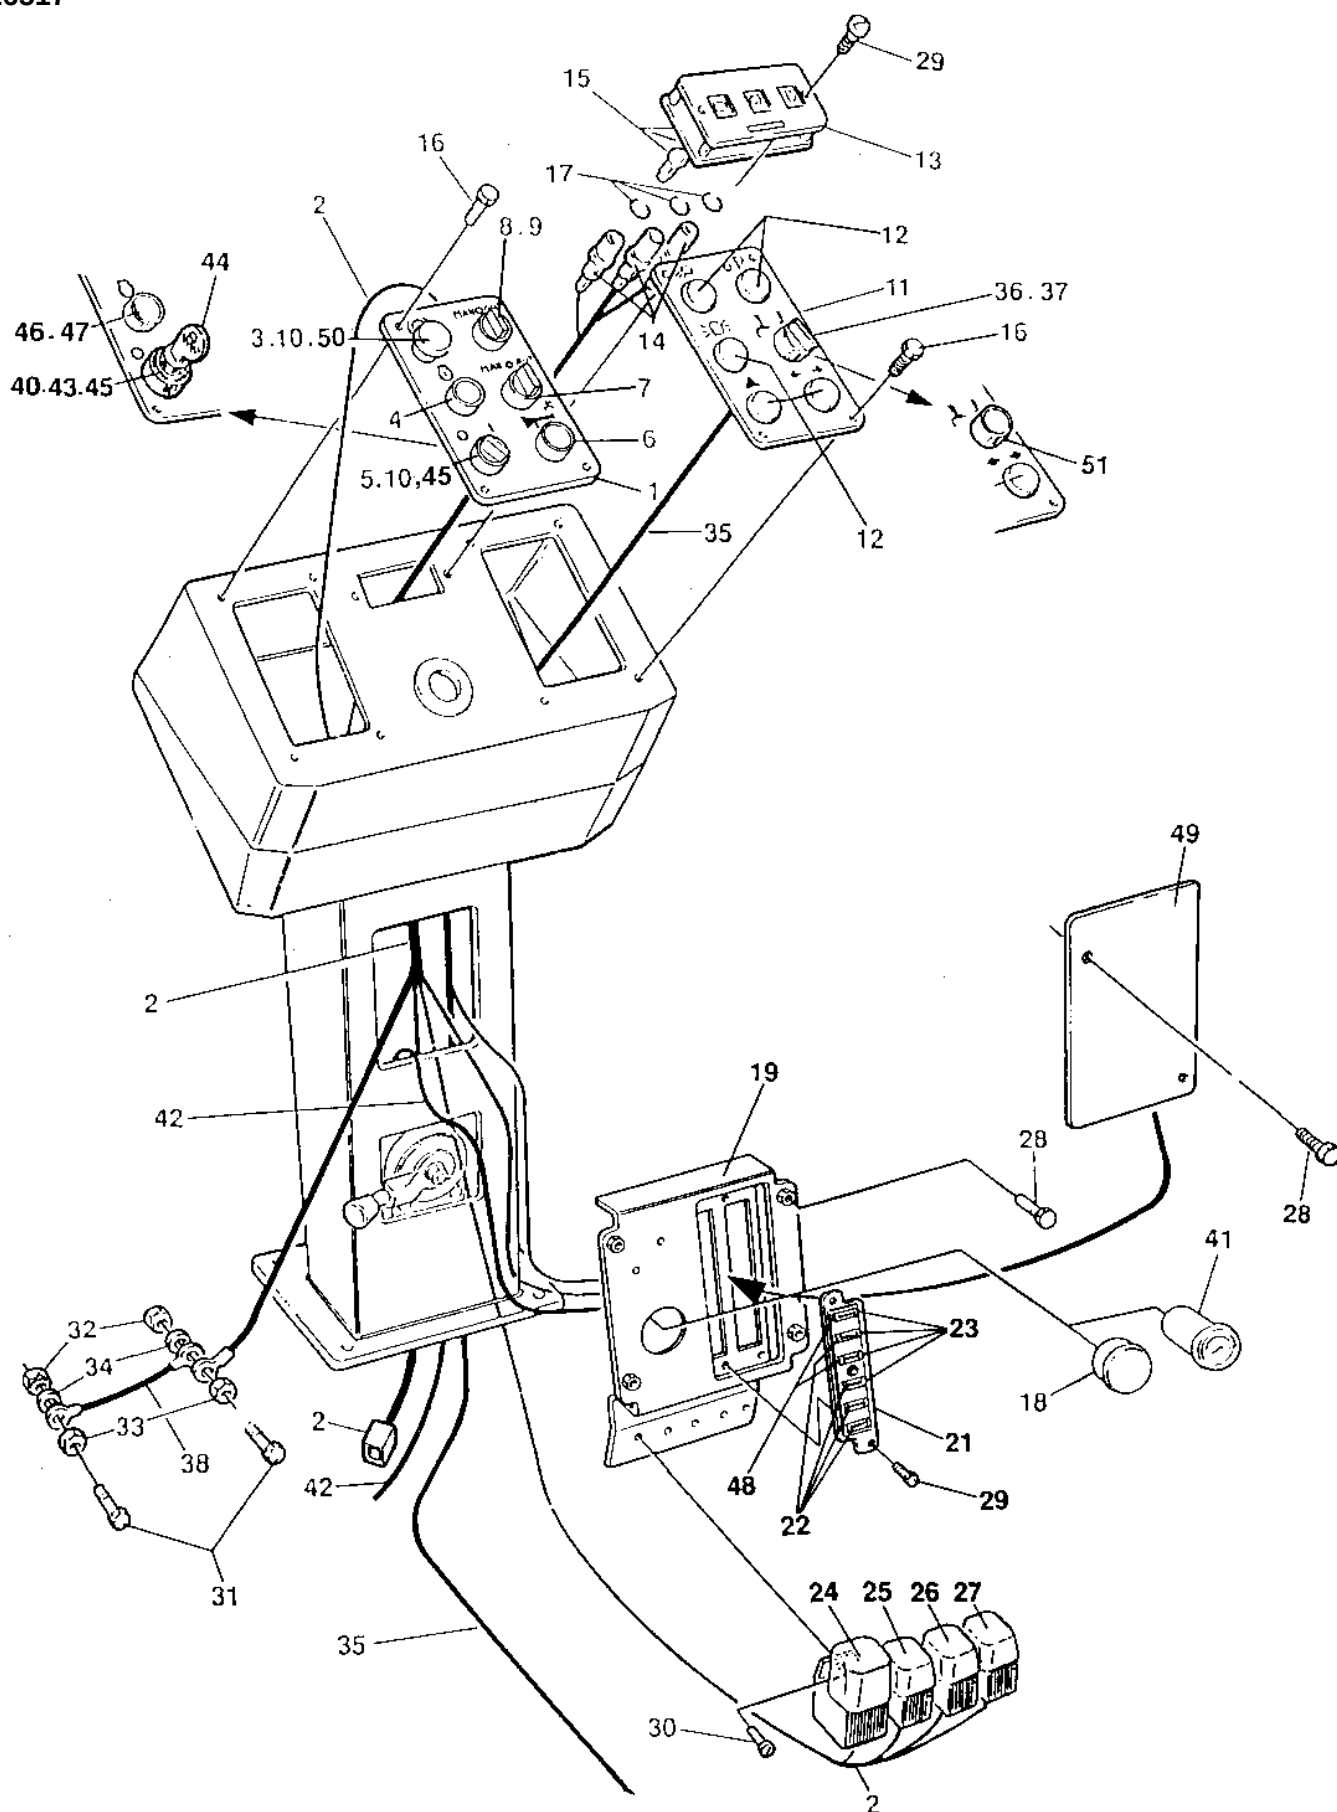


Ref. No.	Part No.	Rem.	Qty	Description	Code
41	355468	J	1	Fuel gauge	D
	355258	J	1	.Lamp holder	
	985012	J	1	.Bulb	D
42	358418	K	1	Cable harness	
43	903239	L	1	Switch	D
44	902866		1	.Key Marked "455"	D
45	930154		3	Contact piece Up to 60115962	
	930154	H	4	Contact piece From 60115963	
46	932059	J	1	Pilot lamp cpl Yellow	
47	985012	J	1	Bulb	D
48	901227	N	2	Fuse 10A	D
49	371344		1	Cover	
50	930154		2	Contact piece	
51				Not used on this model	

- H) Ignition, electrical battery switch
- J) Option
- K) Option, fuel gauge
- L) Option, key starter
- N) Other fuses, options

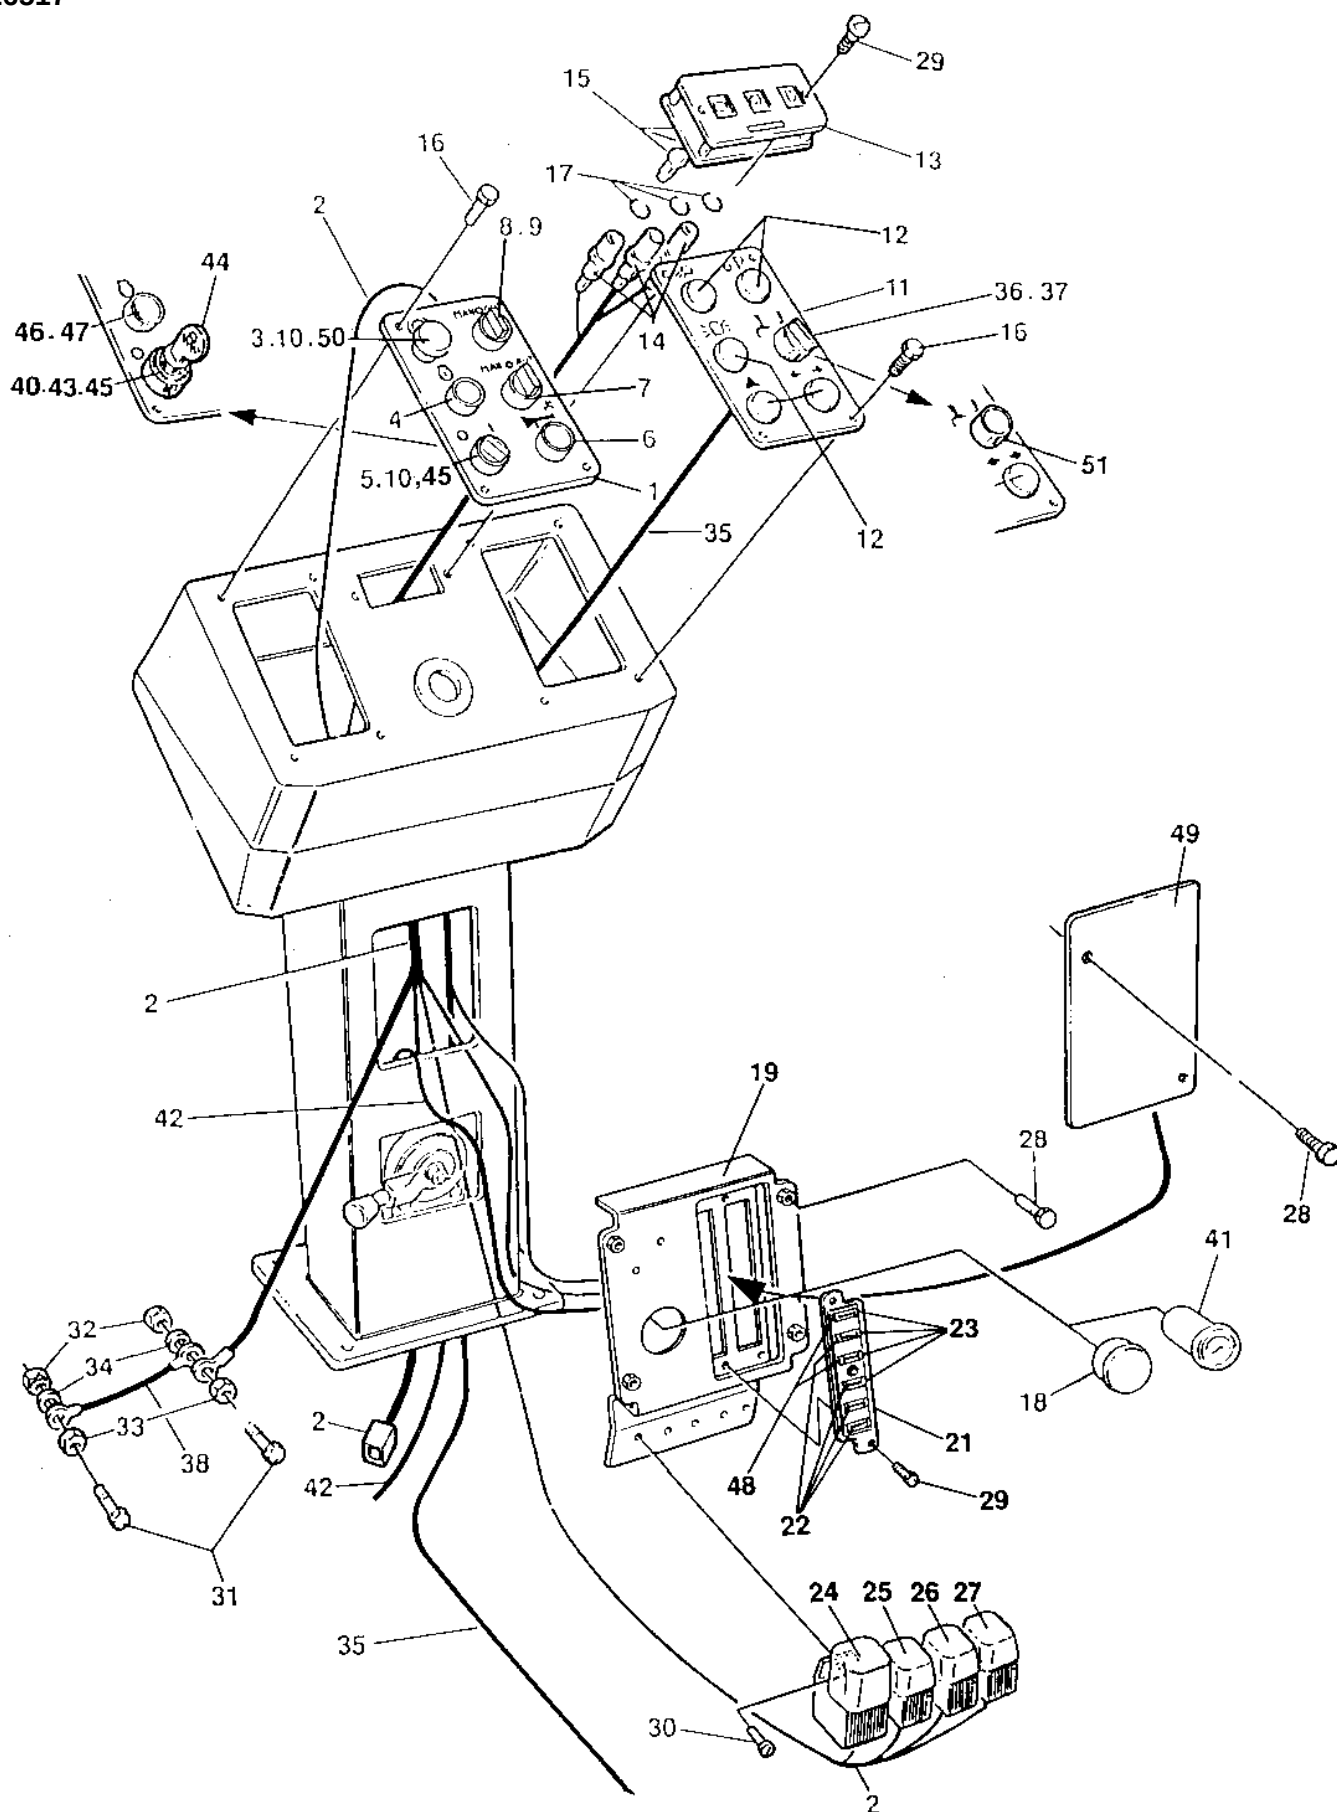


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358663		1	Control panel plate	
2	373492	A	1	Cable harness Up to 601X5074	
	381955	A	1	Cable harness From 60125075 Up to 60125890	
	384263		1	Cable harness From 60125891	
3	930200		1	Emergency stop	D
	930154		1	.Contact piece From 60125075	
4	928928	B	1	Push button	D
5	930151	C	1	Switch	D
	930153	H,M	1	Switch	D
	385644		1	Decal Electrical battery switch	
6	932032	D	1	Push button	D
7	930153	E	1	Switch	D
8	932058	F	1	Switch	D
9	930155		1	Connector	
10	930163		2	Contact piece	D
11	357574		1	Control panel plate	
12	911456		6	Hole plug	
13	357585		1	Display panel	
14	902225		3	Lamp socket 2-POL	
15	985125		3	Bulb 12V	B
16	902224		8	Screw	
17	160269		3	O-ring	
18	345870		1	Plug	
19	371326		1	Distribution control plate	
21	903820		1	Fuse box	D
	909527		1	.Cover	
22	901226	G	4	Fuse 7.5A	D
23	901240		3	Connector	
24	370233	1	1	Relay, VBS Up to 601X5329	D
	382782		1	Relay, VBS From 60125330	D
25	287597	I	1	Relay	D
26	287597		1	Relay	D
27	287597		1	Relay	D
28	541702		6	Screw M6x12	
29	901767		4	Screw	
30	902223		4	Screw	
31	500075		2	Screw M6-1x25 8,8	
32	586002		2	Lock nut M6	
33	570004		2	Nut M6	
34	904228		2	Washer 6,4x12x1,5	
35				Not used on this model	
36				Not used on this model	
37				Not used on this model	
38	903063		1	Ground cable	
40	930182	J	1	Contact block	D

- 1) Replaced as spare part by PN 382782
- A) Control panel
- B) Starter
- C) Ignition
- D) Horn
- E) Sprinkler
- F) Vibration
- G) Other fuses, options
- H) Ignition, electrical battery switch
- I) Hour meter
- J) Option
- M) Three fixed positions.

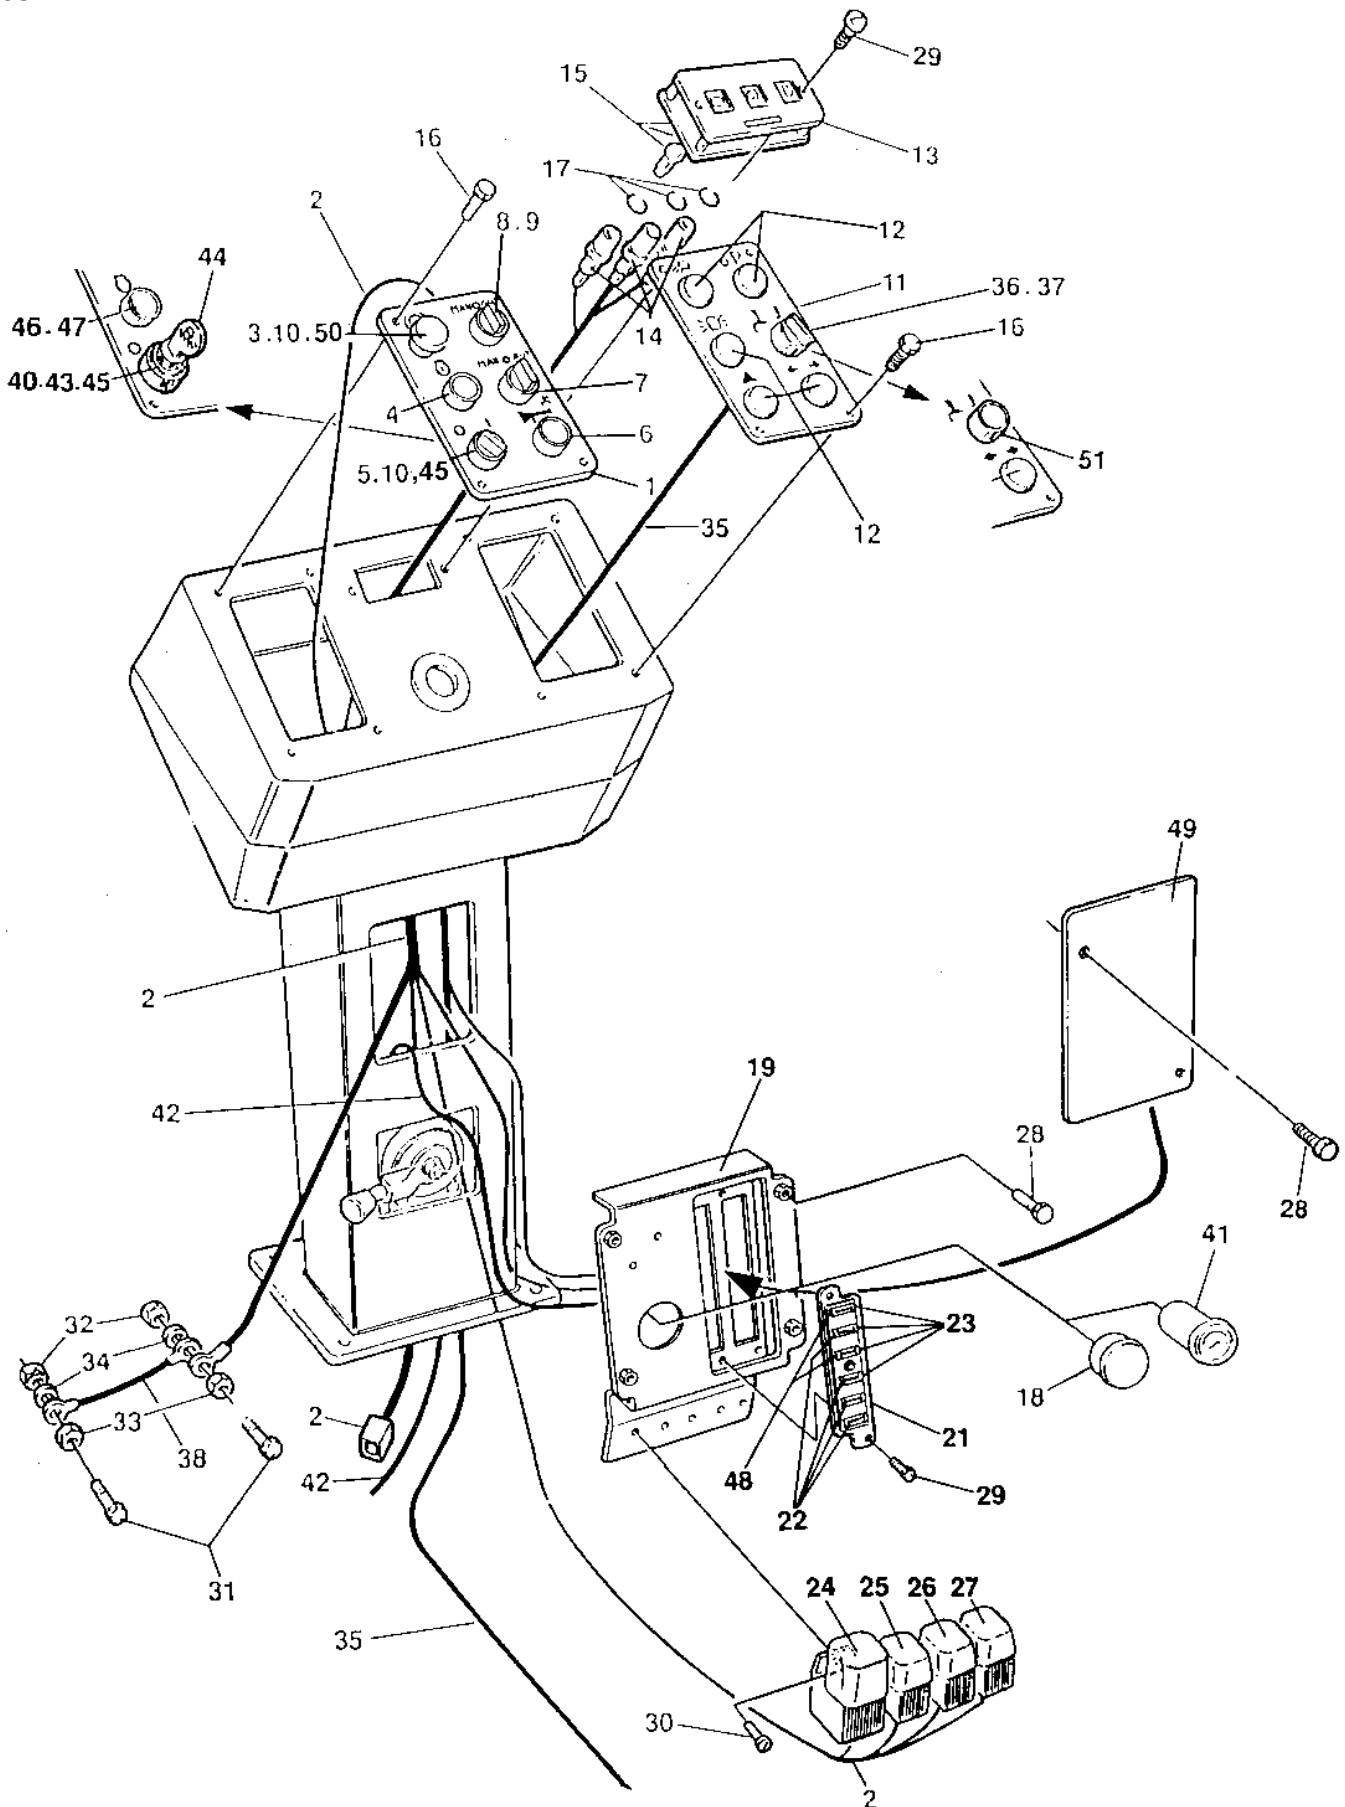

Ref. No.	Part No.	Rem.	Qty	Description	Code
41	355468	J	1	Fuel gauge	D
	355258	J	1	.Lamp holder	
	985012	J	1	.Bulb	D
42	358418	K	1	Cable harness	
43	903239	L	1	Switch	D
44	902866		1	.Key Marked "455"	D
45	930154		3	Contact piece Up to 601X5890	
	930154	H	4	Contact piece From 60125891	
46	932059	J	1	Pilot lamp cpl Yellow	
47	985012	J	1	Bulb	D
48	901227	N	2	Fuse 10A	D
49	371344		1	Cover	
50	930154		2	Contact piece	
51				Not used on this model	


- H) Ignition, electrical battery switch
- J) Option
- K) Option, fuel gauge
- L) Option, key starter
- N) Other fuses, options

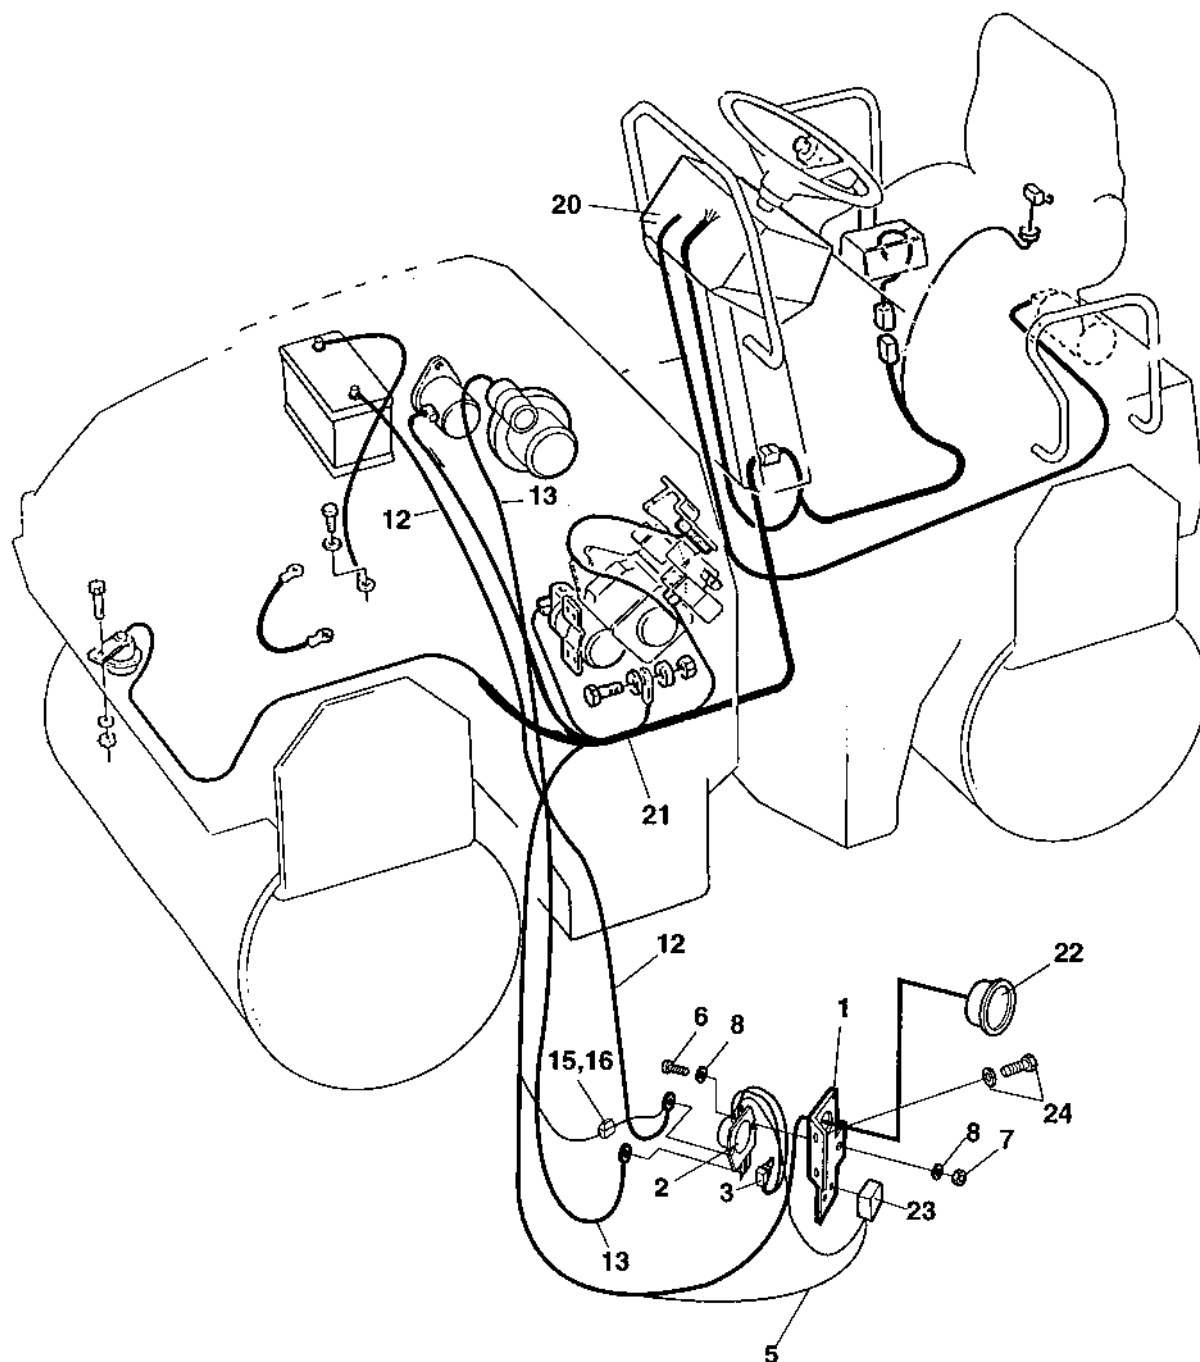

Electrical battery switch DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	384083		1	Holder plate	
2	791078		1	Electrical battery switch	D
3	791079	2	1	Diode	D
5	384191		1	Cable harness	
6	500022		2	Screw M8-1,25x30 8,8	
7	570005		2	Nut M8	
8	904229		4	Washer 8,4x16x1,5	
12	791090		1	Battery cable	
13	791472		1	Connection cable, coarse	
15	904015		1	Fuse holder	
16	901225		1	Fuse 5A	D
20				Control panel	D
21		1		Cable harness	D
22		1		Hour meter	D
23		1		Starter relay	D
24		1		Fastener	D

- 1) See section " Electrical equipment ".
2) Delivered with Cable harness PN 384191.

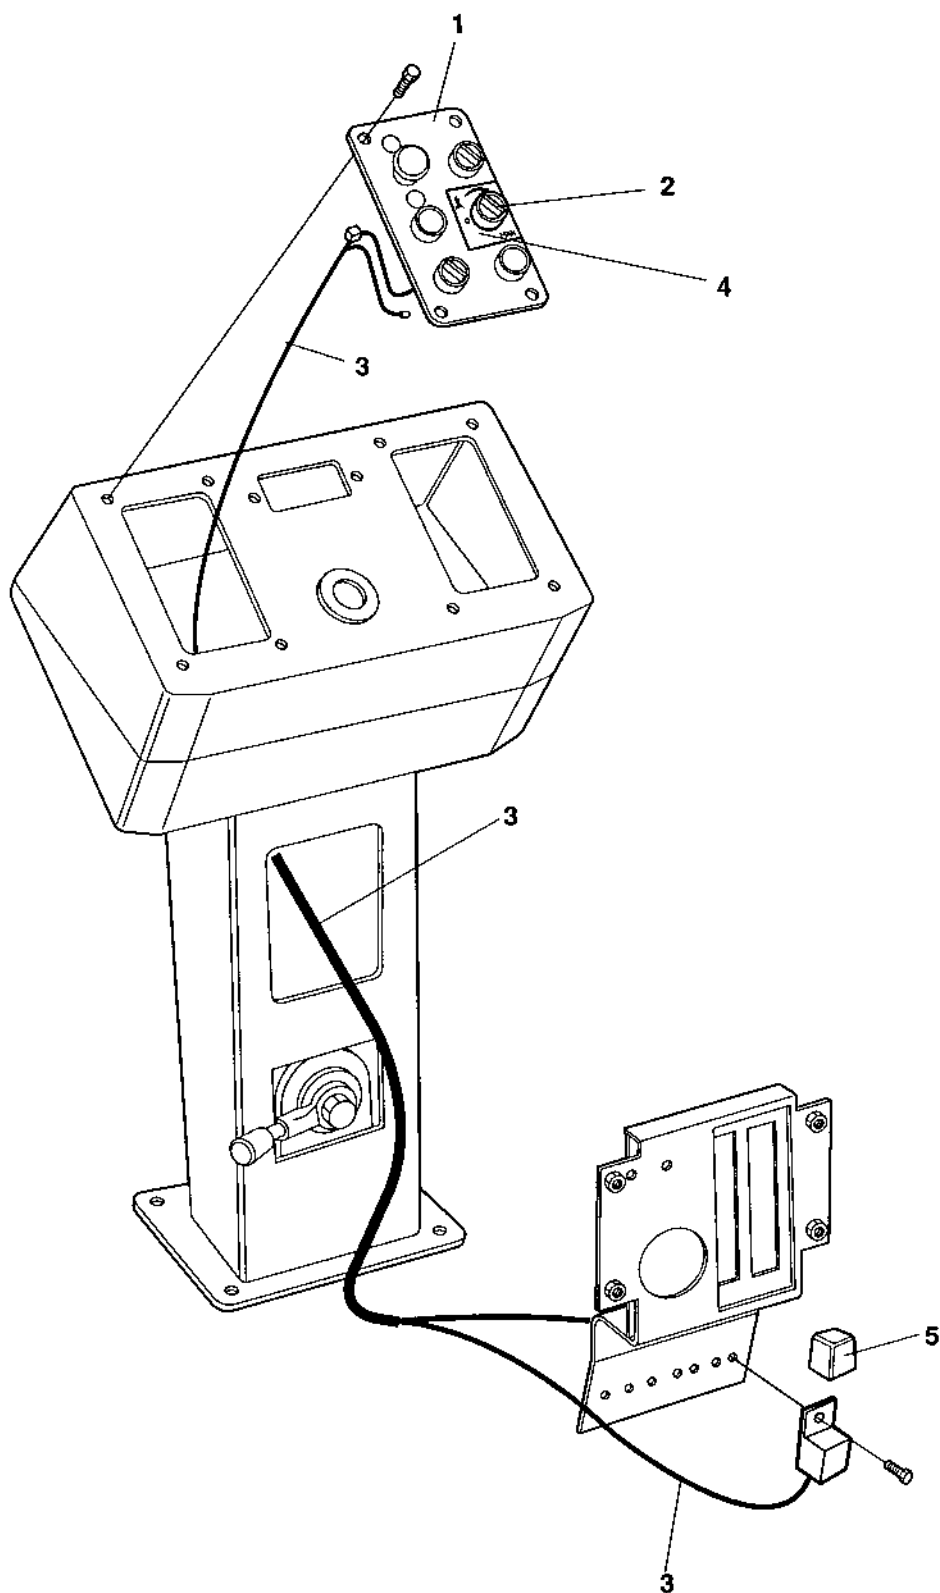


Sprinkler timer

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel plate	D
2	383960		1	Switch, cpl	
3	383967		1	Cable harness	
	357562		1	.Relay holder	
4	384359		1	Decal	
5	374213		1	Time relay	D

Driving & side direction lights


15488-2

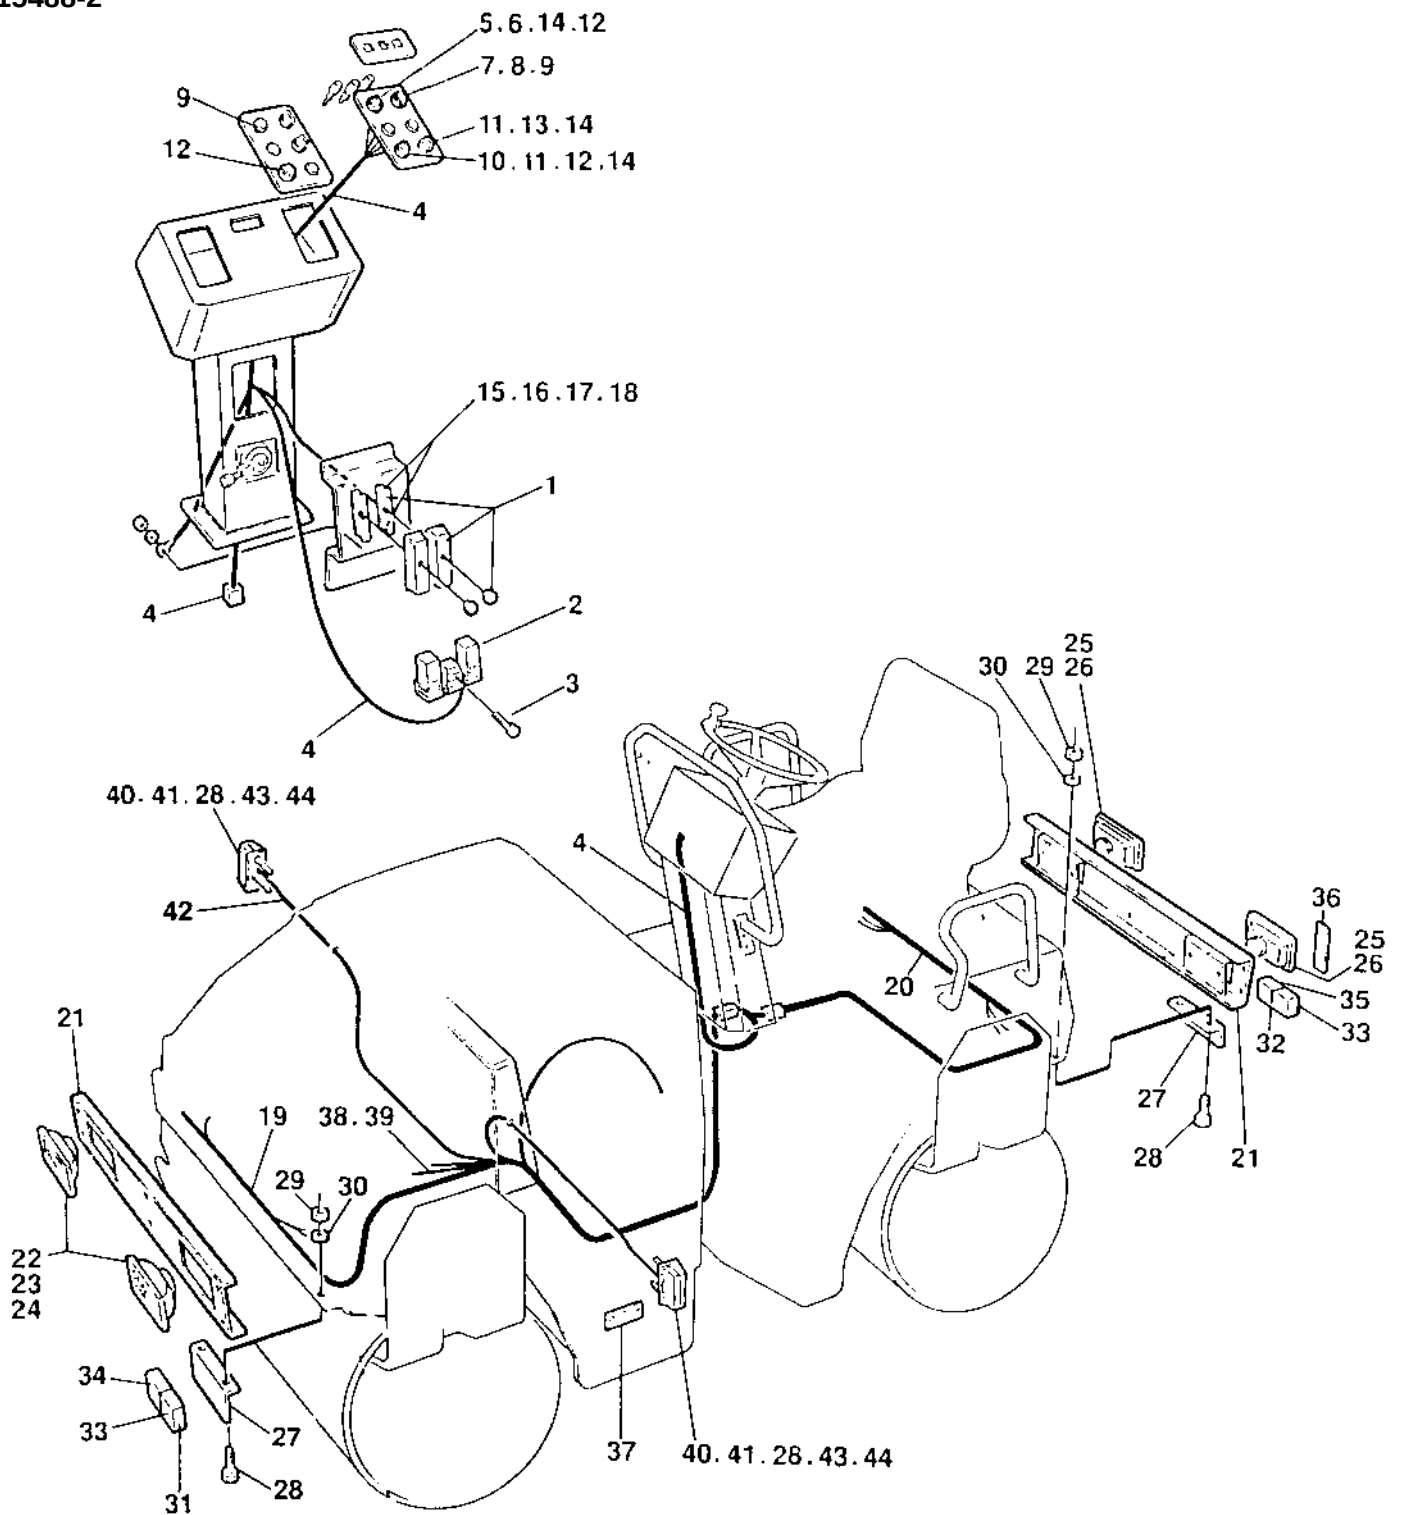

Driving & side direction lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901256		1	Fuse box Up to 601X2184	
	901256		1	Fuse box From 601X2190 Up to 601X2208	
	903820		1	Fuse box From 601X2185 Up to 601X2189	D
	903820		1	Fuse box From 601X2209	D
2	975062		1	Flash relay Option	D
3	902223		1	Screw	
4	357810	A	1	Cable harness Up to 601X2506	
	372777	A	1	Cable harness From 601X2507	
5	932055	B	1	Switch	D
6	930165		1	Contact block	D
7	932058	C	1	Switch	D
8	930182		1	Contact block	D
9	930154	D	2	Contact piece	
10	932056	E	1	Switch	D
11	930162		2	Connector	
12	930163	D	3	Contact piece	D
13	930161	F	1	Switch	D
14	985012	G	3	Bulb	D
15	901240		1	Connector	
16	901225		2	Fuse 5A	D
17	901227		1	Fuse 10A	D
18	901228		2	Fuse 15A	B
19	357811	H	1	Cable harness Up to 601X2506	
	372776	H	1	Cable harness From 601X2507	
20	357812	I	1	Cable harness	
21	357667	J	2	Lights bracket	
	371561	J	2	Lights bracket	
	358248	K	2	Lights bracket	
22	902066	L	2	Head light	
	901994	M	2	Head light	
23	910992		2	Connector	
24	900790	N	2	Bulb 60/55w H4	B
25	902227	O	2	Work lamp	
26	901369	P	2	Bulb 55w H3	B
27	349795		4	Holder plate	
28	508020		12	Screw	
29	586001		8	Lock nut M5	
30	600003		8	Washer	
31	900794		2	Turn signals	
32	900793		2	Tail light	
33	928502	F	4	Bulb 21w	B


- A) Driving lights
- B) Head light
- C) Lights
- D) Small
- E) Hazard
- F) Turn signal
- G) Switch
- H) Front
- I) Rear
- J) Right asym.
- K) Left asym.
- L) Right asym, H4
- M) Left asym, H4
- N) H4, head light, front
- O) H3, rear
- P) H3, rear light

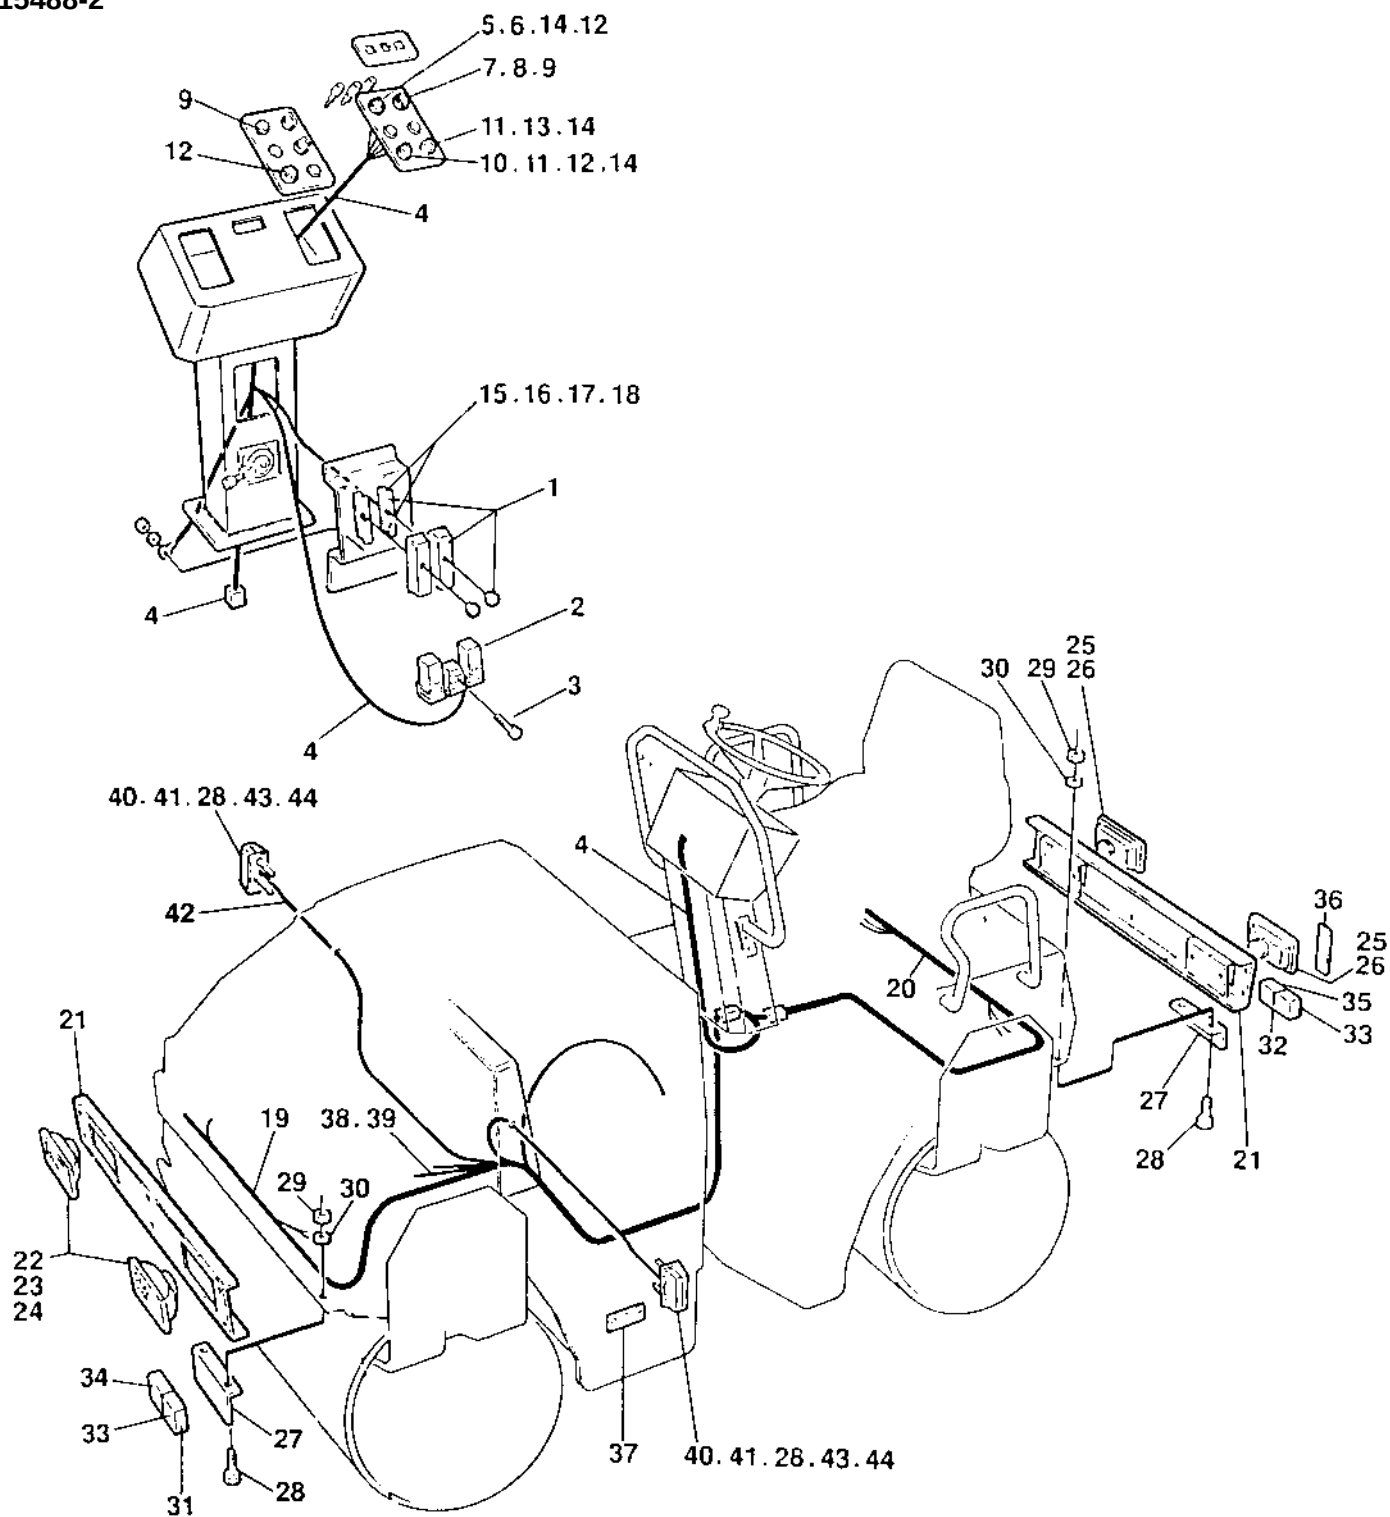

Driving & side direction lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
34	985014	Q	2	Bulb 5w	B
35	900791	R	2	Bulb	B
36	901182		2	Reflector, red	B
37	901183		2	Reflector, yellow	B
38	600006		1	Washer	
39	586003		1	Lock nut M8	
40	902064		2	Direction lights	
41	985013		2	Bulb 12V,5W	B
42	358000	V	1	Cable harness	
43	600002		4	Washer	
44	923976		4	Nut	

Q) Parking light
R) Tail/stop light
V) Direction lights

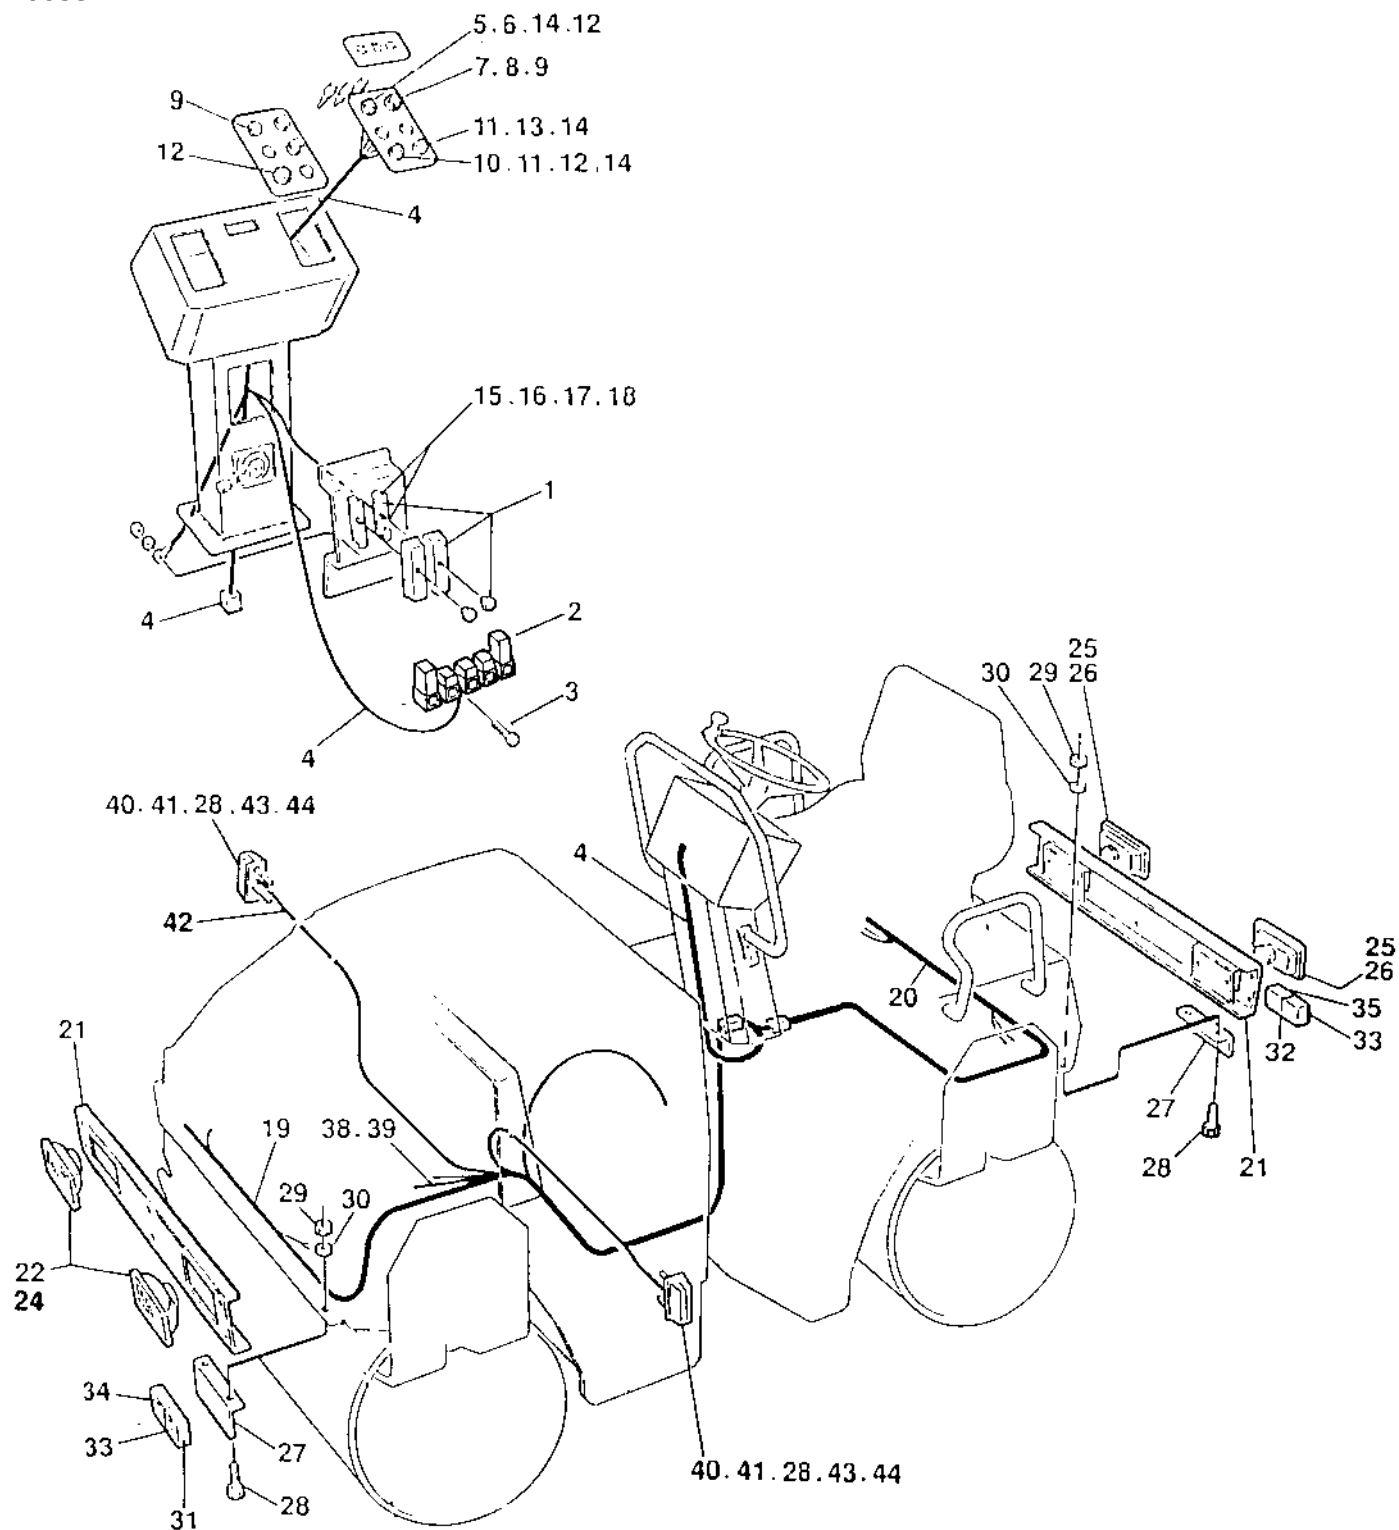


Driving & side direction lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	903820		1	Fuse box	D
2	904989		1	Flash relay	D
3	902223		1	Screw	
4	373493	A	1	Cable harness	
5	932055	B	1	Switch	D
6	930165		1	Contact block	D
7	932058	C	1	Switch	D
8	930182		1	Contact block	D
9	930154	D	2	Contact piece	
10	932056	E	1	Switch	D
11	930162		2	Connector	
12	930163	D	3	Contact piece	D
13	930161	F	1	Switch	D
14	985012	G	3	Bulb	D
15	901240		1	Connector	
16	901225		2	Fuse 5A	D
17	901227		1	Fuse 10A	D
18	901228		2	Fuse 15A	B
19	373490	H	1	Cable harness	
20	357812	I	1	Cable harness	
21	371561	J	2	Lights bracket	
	380192	K	2	Lights bracket	
22	902066	L	2	Head light	
	904313	M	2	Head light	
24	900790	N	2	Bulb 60/55w H4	B
25	902227	O	2	Work lamp	
26	901369	P	2	Bulb 55w H3	B
27	349795		4	Holder plate	
28	508020		12	Screw	
29	586001		8	Lock nut M5	
30	904281		8	Washer 5,3x10x1	
31	900794		2	Turn signals	
32	900793		2	Tail light	
33	928502	F	4	Bulb 21w	B
34	985014	Q	2	Bulb 5w	B
35	900791	R	2	Bulb	B
38	904229		1	Washer 8,4x16x1,5	
39	586003		1	Lock nut M8	
40	902064		2	Direction lights	
41	985013		2	Bulb 12V,5W	B
42	358000	S	1	Cable harness	

- A) Driving lights
- B) Head light
- C) Lights
- D) Small
- E) Hazard
- F) Turn signal
- G) Switch
- H) Front
- I) Rear
- J) Red
- K) Yellow
- L) Right asym, H4, front
- M) Left asym, H4, front
- N) H4, head light, front
- O) H3, rear
- P) H3, rear light
- Q) Parking light
- R) Tail/stop light
- S) Direction lights


Driving & side direction lights

16688-1

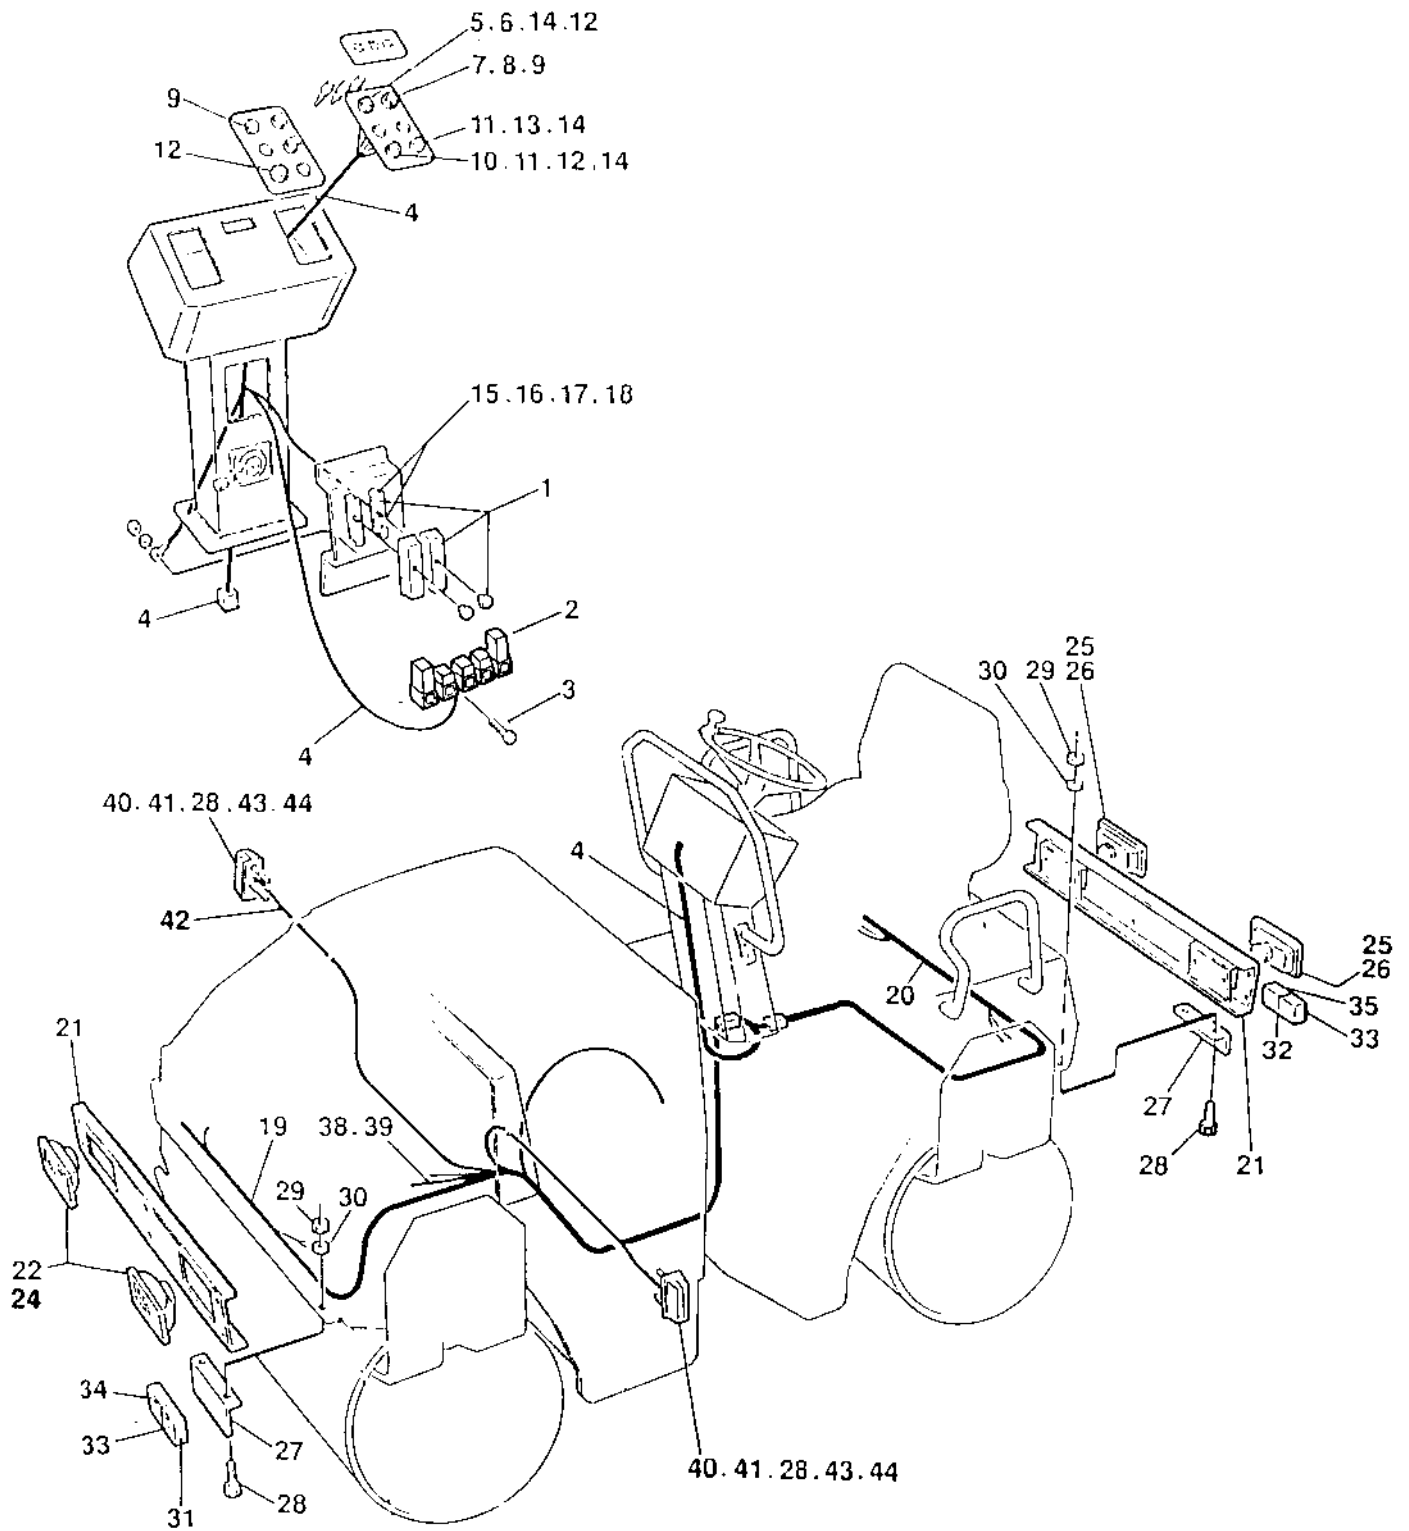


Driving & side direction lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
43	600002		4	Washer	
44	923976		4	Nut	

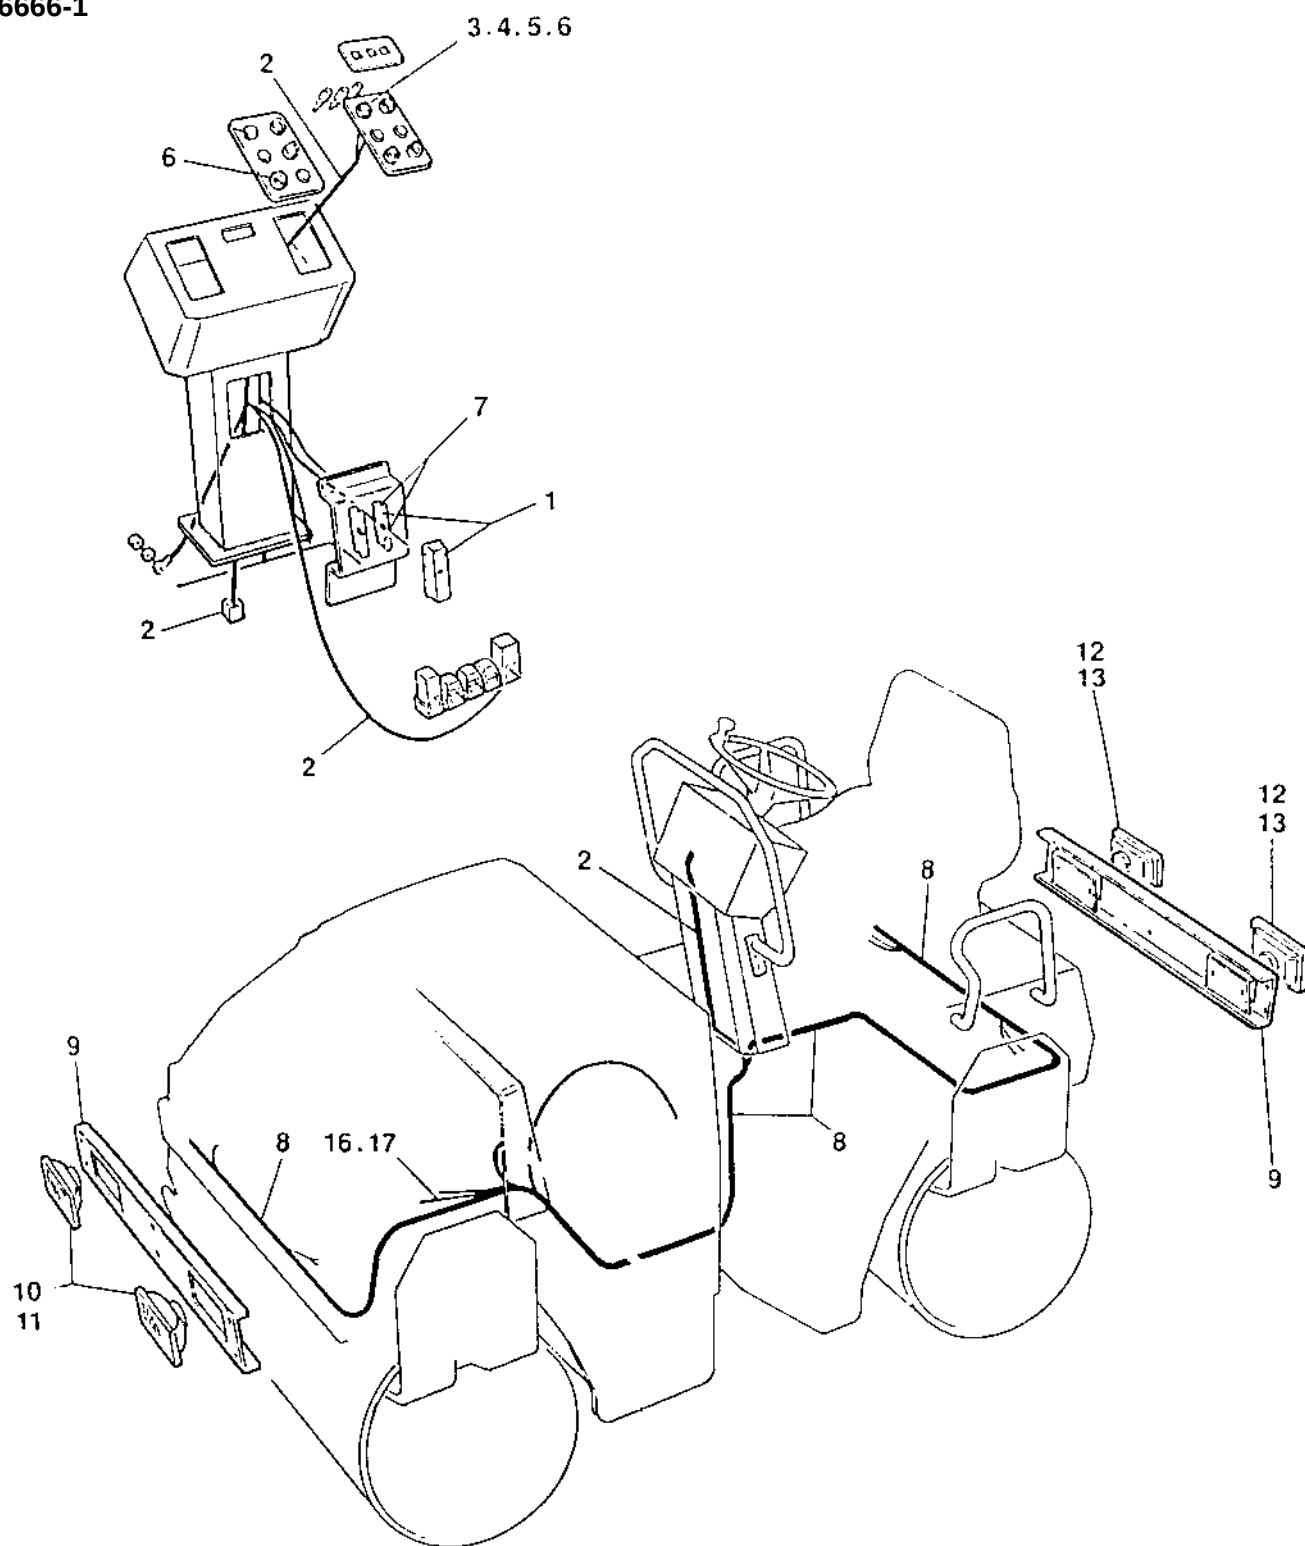

Working lights


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901256		1	Fuse box Up to 601X2184	
	901256		1	Fuse box From 601X2190 Up to 601X2208	
	903820		1	Fuse box From 601X2185 Up to 601X2189	D
	903820		1	Fuse box From 601X2209	D
2	358102	A	1	Cable harness	
3	932055	A	1	Switch	D
4	930165		1	Contact block	D
5	985012	B	1	Bulb	D
6	930163	C	3	Contact piece	D
7	901227		2	Fuse 10A	D
8	376113	A	1	Cable harness	
9	357667	3	2	Lights bracket Up to 60112795	
	357667	3	2	Lights bracket From 60112797 Up to 601X3256	
	371561	4	2	Lights bracket From 60112796 Up to 60112796	
	371561	4	2	Lights bracket From 601X3257	
10	902227	E	2	Work lamp	
11	901369	F	2	Bulb 55w H3	B
12	902227	G	2	Work lamp	
13	901369	H	2	Bulb 55w H3	B
16	904229		1	Washer 8,4x16x1,5	
17	586003		1	Lock nut M8	
3)	Right asym., excluding machines originally delivered to France				
4)	Right asym., including machines originally delivered to France				
A)	Work lights				
B)	Switch				
C)	Small				
E)	H3, front				
F)	H3, head light, front				
G)	H3, rear				
H)	H3, rear light				

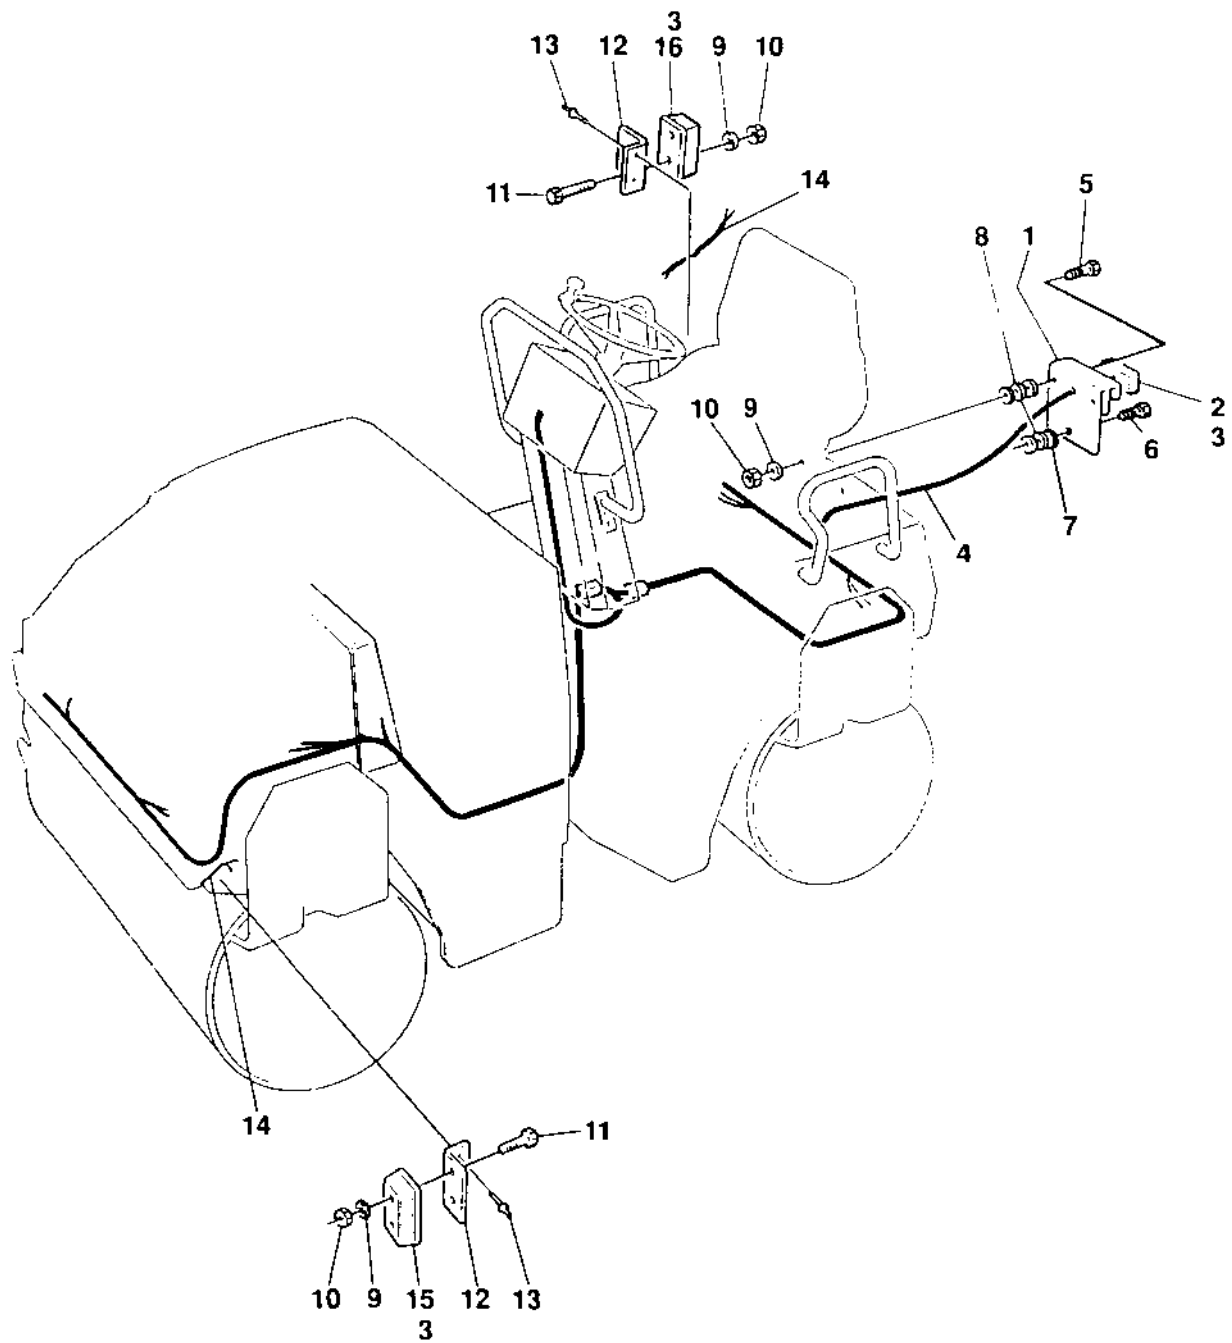

Licence plate light, parking lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355797		1	Licence plate holder	
2	929455		1	Licence plate light	
3	985013	A	5	Bulb 12V,5W	B
4	355829	B	1	Cable harness	
5	533032		3	Screw	
6	535010		1	Screw	
7	615042		1	Conical spring washer	
8	570003		3	Nut	
9	600003		23	Washer	
10	586001		11	Lock nut M5	
11	508020		8	Screw	
12	358564		4	Lamp socket	
13	624027		8	Rivet	
14	903081	C	4	Cable	
	909152		4	.Rubber grommet	
15	903078	D	2	Position light	
16	903079	E	2	Position light	

- A) Turn/position light
- B) Licence plate light
- C) Position light
- D) Front
- E) Rear

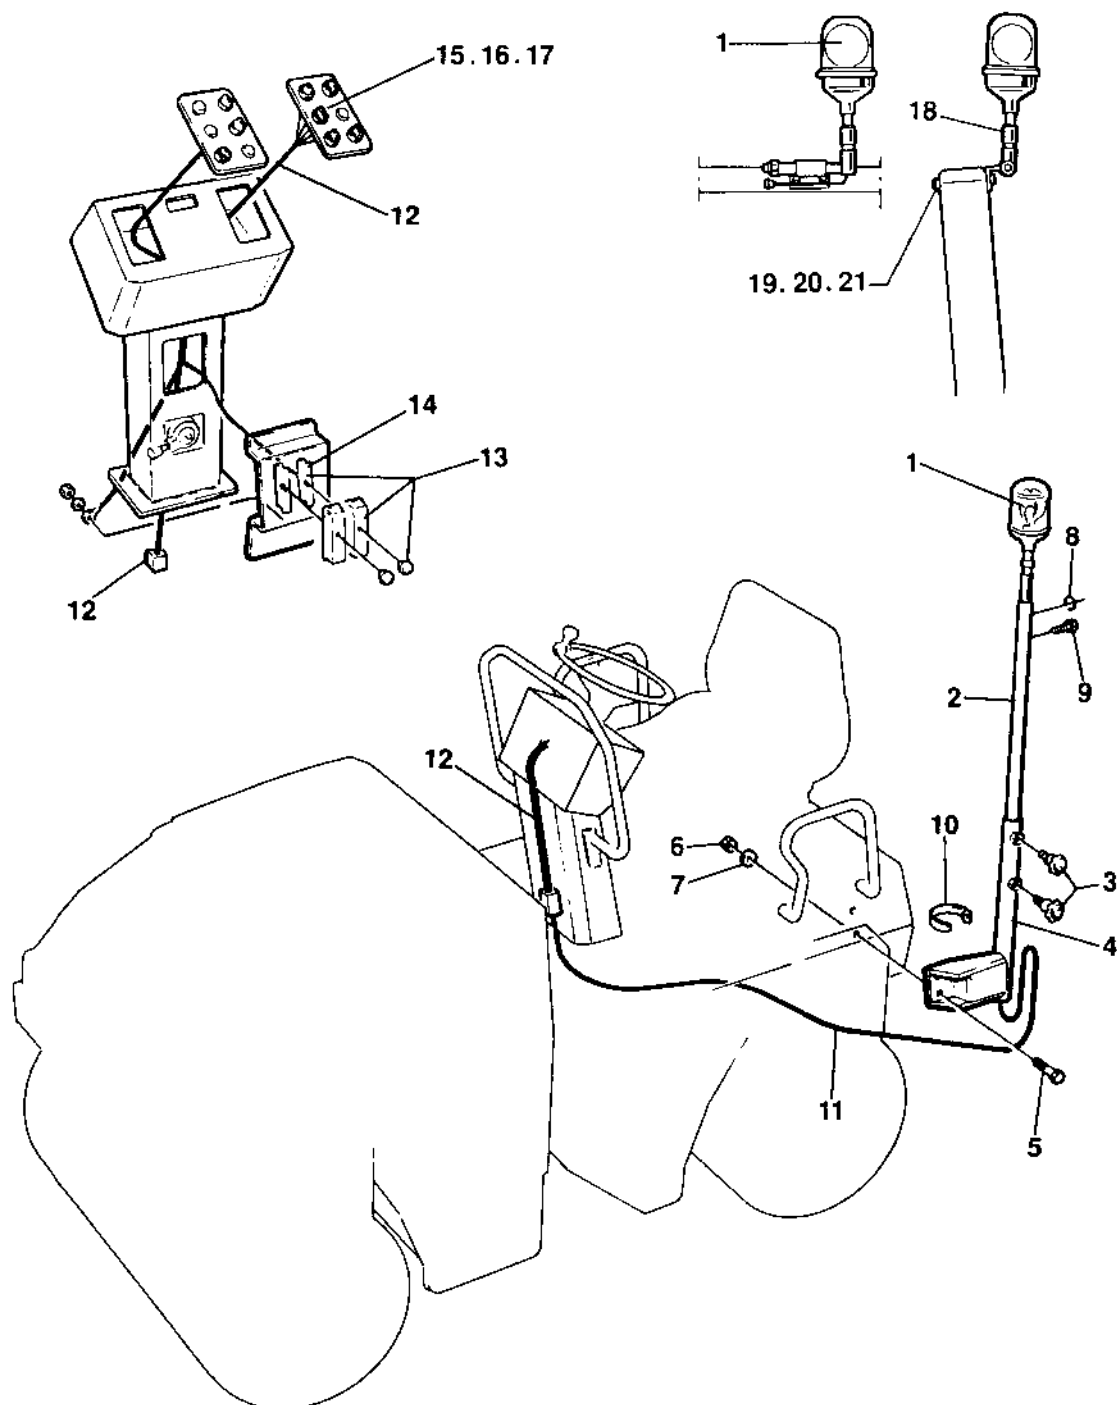


Rotating beacon

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	999011	A	1	Rotating beacon	D
	902803		1	.Lens Orange	B
	985126	C	1	.Bulb	B
2	357663	1	1	Lamp holder	
3	499162	1	2	Wing screw	
4	357679	1	1	Lamp holder	
5	500028	1	2	Screw M10-1,5x25 8,8	
6	586018	1	2	Lock nut M10	
7	600008	1	2	Washer	
8	909152	1	1	Rubber grommet	
9	500044		1	Screw M6x8	
10	313041		N	Cable ties L=186 mm	
11	357666		1	Cable harness	
12	357668	2	1	Cable harness	
13	901256	2	1	Fuse box Up to 601X2184	
	901256	2	1	Fuse box From 601X2190 Up to 601X2208	
	903820	2	1	Fuse box From 601X2185 Up to 601X2189	D
	903820	2	1	Fuse box From 601X2209	D
14	901227		1	Fuse 10A	D
15	930166	C	1	Switch	D
16	985012	E	1	Bulb	D
17	930165		1	Contact block	D
18	358452	3	1	Lamp holder	
19	500237	3	2	Screw	
20	586003	3	2	Lock nut M8	
21	904229	3	2	Washer 8,4x16x1,5	


- 1) Not valid for rollers with rops
 2) Existing on rollers with driving lights
 3) Valid only for rollers with rops
 A) CPL, orange
 C) Rot. beacon
 E) Switch

Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Drivers platform Up to 601X3599 (Page 270)	
120				Drivers platform From 601X3600 (Page 274)	
150				Control panel From 601X3600 Up to 601X6577 (Page 276)	
				Control panel From 601X6578 (Page 278)	
170				Arm rests, seat belt, laterally adjusting Up to 601X3599 (Page 280)	
175				Arm rests, seat belt, laterally adjusting From 601X3600 (Page 282)	
180				Comfort drivers seat, laterally adjusting and seat belt Up to 601X5732 (Page 284)	
185				Comfort drivers seat, laterally adjusting and seat belt From 601X5733 (Page 286)	
190				Bench (Page 288)	
200				Engine and forward/reverse controls DEUTZ Up to 60111740 (Page 290)	
210				Engine and forward/reverse controls DEUTZ From 60111741 Up to 60113599 (Page 292)	
220				Engine and forward/reverse controls DEUTZ From 60113600 (Page 294)	
250				Engine and forward/reverse controls ISUZU Up to 60123599 (Page 296)	
260				Engine and forward/reverse controls ISUZU From 60123600 (Page 298)	
300				F/r controls dual, control panel, mounted (Page 300)	
350				F/r control dual left side, platform mounted (Page 302)	
400				Rops and fops (Page 304)	

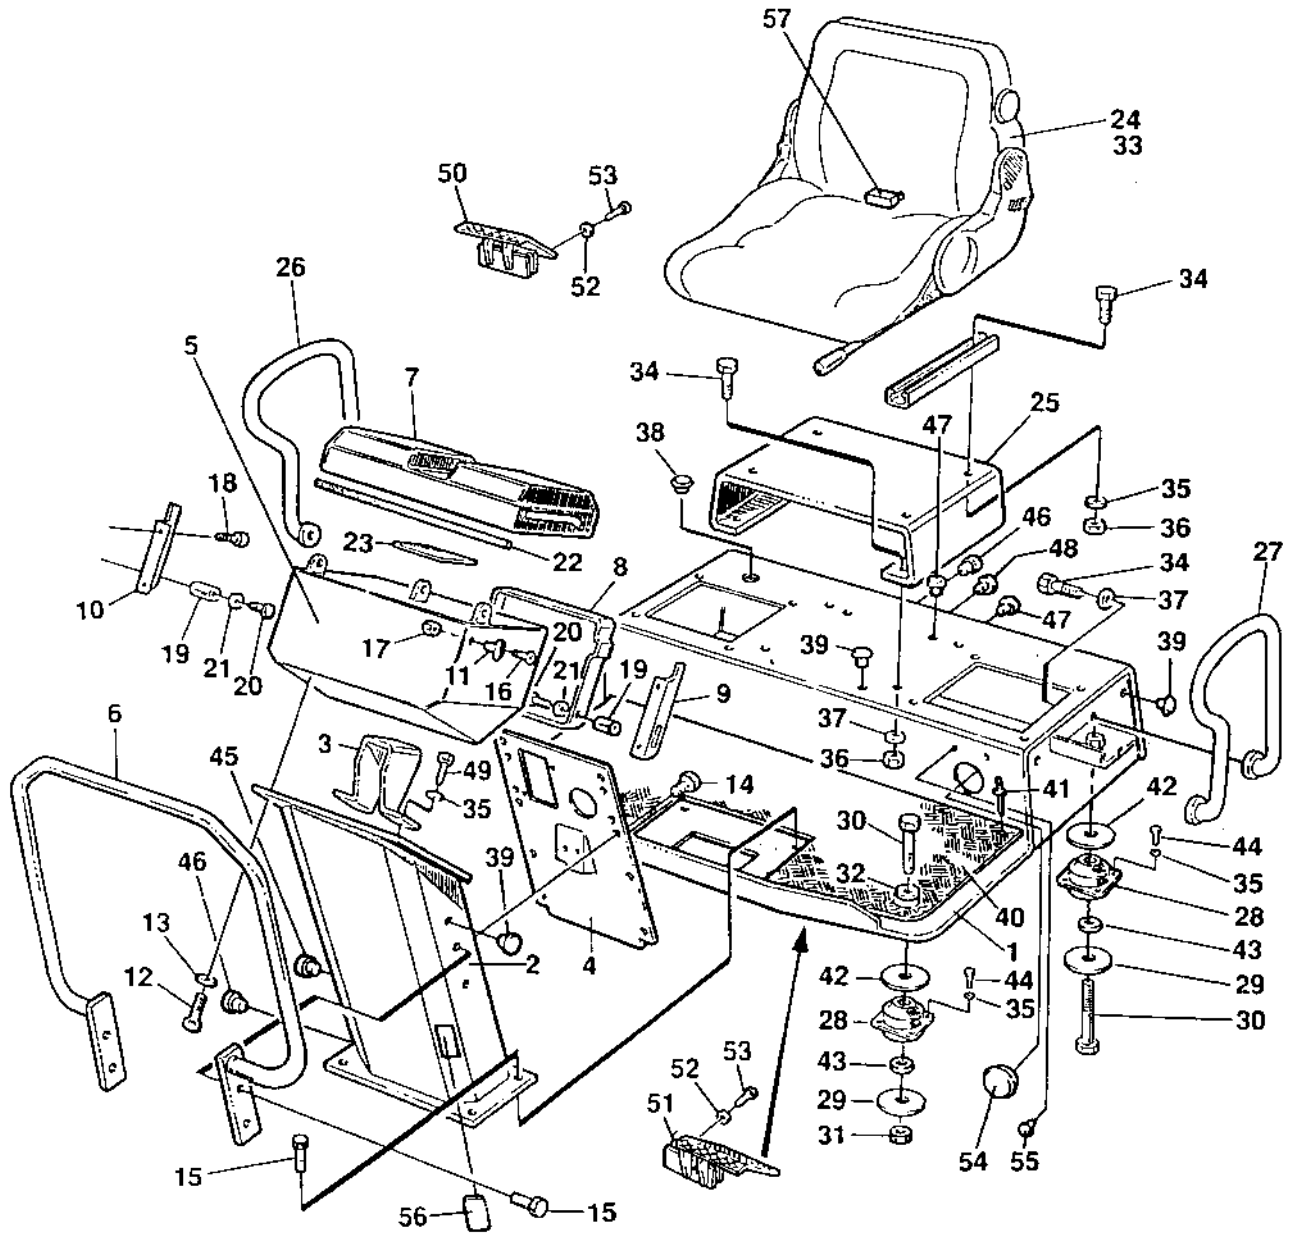

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358213		1	Platform	
2	357311		1	Control panel Up to 601X0167	
	358142		1	Control panel From 601X0168	
3	357316		1	Bracket	
4	357317		1	Cover Up to 601X0167	
	358143		1	Cover From 601X0168	
5	357320		1	Instrument box	
6	357330	A	1	Hand rail	D
7	357424		1	Cover	
8	357425		1	Instruction book holder	
9	357426	C	1	Cover holder	
10	357427	D	1	Cover holder	
11	357855		2	Bushing	
12	500040		4	Screw M6-1x20 8,8	
13	600004		4	Washer	
14	541702		8	Screw M6x12	
15	500509		8	Screw	
16	924875		2	Screw M6x35	
17	586002		2	Lock nut M6	
18	901767		4	Screw	
19	902163		2	Parallel pin	
20	902164		2	Screw	
21	929602		4	Washer	
22	902379	E	1XL	Edge trim	
23	902159	F	1XL	Rubber strip	
24	357170	G	1	Seat	
	212408	H	1	.Sliding rail	D
25	357406		1	Seat frame	
26	357407	D	1	Hand rail	D
27	357408	C	1	Hand rail	D
28	902797	4	4	Shock absorber	D
	358187	5	4	Shock absorber	D
29	358232	1	4	Washer	
	345666	2	4	Washer	
30	500117	1	4	Screw M12x80H 8,8	
	500135	2	4	Screw	
31	586019	1	2	Lock nut M12	
	586021	2	2	Nut M16	
32	600009	1	2	Washer	
	600011	2	2	Washer	
33	348331		1	Seat cover	D
34	500020		12	Screw M8-1,25x22 8,8	
35	600006	I	24	Washer	
36	586003		4	Lock nut M8	
1)	With M12-screw through shock absorber				
2)	With M16-screw through shock absorber				
4)	With M12-screw through shock absorber, for rollers with cab				
5)	With M16-screw through shock absorber, for rollers with cab				
A)	Front				
C)	Left				
D)	Right				
E)	L=0,350 m				
F)	L=90 mm				
G)	Black galon				
H)	One pair				
I)	8 pcs with 2				

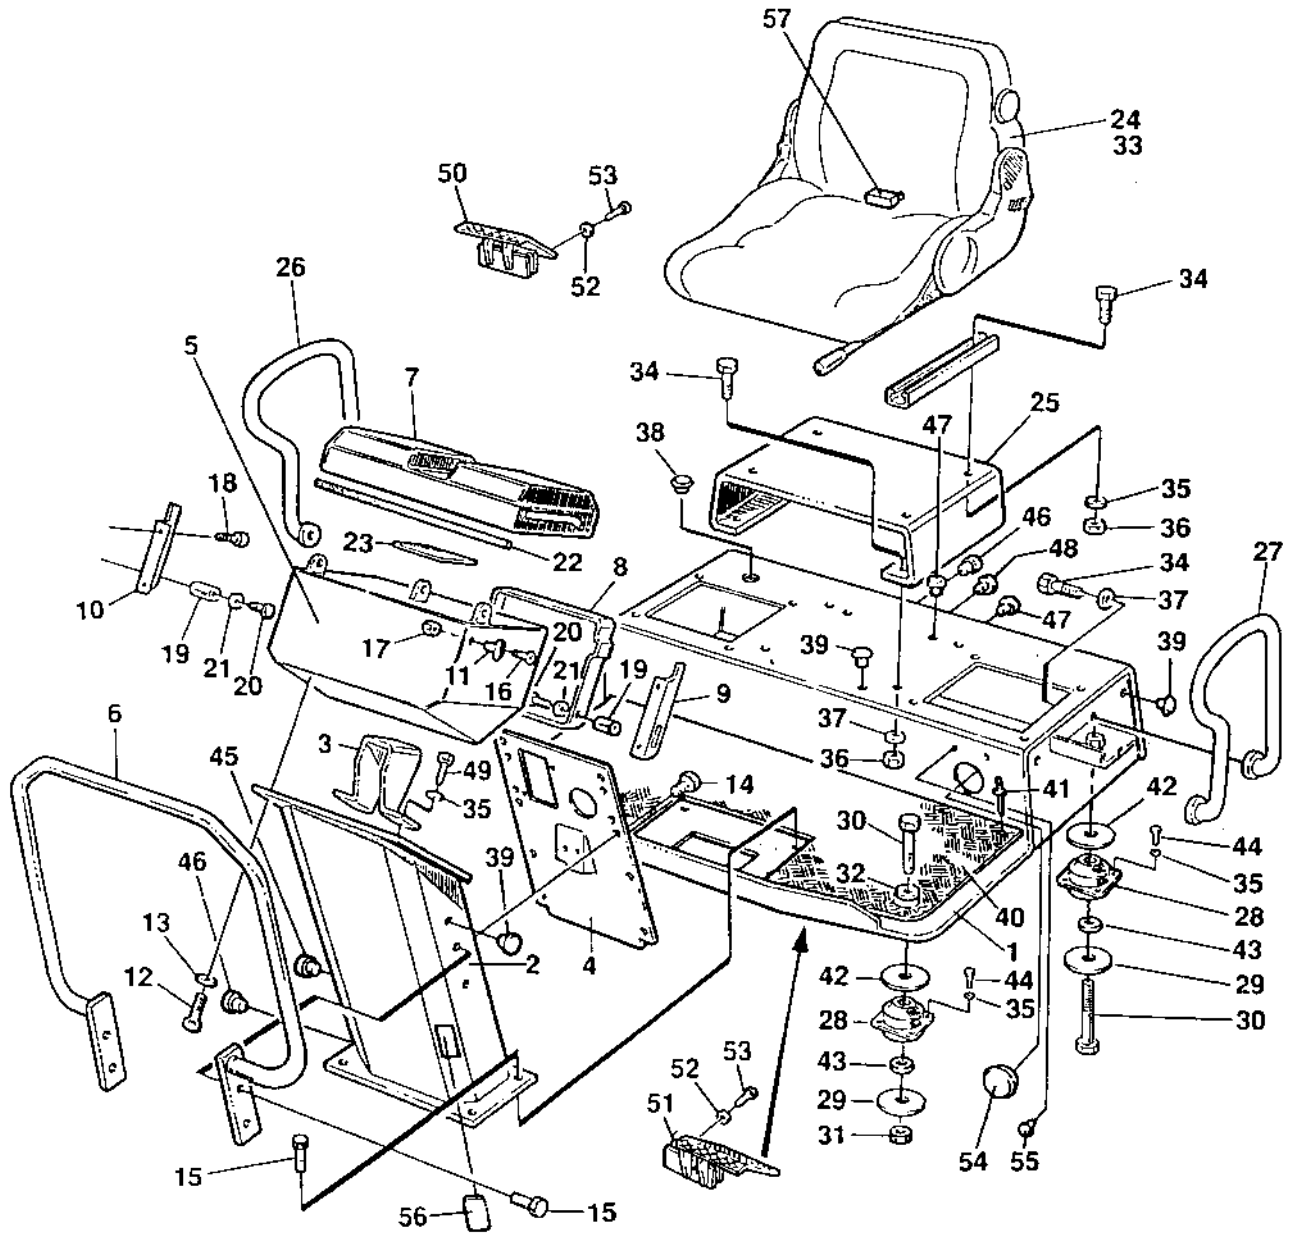

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
37	615043		8	Conical spring washer 8,4x18x2	
38	923844		1	Plug	
39	902919		8	Plug	
40	358089	J	1	Floor mat	D
41	902569	K	4	Rivet	
42	615096	1	N	Washer	
43	902892	1	4	Washer	
44	500019	1	16	Screw M8-1,25x16 8,8	
45	902890		1	Plug	
46	900986		3	Plug	
47	926215		7	Plug	
48	902804		2	Plug	
49	500021		4	Screw M8-1,25x25 8,8	
50	358892	L	1	Step	
51	358891	M	1	Step	
52	570005	J	4	Nut M8	
53	923874	J	4	Screw M8x25	
54	345870		1	Plug	
55	901274		2	Plug	
56	903727		1	Plug	
57	908974		1	Seat switch	D


1) With M12-screw through shock absorber

J) Option

K) To floor mat

L) Option, left


M) Option, right

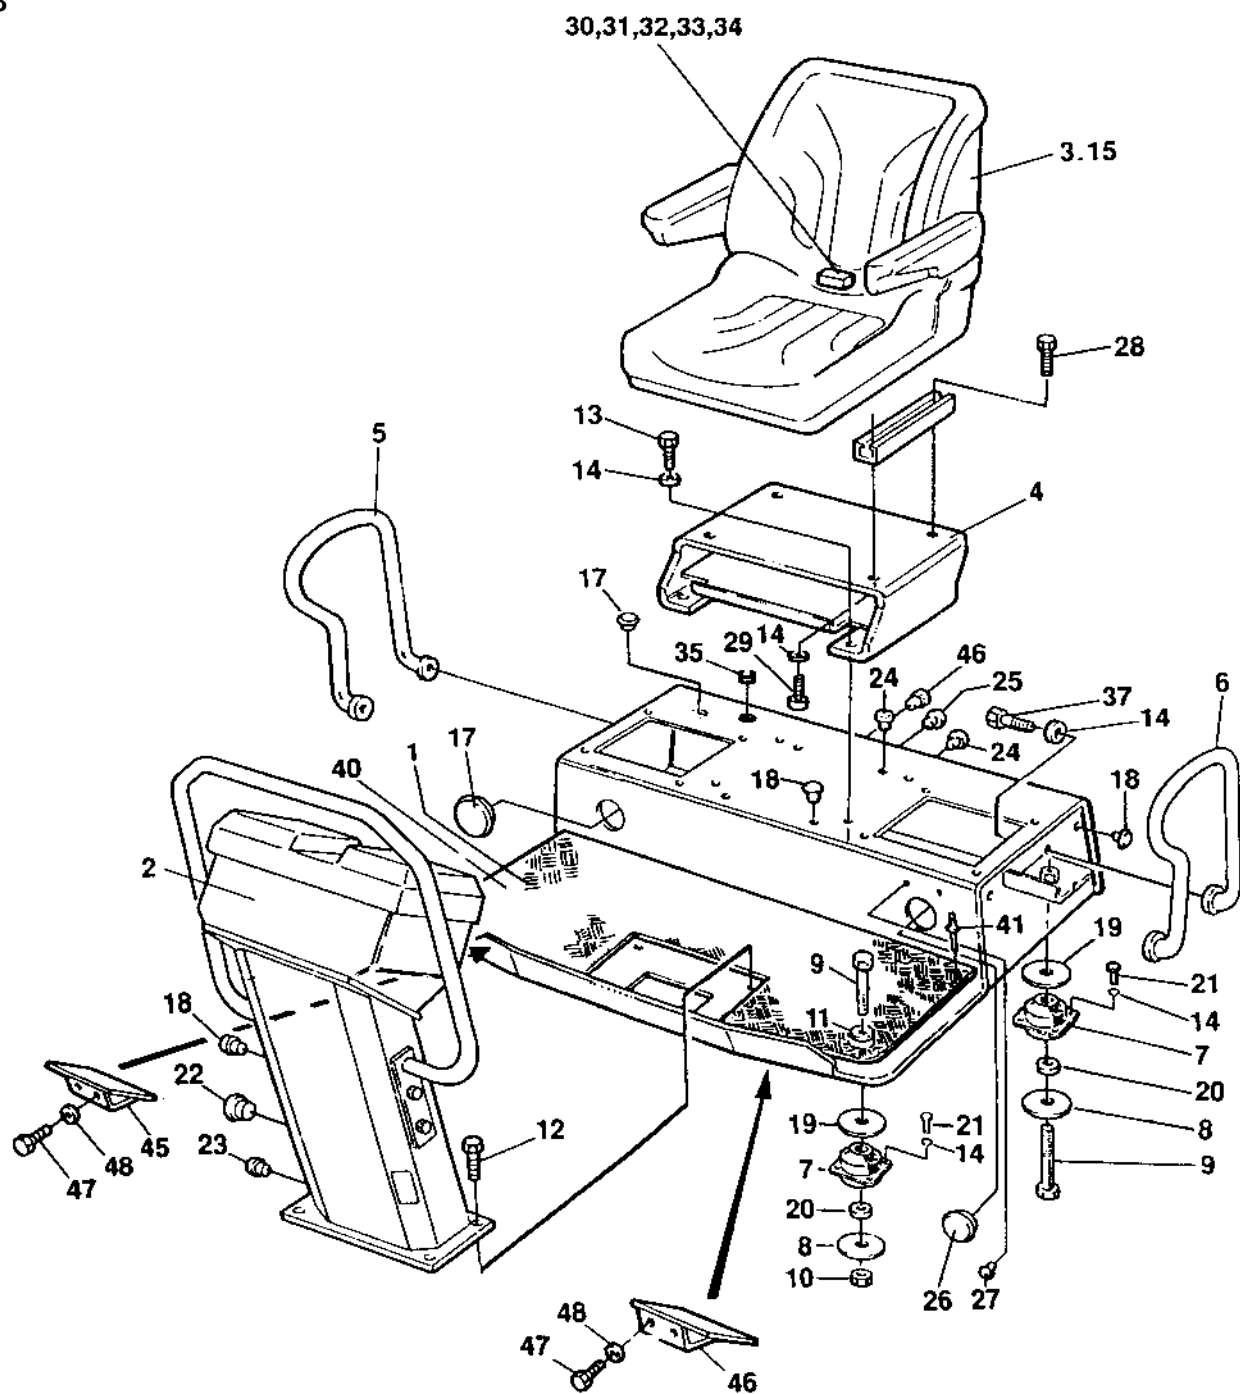

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358213		1	Platform	
2			1	Control panel Up to 601X6577 (Page 276)	
			1	Control panel From 601X6578 (Page 278)	
3	372570	A,2	1	Seat	
	909535	B	1	.Sliding rail	D
	909536	C	1	.Sliding rail	D
	936283		1	.Seat switch	D
4	372523		1	Seat frame	
5	357407	B	1	Hand rail	D
6	357408	C	1	Hand rail	D
7	902797	1	4	Shock absorber	D
8	358232		4	Washer	
9	500117		4	Screw M12x80H 8,8	
10	586019		2	Lock nut M12	
11	904231		2	Washer 13x24x2	
12	500509		4	Screw	
13	500020		4	Screw M8-1,25x22 8,8	
14	904229		22	Washer 8,4x16x1,5	
15	348331		1	Seat cover	D
17	923844		2	Plug	
18	902919		8	Plug	
19	615096		N	Washer	
20	902892		4	Washer	
21	500019		16	Screw M8-1,25x16 8,8	
22	902890		1	Plug	
23	900986		2	Plug	
24	926215		7	Plug	
25	902804		2	Plug	
26	904131		1	Plug	
27	901274		2	Plug	
28	508092		4	Screw M8-1,25x20H 8,8	
29	500053		2	Screw M8-1,25x20 8,8	
30	904218		1	Holder	
31	533070		1	Screw	
32	570003		1	Nut	
33	904281		1	Washer 5,3x10x1	
34	313041		1	Cable ties L=186 mm	
35	903192		1	Grommet	
36	904225		1	Plug	
37	500020		4	Screw M8-1,25x22 8,8	
40	358089	D	1	Floor mat	D
41	902569	E	4	Rivet	
45	374132	F	1	Step	
46	374133	G	1	Step	
47	600006	D	4	Washer	
48	500053	D	4	Screw M8-1,25x20 8,8	


- 1) For rollers with cab
- 2) Without arm rests.
- A) Black galon
- B) Left
- C) Right
- D) Option
- E) To floor mat
- F) Option, right
- G) Option, left

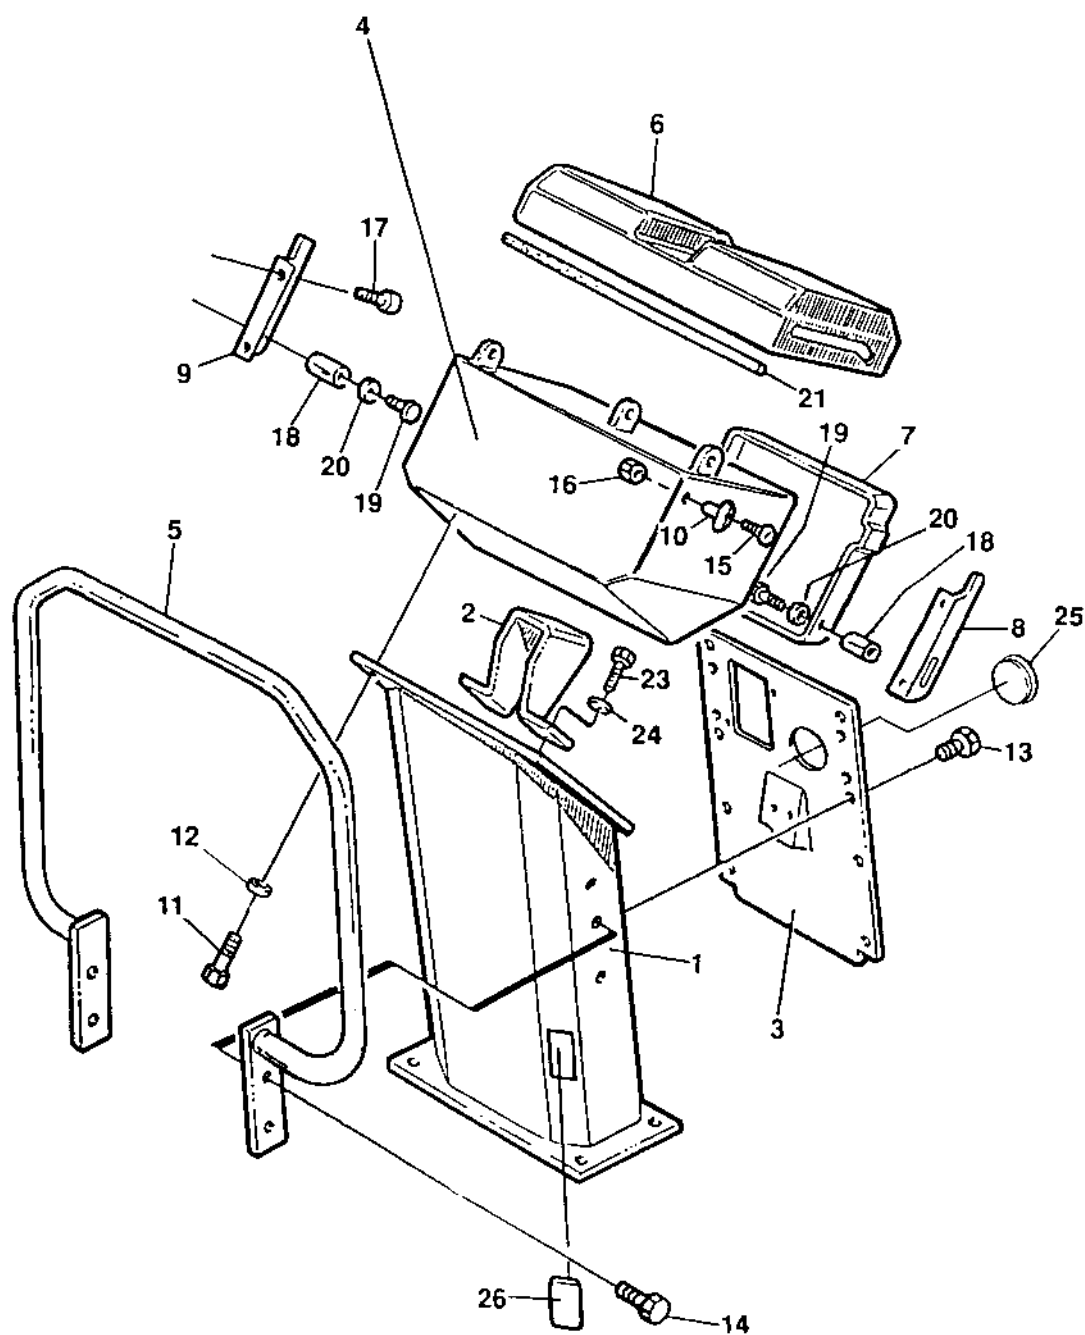

Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358142		1	Control panel	
2	357316		1	Bracket	
3	358143		1	Cover	
4	357320		1	Instrument box	
5	357330	A	1	Hand rail	D
6	357424		1	Cover	
7	357425		1	Instruction book holder	
8	357426	B	1	Cover holder	
9	357427	C	1	Cover holder	
10	357855		2	Bushing	
11	500040		4	Screw M6-1x20 8,8	
12	904228		4	Washer 6,4x12x1,5	
13	541702		8	Screw M6x12	
14	500509		4	Screw	
15	924875		2	Screw M6x35	
16	586002		2	Lock nut M6	
17	901767		4	Screw	
18	902163		2	Parallel pin	
19	902164		2	Screw	
20	929602		4	Washer	
21	902379	D	1XL	Edge trim	
23	500021		4	Screw M8-1,25x25 8,8	
24	904640		4	Washer 8,4x22x3	
25	345870		1	Plug	
26	903727		1	Plug	

- A) Front
 B) Left
 C) Right
 D) L=0,350 m

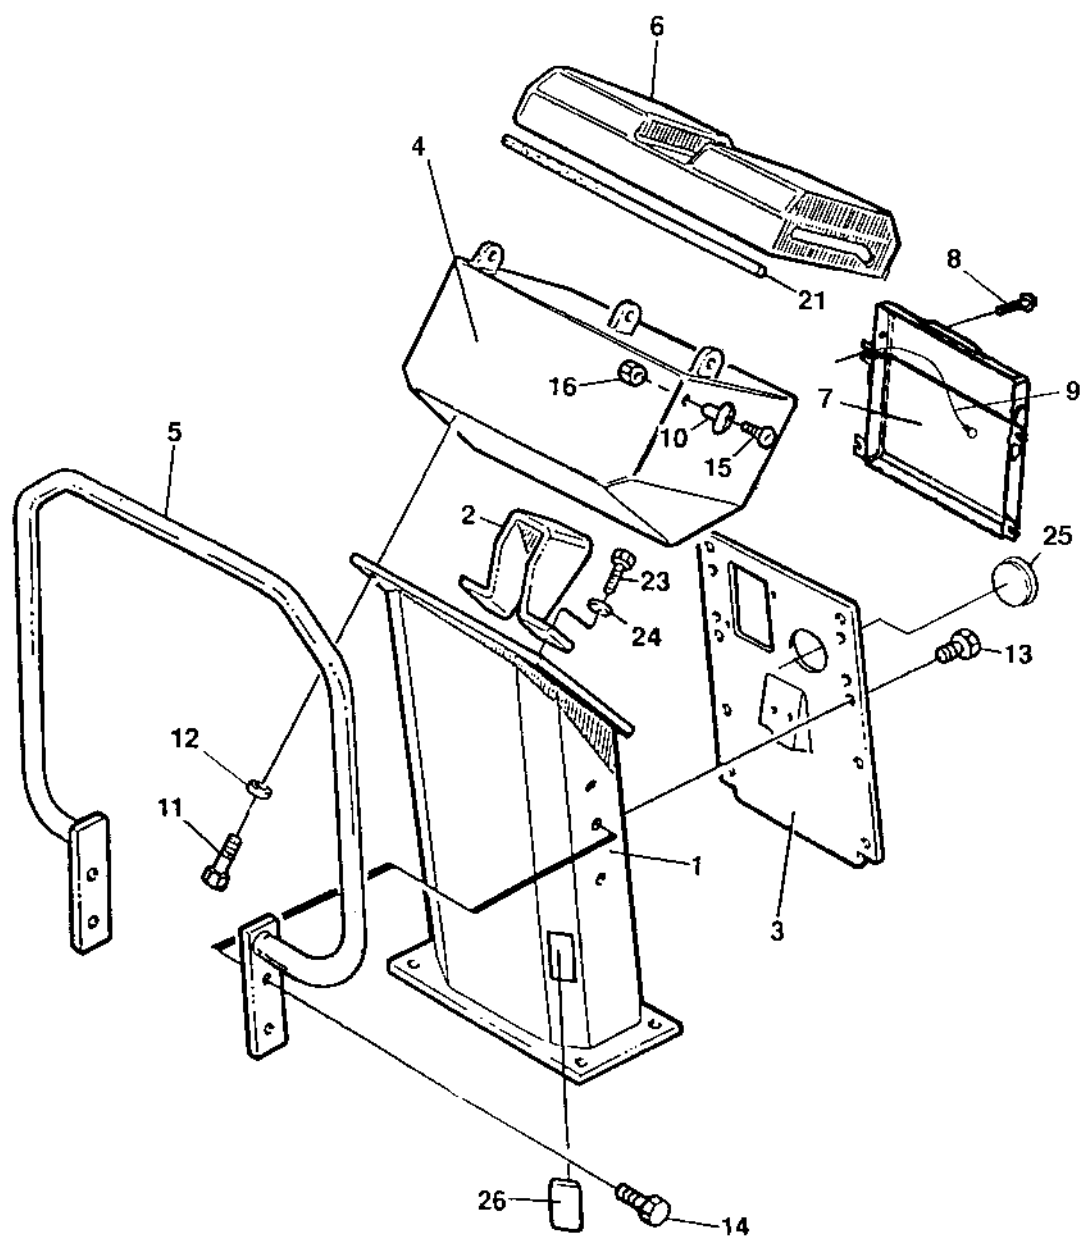


Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358142		1	Control panel	
2	357316		1	Bracket	
3	358143		1	Cover	
4	357320		1	Instrument box	
5	357330	A	1	Hand rail	D
6	357424		1	Cover	
7	383705		1	Instruction book holder	
8	791226		4	Screw	
9	357643		1	Wire	
10	357855		2	Bushing	
11	500040		4	Screw M6-1x20 8,8	
12	904228		4	Washer 6,4x12x1,5	
13	541702		8	Screw M6x12	
14	500509		4	Screw	
15	924875		2	Screw M6x35	
16	586002		2	Lock nut M6	
21	902379	D	1XL	Edge trim	
23	500021		4	Screw M8-1,25x25 8,8	
24	904640		4	Washer 8,4x22x3	
25	345870		1	Plug	
26	903727		1	Plug	

A) Front
D) L=0,350 m

Arm rests, seat belt, laterally adjusting

15585-2

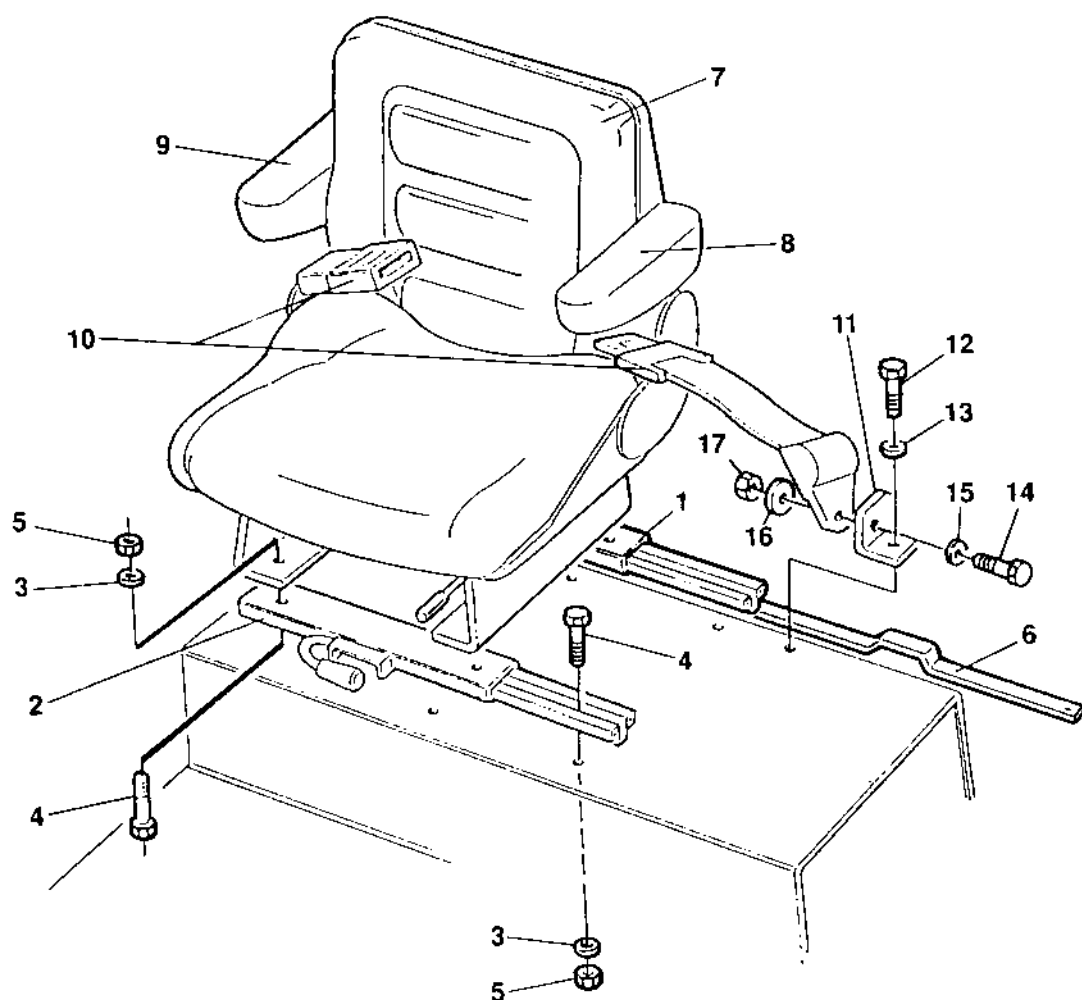


Arm rests, seat belt, laterally adjusting

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357672	A	1	Adjusting rail	
2	357671	B	1	Adjusting rail	
3	600006		8	Washer	
4	902446		8	Screw	
5	586003		8	Lock nut M8	
6	358484		1	Holder plate	
7	344374	C	1	Drivers seat, black galon	
	357170		1	.Seat	
	212408		1	..Sliding rail	D
8	212115	D	1	.Arm rest	D
9	212114	E	1	.Arm rest	D
10	358480		1	Seat belt	
11	358481		2	Bracket	
12	500029		2	Screw M10-1,5x30 8,8	
13	615044		4	Conical spring washer	D
14	500030		2	Screw M10-1,5x35H 8,8	
15	600008		4	Washer	
16	603006		2	Washer	
17	586018		2	Lock nut M10	

- A) Rear
- B) Front
- C) CPL with armrests
- D) Left
- E) Right

Arm rests, seat belt, laterally adjusting

16672

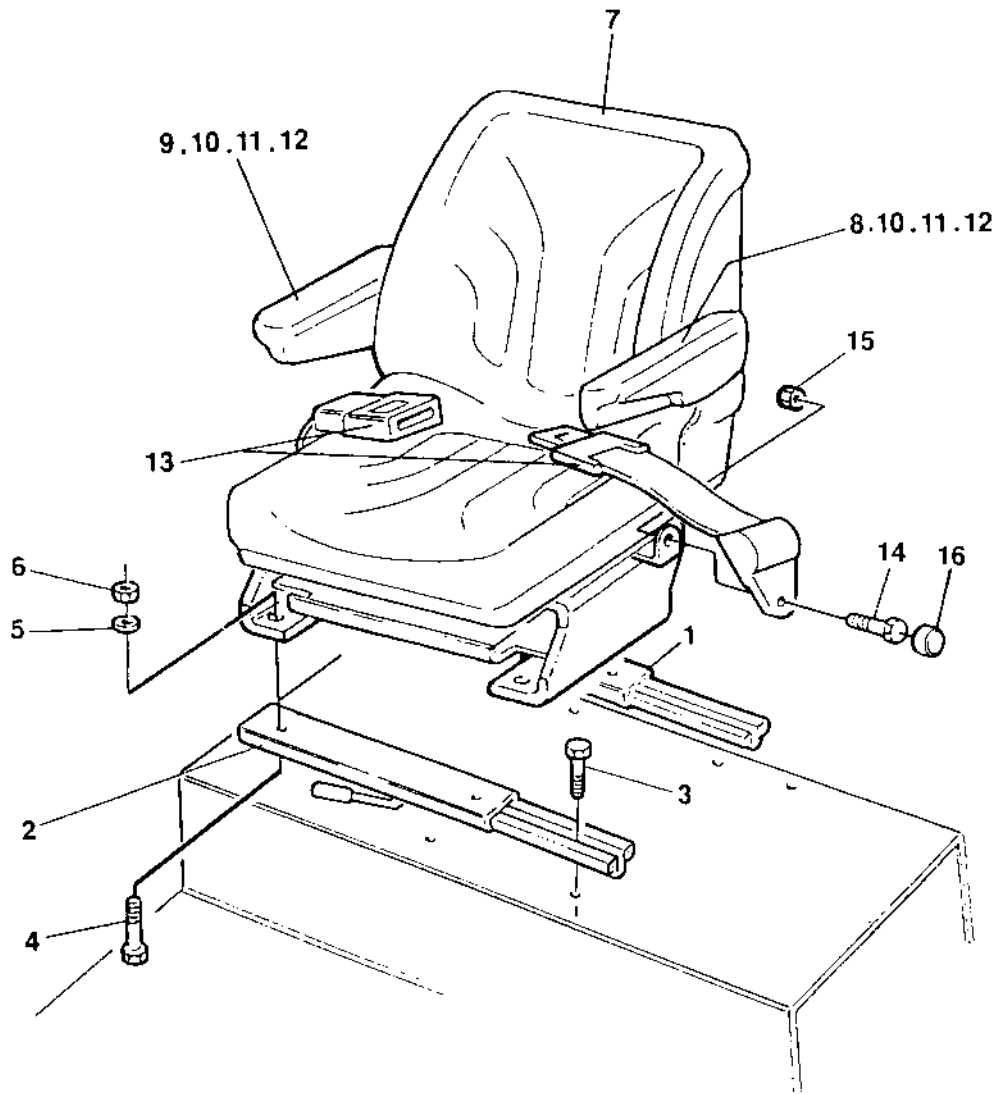


Arm rests, seat belt, laterally adjusting

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	909536	A	1	Sliding rail	D
2	909535	B	1	Sliding rail	D
3	508092		4	Screw M8-1,25x20H 8,8	
4	500020		4	Screw M8-1,25x22 8,8	
5	904229		4	Washer 8,4x16x1,5	
6	586003		4	Lock nut M8	
7	372570		1	Seat	
8	372696	C	1	Arm rest	
9	372697	D	1	Arm rest	
10	513013	E	4	Screw	
11	570005	E	4	Nut M8	
12		E	4	Nut protection	
13	372659	F	1	Seat belt	
	383200	G	1	Safety belt	
14			2	.Screw	
15			2	.Nut	
16			2	.Protection cap	

- A) Rear
- B) Front
- C) Left
- D) Right
- E) Incl in armrests
- F) CPL
- G) Option, 3 "

Comfort drivers seat, laterally adjusting and seat belt

16673

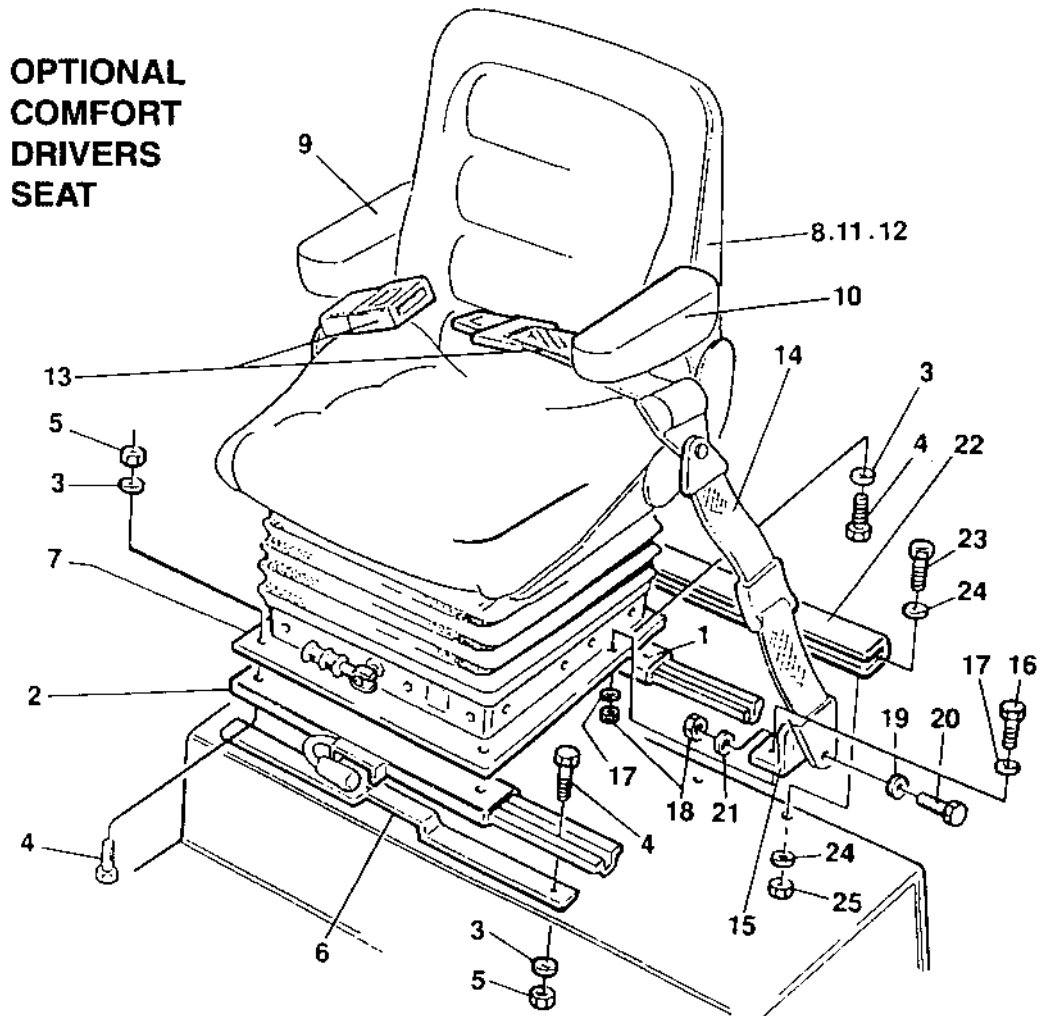


Comfort drivers seat, laterally adjusting and seat belt

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357672	A	1	Adjusting rail	
2	357671	B	1	Adjusting rail	
3	600006		8	Washer	
4	902446		8	Screw	
5	586003		8	Lock nut M8	
6	358484		1	Holder plate	
7	357725		1	Holder plate	
8	357670	C	1	Seat	
9	902992	D	1	.Arm rest	D
10	902994	E	1	.Arm rest	D
11	903376		1	.Damper	
12	357910		1	Seat protection	
13	358480		1	Seat belt	
14	358482		1	Seat belt	
15	358481		2	Bracket	
16	500029		2	Screw M10-1,5x30 8,8	
17	615044		4	Conical spring washer	D
18	586018		4	Lock nut M10	
19	603006		2	Washer	
20	500030		2	Screw M10-1,5x35H 8,8	
21	600008		4	Washer	
22	358483		1	Bracket	
23	500021		4	Screw M8-1,25x25 8,8	
24	600006		8	Washer	
25	586003		4	Lock nut M8	

- A) Rear
 B) Front
 C) Comfort, could be used without laterally adjusting rails
 D) Right
 E) Left

Comfort drivers seat, laterally adjusting and seat belt


CC102100700185

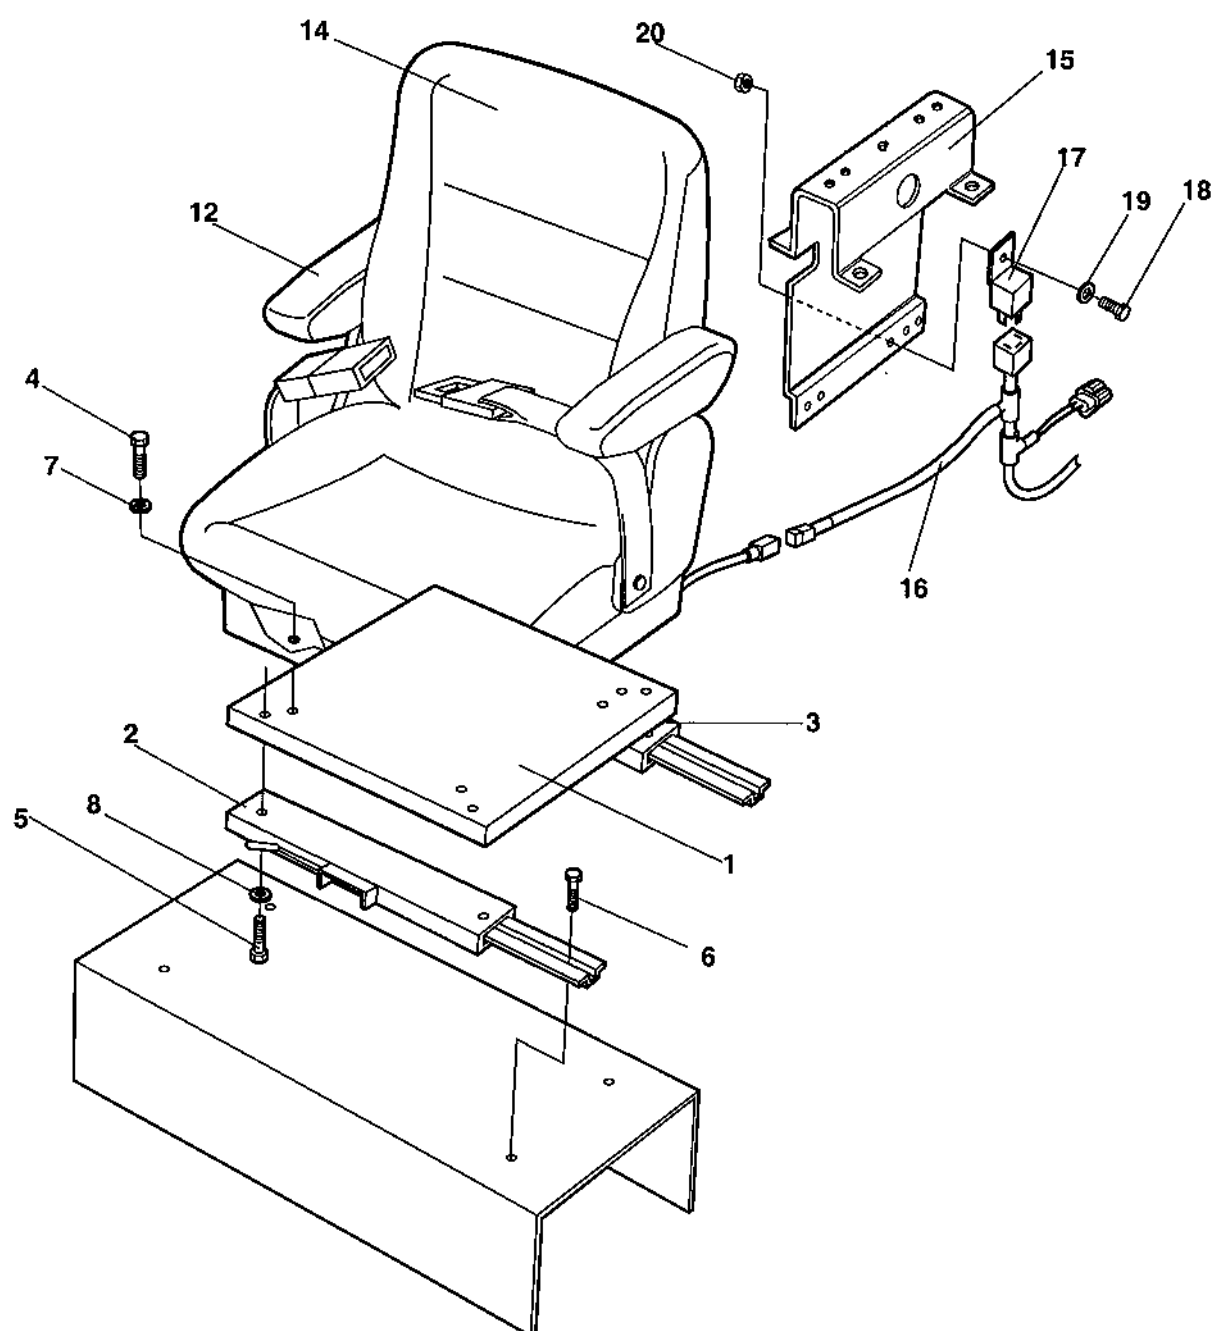

Comfort drivers seat, laterally adjusting and seat belt

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	382237		1	Bracket	
2	909535	A	1	Sliding rail	D
3	909536		1	Sliding rail	D
4	508005		6	Screw	
5	508005		4	Screw	
6	508092		4	Screw M8-1,25x20H 8,8	
7	904556		6	Washer 8,4x16x3,0	
8	904556		4	Washer 8,4x16x3,0	
9	903671		1	Seat belt	
	383200	B	1	Safety belt	
10	381750		1	Drivers seat	
11	938738		1	.Arm rest, left	
12	938739		1	.Arm rest, right	
13	938740		1	.Seat switch	
14	386075		1	Seat protection	
15		C	1	Framing	
16	384532		1	Cable harness	
17	905077		1	Relay	
18	500006		1	Screw M5x16	
19	904281		1	Washer 5,3x10x1	
20	570003		1	Nut	


- A) With handle
 B) Option, 3 "
 C) See section "Controls dual, control panel, mounted"

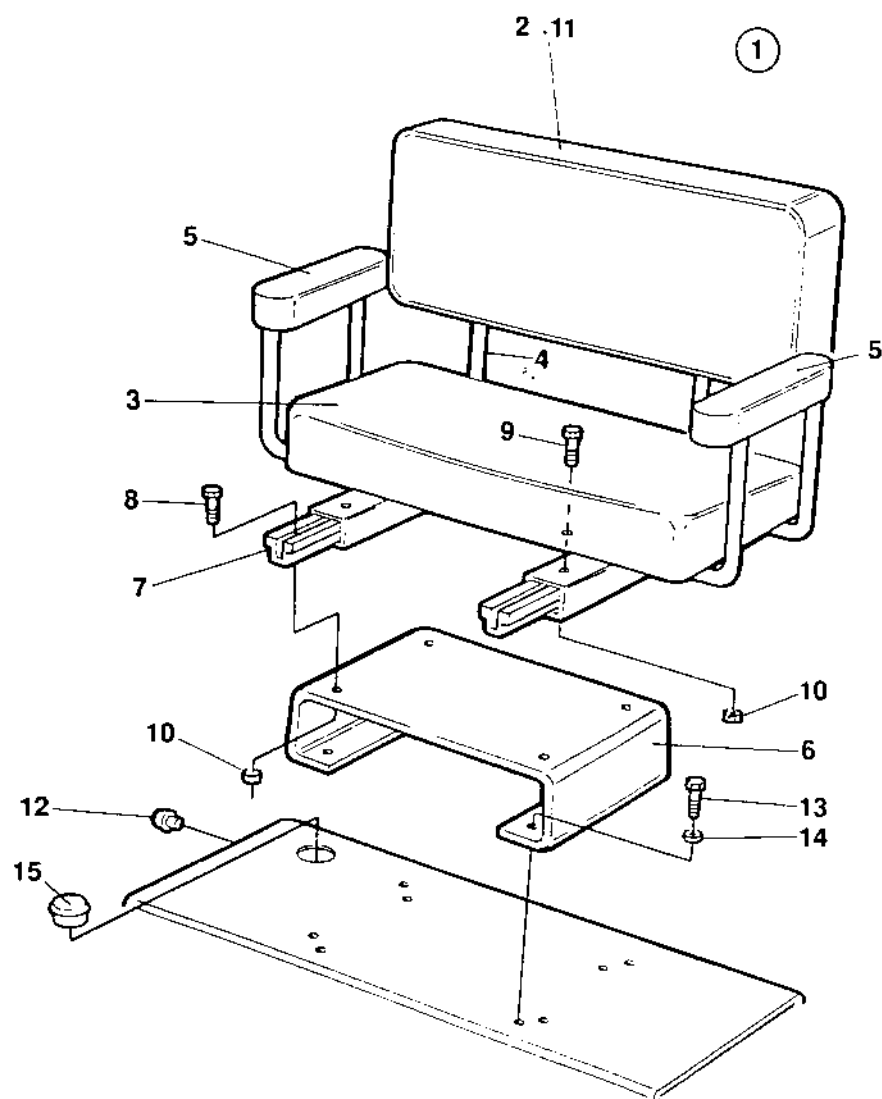

Bench

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	370678	A	1	Bench	
2	903073		1	.Back	
3	903072		1	.Seat	
4	903071		1	.Console	
5	909634		2	.Arm rest	
6	903070		1	.Seat frame	
7	903069	B	1	.Slide rail	D
8	902446		4	.Screw	
9	500022		4	.Screw M8-1,25x30 8,8	
10	586003		8	.Lock nut M8	
11	370764		1	Seat protection	
12	901274		4	Plug	
13	500020		4	Screw M8-1,25x22 8,8	
14	615043		4	Conical spring washer 8,4x18x2	
15	904136		1	Plug	


A) CPL
B) One pair

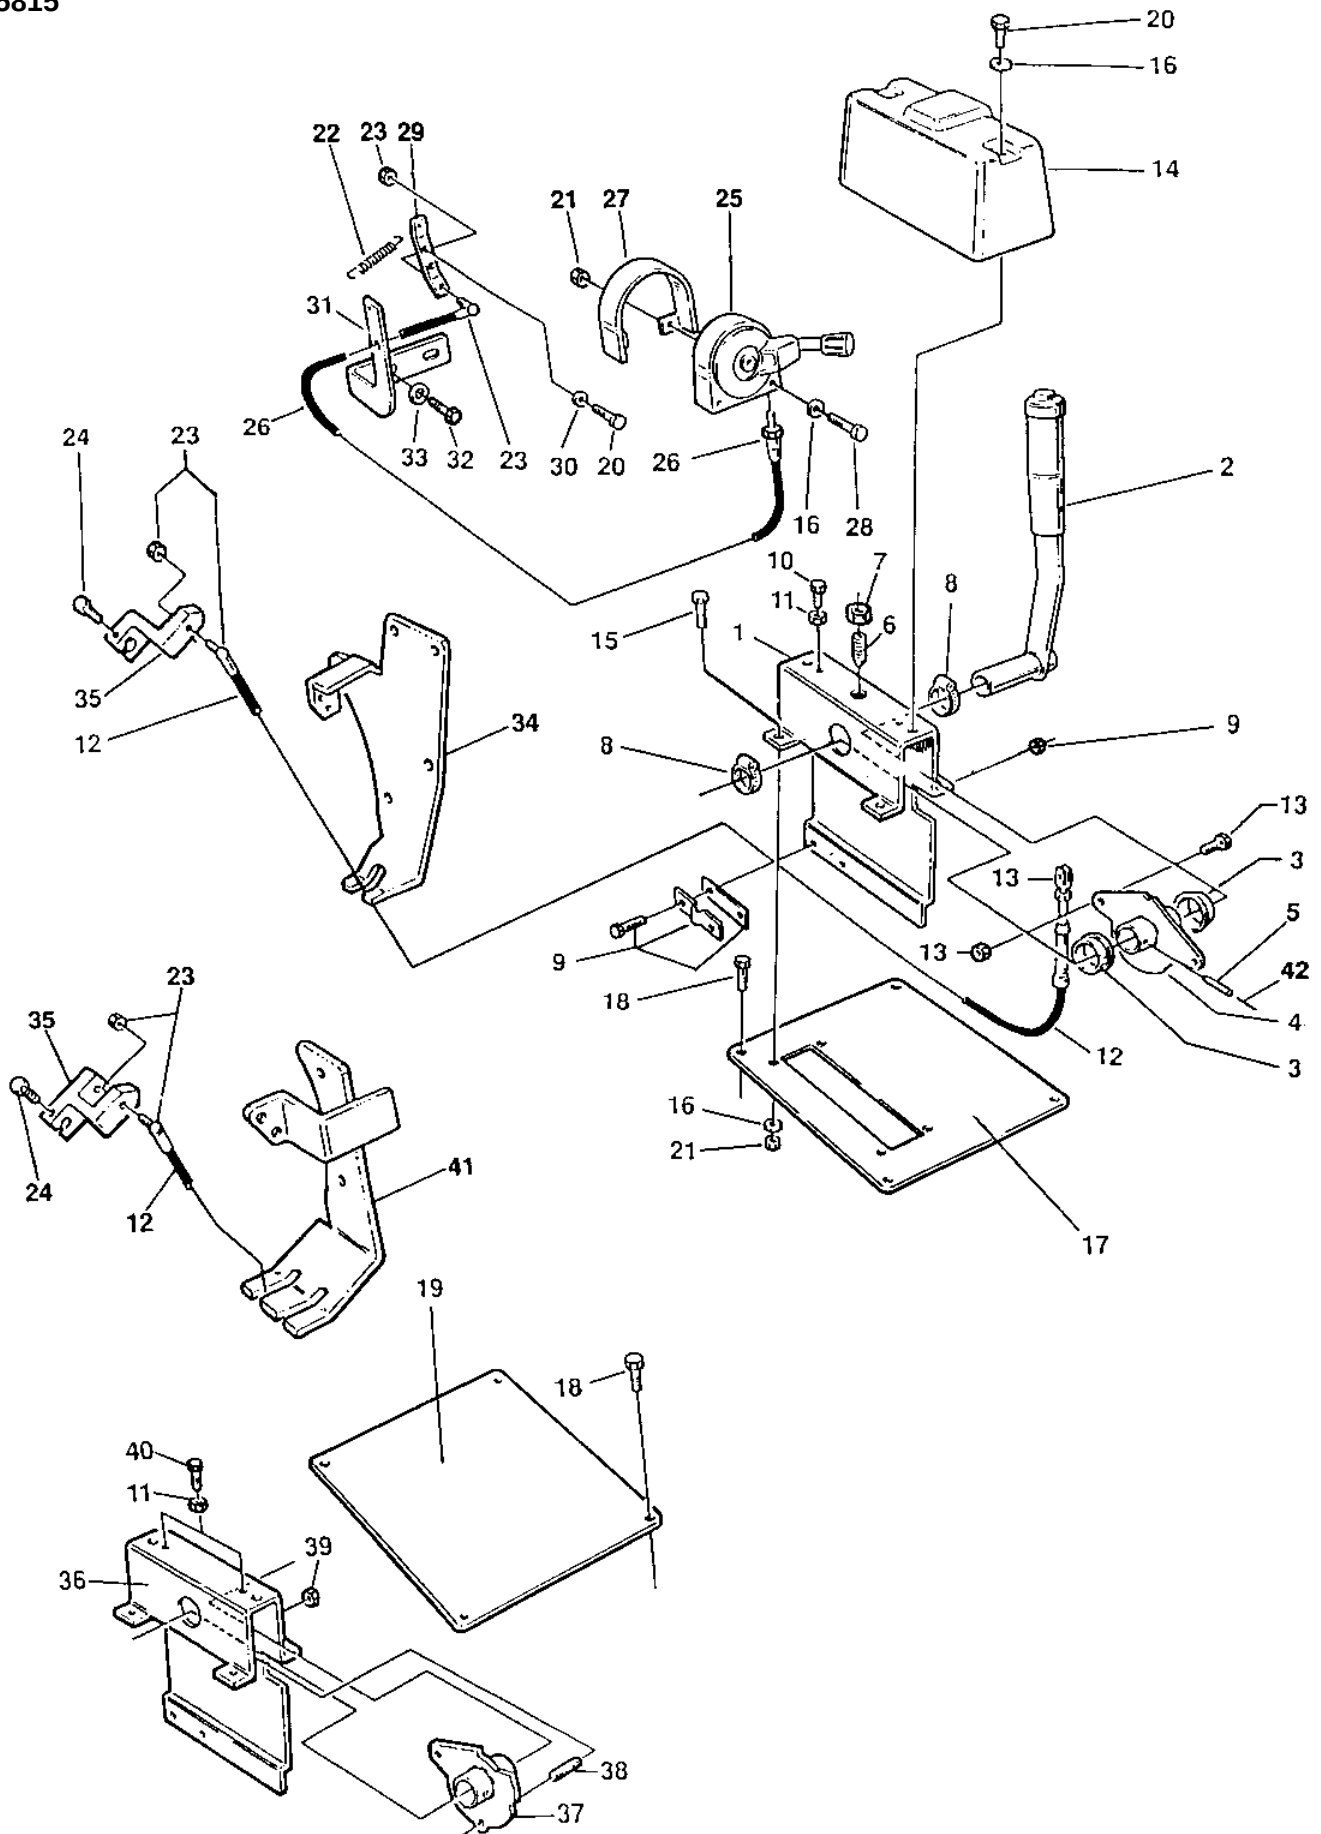

Engine and forward/reverse controls DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing From 60110391	
2	357501	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc From 60110391	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger From 60110391	D
7	573004		1	Nut From 60110391	
8	313035		2	Hose clamp	
9	902189		1	Bracket	
10	533038		2	Screw From 60110391	
11	570004		2	Nut M6	
12	902191	B	1	Control cable	D
13	416004		1	Fork	
14	357494		1	Cover	
15	500040		4	Screw M6-1x20 8,8	
16	600004		8	Washer	
17	357495	C	1	Control bracket	
18	500501		8	Screw	
19	357496	D	1	Cover plate	
20	500013		4	Screw M6-1x16 8,8	
21	586002		6	Lock nut M6	
22	357500		1	Spring	
23	416034		2	Ball joint	D
24	508020		1	Screw	
25	902192	E	1	Control	D
26	902193	E	1	Control cable	D
27	902194		1	Yoke Up to 60110362	
	902867		1	Snap plate From 60110363	
28	500061		2	Screw	
29	357498		1	Control lever	
30	615042		2	Conical spring washer	
31	357499		1	Control bracket	
32	500021		2	Screw M8-1,25x25 8,8	
33	615043		2	Conical spring washer 8,4x18x2	
34	358468		1	Control bracket From 60110343 Up to 60111079	
	359024		1	Control bracket From 60111080	
35	357497		1	Control lever Up to 60111079	
	359022		1	Control lever From 60111080	
36	902301		1	Framing Up to 60110390	
37	902302		1	Cam disc Up to 60110390	
38	902188		1	Spring loaded pin Up to 60110390	
39	927233		1	Nut Up to 60110390	
40	902190		2	Screw Up to 60110390	
41	357460		1	Control bracket Up to 60110342	
42	903395		1	Spirol pin	

- A) Right, for electrical equipment see section " Electrical equipment "
- B) F/R control
- C) Right
- D) Left
- E) Throttle

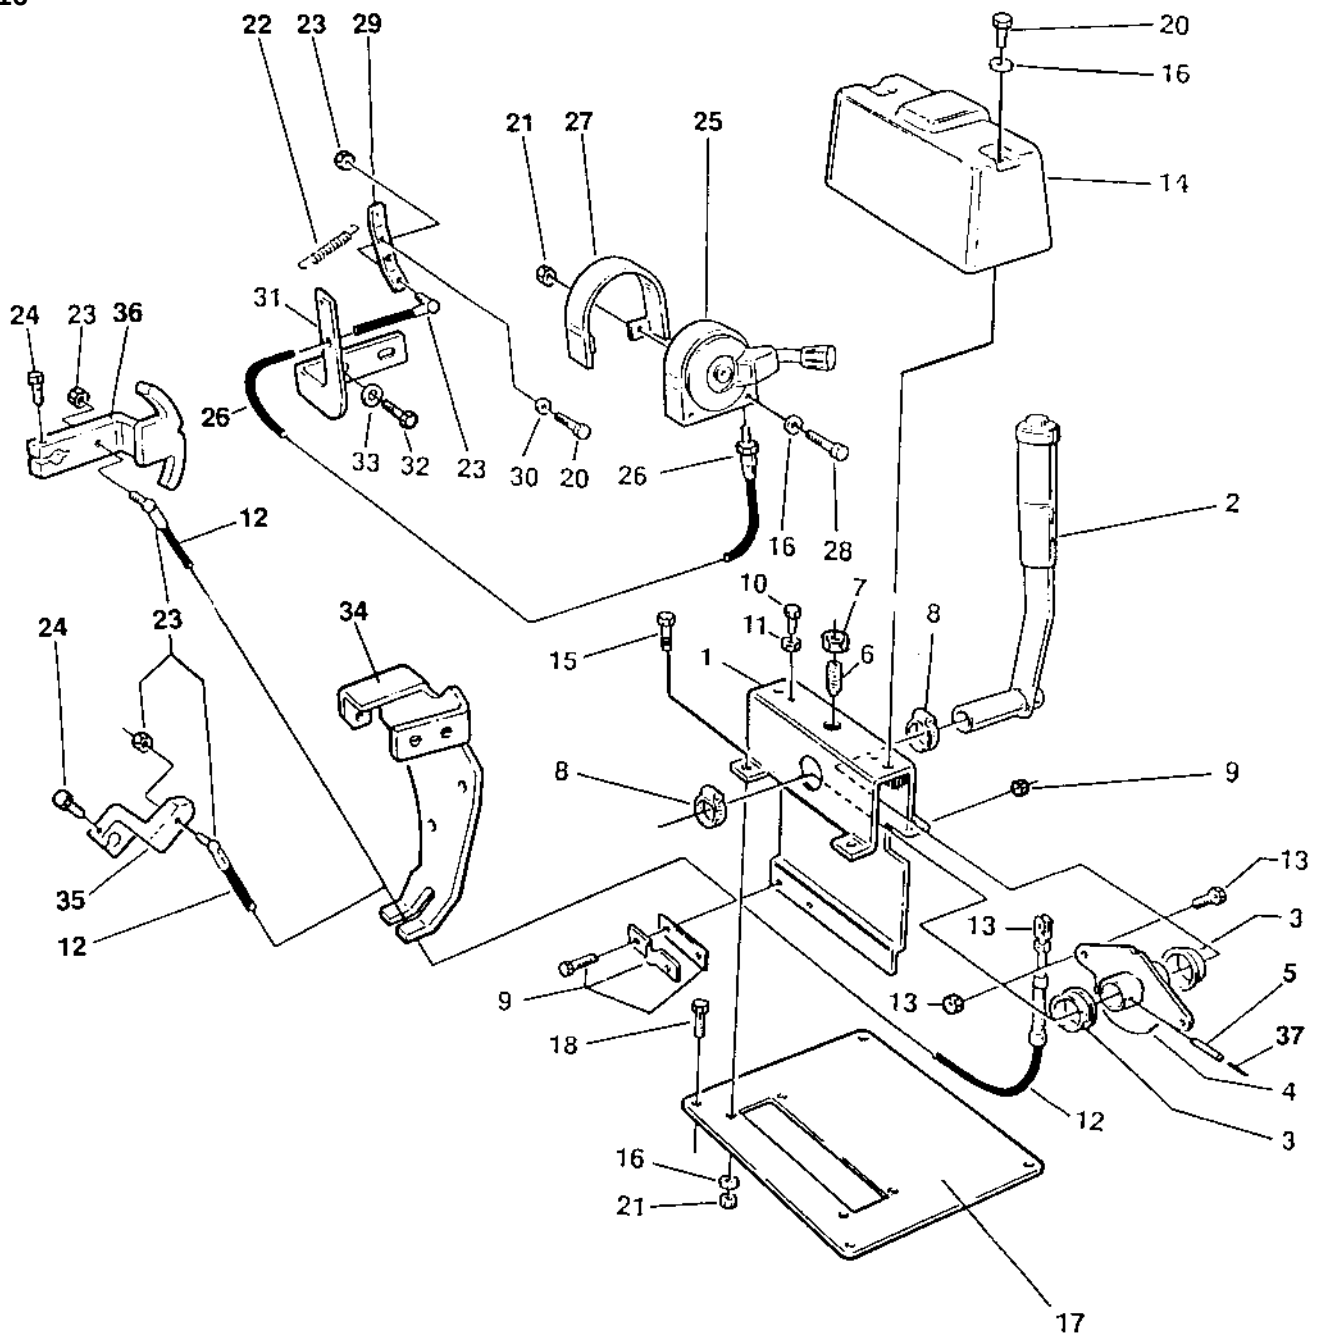

Engine and forward/reverse controls DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing	
2	357501	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger	D
7	573004		1	Nut	
8	313035		2	Hose clamp	
9	902189		1	Bracket	
10	533038		2	Screw	
11	570004		2	Nut M6	
12	902191	B	1	Control cable	D
13	416004		1	Fork	
14	357494		1	Cover	
15	500040		4	Screw M6-1x20 8,8	
16	600004		8	Washer	
17	357495	C	1	Control bracket	
18	500501		8	Screw	
19	357496	D	1	Cover plate	
20	500013		4	Screw M6-1x16 8,8	
21	586002		6	Lock nut M6	
22	357500		1	Spring	
23	416034		2	Ball joint	D
24	508020		1	Screw	
25	902192	E	1	Control	D
26	902193	E	1	Control cable	D
27	902867		1	Snap plate	
	374981	2	1	Snap plate From 60113372	
28	500061		2	Screw	
29	357498		1	Control lever	
30	615042		2	Conical spring washer	
31	357499		1	Control bracket	
32	500021		2	Screw M8-1,25x25 8,8	
33	615043		2	Conical spring washer 8,4x18x2	
34	370723		1	Control bracket	
35	359022		1	Control lever Up to 60112189	
36	371241		1	Control lever From 60112190	
37	903395		1	Spirol pin	

2) Option, dual frequency, available


A) Right, for electrical equipment see section " Electrical equipment "

B) F/R control

C) Right

D) Left


E) Throttle

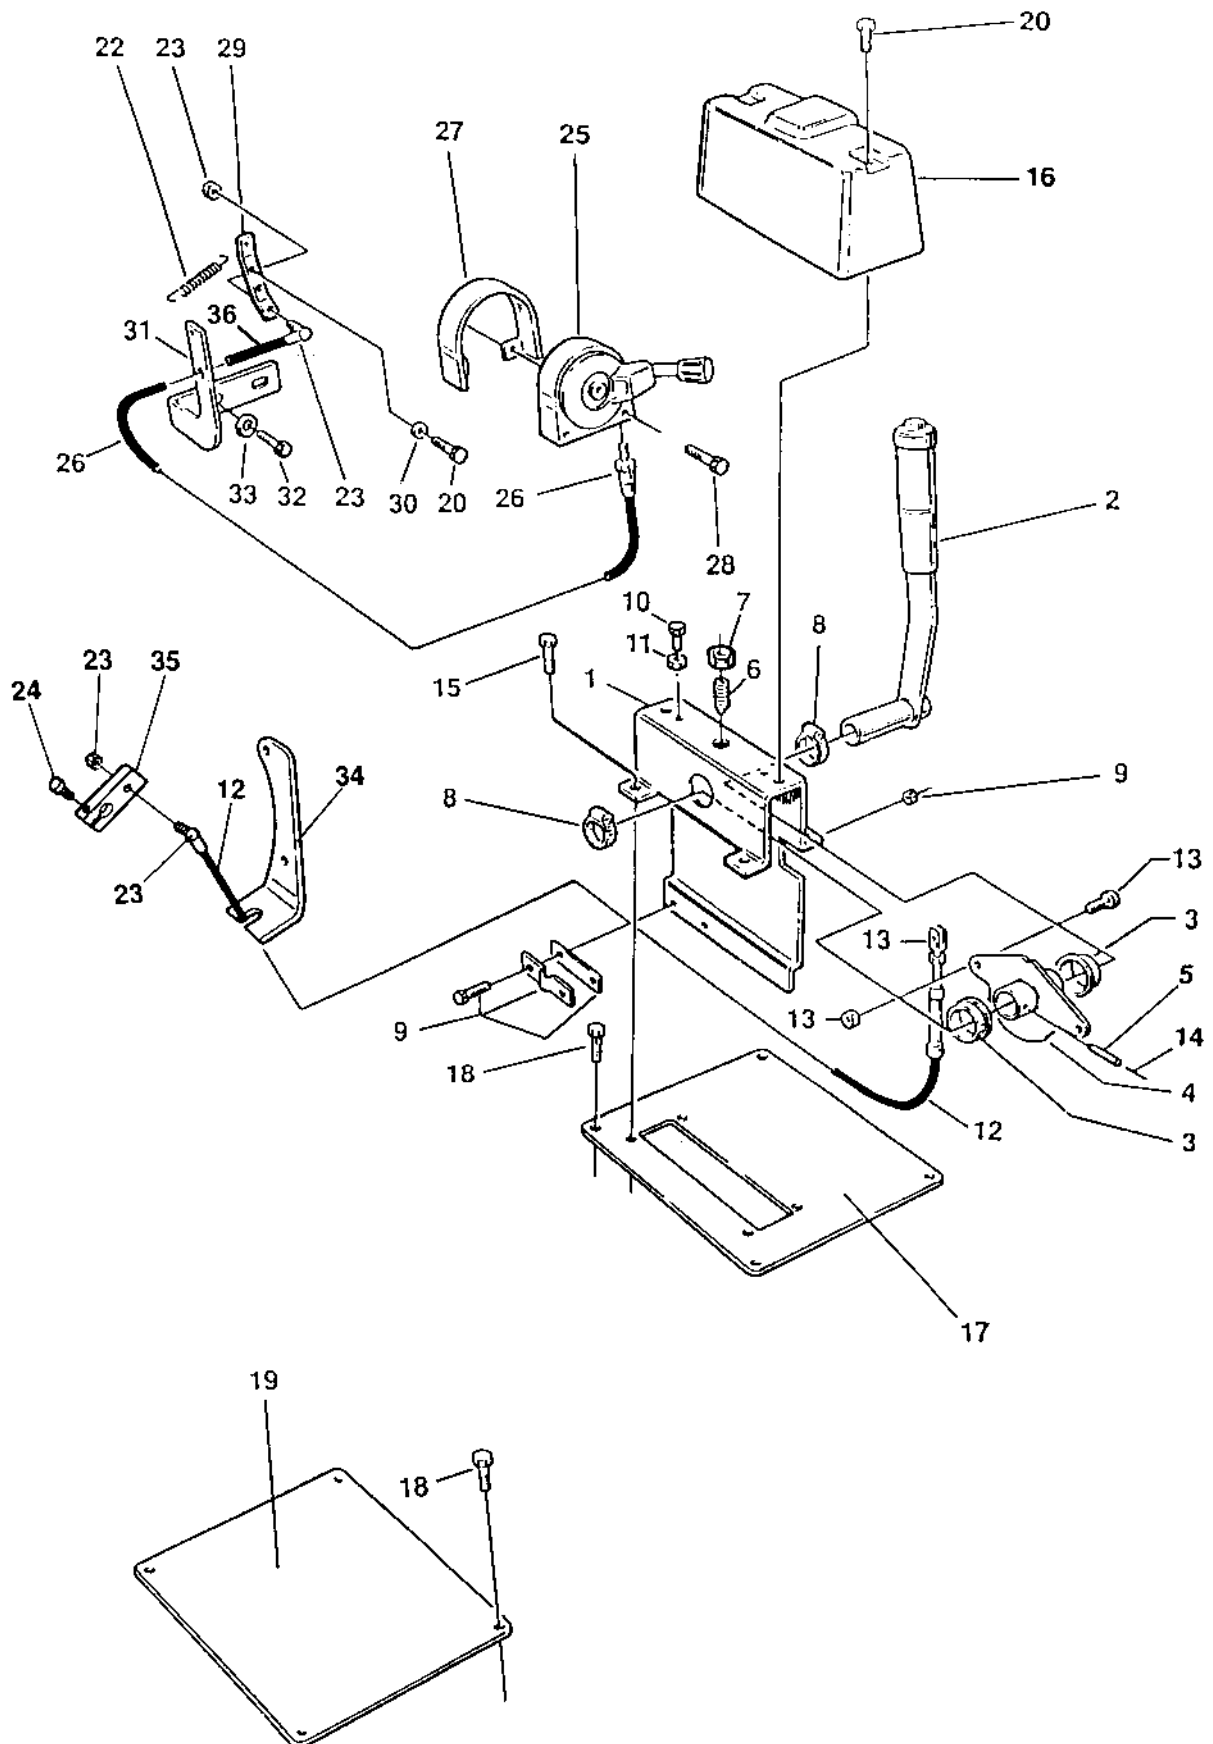

Engine and forward/reverse controls DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing	
2	357501	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger	D
7	573004		1	Nut	
8	313035		2	Hose clamp	
9	902189		1	Bracket	
10	533038		2	Screw	
11	570004		2	Nut M6	
12	902191	B	1	Control cable	D
13	416004		1	Fork	
14	903395		1	Spirol pin	
15	541703		4	Screw M6x16	
16	357494		1	Cover	
17	357495	C	1	Control bracket	
18	500501		8	Screw	
19	357496	D	1	Cover plate	
20	541703		4	Screw M6x16	
22	357500		1	Spring	
23	416034		2	Ball joint	D
24	508020		1	Screw	
25	902192	E	1	Control Up to 60115300	D
	382213	E	1	Control From 60115301	
26	902193	E	1	Control cable	D
27	902867		1	Snap plate Up to 60115300	
	382226		1	Snap plate From 60115301	
	374981	F	1	Snap plate	
28	904545		2	Screw	
29	357498		1	Control lever	
30	615042		2	Conical spring washer	
31	357499		1	Control bracket	
32	500021		2	Screw M8-1,25x25 8,8	
33	904556		2	Washer 8,4x16x3,0	
34	375687		1	Control bracket	
35	372705		1	Control lever	
36	382349		1	Bellows From 60115301	


- A) Right, for electrical equipment see section " Electrical equipment "
 B) F/R control
 C) Right
 D) Left
 E) Throttle
 F) Option, dual frequency

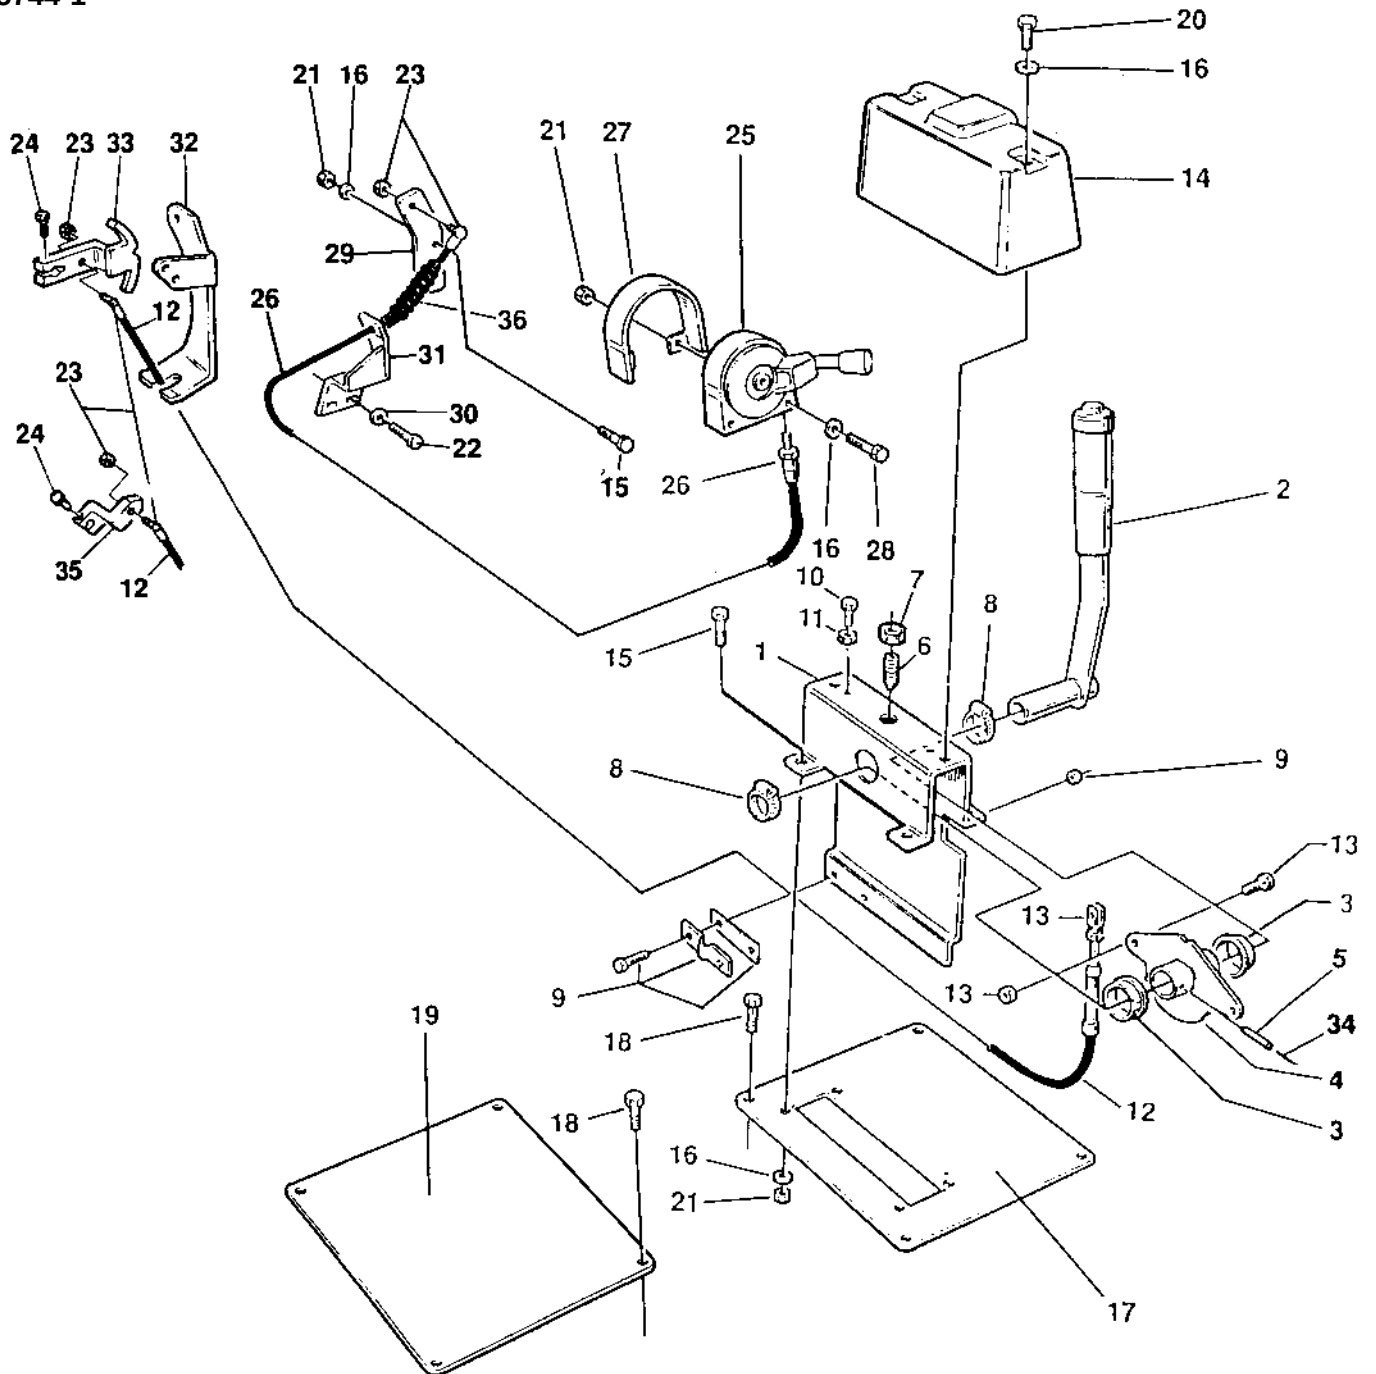

Engine and forward/reverse controls ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing	
2	357501	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger	D
7	573004		1	Nut	
8	313035		2	Hose clamp	
9	902189		1	Bracket	
10	533038		2	Screw	
11	570004		2	Nut M6	
12	902191	B	1	Control cable	D
13	416004		1	Fork	
14	357494		1	Cover	
15	500013		5	Screw M6-1x16 8,8	
16	904228		9	Washer 6,4x12x1,5	
17	357495	C	1	Control bracket	
18	500501		8	Screw	
19	357496	D	1	Cover plate	
20	500013		2	Screw M6-1x16 8,8	
21	586002		7	Lock nut M6	
22	500185		3	Screw M6-1x14 8,8	
23	416034		2	Ball joint	D
24	508020		1	Screw	
25	902192	E	1	Control	D
26	902193	E	1	Control cable	D
27	902867		1	Snap plate	
28	500061		2	Screw	
29	370248		1	Control lever	
30	904639		3	Washer 6,7x14x1,5	
31	370247		1	Control bracket	
32	370321		1	Control bracket	
33	371064		1	Control lever	
34	903395		1	Spirol pin	
35	359023		1	Control lever	
36	373549		1	Bellows From 60122653	

- A) Right, for electrical equipment see section " Electrical equipment "
- B) F/R control
- C) Right
- D) Left
- E) Throttle

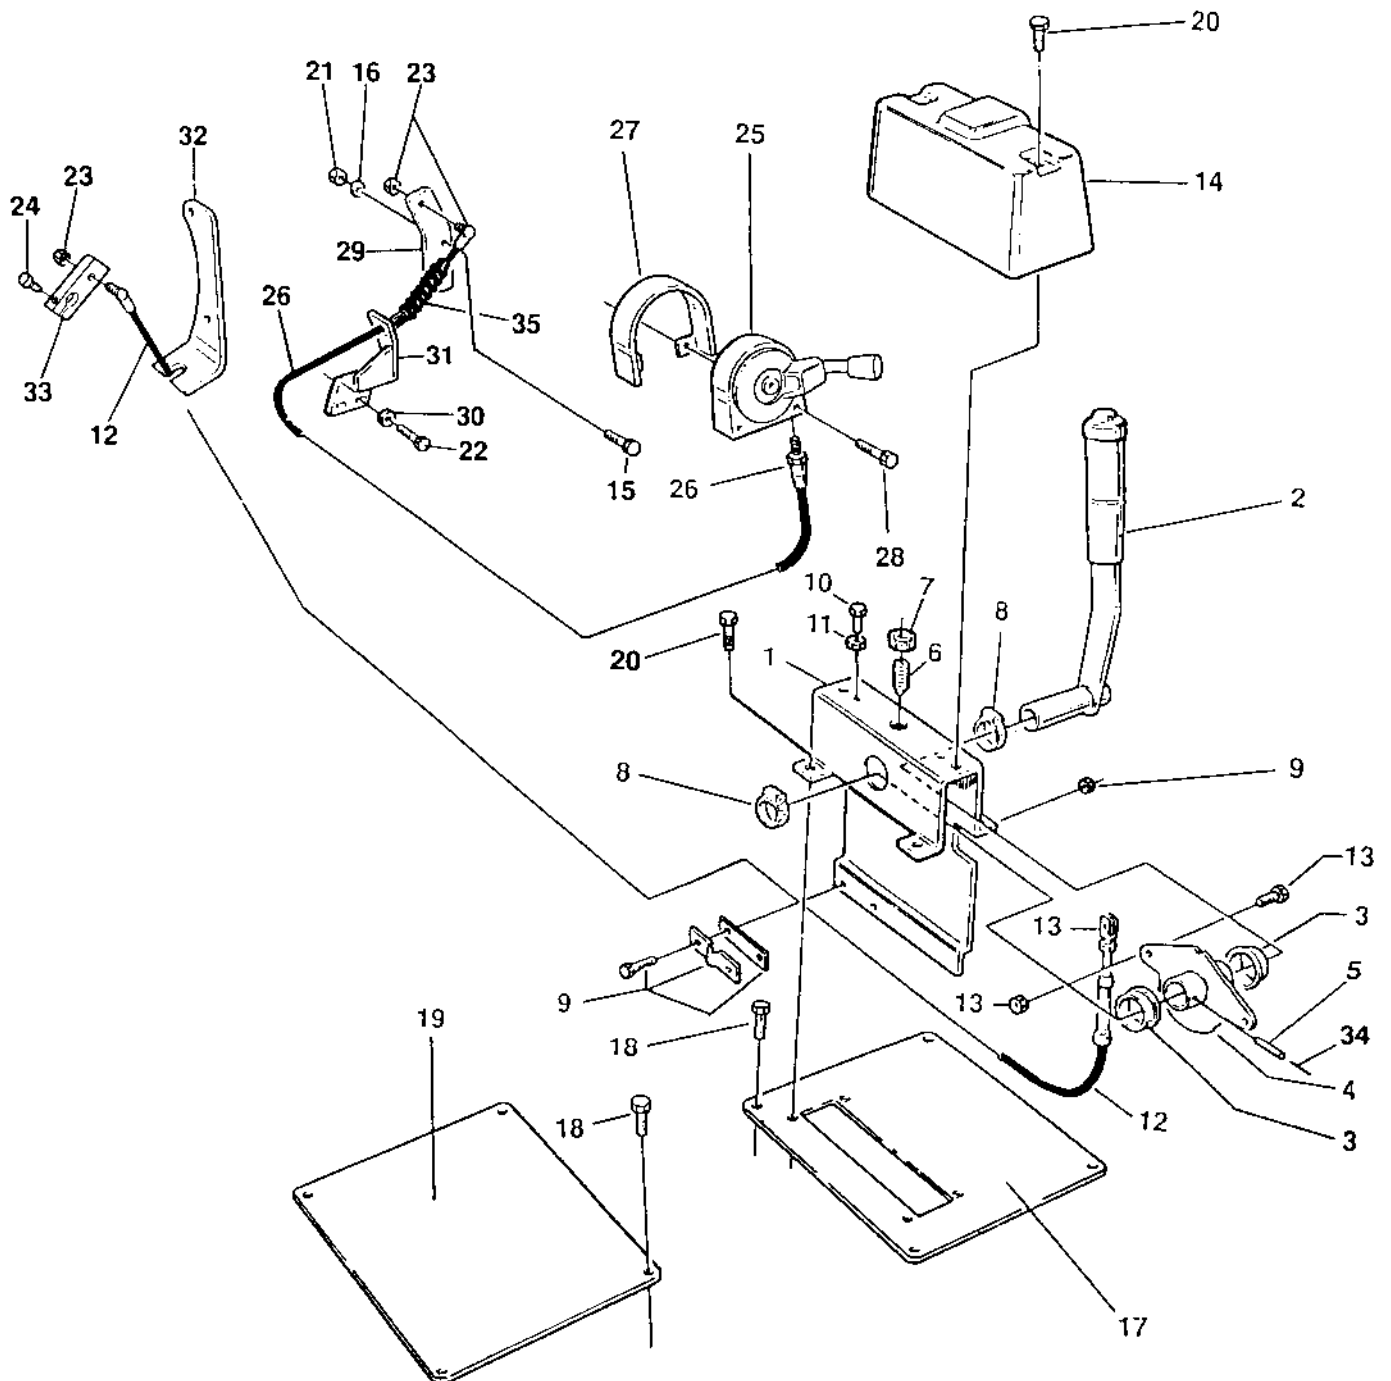


Engine and forward/reverse controls ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing	
2	357501	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger	D
7	573004		1	Nut	
8	313035		2	Hose clamp	
9	902189		1	Bracket	
10	533038		2	Screw	
11	570004		2	Nut M6	
12	902191	B	1	Control cable	D
13	416004		1	Fork	
14	357494		1	Cover	
15	500013		1	Screw M6-1x16 8,8	
16	904228		1	Washer 6,4x12x1,5	
17	357495	C	1	Control bracket	
18	500501		8	Screw	
19	357496	D	1	Cover plate	
20	541703		6	Screw M6x16	
21	586002		1	Lock nut M6	
22	500185		3	Screw M6-1x14 8,8	
23	416034		2	Ball joint	D
24	508020		1	Screw	
25	902192	E	1	Control Up to 60125300	D
	382213	E	1	Control From 60125301	
26	902193	E	1	Control cable	D
27	902867		1	Snap plate Up to 60125300	
	382226		1	Snap plate From 60125301	
28	904545		2	Screw	
29	370248		1	Control lever	
30	904639		3	Washer 6,7x14x1,5	
31	370247		1	Control bracket	
32	373898		1	Control bracket	
33	372705		1	Control lever	
34	903395		1	Spirol pin	
35	373549		1	Bellows Up to 60125300	
	382349		1	Bellows From 60125301	

- A) Right, for electrical equipment see section " Electrical equipment "
- B) F/R control
- C) Right
- D) Left
- E) Throttle

F/r controls dual, control panel, mounted

15745-1

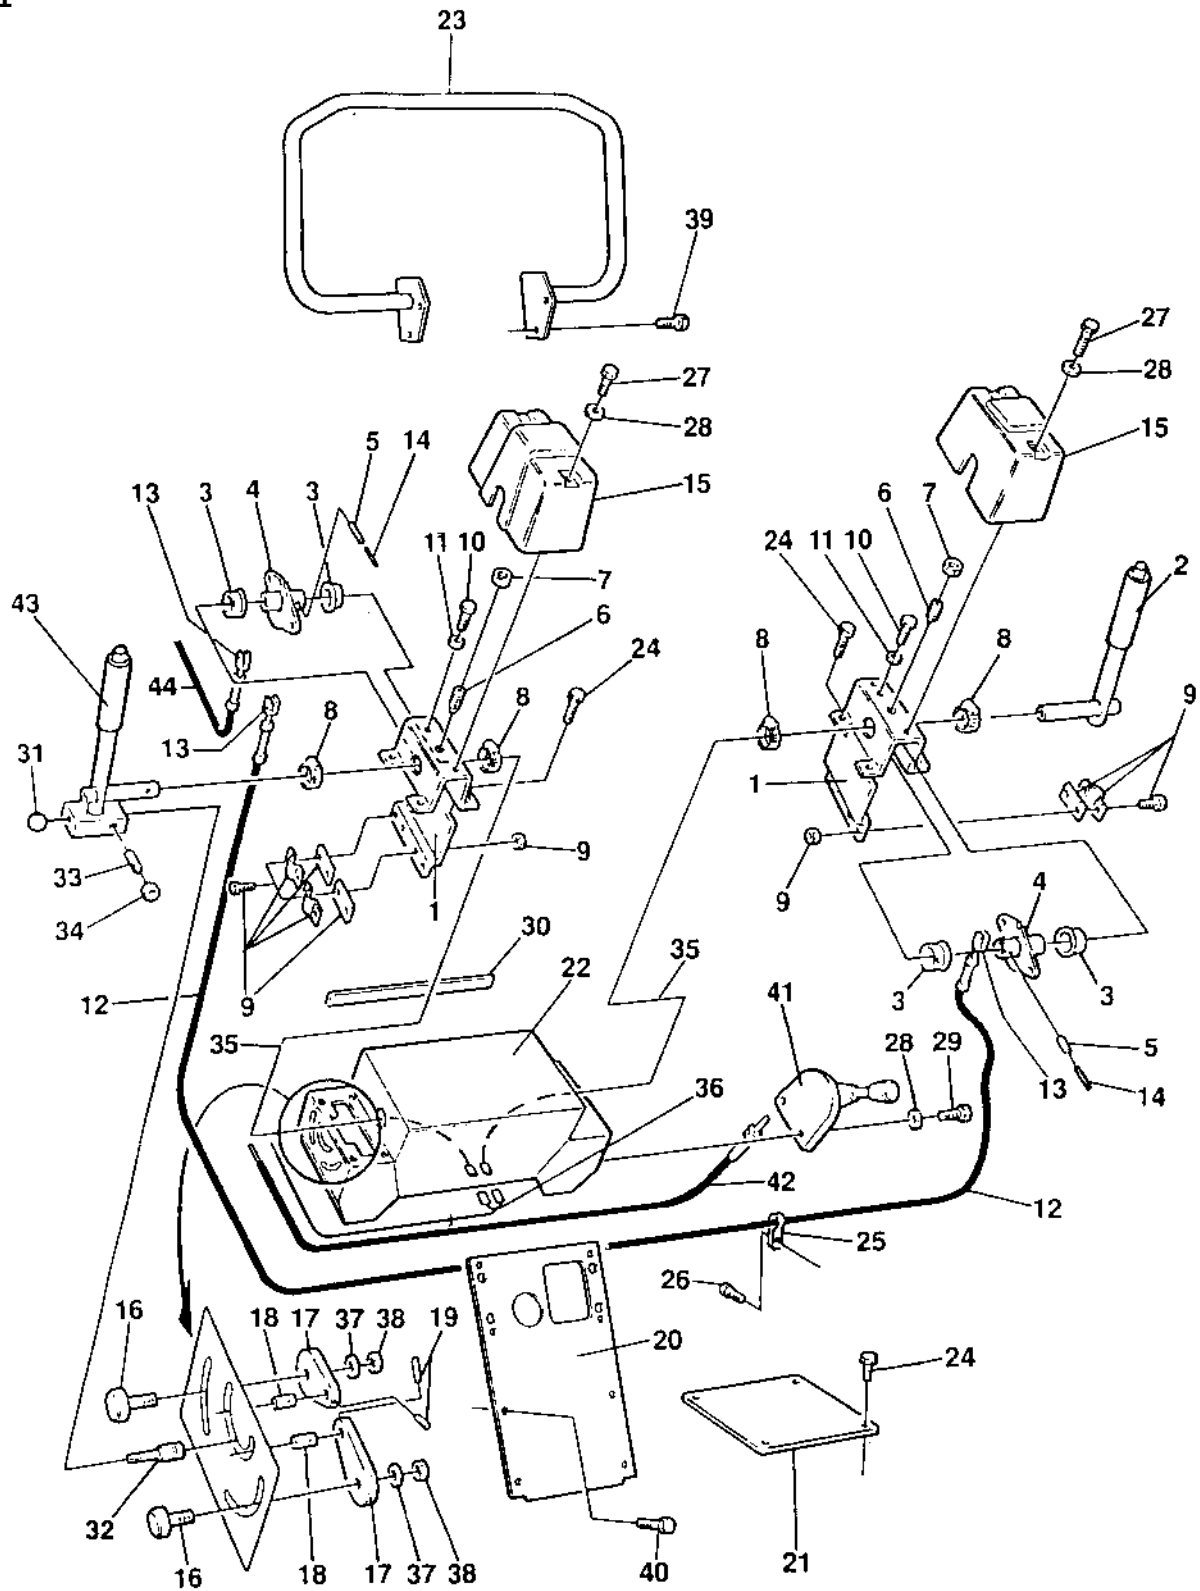


F/r controls dual, control panel, mounted

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		2	Framing	
2	370263	A	1	Control lever	
3	902187		4	Bearing	
4	902895		2	Cam disc	
5	629016		2	Expanding	
6	922325		2	Spring ball plunger	D
7	573004		2	Nut	
8	313035		4	Hose clamp	
9	902189		3	Bracket	
10	533038		4	Screw	
11	570004		4	Nut M6	
12	903675		1	Control cable	D
13	416004		3	Fork	
14	903395		2	Spirol pin	
15	370241		2	Cover	
16	370242		2	Knob	
17	370273		1	Plate	
18	370272		1	Shaft	
19	516010		1	Screw	
20	370244		1	Cover	
21	357496		1	Cover plate	
22	370174		1	Instrument box	
23	371088		1	Hand rail	
24	541702		12	Screw M6x12	
25	921070		1	Clamp	
26	541705		1	Screw	
27	500013		4	Screw M6-1x16 8,8	
28	600004		6	Washer	
29	500061		2	Screw	
30	202028	B	1XL	Edge trim	
31	312001		1	Handle grip	
32	346431		1	Bolt	
33	923900		1	Spring loaded pin	
34	570005		1	Nut M8	
35	357583		1	Cable harness	
36	370274		1	Cable harness	
37	600006		2	Washer	
38	586003		2	Lock nut M8	
39	500509		4	Screw	
40	541702		8	Screw M6x12	
41	902192	C	1	Control Up to 601X5300	D
	382213	C	1	Control From 601X5301	
42	902193	C	1	Control cable	D
43	370266	D	1	Control lever	
44	903676	E	1	Control cable	D

- A) Right, for electrical equipment see section " Electrical equipment "
B) L=0,225 m
C) Throttle
D) Left, for electrical equipment see section " Electrical equipment "
E) F/R control

F/r control dual left side, platform mounted


15508-2

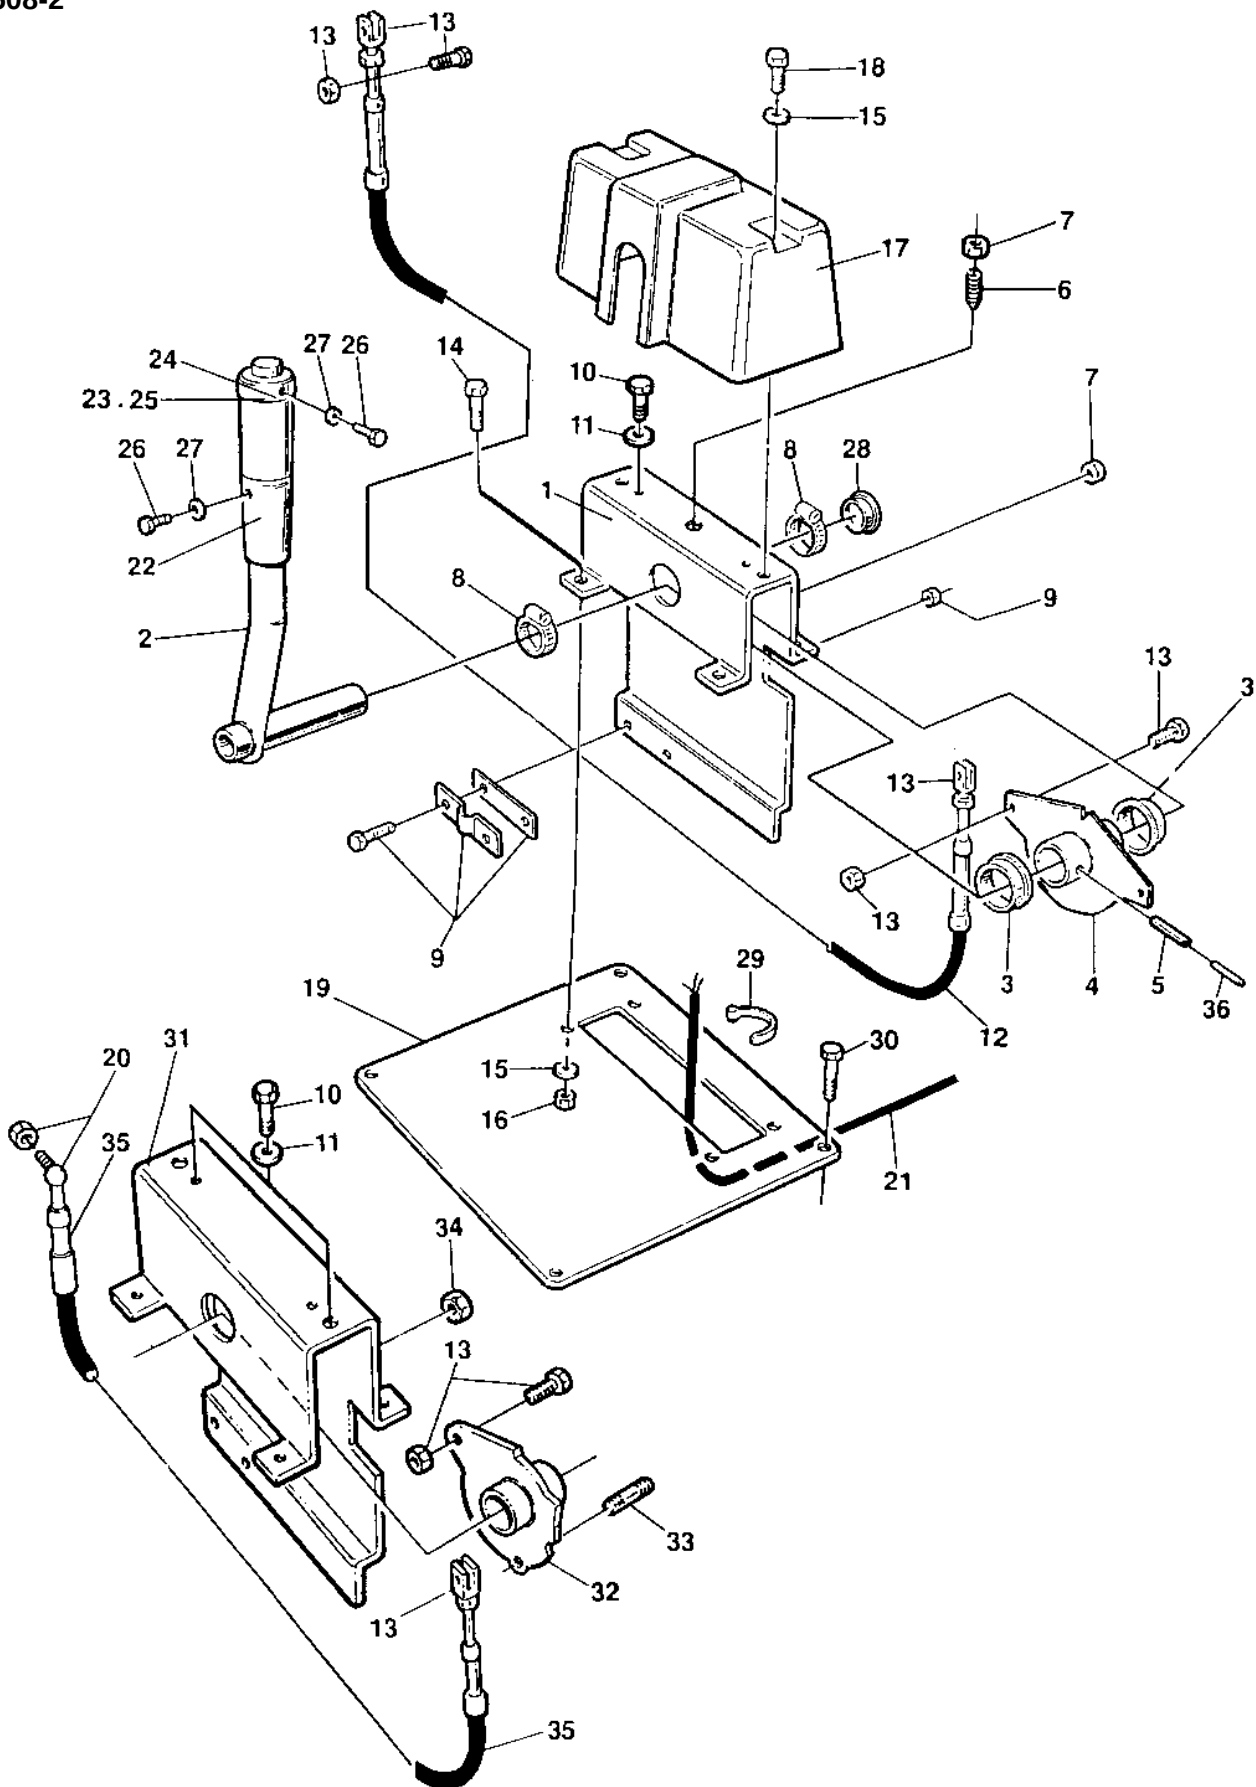

F/r control dual left side, platform mounted

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902896		1	Framing From 601X0400	
2	357502	A	1	Control lever	
3	902187		2	Bearing	
4	902895		1	Cam disc From 601X0400	
5	629016		1	Expanding	
6	922325		1	Spring ball plunger From 601X0400	D
7	573004		1	Nut From 601X0400	
8	313035		2	Hose clamp	
9	902189		2	Bracket	
10	533038		2	Screw	
11	570004		2	Nut M6	
12	908484		1	Control cable From 60110400	D
13	416004		1	Fork Up to 60110399	
	416004		2	Fork From 60110400	
14	500040		4	Screw M6-1x20 8,8	
15	904228		6	Washer 6,4x12x1,5	
16	586002		4	Lock nut M6	
17	357494		1	Cover	
18	500013		2	Screw M6-1x16 8,8	
19	357495	A	1	Control bracket	
20	416034		1	Ball joint Up to 60110399	D
21	357896		1	Cable harness	
22	285909		1	Grab handle	D
23	928497	C	1	Push button	D
24	285911		1	Bushing	D
25	348481		1	Cover	D
26	533001		3	Screw	
27	904697		5	Washer 3,2x6x0,5	
28	902203		1	Plug	
29	313068		2	Cable ties L=92 mm	
30			4	Screw	
31	902301		1	Framing Up to 60110399	
32	902302		1	Cam disc Up to 60110399	
33	902188		1	Spring loaded pin Up to 60110399	
34	927233		1	Nut Up to 60110399	
35	902191		1	Control cable Up to 60110399	D
36	903395		1	Spirol pin	

A) Left
C) Vibration

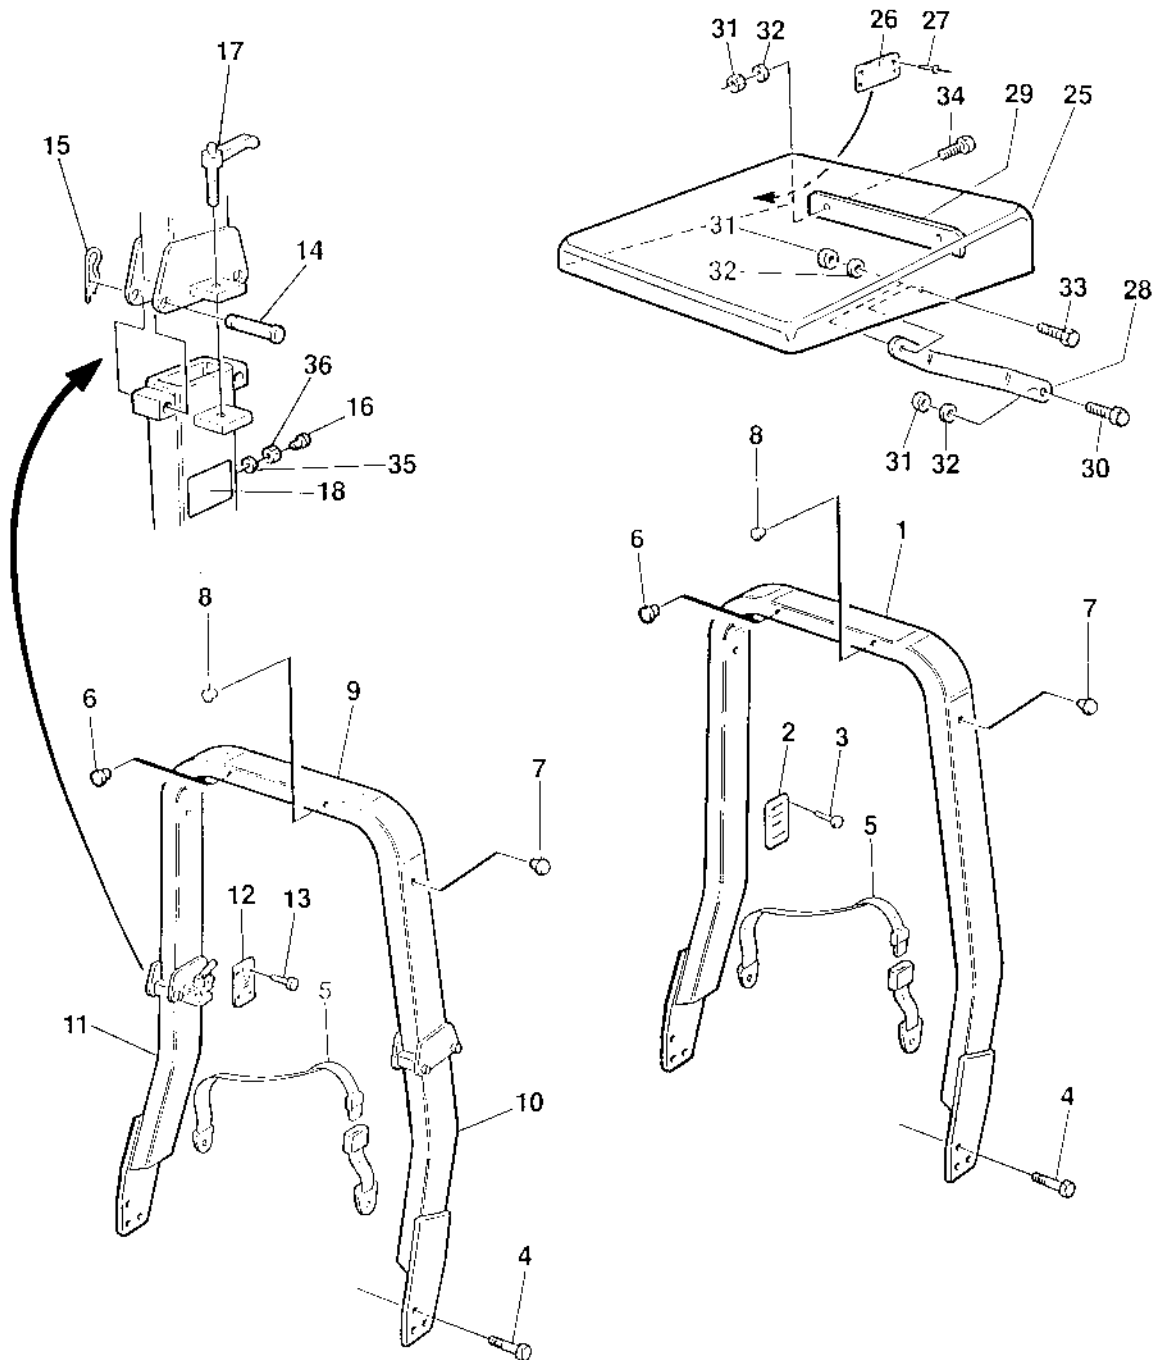

Rops and fops

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358287		1	Rops	D
2	370803		1	.Sign, rops	
3	902093		4	.Screw	
4	902859		6	Screw	
5			1	Seat belt	
6	900986		4	Plug	
7	902203		5	Plug	
	902203	C	3	Plug	
8	903378		8	Plug	
9	374109		1	Rops, upper part	
10	374119	A	1	Rops, lower part	
11	374118	B	1	Rops, lower part	
12	370803		1	Sign, rops	
13	902093		4	Screw	
14	374009		4	Shaft	
15	635061		4	Hair clip	D
16	288357	1	2	Shock absorber	
17	904429		2	Lock handle	
18	908229		2	Safety decal	
25	359074		1	Roof	
26			1	Sign, fops	
27	624016		4	Blind rivet	
28	359064		2	Support bar	
29	359062		1	Holder plate	
30	500107		2	Screw	
31	586021		6	Nut M16	
32	600011		12	Washer	
33	500070		2	Screw M16x50	
34	500164		2	Screw M16-2,0x150 8,8	
35	904229		2	Washer 8,4x16x1,5	
36	570005		2	Nut M8	


1) Needs hole threaded M8

A) Left

B) Right


C) Foldable rops

Ref. No.	Part No.	Rem.	Qty	Description	Code
100			1	Plates and decals, ce-marking approved From 601X1175 (Page 308)	

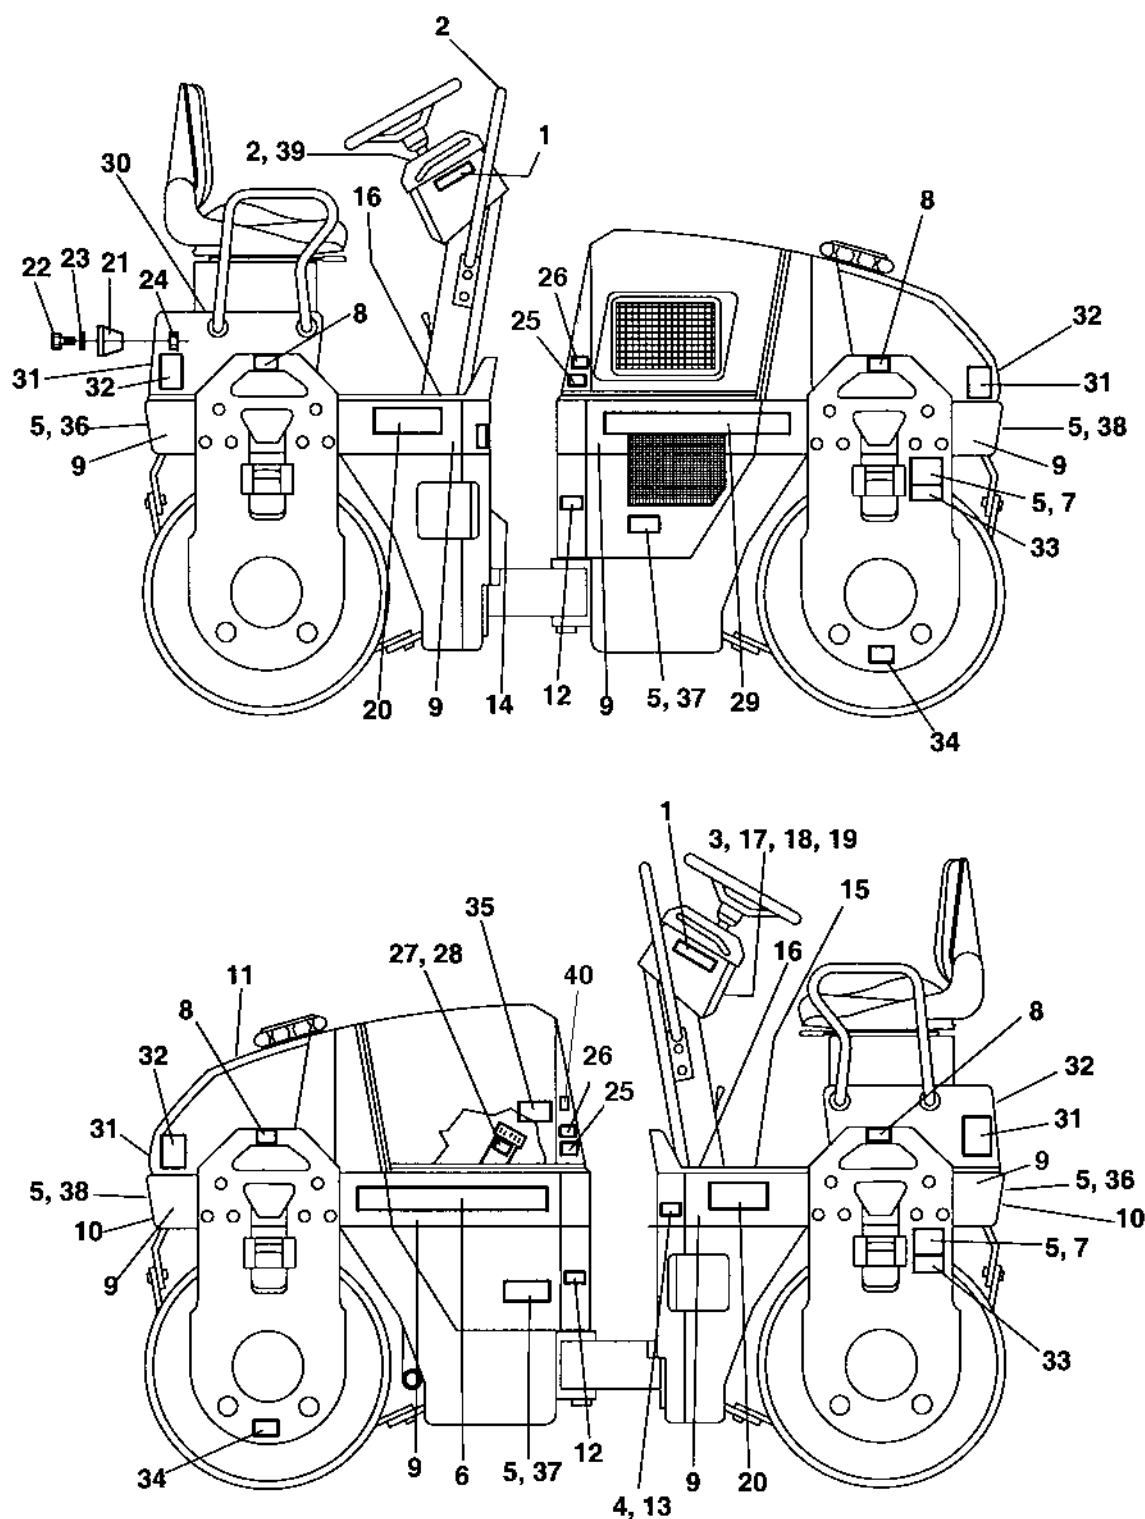

Plates and decals, ce-marking approved

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	903459	A	2	Decal "SAFETY"	
2	349248SE	Y	1	Decal "WARNING" Swedish	
	349248SE	Z	1	Decal "WARNING" Swedish	
	349248EN	Y	1	Decal "WARNING" English	
	349248EN	Z	1	Decal "WARNING" English	
	349248DE	Y	1	Decal "WARNING" German	
	349248DE	Z	1	Decal "WARNING" German	
	349248IT	Y	1	Decal "WARNING" Italian	
	349248IT	Z	1	Decal "WARNING" Italian	
	349248ES	Y	1	Decal "WARNING" Spanish	
	349248ES	Z	1	Decal "WARNING" Spanish	
	349248FR	Y	1	Decal "WARNING" French	
	349248FR	Z	1	Decal "WARNING" French	
	349248NO	Y	1	Decal "WARNING" Norwegian	
	349248NO	Z	1	Decal "WARNING" Norwegian	
	349248DK	Y	1	Decal "WARNING" Danish	
	349248DK	Z	1	Decal "WARNING" Danish	
	349248FI	Y	1	Decal "WARNING" Finnish	
	349248FI	Z	1	Decal "WARNING" Finnish	
	349248PT	Y	1	Decal "WARNING" Portuguese	
	349248PT	Z	1	Decal "WARNING" Portuguese	
	349248NL	Y	1	Decal "WARNING" Dutch	
	349248NL	Z	1	Decal "WARNING" Dutch	
	349248GR	Y	1	Decal "WARNING" Greek	
	349248GR	Z	1	Decal "WARNING" Greek	
	349248IS	Y	1	Decal "WARNING" Icelandic	
	349248IS	Z	1	Decal "WARNING" Icelandic	
	349248CN	Y	1	Decal "WARNING" Chinese	
	349248CN	Z	1	Decal "WARNING" Chinese	
3	903425	H	1	Decal "SAFETY MANUAL"	
4	960787SE		1	Product identification plate	
	358090SE		1	Product identification plate CE	
	900842	I	1	Product identification plate	
	357130	J	1	Plate cert. appr.	
	371173	K	1	Product plate	
5	624015		20	Blind rivet	
6	904096		1	Decal "DYNAPAC" L=420 mm	
7	904870		2	Lifting sign	
8	357587		2	Decal "LIFT POINT"	
9	357592	M	NXL	Decal "RED"	
10	904094		2	Decal "DYNAPAC" L=670 mm	
	904096	O	2	Decal "DYNAPAC" L=420 mm	
11	991657		1	Decal "WATER"	
12	903422	P	2	Decal "SAFETY"	
A)	Read instr manual				
H)	Safety manual				
I)	France only				
J)	Italy only				
K)	Japan only				
M)	Length as required				
O)	For machines with lights				
P)	Hazardous area				
Y)	Old version				
Z)	New version, together with 624017				

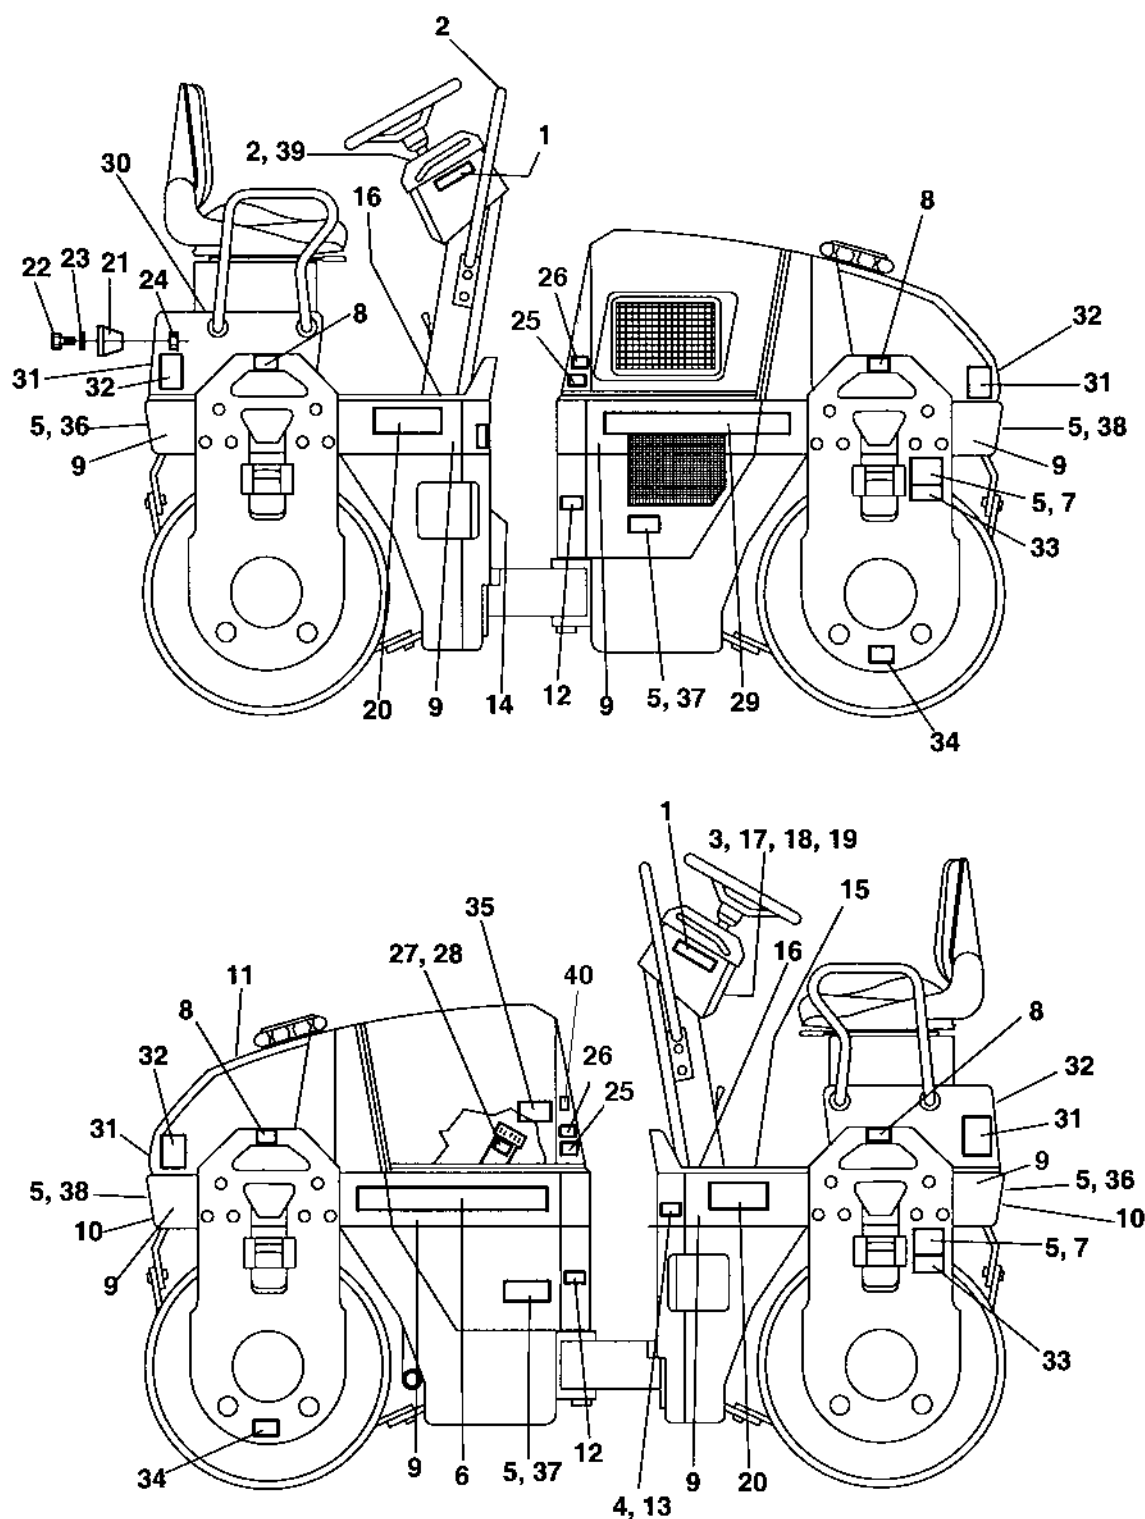


Plates and decals, ce-marking approved

Ref. No.	Part No.	Rem.	Qty	Description	Code
13	624015		4	Blind rivet	
14	991658		1	Decal "FUEL"	
15	357604	Q	1	Protection	
16	357605	R	2	Protection	
17	357643		1	Wire	
18	600001		1	Washer	
19	358254		1	Key-ring	
20	902218		2	Decal "MODEL CODE" CC122	
	371170	S	2	Decal "MODEL CODE" CC122 II	
21	900684	X	1	Name plate "DYNAPAC"	
22	535008		2	Screw	
23	600003		2	Washer	
24	586001		2	Lock nut M5	
25	903423	U	2	Decal "SAFETY"	
26	903424	V	2	Decal "SAFETY"	
27	370127		1	Decal "HYDRAULIC OIL"	
28	925802		2	Cable ties L=142 mm	
29	904246		1	Decal "DYNAPAC" L=210 mm Up to 601X3599	
	904097		1	Decal "DYNAPAC" L=290 mm From 601X3600	
30				Not used on this model	
31	904403		4	Decal "Risk location"	
32	904404		4	Decal "Risk location"	
33	908229		2	Safety decal	
34	382751		2	Decal "TIE DOWN POINT"	
35	904835		1	Decal "BATTERY POWER"	
36	929076		2	Reflector, red	B
37	383859		2	Reflector, yellow	B
38	383860		2	Reflector, white	B
39	624017		2	Blind rivet	
40	791262	X	1	Decal Sound Power Level 100dB	
	791272	X	1	Decal Sound Power Level 102dB	
	791275	X	1	Decal "Sound power level" 105dB	
Q)	Rear				
R)	Front				
S)	Japan				
U)	Engine fan				
V)	Hot surface				
X)	Option				

Standard equipment CC122


Ref. No.	Part No.	Rem.	Qty	Description	Code
100				Standard equipment (Page 314)	

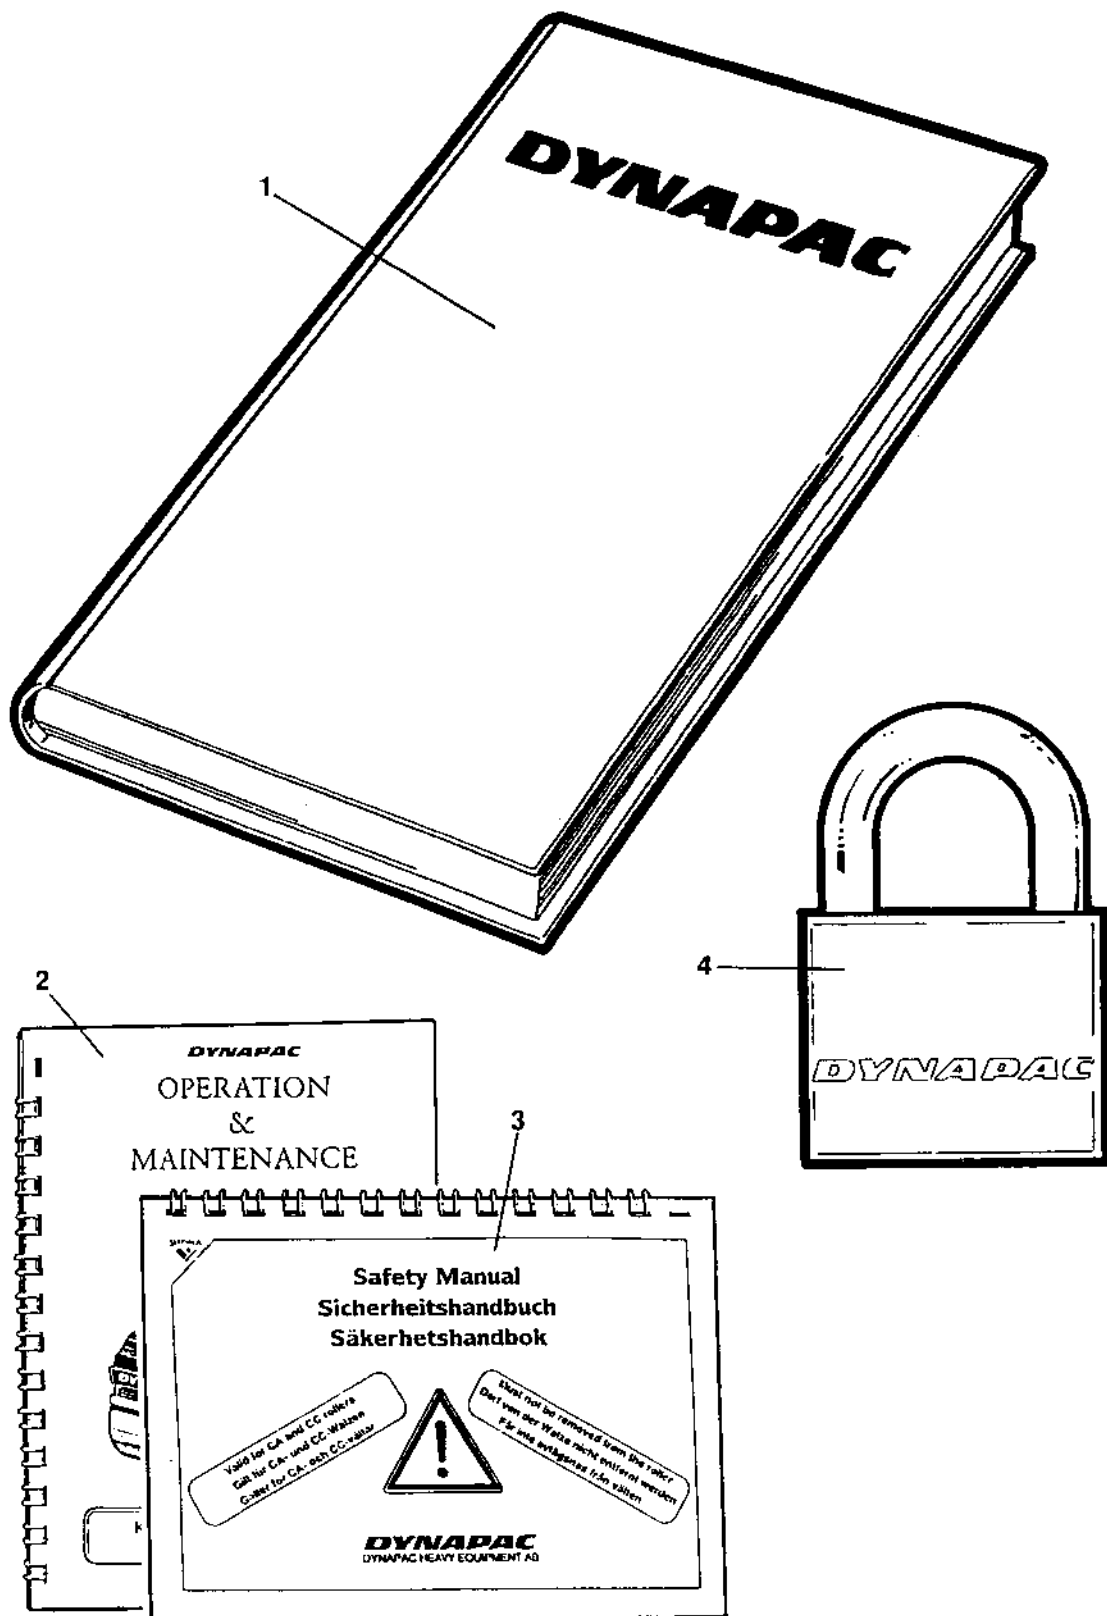

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Documentation OMS122	
			1	.Warranty registration card	
			1	.Operating instruction O102	
			1	.Maintenance instruction M102	
			1	.Spare parts catalogue SCC122	
			1	.Instruction manual DEUTZ / ISUZU	
2			1	.Operating / maintenance instruction OM102	
3			1	.Safety manual RSAFE	
4	358881		1	Pad lock	

Optional equipment CC122


Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Cab, exterior (Page 318)	
20				Cab, interior (Page 324)	
30				Cab, heater (Page 326)	
41				Canopy (Page 328)	
60				SMV sign (Page 330)	
90				Tool equipment (Page 332)	
100				Noise suppression DEUTZ , 78 dB (Page 334)	
105				Noise suppression DEUTZ , 73 dB (Page 336)	
107				Noise suppression ISUZU (Page 338)	
110				Back-up alarm (Page 340)	
120				Rear mirror (Page 342)	
195				Brake release, propulsion motor (Page 344)	
200				Cassette receiver (Page 346)	
300				Shut-off valve, propulsion Up to 601X3599 (Page 348)	
310				Towing valve From 601X3600 (Page 350)	
380				Flow divider Up to 601X3599 (Page 352)	
400				Flow divider From 601X3600 (Page 354)	
430				Vibration shut-off, electr./man Up to 601X3599 (Page 356)	
432				Vibration shut-off, front drum DEUTZ From 60113600 (Page 358)	
434				Vibration shut-off, front drum ISUZU From 601X3600 (Page 360)	
436				Vibration shut-off, rear drum DEUTZ From 60113600 (Page 362)	
438				Vibration shut-off, rear drum ISUZU From 601X3600 (Page 364)	
440				Automatic vibration control (Page 366)	
460				Service brake (Page 368)	
480				Driving, restriction (Page 370)	
500				Bio-hydraulic oil lock (Page 372)	
520				High torque drum drive " Long" (Page 374)	
540				High torque drum drive " Short" (Page 378)	
560				Brake release, propulsion motor (Page 382)	

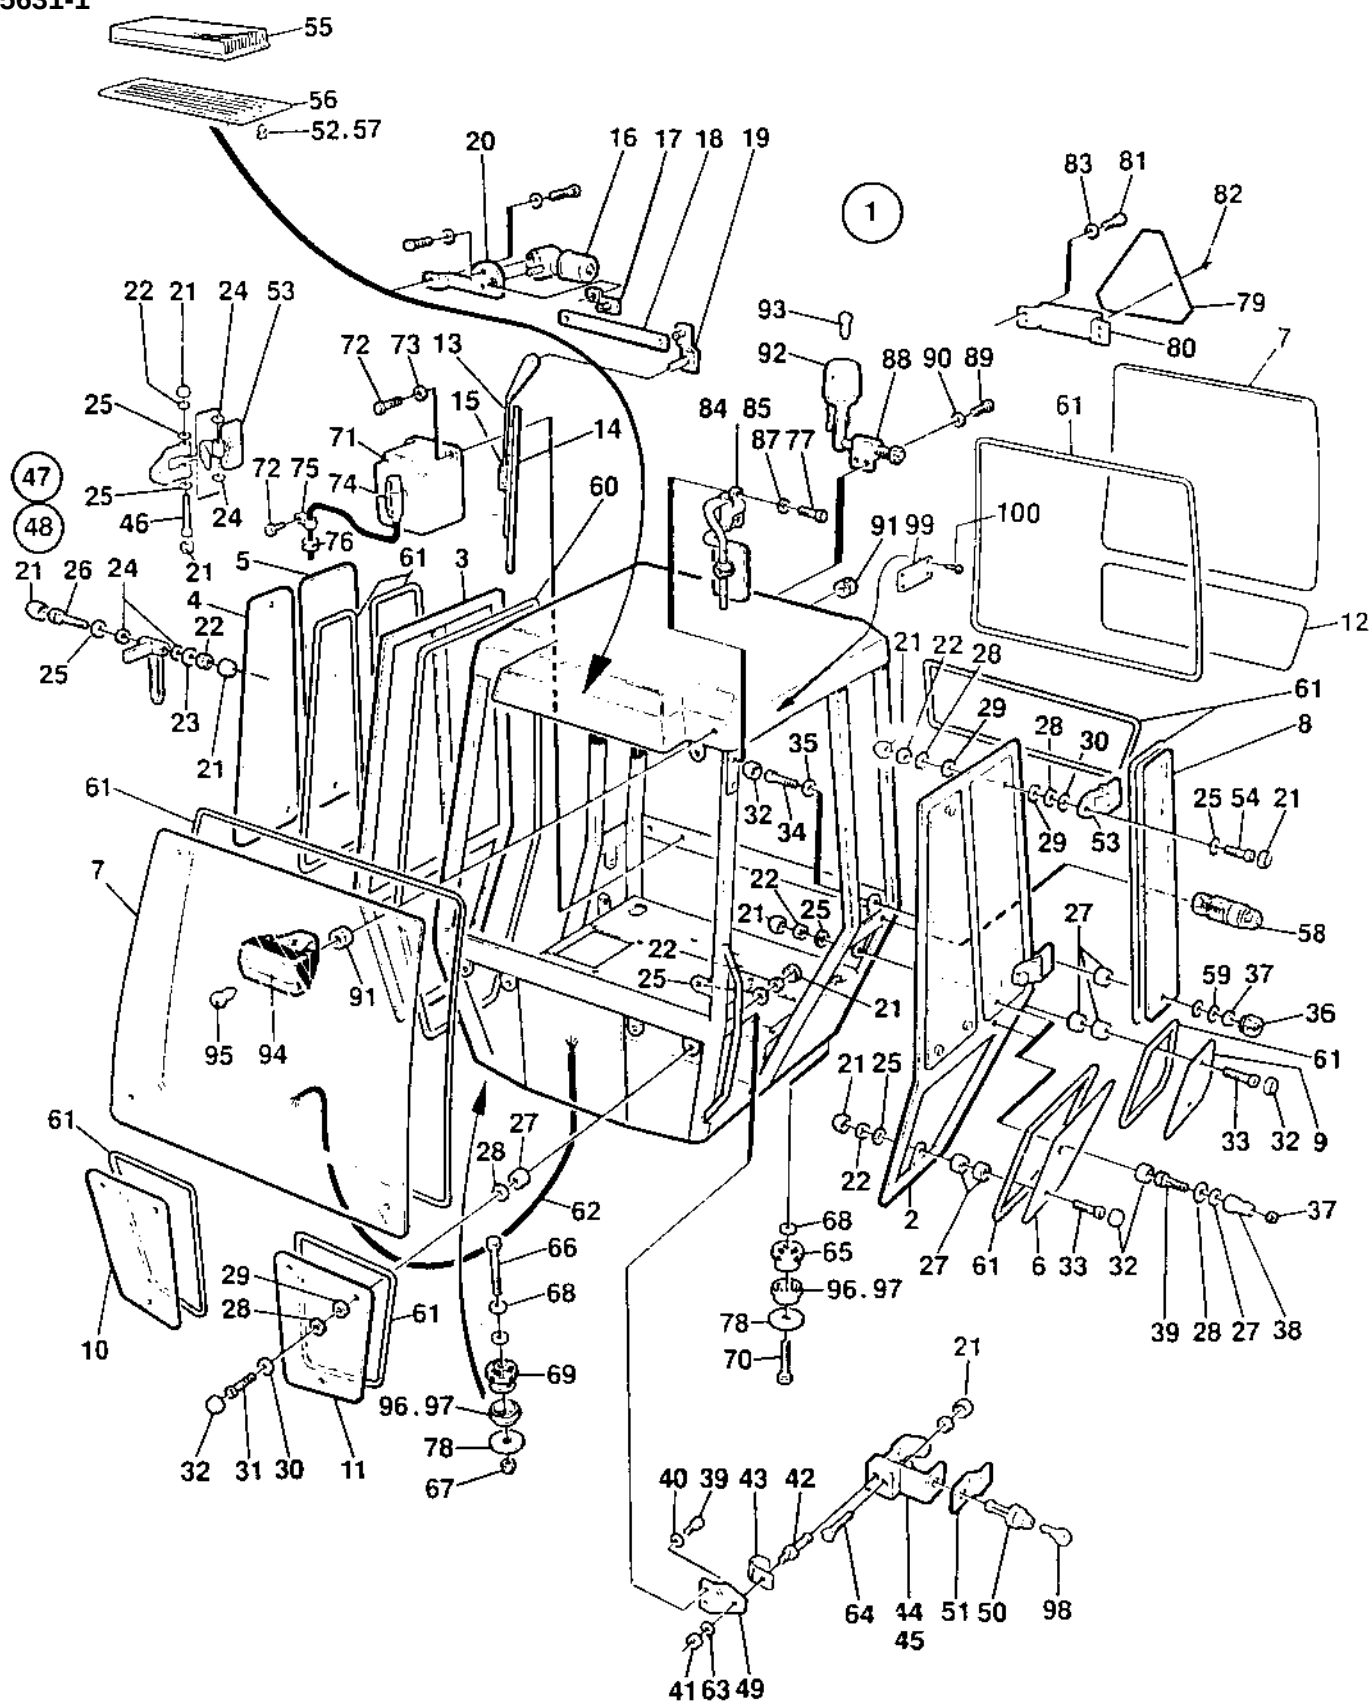

Cab, exterior

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358440		1	Cab	
2	903100		1	.Door left	
3	903101		1	.Door right	
4	358379	A	2	..Screen	D
5	358380	B	2	..Screen	D
6	358386	C	2	..Screen	D
7	358378	D	2	.Screen	D
8	358381	E	2	.Screen	D
9	358385	F	2	.Screen	D
10	358383	G	1	.Screen	D
11	358384	H	1	.Screen	D
12	358382	I	1	.Screen	D
13	903089		2	.Windshield wiper	
14	929965		2	..Wiper blade	
15	903000		2	.Nozzle	
16	903123		2	.Wiper motor	D
17	903125		2	.Shaft	
18	903126		2	.Connecting rod	
19	903127		2	.Shaft	
20	903124		2	.Bracket	
21	901341		63	.Nut cup	
22	586003		61	.Lock nut M8	
23	601003		2	.Washer 8,4x25x2	
24	903094		24	.Spacer	
25	600006		24	.Washer	
26	500189		2	.Screw	
27	903104		40	.Spacer	
28	903103		32	.Plastic washer	
29	903105		4	.Rubber washer	
30	615117		12	.Washer	
31	903083		26	.Screw	
32	901340		40	.Screw cap	
33	903084		4	.Screw	
34	500015		2	.Screw M6-1x30 8,8	
35	600004		2	.Washer	
36	929957		4	.Holder Female	
37	586002		2	.Lock nut M6	
38	929956		4	.Holder Male	
39	500061		4	.Screw	
40	606015		4	.Washer	


- A) Upper dorr, front
- B) Upper door, rear
- C) Lower door
- D) Upper front/rear
- E) Upper side
- F) Lower side
- G) Lower front, RH
- H) Lower front, LH
- I) Lower rear

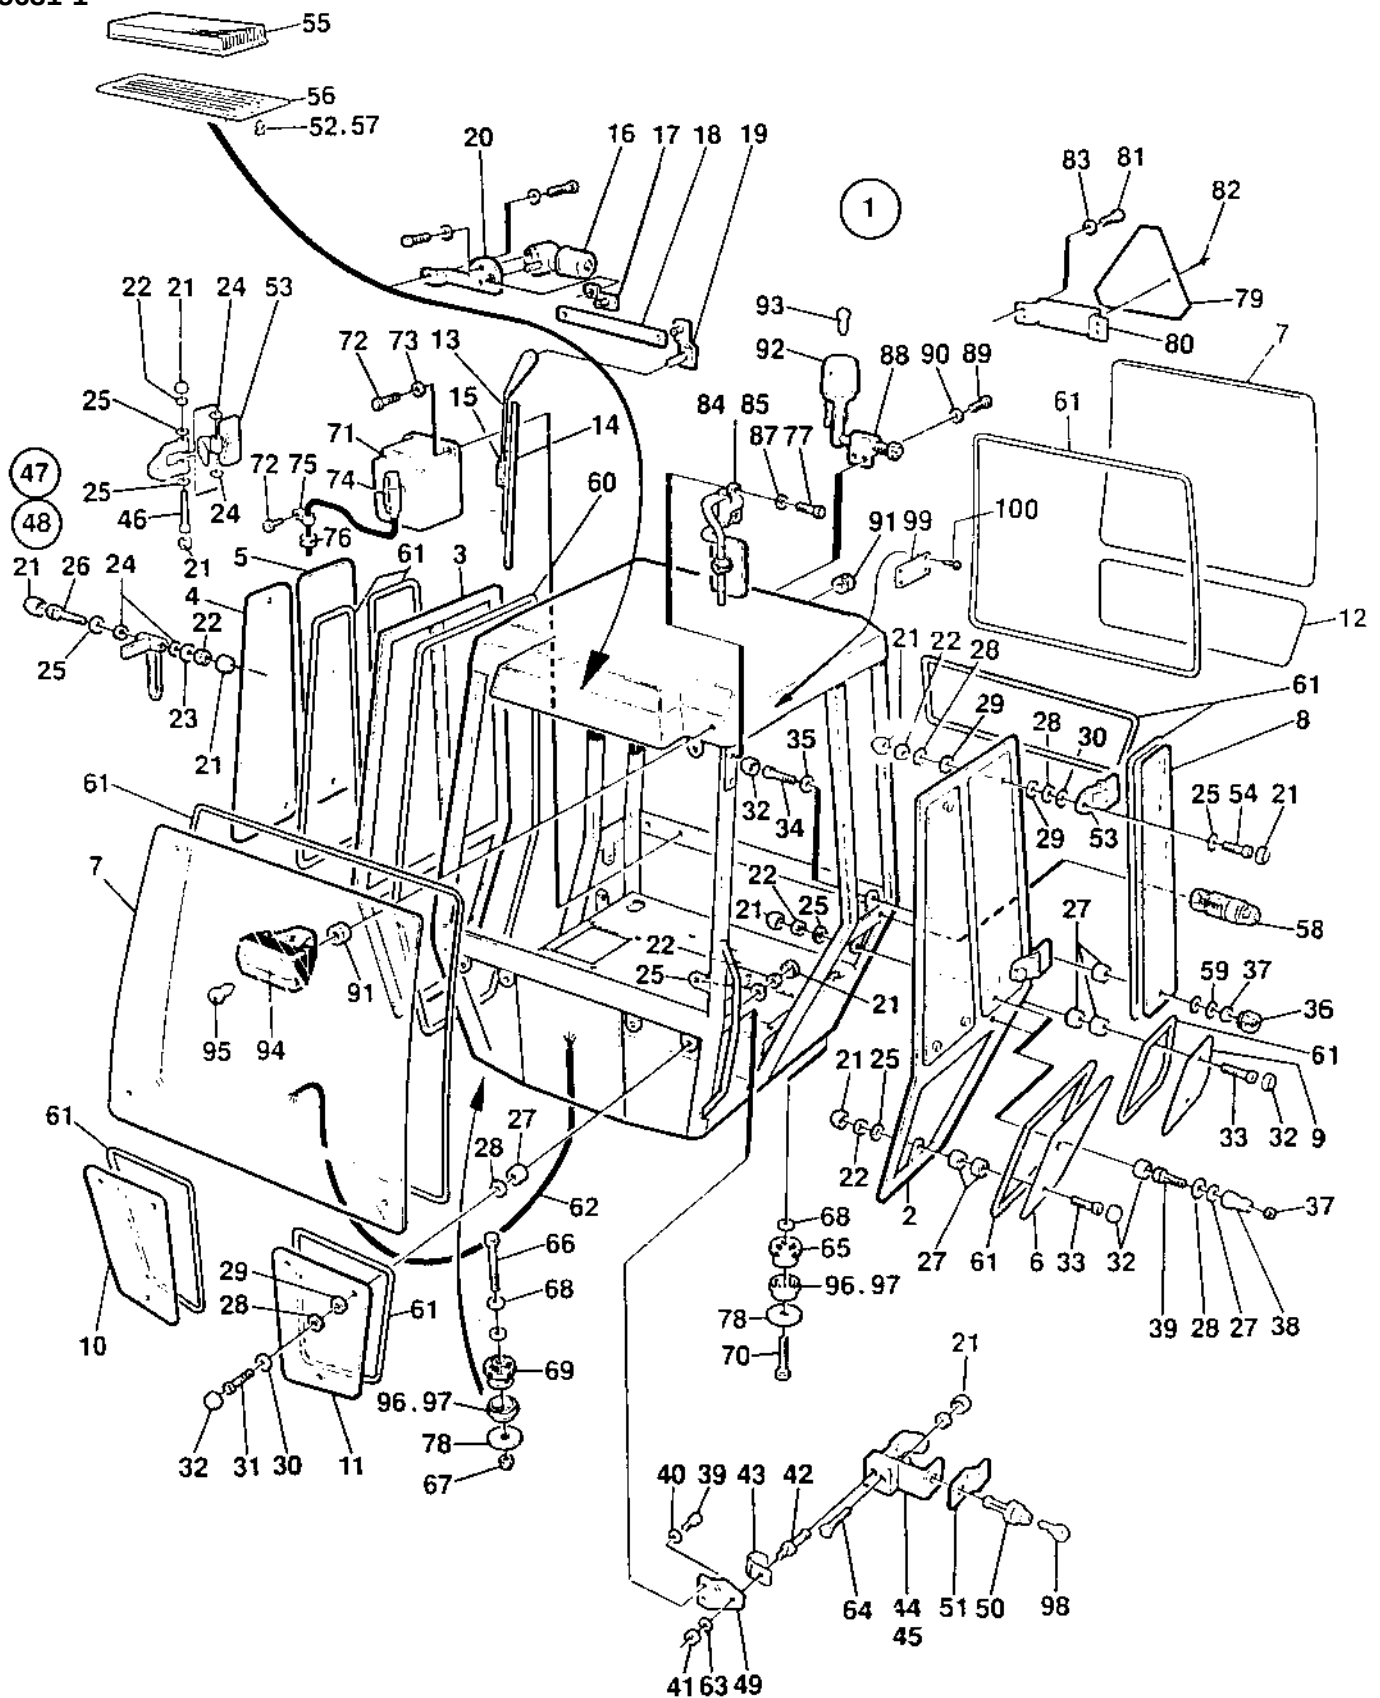

Cab, exterior


Ref. No.	Part No.	Rem.	Qty	Description	Code
41	903092		2	.Nut	
42	345388		2	.Bolt	
43	901242		2	.Hook	
44	901249	J	1	.Lock	
45	901273	K	1	.Lock	
46	500237		4	.Screw	
47	903097	L	1	.Grab handle	
48	903096	M	1	.Grab handle	
49	903326		2	.Holder plate	
50	903106		2	.Lock	
51	903107		2	.Lever	
52	903087		2	.Clips	
53	903095		4	.Hinge	
54	500189		4	.Screw	
55	901296		1	.Air filter	B
56	903085		1	.Air inlet cover	
57	903086		2	.Quick fastener	
58	903102		2	.Door stop	
59	606003		1	.Washer	
60	901365		N	.Sealing strip	
61	901275		N	.Sealing strip	
62	358458	N	1	.Cable harness	
63	903323		2	.Washer	
64	927637		4	.Screw	
65	450166	O	2	Shock absorber	B
66	500142		2	Screw	
67	586021		2	Nut M16	
68	600011		N	Washer	
69	801698	P	2	Shock absorber	B
70	500094		2	Screw	
71	900998		1	Water reservoir	
72	541703		3	Screw M6x16	
73	615042		2	Conical spring washer	
74	900999		1	Pump	
75	921039		1	Pipe clamp	
76	909107		1	Grommet	
77	500013		4	Screw M6-1x16 8,8	
78	358224		4	Washer	
79	476019		1	SMV sign	D
80	358579		1	Holder plate	

J) Right door
K) Left door
L) Right
M) Left
N) Main
O) Rear
P) Front

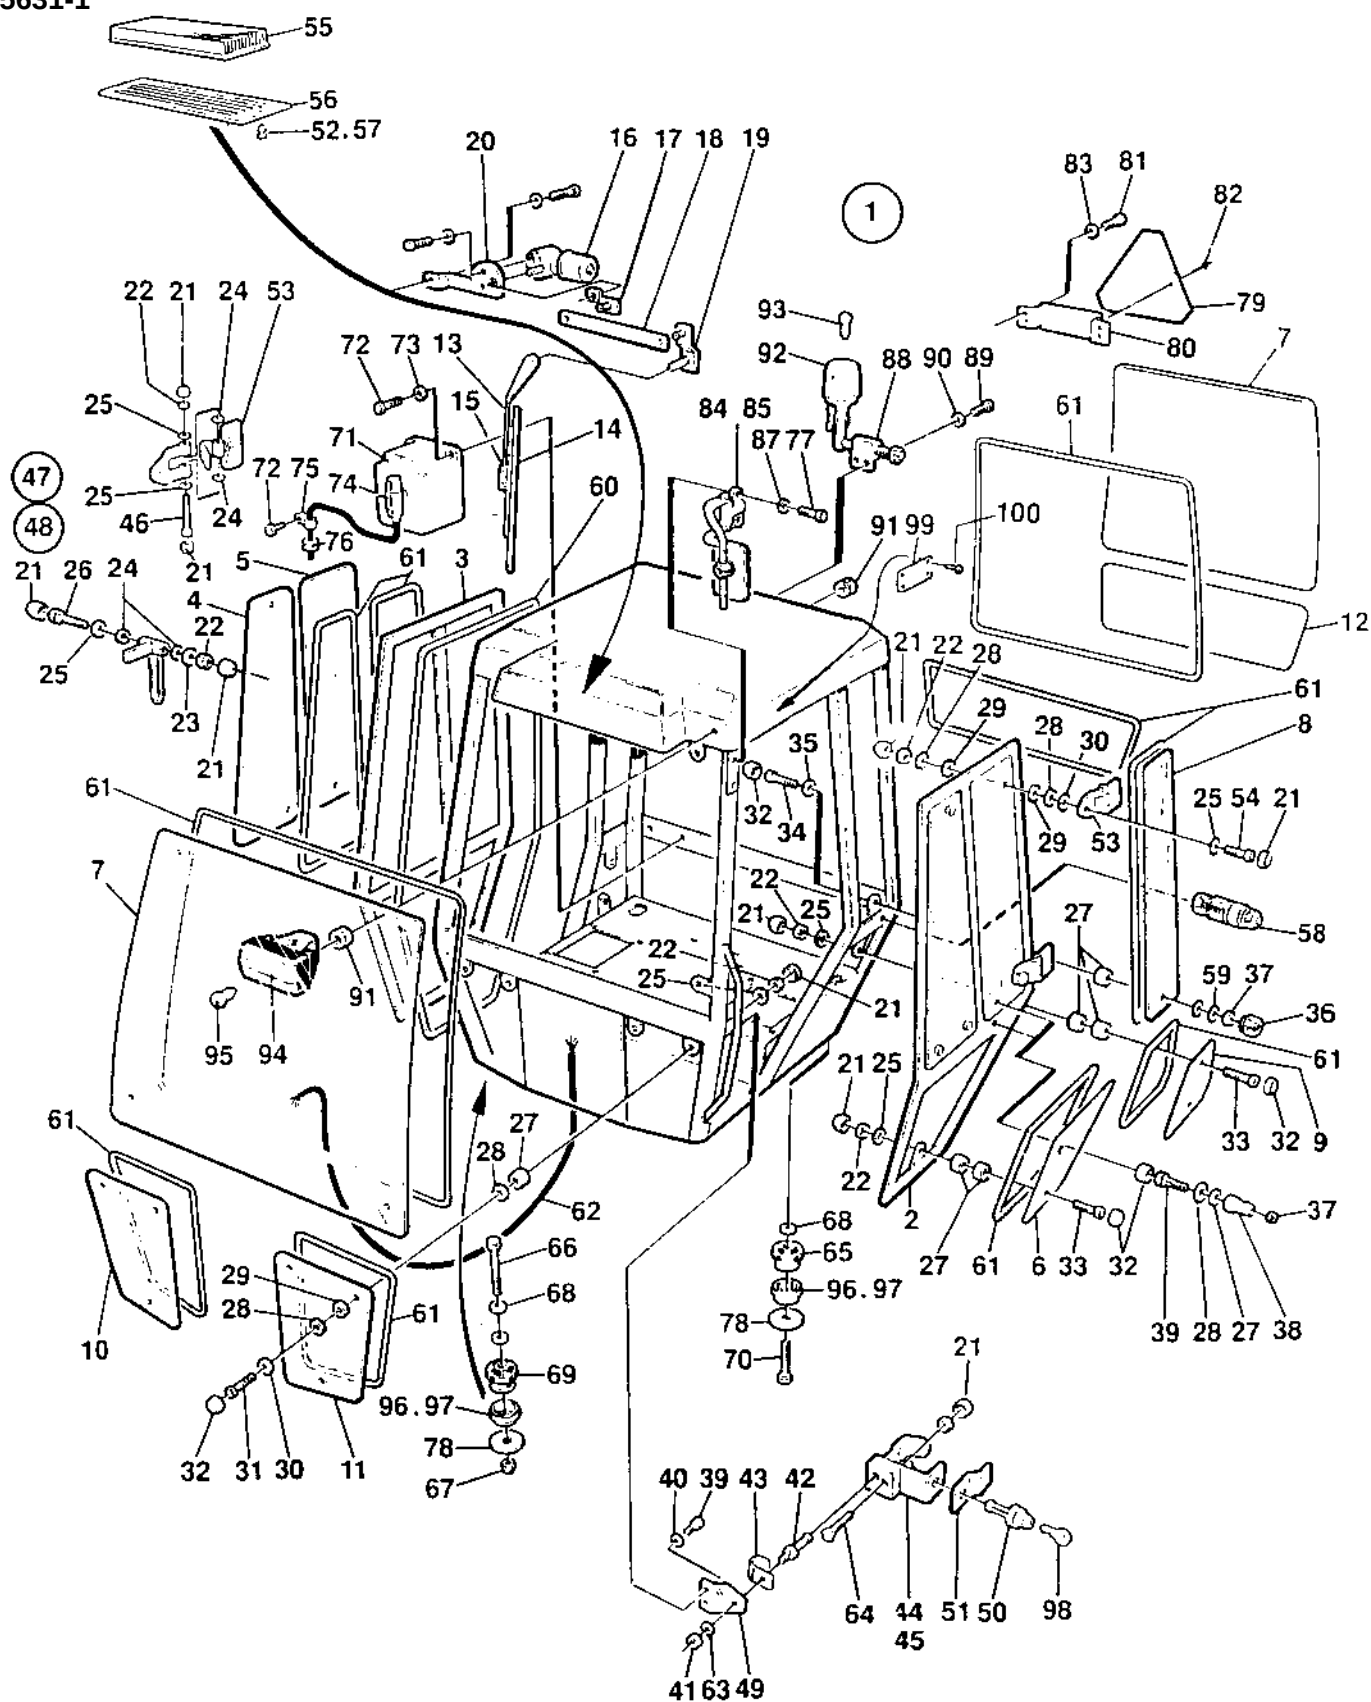

Cab, exterior


Ref. No.	Part No.	Rem.	Qty	Description	Code
81	500012		4	Screw M6x12	
82	903148		4	Rivet	
83	600004		4	Washer	
84	901266	Q	1	Rear mirror	
85	901267	R	1	Rear mirror	
86	901375		1	.Mirror	
87	600004		4	Washer	
88	358452		1	Lamp holder	
89	500019		2	Screw M8-1,25x16 8,8	
90	615043		2	Conical spring washer 8,4x18x2	
91	902891		3	Grommet	
92	999011	S	1	Rotating beacon	D
93	985126		1	.Bulb	B
94	901258		4	Work light	
95	901369	U	4	Bulb 55w H3	B
96	358228		4	Spacer ring	
97	929164		16	Screw	
98	928672		2	Key Marked "1001"	
99	370803		1	Sign, rops	
100	527002		4	Drive screw	
Q)	Right, CPL				
R)	Left, CPL				
S)	CPL, orange				
U)	Work light				

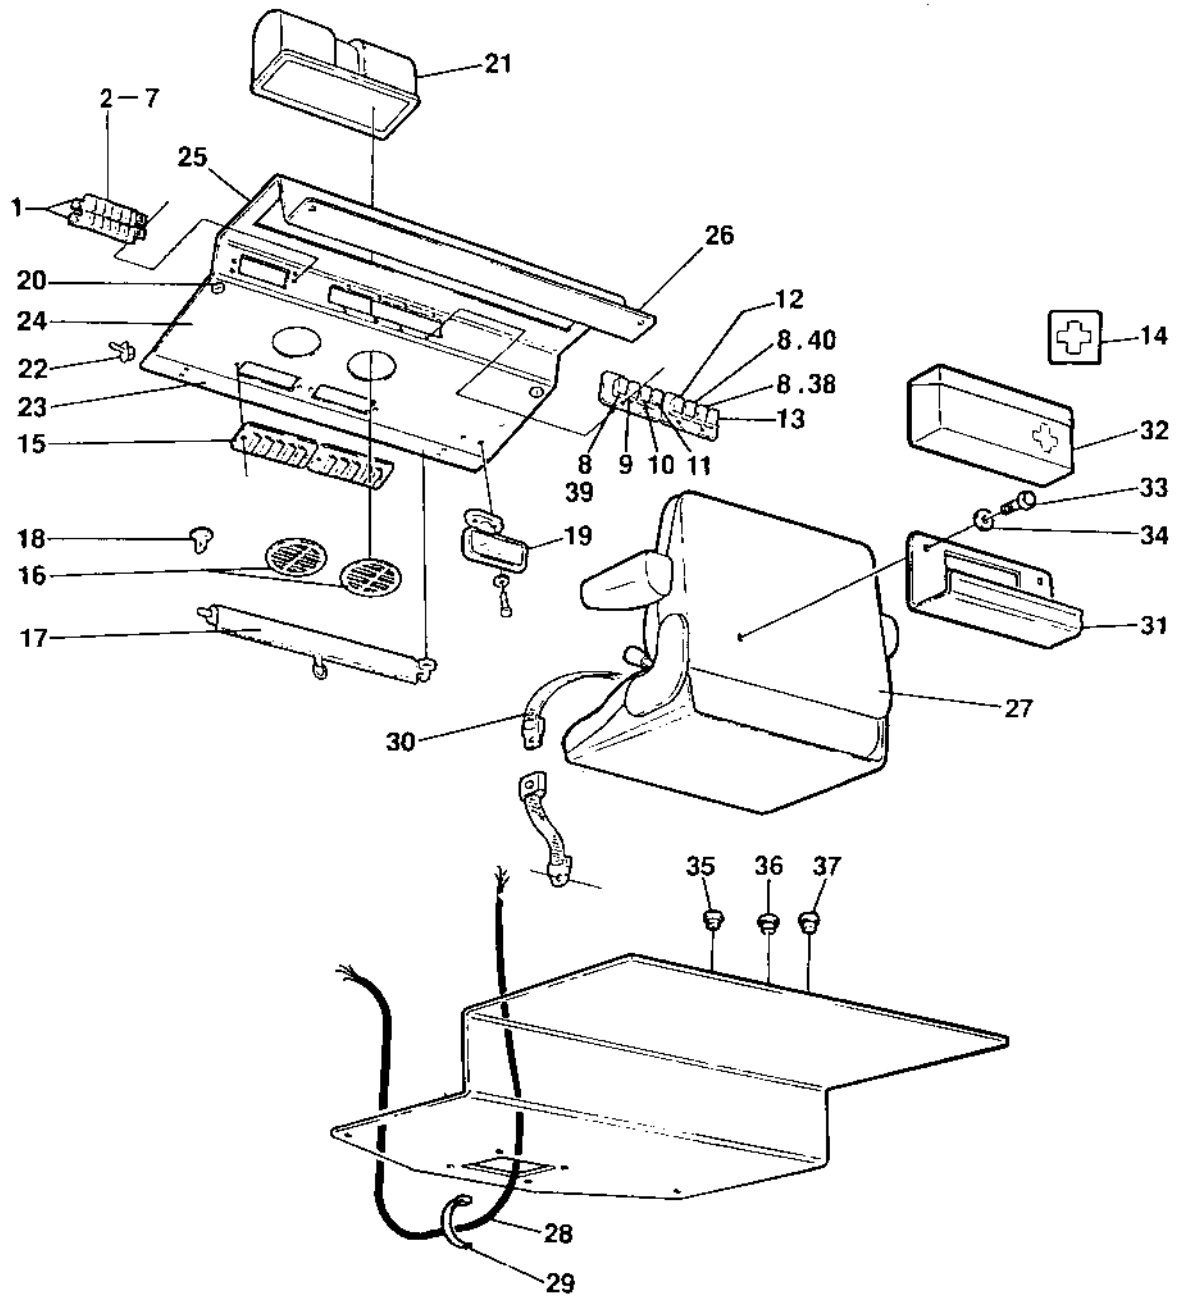

Cab, interior

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901256		2	Fuse box Up to 601X2184	
	901256		1	Fuse box From 601X2190 Up to 601X2208	
	903820		2	Fuse box From 601X2185 Up to 601X2189	D
	903820		1	Fuse box From 601X2209	D
2	901227		5	Fuse 10A	D
3	901224		2	Fuse 3A	D
4	901228		3	Fuse 15A	B
5	901226		2	Fuse 7.5A	D
6	901229		1	Fuse 25A	B
7	901225		1	Fuse 5A	D
8	903128		3	Cover plate	
9	357924	A	1	Switch	D
10	357925	B	1	Switch	D
11	357928	C	1	Switch	D
12	357927	D	1	Switch	D
13	901679	E	1	Switch	D
14	902509	F	1	Decal	
15	903110		2	Air inlet	
16	901366		2	Air inlet	
17	901239		1	Roller blind	
18	901245		2	Suction grip	
19	901572		1	Rear mirror	
20	901578		2	Screw	
21	901143		1	Fan	
22	901238		2	Switch	
23	903118		1	Sun-blind	
24	903119	G	1	Roof	
25	903120	H	1	Roof	
26	903121	I	1	Roof	
27	356415	J	1	Drivers seat	
28	358458		1	Cable harness	
29	313102		N	Cable ties L=388 mm	
30			1	Seat belt	
31	358098		1	Box holder	
32	902508		1	First aid kit	
33	541508		2	Screw	
34	600002		2	Washer	
35	926215		N	Plug	
36	902919		2	Plug	
37	902804		3	Plug	
38	358462	K	1	Switch	D
39	357930	L	1	Switch	D
40	357922	M	1	Switch	D

- A) Wiper front
- B) Wiper rear
- C) Washer rear
- D) Washer front
- E) Fan
- F) First aid box
- G) Front
- H) Headliner
- I) Rear
- J) Grey cloth
- K) Rot. beacon
- L) Rear work light
- M) Front work light

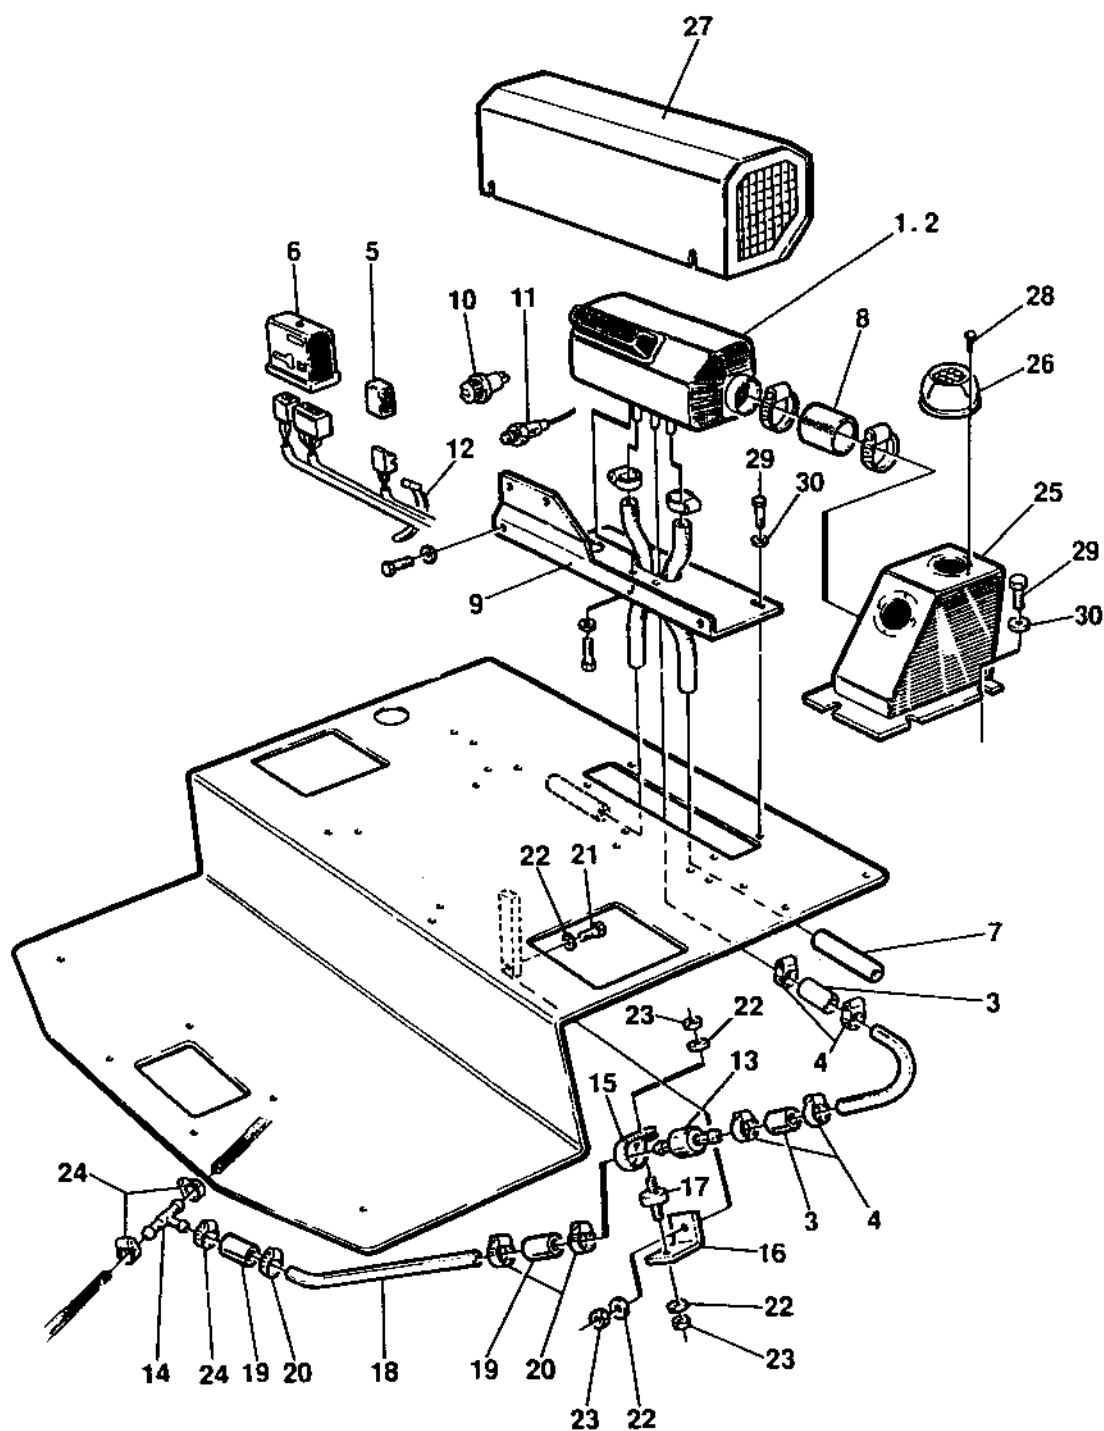


Cab, heater

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901561		1	Heater	
2	901562		1	Heater plug M24	
3	901556	B	2XL	Fuel hose	
4	901559		4	Hose clamp	
5	901565	C	1	Relay	
6	901564		1	Control unit	
7	901563		1	Exhaust hose	
8	901587	B	1XL	Warm air hose	
9	358622		1	Holder plate	D
10	901568		1	Control	
11	901566		1	Sensor	
12	925802		N	Cable ties L=142 mm	
13	901550		1	Fuel pump	
14	903140		1	Connector	
15	901552		1	Clamp	
16	901553		1	Bracket	
17	901554		1	Shock absorber	
18	901555	B	2XL	Fuel pipe	
19	901557	B	2XL	Fuel hose	
20	901558		3	Hose clamp	
21	500013		1	Screw M6-1x16 8,8	
22	615042		4	Conical spring washer	
23	570004		3	Nut M6	
24	313108		3	Hose clamp	
25	358595		1	Air inlet cover	
26	901571		2	Air nozzle	
27	358620		1	Protection cover	
28	526007		6	Screw	
29	500012		10	Screw M6x12	
30	600004		10	Washer	


B) Length as required

C) Heater

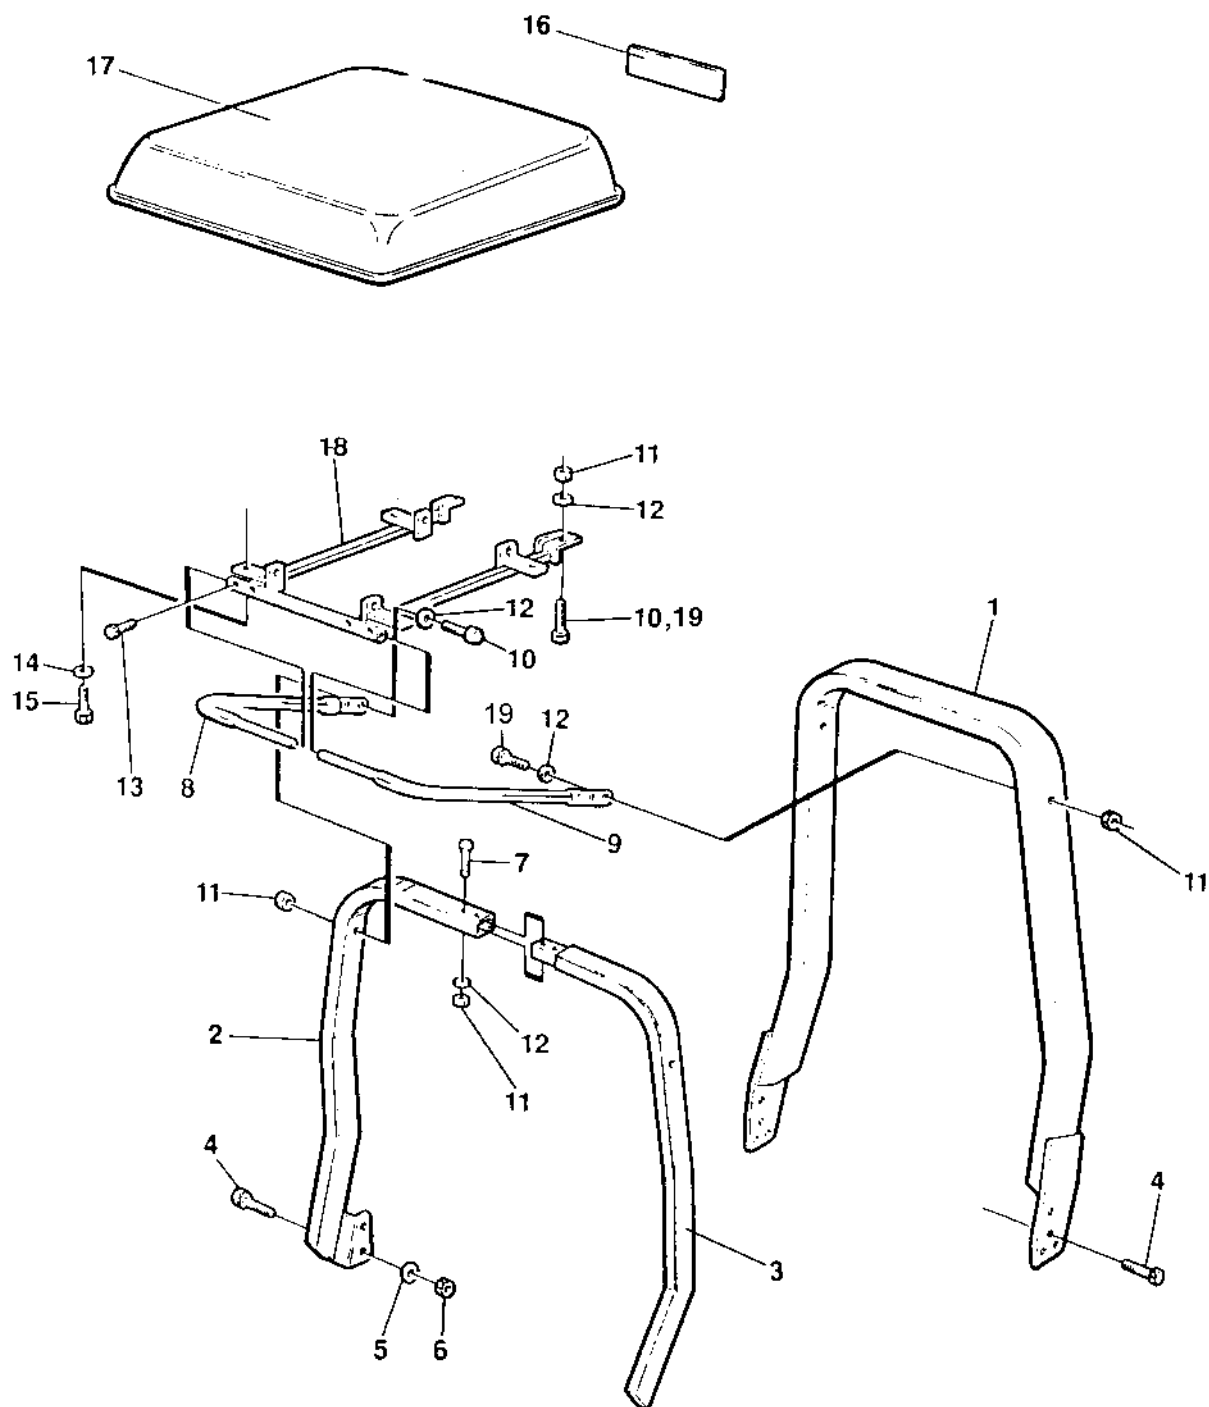

Canopy


Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1		Rops	
2	358801	A	1	Frame	
3	358802	B	1	Frame	
4	500030		4	Screw M10-1,5x35H 8,8	
5	600008		6	Washer	
6	586018		2	Lock nut M10	
7	500195		2	Screw M12-1,75x50 8.8	
8	358789	A	1	Frame	
9	358790	B	1	Frame	
10	500111		2	Screw M12x55 8,8	
	500133		2	Screw M12x70	
11	586019		6	Lock nut M12	
	586019	2	4	Lock nut M12	
12	904231		12	Washer 13x24x2	
	904231	2	8	Washer 13x24x2	
13	516042		4	Stop screw	
14	904229		4	Washer 8,4x16x1,5	
15	500021		4	Screw M8-1,25x25 8,8	
16	904094		1	Decal "DYNAPAC" L=670 mm	
17	358782		1	Canopy	
18	358783		1	Frame	
19	500071	2	4	Screw M12-1,75x75 8,8	
1)	Rops, see section " Rops "				
2)	Canopy for rops				
A)	Right				
B)	Left				

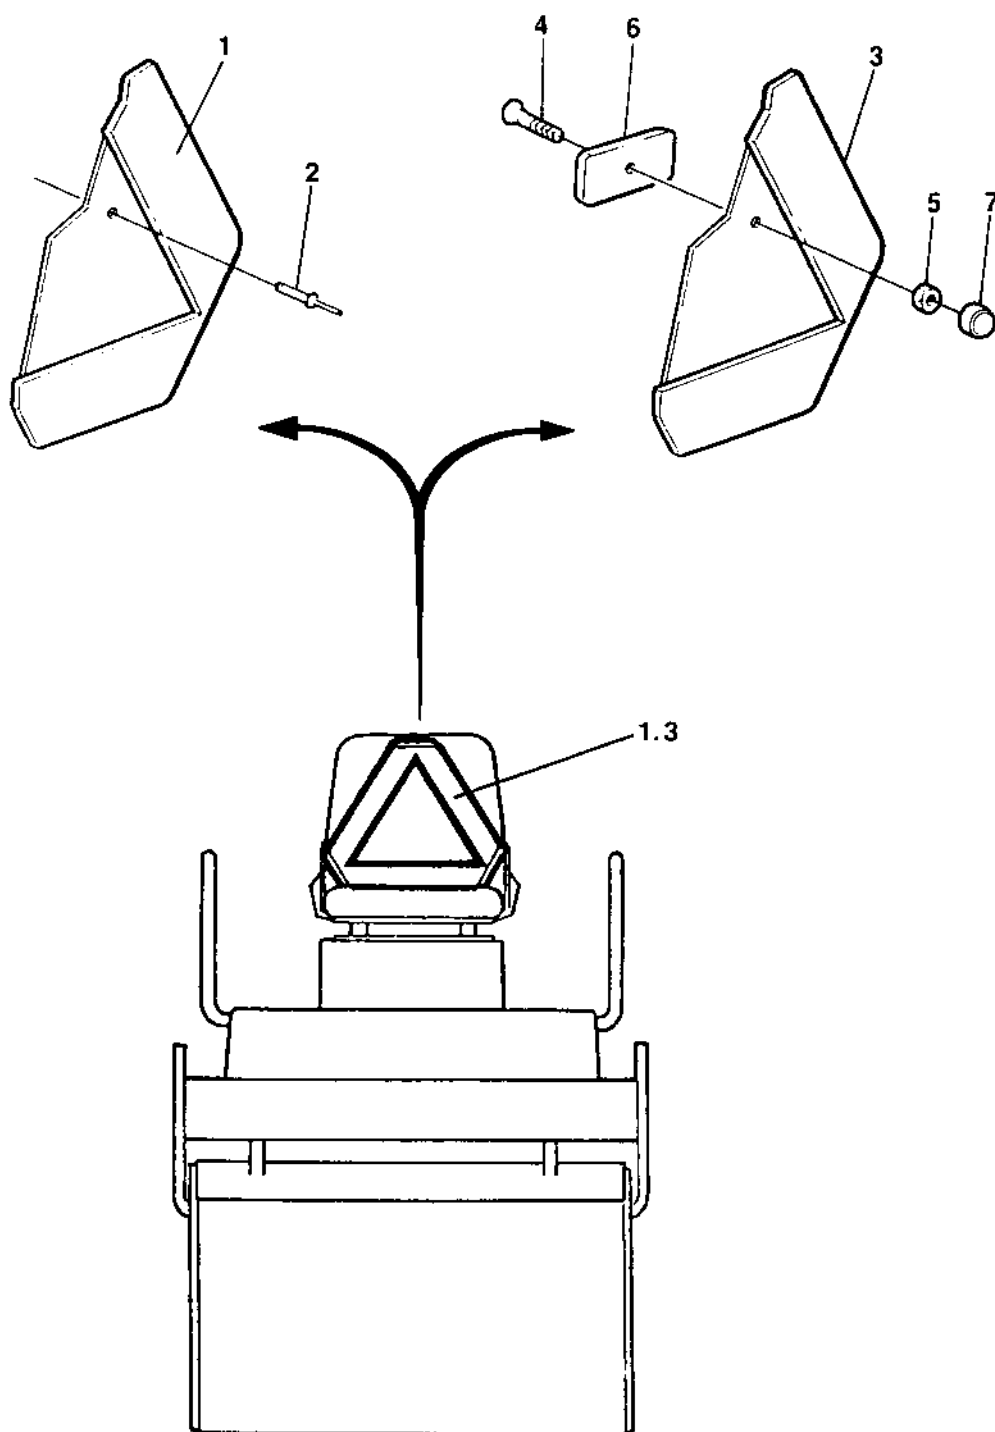

SMV sign



Ref. No.	Part No.	Rem.	Qty	Description	Code
1	476019		1	SMV sign Up to 601X3599	D
2	624011		6	Pop rivet Up to 601X3599	
3	476019		1	SMV sign From 601X3600	D
4	513013	A	2	Screw	
5	570005	A	2	Nut M8	
6	374460	A	2	Spacer	
7	904203	A	2	Nut protection	

A) S/N see item 3, on seats with armrests use existing

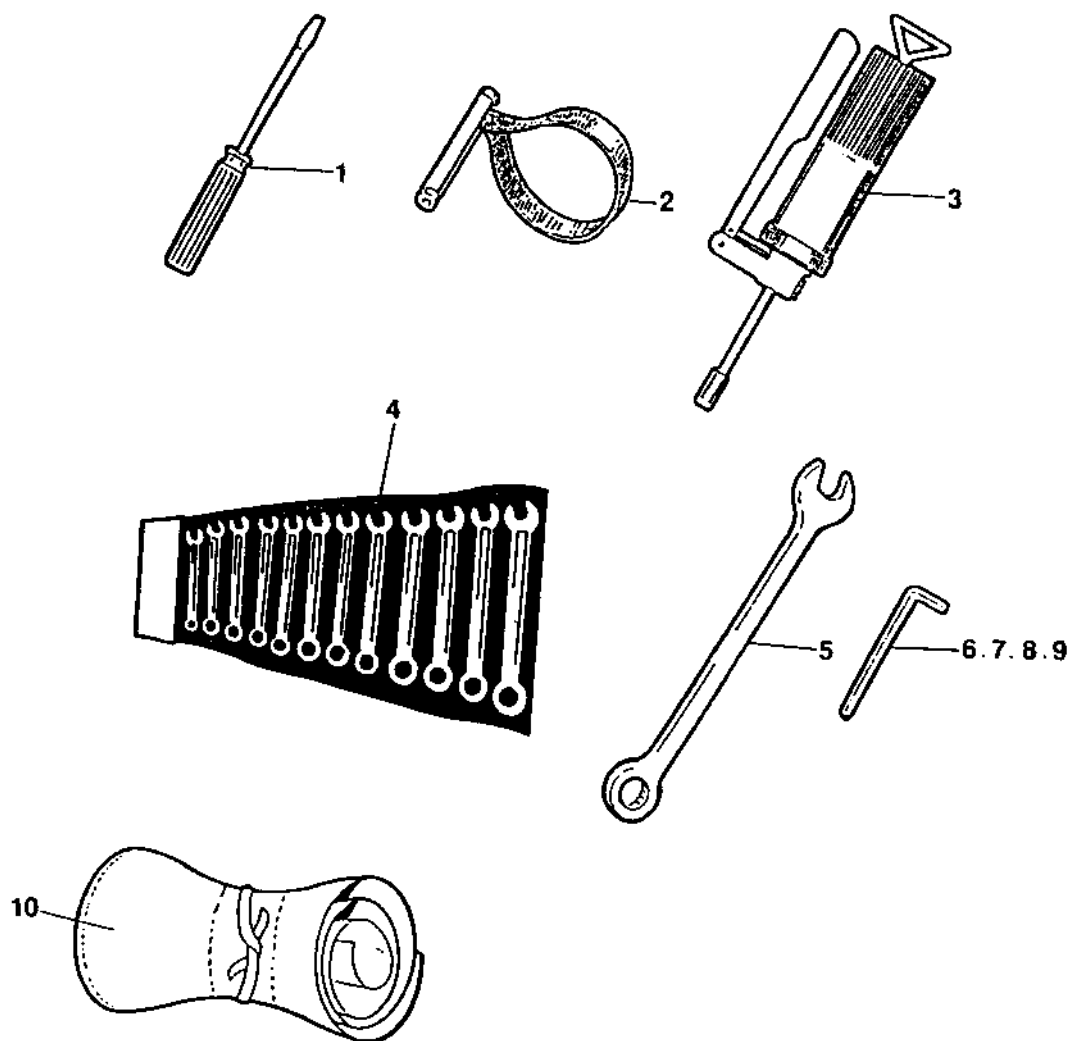

Tool equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	485019		1	Screw driver	
2	902610		1	Belt pliers	
3	311016		1	Grease gun	
4	901212	A	1	Open end spanner	
5	902578		1	Open end spanner 22 mm	
6	485005		1	Allen wrench 1/4"	
7	485037		1	Allen wrench 3/8"	
8	485388		1	Allen wrench 6 mm	
9	485006		1	Allen wrench 8 mm	
10	277992		1	Tool bag	
A)	Kit				

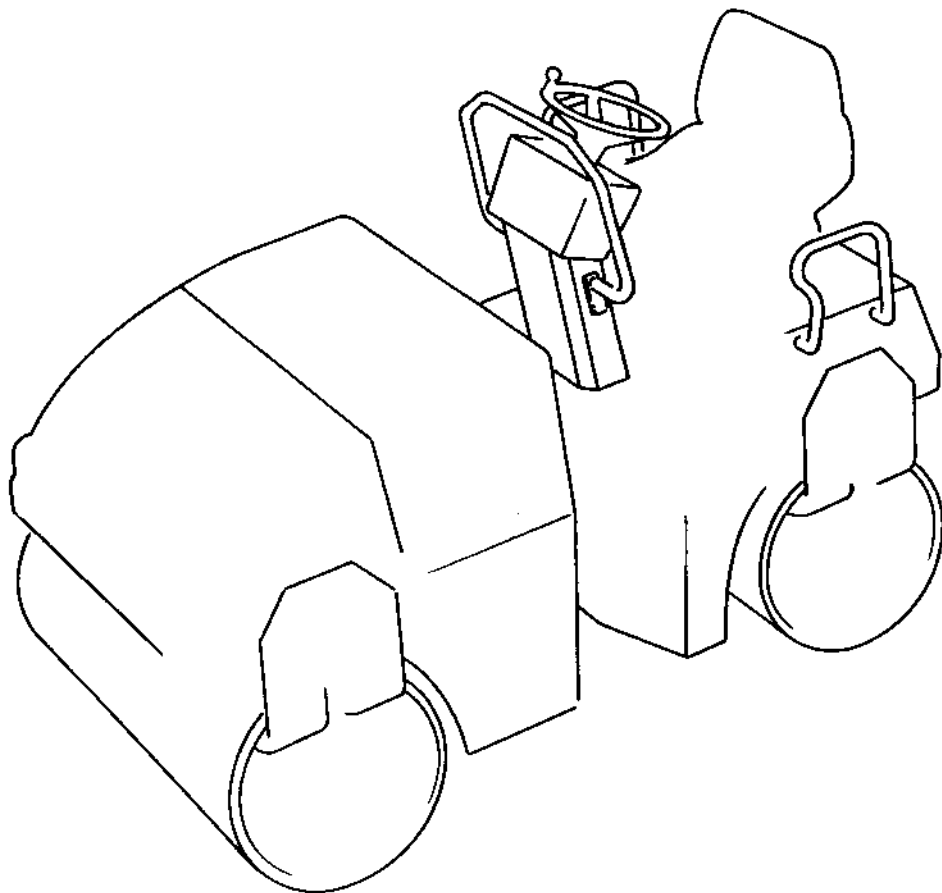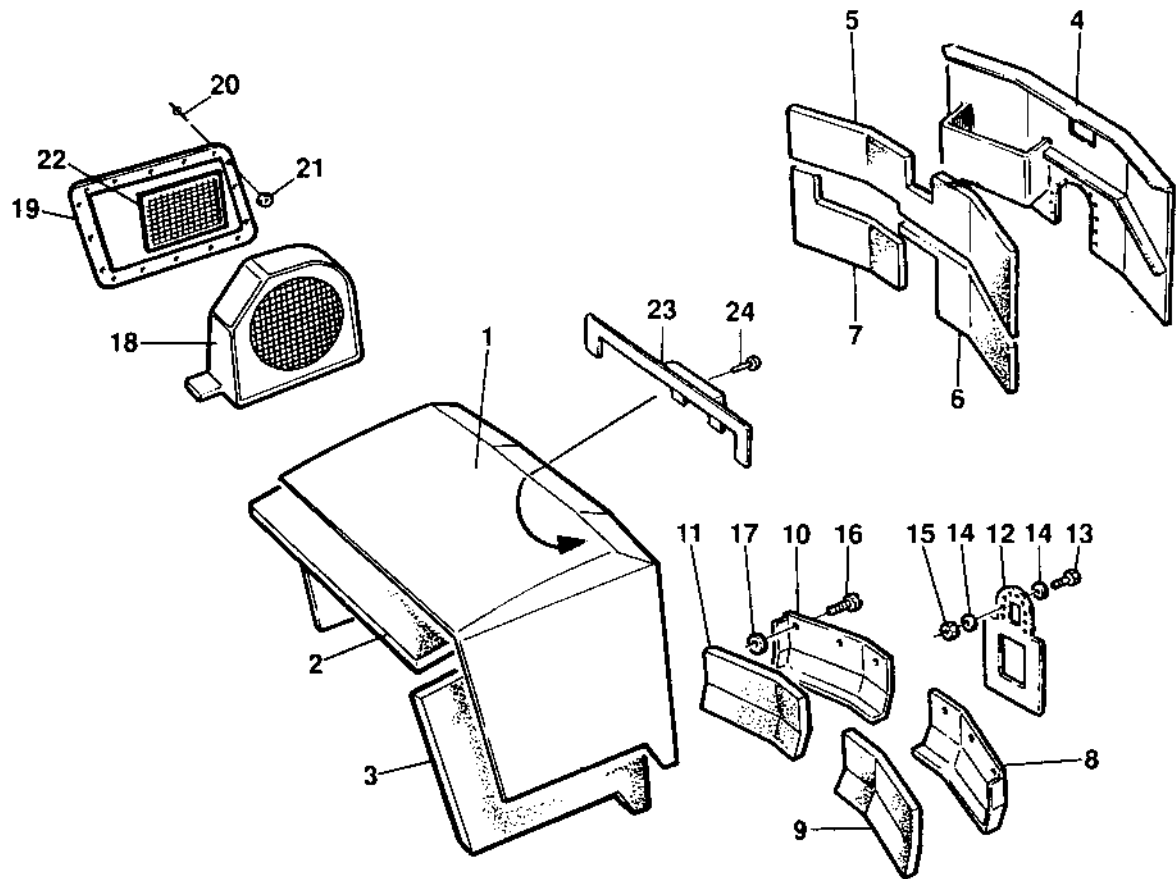

Noise suppression DEUTZ , 78 dB


Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1	1	Hood	
2	358324		1	Absorbent	
3	358325		1	Absorbent	
4	358329		1	Cover Up to 60115580	
	382563		1	Cover From 60115581	
5	358333		1	Absorbent	
6	358332		1	Absorbent	
7	358331		1	Absorbent Up to 60115580	
	382568		1	Absorbent From 60115581	
8	358338		1	Cover	
9	358339		1	Absorbent	
10	358335		1	Cover	
11	358336		1	Absorbent	
12	358342		1	Rubber cloth	
13	500040		9	Screw M6-1x20 8,8	
14	615065		18	Washer	
15	586002		9	Lock nut M6	
16	922875		6	Lock pin	
17	926985		6	Quick lock washer	
18	358549		1	Cover Up to 60111642	
	374087		1	Cover From 60111643	
	358558		1	.Absorbent	
	358561		1	.Absorbent	
19	358551		1	Cover	
20	903369		20	Rivet	
21	902111		20	Washer	
22	902166	A	1XL	Edge trim	
23	374100		1	Holder	
24	500075		2	Screw M6-1x25 8,8	

1) See section " Structure "

A) Length as required

Noise suppression DEUTZ , 73 dB

15587-2

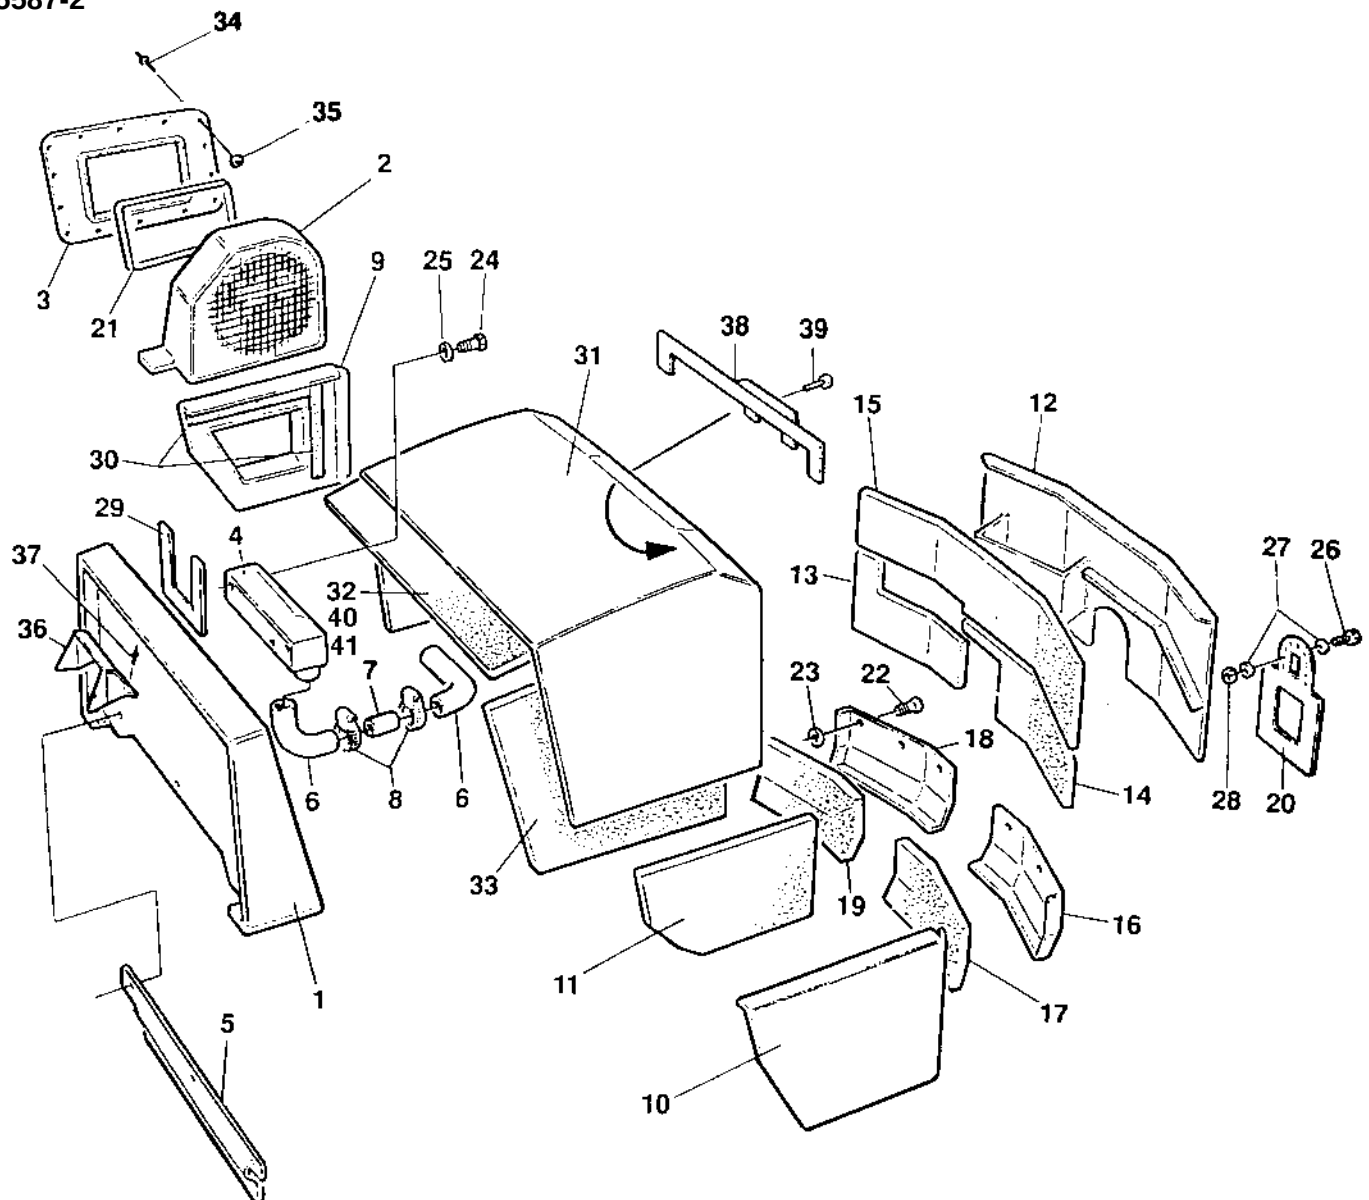


Noise suppression DEUTZ , 73 dB

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358540		1	Hood frame	
2	358549		1	Cover Up to 60111642	
	374087		1	Cover From 60111643	
	358558		1	.Absorbent	
	358561		1	.Absorbent	
3	358551		1	Cover	
4	358545		1	Cover	
5	358536		1	Cover	
6	358552		2	Air inlet hose	
7	358553		1	Pipe	
8	313023		2	Hose clamp	
9	358557		1	Cover	
10		1	1	Cover	
11	358341		1	Absorbent	
12	358329		1	Cover Up to 60115580	
	382563		1	Cover From 60115581	
13	358331		1	Absorbent Up to 60115580	
	382568		1	Absorbent From 60115581	
14	358332		1	Absorbent	
15	358333		1	Absorbent	
16	358338		1	Cover	
17	358339		1	Absorbent	
18	358335		1	Cover	
19	358336		1	Absorbent	
20	358342		1	Rubber cloth	
21	902166	A	1XL	Edge trim	
22	922875		6	Lock pin	
23	926985		6	Quick lock washer	
24	500190		3	Screw	
25	600006		3	Washer	
26	500040		9	Screw M6-1x20 8,8	
27	615065		18	Washer	
28	586002		9	Lock nut M6	
29	928937	A	1XL	Rubber strip	
30	202043	A	1XL	Rubber strip	
31		1	1	Hood	
32	358324		1	Absorbent	
33	358325		1	Absorbent	
34	903369		20	Rivet	
35	902111		20	Washer	
36	359769		1	Protection cover	
37	903436		5	Blind rivet	
38	374100		1	Holder	
39	500075		2	Screw M6-1x25 8,8	
40	791233		2	Holder	
41	791234		2	Insulating washer	

1) See section " Structure "


A) Length as required

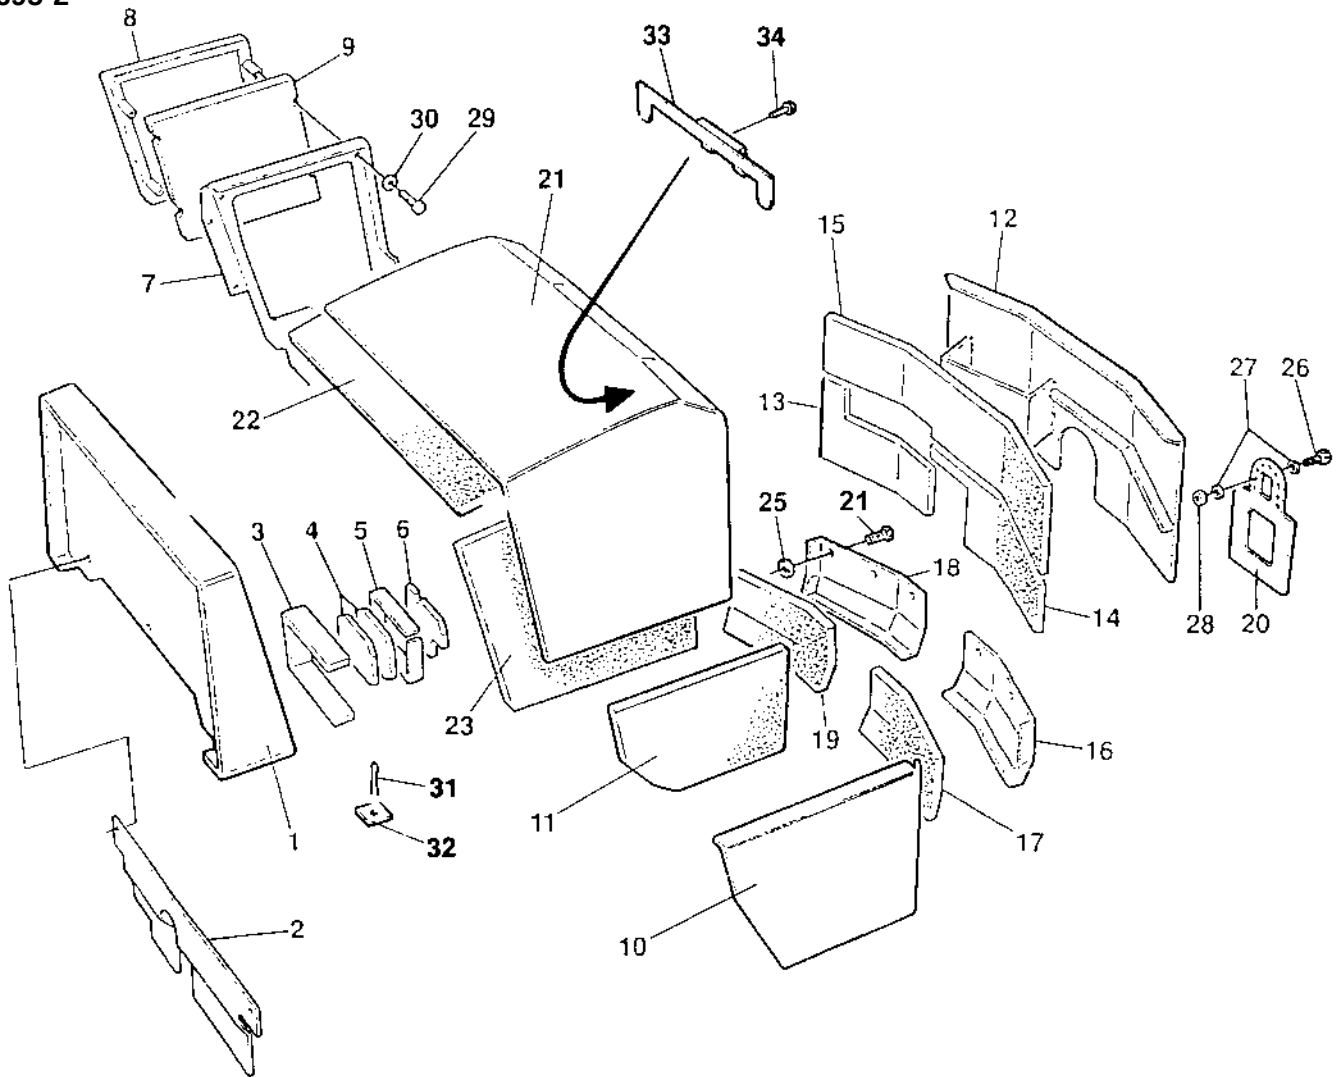

Noise suppression ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1	1	Hood frame	
2	370719		1	Cover	
3	370740		1	Absorbent	
4	370741		2	Absorbent	
5	370742		1	Absorbent	
6	370743		1	Absorbent	
7	370647		1	Cover	
8	370721		1	Cover	
9	370722		1	Absorbent	
10		1	1	Cover	
11	358341		1	Absorbent	
12	358329		1	Cover Up to 60125580	
	382563		1	Cover From 60125581	
13	358331		1	Absorbent Up to 60125580	
	382568		1	Absorbent From 60125581	
14	358332		1	Absorbent	
15	358333		1	Absorbent	
16	358338		1	Cover	
17	358339		1	Absorbent	
18	358335		1	Cover	
19	358336		1	Absorbent	
20	358342		1	Rubber cloth	
21		1	1	Engine hood	
22	358324		1	Absorbent	
23	358325		1	Absorbent	
24	922875		6	Lock pin	
25	926985		6	Quick lock washer	
26	500040		9	Screw M6-1x20 8,8	
27	615065		18	Washer	
28	586002		9	Lock nut M6	
29	500018		4	Screw M8-1,25x12 8,8	
30	615043		4	Conical spring washer 8,4x18x2	
31	630035		10	Split pin	D
32	358646		10	Washer	
33	374100		1	Holder	
34	500075		2	Screw M6-1x25 8,8	

1) See section "Structure"

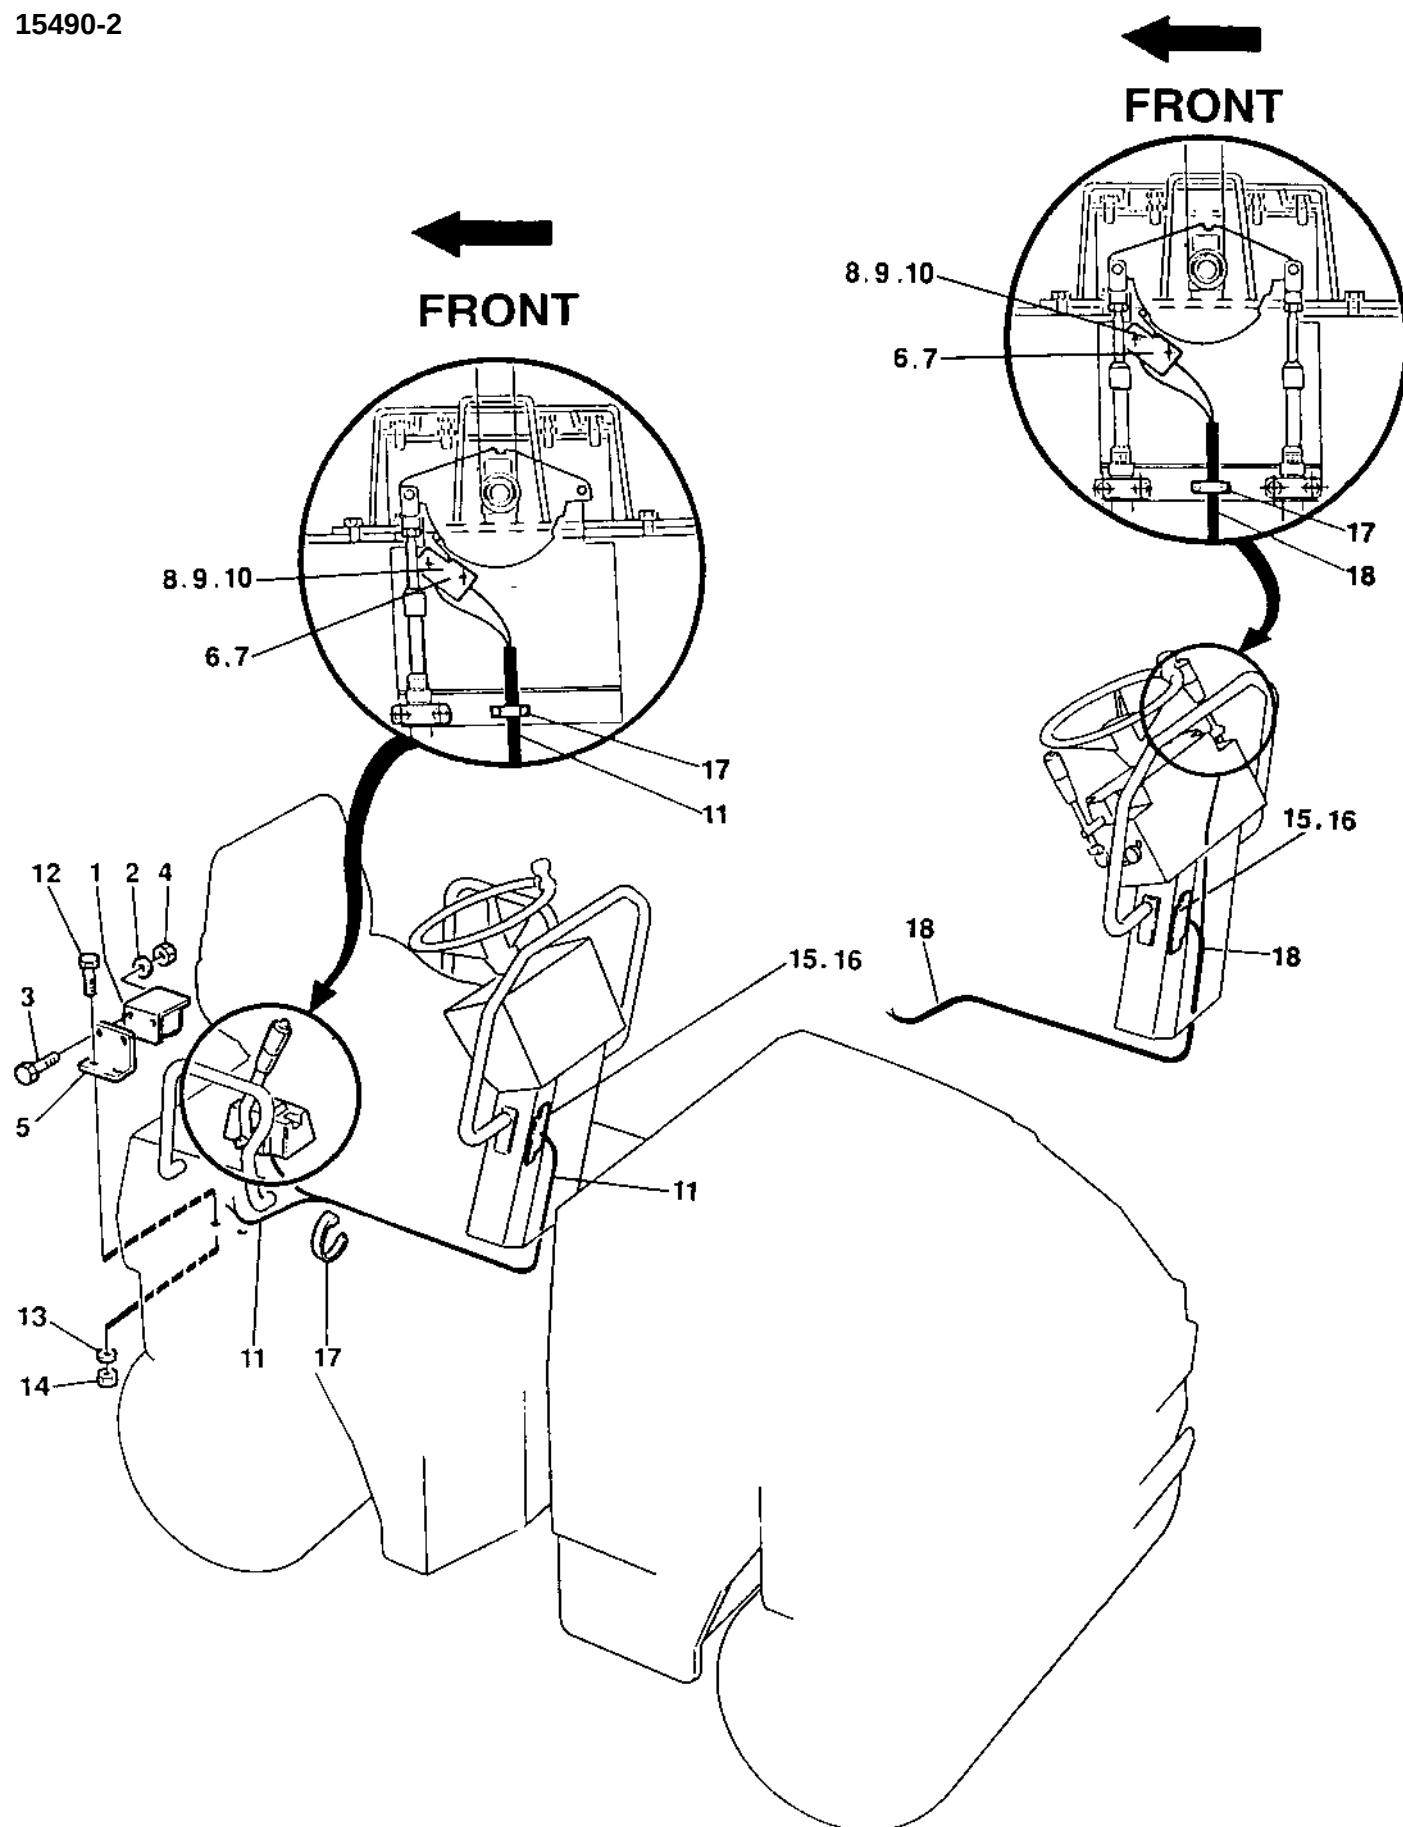


Back-up alarm

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	903241		1	Back-up alarm 97 dB	D
2			4	.Washer	D
3			4	.Screw	D
4			4	.Nut	D
5	357993		1	Holder plate	
6	357994		1	Spacer nut	
7	902528		1	Micro switch	
8	533057		2	Screw	
9	929602		2	Washer	
10	375892		1	Spacer nut	
11	357973	A	1	Cable harness	
12	500040		2	Screw M6-1x20 8,8	
13	600004		2	Washer	
14	586002		2	Lock nut M6	
15	901240		2	Connector	
16	901226		1	Fuse 7.5A	D
17	313068		N	Cable ties L=92 mm	
18	370660	C	1	Cable harness	

A) DEUTZ
C) ISUZU

Rear mirror


15491-2

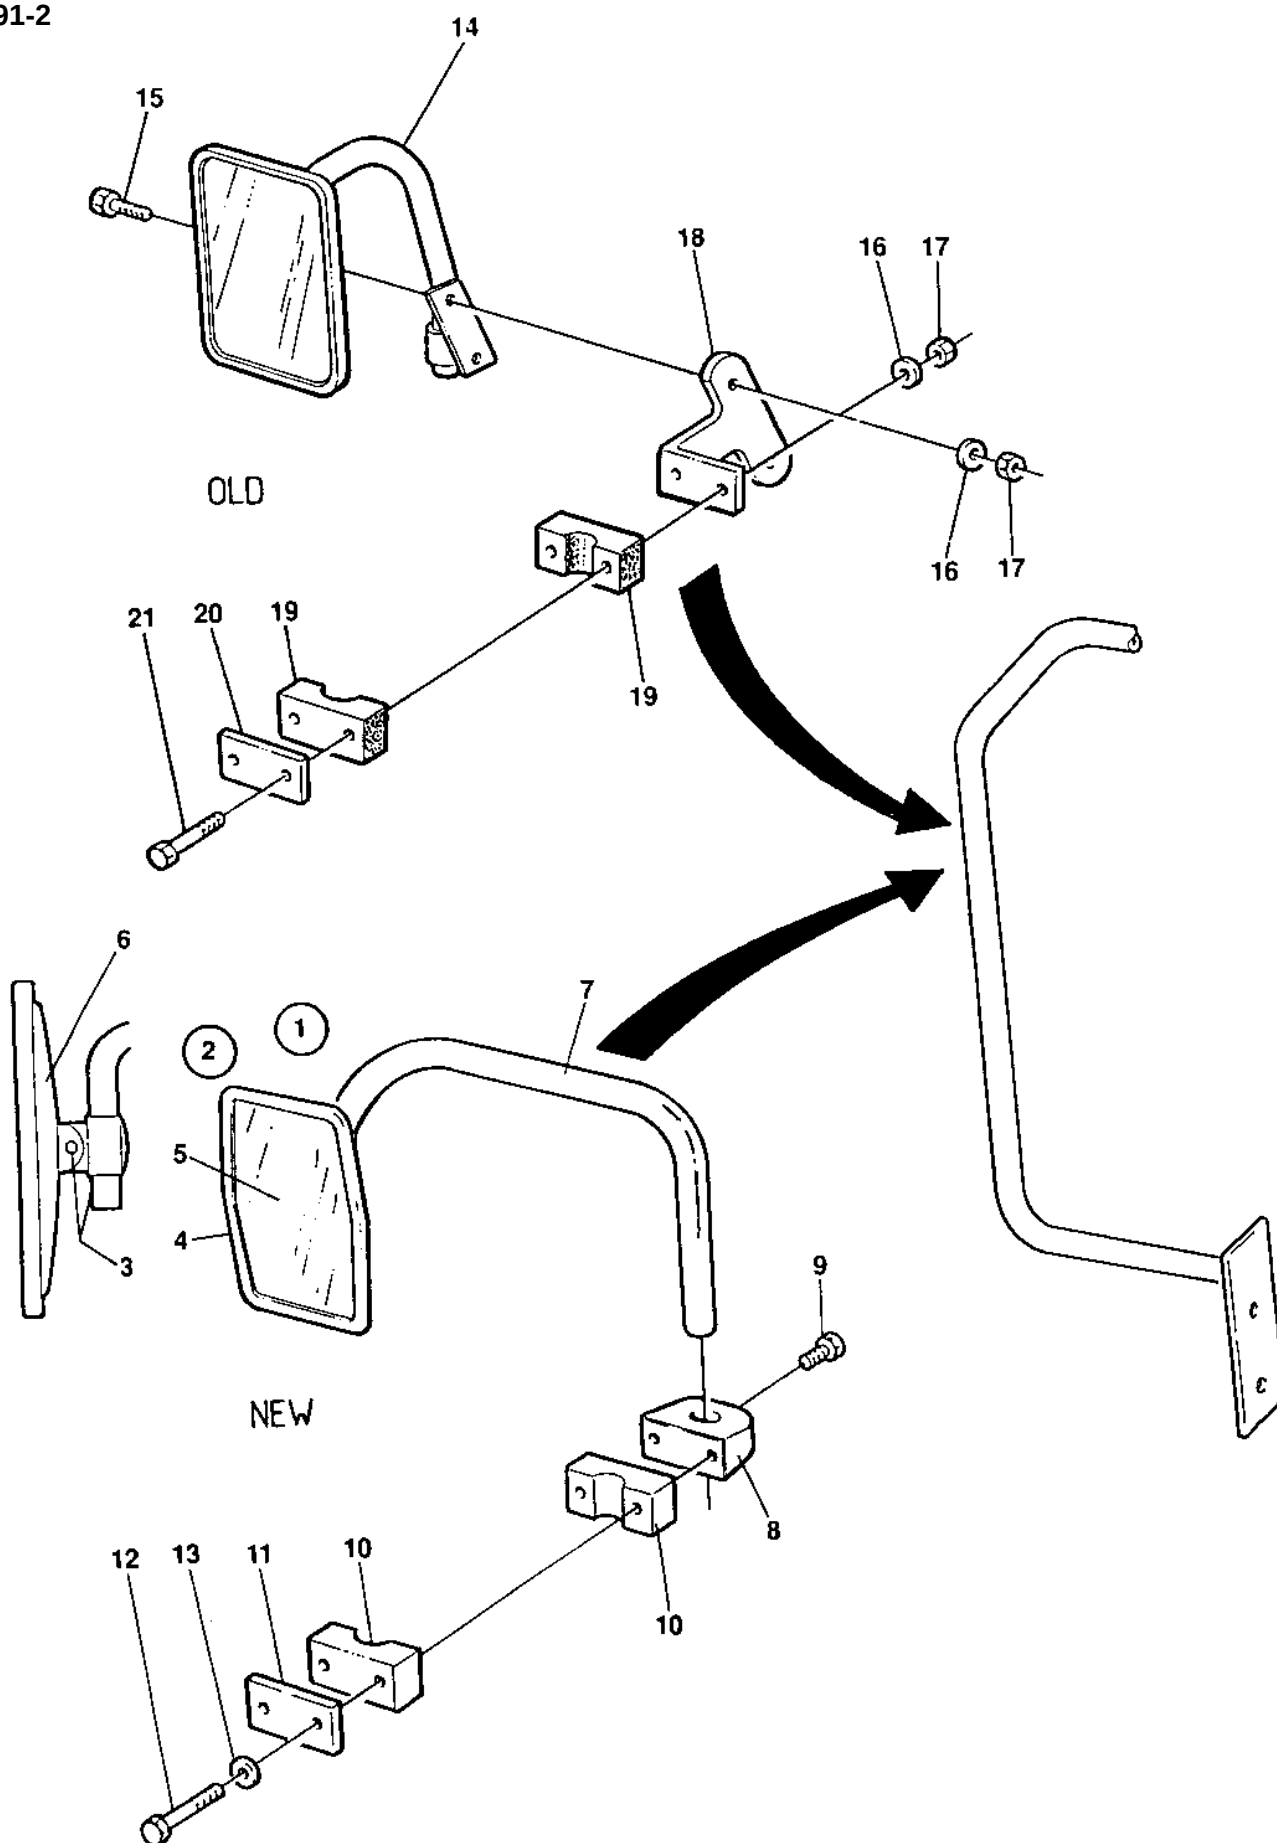

Rear mirror

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	359662	A	1	Rear mirror	
2	909498		1	.Mirror	
3			1	..Mirror	
4			1	..Frame	
5	903722	B	1	..Mirror glass	D
6			1	..Mirror cap	D
7	359661		1	.Arm	
8	359660		1	Mirror bracket	
9	516043		1	Set screw	
10	902496	C	1	Clamp	
11	923859		1	Cover plate	
12	500079		2	Screw M6-1x50 8,8	
13	615042		2	Conical spring washer	
14	355705		1	Rear mirror	D
15	902845		2	Screw	
16	600004		4	Washer	
17	586002		4	Lock nut M6	
18	357939		1	Holder plate	
19	902496	C	1	Clamp	
20	923859		1	Cover plate	
21	500016		2	Screw M6-1,0x55 8,8	


- A) CPL
B) W. tape
C) 2 pcs

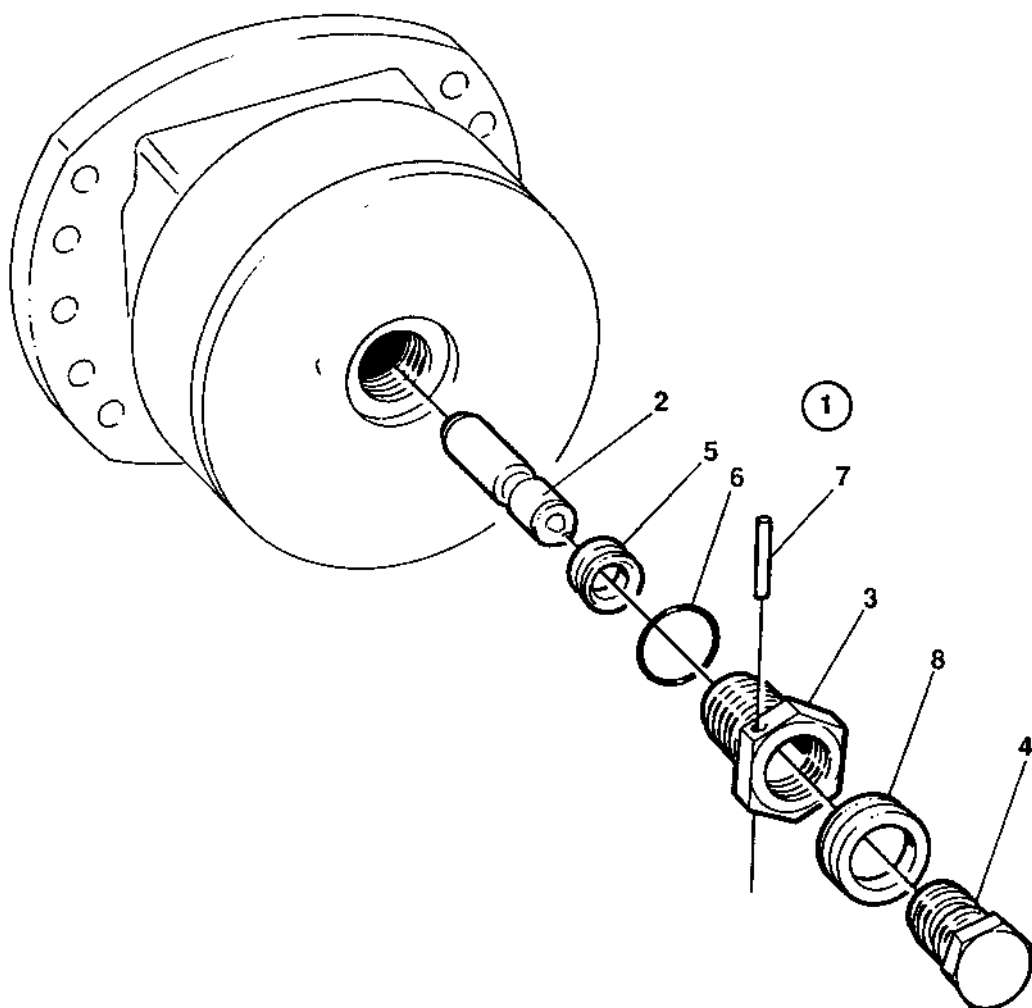

Brake release, propulsion motor


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	373057	1	2	Brake release kit	
2	373029		1	.Stud	
3	381253		1	.Plug	
4	381252		1	.Plug	
5	904030		1	.Seal	
6	160363		1	.O-ring	
7	904029		1	.Pin	
8	903835		1	.Seal	

1) For hydraulic motors P/N 371542 and P/N 375631.

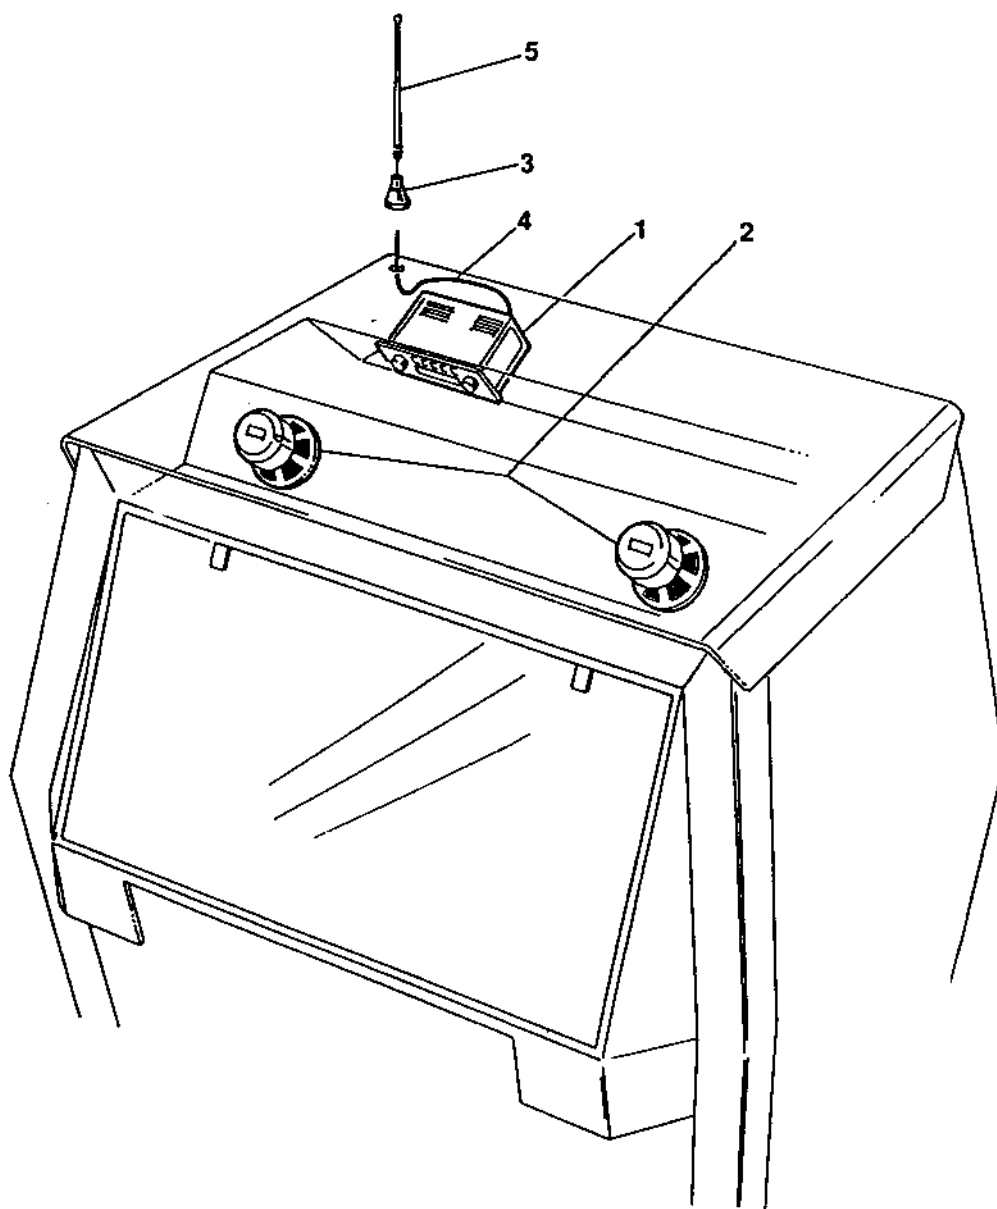


Cassette receiver

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901165		1	Cassette receiver	
2	901166	A	1	Loud speakers	
3	901168		1	Antenna holder	
4	901169		1	Antenna cable	
5	901167		1	Antenna	
A)	2 pcs				

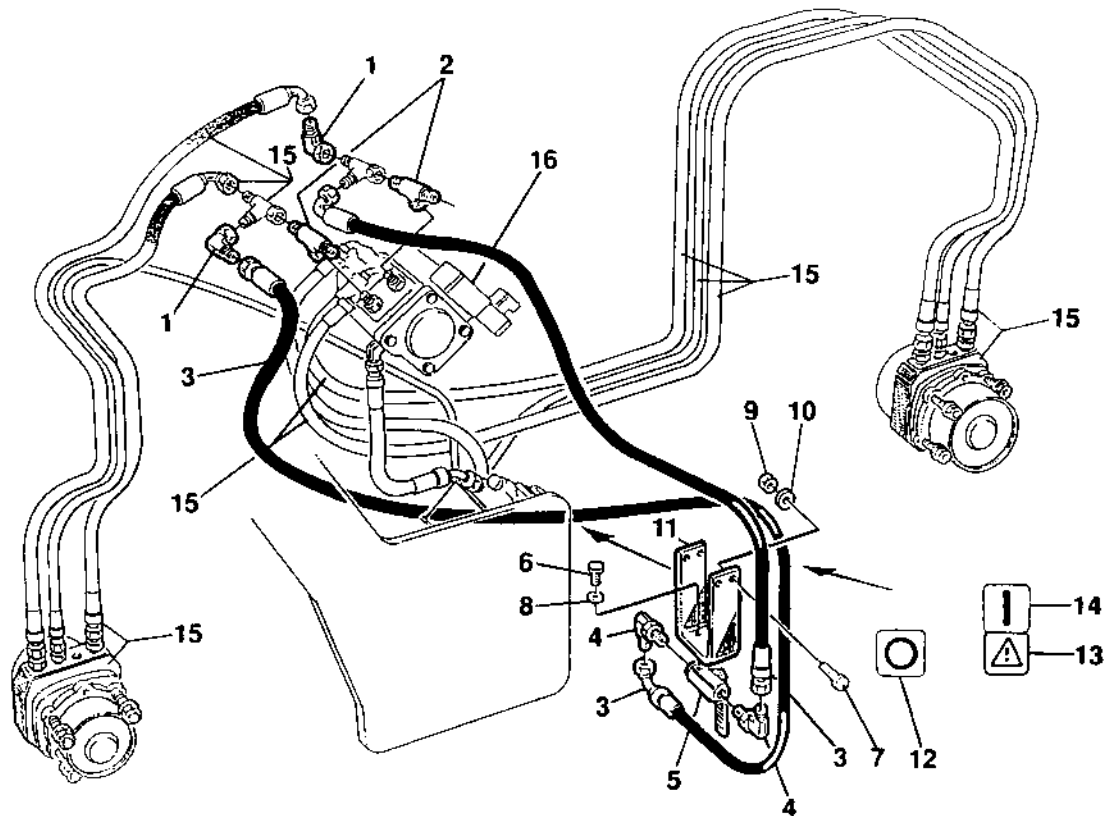


Shut-off valve, propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	334197		2	Elbow 90	
2	334135		2	T-connector	
3	482828		2	Hydraulic hose	
4	813435		2	Adapter	
5	344138		1	Ball valve	
6	500004		2	Screw M5 0,8x12 8,8	
7	500022		4	Screw M8-1,25x30 8,8	
8	615041		2	Washer 5,3x11	
9	586003		4	Lock nut M8	
10	600006		4	Washer	
11	358165		1	Bracket	
12	356922		1	Decal	
13	356924		1	Decal	
14	356923		1	Decal	
15		N		Hydraulic details	
16			1	Hydraulic pump	

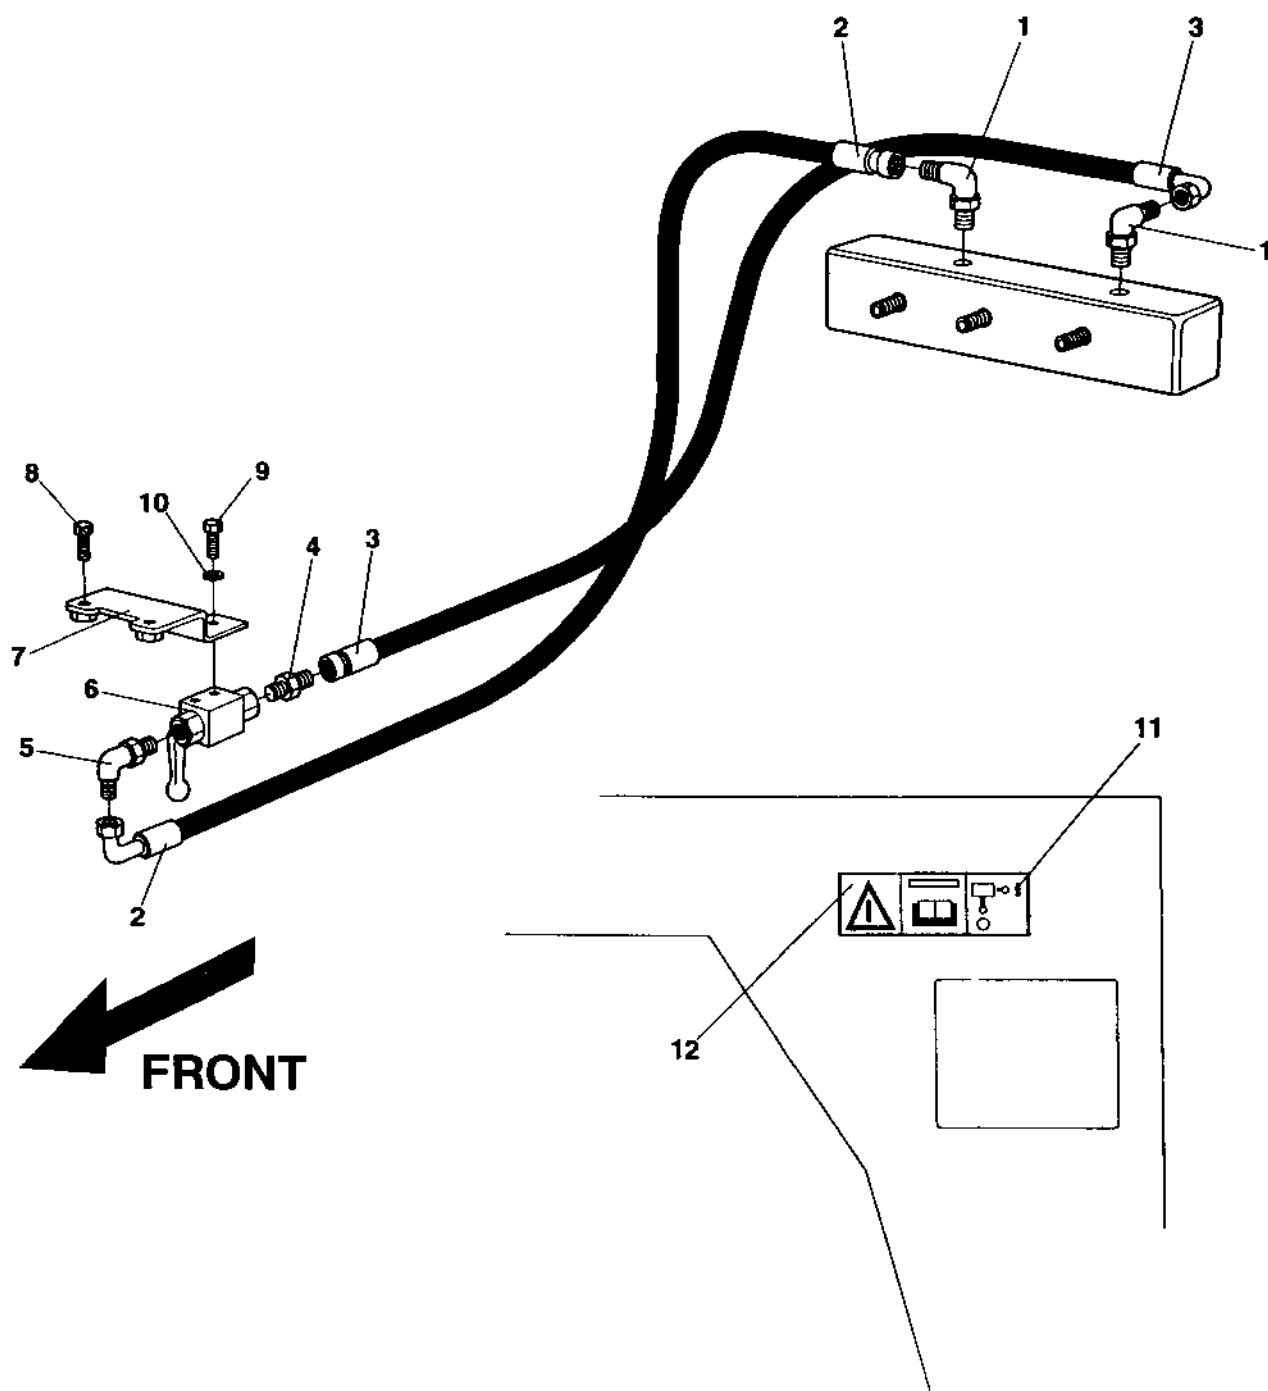


Towing valve

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	813444		2	Elbow 90, O-ring	
2	831150		1	Hydraulic hose	
3	831150		1	Hydraulic hose	
4	334117		1	Adapter	
5	813435		1	Adapter	
6	344138		1	Ball valve	
7	358586		1	Holder plate	
8	500022		2	Screw M8-1,25x30 8,8	
9	500184		2	Screw M5-0,8x14 8,8	
10	615041		2	Washer 5,3x11	
11	374101		1	Decal "SHUT-OFF VALVE"	
12	903459		1	Decal "SAFETY"	

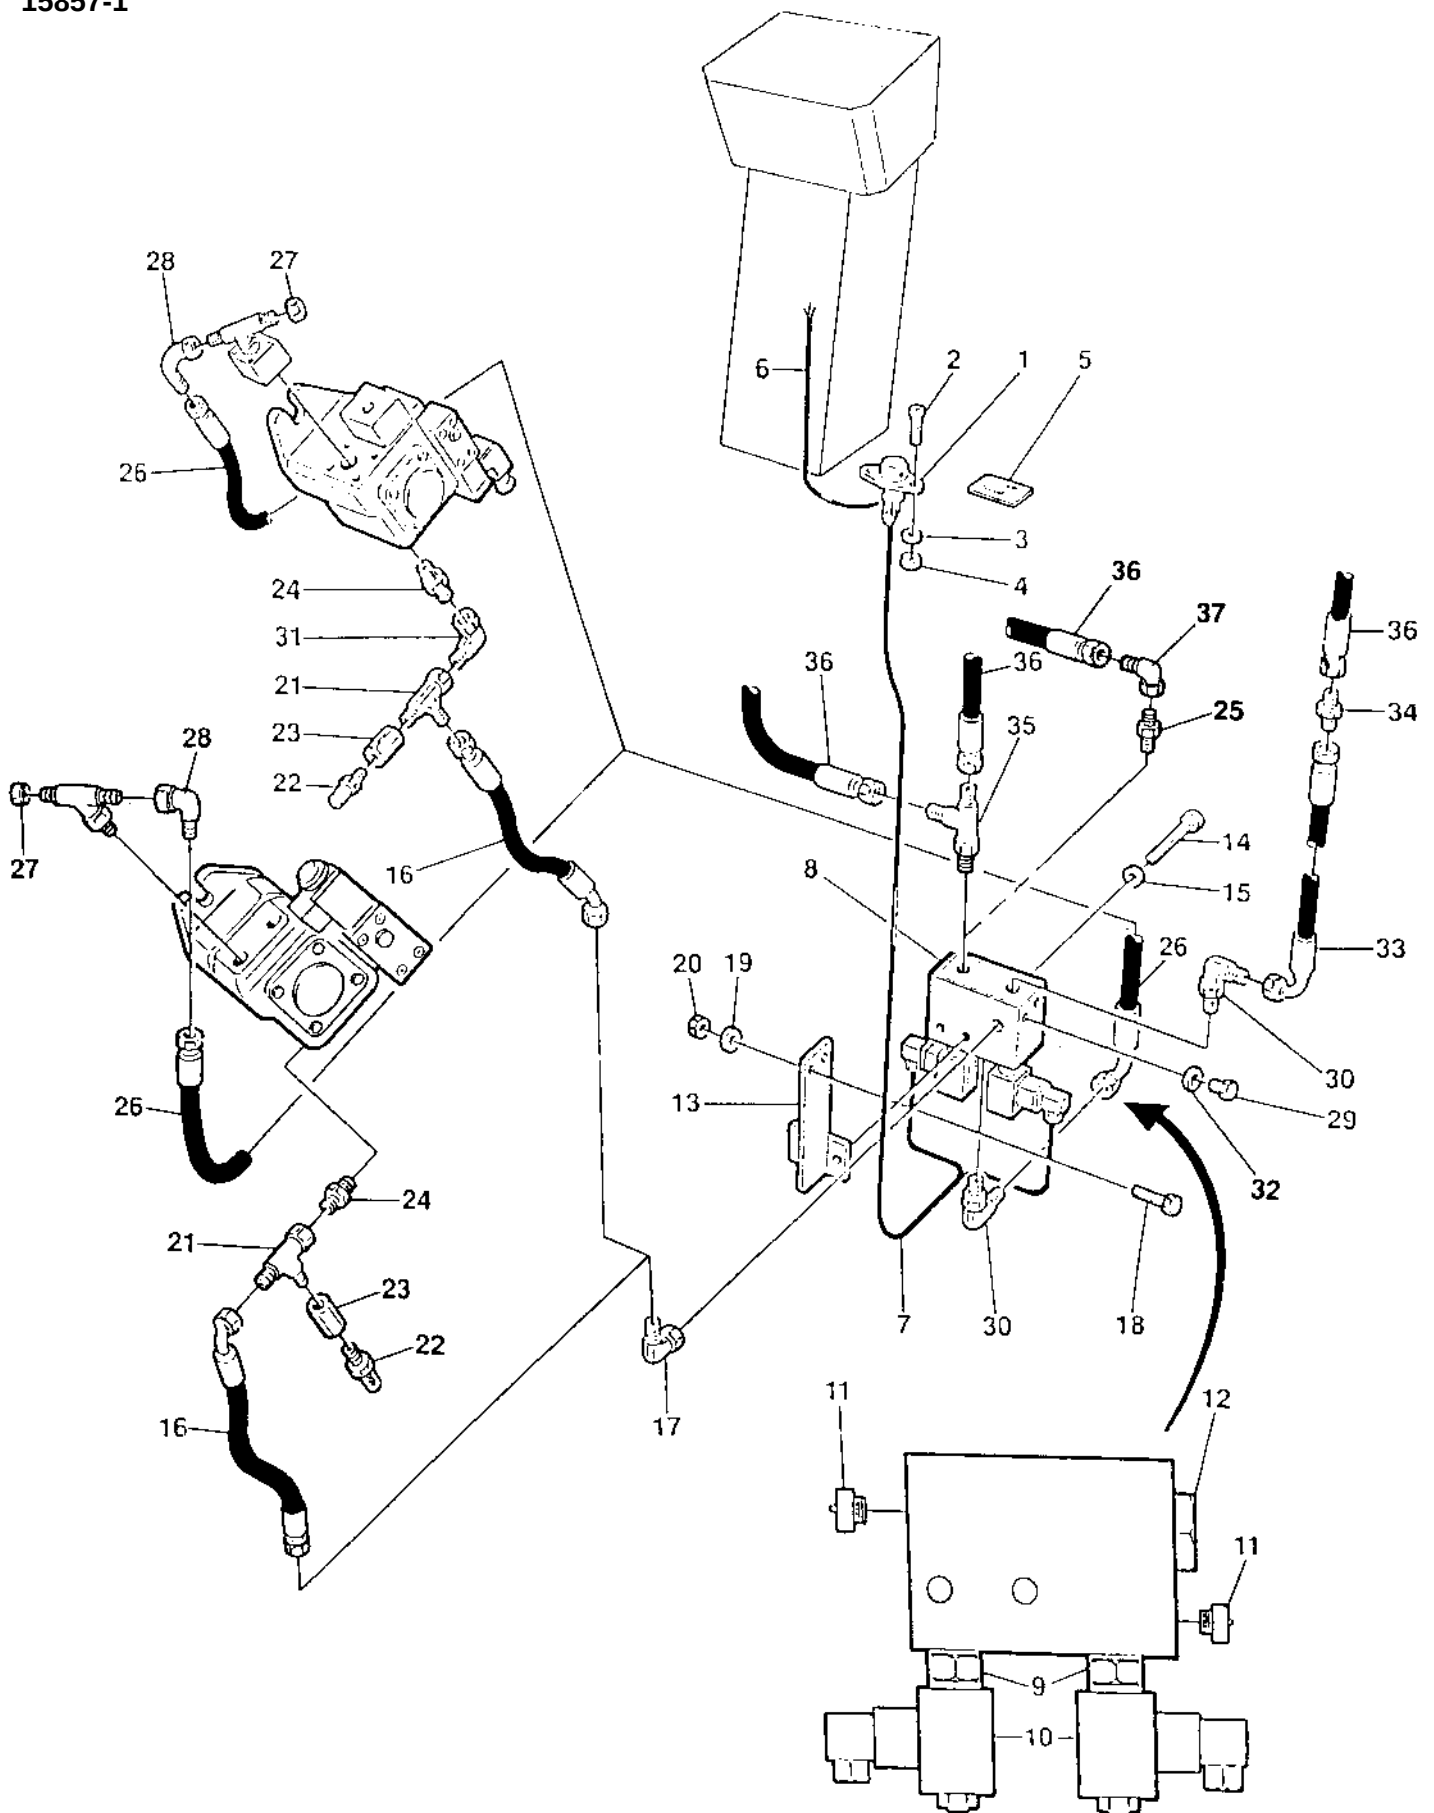


Flow divider

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358239		1	Contact	D
2	533016		2	Screw	
3	600002		2	Washer	
4	923976		2	Nut	
5	355981		1	Decal	
6	358614		1	Cable harness	
7	358615		1	Cable harness	
8	358003		1	Flow divider	C
9	903141		2	.Valve	D
10	903142		2	.Coil	D
11	903144		2	.Check valve	D
12	903143		1	.Valve	D
13	358618		1	Bracket	
14	500077		2	Screw	
15	615044		2	Conical spring washer	D
16	482663		1	Hydraulic hose	
17	334235		1	Adapter	
18	500021		2	Screw M8-1,25x25 8,8	
19	600006		2	Washer	
20	586003		2	Lock nut M8	
21	334234		1	Tee-connector	
22	910161		1	Measuring nipple	D
23	433830401		1	Connector	
24	334463		1	Connector	
25	334165		1	Adapter	
26	482828		1	Hydraulic hose	
27	330383		1	Cap hydraulic	
28	334197		1	Elbow 90	
29	332038		2	Plug	
30	923407		2	Adapter	
31	334524		1	Connector	
32	162004		2	Sealing	
33	482883		1	Hydraulic hose	
34	334249		1	Connector	
35				Not used on this model	
36		N		Hydraulic details	
37	234662		1	Adapter	

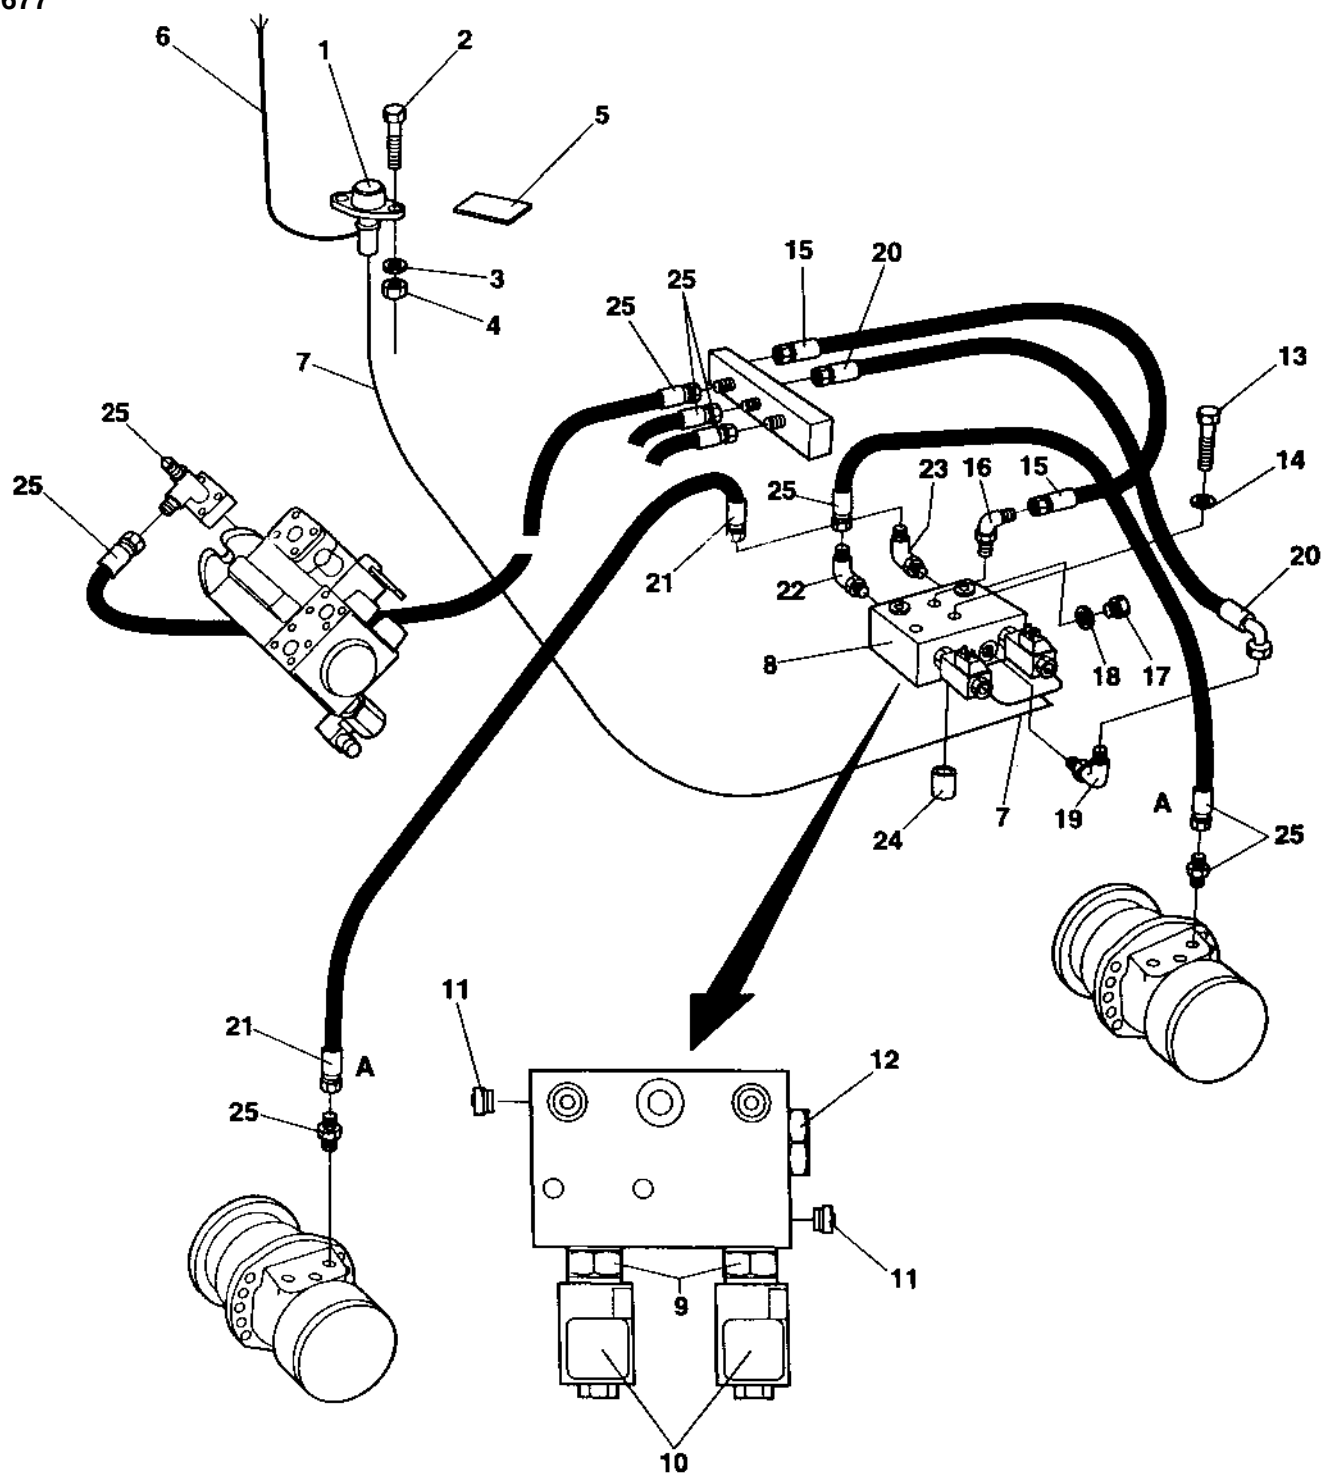

Flow divider

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358239		1	Contact	D
2	533016		2	Screw	
3	600002		2	Washer	
4	923976		2	Nut	
5	355981		1	Decal	
6	358614		1	Cable harness	
7	358615		1	Cable harness	
8	358003		1	Flow divider	C
9	903141		2	.Valve	D
10	903142		2	.Coil	D
11	903144		2	.Check valve	D
12	903143		1	.Valve	D
13	500034		2	Screw	
14	904230		2	Washer 10,5x22x2	
15	482773		1	Hydraulic hose	
16	334235		1	Adapter	
17	332038		2	Plug	
18	162004		2	Sealing	
19	923407		1	Adapter	
20	482208		1	Hydraulic hose	
21	482214		1	Hydraulic hose	
22	904175		1	Connector	
23	923407		1	Adapter	
24	355869		2	Spacer sleeve	
25			N	Hydraulic details	

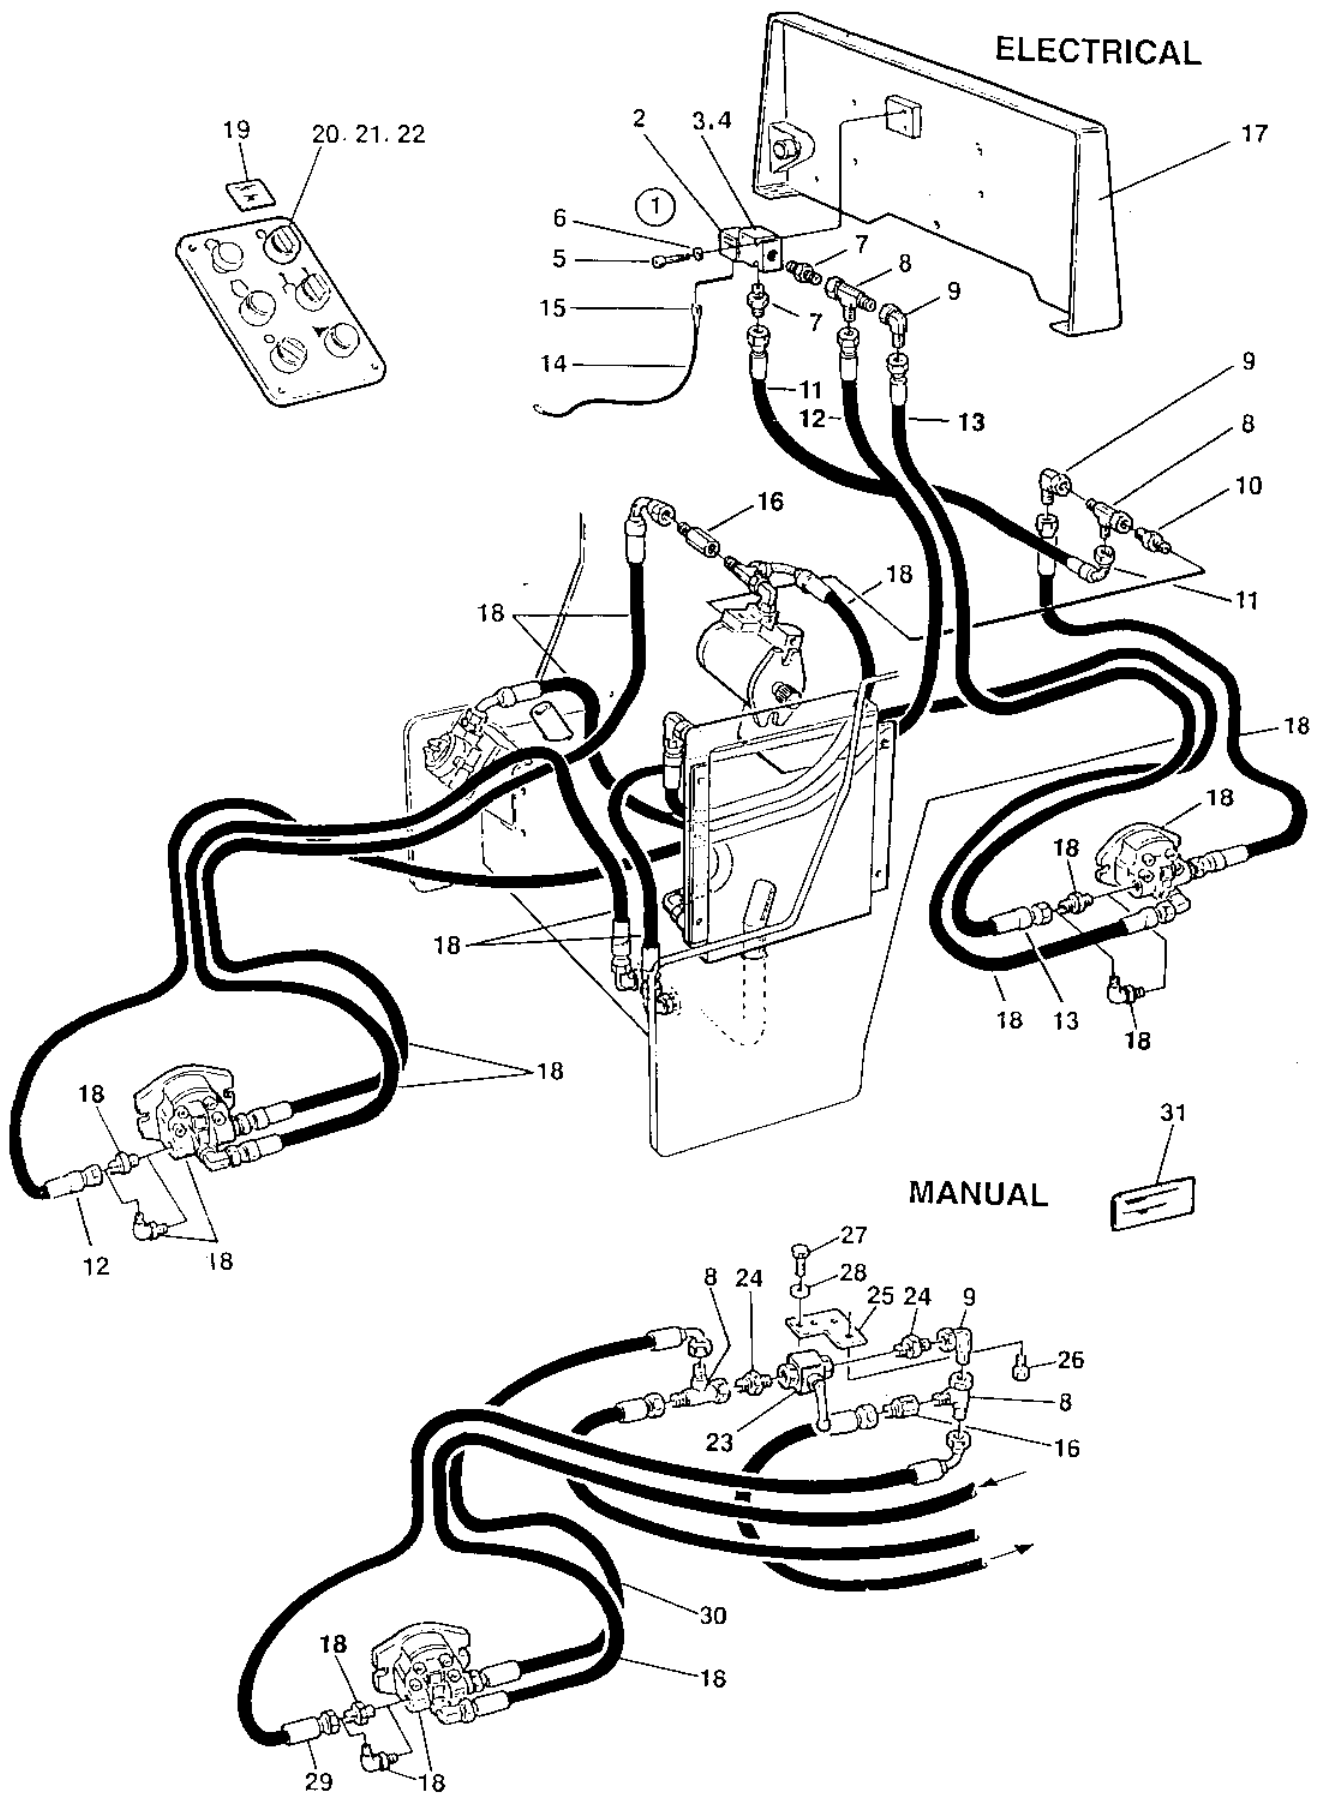


Vibration shut-off, electr./man

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357934		1	Solenoid valve	
2	902535		1	.Coil	D
3	902536		1	.Valve	D
4	902537		1	.Housing	
5	500088		2	Screw M6x40	
6	615042		2	Conical spring washer	
7	334165		2	Adapter	
8	334135		2	T-connector	
9	334197		2	Elbow 90	
	334197	D	1	Elbow 90	
10	334116		1	Straight o-ring connector	
11	482864		1	Hydraulic hose	
12	831132		1	Hydraulic hose Up to 601X1102	
	482896		1	Hydraulic hose From 601X1103	
13	482858		1	Hydraulic hose Up to 601X1102	
	482897		1	Hydraulic hose From 601X1103	
14	357937		1	Cable harness	
15	960796		1	.Connector black, MPM 182 09 ND	D
16	357543		1	Valve	D
17		1	1	Hood frame	D
18			N	Hydraulic details	D
19	358465		1	Decal	
20	930163		2	Contact piece	D
21		2	1	Connector	D
22		2	1	Switch	D
23	344138	D	1	Ball valve	
24	334117	D	2	Adapter	
25	358586	D	1	Holder plate	
26	500022	D	2	Screw M8-1,25x30 8,8	
27	500184	D	2	Screw M5-0,8x14 8,8	
28	615041	D	2	Washer 5,3x11	
29	482434	D	1	Hydraulic hose Up to 601X1102	
	482243	D	1	Hydraulic hose From 601X1103	
30	842849	D	1	Hydraulic hose Up to 601X1102	
	851649	D	1	Hydraulic hose From 601X1103	
31	349405	C	1	Decal	
1)	See section " Structure "				
2)	See section " Control panel "				
C)	Instruction decal				
D)	Manual				

Vibration shut-off, front drum DEUTZ

16684-2

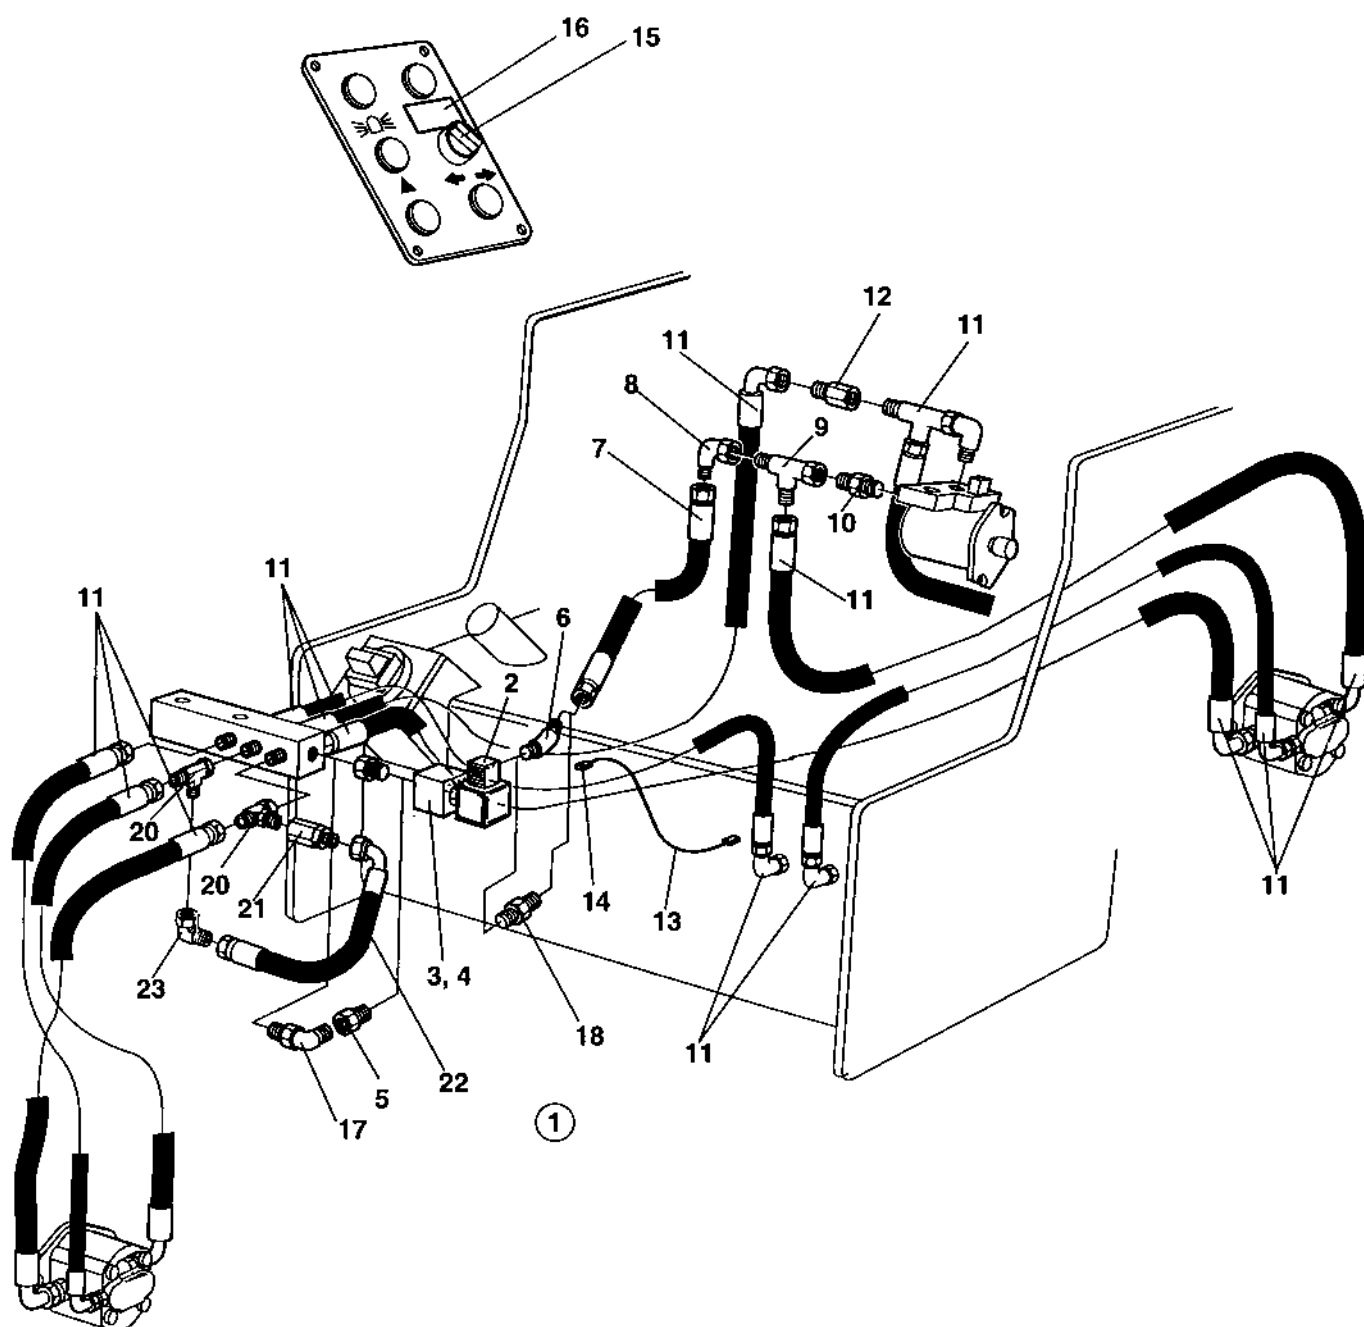


Vibration shut-off, front drum DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357934		1	Solenoid valve	
2	902535		1	.Coil	D
3	902536		1	.Valve	D
4	902537		1	.Housing	
5	923406		1	Connector	
6	904175		1	Connector	
7	482889		1	Hydraulic hose	
8	334197		1	Elbow 90	
9	334135		1	T-connector	
10	334116		1	Straight o-ring connector	
11			N	Hydraulic details	
12	357543		1	Valve	D
13	373849		1	Cable harness	
14	960796		1	.Connector black, MPM 182 09 ND	D
15	930151		1	Switch	D
16	904224	B	1	Decal	
17	813500		1	Elbow 45, O-ring	
18	334165		1	Adapter	
20	334135	C	2	T-connector	
21	357543	C	1	Valve	D
22	483585	C	1	Hydraulic hose	
23	334197	C	1	Elbow 90	

- B) Vibr. shut-off front
C) Used in new machines

Vibration shut-off, front drum ISUZU


16685-2

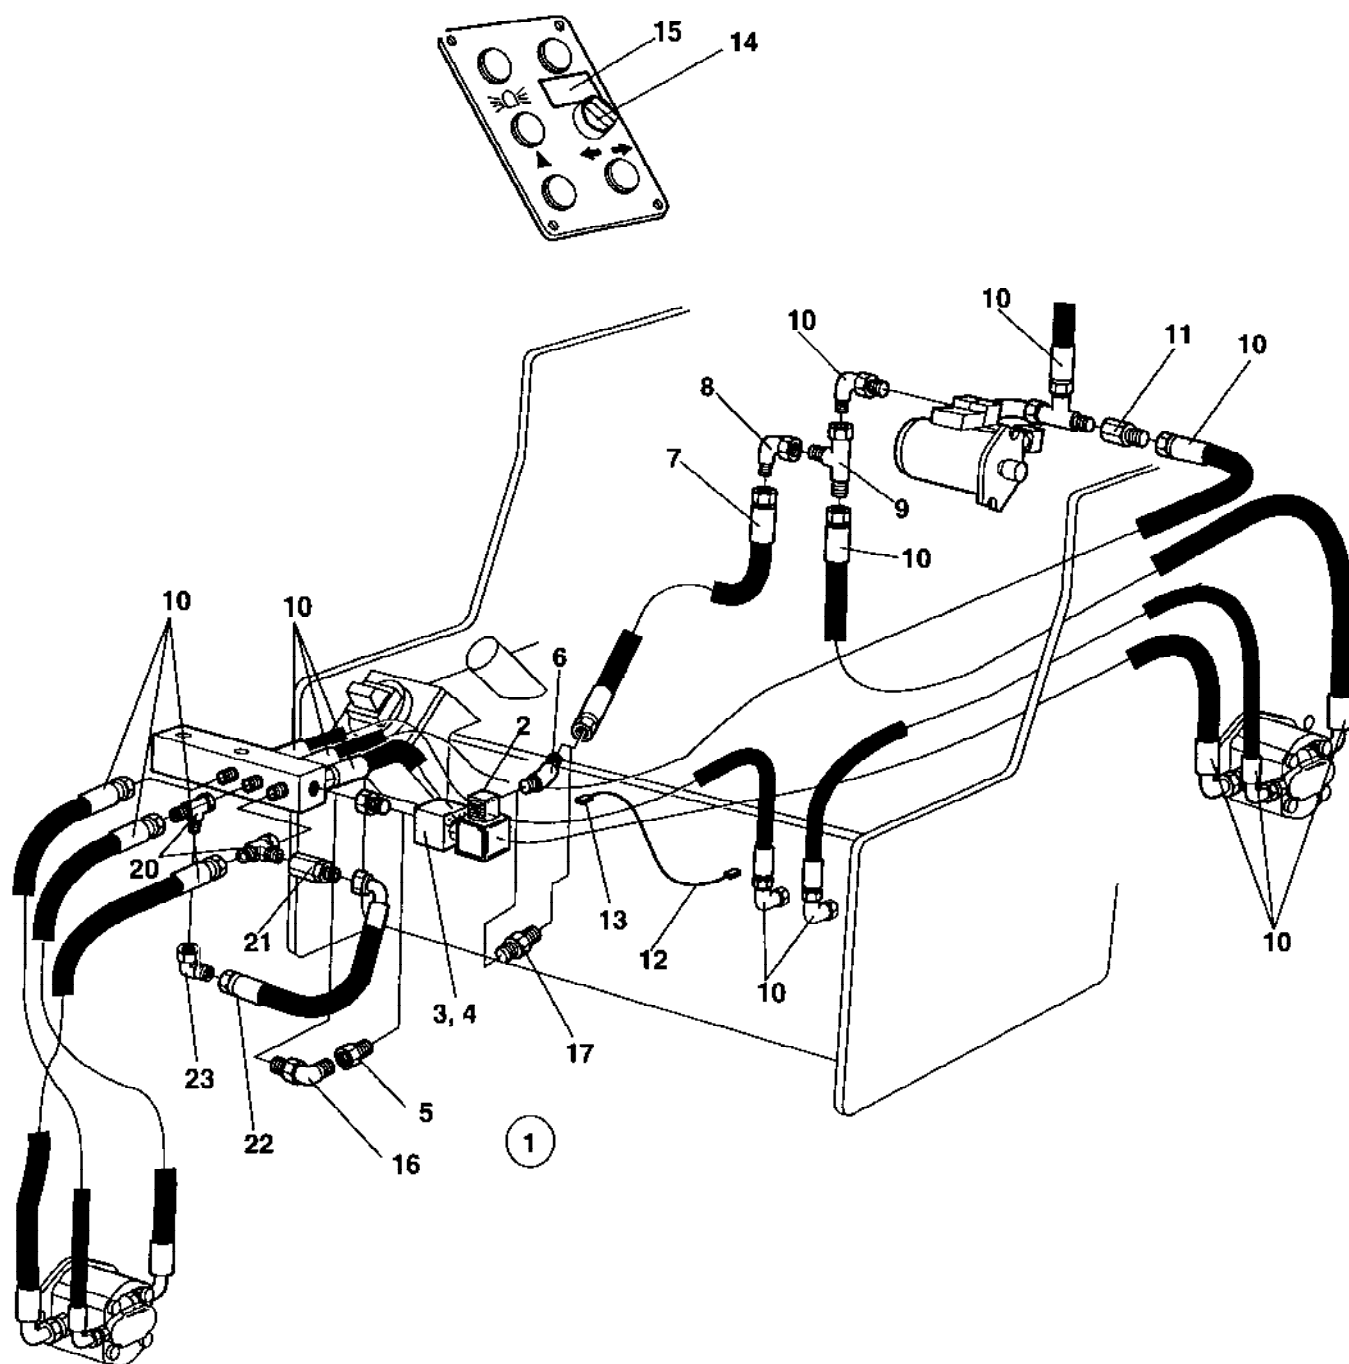

Vibration shut-off, front drum ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357934		1	Solenoid valve	
2	902535		1	.Coil	D
3	902536		1	.Valve	D
4	902537		1	.Housing	
5	923406		1	Connector	
6	904175		1	Connector	
7	482889		1	Hydraulic hose	
8	334197		1	Elbow 90	
9	334135		1	T-connector	
10			N	Hydraulic details	
11	357543		1	Valve	D
12	373849		1	Cable harness	
13	960796		1	.Connector black, MPM 182 09 ND	D
14	930151		1	Switch	D
15	904224	B	1	Decal	
16	813500		1	Elbow 45, O-ring	
17	334165		1	Adapter	
20	334135	C	2	T-connector	
21	357543	C	1	Valve	D
22	483585	C	1	Hydraulic hose	
23	334197	C	1	Elbow 90	

- B) Vibr. shut-off front
 C) Used on new machines

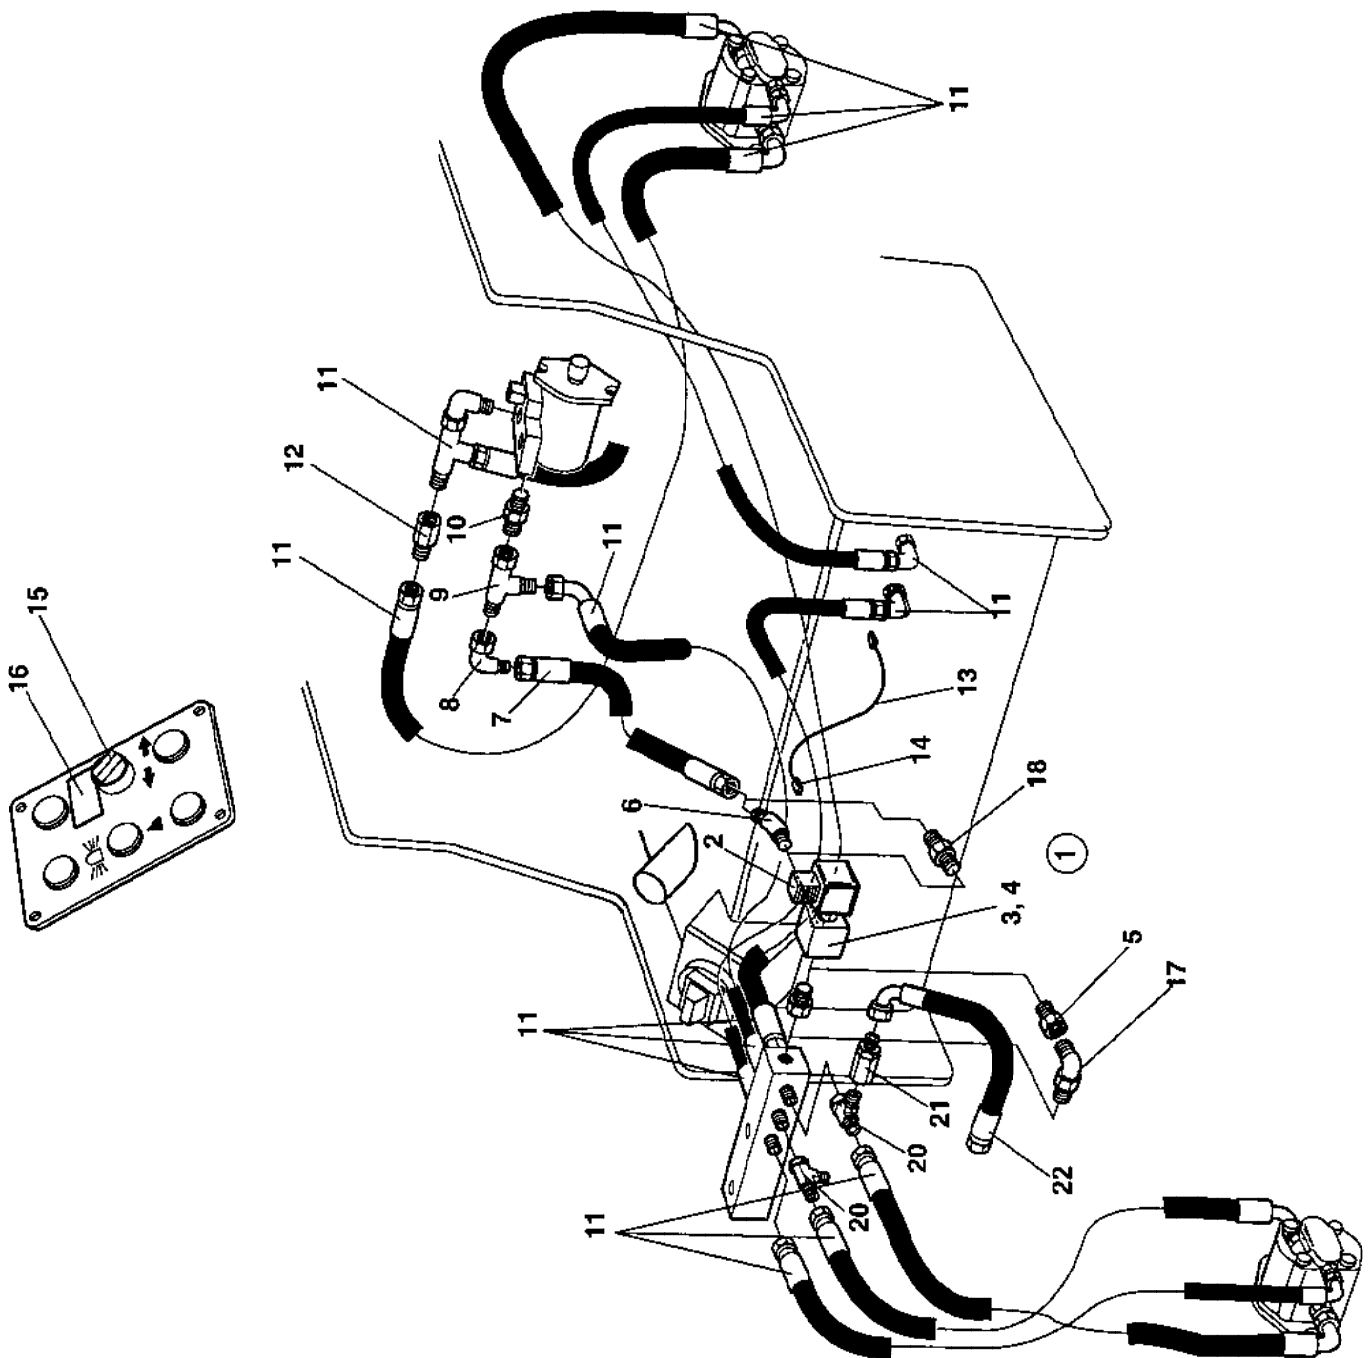


Vibration shut-off, rear drum DEUTZ

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357934		1	Solenoid valve	
2	902535		1	.Coil	D
3	902536		1	.Valve	D
4	902537		1	.Housing	
5	923406		1	Connector	
6	904175		1	Connector	
7	482889		1	Hydraulic hose	
8	334197		1	Elbow 90	
9	334135		1	T-connector	
10	334116		1	Straight o-ring connector	
11			N	Hydraulic details	
12	357543		1	Valve	D
13	373849		1	Cable harness	
14	960796		1	.Connector black, MPM 182 09 ND	D
15	930151		1	Switch	D
16	904223	B	1	Decal	
17	813500		1	Elbow 45, O-ring	
18	334165		1	Adapter	
20	334135	C	2	T-connector	
21	357543	C	1	Valve	D
22	483585	C	1	Hydraulic hose	

- B) Vibr. shut-off rear
 C) Used in new machines

Vibration shut-off, rear drum ISUZU

16687-2

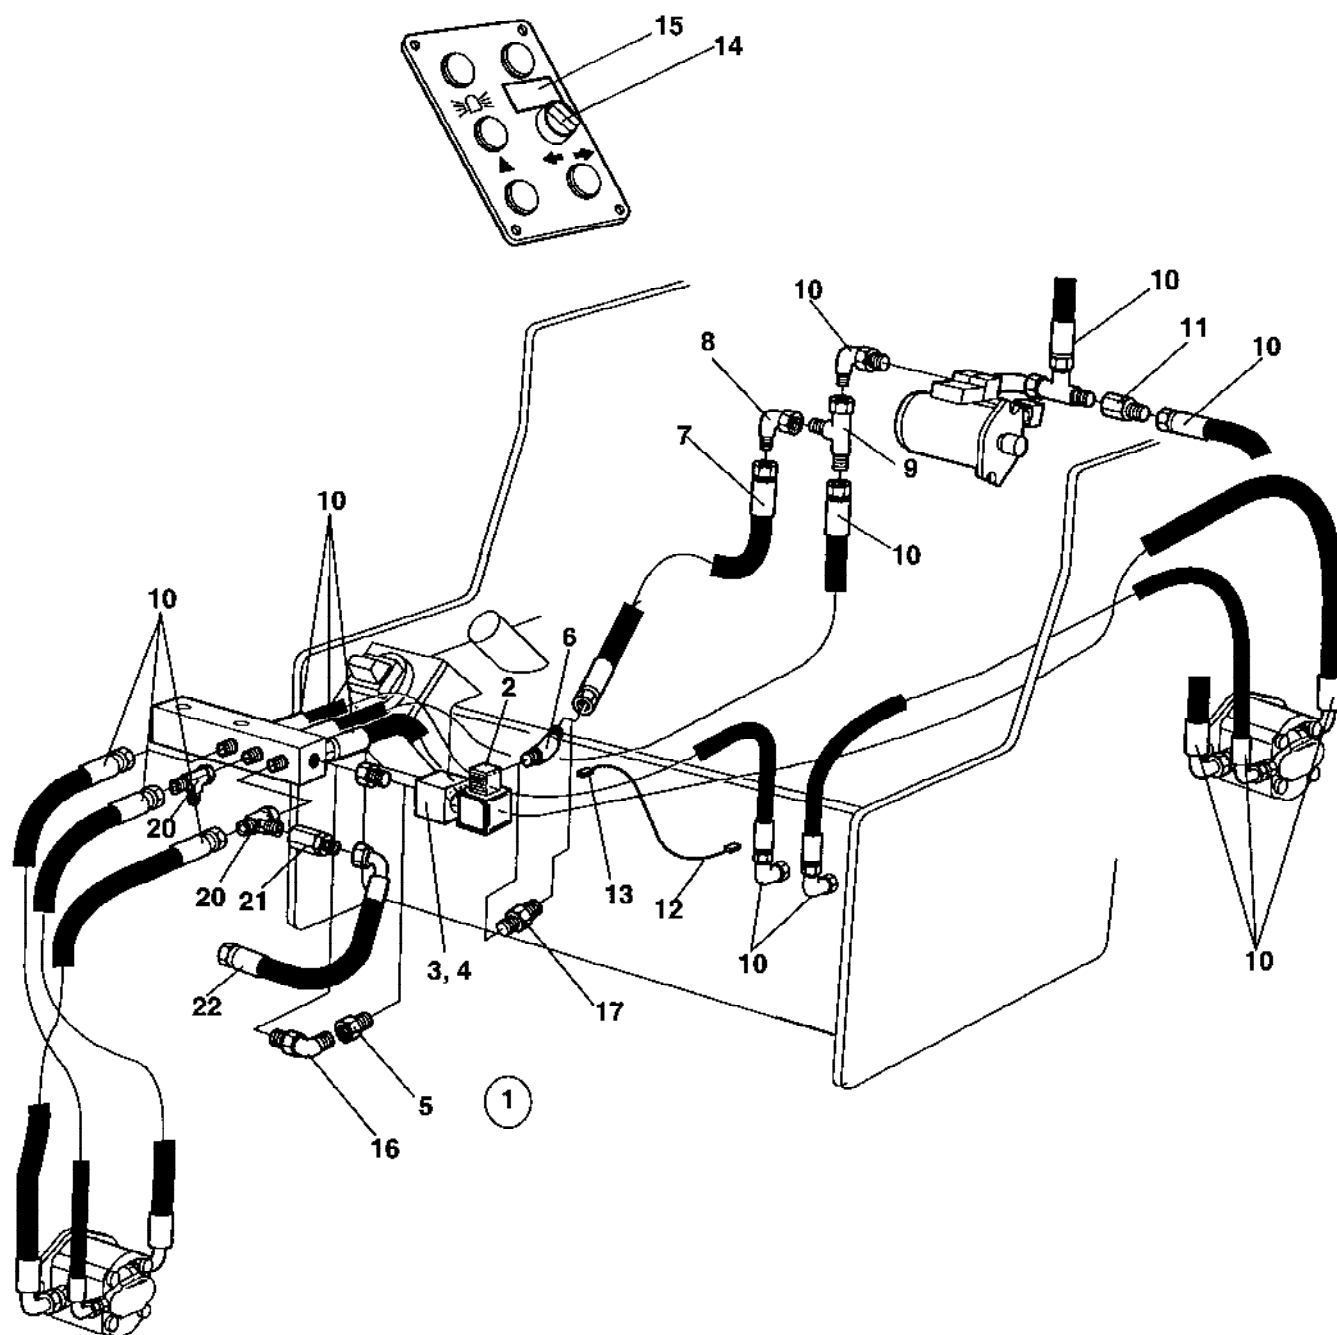


Vibration shut-off, rear drum ISUZU

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357934		1	Solenoid valve	
2	902535		1	Coil	D
3	902536		1	.Valve	D
4	902537		1	.Housing	
5	923406		1	.Connector	
6	904175		1	Connector	
7	482889		1	Hydraulic hose	
8	334197		1	Elbow 90	
9	334135		1	T-connector	
10			N	Hydraulic details	
11	357543		1	Valve	D
12	373849		1	Cable harness	
13	960796		1	.Connector black, MPM 182 09 ND	D
14	930151		1	Switch	D
15	904223	B	1	Decal	
16	813500		1	Elbow 45, O-ring	
17	334165		1	Adapter	
20	334135	C	2	T-connector	
21	357543	C	1	Valve	D
22	483585	C	1	Hydraulic hose	

B) Vibr. shut-off rear


C) Used in new machines

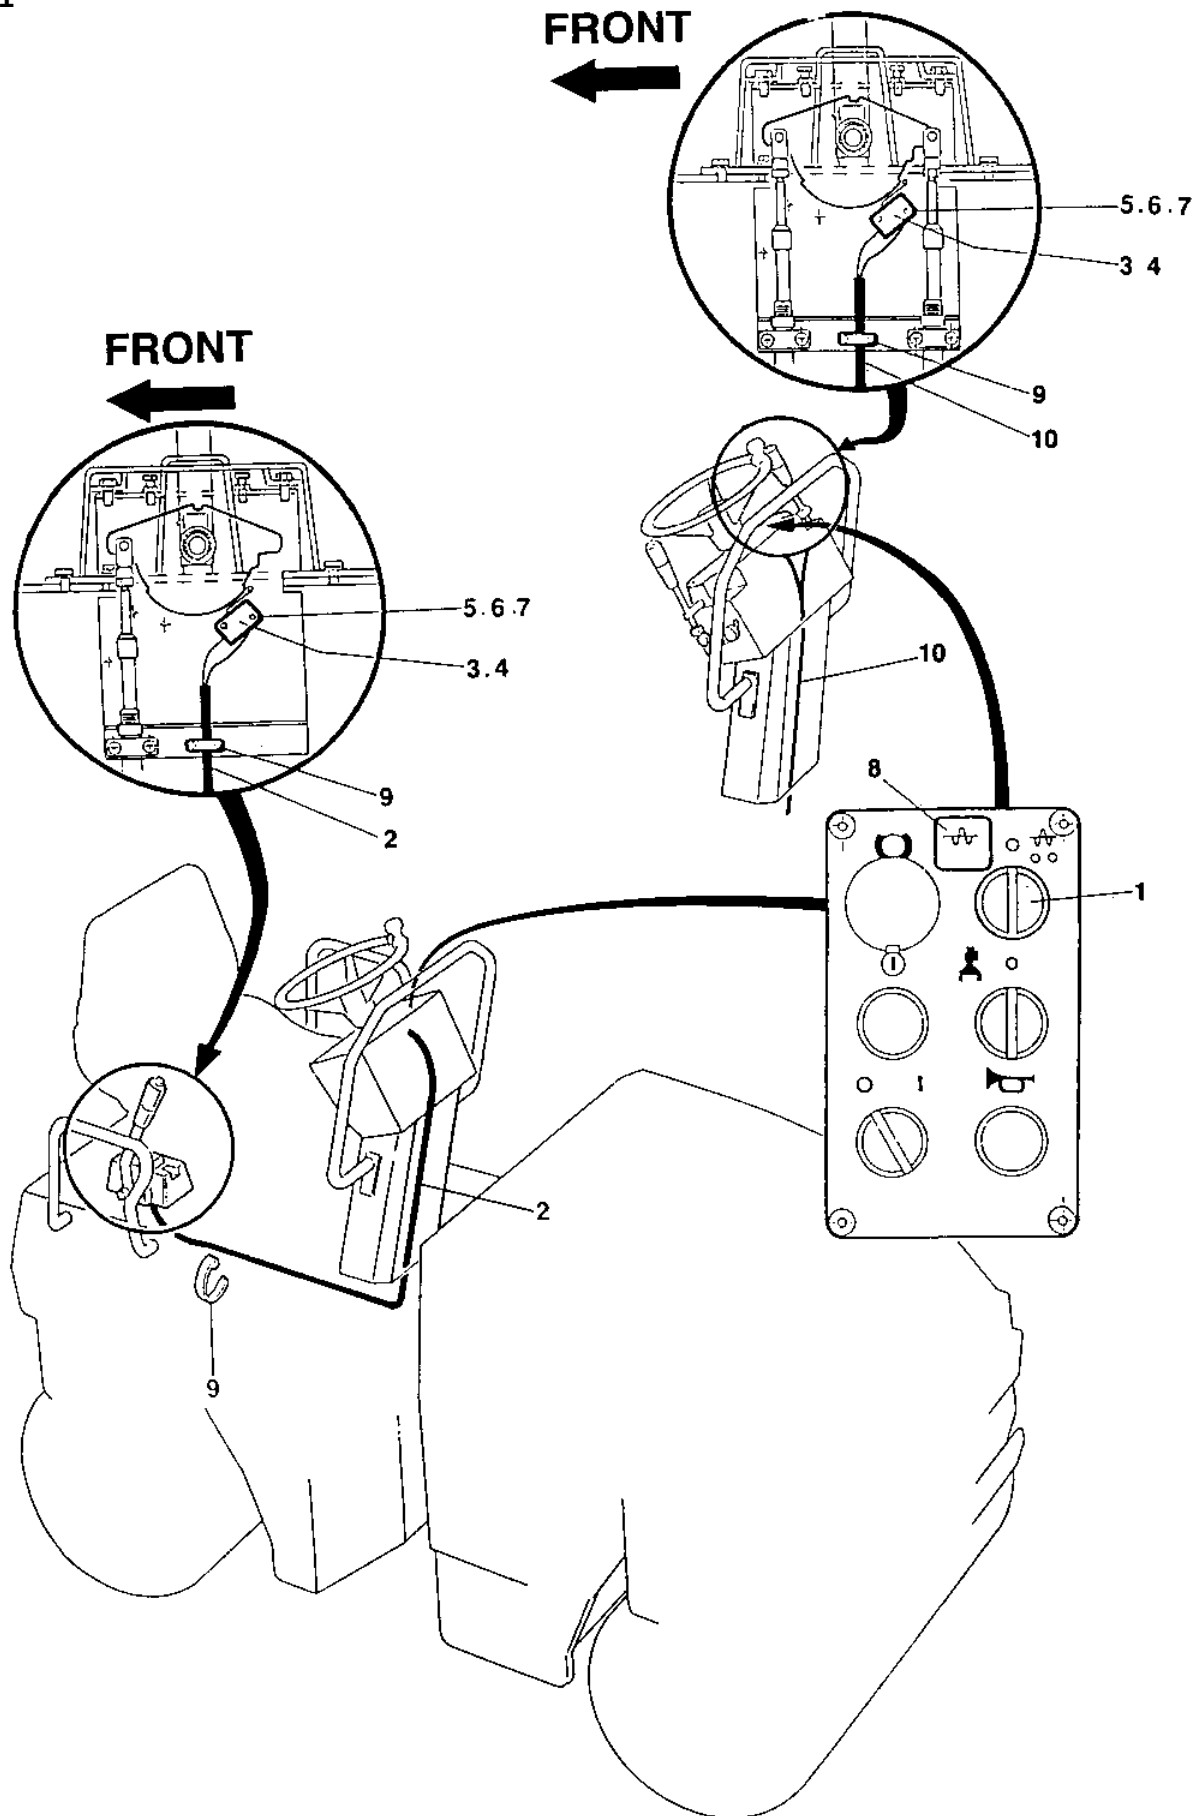

Automatic vibration control

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	930163		1	Contact piece	D
2	359135		1	Cable harness Up to 601X3599	
	374483		1	Cable harness From 601X3600	
3	902528		1	Micro switch	
4	357994		1	Spacer nut	
5	533057		2	Screw	
6	929602		2	Washer	
7	375892		2	Spacer nut	
8	359136	A	1	Decal	
9	313068		N	Cable ties L=92 mm	
10	370660		1	Cable harness	


A) Vib. auto

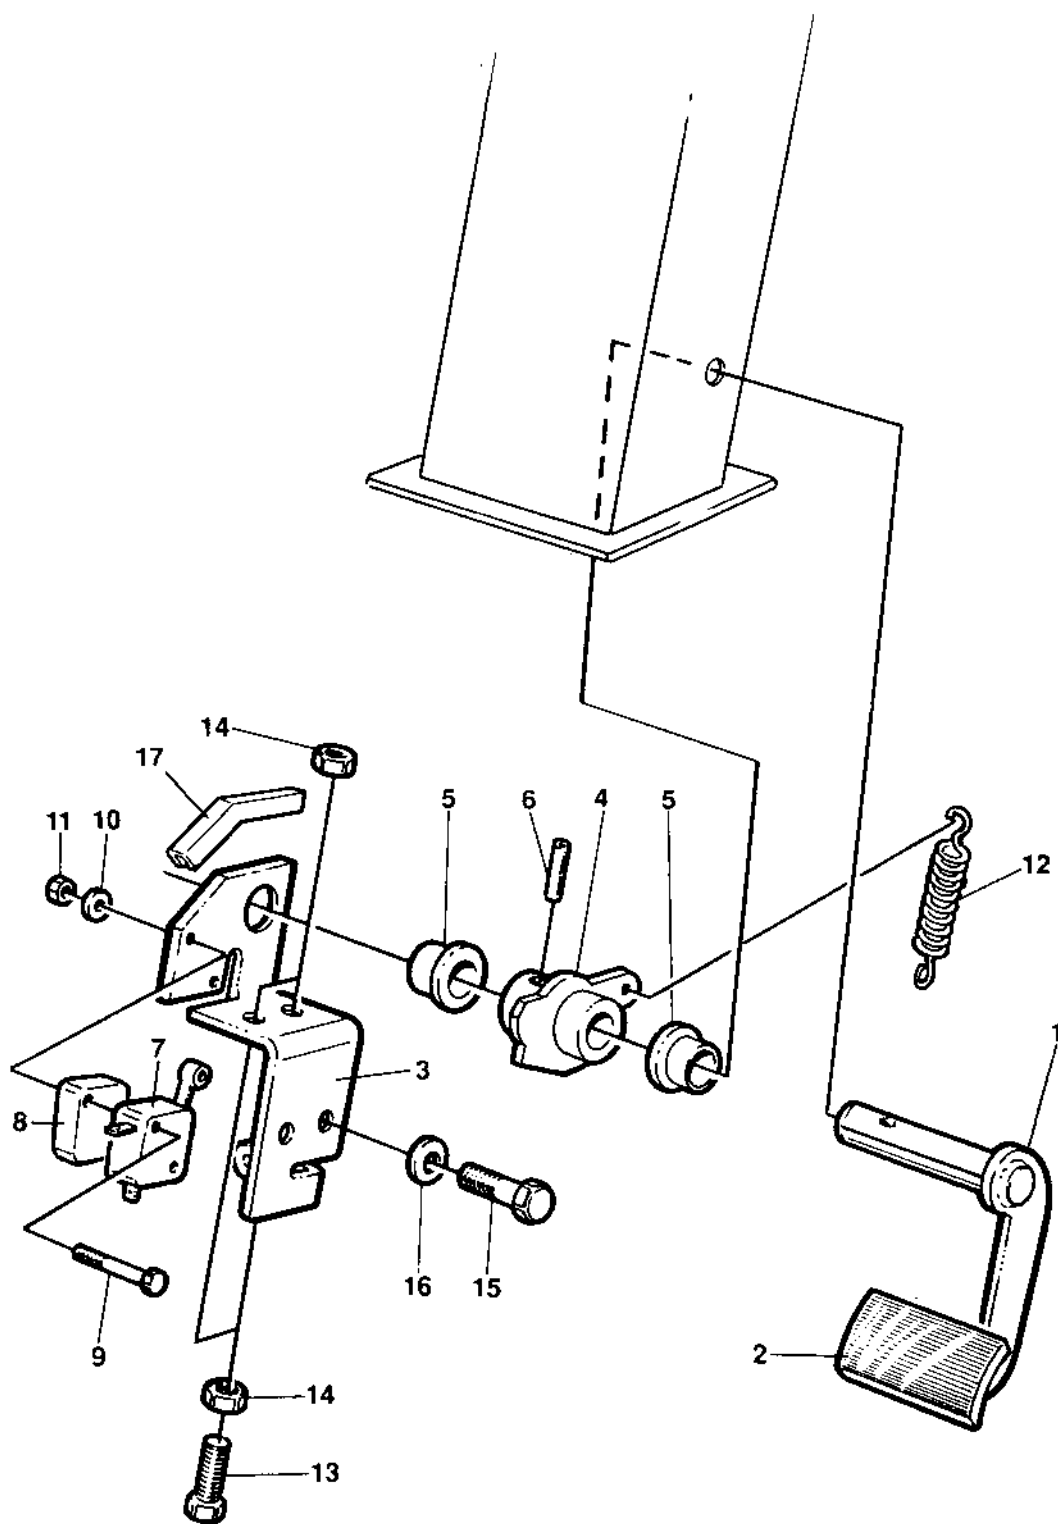

Service brake

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358299		1	Brake pedal	D
2	345800		1	Pedal rubber	
3	358302		1	Bracket	
4	358303		1	Camshaft	
5	349492		2	Bushing	
6	629024		1	Pin	
7	902528	2	1	Micro switch	
	382396	1	1	Micro switch	
8	357994		1	Spacer nut	
9	533057		2	Screw	
10	929602		2	Washer	
11	570001		2	Nut	
12	358306		1	Spring	
13	500022	B	1	Screw M8-1,25x30 8,8	
14	570005	B	1	Nut M8	
15	500053		2	Screw M8-1,25x20 8,8	
16	904229		2	Washer 8,4x16x1,5	
17	900904	A	1XL	Grommet	


- 1) Can replace 902528
2) Can be replaced by 382396
A) L=0,06 m
B) Not valid for 382396

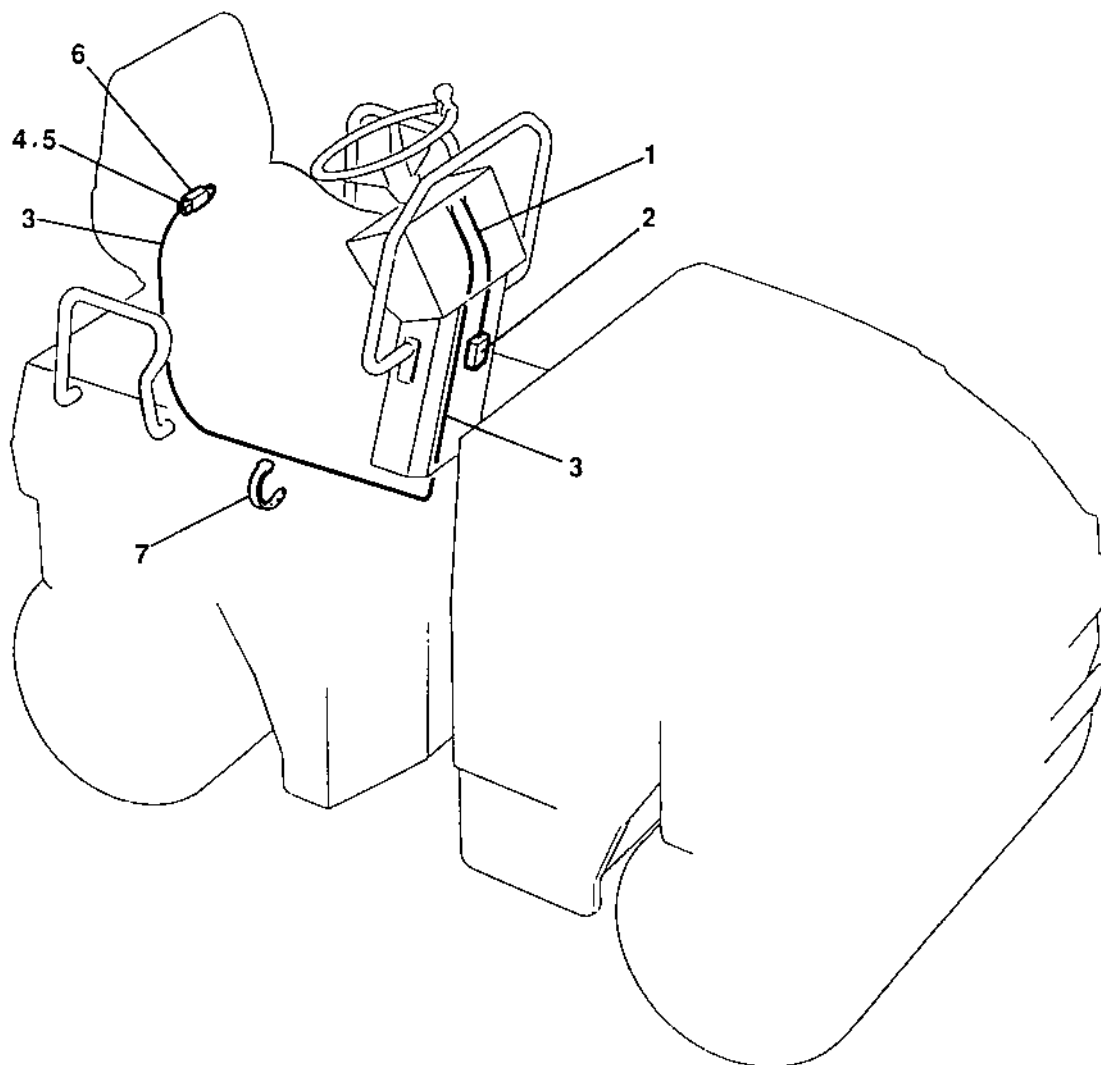

Driving, restriction

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	371908		1	Cable harness	
2	287597		1	.Relay	D
3		1	1	Cable harness	D
4	903823		1	Connector	
5	960274		4	Terminal	
6			1	Seat switch	
7	925802		N	Cable ties L=142 mm	

1) See section " Electrical equipment "

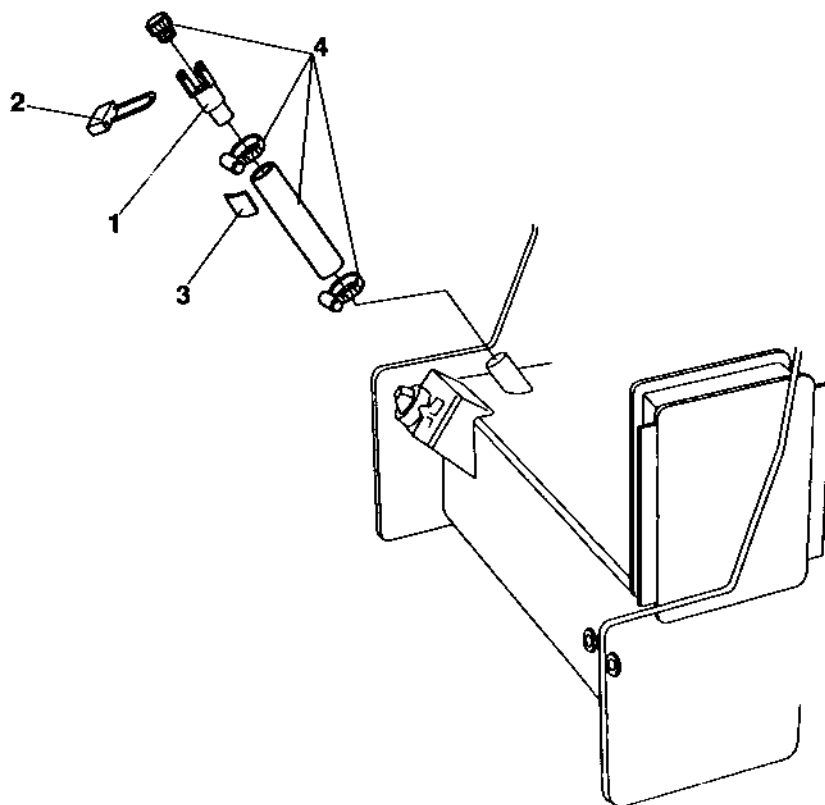


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376449		1	Connector	
2	904603		1	Padlock	
	904711		2	.Key	
3	380343	A	1	Decal	
4			N	Hydraulic details	

A) Bio-hydr.

High torque drum drive " Long"


16690

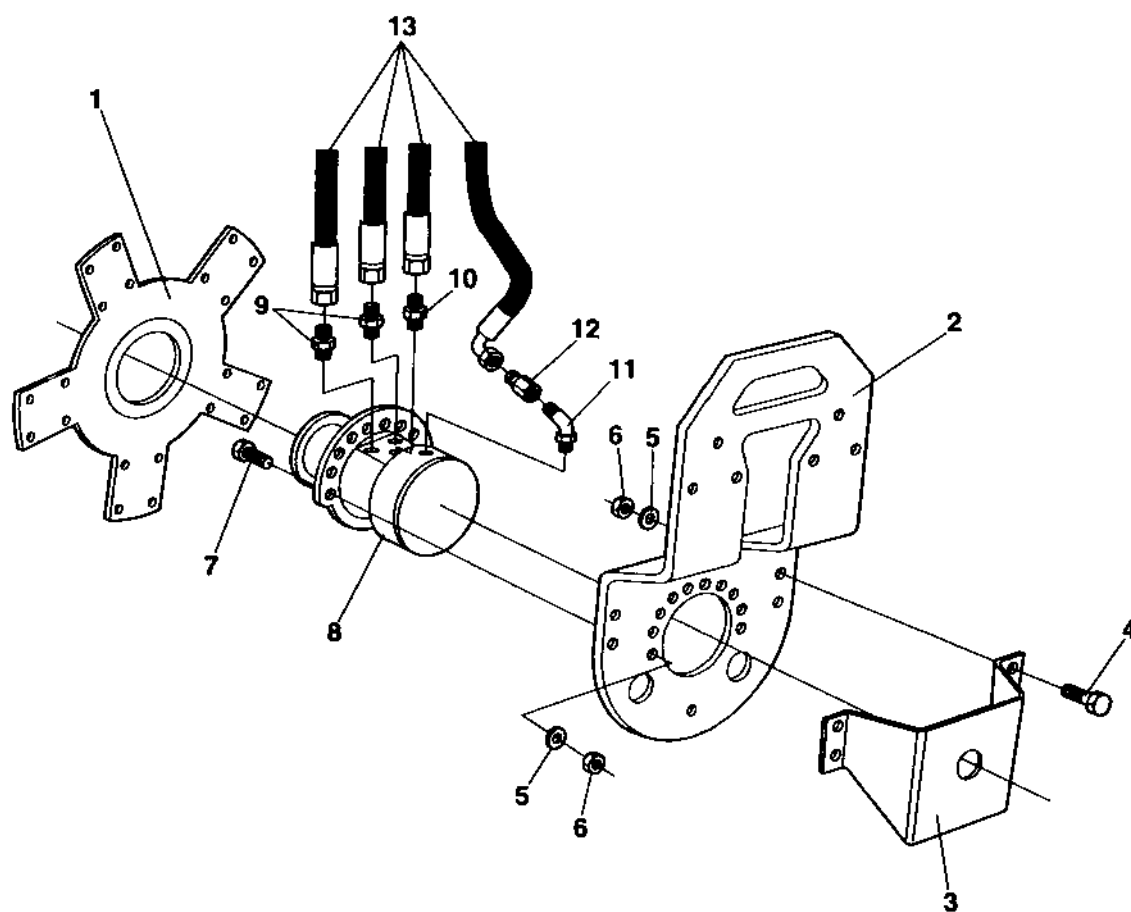

High torque drum drive " Long"

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	371916		1	Drive disc	
2	371085		1	Fork	
3	371124		1	Protection cover	
4	500070		4	Screw M16x50	
5	904232		14	Washer 17x30x3	
6	586021		14	Nut M16	
7	500134		10	Screw M16x60	
8	372118		1	Hydraulic motor high torque (Page 376)	
9	334190		2	Connector	
10	334236		1	Adapter	
11	234992		1	Adapter	
12	334523	A	1	Reducing	
13			N	Hydraulic details	

A) For DEUTZ

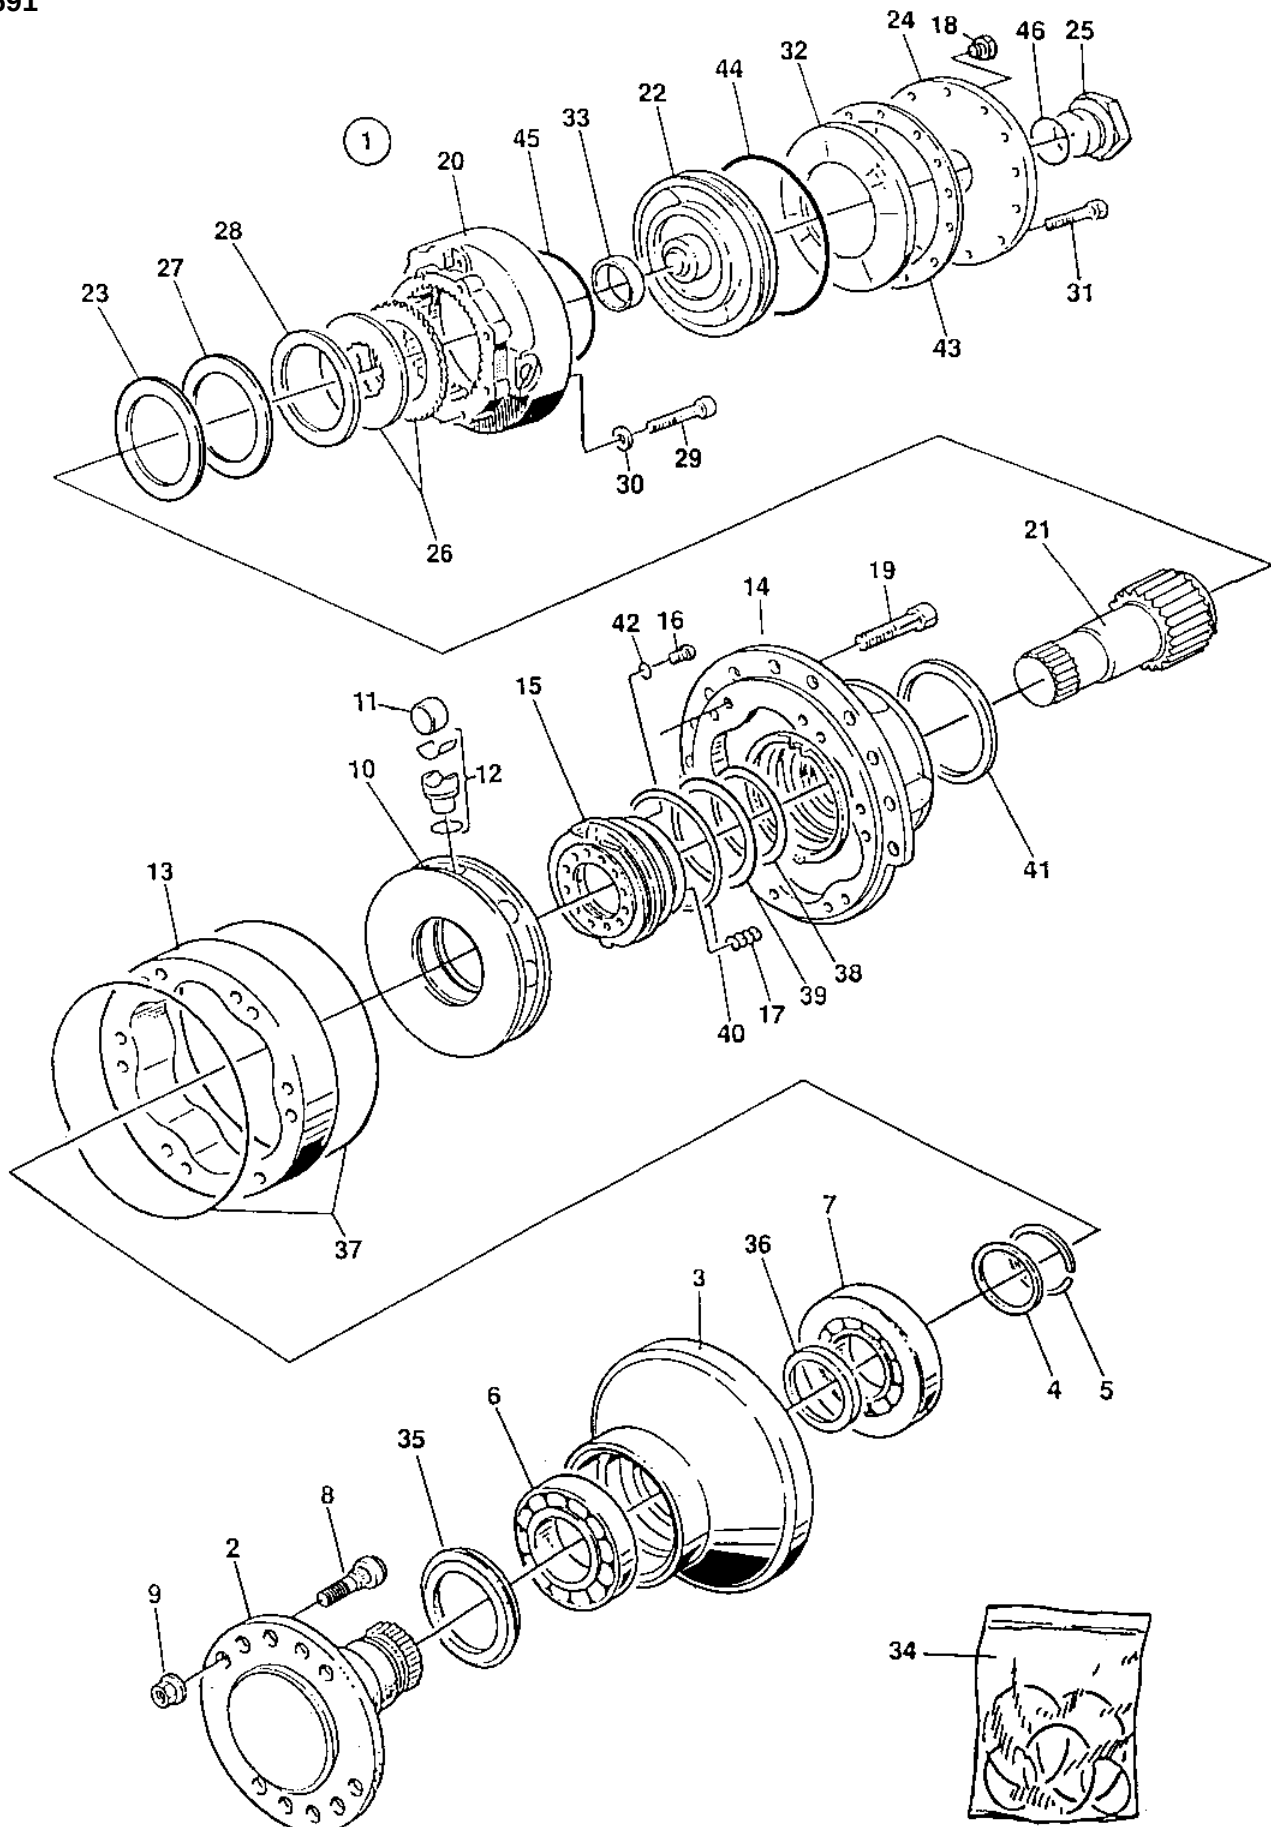


372118 Hydraulic motor high torque

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic motor	
2	937363		1	.Shaft	
3	909658		1	.Housing	
4	909659		1	.Washer	
5	909662		1	.Split ring	
6	935977		1	.Bearing	
7	909661		1	.Bearing	
8	902391		5	.Wheel stud	
9	902392		5	.Wheel nut	D
10	935981		1	.Cylinder block	
11	909666		8	.Roller	
12	937364		8	.Piston	
13	909668		1	.Piston cam	
14	909670		1	.Housing	
15	937365		1	.Distributor ring	
16	909672		1	.Pin	
17	902398		9	.Spring	
18	909674	A	1	.Plug	
19	909682		12	.Screw	
20	937367		1	.Brake housing	
21	937368		1	.Shaft	
22	937369		1	.Piston	
23	937370		1	.Washer	
24	937372	A	1	.End cover	
25	903295		1	.Plug	
26	937374	B	1	.Disc kit	D
27	909700		1	.Shim T=0,1 mm	
28	909701		1	.Shim T=0,3 mm	
29	909708		8	.Screw	
30	903450		8	.Washer	
31	909709		24	.Screw	
32	909711		1	.Spring	
33	937375		1	.Bush	
34	937376		1	.Seal kit	D
35			1	..Shaft seal	D
36	903324		1	..Shaft seal	
37			2	..O-ring	
38			1	..Sealing	
39			1	..Sealing	
40			1	..Sealing	
41	937366		1	..Quad ring	
42			1	..O-ring	
43	937373		1	..Gasket	
44	909703		1	..Quad ring	D
45			1	..Sealing	D
46	903327		1	..O-ring	
A)	CPL				
B)	16+14 pcs				


High torque drum drive " Short"

17485

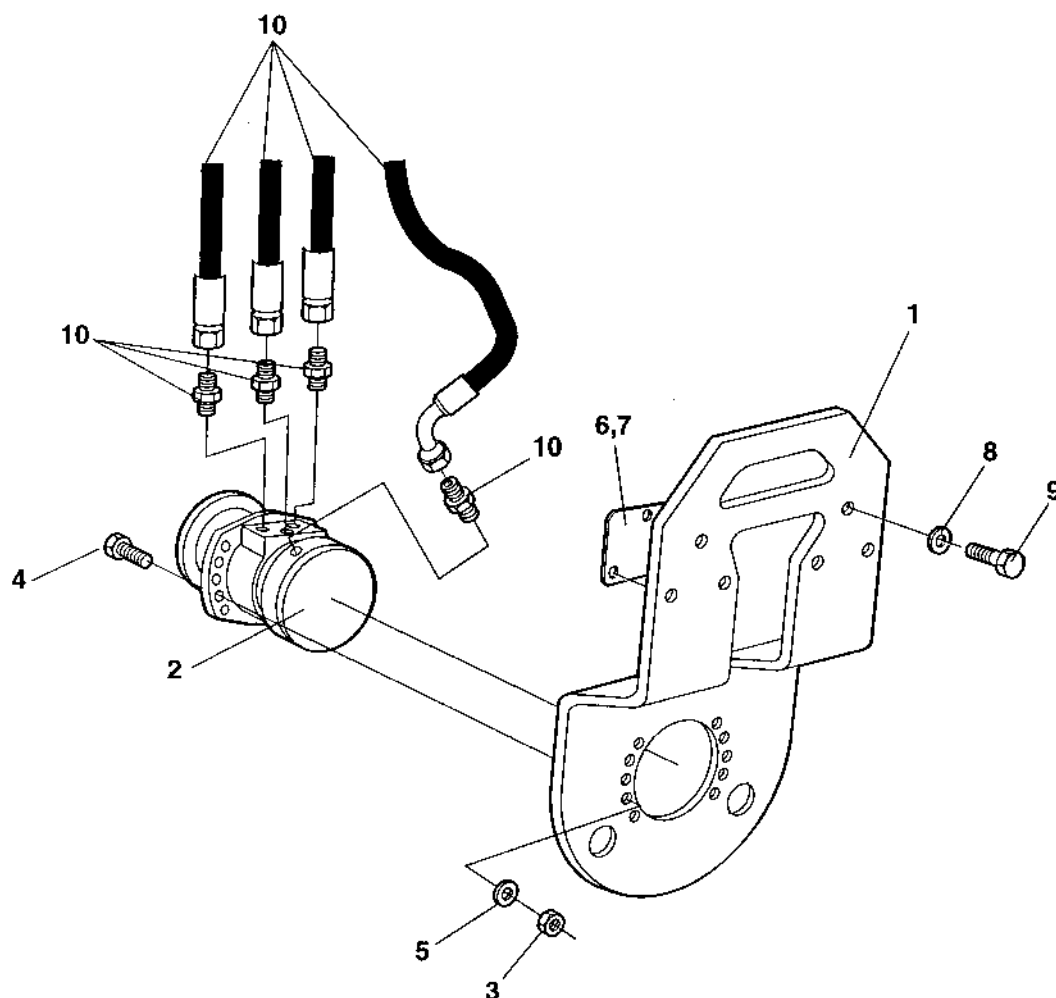

High torque drum drive " Short"


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	381370		1	Fork	
2	380594		1	Hydraulic motor, propulsion, drum (Page 380)	
3	586019		10	Lock nut M12	
4	500056		10	Screw M12-1,75x45 8,8	
5	904231		14	Washer 13x24x2	
6	357222		2	Shim T=1 mm	
7	357221		2	Shim T=3 mm	
8	904232		6	Washer 17x30x3	
9	500094		6	Screw	
10			N	Hydraulic details	

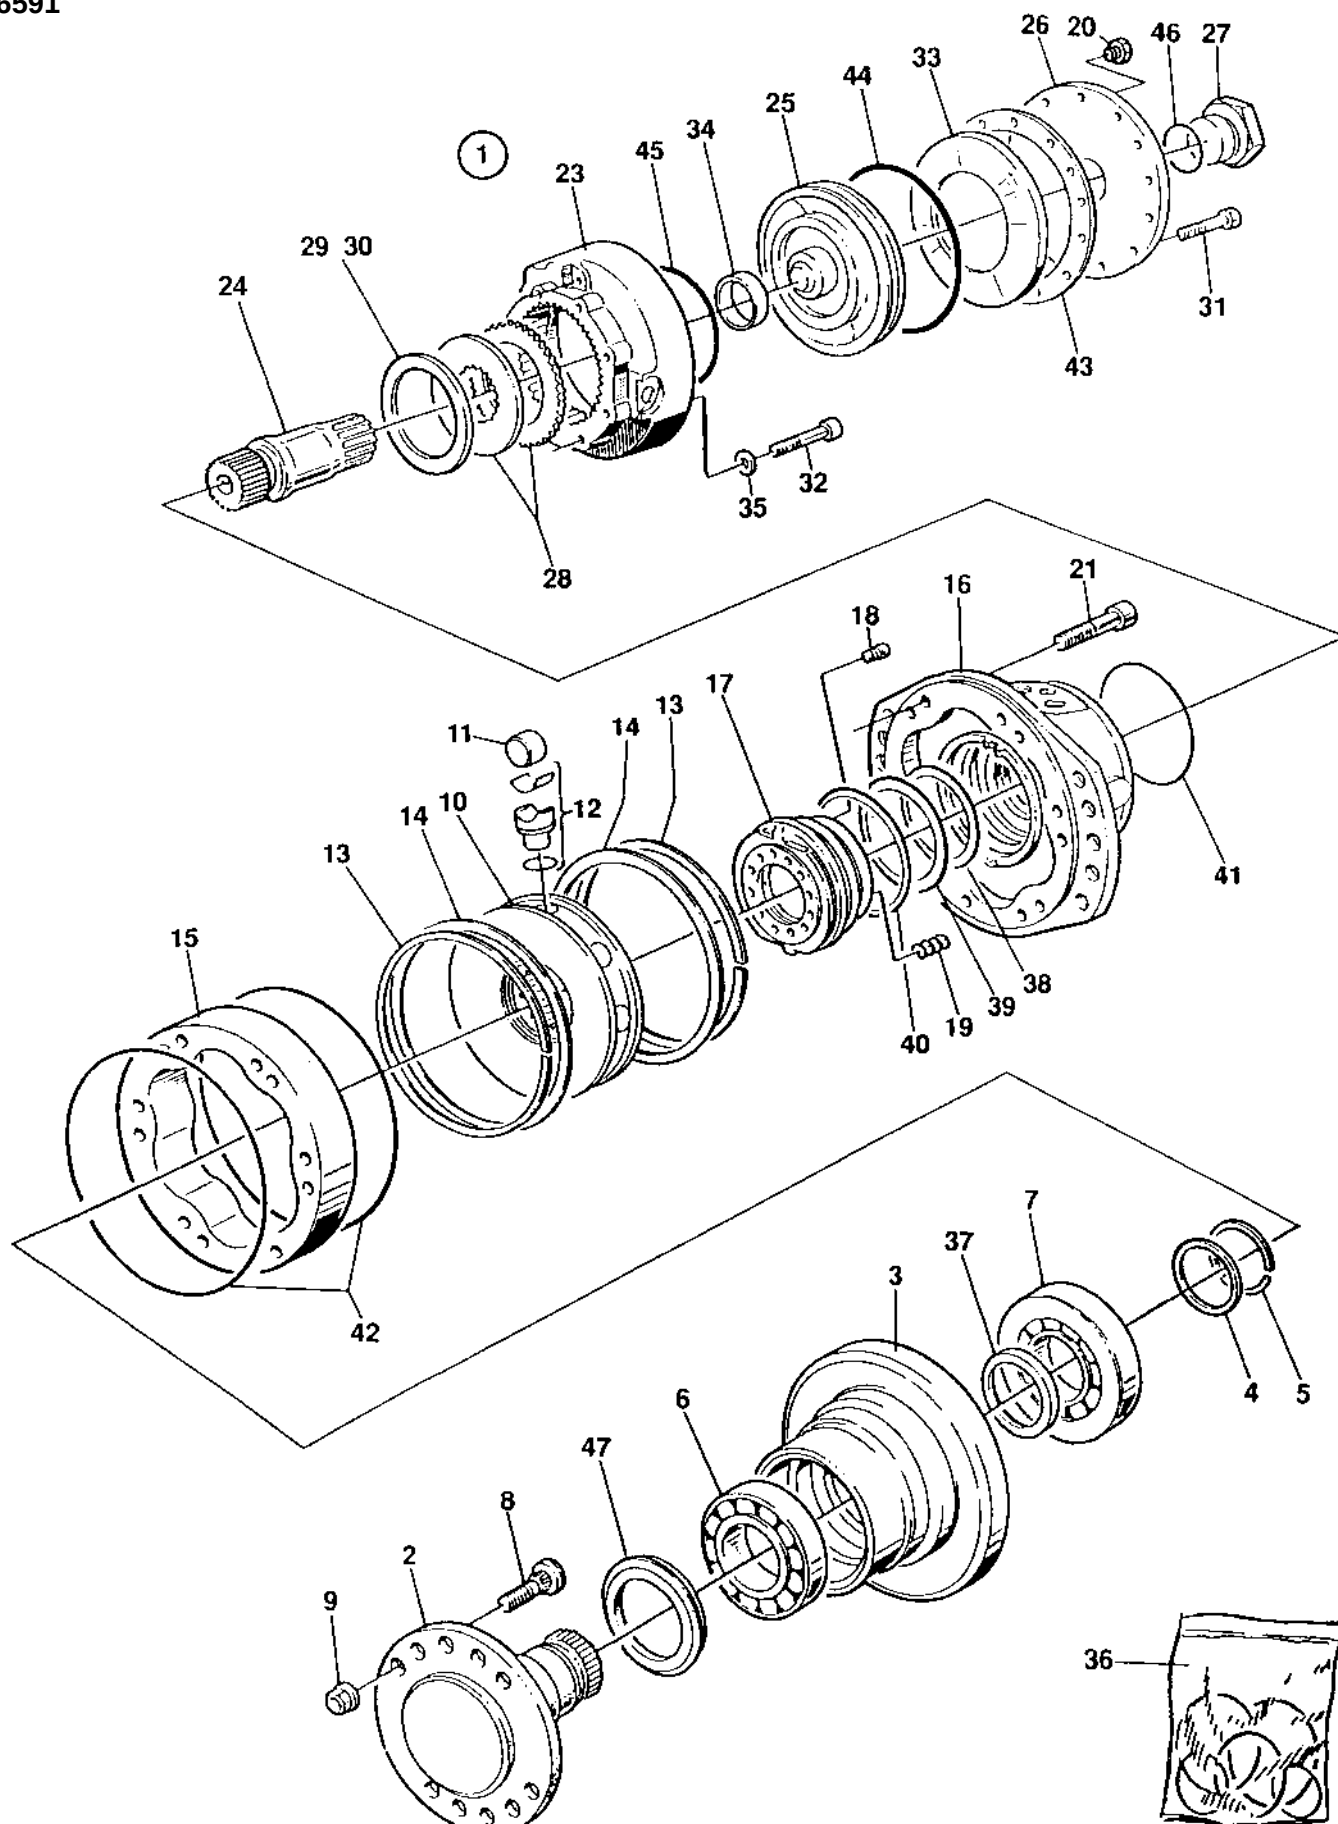

380594 Hydraulic motor, propulsion, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Hydraulic motor	
2	908788		1	.Shaft	
3	937875		1	.Housing	
4	902387		1	.Washer T=2,0 mm	
5	902388		1	.Split ring	
6	902389		1	.Bearing	D
7	902390		1	.Bearing	D
8	902391		5	.Wheel stud	
9	902392		5	.Wheel nut	D
10	937876		1	.Cylinder block	
11	903453		8	.Roller	
12	937091		8	.Piston	
13	937092		2	.Circlip	
14	937877		2	.Retaining ring	
15	937878		1	.Piston cam	
16	937879		1	.Housing	
17	937880		1	.Distributor ring	
18	902397		1	.Pin	
19	902398		9	.Spring	
20	902399	A	1	.Plug	
21	937881		10	.Screw	
23	937882		1	.Brake housing	
24	908791		1	.Shaft	
25	908792		1	.Piston	
26	908328	A	1	.End cover	
27	903295		1	.Plug	
28	908800	B	1	.Disc kit	D
29	902410		N	.Shim T=0,1 mm	
30	902411		N	.Shim T=0,3 mm	
31	902412		12	.Screw	
32	902413		8	.Screw	
33	902416		1	.Spring	
34	908794		1	.Nylon buch	
35	903450		8	.Washer	
36	937089		1	.Seal kit	D
37	903324		1	..Shaft seal	
38			1	..Sealing	
39			1	..Sealing	
40			1	..Sealing	
41			1	..O-ring	
42			1	..O-ring	
43	902800		1	..Gasket	
44	903455		1	..Quad ring	D
45	937812		1	..Sealing	
46	903327		1	..O-ring	
47	937090		1	..Shaft seal	

A) CPL
B) 15+13 pcs

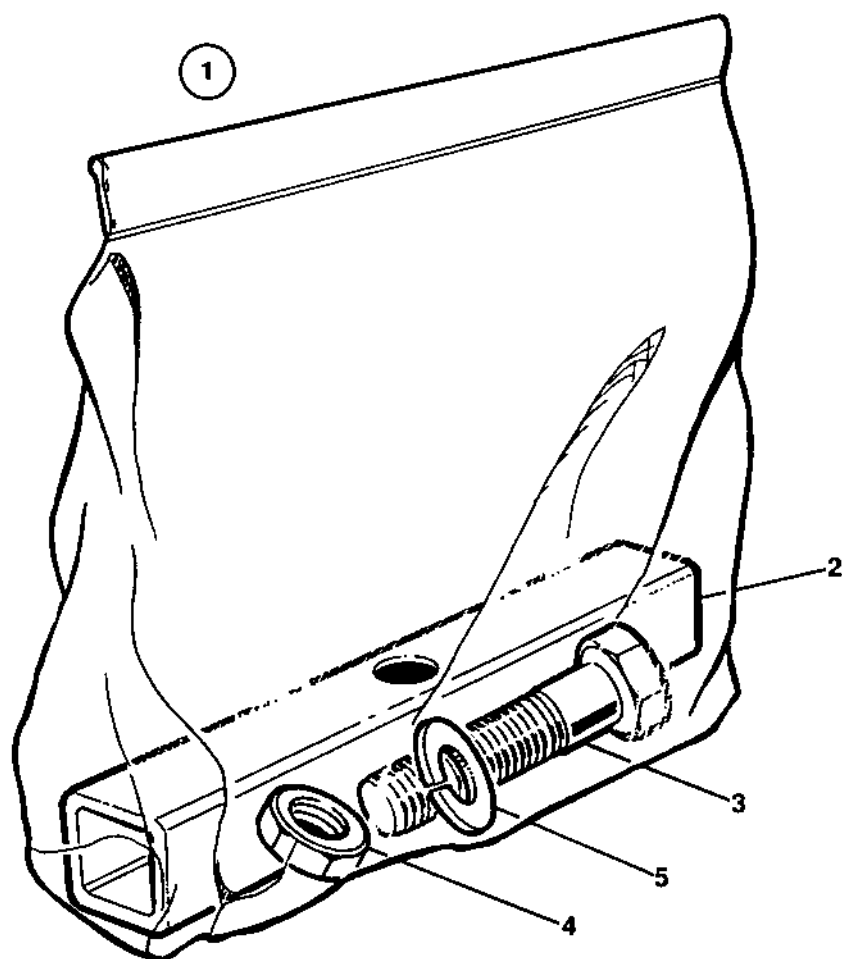

Brake release, propulsion motor

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376210	A	1	Brake release kit	
2	357892		1	.Stirrup	
3	904564		1	.Screw	
4	570008		1	.Nut	
5	904232		1	.Washer 17x30x3	

A) CPL

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
111018	23,73	313002	55,65	348485	235
150028	73	313008	85	348923	95
151012	199	313009	91,93	348924	95
151014	197	313022	87,89	349202	73
151043	149	313023	87	349248CN	309
160012	95,97	313035	291,293	349248DE	309
160016	157,161		295,297	349248DK	309
	165		299	349248EN	309
160025	199	313041	267,275	349248ES	309
160032	41,167	313068	303,341	349248FI	309
	169,173		367	349248FR	309
	177,179	313086	99,101	349248GR	309
160112	41		103,105	349248IS	309
160122	55	313100	103	349248IT	309
160132	21	313102	111,325	349248NL	309
160145	189	313108	327	349248NO	309
160207	197	330171	95	349248PT	309
160269	235,239	330331	77	349248SE	309
	243,247	330332	83	349405	357
160363	345	330383	77	349442	111
162004	353,355	332038	353	349492	369
162017	73	333228	55	349795	255,259
163049	21	334116	157,357	349879	157
202028	43,47		359,363	349880	157
	51,301	334117	351	350029	73
202042	47,63	334121	111	355258	235,245
202043	51,59	334132	119		249
	337	334134	111	355468	235
202046	47	334135	123,349	355705	343
212114	281		361,365	355797	265
212115	281	334137	169	355829	265
212160	73	334143	201	355869	111
212408	271	334144	157	355981	353
212512	127,137	334155	123	356415	325
212513	127	334156	111	356519	235
212571	129	334165	353	356922	349
223299	207	334190	375	356923	349
230277	111,113	334196	201	356924	349
	115,119	334197	125	357000	77
	123	334198	169	357002	77
230400	125	334203	159	357003	77
230515	77,79	334232	201	357005	77
	83	334234	169	357006	87
232070	125	334235	191	357008	107,139
232122	157	334236	191	357009	107,181
234218	123	334238	157		
234233	155,203	334249	353	357010	99
		334389	205	357012	111
234341	165	334463	207	357014	107
234342	157	334523	171	357016	95
234388	201	334524	161	357017	55
234390	161,191	334556	201	357020	73
	193	335914	111	357021	73
234481	159	338304	159	357023	107,147
234662	353	343490	73		
234804	205	343732	111	357025	41
234888	207	343744	73	357026	41
234953	113	343748	85	357031	41
234958	169	343775	31	357038	41
234992	375	344138	349	357039	41
234993	157	344374	281	357055	73
238272	197	345215	27	357058	73
244054	55	345388	321	357060	73
277992	333	345666	271	357111	111
285909	211,213	345728	211	357112	111
	215,219	345800	369	357113	111
	223,227	345870	235,273	357114	73
	231,303		277,279	357120	31
285911	211	346431	301	357123	157
287597	211,371	346505	73	357127	55
287713	63	346521	157	357128	55
288357	305	347153	41	357130	309
308000020	111	347154	41	357138	15,17
311016	333	347155	41		
312001	301	348331	271	357139	157
313001	95	348481	211	357141	157

Part Number	Page	Part Number	Page	Part Number	Page
357142	55	357583	211	358338	335
357146	43	357584	211	358339	335
357164	157	357585	235	358341	337
357165	77	357587	309	358342	335
357166	77	357592	309	358355	95
357170	271	357604	311	358370	77
357173	43	357605	311	358371	77
357190	31	357643	61	358378	319
357216	31	357663	267	358379	319
357221	31,379	357666	267	358380	319
357222	31	357667	255,263	358381	319
357235	31	357668	267	358382	319
357236	31	357670	285	358383	319
357248	43	357671	281	358384	319
357259	43	357672	281	358385	319
357263	43	357679	267	358386	319
357276	43	357684	211	358393	99
357280	43	357725	285	358394	99
357282	77	357810	255	358418	235
357298	43	357811	255	358440	319
357306	33,35	357812	255	358452	267
357309	33	357855	271	358458	321
357311	271	357863	43	358462	325
357316	271	357866	43,49	358465	357
357317	271			358468	291
357320	271	357892	383	358470	107,131
357328	111	357896	303		133
357329	111	357910	285	358477	113
357330	271	357922	325	358480	281
357370	31	357924	325	358481	281
357373	157	357925	325	358482	285
357377	191	357927	325	358483	285
357395	55	357928	325	358484	281
357405	55	357930	325	358485	113
357406	271	357934	357	358486	159
357407	271	357937	357	358504	157
357408	271	357939	343	358505	157
357418	41	357973	341	358536	337
357419	191	357993	341	358540	337
357424	271	357994	341	358545	337
357425	271	358000	257	358549	335
357426	271	358003	353	358551	335
357427	271	358089	273	358552	337
357430	87	358090SE	309	358553	337
357433	87	358098	325	358556	77
357435	87	358102	263	358557	337
357459	95	358142	271	358558	335
357460	291	358143	271	358561	335
357466	95	358146	235	358564	265
357468	95	358160	43	358579	321
357469	97	358161	43	358586	351
357470	95	358162	43	358587	73
357471	211	358165	349	358588	33
357483	31	358187	271	358589	33
357486	31	358197	43	358590	33
357488	31	358213	271	358595	327
357494	291	358224	321	358614	353
357495	291	358225	107	358615	353
357496	291	358228	323	358618	353
357497	291	358232	271	358620	327
357498	291	358239	353	358622	327
357499	291	358248	255	358646	339
357500	291	358254	311	358663	235
357501	291	358287	305	358666	73
357502	303	358299	369	358689	73
357506	77	358302	369	358743	31
357507	77	358303	369	358782	329
357543	357	358306	369	358783	329
357562	253	358324	335,339	358789	329
357567	211	358325	335	358790	329
357573	235	358329	335	358801	329
357574	235	358331	335	358802	329
357575	235	358332	335	358809	63
357580	211	358333	335	358836	35,37
357581	211	358335	335		39
NI 2 357582	235	358336	335	358839	35

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
358846	55	370273	301	373380	33
358848	35	370274	301	373381	33
358853	35	370305	169	373402	123
358854	35	370312	171	373461	95
358861	31	370321	297	373476	47
358864	35	370323	85	373478	165
358865	99	370355	79	373490	259
358868	35	370360	85	373491	215
358871	35	370627	51	373492	243
358874	35	370636	51	373493	259
358876	35	370637	51	373517	223
358881	315	370638	51	373549	297
358891	273	370645	47	373628	31
358892	273	370646	51	373797	59
358957	99	370647	51	373849	359
358976	41	370660	341	373898	299
358978	41	370678	289	373999	31
359003	59	370719	339	374009	305
359022	291	370721	339	374018	33
359023	297	370722	339	374019	33
359024	291	370723	293	374020	33
359062	305	370740	339	374087	335
359064	305	370741	339	374100	335
359074	305	370742	339	374101	351
359119	101	370743	339	374109	305
359122	101	370764	289	374118	305
359134	237	370803	305	374119	305
359135	367	370957	51	374132	275
359136	367	370975	51	374133	275
359161	101	370979	169	374213	253
359163	101	371064	297	374400	43
359173	101	371085	375	374401	43
359175	101	371088	301	374402	43
359176	101	371090	51	374403	43
359186	239	371124	375	374460	331
359415	79	371170	311	374483	367
359505	213	371173	309	374603	107
359524	107,183	371183	115	374625	47
		371241	293	374626	165
359525	161	371313	115,121	374627	47
359660	343		163,175	374641	79
359661	343			374657	47
359662	343	371314	117	374981	293
359769	337	371326	239	375010	61
359781	61	371344	241	375013	59
359823	161	371380	43,53	375594	49
359834	161	371542	107,151	375595	49
359869	79	371561	255	375631	107,153
370083	83	371670	33	375649	107,187
370108	91	371709	33		
370109	83	371834	219	375687	295
370127	311	371892	219	375892	341
370133	91	371893	219	376113	263
370134	91	371908	371	376129	45
370137	85	371916	375	376210	383
370138	85	371994	43	376449	373
370139	85	372118	375,377	380192	259
370140	85	372140	83	380255	35
370141	85	372141	83	380290	89
370142	83	372142	83	380292	89
370172	107,185	372143	83	380293	89
		372352	107,141	380294	15
370173	107	372523	275	380295	15
370174	301	372570	275,283	380296	89
370228	99	372627	95	380297	89
370233	243	372659	283	380299	89
370241	301	372696	283	380300	89
370242	301	372697	283	380343	373
370244	301	372705	295	380459	95
370247	297	372720	173	380594	379,381
370248	297	372721	173	380601	93
370250	103	372776	255	380602	93
370251	103	372777	255	380736	107
370263	301	373029	345	380960	227
370266	301	373057	345	381252	345
370272	301	373266	123	381253	345

Part Number	Page	Part Number	Page	Part Number	Page
381370	379	482219	205	500015	35
381381	105	482242	165	500016	31
381394	105	482243	357	500018	339
381438	101	482245	119	500019	77
381521	105	482285	111	500020	49
381734	105	482329	111	500021	43
381750	287	482398	193	500022	49
381955	243	482434	357	500028	41
382180	63	482452	123	500029	43
382181	63	482472	201	500030	31
382213	295	482482	203	500034	355
382226	295	482553	113	500037	111
382237	287	482606	165	500040	61
382349	295	482663	353	500044	73
382396	369	482743	157	500046	33
382467	65	482766	169	500047	37
382468	65	482773	355	500048	73
382563	335	482775	205	500049	33
382565	47	482779	119	500050	79
382568	335	482782	205	500053	31,229
382751	311	482817	157		
382782	243	482822	157	500056	33
383200	283	482827	111	500059	43
383705	279	482828	111	500061	291
383859	311	482829	111	500067	101
383860	311	482830	111	500070	305
383960	253	482832	157	500071	329
383961	215	482833	157	500075	235
383967	253	482835	157	500077	353
384029	33	482836	201	500079	51
384030	33	482838	157	500088	357
384083	251	482854	203	500091	111
384099	231	482855	205	500094	321
384191	251	482858	357	500107	305
384263	243	482864	357	500109	123
384264	231	482865	207	500111	33
384359	253	482883	353	500117	83
384493	33	482884	203	500122	77
384532	287	482889	161	500133	37
384697	79	482891	157	500134	375
384699	83	482892	157	500135	271
384726	95	482893	157	500142	321
385217	33	482894	157	500153	227
385580	215,233	482895	157	500164	305
385613	37	482896	357	500184	351
385626	37	482897	179	500185	79
385627	37	482898	123	500186	61
385628	39	482962	169	500188	31
385644	243	482963	169	500189	101
385672	37	482998	123	500190	337
385674	37	483003	161	500195	329
385675	25	483069	125	500237	267
385712	89	483118	123	500249	43
385713	89	483155	165	500274	77
386075	287	483156	165	500292	51
386133	79	483157	165	500501	291
386134	165	483158	165	500505	111
386477	83	483162	167	500509	87
416004	291	483164	125	508005	287
416034	291	483167	207	508020	211
433830401	161	483281	165	508025	79
450166	321	483282	167	508027	47
476019	321	483585	359	508028	73
480124	163	485005	333	508029	77
480446	195	485006	333	508048	77
480447	195	485019	333	508053	79
480449	195	485037	333	508056	85
480450	195	485388	333	508057	169
480457	195	499162	267	508092	275
480464	195	499444	55	508095	77
480468	195	499497	91	508096	77
481303	195	500004	349	509035	111
482056	201	500006	287	513012	43
482208	355	500012	321	513013	123
482213	157	500013	221,225	516010	301
NI 4 482214	355			516042	329

Part Number	Page	Part Number	Page	Part Number	Page
516043	343	791090	231	901340	319
526007	327	791091	231	901341	319
527002	323	791117	65	901365	321
533001	211	791182	37	901366	325
533016	353	791226	279	901369	255
533032	265	791233	337	901375	323
533038	291	791234	337	901413	135
533057	341	791262	311	901431	63
533070	275	791272	311	901432	63
535008	311	791275	311	901550	327
535010	265	791472	251	901552	327
541508	325	801567	211	901553	327
541702	235	801698	321	901554	327
541703	295	801781	171	901555	327
541705	237	813321	111	901556	327
550041	211	813435	111	901557	327
570001	211	813443	111	901558	327
570003	265	813444	123	901559	327
570004	235	813500	359	901561	327
570005	43	831132	357	901562	327
570006	111	831150	351	901563	327
570008	383	831179	191	901564	327
570102	85	842664	55	901565	327
570103	169	842849	357	901566	327
573004	291	851649	357	901568	327
586001	43	891228	93	901571	327
586002	35	892179	41	901572	325
586003	43	892446	125	901578	325
586004	211	900478	83	901587	327
586018	31	900485	43	901679	325
586019	33,81	900519	43	901692	161
		900684	311	901740	127
586021	271	900790	255	901741	127
600001	311	900791	257	901742	129
600002	257	900793	255	901744	127,143
600003	43	900794	255	901748	127
600004	31	900842	309	901749	127
600006	55	900904	369	901750	127
600008	41	900908	157	901753	127
600009	111	900986	273	901754	127
600011	271	900998	321	901756	127
600017	77	900999	321	901757	127
600020	191	901143	325	901758	127
601003	101	901156	123	901766	213
603006	281	901157	113	901767	217
603009	101	901165	347	901837	55
603013	77	901166	347	901841	55
603018	157	901167	347	901994	255
606003	321	901168	347	902059	41
606015	319	901169	347	902060	41
615041	349	901182	257	902061	41
615042	51	901183	257	902062	41
615043	43	901191	65	902063	41
615044	55	901212	333	902064	257
615045	77	901224	325	902066	255
615065	335	901225	233	902093	305
615076	31	901226	235	902094	99
615096	273	901227	237	902099	107
615117	319	901228	255	902100	31
624011	331	901229	325	902101	31
624015	309	901238	325	902110	111
624016	305	901239	325	902111	335
624017	311	901240	235	902115	113
624018	47	901242	321	902121	111
624027	265	901245	325	902123	191
629016	291	901249	321	902124	113
629024	369	901256	235	902125	203
630019	191	901258	323	902126	111
630035	339	901266	323	902159	271
635061	199	901267	323	902163	271
747282	95	901273	321	902164	271
747487	77	901274	273	902166	43
747691	77	901275	321	902167	95
747770	77	901296	321	902168	87
791078	231	901309	55	902171	31
791079	231	901313	111	902172	31

Part Number	Page	Part Number	Page	Part Number	Page
902174	211	902496	343	902665	129
902183	191	902498	77	902666	129
902184	191	902499	77	902667	129
902185	191	902500	77	902668	129
902186	191	902501	77	902669	129
902187	291	902502	77	902670	129
902188	291	902503	77	902671	129
902189	291	902504	77	902673	129
902190	291	902505	77	902674	129
902191	291	902507	129	902675	129
902192	291	902508	325	902676	129
902193	291	902509	325	902677	129
902194	291	902521	77	902678	129
902197	211	902528	341	902679	129
902198	87	902535	357	902680	129
902199	87	902536	357	902681	129
902201	87	902537	357	902682	129
902203	211	902548	77	902683	129
902212	77	902550	211	902684	129
902218	311	902551	111	902685	129
902223	235	902559	77	902686	129
902224	235	902560	211	902687	129
902225	235	902568	129	902688	129
902227	255	902569	273	902689	129
902229	111	902576	41	902690	129
902230	111	902578	333	902691	129
902231	111	902585	43	902692	129
902232	111	902586	43	902693	129
902233	111	902591	43	902695	129
902256	43	902610	333	902696	139
902295	157	902617	127	902697	127
902300	73	902618	127	902698	127
902301	291	902619	127	902700	131
902302	291	902620	127	902701	131
902303	67	902621	127	902702	131
902377	111	902622	127	902703	131
902378	111	902623	127	902704	131
902379	65	902624	127	902705	131
902384	211	902625	127	902706	131
902385	147	902626	127	902707	131
902386	147	902627	127	902709	131
902387	151	902628	127	902710	131
902388	151	902629	127	902711	131
902389	147	902630	127	902712	131
902390	147	902631	127	902713	131
902391	147	902632	127	902714	131
902392	147	902633	127	902715	131
902394	147	902634	127	902716	131
902395	147	902635	127	902717	131
902396	147	902636	127	902718	131
902397	147	902637	127	902719	131
902398	147	902638	127	902724	141
902399	147	902639	127	902734	131
902401	147	902640	127	902737	131
902402	147	902641	127	902744	135
902404	147	902642	127	902745	135
902405	147	902643	127	902746	135
902406	147	902644	127	902747	131
902407	147	902645	131	902748	131
902410	147	902647	127	902750	131
902411	147	902648	127	902751	133
902412	147	902649	127	902752	133
902413	147	902650	127	902753	133
902414	147	902652	127	902754	133
902415	147	902653	127	902756	135
902416	147	902654	127	902757	135
902417	147	902655	127	902758	135
902418	147	902656	127	902759	135
902424	197	902657	129	902760	135
902446	281	902658	129	902761	135
902465	129	902659	129	902762	135
902466	129	902660	129	902763	135
902467	129	902661	129	902764	135
902470	147	902662	129	902766	135
902472	149	902663	129	902767	135,145
NI 6 902473	149	902664	129	902769	135

Part Number	Page	Part Number	Page	Part Number	Page
902770	135	903097	321	903395	291
902771	135	903100	319	903422	309
902772	135	903101	319	903423	311
902773	135	903102	321	903424	311
902774	135	903103	319	903425	309
902777	135	903104	319	903430	183
902778	135	903105	319	903431	161
902779	135	903106	321	903436	337
902783	131	903107	321	903449	147
902784	135	903110	325	903450	147
902788	133	903118	325	903452	147
902789	133	903119	325	903453	147
902792	133	903120	325	903454	149
902797	271	903121	325	903455	147
902799	147	903123	319	903459	309
902800	147	903124	319	903471	143
902803	267	903125	319	903478	55
902804	43	903126	319	903521	195
902808	181	903127	319	903540	61
902809	181	903128	325	903541	61
902810	181	903140	327	903543	59
902812	127	903141	353	903557	127
902813	127	903142	353	903560	135
902814	129	903143	353	903624	83
902844	83	903144	353	903637	183
902845	343	903148	321	903653	51
902859	305	903152	211	903671	287
902861	195	903154	73	903675	301
902862	195	903192	275	903676	301
902863	195	903202	131	903680	103
902864	195	903203	131	903681	61
902866	43	903204	131	903704	83
902867	291	903206	131	903705	221
902868	55	903208	131	903706	83
902869	55	903209	131	903707	83
902870	147	903210	131	903708	221
902871	147	903211	131	903722	343
902872	147	903213	131	903727	273
902874	59	903215	131	903728	169
902890	273	903216	131	903729	189
902891	323	903217	131	903730	189
902892	273	903218	131	903757	219
902893	95	903221	131	903817	219
902895	291	903222	131	903820	239
902896	291	903223	135	903823	371
902902	77	903224	131	903835	345
902916	57	903225	135	903886	63
902919	273	903226	135	903912	83
902976	57	903227	135	903925	123
902989	85	903228	135	903938	7
902992	285	903229	131	903957	61
902994	285	903236	95	903958	61
903000	319	903239	235	903959	61
903003	191	903241	341	903987	29,69
903010	55	903247	7,9	904015	251
903063	235	903254	131	904029	345
903064	43	903268	203	904030	345
903069	289	903287	73	904076	47
903070	289	903291	147	904090	43
903071	289	903292	147	904091	45
903072	289	903295	147	904094	309
903073	289	903304	147	904096	309
903078	265	903323	321	904097	311
903079	265	903324	151	904116	55
903081	265	903325	151	904131	275
903082	219	903326	321	904136	289
903083	319	903327	151	904175	355
903084	319	903330	181	904203	331
903085	321	903335	77	904206	47
903086	321	903365	129	904213	33
903087	321	903369	43	904218	275
903089	319	903372	213	904223	363
903092	319	903373	135	904224	359
903094	319	903376	285	904225	275
903095	321	903378	305	904228	35
903096	321	903384	87	904229	31

Part Number	Page	Part Number	Page	Part Number	Page
904230	31	908798	151	923684	57
904231	31	908800	151	923690	29
904232	31	908801	151	923734	55
904233	79	908804	183	923735	55
904234	193	908974	273	923844	273
904246	311	908985	185	923859	55
904258	21	909107	213	923874	273
904281	53	909152	265	923876	55
904292	79	909235	151	923900	301
904313	259	909267	61	923951	21
904342	37	909369	79	923962	55
904343	37	909370	79	923976	257,261
904368	43	909371	79		
904374	43	909468	133	923984	55
904403	311	909469	133	924544	55
904404	311	909483	183	924875	271
904429	305	909484	183	924986	55
904545	295	909490	87	924996	55
904556	165	909491	87	925599	63
904557	43	909498	343	925678	7,11
904564	383	909513	131	925723	113
904603	373	909514	141	925802	95
904637	83	909527	239	925958	211
904639	43	909533	69	926214	41
904640	47	909535	275	926215	273
904647	223	909536	275	926911	55
904697	211	909634	289	926985	335
904703	33	909658	377	927233	147
904705	43	909659	377	927278	143
904710	161	909661	377	927396	31
904711	373	909662	377	927568	63
904724	155	909666	377	927637	321
904725	155	909668	377	927975	235
904780	95	909670	377	928345	55
904808	59	909672	377	928497	211
904835	311	909674	377	928502	255
904870	309	909682	377	928672	323
904877	63	909700	377	928781	55
904878	63	909701	377	928830	191
904901	165	909703	377	928922	95
904961	215	909708	377	928928	235
904962	227	909709	377	928937	337
904963	215	909711	377	929008	195
904984	95	909757	141	929009	195
904989	259	909758	141	929010	195
905077	287	909759	199	929012	195
908110	235	909760	199	929013	195
908229	305	909761	199	929014	195
908295	79	909764	199	929076	311
908328	151	909765	199	929164	323
908384	143	909766	199	929241	55
908404	9,13	910161	113	929322	7
908405	9	910162	111	929348	57
908410	83	910992	255	929419	57
908411	83	911456	235	929455	265
908412	83	911620	195	929602	271
908413	83	920775	55	929881	67
908419	185	921028	227	929956	319
908420	185	921039	321	929957	319
908484	303	921070	301	929965	319
908629	85	921072	95	930046	211
908630	85	921099	125	930151	235
908631	85	921118	85	930153	235
908632	85	921119	111	930154	239
908633	85	921423	55	930155	235
908634	85	922325	291	930161	255
908653	83	922875	335	930162	255
908708	79	923008	191	930163	235
908788	151	923247	31	930165	255
908790	151	923406	359	930166	267
908791	151	923407	353	930182	235
908792	151	923447	147	930200	235
908794	151	923679	55	932032	235
908795	151	923680	55	932055	255
908796	151	923681	55	932056	255
908797	151	923683	57	932058	235

Part Number	Page	Part Number	Page	Part Number	Page
932059	239	937370	377		
935158	141	937372	377		
935159	141	937373	377		
935160	141	937374	377		
935161	143	937375	377		
935162	143	937376	377		
935163	143	937812	381		
935164	143	937875	381		
935165	143	937876	381		
935166	143	937877	381		
935167	143	937878	381		
935170	143	937879	381		
935171	143	937880	381		
935172	143	937881	381		
935176	143	937882	381		
935177	143	938306	63		
935178	143	938307	63		
935179	143	938534	7		
935180	143	938539	5		
935182	143	938540	5		
935183	143	938541	5		
935184	143	938542	5		
935186	143	938543	5		
935187	143	938544	5		
935188	143	938581	17		
935189	143	938584	15		
935190	143	938738	287		
935191	143	938739	287		
935194	145	938740	287		
935195	145	938885	19		
935196	145	938892	19		
935197	145	938908	19		
935198	145	938914	19		
935199	145	939098	79		
935200	145	939494	83		
935201	145	939495	83		
935202	145	947687	31		
935203	145	960274	371		
935204	145	960787SE	309		
935205	145	960796	211		
935206	145	975062	255		
935207	145	985012	235		
935208	145	985013	257		
935209	145	985014	255		
935210	145	985125	235		
935211	145	985126	267		
935212	145	989151	157		
935214	145	991657	309		
935215	145	991658	311		
935216	145	999011	267		
935218	145	999027	211		
935219	141				
935339	79				
935977	377				
935981	377				
936283	275				
936690	141				
936691	143				
936692	143				
936693	143				
936706	143				
937053	59				
937060	83				
937089	153				
937090	151				
937091	153				
937092	153				
937093	153				
937094	153				
937363	377				
937364	377				
937365	377				
937366	377				
937367	377				
937368	377				
937369	377				

