


DYNAPAC

CC 501

SPARE PARTS

CATALOGUE

SCC501-2EN1

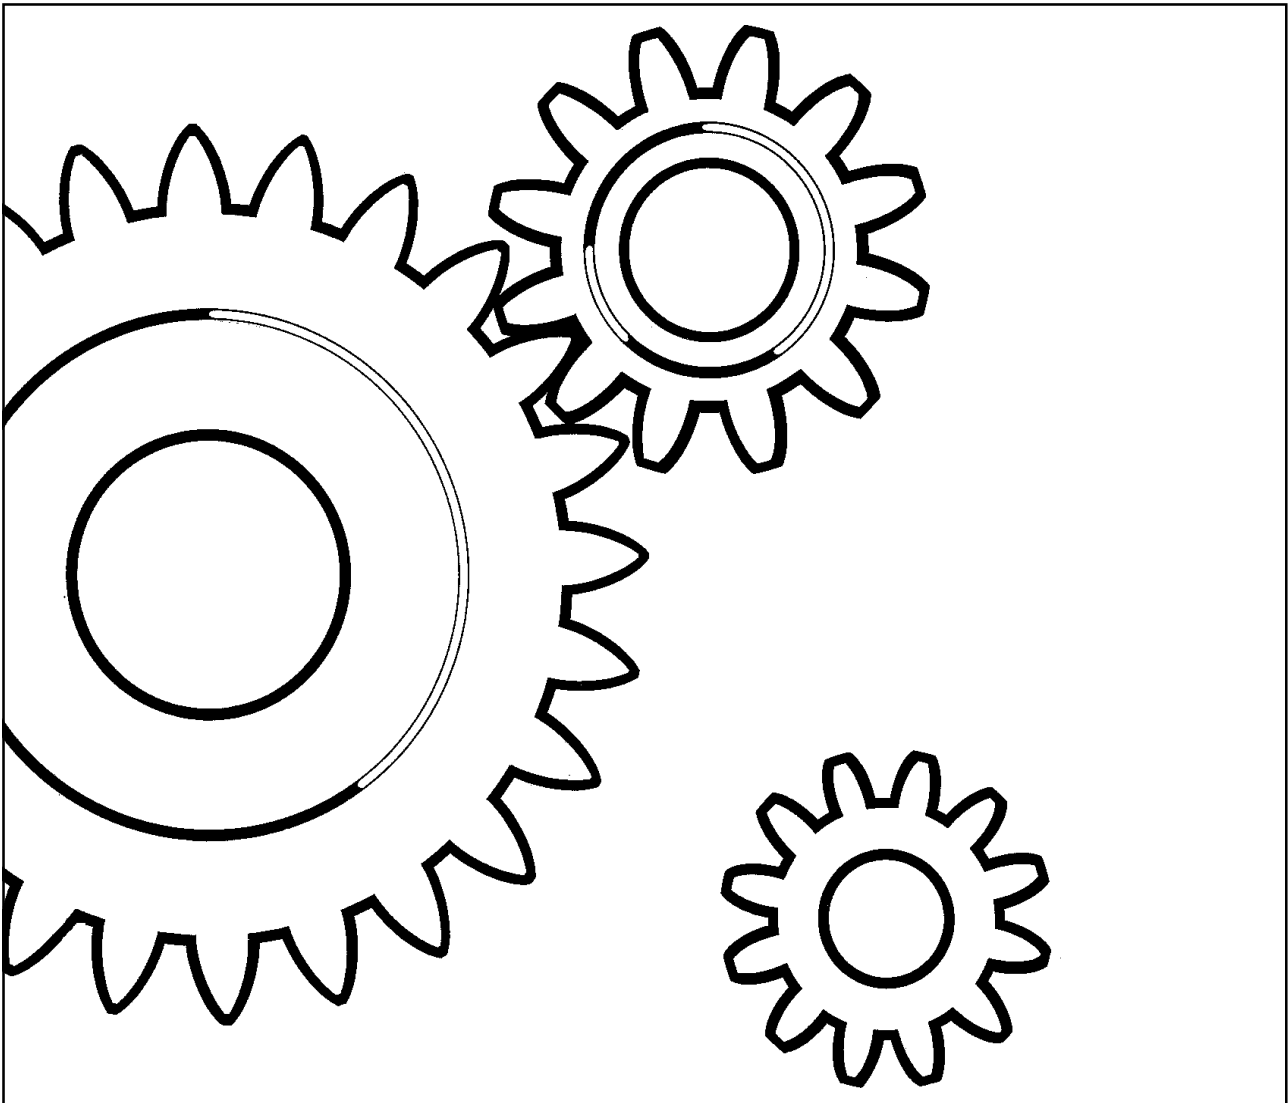

SVEDALA



Svedala Compaction Equipment AB

Box 504, SE-371 23 Karlskrona, Sweden

Telephone +46 455 30 60 00

Telefax +46 455 30 60 10

Telex 43041 dynkar s

Vibratory Roller CC 501

Spare Parts Catalogue SCC501-2EN1

Valid from roller serial number:

60910503

Diesel engines:

CUMMINS 6CT 8.3 / C

Published catalogue issues valid for these rollers:

<i>Catalogue</i>	<i>Issue date</i>	<i>Valid for serial numbers</i>
S-10244-1	1991 - 09	Replaced by S-245-2
S-245-2	1994 - 01	Replaced by SCC501-2EN1, SCC501C-1EN1
SCC501-2EN1	2000 - 11	*60910503*-



RESERVDELSBESTÄLLNING

Följande uppgifter ska lämnas vid beställning av reservdelar för att undvika leveransfel:

1. Maskintyp.
2. Vältensserienummer.
3. Antal av önskad reservdel.
4. Reserdelens artikelnummer.
5. Reservdelens benämning.
6. Måttuppgifter vid beställning av metervara.

ORDERING SPARE PARTS

To avoid errors in delivery, please give the following information when ordering spare parts:

1. Type of machine.
2. Roller serial number.
3. Quantity required.
4. Part number.
5. Parts denomination.
6. Dimensions when ordering per length.

ERSATZTEILBESTELLUNG

Zur Vermeidung von Fehllieferungen sind bei der Bestellung von Ersatzteilen folgende Angaben zu machen:

1. Maschinentyp.
2. Herstellungsnummer.
3. Bestellmenge. (Quantity)
4. Ersatzteilnummer. (Part N°)
5. Ersatzteilbenennung. (Denomination)
6. Massangaben bei Bestellung von Meterware.

ORDINI DI RICAMBI

Per evitare errori nelle consegne di ricambi, Vi preghiamo di comunicarci le seguenti informazioni al momento dell'ordinazione:

1. Tipo di macchina.
2. Numero di serie della macchina.
3. Quantità dei pezzi desiderati. (Quantity)
4. Numero di codice del pezzo. (Part N°)
5. Descrizione del pezzo di ricambio. (Denomination)
6. Misura, in caso di ordine per metro.

PEDIDO DE RECAMBIOS

Para evitar errores en las entregas, deberán indicarse los siguientes datos al hacer un pedido de recambios:

1. Tipo de máquina.
2. Número de serie.
3. Cantidad de piezas deseadas. (Quantity)
4. Número de artículo de la pieza de recambio. (Part N°)
5. Denominación de la pieza. (Denomination)
6. Indíquese la medida al solicitar un artículo que se expide por metros.

COMMANDE DE PIÉCES DE RECHANGE

Les indications suivantes doivent être fournies lors de la commande de pièces de rechange, afin d'éviter toute erreur de livraison:

1. Type de machine.
2. Numéro de série.
3. Quantité désirée de pièce de rechange. (Quantity)
4. Numéro de la pièce de rechange. (Part N°)
5. Dénomination de la pièce de rechange. (Denomination)
6. Longueur en cas de commande au mètre.

YOUR AGENT/DEALER:

Text pages

The text pages is structured as the picture on the right.

1. This is the remarks for specific items and the descriptions of the remarks is at the bottom of the parts list.

2. Parts indicated by a dot and moved to the right are included when buying the assembled unit above.

3. Spare parts and service code for a specific part, mainly for internal use at Svedala Dynapac.

"A" = Service part, "B" = Fast moving part, "C" = Suggested exchanged part and "D" = Regular spare part.

DYNAPAC		Svedala Compaction Equipment AB			
Cooling system					
Ref. No.	Part No.	Rem.	Qty	Description	Code
1	223047		1	Water cooler	③ C
2	935852		1	.Radiator cap	D
3	935851	①	②	.Cock	
4	373263	A	1	Radiator hose	D
5	313009		6	Clamp	
6	205058	B	1XL	Rubber clutch	
7	373261	C	1	Radiator hose	D
8			1	Oil cooler	D
9	223289		1	Plate	
10	902166	D	1XL	Edge trim	
11	223287	E	1	Holder	
12	223288	F	1	Holder	
13	908168		1	Fan guard	
14	908170		1	Fan shroud	
15	908171		2	Mounting bar	
16	908169		1	Fan guard	
17	500021		14	Screw	
18	902286		14	Nut	
19	600006		14	Washer	
20	313102		2	Cable strap	

① A) Upper
B) L=060MM
C) Lower
D) L=2280MM
E) Left
F) Right

Changes

PARTS INFO	SERVICE INFO	GROUP	PAGE	NOTES

Notes

Notes

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

PÄRMETIKETT

För att undvika fel vid reservdelsbeställning finns här nedan två etiketter som passar i fickorna på pärmarnas ryggar. På dessa kan man se från vilket vältnummer av aktuell maskin reservdelskatalogen gäller. Gör så här:

1. Tag denna sida ur pärm.
2. Klipp ut etiketten till VÄNSTER (1) och sätt in den i fickan på DENNA pärmens rygg.
3. Finns det en etikett till HÖGER (2), kan denna användas på pärm för FÖREGÅENDE utgåva av denna katalog.
4. Kasta detta papper.

KATALOG-BESCHRIFTUNG

Zur Vermeidung von Fehlen bei der Ersatzteilbestellung benutzen Sie bitte die unteren Beschriftungen, um die Kataloge auf der Rückseite zu kennzeichnen. Auf der Beschriftung ist angegeben, für welche Maschinennummern der jeweilige Katalog gültig ist. Ablauf:

1. Nehmen Sie dieses Blatt aus dem Katalog.
2. Schneiden Sie die LINKE Beschriftung (1) aus. Schieben Sie die Beschriftung in die tasche auf DEM Katalogrücke.
3. Sollte die Beschriftung unten RECHTS (2) mitgeliefert werden, kennzeichnen Sie damit bitte die ÄLTERE Ausführung dieses Kataloges.
4. Den Rest dieses Blattes bitte vernichten.

ETIQUETA PARA LA CARPETA

Para evitar errores al pedir repuestos utilicen las etiquetas abajo descritas para identificar los catálogos en la parte trasera de la carpeta. En la etiqueta se ven los números de referencia de la serie para la cual es válido el catálogo. Instrucciones:

1. Quitar esta página de la carpeta.
2. Cortar la etiqueta IZQUIERDA (1) y ponerla en la parte trasera de la carpeta.
3. Si hay una etiqueta en la parte DERECHA (2) se puede utilizar en la carpeta para el catálogo que PRECEDE a esta.
4. Tirar esta hoja.

BINDER LABEL

To avoid errors when ordering spare parts use the labels below to identify the catalogues on the back of the binder. The label contains the serial number range for which the catalogue is valid. Do like this:

1. Remove this page from the binder.
2. Cut out the LEFT label (1) and put it on THIS binder's back.
3. If there is a label to the RIGHT (2), it can be used on the binder for PRECEDING issue of this catalogue.
4. Throw away this paper.

ETICHETTA POSTA SUL RACCOGLITORE

Per evitare errori quando ordinate pezzi di ricambio, usate le etichette in calce che servono ad identificare i cataloghi sul retro del raccoglitore. L'etichetta indica il numero di matricola delle macchine prese in considerazione nel catalogo.


1. Rimuovete questa pagina dal raccoglitore.
2. Ritagliate l'etichetta posta a SINISTRA (1) e ponetela sul retro DEL raccoglitore.
3. Se trovate anche un'etichetta sulla DESTRA (2), ritagliatela e ponetela sul raccoglitore relativo alla PRECEDENTE edizione del catalogo.
4. Distruggete questo foglio.

ETIQUETAGE DU CATALOGUE

Afin d'éviter des erreurs lors de commandes de pièces de rechange, nous vous conseillons d'apposer les marquages ci-dessous à l'arrière du classeur, pour identifier les catalogues. Ce marquage indique les numéros de série pour lesquels le catalogue est adapté. Il convient de procéder de la façon suivante:

1. Retirez cette page du classeur.
2. Découpez l'étiquette de GAUCHE (1), et apposez-la à l'arrière de CE catalogue.
3. Si il y a une étiquette à DROITE (2), vous pourrez l'apposer sur le classeur de l'édition PRECEDENTE du catalogue.
4. Détruisez cette feuille.

1.



CC501 SN 60910503-	2
Frame	4
Frames and scrapers Up to 60910551	6
Frames and scrapers From 60910552	8
Steering hitch	10
Structure	12
Sprinkler system, front/rear	16
923690 Water pump Up to 60910687	20
903987 Water pump From 60910688 Up to 60910818	22
Sprinkler mat	24
Drum	26
Drum Up to 60910731	28
Drum From 60910732	32
355618 Drum gear Up to 60910731	36
372987 Drum gear From 60910732	40
Engine	42
Engine Cummins 6CT 8.3/8.3-C	44
Cooler Cummins Up to 60910779	46
Cooler Cummins From 60910780	48
802590 Double pump drive	50
Intake system	52
Fuel system	54
Exhaust system	56
Hydraulic system	58
Hydraulic diagram	60
Propulsion system, pump Up to 60910731	62
Propulsion system, pump From 60910732	66
Propulsion system, motors Up to 60910731	70
Propulsion system, motors From 60910732	72
900847 Hydraulic pump Propulsion Up to 60910731	74
355483 Valve block	78
355637 Hydraulic motor Propulsion drum Up to 60910600	80
358986 Hydraulic motor Propulsion drum From 60910601	82
Vibration system, pump Up to 60910779	84
Vibration system, pump From 60910780	86
Vibration system, motors	88
801755 Hydraulic pump Vibration and steering Up to 60910779	90
335553 Hydraulic motor Vibration	92
801691 Vibration valve	94
Vibration valve Control section	96
Steering system	98
480219 Steering valve	100
347110 Hydraulic cylinder Up to 60910814	102
375031 Hydraulic cylinder From 60910815	104
Electrical equipment	106
Electrical equipment	108
Instrument column	112
Control panel	114
Lights	116
Sensors	118
Rotating Beacon	120
Back-up alarm	122


Drivers platform	124
Drivers platform	126
Swivel panel	128
Drivers seat Up to 60910799	130
Drivers seat From 60910800	132
Engine controls Up to 60910731	134
Engine controls From 60910732	136
F/R control	138
F/R control Dual, left side	140
Rops and seat belt	142
Decals	144
Plates and decals, CE	146
Standard equipment	148
Standard equipment	150
Optional equipment	152
Cab Exterior	154
Cab Interior	160
Cab Heather	164
Compaction meter	166
Sign smv First aid box	168
Tool equipment	170
Noise suppression	172
Trip recorder Up to 60910660	174
Trip recorder From 60910661	176
Frequency meter	178
Roller multimeter	180
Emergency water Supply	182
Brake release	184
Cassette receiver	186
Air conditioning Up to 60910826	188
Air conditioning From 60910827	190
Umbrella	192
Interlock	194



Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Frame (Page 4)	
20				Drum (Page 26)	
30				Engine (Page 42)	
50				Hydraulic system (Page 58)	
60				Electrical equipment (Page 106)	
70				Drivers platform (Page 124)	
80				Decals (Page 144)	
90				Standard equipment (Page 148)	
91				Optional equipment (Page 152)	

Frame


Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Frames and scrapers Up to 60910551 (Page 6)	
12				Frames and scrapers From 60910552 (Page 8)	
20				Steering hitch (Page 10)	
30				Structure (Page 12)	
40			2	Sprinkler system, front/rear (Page 16)	
50	923690	1	2	Water pump Up to 60910687 (Page 20)	C
	903987	1	2	Water pump From 60910688 Up to 60910818 (Page 22)	C
60			2	Sprinkler mat (Page 24)	
1) Replaced as spare part by PN 904808.					

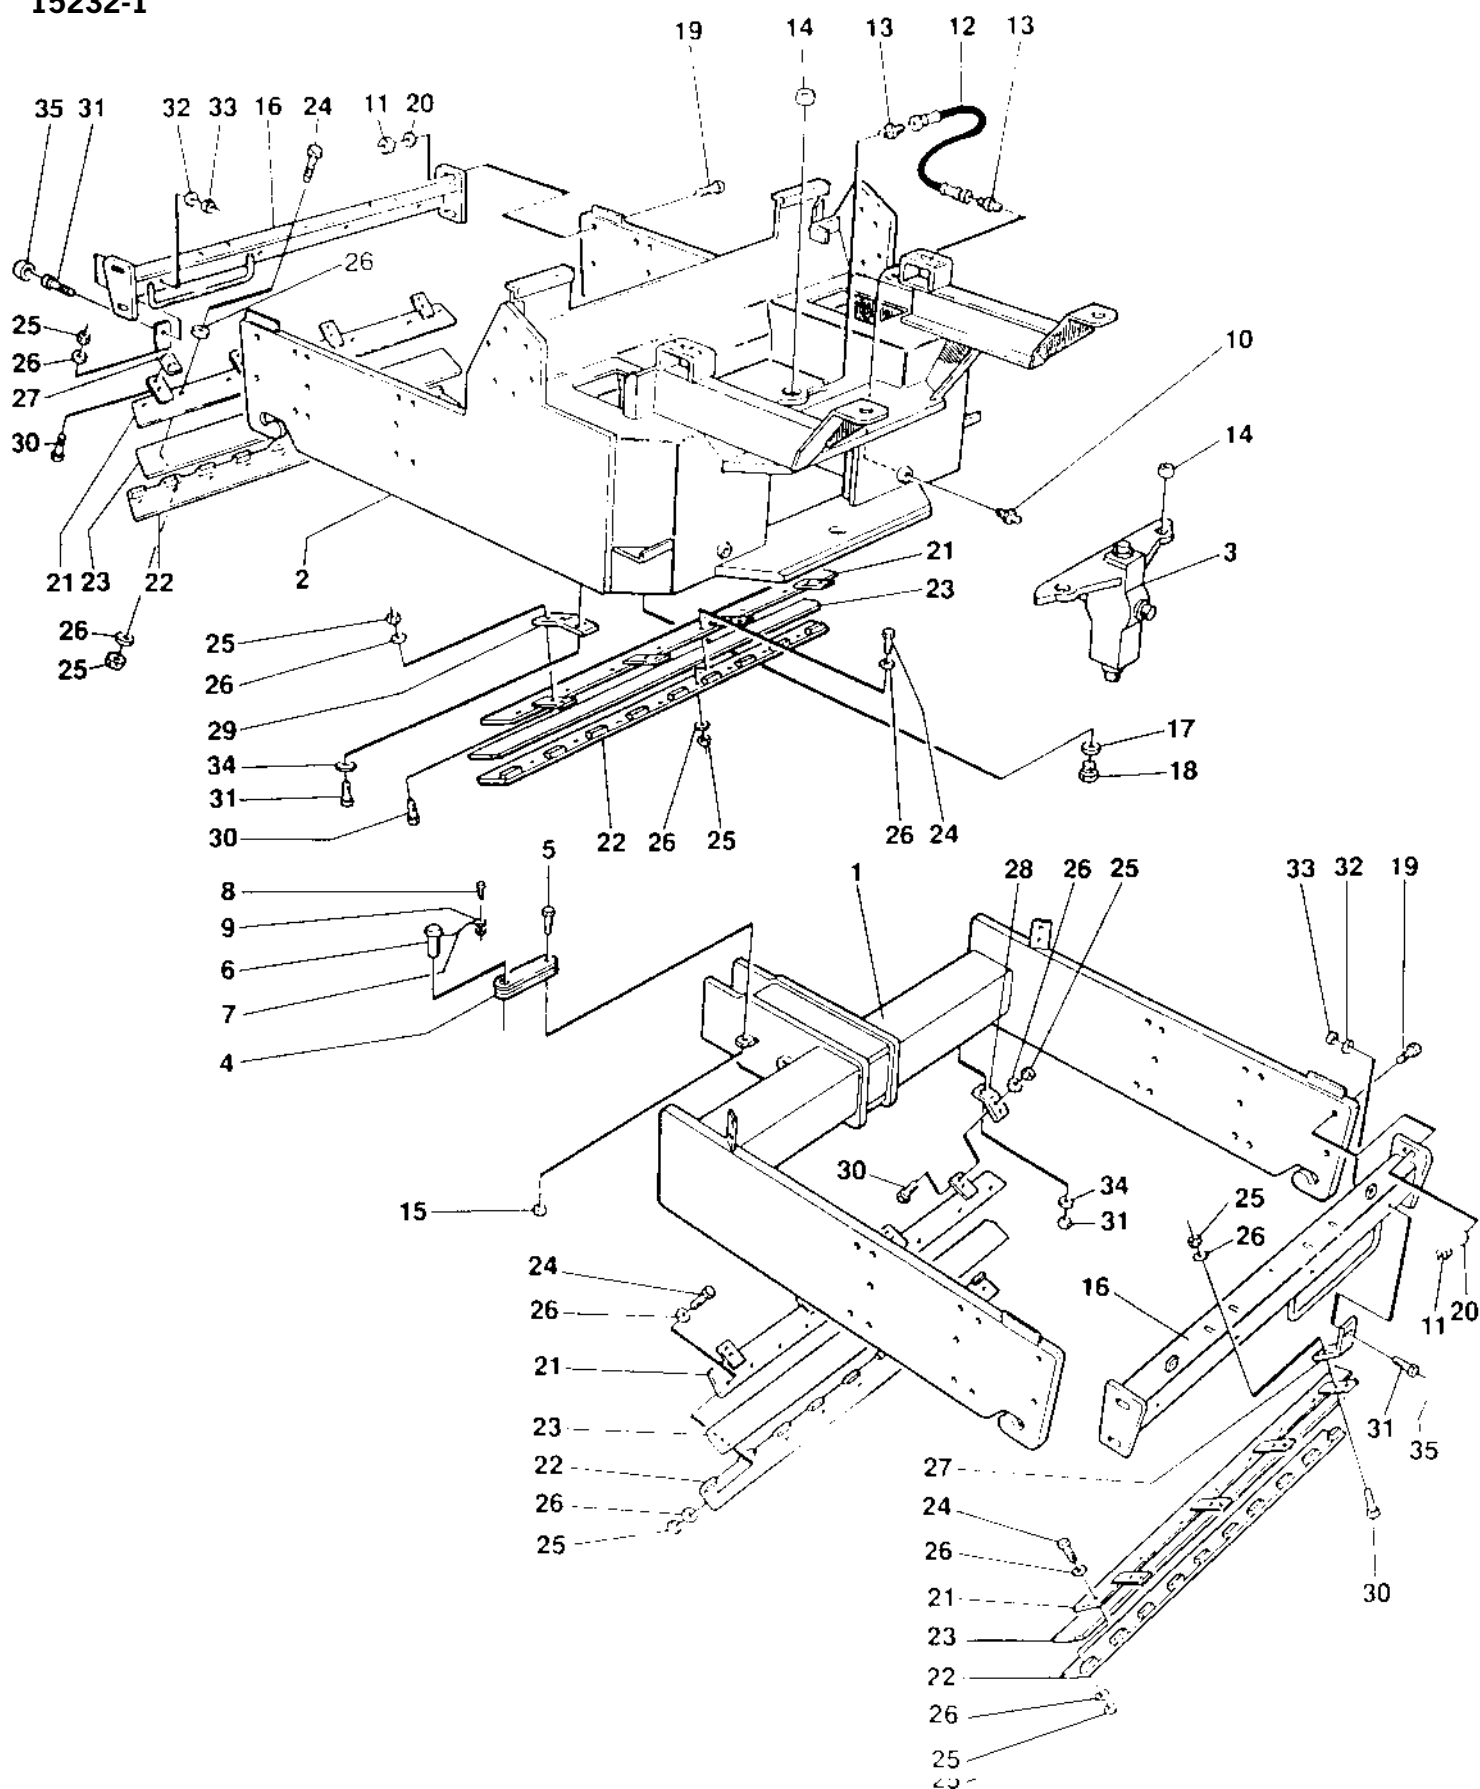

Frames and scrapers

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355629	A	1	Drum frame	
2	355630	B	1	Drum frame	
3			1	Steering hitch (Page 10)	
4	815215		1	Safety lock	
5	500207		1	Screw	
6	635019		1	Lock pin	
7	343775		1	Wire	
8	502031		1	Screw	
9	904637		1	Washer	
10	310022		2	Lubricant nipple	D
11	901145		8	Nut	
12	482257		2	Hydraulic hose	
13	234358		4	Adapter	
14	813316		4	Ball bushing	D
15	586022		1	Lock nut	
16	358083		2	Cross beam	
17	162017		2	Seal ring M30	D
18	232210		2	Plug	
19	927117		8	Screw	
20	928466		8	Washer	
21	850347		4	Scraper bracket	
22	850348		4	Bracket	
23	850357		4	Scraper blade	B
24	500049		44	Screw	
25	586019		76	Lock nut	
26	600009		120	Washer	
27	358009		8	Scraper bracket	
28	851040		4	Scraper bracket	
29	850342		4	Scraper bracket	
30	500195		32	Screw	
31	500070		16	Screw	
32	600011		8	Washer	
33	586021		8	Nut	
34	615046		8	Conical spring washer	
35	499042		4	Plug	

A) Front
B) Rear

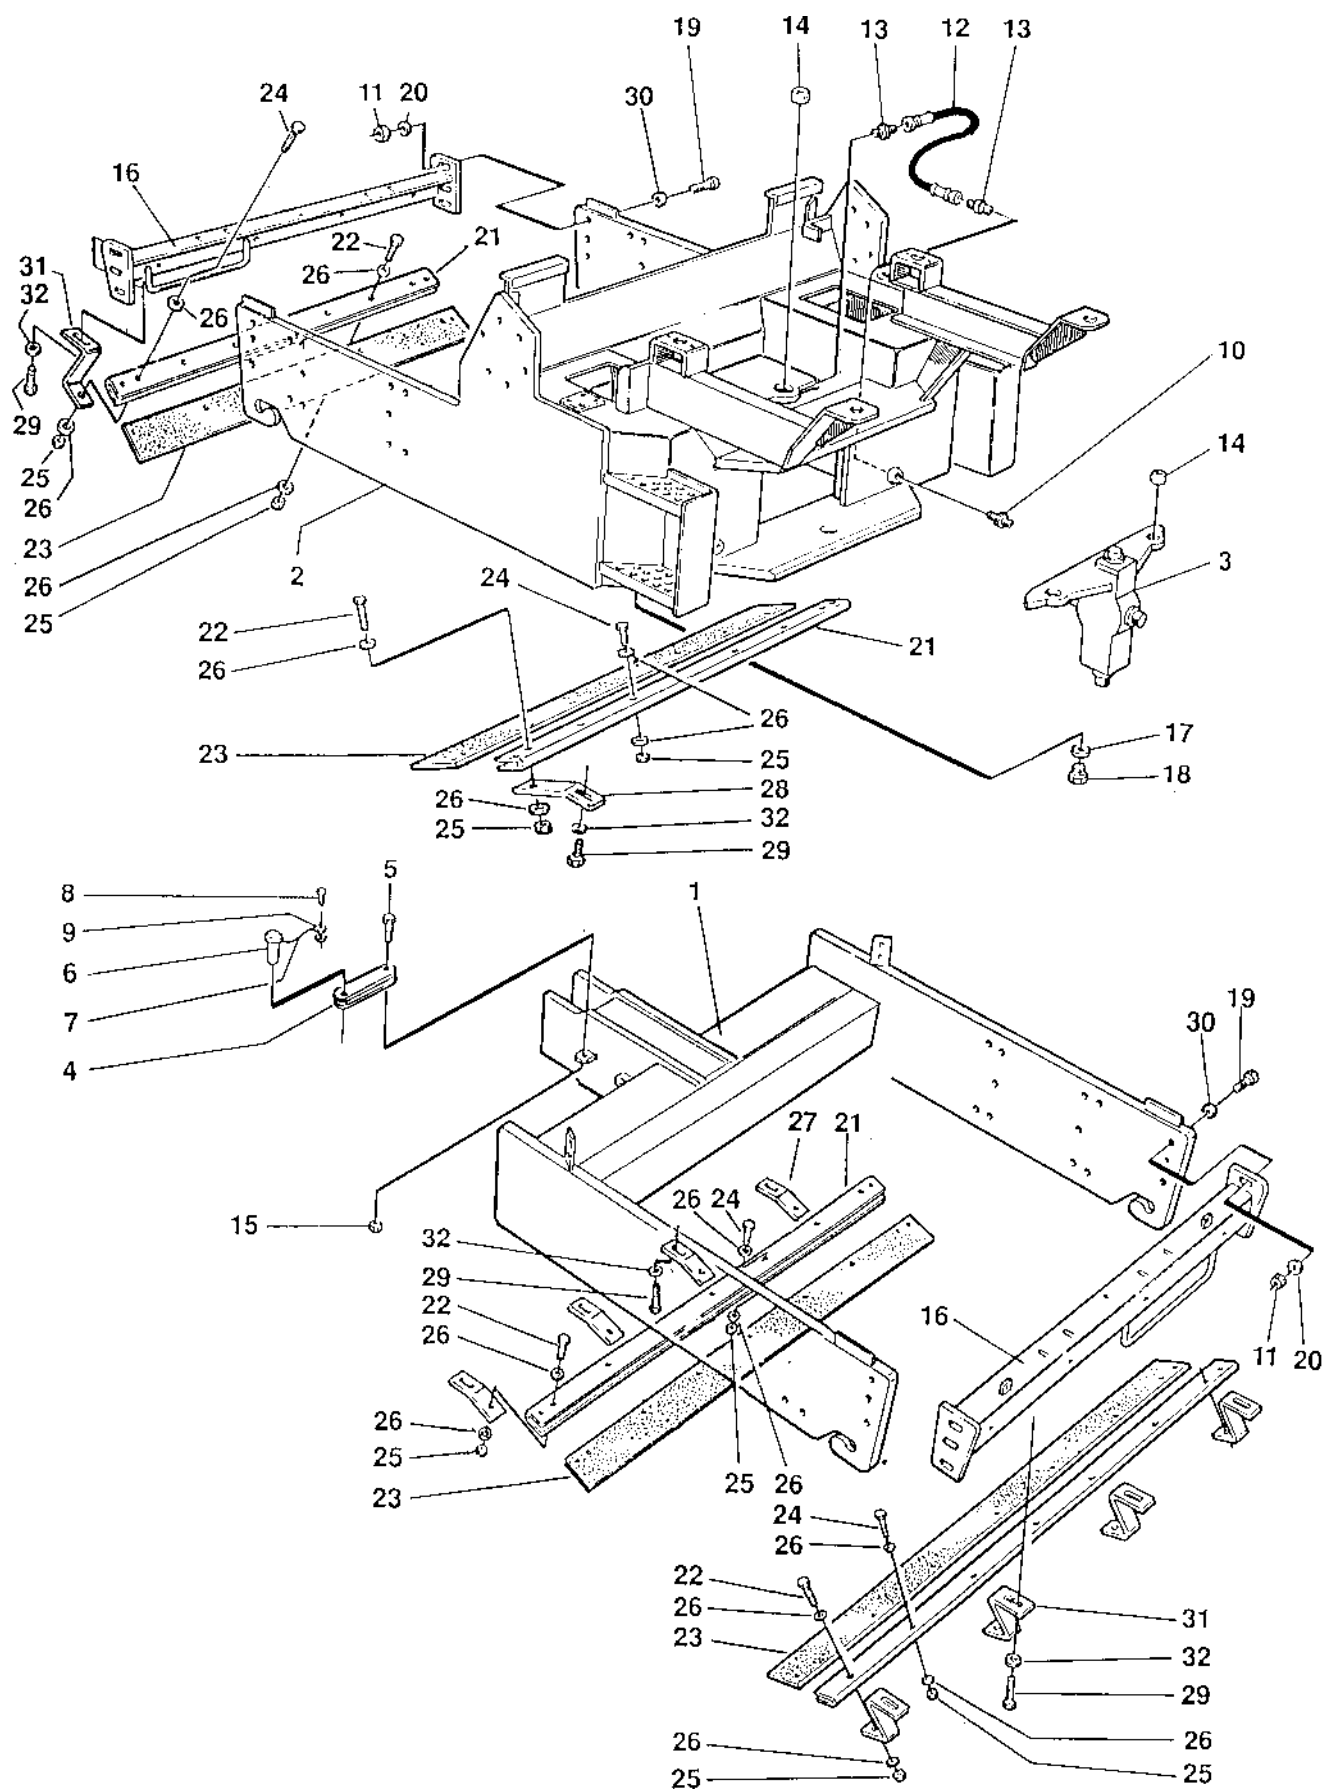


Frames and scrapers

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355629	A	1	Drum frame Up to 60910583	
	358407	A	1	Drum frame From 60910584 Up to 60910585	
	358927	A	1	Drum frame From 60910586 Up to 60910617	
	358939	A	1	Drum frame From 60910618 Up to 60910731	
	374794	A	1	Drum frame From 60910732	
2	355630	B	1	Drum frame Up to 60910731	
	374807	B	1	Drum frame From 60910732	
3			1	Steering hitch (Page 10)	
4	815215		1	Safety lock	
5	500207		1	Screw	
6	635019		1	Lock pin	
7	343775		1	Wire	
8	502031		1	Screw	
9	904637		1	Washer	
10	310022		2	Lubricant nipple	D
11	901145		12	Nut	
12	482257		2	Hydraulic hose	
13	234358		4	Adapter	
14	813316		4	Ball bushing	D
15	586022		1	Lock nut	
16	358083		2	Cross beam	
17	162017		2	Seal ring M30	D
18	232210		2	Plug	
19	927117		12	Screw	
20	903290		12	Washer	
21	358034		4	Scraper bracket	
22	500111		16	Screw	
23	358033		4	Scraper blade	B
24	500194		16	Screw	
25	586019		32	Lock nut	
26	904231		32	Washer	
27	357947		4	Scraper bracket	
28	357948		4	Scraper bracket	
29	500070		16	Screw	
30	904233		12	Washer	
31	357946		8	Scraper bracket	
32	615046		16	Conical spring washer	


A) Front

B) Rear

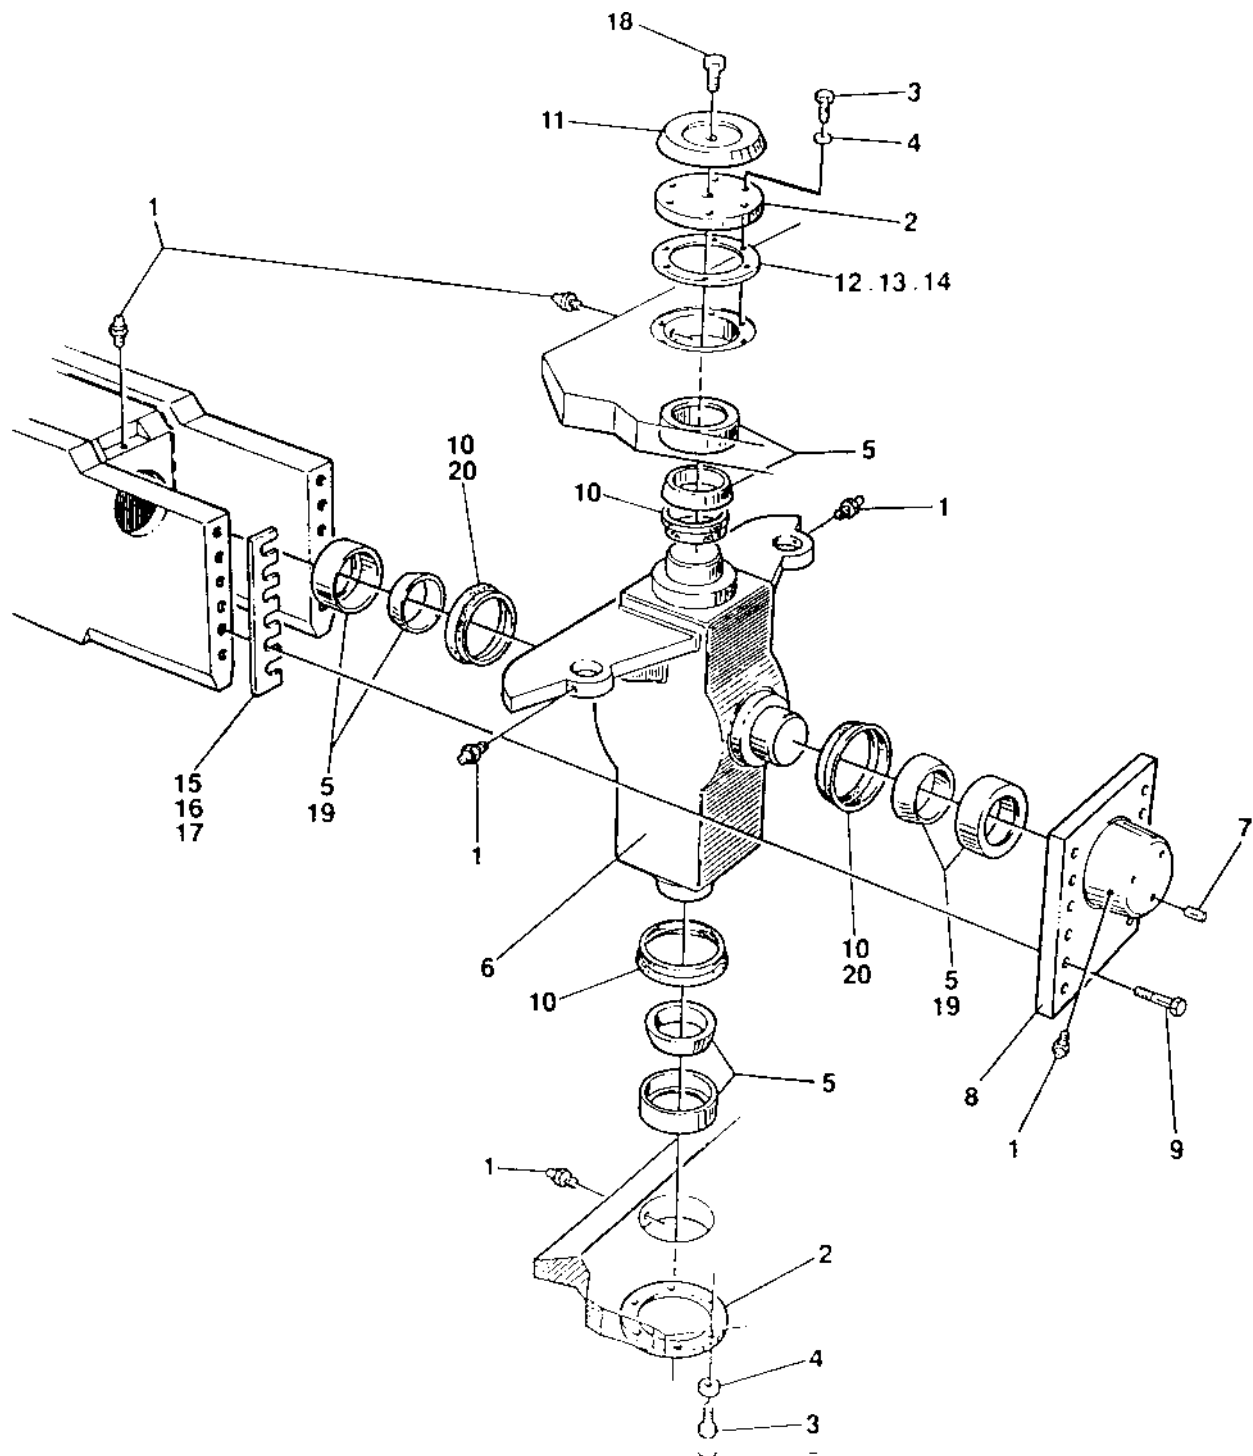

Steering hitch


Ref. No.	Part No.	Rem.	Qty Description	Code
1	310008	6	Grease nipple	D
2	337042	2	Bearing cover	
3	500037	12	Screw	
4	904231	12	Washer	
5	100040	4	Axial ball bearing Up to 60910583	D
	100040	2	Axial ball bearing From 60910584	D
6	343597	1	Hitch link Up to 60910583	D
	348901	1	Steering link From 60910584	D
7	910995	3	Stop screw	
8	345853	1	Bearing cover Up to 60910583	
	348496	1	Bearing cover From 60910584	
9	500287	12	Screw Up to 60910583	
	904479	10	Screw From 60910584	
10	167032	4	V-ring Up to 60910583	D
	167032	2	V-ring From 60910584	D
11	343159	1	Cover	
12	337045	N	Shim T = 1,0 mm	D
13	345874	N	Shim T = 0,35 mm	D
14	345875	N	Shim T = 0,10 mm	D
15	345871	N	Shim T = 1,0 mm Up to 60910583	D
	337221	N	Shim T=1,0 mm From 60910584	D
16	345872	1	Shim T = 0,35 mm Up to 60910583	D
	33722101	1	Shim T=0,35 mm From 60910584	
17	345873	1	Shim T = 0,10 mm Up to 60910583	D
	33722102	1	Shim T=0,10 mm From 60910584	
18	500018	1	Screw	
19	924620	2	Axial ball bearing From 60910584	D
20	167033	2	Ring From 60910584	D

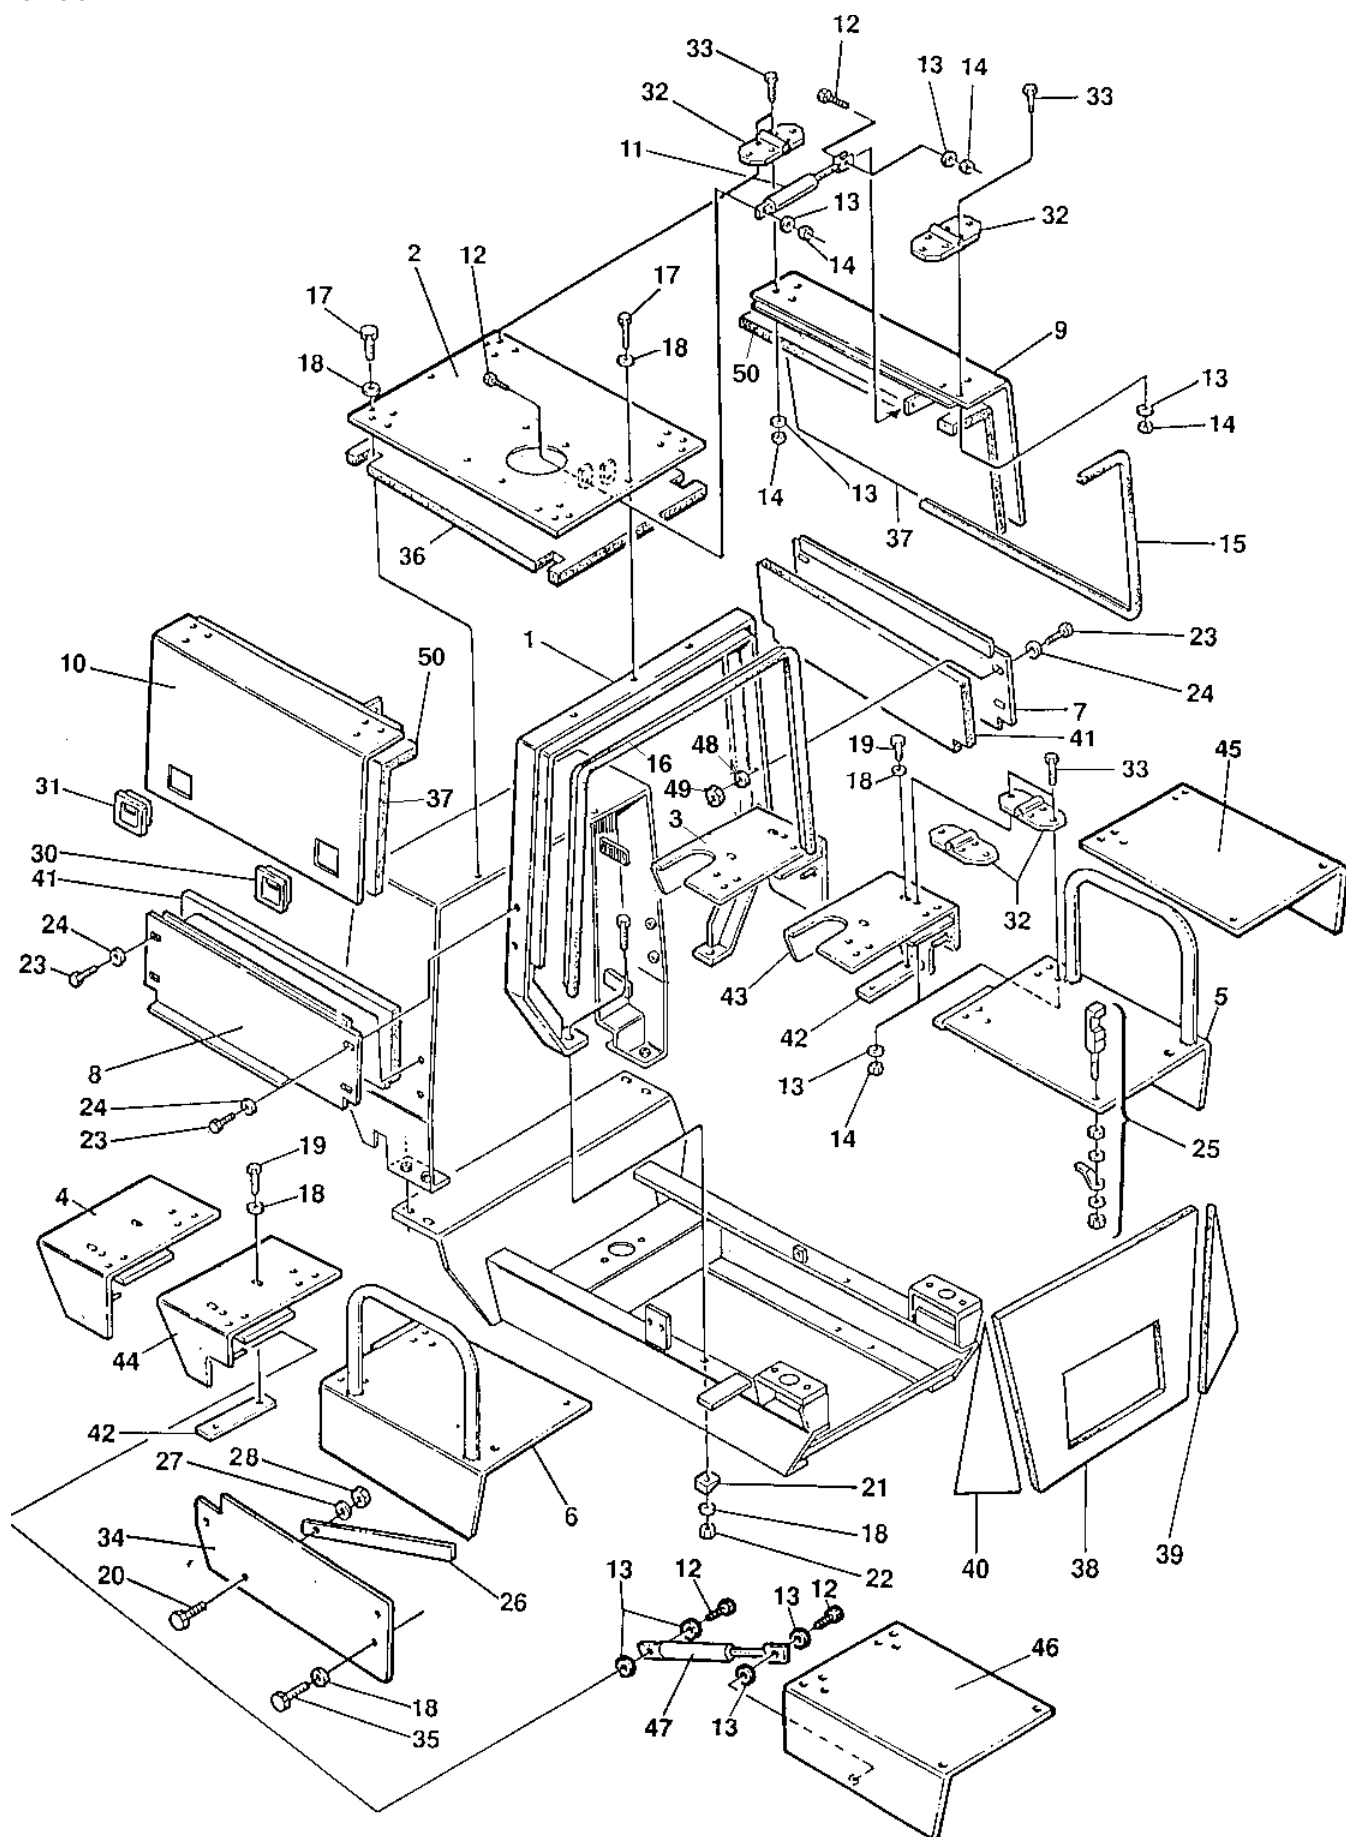

Structure


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	851302		1	Hood frame	
2	851774	A	1	Hood	
3			1	Not valid for this model	
4			1	Not valid for this model	
5	851785		1	Cover, left Up to 60910617	
6	851787		1	Cover, right Up to 60910617	
7	851291		1	Cover, left	
8	851289		1	Cover, right	
9	851776	B	1	Hood	
10	851779	C	1	Hood	
11	900579		2	Gas spring	D
12	500047		8	Screw	
13	904229		60	Washer	
14	586003		52	Lock nut	
15	902379	D	2XL	Edge trim	
16	900198	E	1XL	Edge trim	
17	500048		8	Screw M10x20	
18	615044		20	Conical spring washer	D
19	500028		4	Screw	
20	500030		2	Screw	
21	605001		2	Washer	
22	570006		2	Nut	
23	500053		8	Screw	
	500091		8	Screw From 60910776 Up to 60910782	
	500053		8	Screw From 60910783 Up to 60910785	
	500091		8	Screw From 60910786	
24	615043		8	Conical spring washer	
	904557		8	Washer From 60910776 Up to 60910782	
	615043		8	Conical spring washer From 60910783 Up to 60910785	
	904557		8	Washer From 60910786	
25	900541		2	Lock Up to 60910586	D
	900541		4	Lock From 60910587	D
26	851789		2	Holder	
27	904230		2	Washer	
28	586018		4	Lock nut	
29	500161		2	Screw	
30	900561	F	2	Latch	
31	900562	G	2	Latch	
32	345381		8	Hinge	
33	500021		48	Screw	
34	851287		2	Plate	
35	500029		8	Screw	
36	851684	A	1	Absorbent	
37	851685	H	2	Absorbent	
38	851686	I	1	Absorbent	
39	851687	J	1	Absorbent	
40	851688	K	1	Absorbent	
41	851689	L	2	Absorbent	
42	357397		N	Shim T=2 mm	
43	851781		1	Cover, left	
44	851783		1	Cover, right	

- A) Roof
- B) Left
- C) Right
- D) L=2.1 m
- E) L=2.5 m
- F) Front, with lock
- G) Rear
- H) LH & RH upper
- I) Front middle
- J) Front left
- K) Front right
- L) LH & RH lower

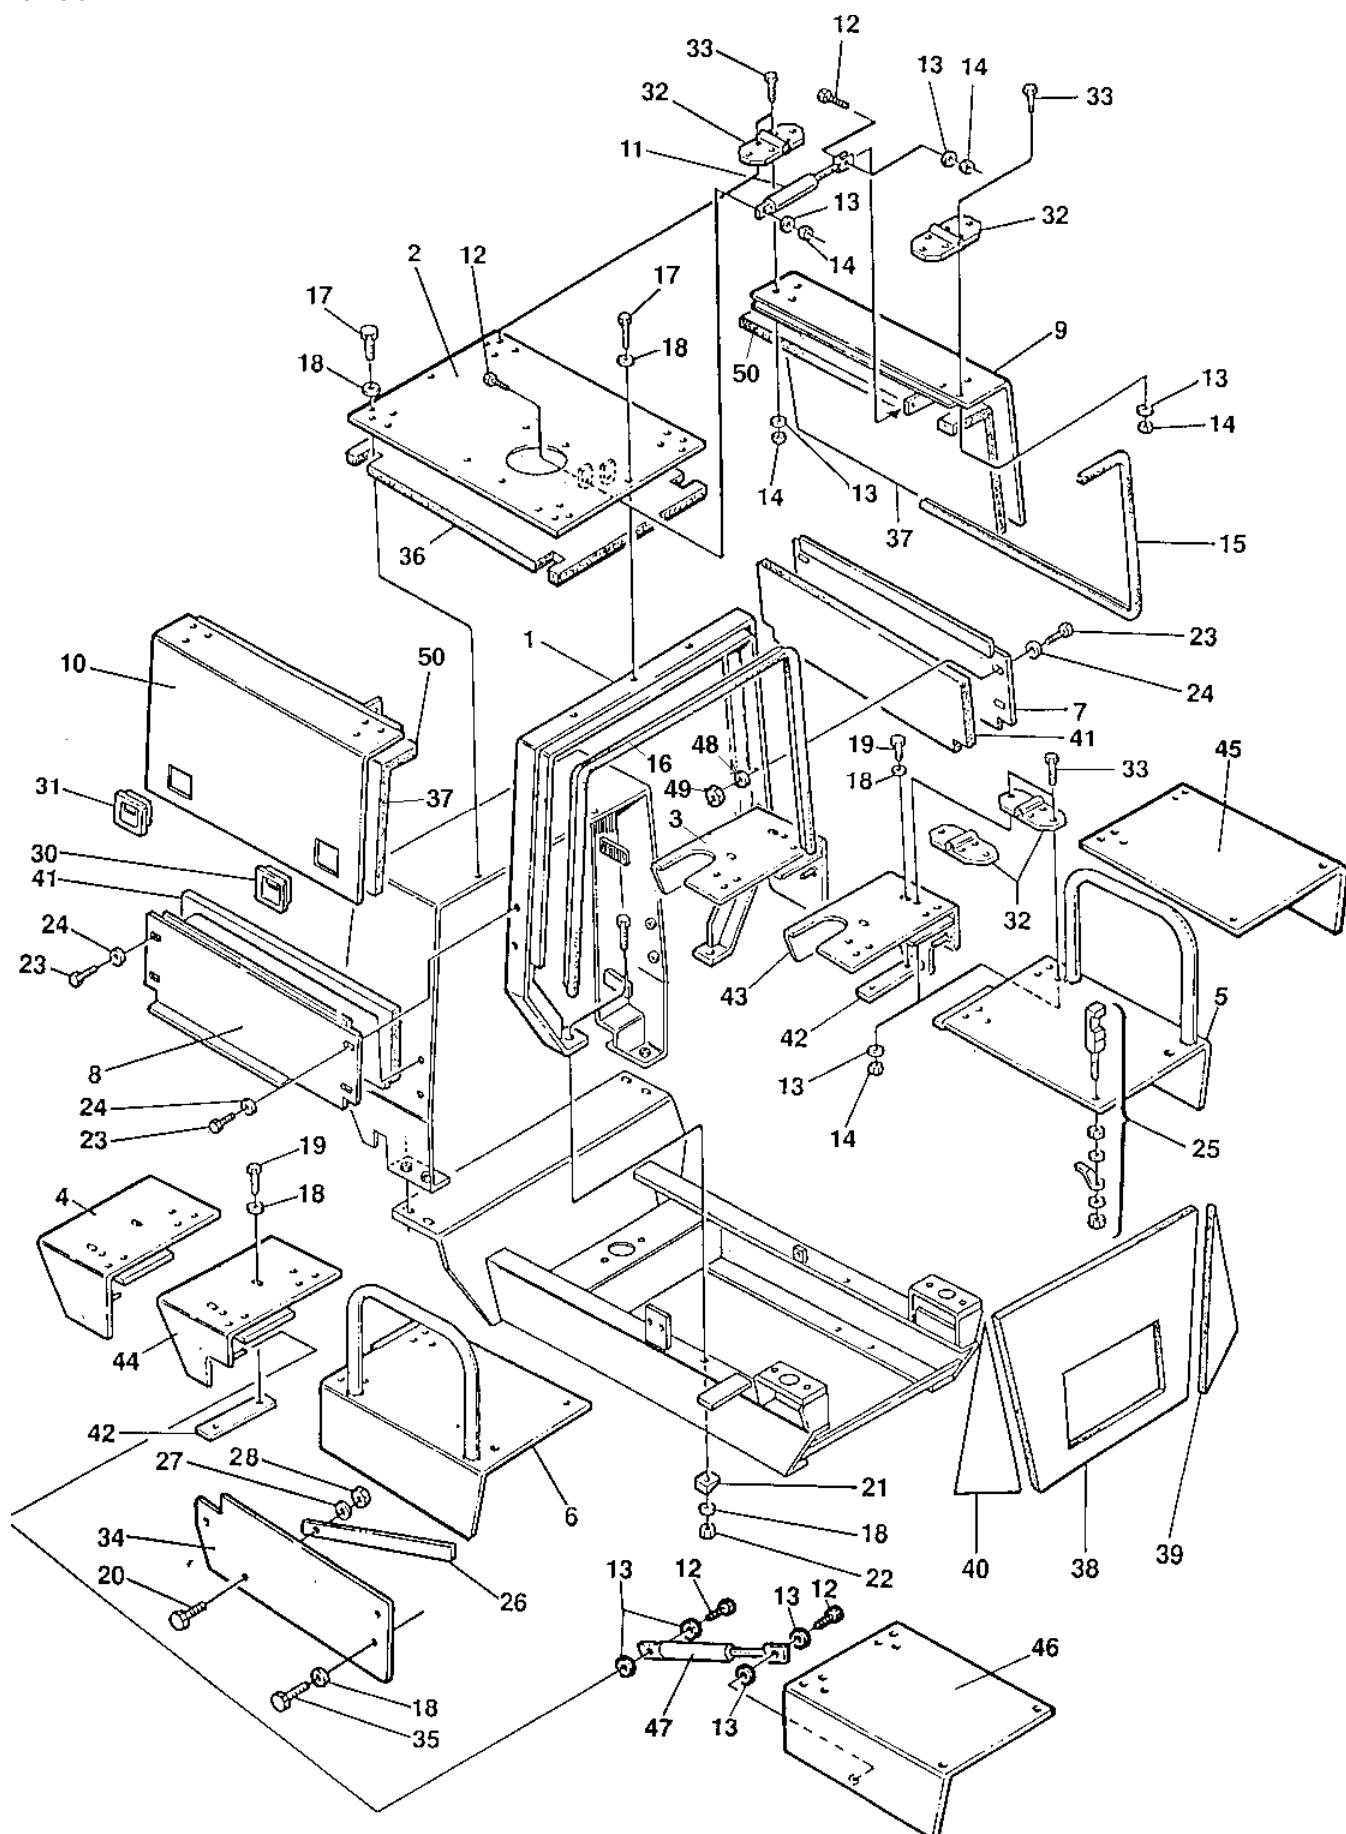

Structure

Ref. No.	Part No.	Rem.	Qty	Description	Code
45	359426		1	Cover, left From 60910618	
46	359427		1	Cover, right From 60910618	
47	902256		2	Gas spring From 60910618	D
48	359434		8	Spacer sleeve From 60910776 Up to 60910782	
	359434		8	Spacer sleeve From 60910786	
49	586018		8	Lock nut From 60910776 Up to 60910782	
	586018		8	Lock nut From 60910786	
50	382026	M	2	Absorbent	
M) LH & RH top					

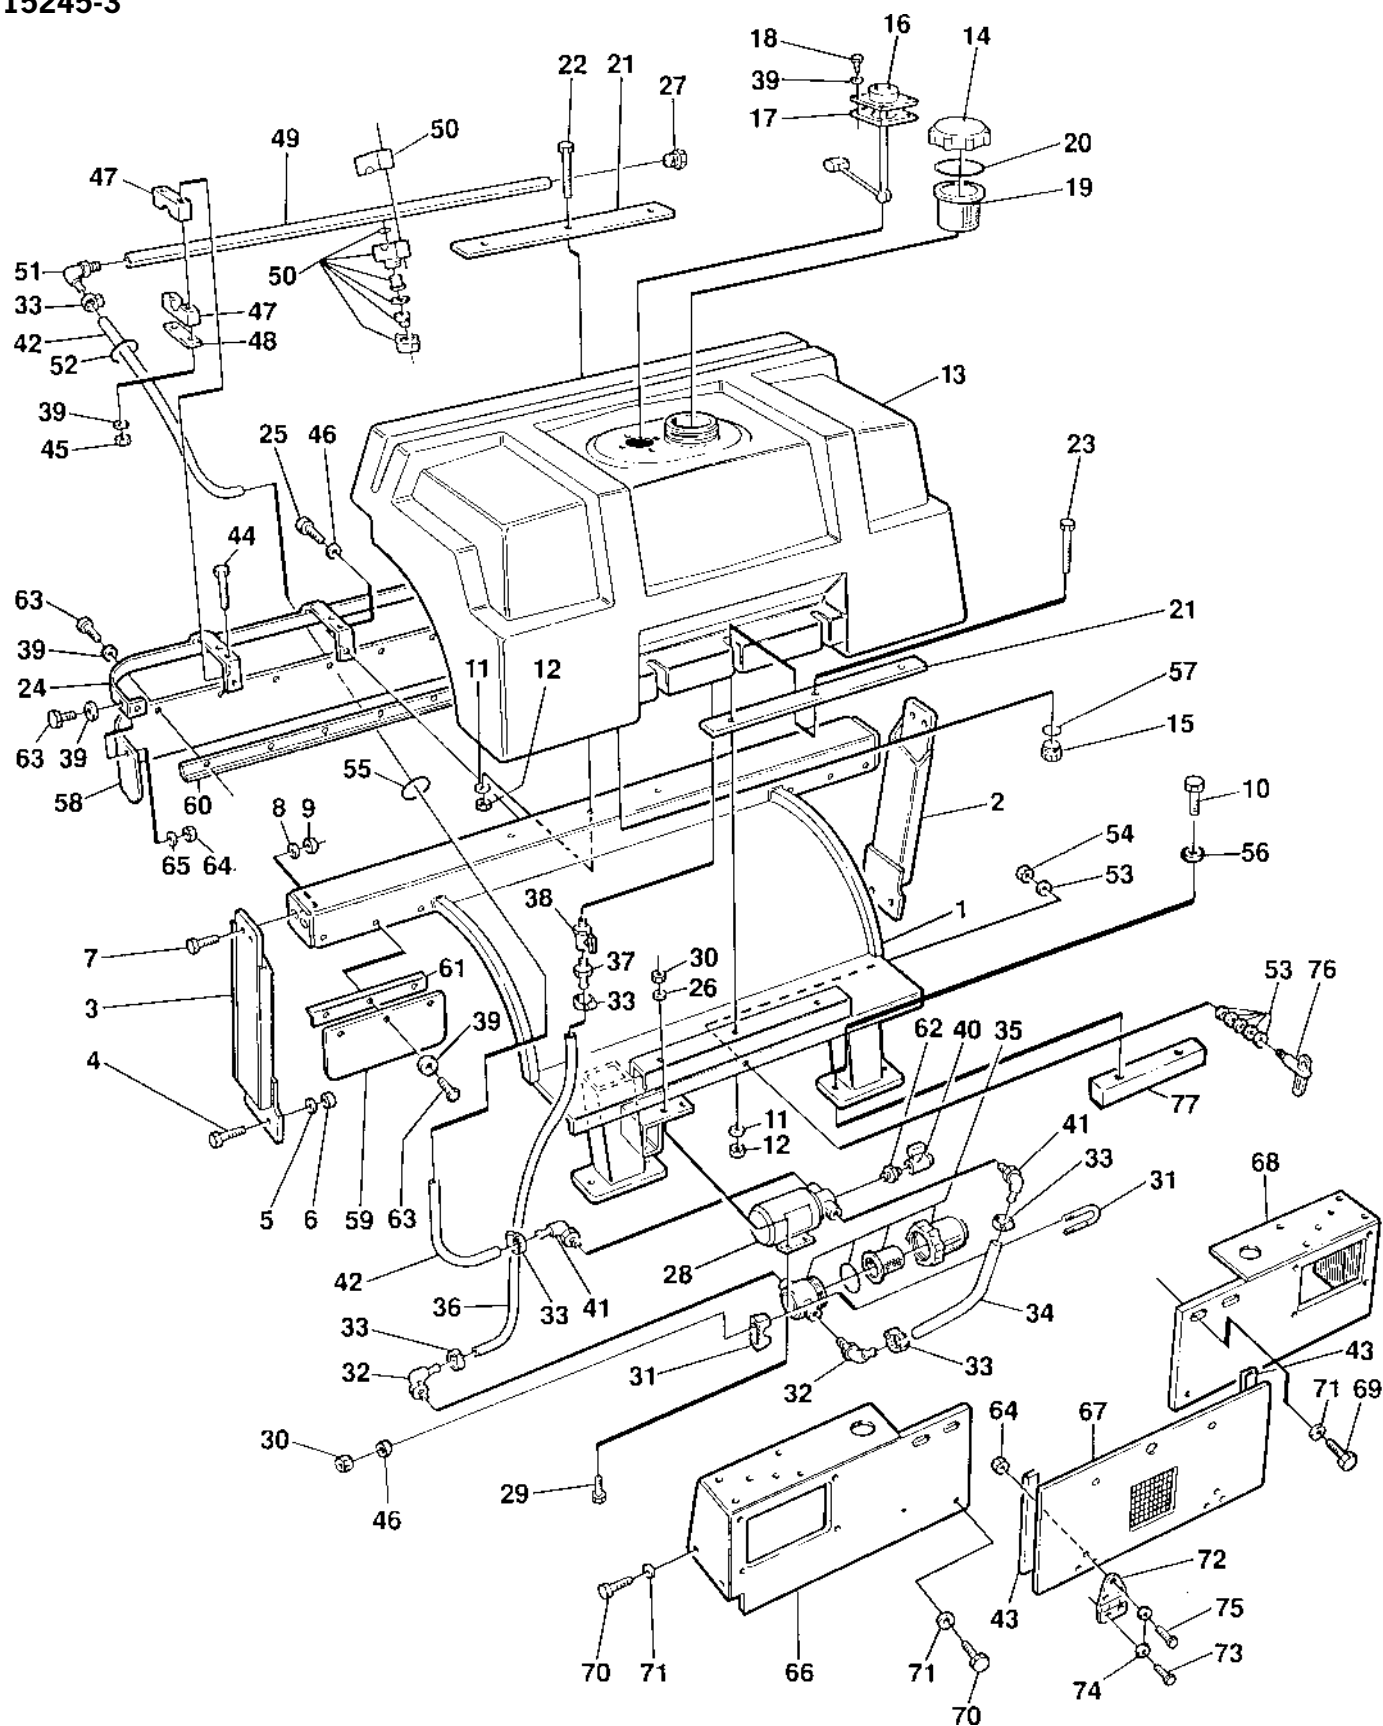

Sprinkler system, front/rear

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	356050		1	Tank support	
2	356044	1	1	Tank support Up to 60910731	
	373570	1	1	Tank support From 60910732	
3	356043	2	1	Tank support Up to 60910731	
	373571	2	1	Tank support From 60910732	
4	500208		4	Screw	
5	904233		4	Washer	
6	586022		4	Lock nut	
7	500093		4	Screw	
8	904232		4	Washer	
9	586021		4	Nut	
10	500076		4	Screw	
11	904231		6	Washer	
12	586019		6	Lock nut	
13	356065		1	Sprinkling tank	
14	333228		1	.Cap	
15	928012		1	.Plug	
16	801998		1	Level gauge	D
17	921427		1	.Gasket	
18	533038		4	Screw	
19	842664		1	Strainer	
	358846		1	Strainer	D
20	348483	6	1	Seal ring	D
21	851449		2	Clamp bar	
22	925227		3	Screw	
23	500073		3	Screw	
24	356603		1	Bracket	
25	500021		6	Screw	
26	904229		4	Washer	
27	923683		1	Plug	
28	923690	5	1	Water pump Up to 60910687 (Page 20)	C
	903987	5	1	Water pump From 60910688 Up to 60910818 (Page 22)	C
	904808		1	Water pump From 60910819	C
29	500053		4	Screw	
30	586003		8	Lock nut	
31	923984		2	Clamp	
32	924996		2	Hose connection	D
33	313002		6	Hose clamp	
34	244054	A	1XL	Hose reinforced	
35	920775		1	Strainer	
	921423		1	.Gasket	D
	901841		1	.Strainer	D
36	244054	B	1XL	Hose reinforced	
37	924544		1	Hose connection	
38	924986		1	Valve	
39	904228		31	Washer	
40	901309		1	Valve	
41	923734		2	Hose connection	
42	244054	C	1XL	Hose reinforced	
43	926911	D	2XL	Rubber strip	
44	500079		8	Screw M6x50	

1) Front left, Rear right

2) Front right, Rear left

5) Replaced as spare part by PN 904808.


6) Only used together with strainer PN 842664.

A) L=0.16 m

B) L=0.41 m

C) L=1.75 m

D) L=0.34 m

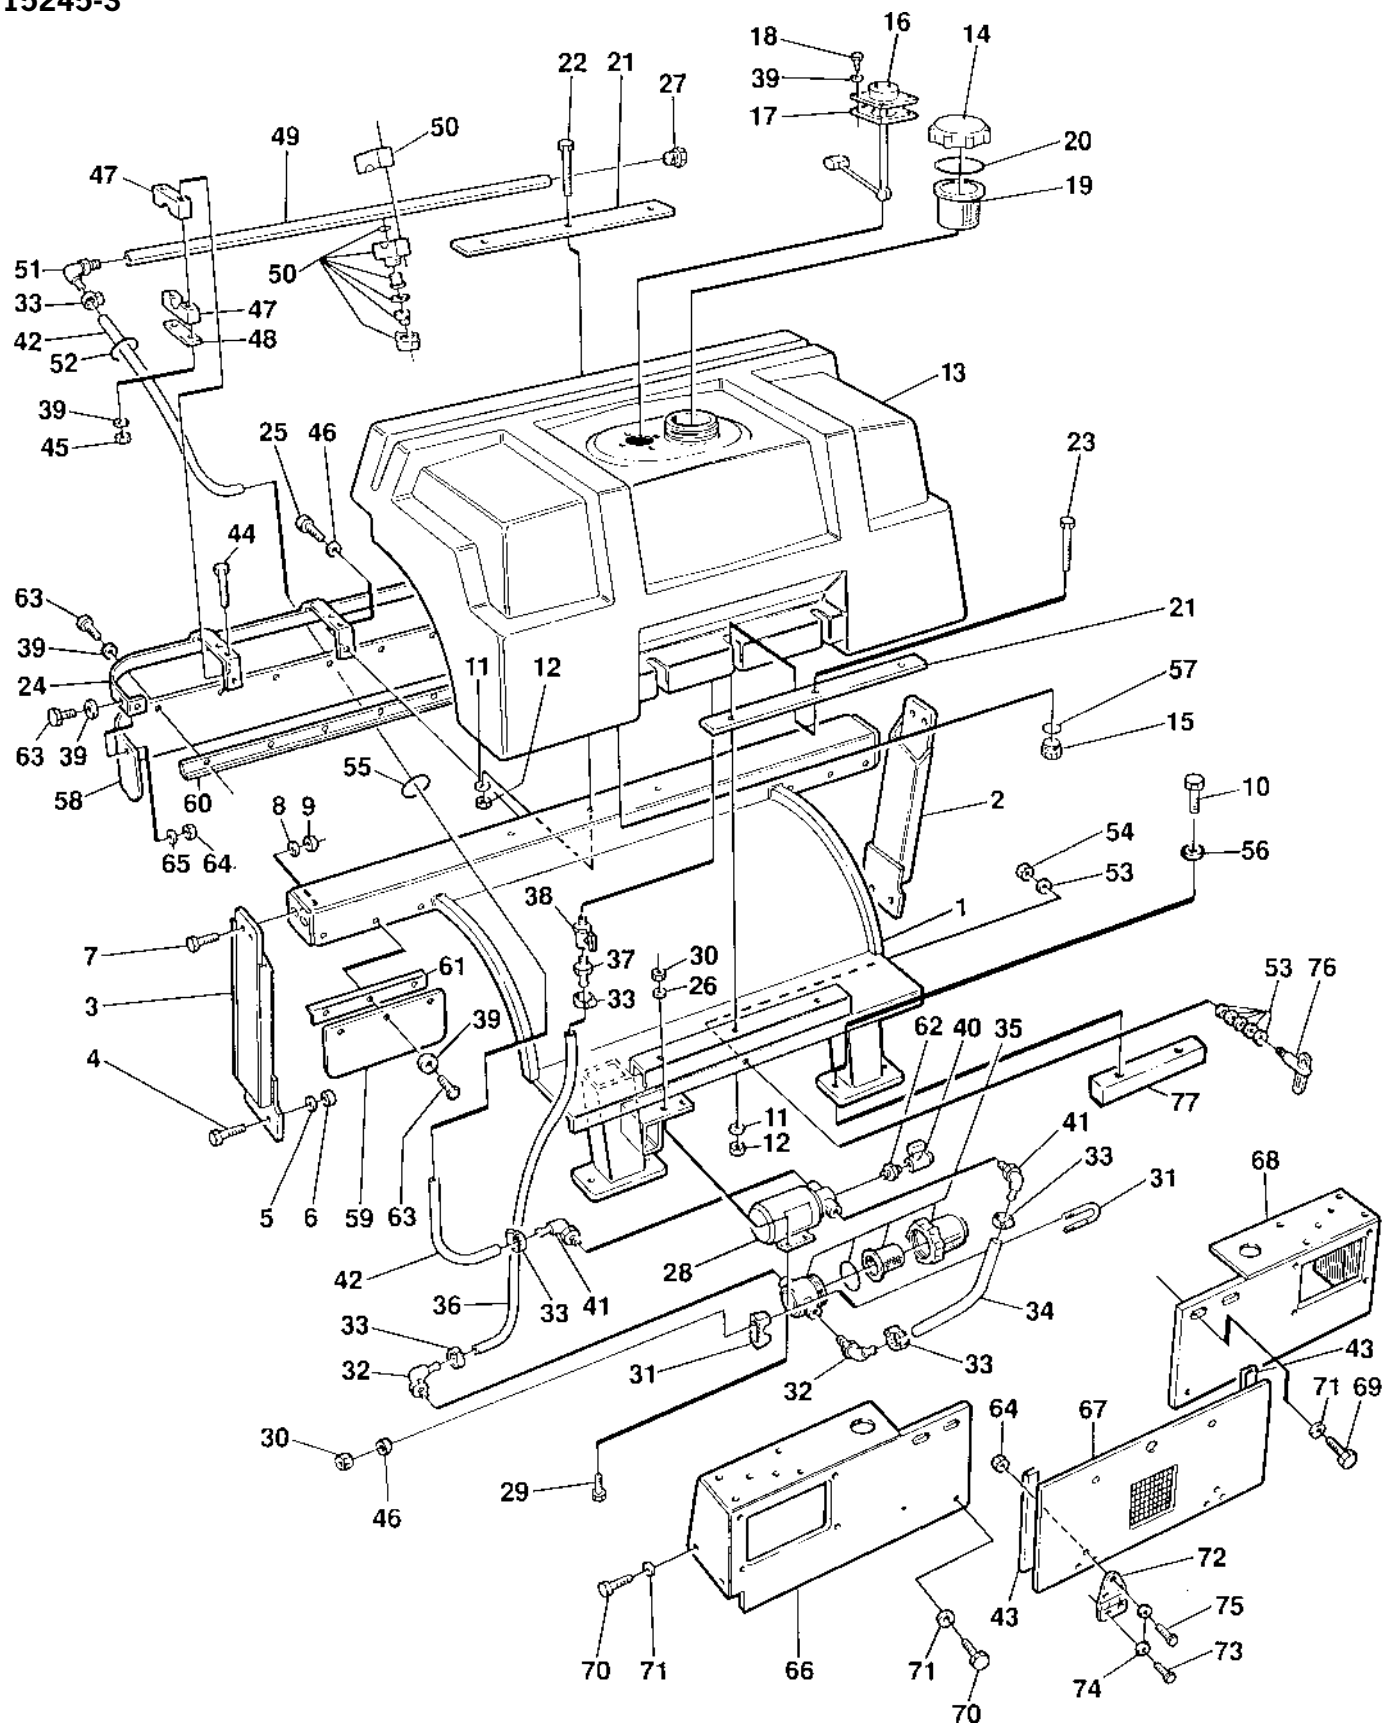

Sprinkler system, front/rear

Ref. No.	Part No.	Rem.	Qty	Description	Code
45	570004		8	Nut	
46	904229		8	Washer	
47	923876	E	4	Clamp	
48	923859		4	Cover plate	
49	356037		1	Sprinkler pipe	
50	928781		9	Sprinkler, cpl	D
	902874	3	9	Sprinkler, cpl	D
	902911	4	2	Sprinkler, cpl	
	903253	3,4	2	Sprinkler, cpl	D
	923680		1	.Nozzle clamp	D
	923962		1	..O-ring	D
	499444		1	.Strainer	D
	923682		1	.Gasket	
	923679		1	.Nozzle body	D
	902910	4	1	.Nozzle body	
	923681		1	.Coupling, black	D
	902868	3	1	.Coupling, red	
	902869	3	1	.Strainer with valve	
	903010	3	1	.Gasket	D
51	923684		1	Hose connection	
52	909085	H	1XL	Grommet	
53	904231		6	Washer	
54	570007		1	Nut Up to 60910664	
	570007		2	Nut From 60910665	
55	909085	I	1XL	Grommet	
56	904232		4	Washer	
57	160021		1	O-ring	
58	356606		1	Rubber part	D
59	356607		2	Rubber part	D
60	356608		1	Bracket	
61	356611		2	Bracket	
62	901837		1	Connector	
63	500075		17	Screw	
64	586002		12	Lock nut	
65	601003		2	Washer	
66	355988		1	Protection cover	
67	357733		1	Cover Up to 60910664	
	370158		1	Cover From 60910665	
68	355989		1	Protection cover	
69	500028		4	Screw	
70	500048		6	Screw M10x20	
71	904230		10	Washer	
72	928041		2	Hinge	D
73	535036		4	Screw	
74	904228		10	Washer	
75	535014		6	Screw	
76	475064		1	Lock Up to 60910664	
	475064		2	Lock From 60910665	
77	358087		2	Spacer block	


3) Sprinkler cpl with strainer with valve.

4) Drum edge sprinkler

E) 2 pcs


H) L=75 mm

I) L=65 mm

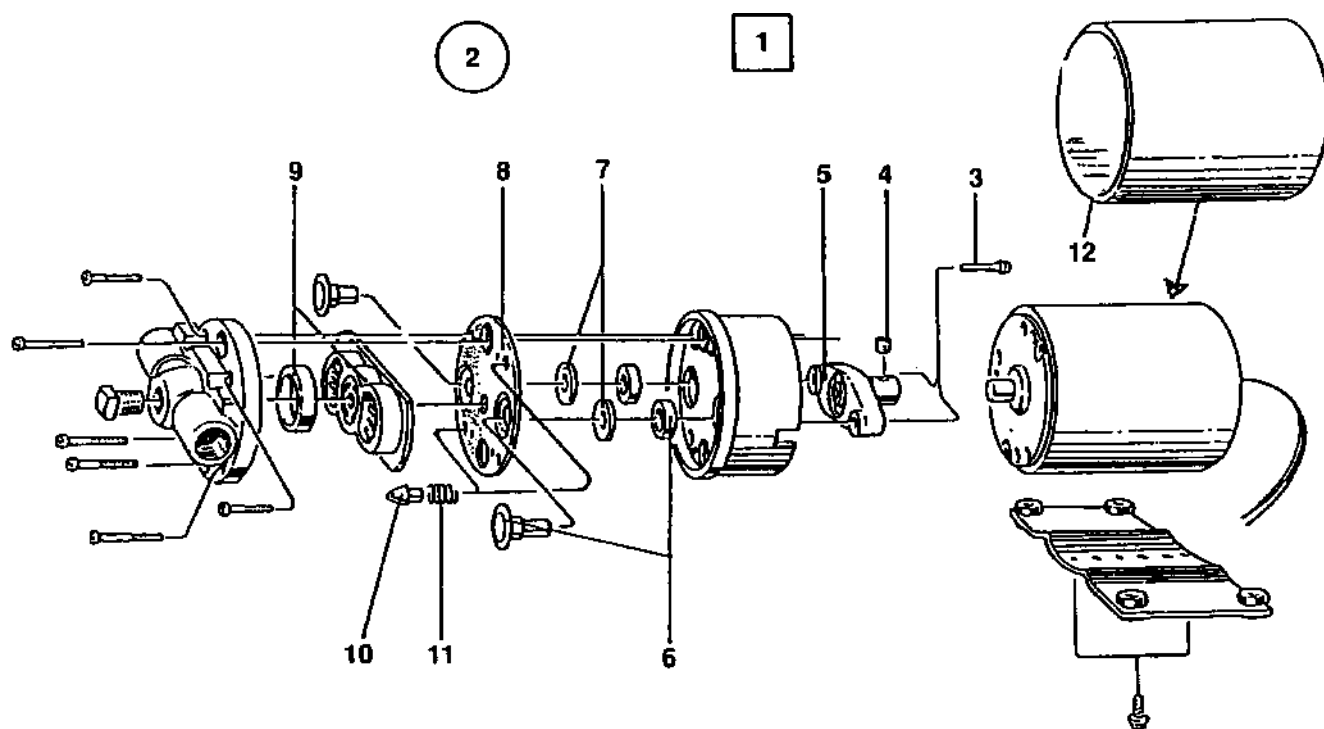


923690 Water pump

Ref. No.	Part No.	Rem.	Qty	Description	Code
2	902303		1	.Repair kit	D
3			1	..Screw, set	D
4			1	..Screw	D
5			1	..Rotor, cpl	D
6			1	..Piston set	D
7			2	..Wear washer	D
8			1	..Diaphragm	D
9			1	..Check valve	D
10			2	..Poppet	D
11			2	..Spring	D
12	929881		1	.Protection	

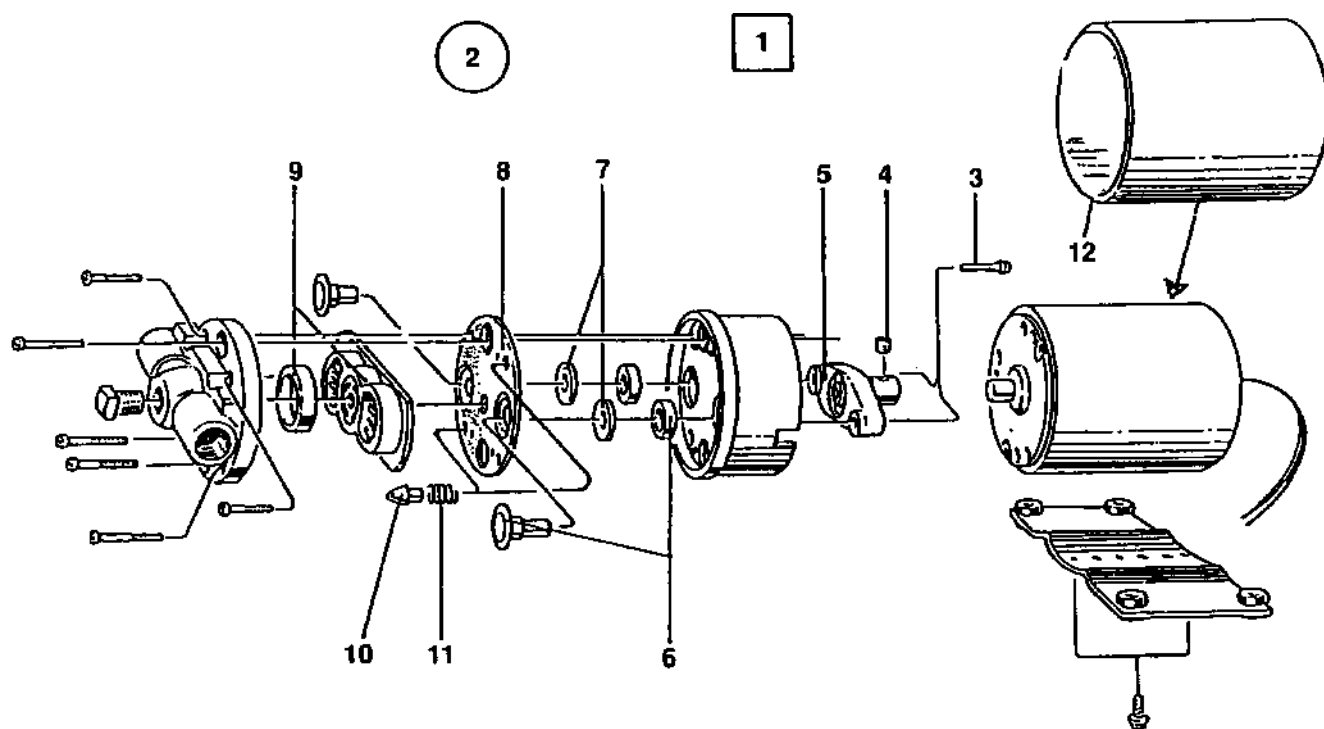

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		A	1	Sprinkling pump	
2	909533		1	..Repair kit	D
3			1	..Screw kit	D
4			1	..Screw	D
5		A	1	..Rotor	D
6			1	..Piston set	D
7			2	..Wear washer	D
8			1	..Diaphragm	D
9			1	..Check valve	D
10			1	..Poppet	D
11			1	..Spring	D
12				Not included on this model	D
A) CPL					

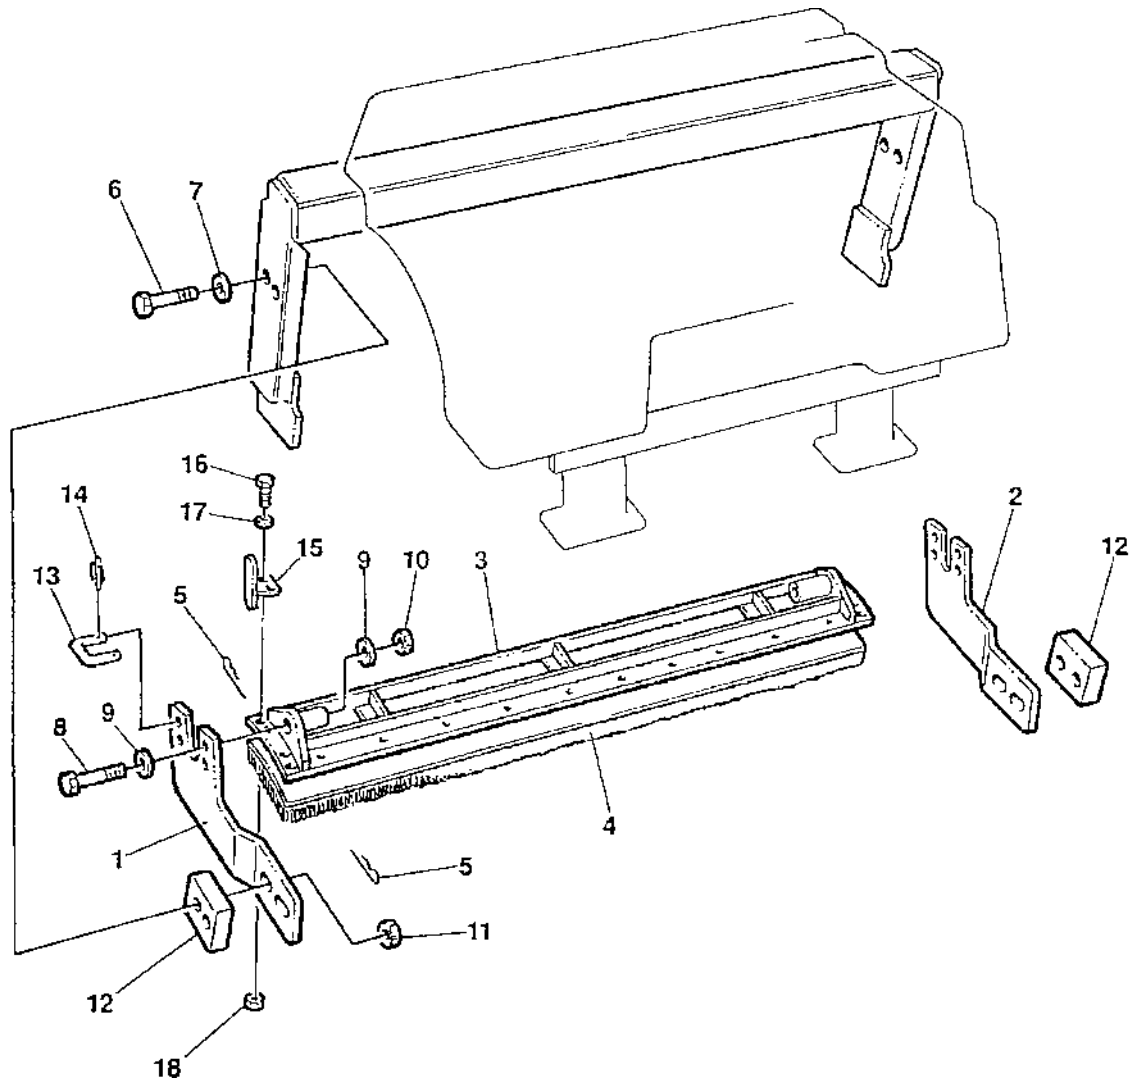

Sprinkler mat


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	358819		1	Bracket	
2	358820		1	Bracket	
3	358818		1	Mat holder	
4	903186		1	Roller mat	
5	358825		22	Pin	
6	500117		4	Screw	
7	904231		4	Washer	
8	500282		2	Screw	
9	600014		4	Washer	
10	586022		2	Lock nut	
11	570007		4	Nut	
12	358822		2	Spacer block	
13	358733		2	Bar	
14	903184		2	Lock pin	
15	358814		1	Spacer	
16	500021		2	Screw	
17	904229		2	Washer	
18	570005		2	Nut	

Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
10			2	Drum Up to 60910731 (Page 28)	
			2	Drum From 60910732 (Page 32)	
20	355618		2	Drum gear Up to 60910731 (Page 36)	C
	372987		2	Drum gear From 60910732 (Page 40)	C

Drum

15405-2

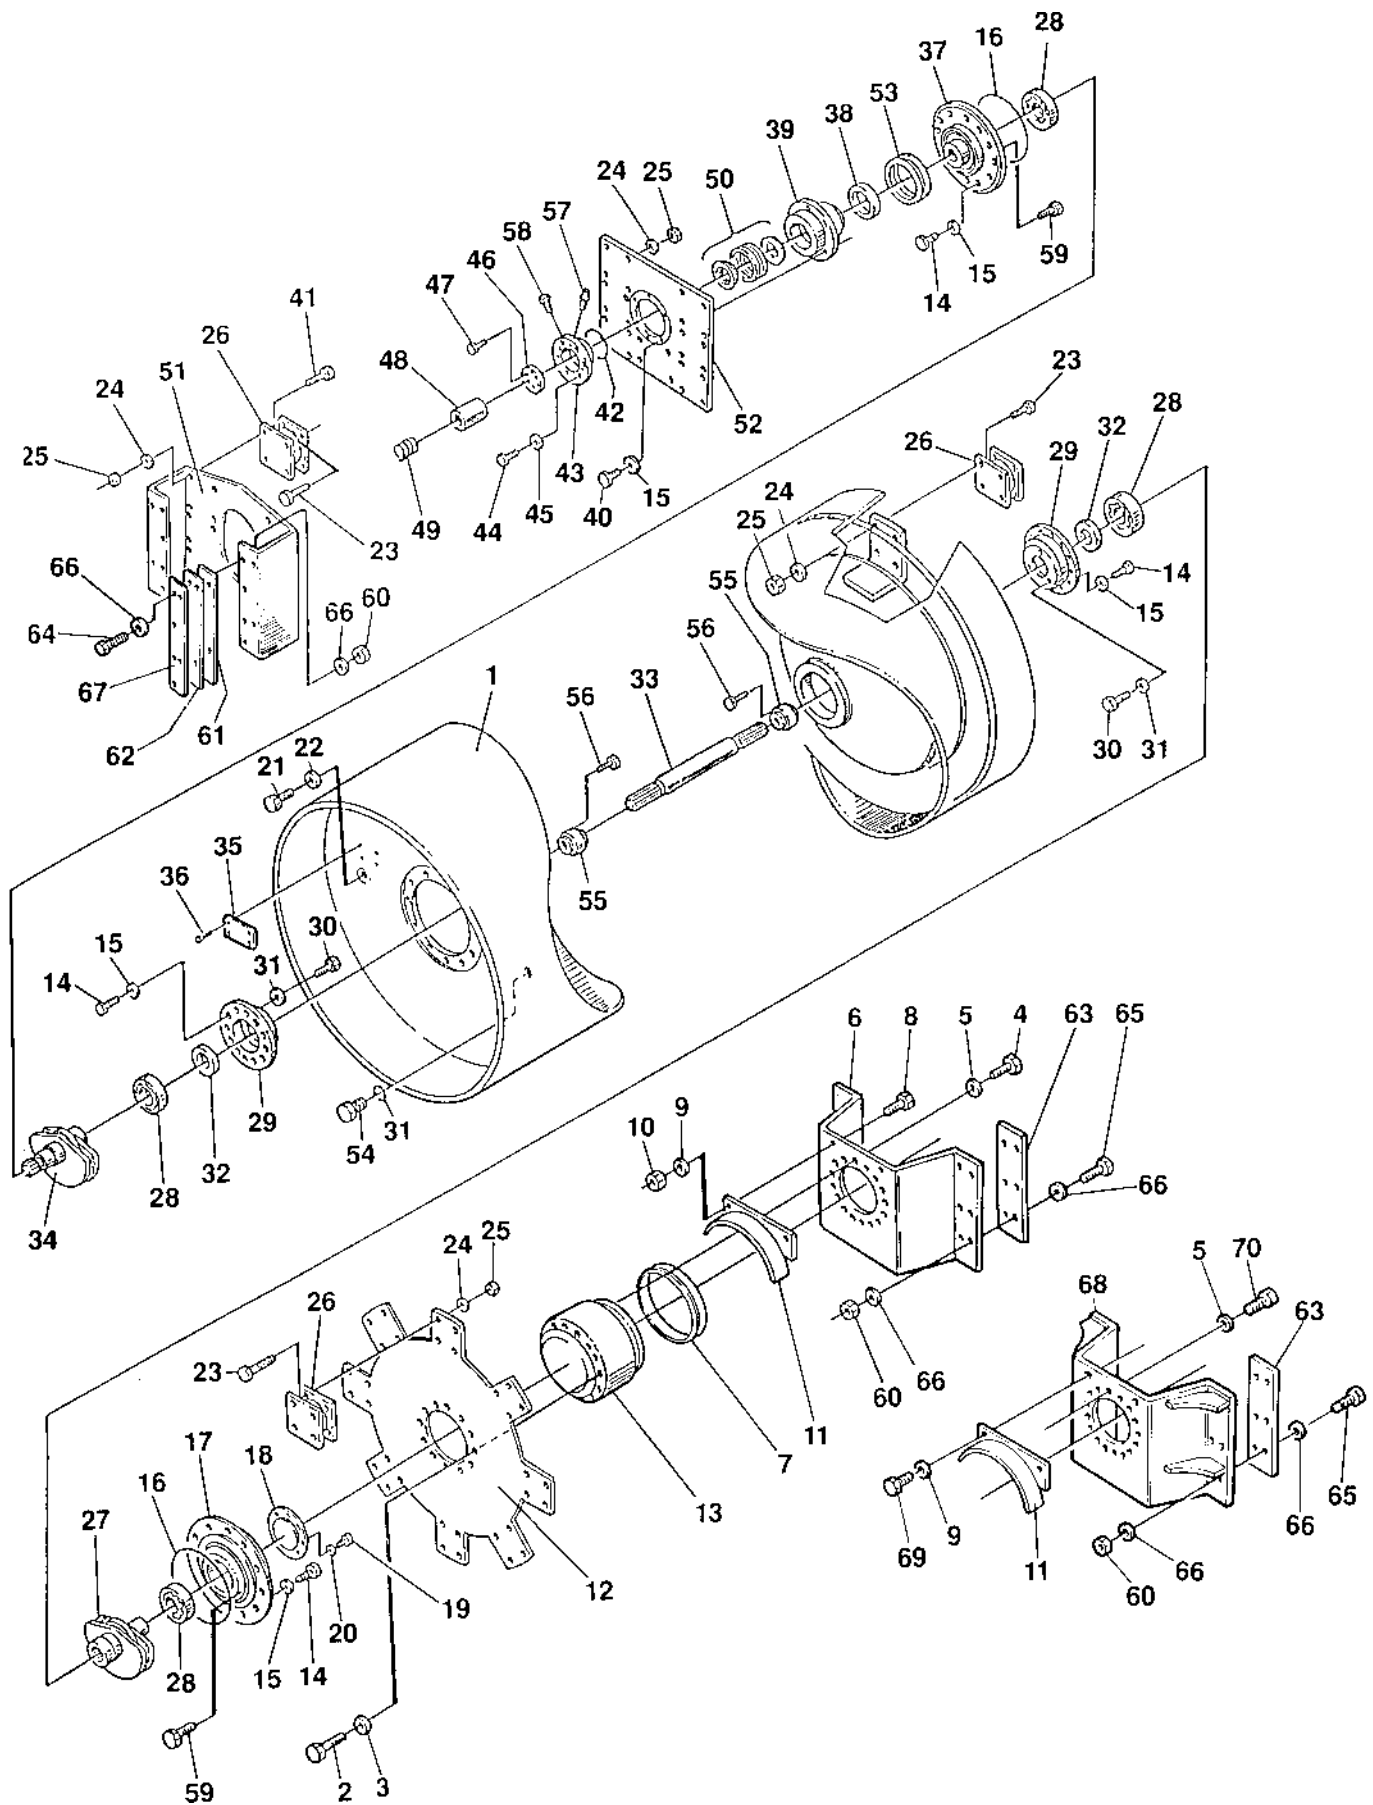


Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355964		1	Drum Up to 60910656	
	370790		1	Drum From 60910657	
2	901129		16	Screw Up to 60910656	
	903595	1	16	Screw Up to 60910656	
	903595		16	Screw From 60910657	
3	615047		16	Washer	
4	901130		16	Screw Up to 60910585	
5	904233		16	Washer	
6	355678		1	Bracket Up to 60910585	
7	901301		1	Seal ring	D
8	500047		2	Screw Up to 60910585	
9	904229		2	Washer	
10	586003		2	Lock nut	
11	356010		1	Protection cover	
12	355669		1	Drive plate Up to 60910656	
	370791		1	Drive plate From 60910657	
13	355618		1	Drum gear (Page 36)	C
14	500093		36	Screw	
15	615046		44	Conical spring washer	
16	927409		2	O-ring	D
17	343470		1	Bearing housing outer	D
18	335661		1	Bearing cover	
19	500028		6	Screw	
20	615044		6	Conical spring washer	D
21	343744		2	Magnetic plug M30	D
22	162017		2	Seal ring M30	D
23	500194		92	Screw	
24	904231		120	Washer	
25	586019		120	Lock nut	
26	450122		15	Shock absorber	B
27	357445		1	Eccentric shaft	
28	114036		4	Drum bearing	D
29	343475		2	Bearing housing inner	D
30	500035		6	Screw	
31	162027		8	Sealing M12	D
32	813697		2	Shaft seal	D
33	356106		1	Drive shaft	
34	357446		1	Eccentric shaft	
35	343801		1	Sign plate	
36	527002		4	Screw	
37	343458		1	Bearing housing outer	D
38	167023		1	Seal ring	D
39	343318		1	Bearing housing	D
40	500076		8	Screw	
41	500056		28	Screw	
42	160105		1	O-ring	D
43	343561		1	Motor adapter	
44	500046		4	Screw	
45	615045		4	Conical spring washer	
46	343462		1	Bearing cover	
47	508019		8	Screw	
48	370365		1	Splined sleeve	
49	349715		1	Spring	
50	116041		1	Taper roller bearing	D
51	358006		1	Bracket	
52	356146		1	Holder plate	
53	929447		1	V-ring	D
54	344196		2	Plug M12	D
55	349401		2	Splined sleeve	D
56	900633		16	Screw	
57	926736		1	Breather M14	B
58	232070		1	Plug	
59	900775		6	Plug	

1) For 15 mm drive plate, valid from drum SN 956216.


Drum

15405-2

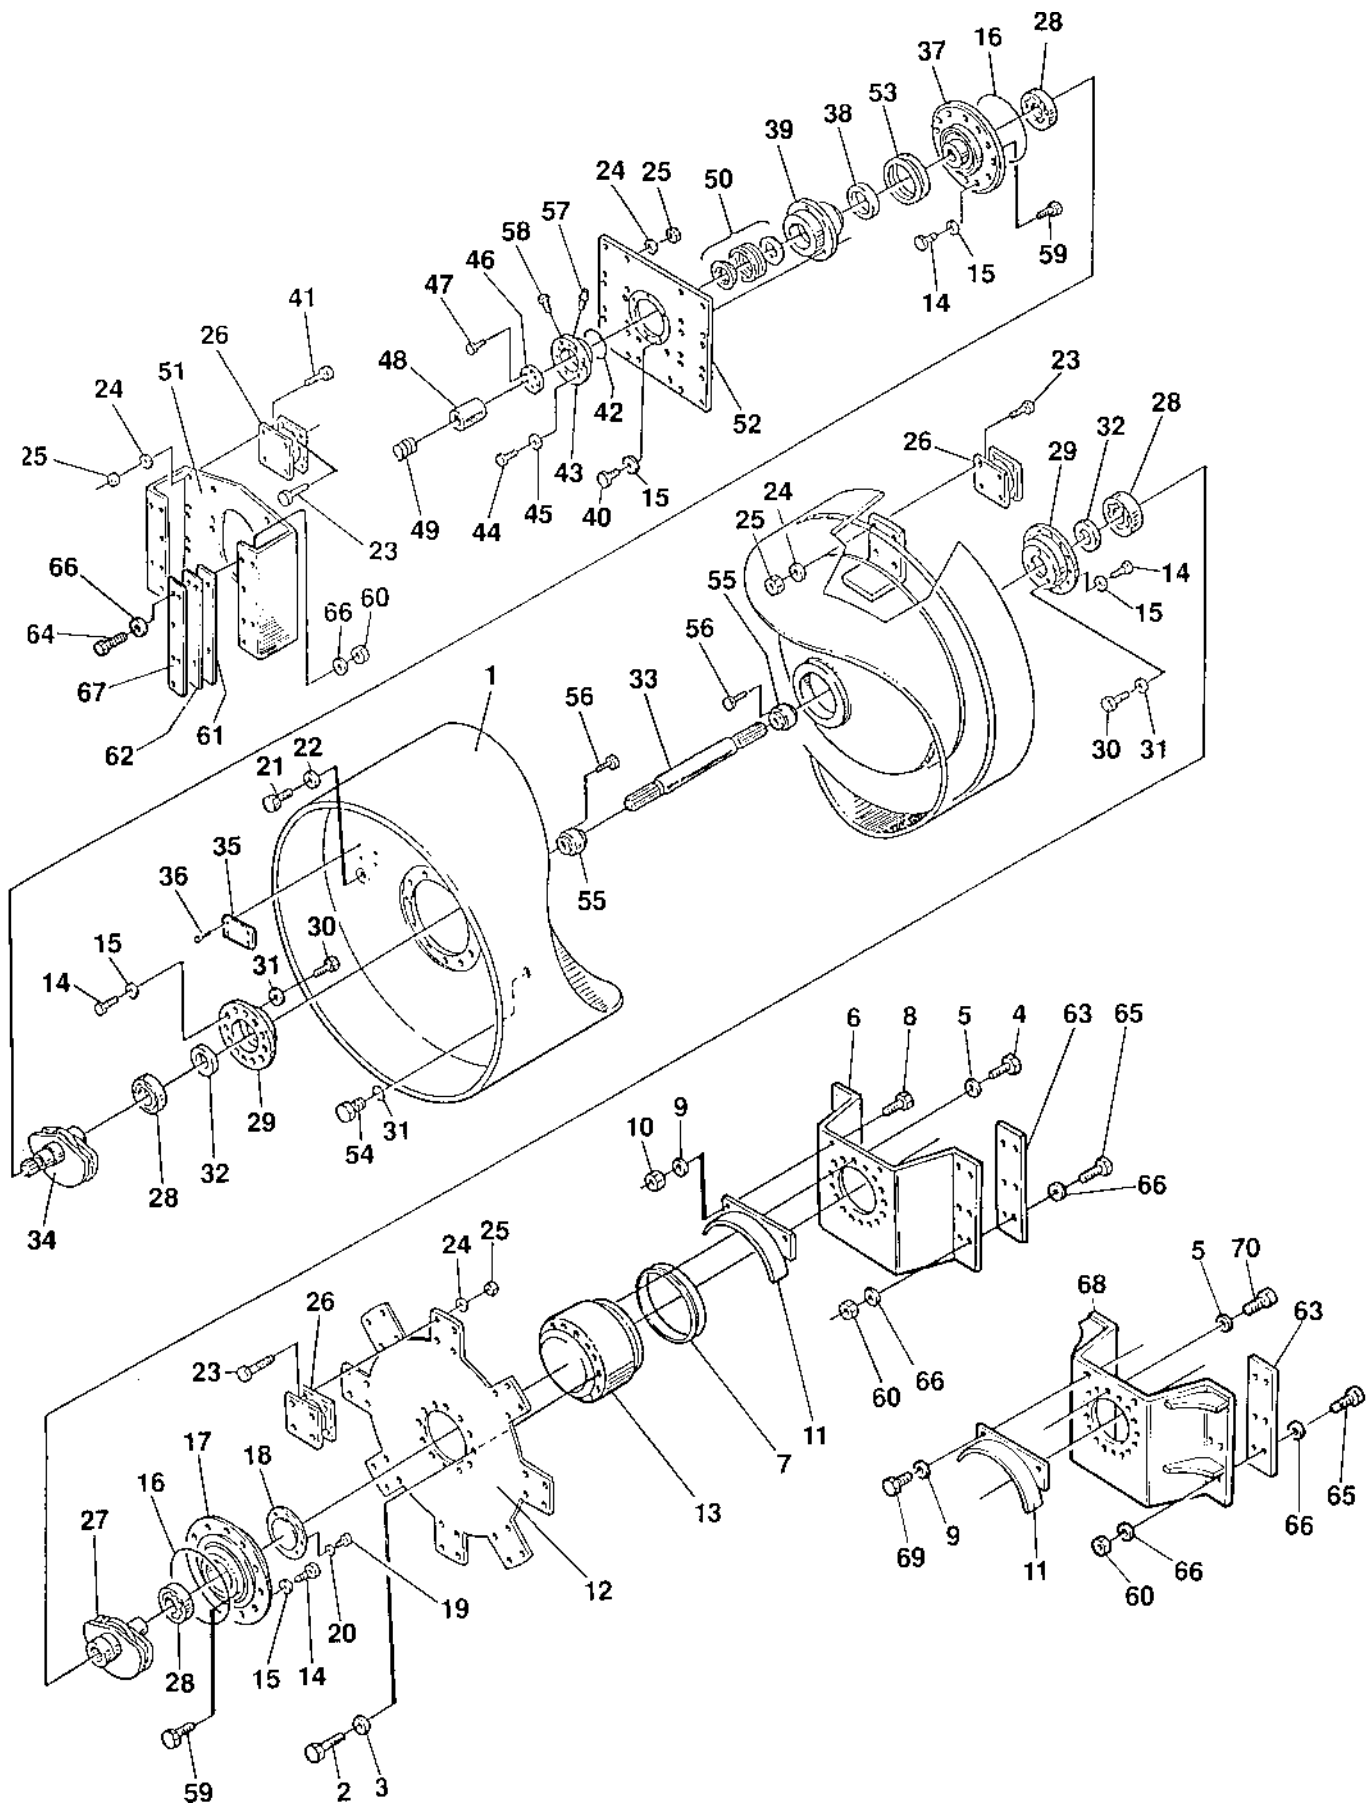

Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
60	901145		24	Nut	
61	358007		N	Shims T=3 mm	
62	358008		N	Shim T=8 mm	
63	355701		2	Shim T=12 mm Up to 60910585	
	358942		2	Shim T=12 mm From 60910586	
64	928850		12	Screw	
65	901381		12	Screw	
66	904233		48	Washer	
67	358933		N	Shims T=1 mm	
68	358922		1	Bracket From 60910586	
69	500021		2	Screw From 60910586	
70	903281		16	Screw From 60910586	

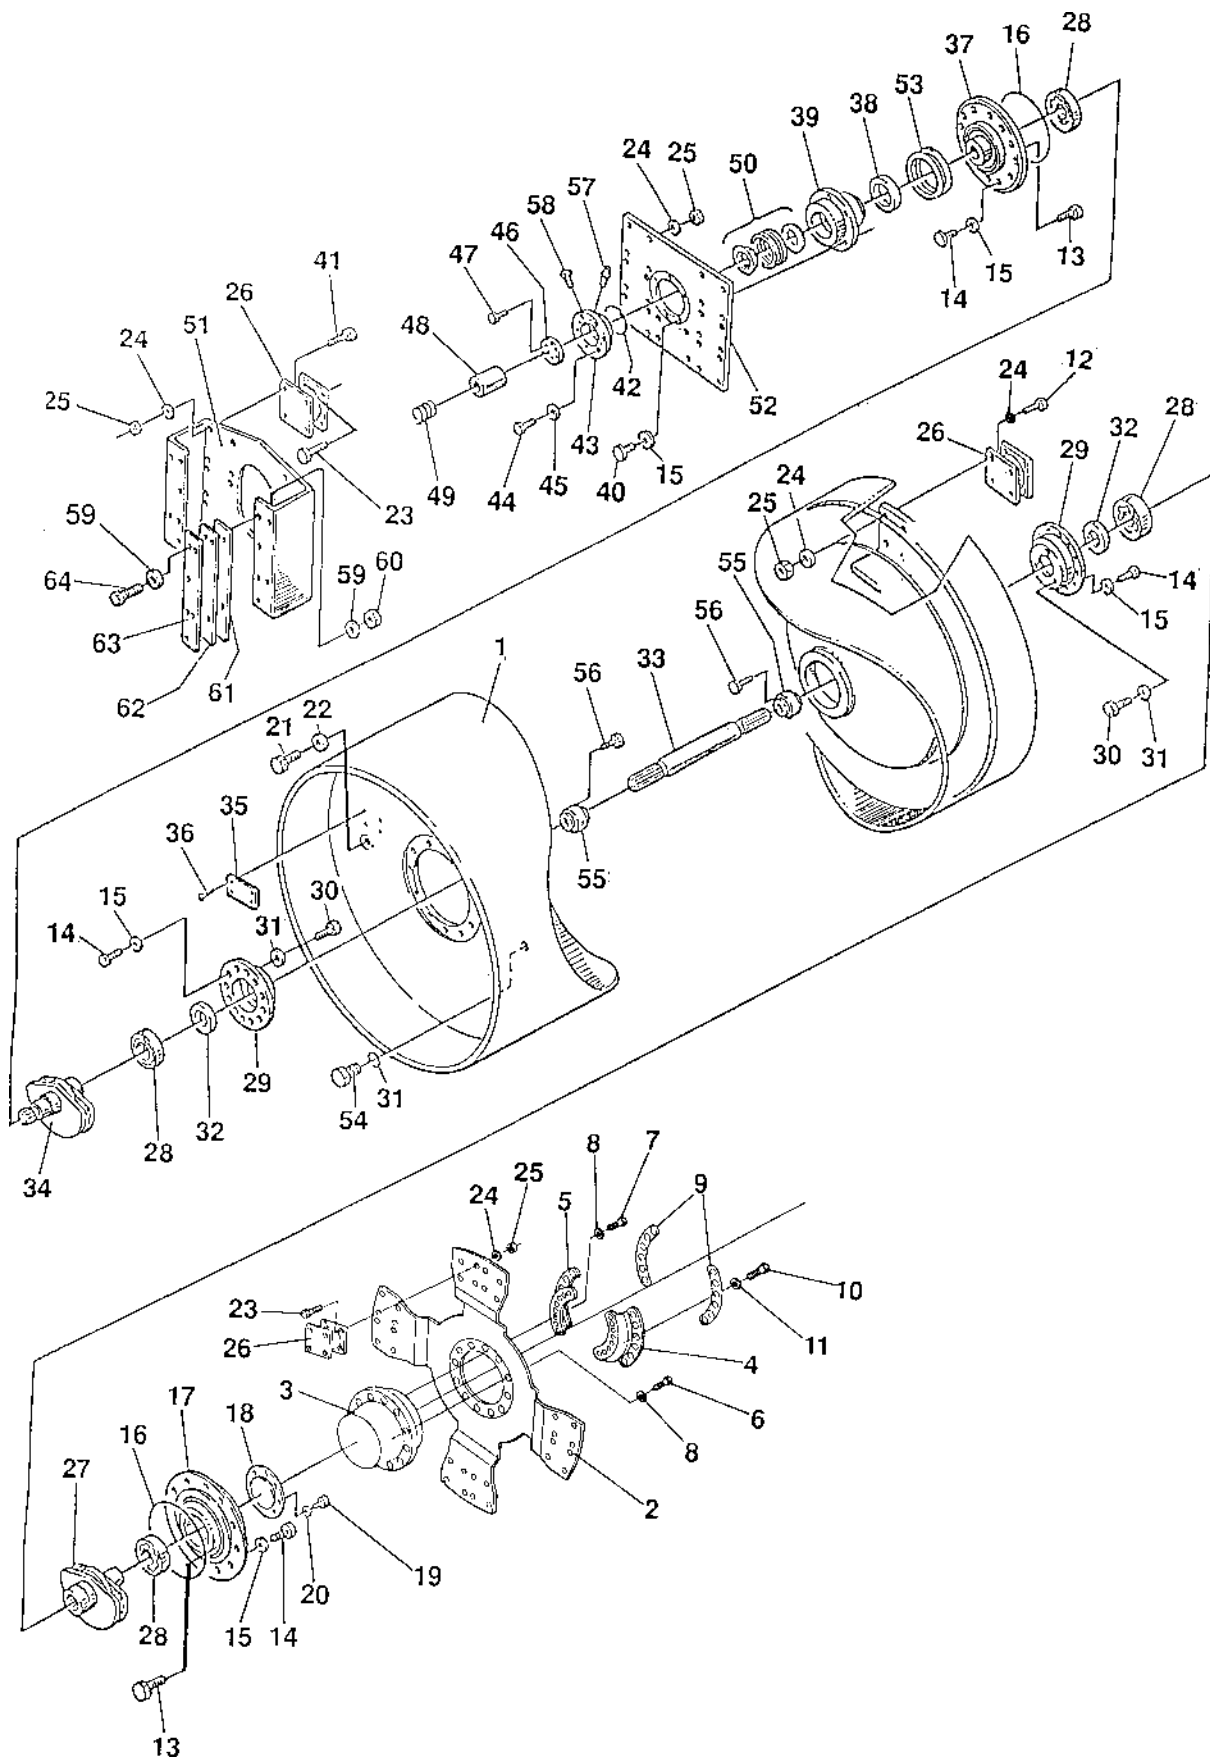


Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	373022		1	Drum	
2	372230		1	Drive disc	
3	372987		1	Drum gear (Page 40)	C
4	373442		1	Gear holder	
5	373443		1	Gear holder	
6	903281		16	Screw	
7	903919		16	Screw	
8	903818		32	Washer	
9	373024		2	Shim T=15 mm	
10	500130	A	10	Screw	
	500152	B	10	Screw	
11	904234		10	Washer	
12	500051		32	Screw	
13	900775		6	Plug	
14	500093		36	Screw	
15	615046		44	Conical spring washer	
16	927409		2	O-ring	D
17	343470		1	Bearing housing outer	D
18	335661		1	Bearing cover	
19	500028		6	Screw	
20	615044		6	Conical spring washer	D
21	343744		2	Magnetic plug M30	D
22	162017		2	Seal ring M30	D
23	500194		92	Screw	
24	904231		120	Washer	
25	586019		120	Lock nut	
26	450122		15	Shock absorber	B
27	357445	1	1	Eccentric shaft	
	376036		1	Eccentric shaft	
28	114036		4	Drum bearing	D
29	343475		2	Bearing housing inner	D
30	500035		6	Screw	
31	162027		8	Sealing M12	D
32	813697		2	Shaft seal	D
33	356106		1	Drive shaft	
34	357446	1	1	Eccentric shaft	
	376037		1	Eccentric shaft	
35	343801		1	Sign plate	
36	527002		4	Screw	
37	343458		1	Bearing housing outer	D
38	167023		1	Seal ring	D
39	343318		1	Bearing housing	D
40	500076		8	Screw	
41	500056		28	Screw	
42	160105		1	O-ring	D
43	343561		1	Motor adapter	
44	500046		4	Screw	
45	615045		4	Conical spring washer	
46	343462		1	Bearing cover	
47	508019		8	Screw	
48	370365		1	Splined sleeve	
49	349715		1	Spring	
50	116041		1	Taper roller bearing	D
51	358006		1	Bracket	
52	356146		1	Holder plate	
53	929447		1	V-ring	D
54	344196		2	Plug M12	D
55	349401		2	Splined sleeve	D
56	900633		16	Screw	
57	926736		1	Breather M14	B
58	232070		1	Plug	

1) Replaced as Spare part.


A) Front drum

B) Rear drum

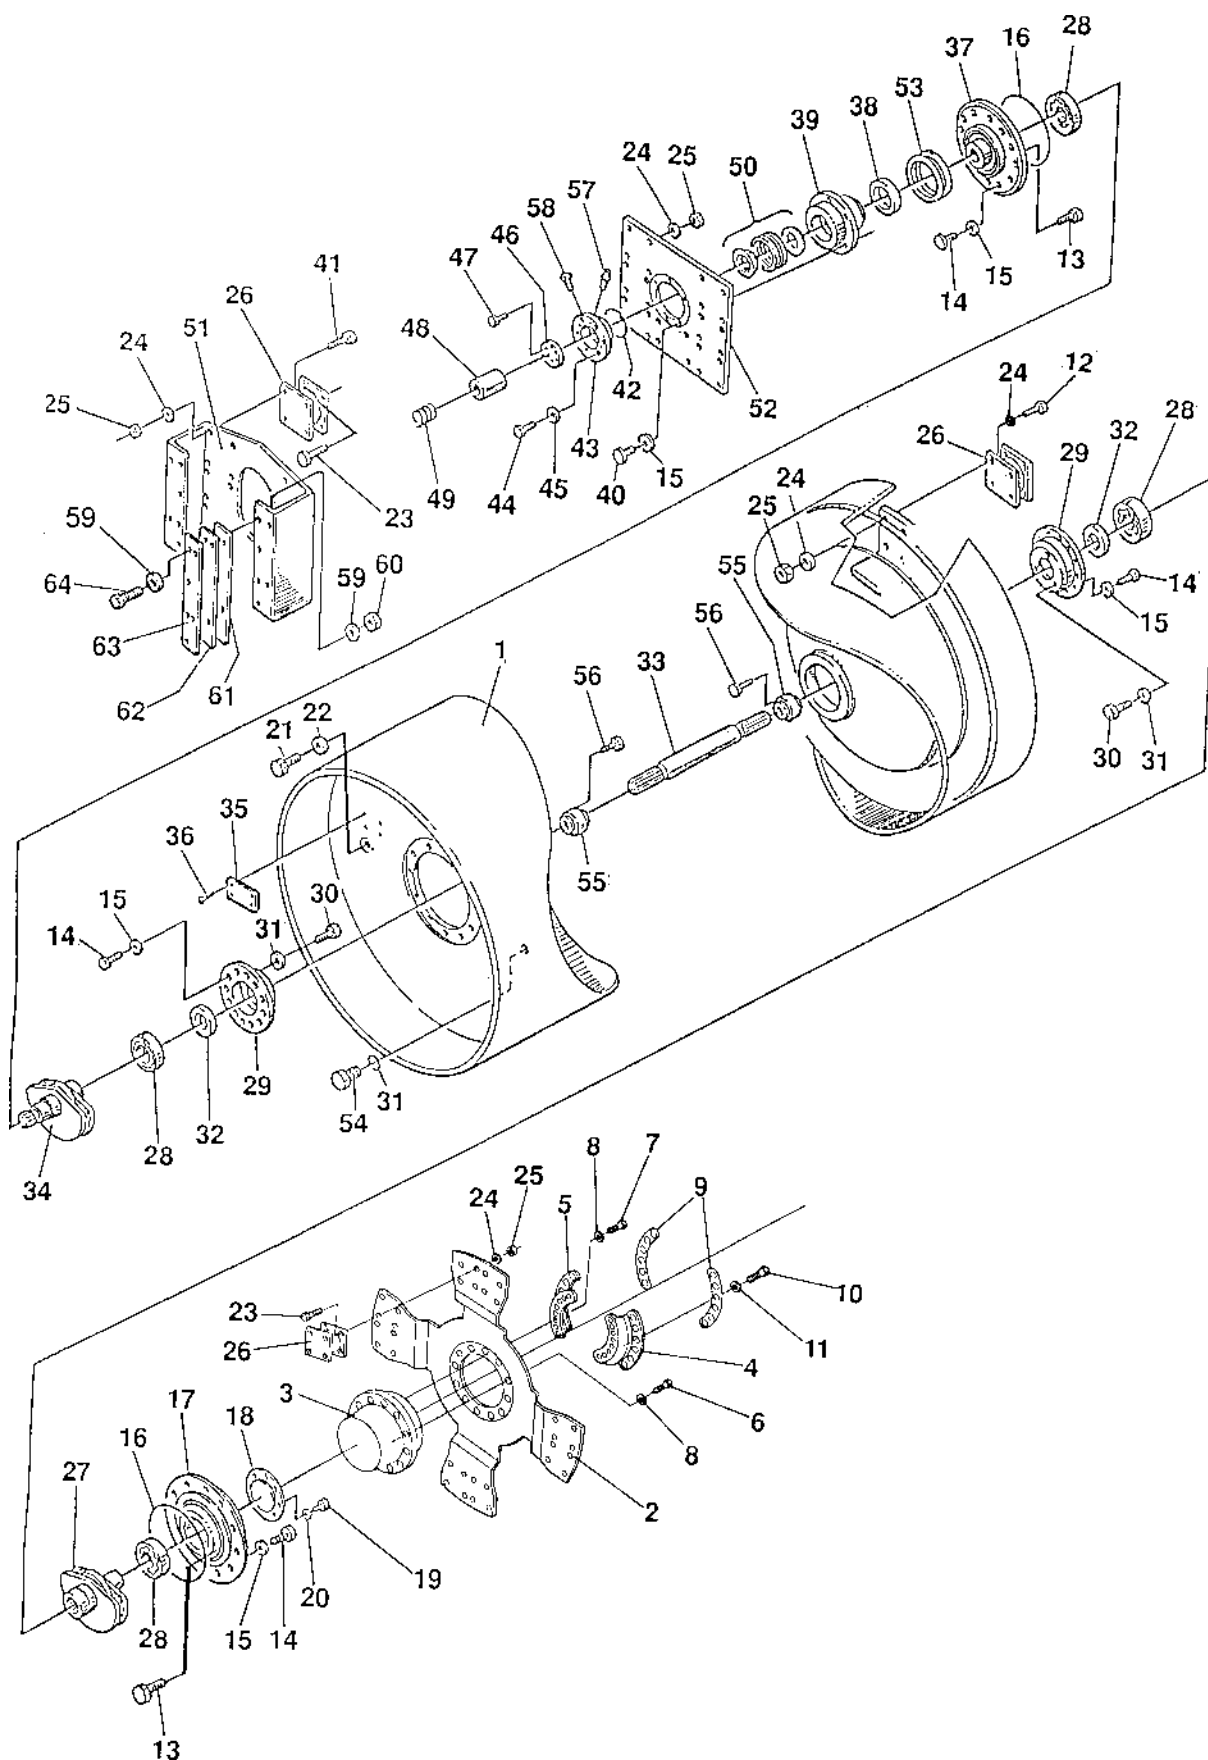

Drum


Ref. No.	Part No.	Rem.	Qty	Description	Code
59	904233		24	Washer	
60	901145		24	Nut	
61	358007	N		Shims T=3 mm	
62	358008	N		Shim T=8 mm	
63	358933	N		Shims T=1 mm	
64	928850		12	Screw	
65	901381		12	Screw	

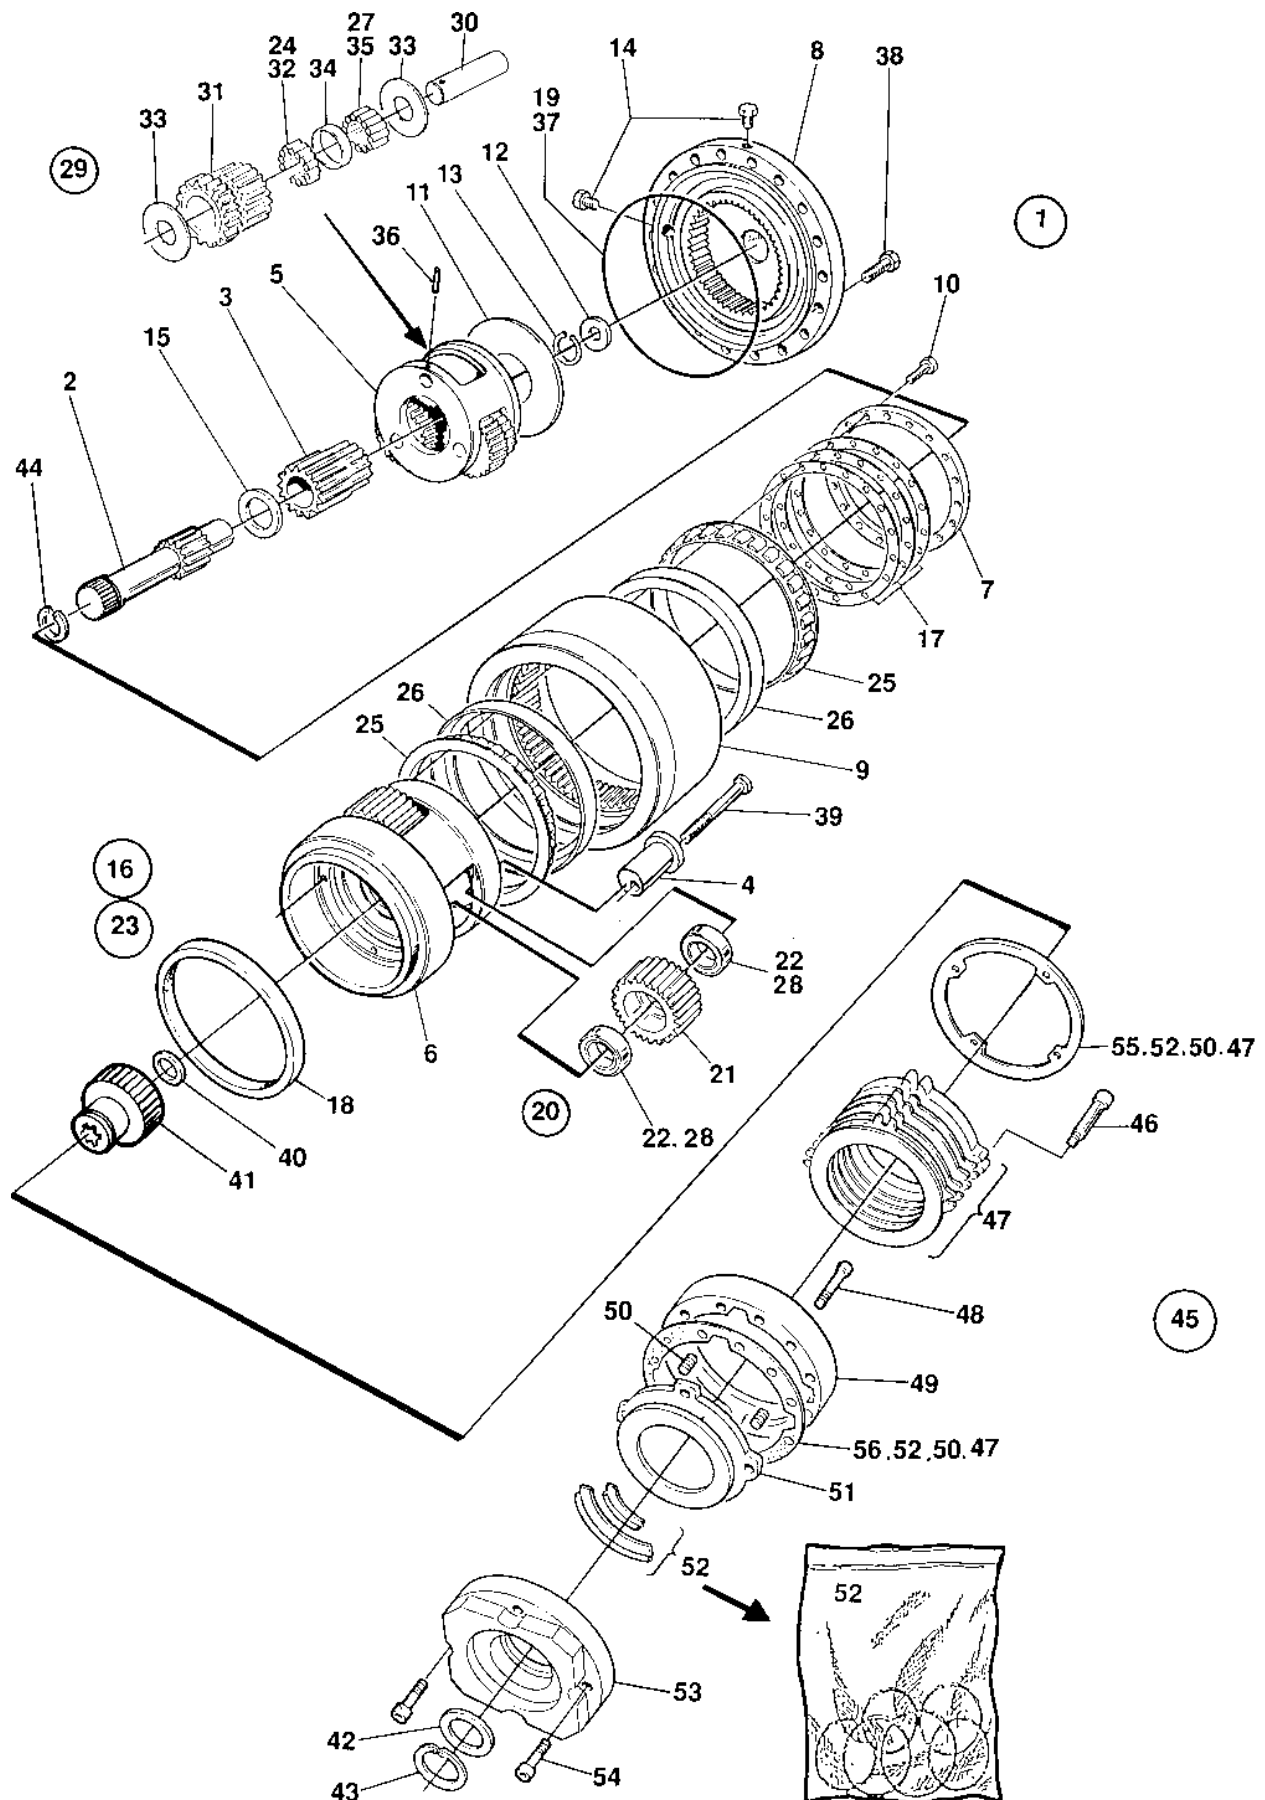

355618 Drum gear

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Drum gear	
2	902025		1	.Shaft	D
3	901492		1	.Sun gear	D
4	901493		3	.Shaft	D
5	901494		1	.Carrier	
6	901495		1	.Spindle	D
7	901496		1	.Retainer plate	
8	901498		1	.Gear ring	D
9	901499		1	.Gear ring	D
10	892227		16	.Screw	
11	423107		1	.Thrust washer	D
12	901500		1	.Thrust washer	
13	423138		1	.Snap ring	
14	423350		2	.Magnetic pipe plug	D
15	901501		1	.Thrust washer	
16	901502		1	.Seal kit	D
17			1	..Shim kit	D
18	936923		1	..Seal	
19	909241		1	..O-ring	
20	901503		1	.Inner planetary kit	D
21			3	..Planet gear	D
22			6	..Bearing	D
23	901504		1	.Bearing kit	D
24			57	..Bearing	D
25		A	2	..Bearing	D
26		B	2	..Bearing	D
27			57	..Bearing	D
28			6	..Bearing	D
29	901505		1	.Outer planetary kit	D
30			3	..Planet shaft	D
31			3	..Gear	D
32			57	..Bearing	D
33			6	..Thrust washer	D
34			3	..Spacer	D
35			57	..Bearing	D
36			3	..Pin	D
37	909241		1	..O-ring	
38	902026		8	.Screw	
39	902027		3	.Screw	
40	902029		1	.Thrust washer	
41	902030		1	.Splined sleeve	
42	903258		1	.Thrust washer	
43	903252		1	.Snap ring	
44	423343		1	.Snap ring	
45	902028		1	.Brake, cpl	D
46	901970		4	..Screw	
47	901811		1	..Brake disc kit	D
			1	...Disc	D
			5	...Inner disc	D
			4	...Outer disc	D
		C	1	...Gasket	D
		D	1	...Gasket	D
48	908347		4	..Screw	D
49			1	..Housing	D
50	901812		4	..Spring kit	D
			6	...Spring, red	D
			2	...Spring, blue	D

- A) Inner
B) Outer
C) Item 55
D) Item 56

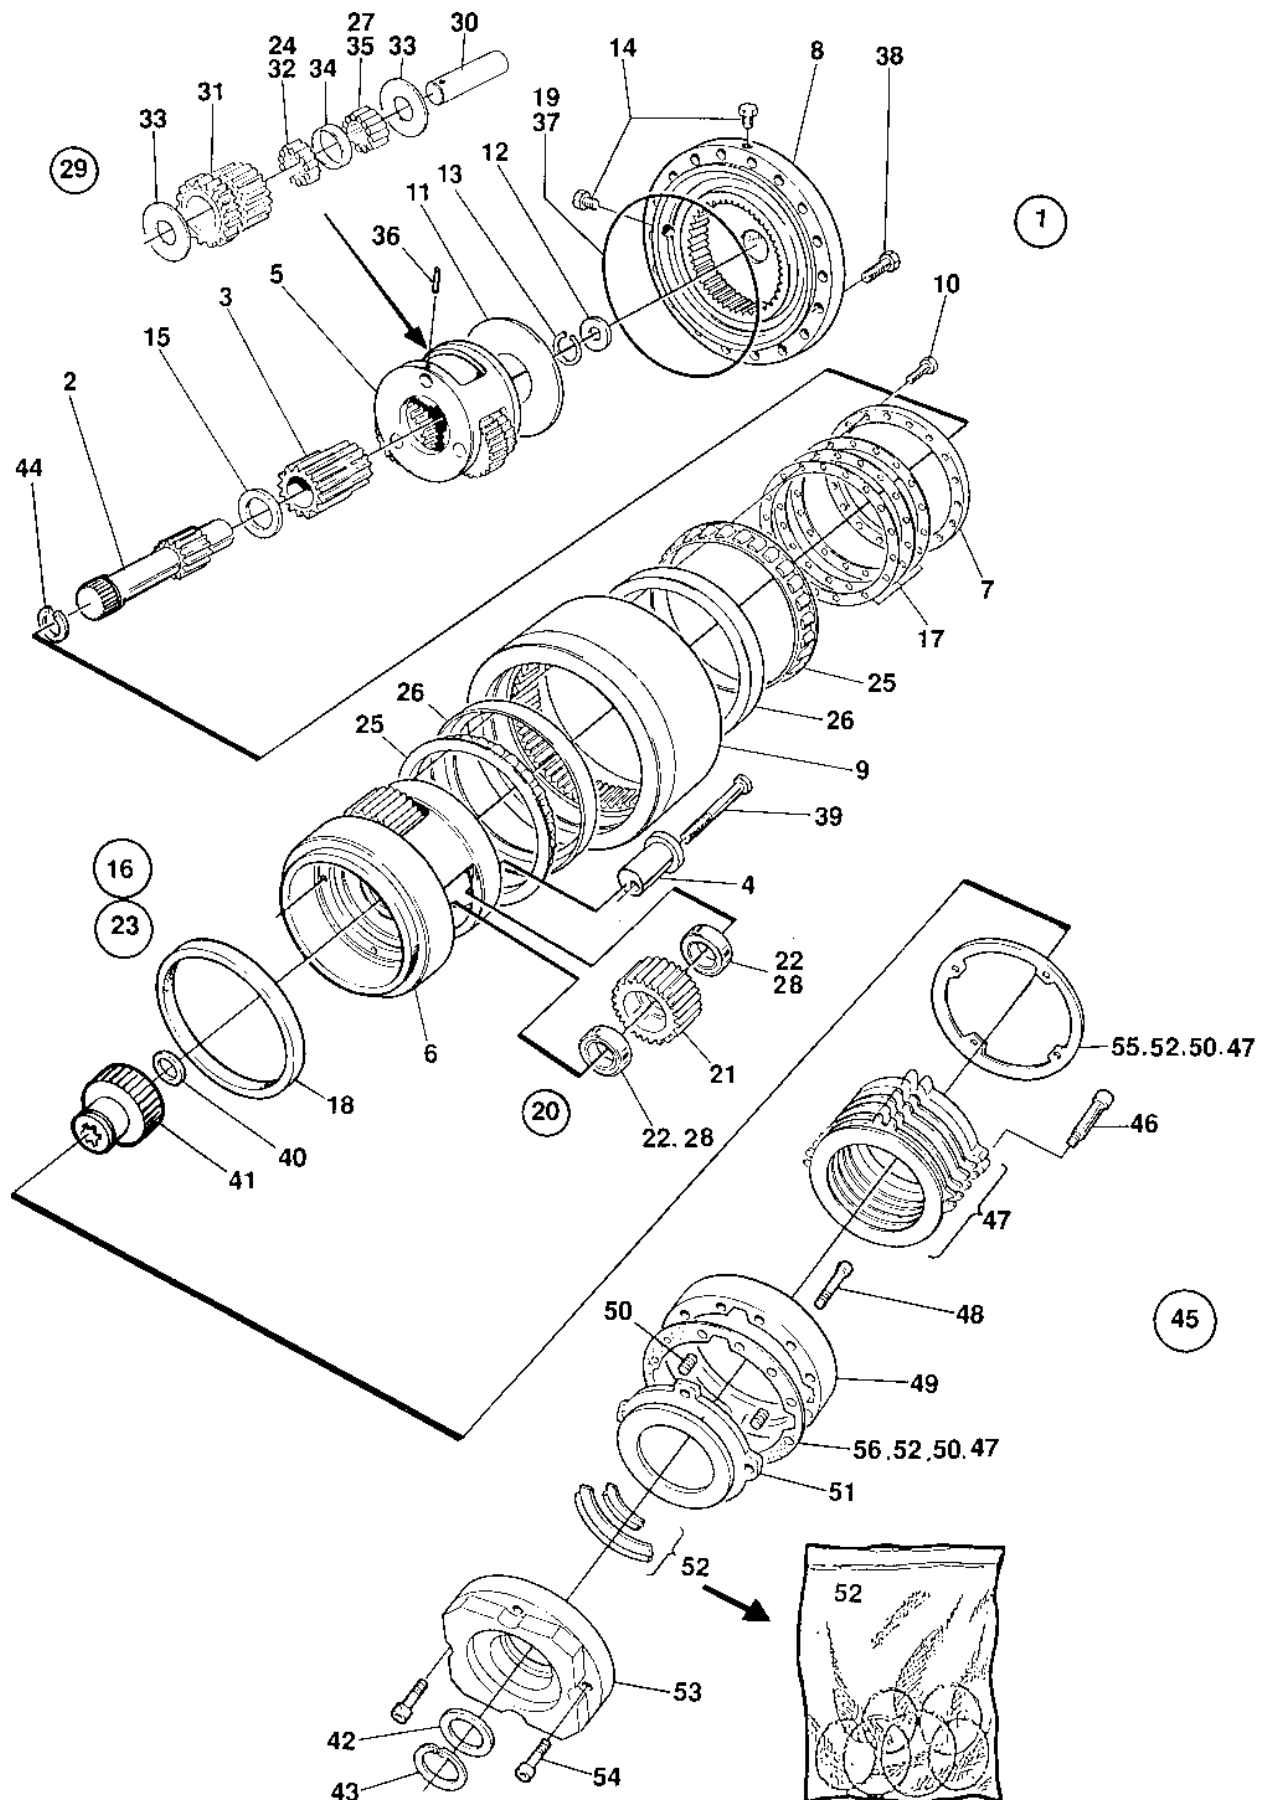

355618 Drum gear

Ref. No.	Part No.	Rem.	Qty	Description	Code
50		C	1	...Gasket	D
		D	1	...Gasket	D
51	908351		1	..Piston	
52	902035		1	..Seal kit	D
		E	1	...Back-up ring	D
		E	1	...O-ring	D
		F	1	...Back-up ring	D
		F	1	...O-ring	D
		C	1	...Gasket	D
		D	1	...Gasket	D
53	902033		1	..Housing	
54	902034		4	..Screw	
55	908642	1	1	..Gasket	
56	909240	1	1	..Gasket	


1) Included in kits item 47, 50 and 52.

C) Item 55

D) Item 56

E) Piston outer

F) Piston inner

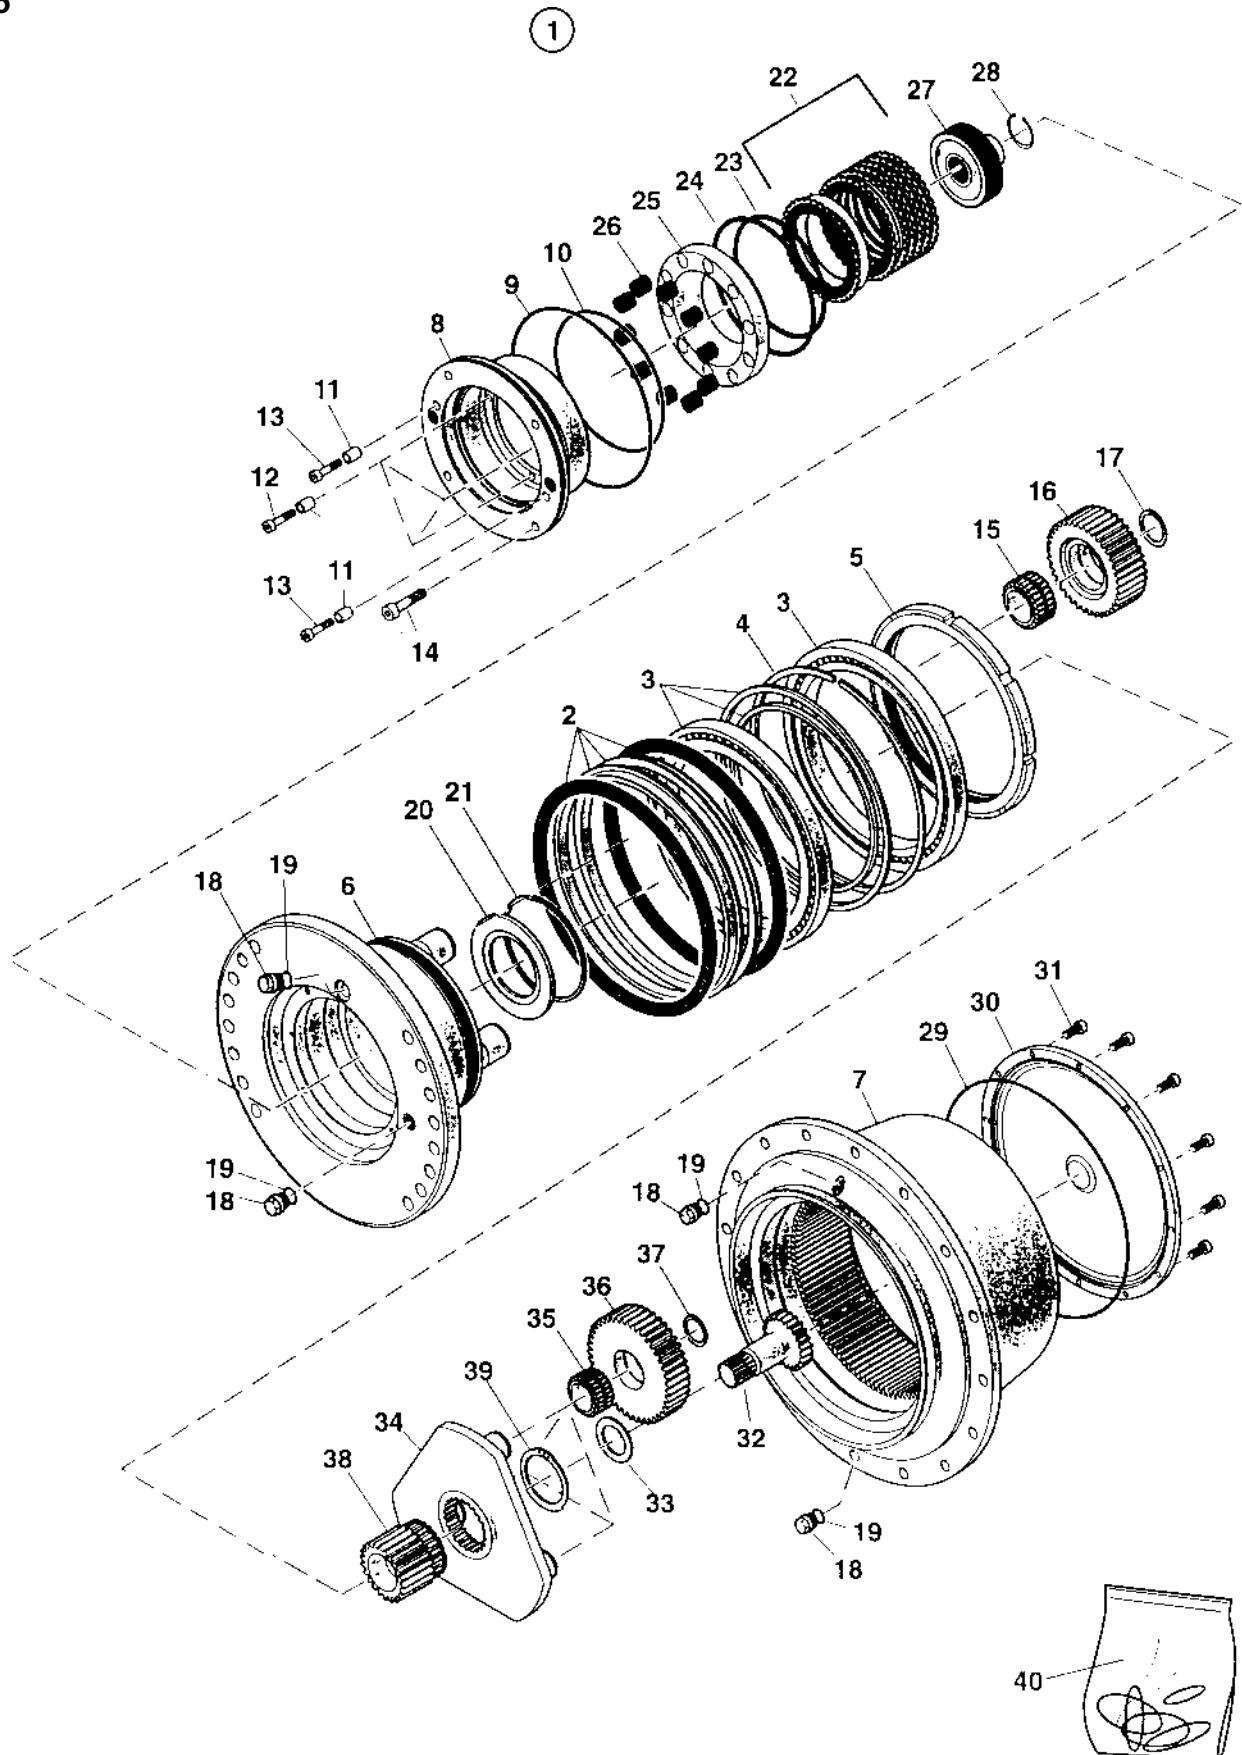


372987 Drum gear

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Drum gear	
2		A	1	.Seal	
3			1	.Roller bearing	
4			1	.Spring ring	
5			1	.Nut	
6			1	.Hub	
7			1	.Hollow wheel	
8			1	.Adapter	
9		A	1	.O-ring	
10		A	1	.O-ring	
11			5	.Bushing	
12			3	.Screw	
13			2	.Screw	
14			4	.Screw	
15			4	.Roller bearing	
16			4	.Planet gear	
17			4	.Retainer ring	
18			4	.Plug	
19		A	4	.Seal ring	
20			1	.Plate	
21			1	.Spring guide	
22	935400		1	.Brake disc kit	
23		A	1	.O-ring	
24		A	1	.O-ring	
25			1	.Piston	
26			10	.Spring	
27			1	.Coupling	
28			1	.Retainer ring	
29		A	1	.O-ring	
30			1	.Cover	
31			12	.Screw	
32			1	.Sun wheel	
33			1	.Spacer	
34			1	.Planet carrier	
35			3	.Roller bearing	
36			3	.Planet gear	
37			3	.Retainer ring	
38			1	.Sun wheel	
39			1	.Retainer ring	
40	935380		1	Seal kit	
A) Incl. in item 40					

Engine

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Engine Cummins 6CT 8.3/8.3-C (Page 44)	
20				Cooler Cummins Up to 60910779 (Page 46)	
				Cooler Cummins From 60910780 (Page 48)	
30	802590		1	Double pump drive (Page 50)	C
40				Intake system (Page 52)	
50				Fuel system (Page 54)	
60				Exhaust system (Page 56)	

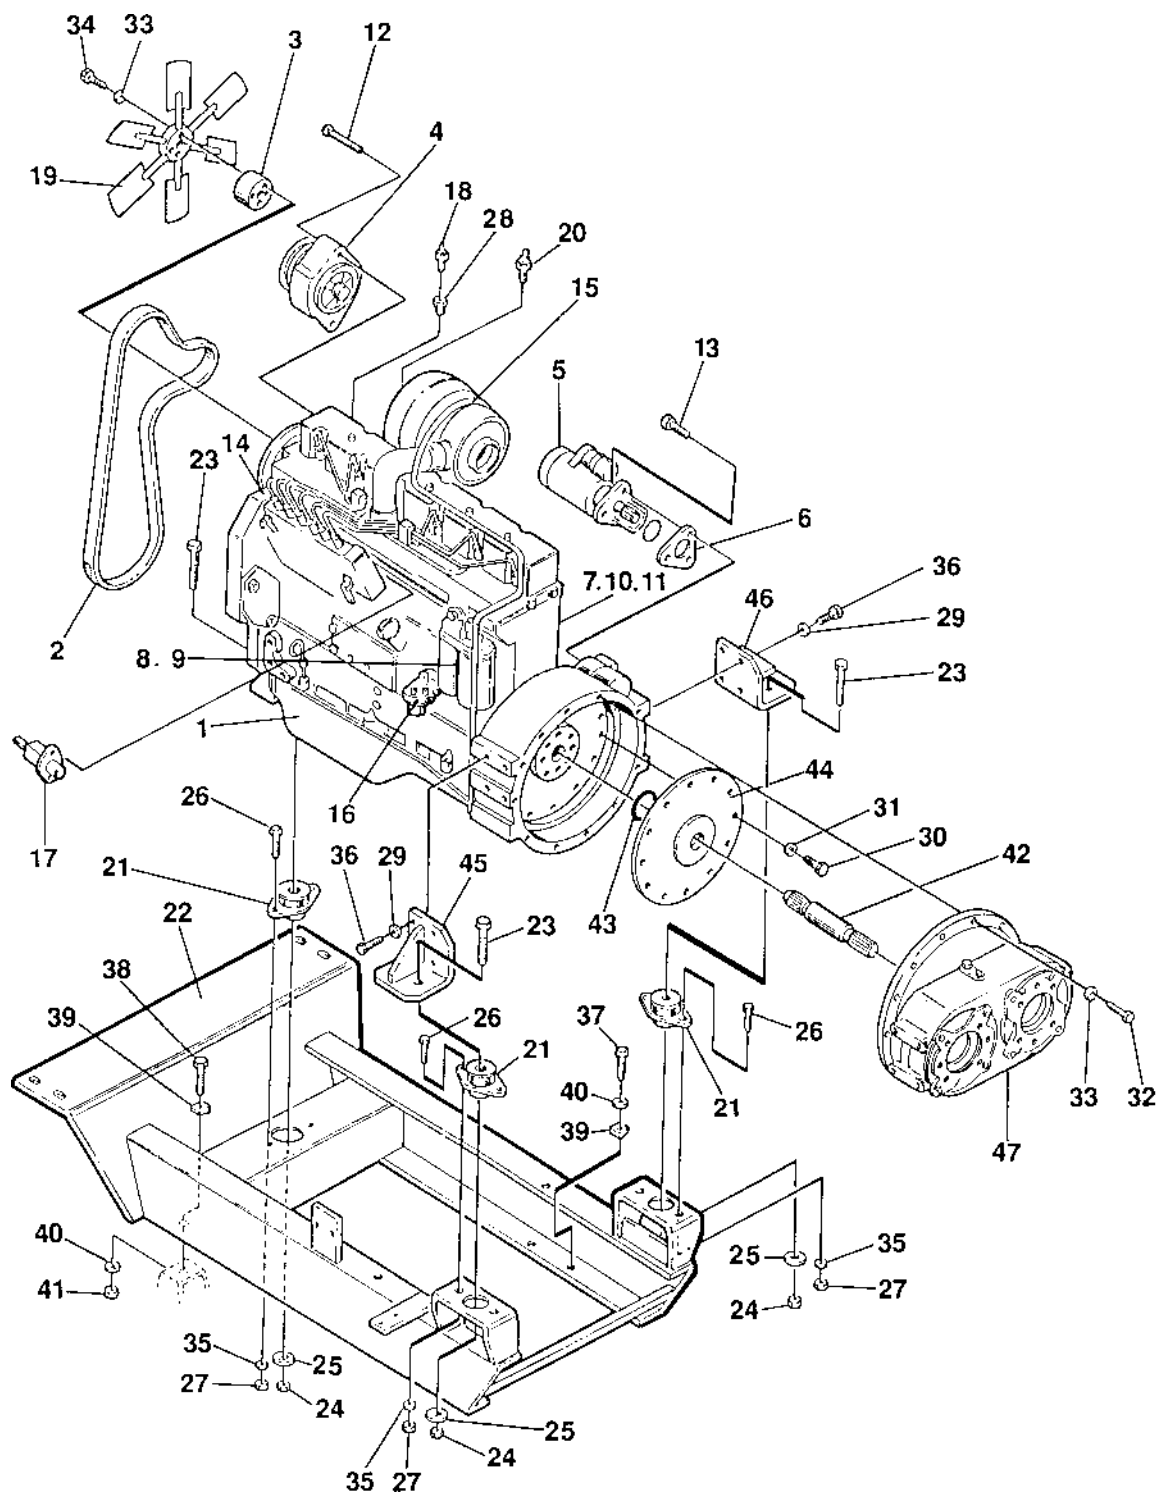

Engine Cummins 6CT 8.3/8.3-C

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	802587		1	Engine 6CT 8.3 Up to 60910667	
	371367		1	Engine 6CT 8.3-C From 60910668	
2	901373		1	.V-belt	B
3	901524		1	.Spacer	
4	901350		1	.Alternator Up to 60910713	C
	935950		1	.Alternator From 60910714	C
5	901360		1	.Starter	C
6	901361		1	.Spacer starter	
7	902039		1	.Oil filter Up to 60910501	A
	900828		1	.Oil filter From 60910502 Up to 60910503	
	902039		1	.Oil filter From 60910504	A
8	900827	A	1	.Fuel filter	A
9	900829		1	.Fuel filter	A
10	212534	B	1	.CRN resistor	A
11	212535	C	1	.CRN resistor	A
12	500034		1	.Screw	
13	500195		3	.Screw	
14	903230		1	.Sprinkling pump cpl	C
15	903231		1	.Turbo charger cpl Up to 60910667	
	909363		1	.Turbo charger cpl From 60910668	
16	903232		1	.Fuel pump cpl	
17	908635		1	.Fuel shut off From 60910586 Up to 60910586	
	908635		1	.Fuel shut off From 60910588	
18	989078	D	1	Temperature sender	D
19	900184		1	Fan	D
20	813462	D	1	Oil pressure sender	D
21	928539		3	Shock mounting, engine	D
22	851199		1	Engine frame Up to 60910731	
	375554		1	Engine frame From 60910732	
23	500142		3	Screw	
24	586021		3	Nut	
25	345666		3	Washer	
26	500194		6	Screw	
27	586019		6	Lock nut	
28	801228		1	Reducing	
29	904231		8	Washer	
30	502033		12	Screw	
31	604028		12	Washer	
32	500029		12	Screw	
33	615044		16	Conical spring washer	D
34	500034		4	Screw	
35	904231		6	Washer	
36	500046		8	Screw	
37	500093		4	Screw	
38	500070		2	Screw	
39	605008		6	Washer	
40	615046		6	Conical spring washer	
41	570008		2	Nut	
42	340864		1	Splined shaft	
43	151014		1	Retaining ring From 60910578	
44	340855		1	Drive plate	
45	851202	E	1	Engine mounting	
46	851204	F	1	Engine mounting	
47	802590		1	Double pump drive (Page 50)	C

A) With water separator


B) For water change

C) For service

D) Engine oil

E) Right


F) Left

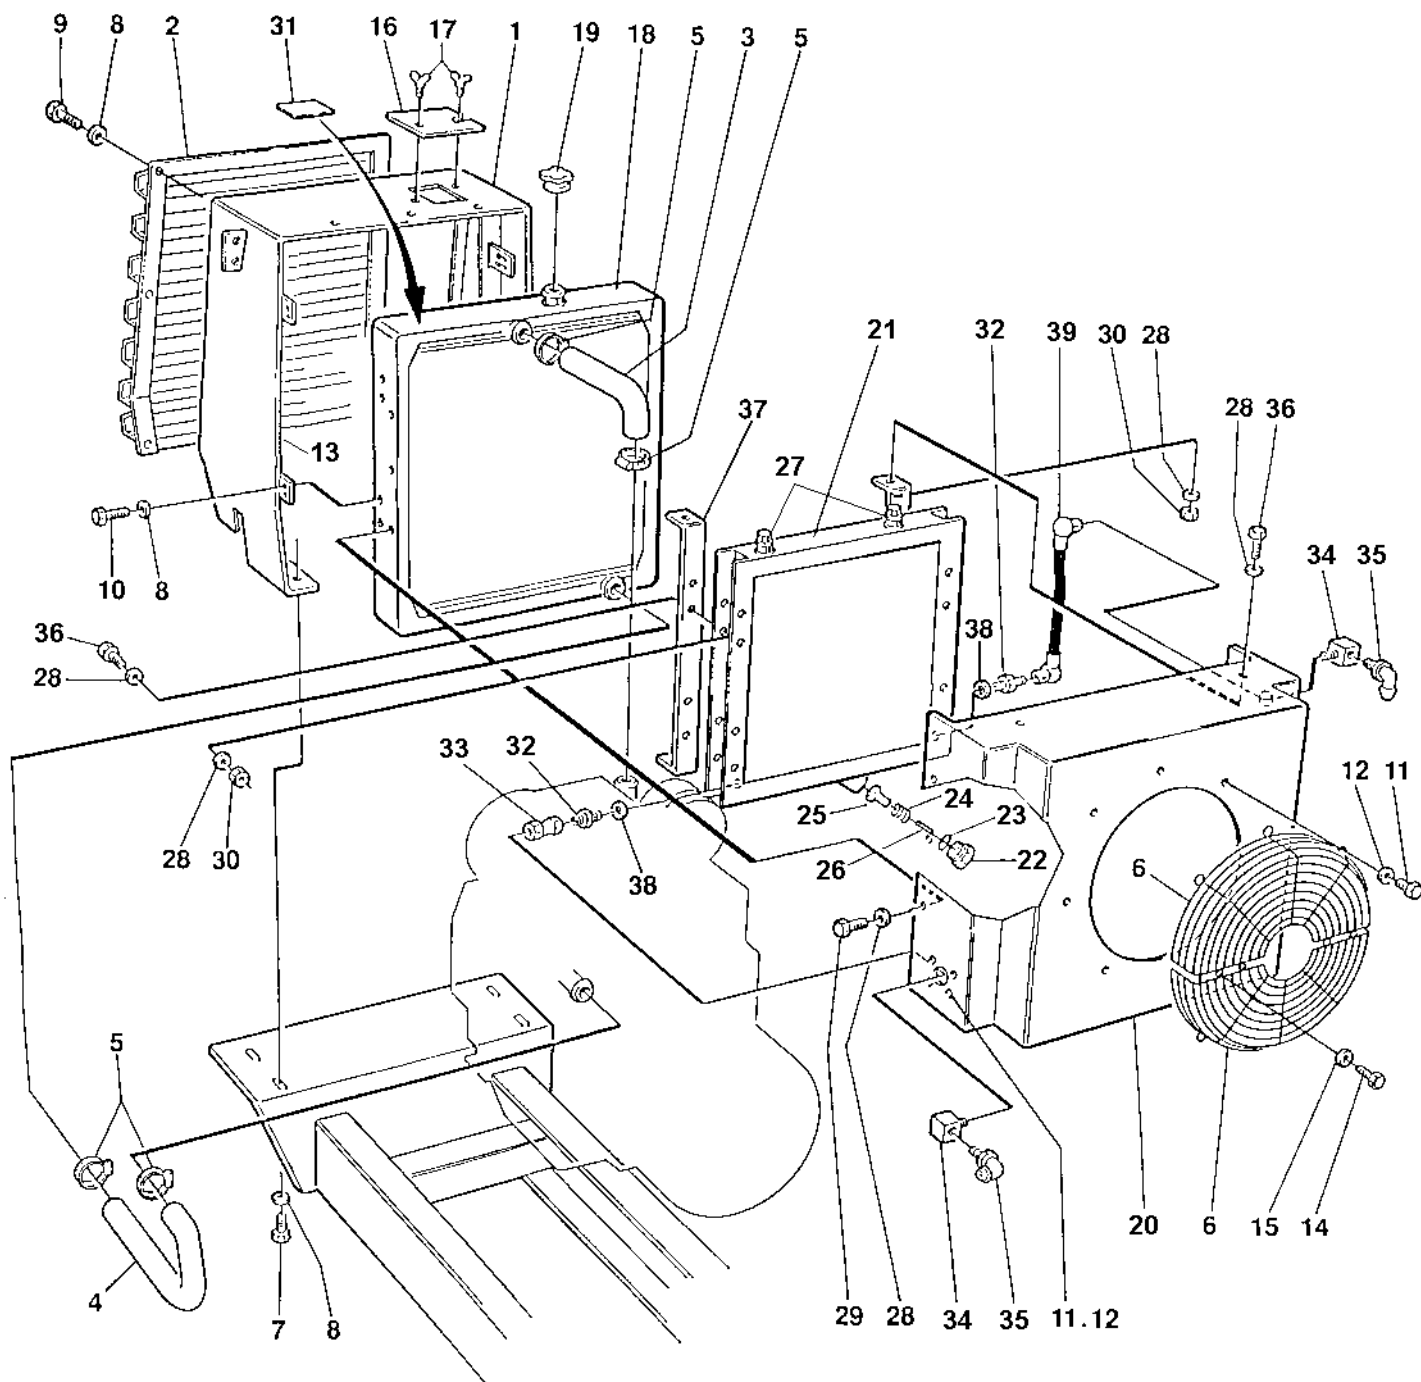

Cooler Cummins

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	851306		1	Cooler cap	
2	851271		1	Grille assy	
3	851445		1	Radiator hose, upper	D
4	851444		1	Radiator hose, lower	D
5	313023		4	Hose clamp	
6	851541		2	Fan guard Up to 60910675	D
	371842		2	Fan guard From 60910676 Up to 60910711	
	374601		2	Fan guard From 60910712	
7	500029		4	Screw	
8	615044		19	Conical spring washer	D
9	508029		7	Screw	
10	502032		8	Screw	
11	500012		16	Screw	
12	904228		16	Washer	
13	900199	C	1XL	Edge trim	
14	500053		4	Screw Up to 60910711	
	500018		4	Screw From 60910712	
15	615043		4	Conical spring washer Up to 60910711	
	904229		4	Washer From 60910712	
16	851690		1	Cover	
17	528041		2	Screw	
18	355557		1	Radiator	C
19	901295		1	.Radiator cap	D
20	903660		1	Hood	
21	355558		1	Oil cooler	C
22	901351		1	.Plug	
23	901352		1	.Washer	
24	901353		1	.Spring	
25	901354		1	.Piston	
26	903564		1	.Pin	
27	903724		3	.Seal	
28	904230		22	Washer	
29	500048		6	Screw M10x20	
30	586018		8	Lock nut	
31	343801		1	Sign plate	
32	901345		2	Adapter	
33	901346		1	Adapter	
34	901347		2	Connection	
35	901348		2	Adapter	
36	500028		8	Screw	
37	908203		2	Bracket	
38	903724		2	Seal	
39	901349		1	Coolant hose	


C) L=2.45 m

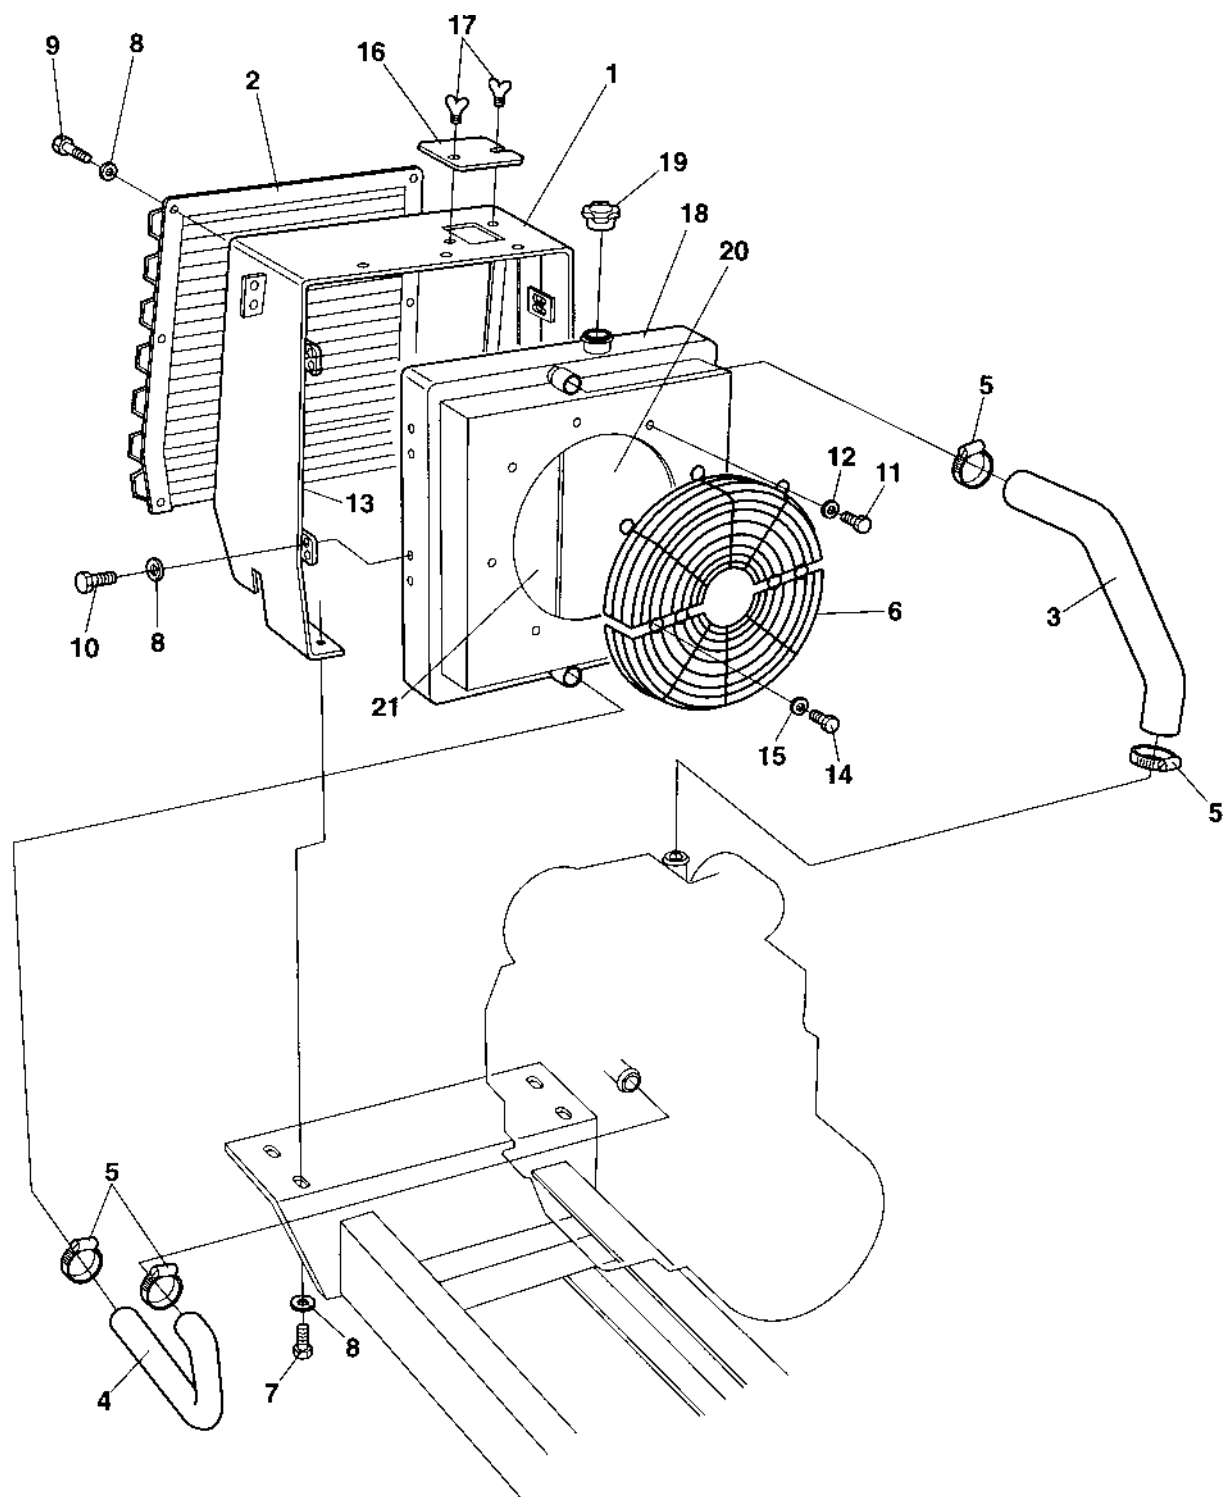

Cooler Cummins


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	380268		1	Cooler frame	
2	851271		1	Grille assy	
3	376112		1	Radiator hose, upper	D
4	376111		1	Radiator hose, lower	D
5	313023		4	Hose clamp	
6	374601		2	Fan guard	
7	500029		4	Screw	
8	904230		19	Washer	
9	508029		7	Screw	
10	500043		8	Screw	
11	500012		8	Screw	
12	904639		8	Washer	
13	900199	C	1XL	Edge trim	
14	500018		4	Screw	
15	904229		4	Washer	
16	851690		1	Cover	
17	528041		2	Screw	
18	376214		1	Radiator/cooler	C
19	938204		1	.Cup	D
20	938202		1	.Water radiator	
21	938203		1	.Oil cooler	C

C) L=2.45 m

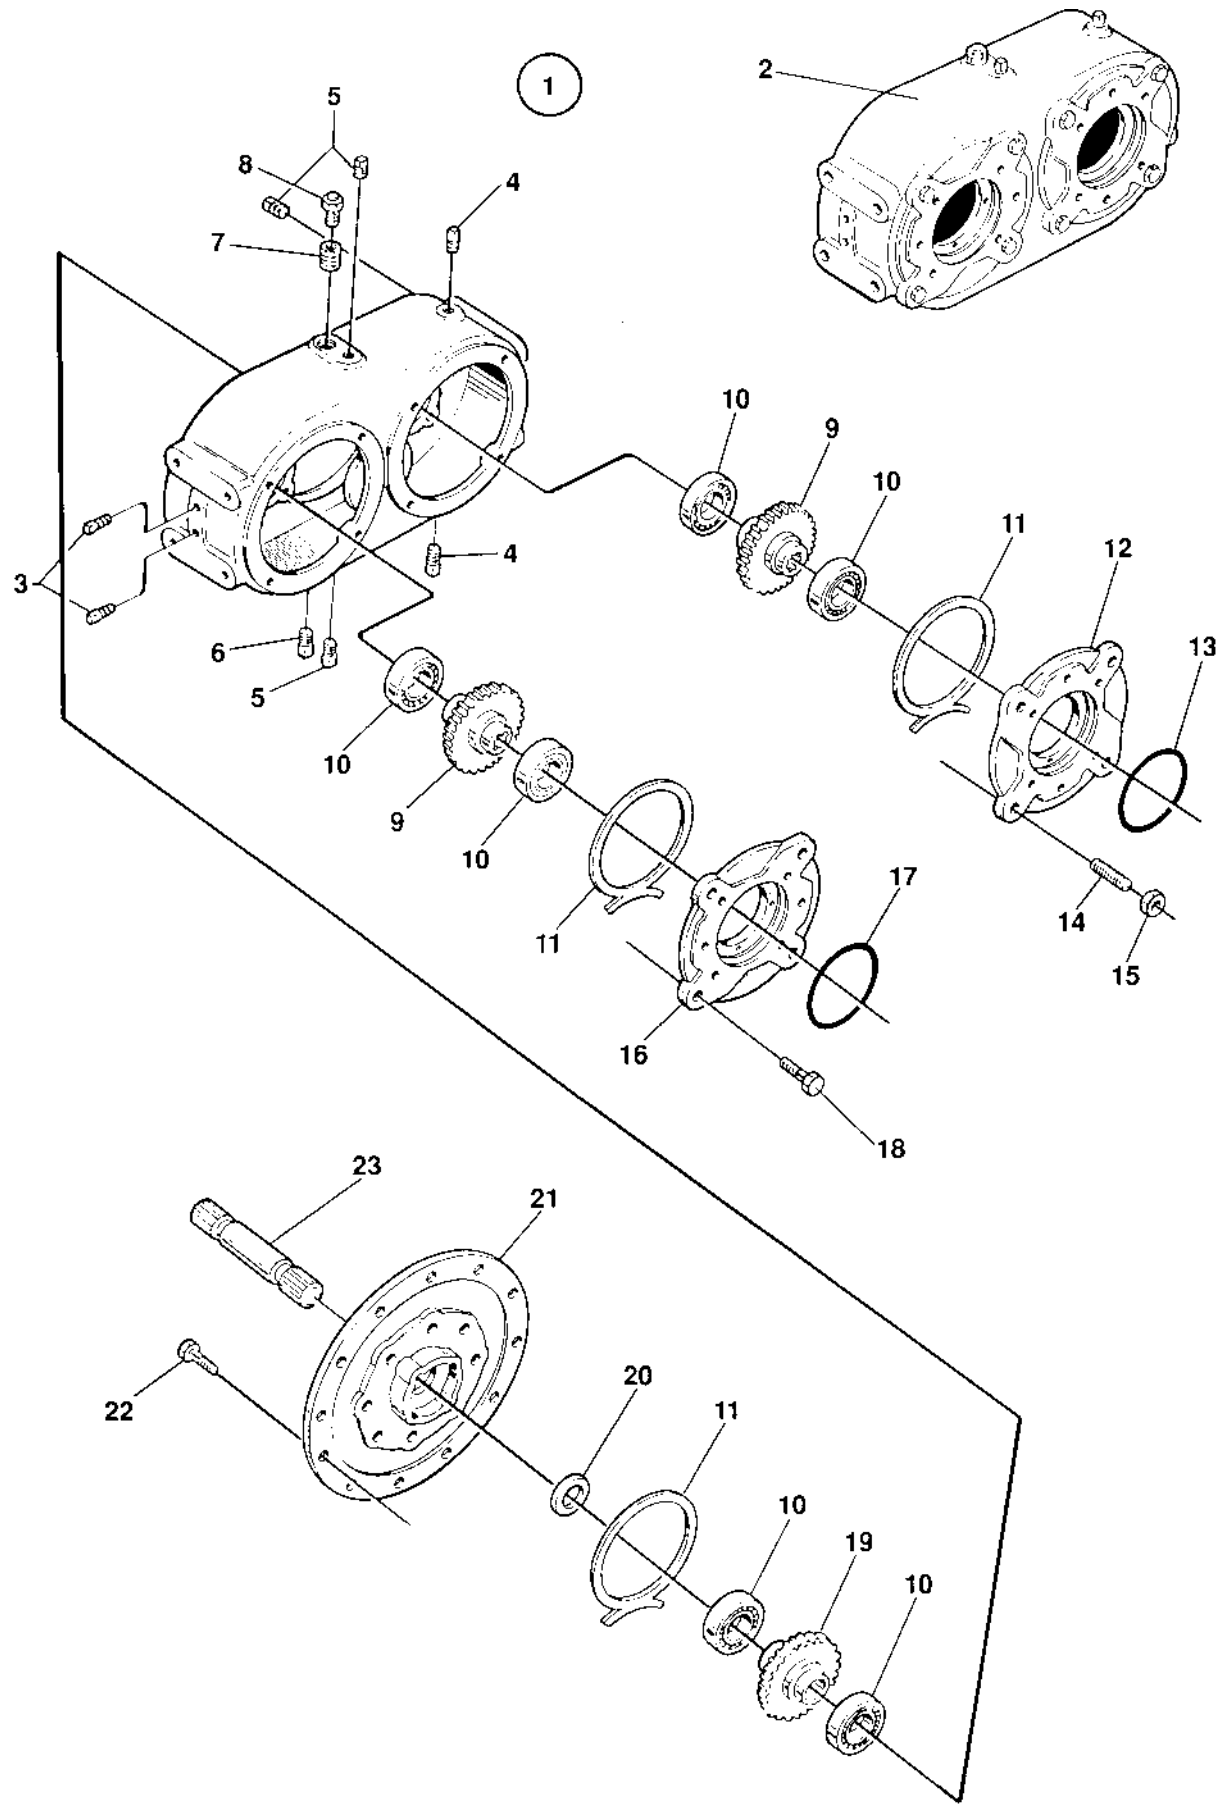

802590 Double pump drive


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Gear box, cpl	C
2	920926		1	.Housing	
3	813898		4	..Oil level plug	
4	921524		2	..Filling plug	D
5	813899		3	..Plug	
6	813900		1	..Plug	
7	813901		1	..Reducing nipple	
8	920927		1	..Breather	D
9	892401		2	.Gear	D
10	813649		6	.Bearing	D
11	813648		3	.O-ring	D
12	480625		1	.Bearing housing	D
13	480622		1	.O-ring	D
14	911421		4	.Stud 3/4"	
15	571007		4	.Nut	
16	813599		1	.Bearing housing	
17	911504		1	.O-ring	D
18	813809		4	.Stud 5/8"	
19	892402		1	.Gear	D
20	813650		1	.Oil seal	D
21	813600		1	.Cover	
22	813809		4	.Stud 5/8"	
23	340864		1	.Splined shaft	

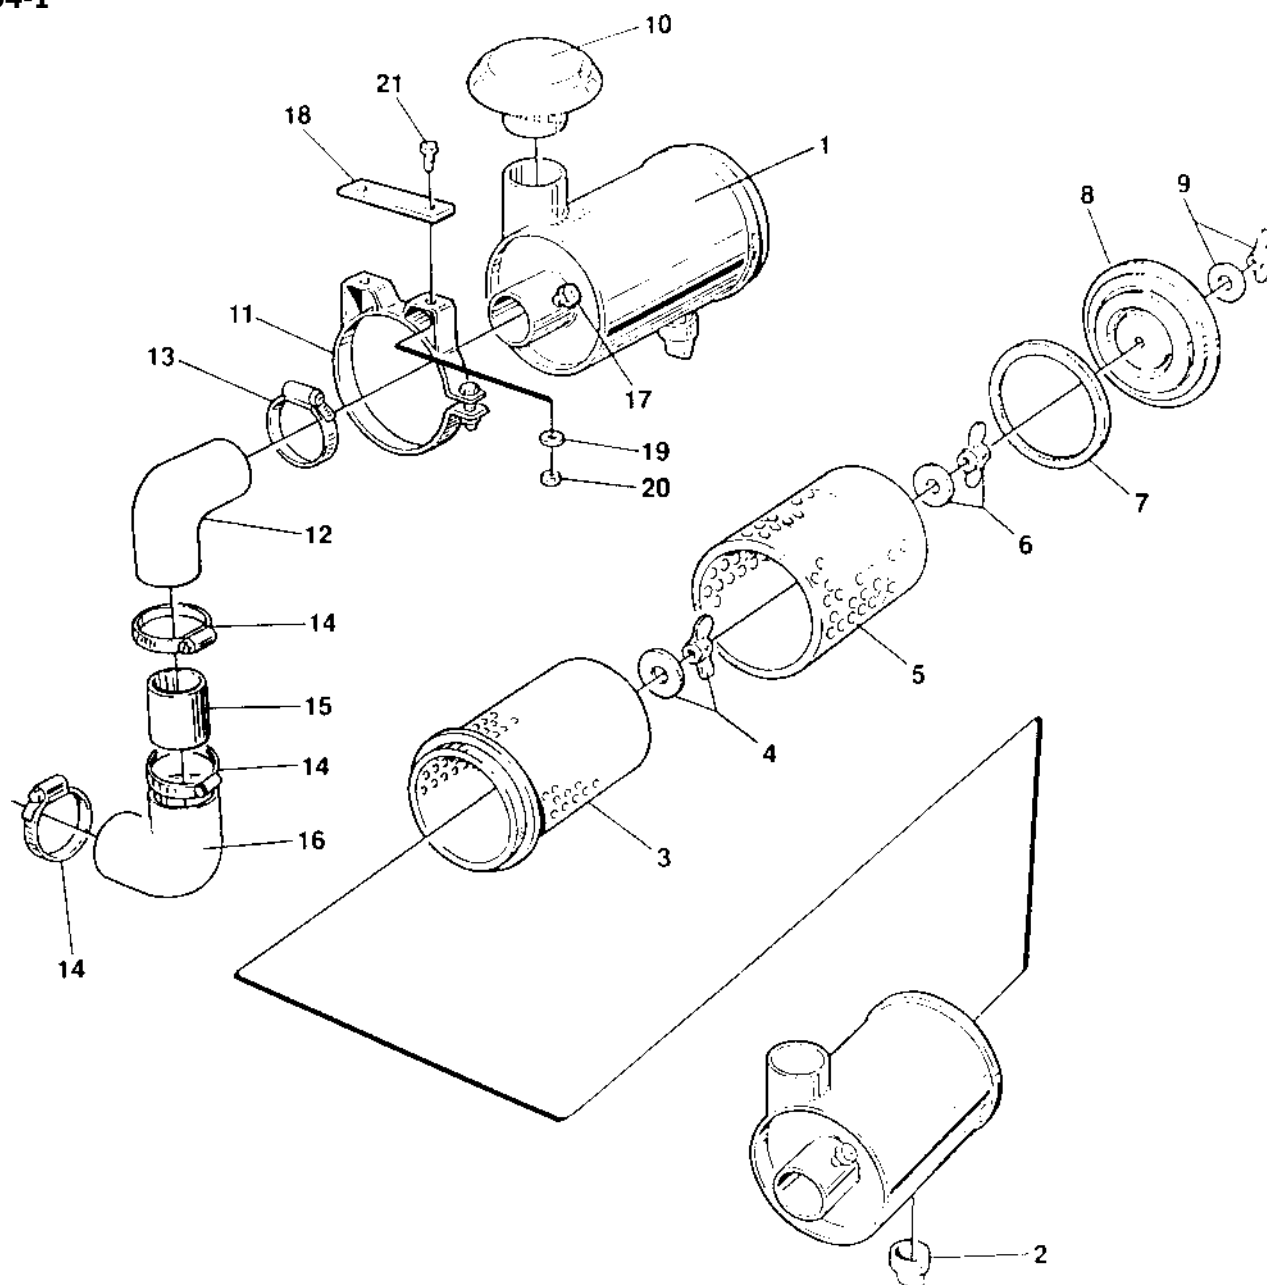

Intake system


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	802548		1	Air cleaner	
2	499503		1	.Vacuator valve	
3	928915		1	.Air filter element	A
4	928917	A	1	.Wing nut	
5	928914		1	.Air filter element	A
6	928918	A	1	.Wing nut	
7	928921		1	.Gasket	D
8	928916		1	.Cover	
9	928919	A	1	.Wing nut	
10	900170		1	Air inlet hood	D
11	802550		2	Band, mounting	
12	801688		1	Rubber elbow	
13	313105		2	Hose clamp	
14	313105		6	Hose clamp	
15	850623		1	Steel tube	
16	912385		1	Rubber bend	D
17	929023		1	Indicator	D
18	851441		2	Bracket	
19	615044		4	Conical spring washer	D
20	570006		4	Nut	
21	500048		4	Screw M10x20	

A) With seal

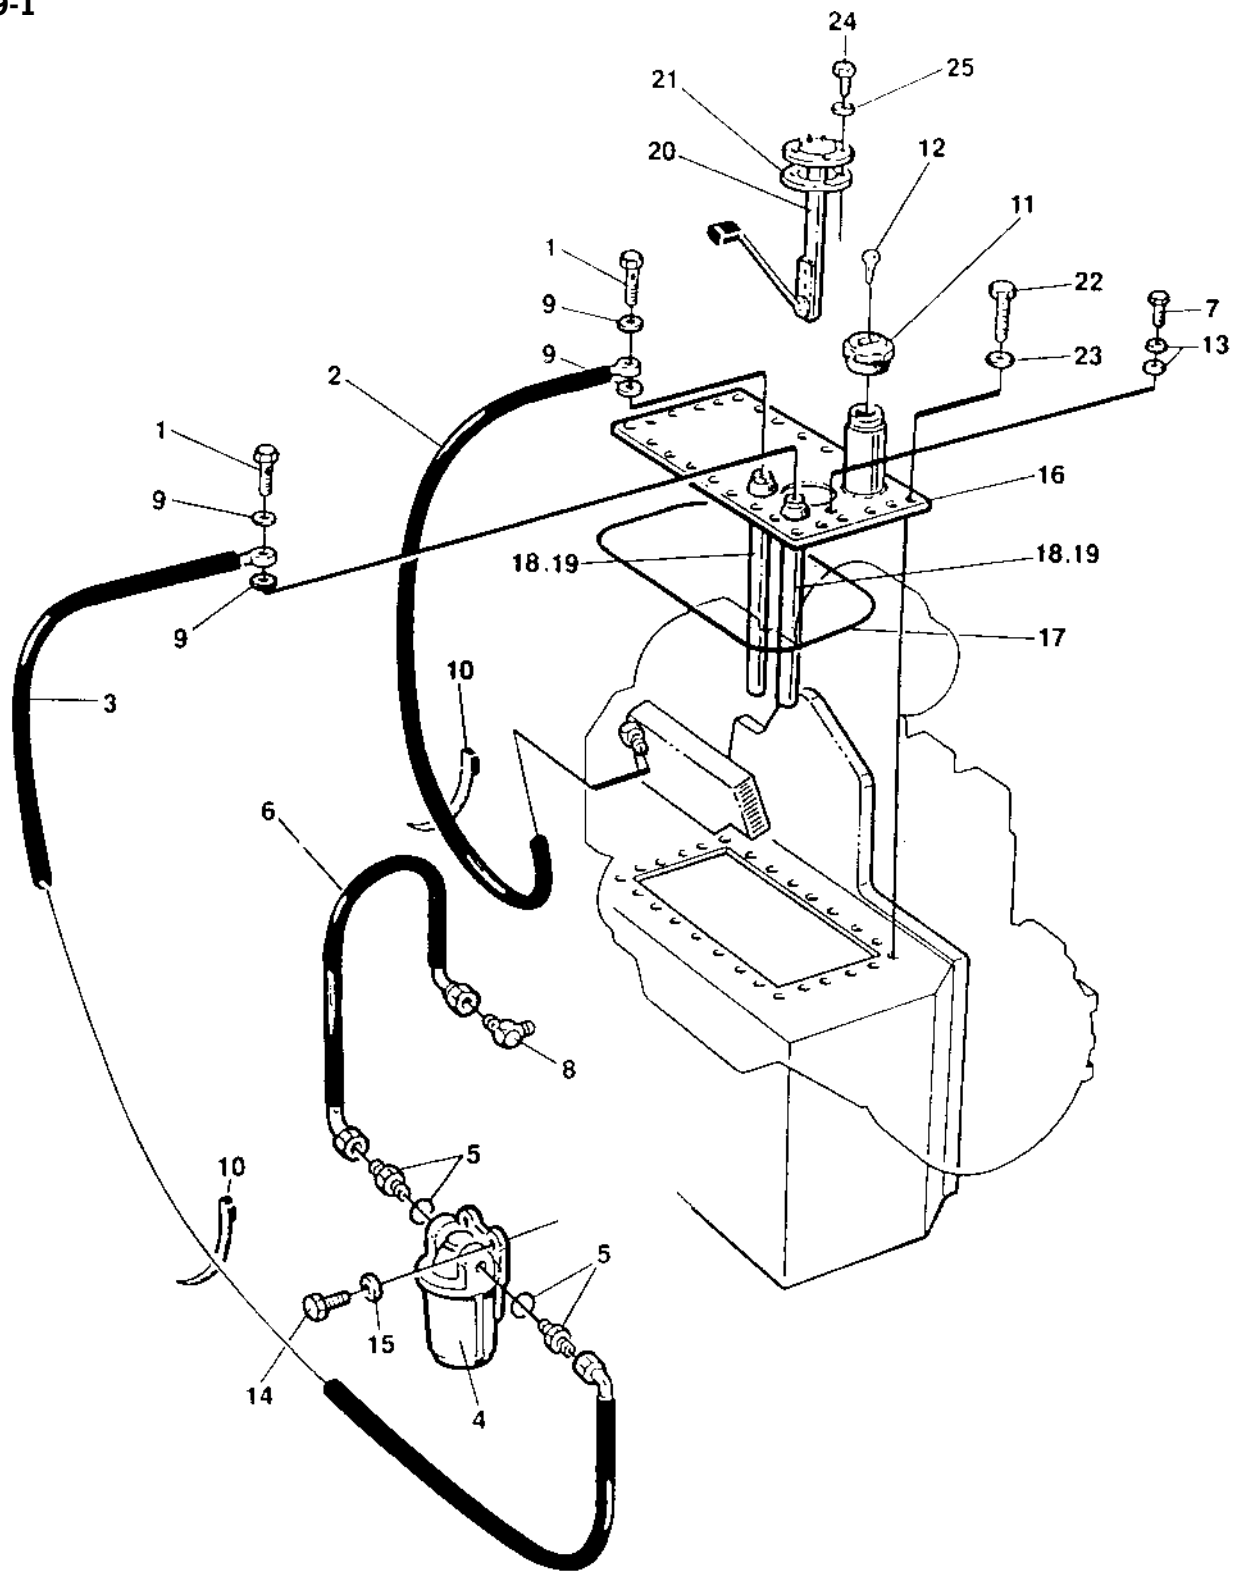

Fuel system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	330171		2	Hollow screw	
2	355444		1	Fuel hose	D
3	355445		1	Fuel hose	D
4	900247		1	Filter	A
5	900249		2	Adapter	
6	355446		1	Fuel hose	D
7	500099		1	Screw	
8	234619		1	Adapter Up to 60910667	
	234340		1	Elbow 90 From 60910668	
9	747282		4	Copper washer	
10	313068		N	Cable ties L=92 mm	
11	499097		1	Filler cap	D
12	928922		1	.Key Marked "510"	
13	600017		2	Washer	
14	500012		2	Screw	
15	615042		2	Conical spring washer	
16	356317		1	Cover	
17	356233		1	O-ring	
18	356321		2	Fuel pipe	
19	162017		2	Seal ring M30	D
20	850148		1	Fuel gauge	D
21	813315		1	Gasket	D
22	500053		26	Screw	
23	904556		26	Washer	
24	500004		5	Screw	
25	604002		5	Washer	

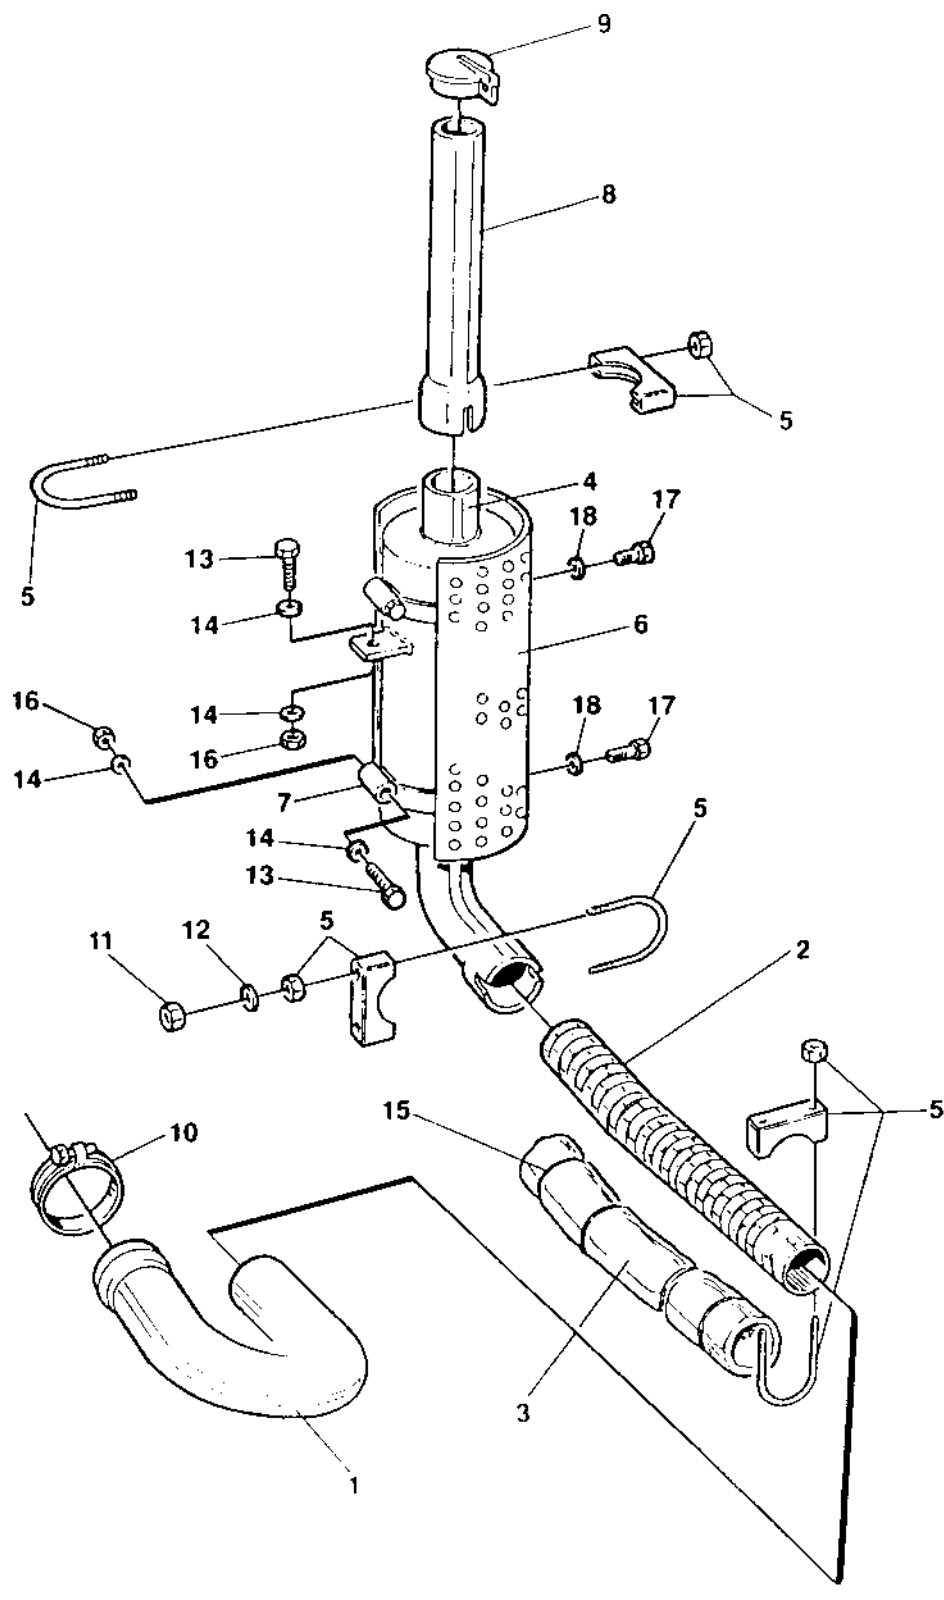


Exhaust system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	851695		1	Exhaust pipe	
2	851696		1	Exhaust pipe	D
3	349373		1	Absorbent	D
4	370850		1	Muffler	D
5	921170		3	Clamp	
6	900195		1	Thermal guard	D
7	900623		2	Mounting ring	
8	900196		1	Exhaust pipe	D
9	900201		1	Rain cap	D
10	900174		1	Clamp, v-band	
11	571003		2	Nut	
12	604006		2	Washer	
13	500030		3	Screw	
14	904230		6	Washer	
15	313033		3	Hose clamp	D
16	586018		3	Lock nut	
17	500012		6	Screw	
18	904228		6	Washer	

Hydraulic system

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Hydraulic diagram (Page 60)	
20				Propulsion system, pump Up to 60910731 (Page 62)	
				Propulsion system, pump From 60910732 (Page 66)	
25				Propulsion system, motors Up to 60910731 (Page 70)	
				Propulsion system, motors From 60910732 (Page 72)	
30	900847		1	Hydraulic pump Propulsion Up to 60910731 (Page 74)	
40	355483		1	Valve block (Page 78)	
50	355637		2	Hydraulic motor Propulsion drum Up to 60910600 (Page 80)	
	358986		2	Hydraulic motor Propulsion drum From 60910601 (Page 82)	
70				Vibration system, pump Up to 60910779 (Page 84)	
				Vibration system, pump From 60910780 (Page 86)	
75				Vibration system, motors (Page 88)	
80	801755		1	Hydraulic pump Vibration and steering Up to 60910779 (Page 90)	
90	335553		2	Hydraulic motor Vibration (Page 92)	C
100	801691		1	Vibration valve (Page 94)	
110				Vibration valve Control section (Page 96)	
120				Steering system (Page 98)	
130	480219		1	Steering valve (Page 100)	
140	347110		2	Hydraulic cylinder Up to 60910814 (Page 102)	
	375031		2	Hydraulic cylinder From 60910815 (Page 104)	C

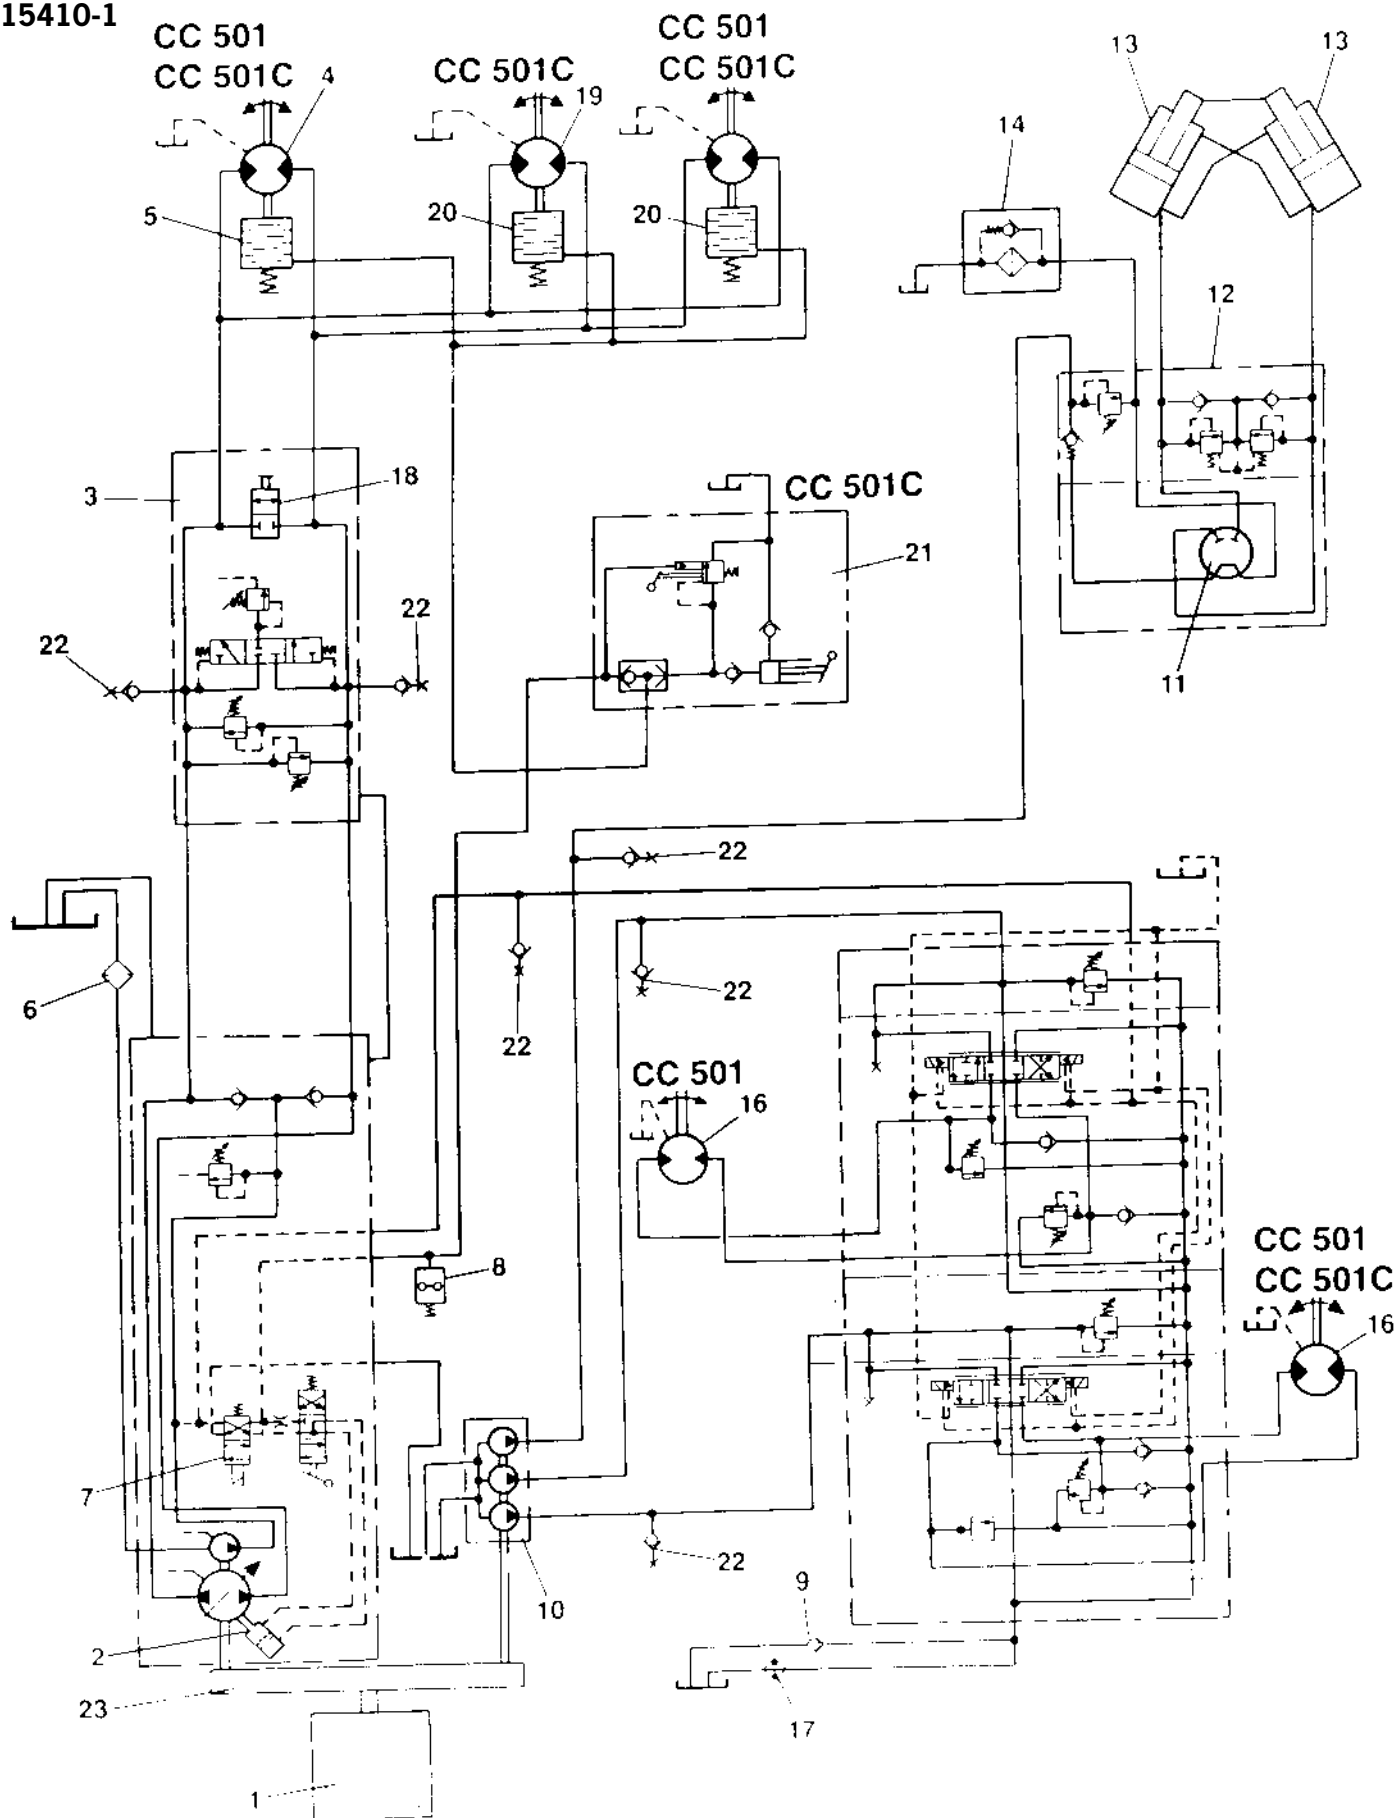


Hydraulic diagram

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Diesel engine	C
2			1	Propulsion pump	C
3			1	Valve block	C
4			1	Propulsion motor Front	C
5			1	Brake Front	C
6			1	Suction filter	C
7			1	Brake valve	C
8			1	Pressure switch	C
9			1	Check valve	C
10		A	1	Vibration pump	C
11			1	Steering valve	C
12			1	Valve block	C
13			2	Steering cylinder	C
14			1	Return filter	C
15			1	Vibration valve	C
16			2	Vibration motor	C
17			1	Oil cooler	C
18			1	Towing valve	C
19			1	Propulsion motor Rear	C
20			1	Brake Rear	C
21			1	Not used on this model	C
22			6	Measuring nipple	C
23			1	Gear box	C

A) Incl steering pump


17135

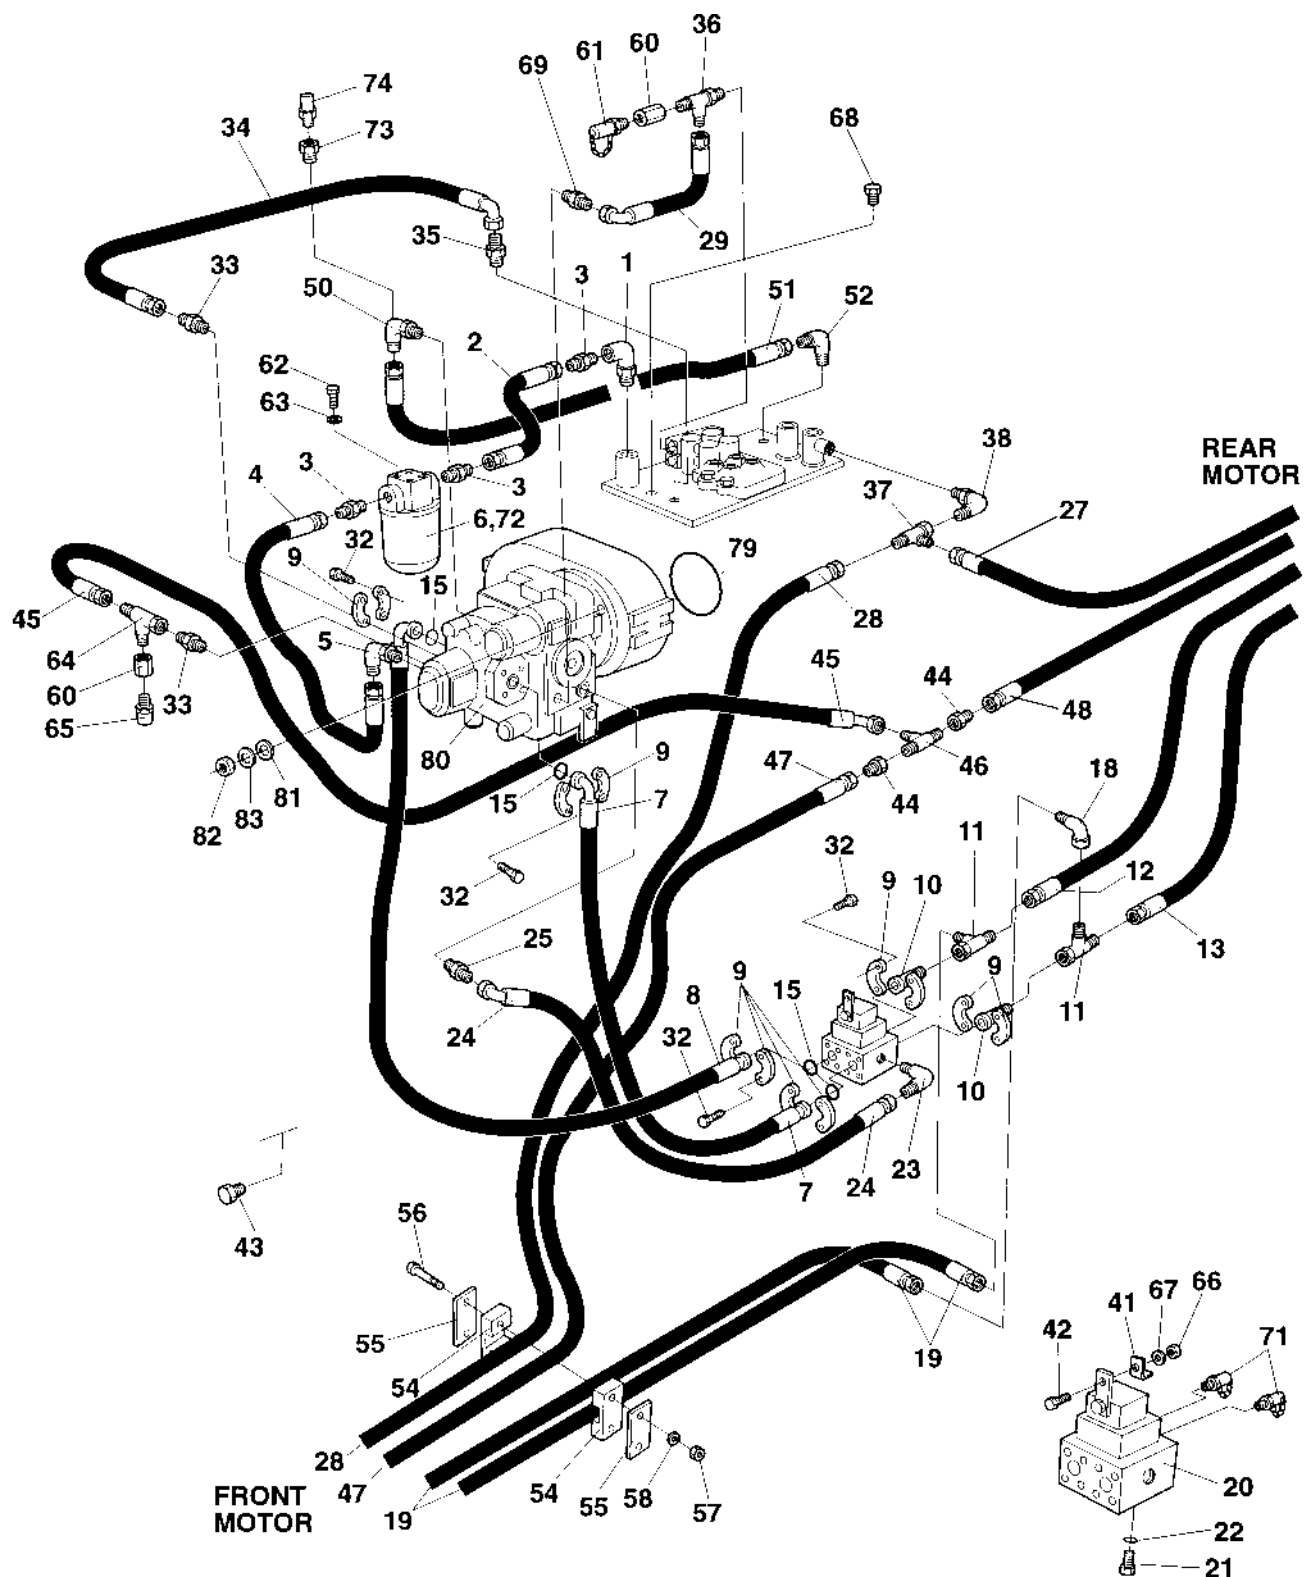

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	334598		1	Connector	
2	851622		1	Hydraulic hose	D
3	334164		3	Adapter	
4	851623		1	Hydraulic hose	D
5	925099		1	Connector	
6	337528		1	Hydraulic oil filter Up to 60910556	
	212108		1	.Filter element Up to 60910556	
	902547		1	Hydraulic oil filter From 60910557	
	902546		1	.Hydraulic oil filter From 60910557	A
	903005		1	..Gasket From 60910557	
7	851651		1	Hydraulic hose	D
8	851635		1	Hydraulic hose	D
9	232097		12	Flange half	D
10	900205		2	Adapter	
11	234243		2	Adapter	
12	482761		1	Hydraulic hose	
13	482760		1	Hydraulic hose	
15	813429		6	O-ring	
18	334155		1	Elbow 90	
19	482762		2	Hydraulic hose	
20	355483		1	Valve block (Page 78)	
21	502035		2	Screw	
22	604006		2	Washer	
23	334118		1	Elbow adapter	
24	851624		1	Hydraulic hose	D
25	234119		1	Adapter	
27	851625		1	Hydraulic hose	D
28	482769		1	Hydraulic hose	
29	482219		1	Hydraulic hose	
32	502036		24	Screw	
33	234233		2	Adapter	
34	482514		1	Hydraulic hose	D
35	334172		1	Adapter	
36	234746		1	Connector	
37	334135		1	T-connector	
38	334410		1	Adapter	
41	338895		1	Angle steel	
42	500075		1	Screw	
43	813479	C	1	Plug	
44	334523		2	Reducing	
45	482444		1	Hydraulic hose	
46	234804		1	Connector	
47	851640		1	Hydraulic hose	D
48	482789		1	Hydraulic hose	
50	815243		1	Elbow	
51	851642		1	Hydraulic hose	D
52	814251		1	Adapter	
54	343732		2	Hose clamp	
55	335914		1	Cover plate	
56	500077		2	Screw	
57	586018		2	Lock nut	
58	904230		2	Washer	
60	433830401		2	Connector	
61	910161		1	Measuring nipple	D
62	502286		2	Screw Up to 60910556	
	500021		2	Screw From 60910557	
63	615043		2	Conical spring washer	
64	334234		1	Tee-connector	
65	900934		1	Pressure sender	D
66	586002		1	Lock nut	
67	904228		1	Washer	
68	813423		1	Hexagon plug	
69	334232		1	Adapter	


C) At bottom of tank.

17135

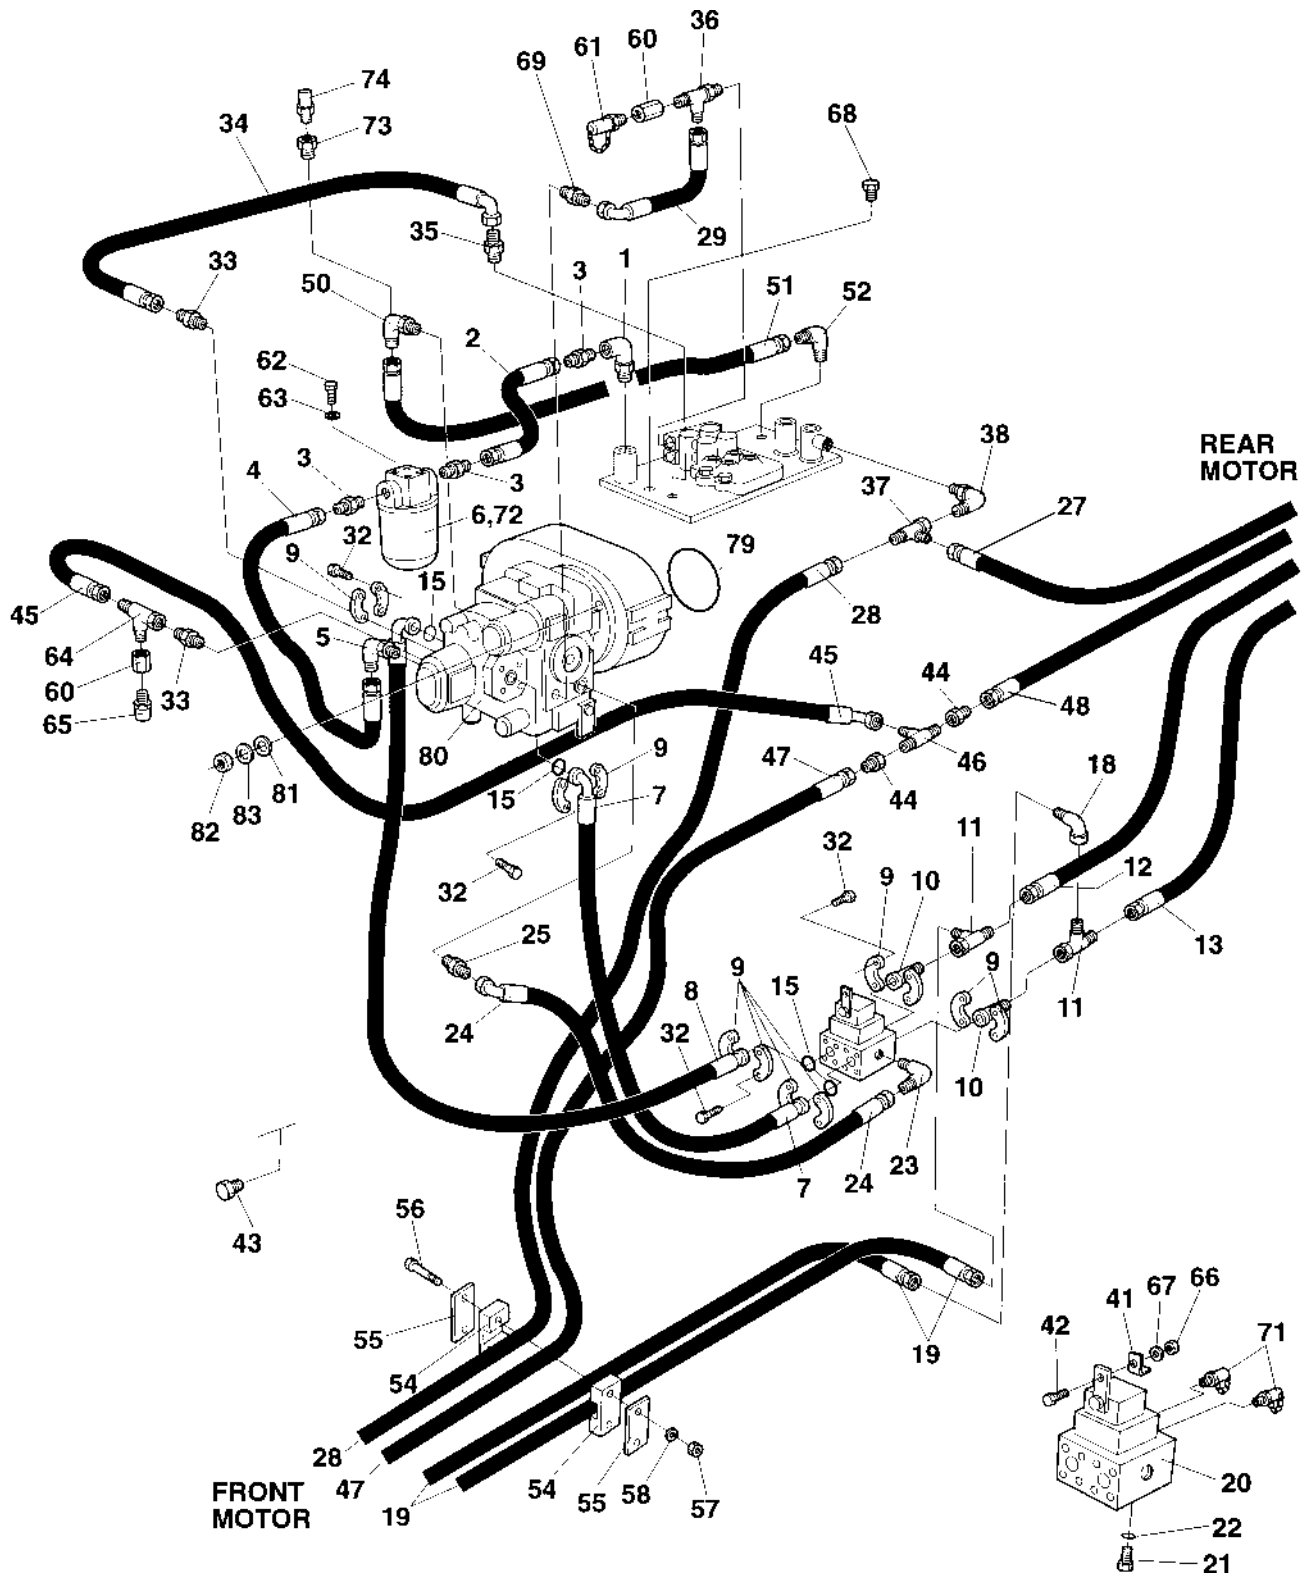

Ref. No.	Part No.	Rem.	Qty	Description	Code
71	910162		2	Measure nipple	D
72	232124		1	Plug Up to 60910556	
73	814060		1	Reducing	
74	989078		1	Temperature sender	D
79	480622		1	O-ring	D
80	900847		1	Hydraulic pump Propulsion (Page 74)	
81	603013		4	Washer	
82	571007		4	Nut	
83	604033		4	Washer	

17155

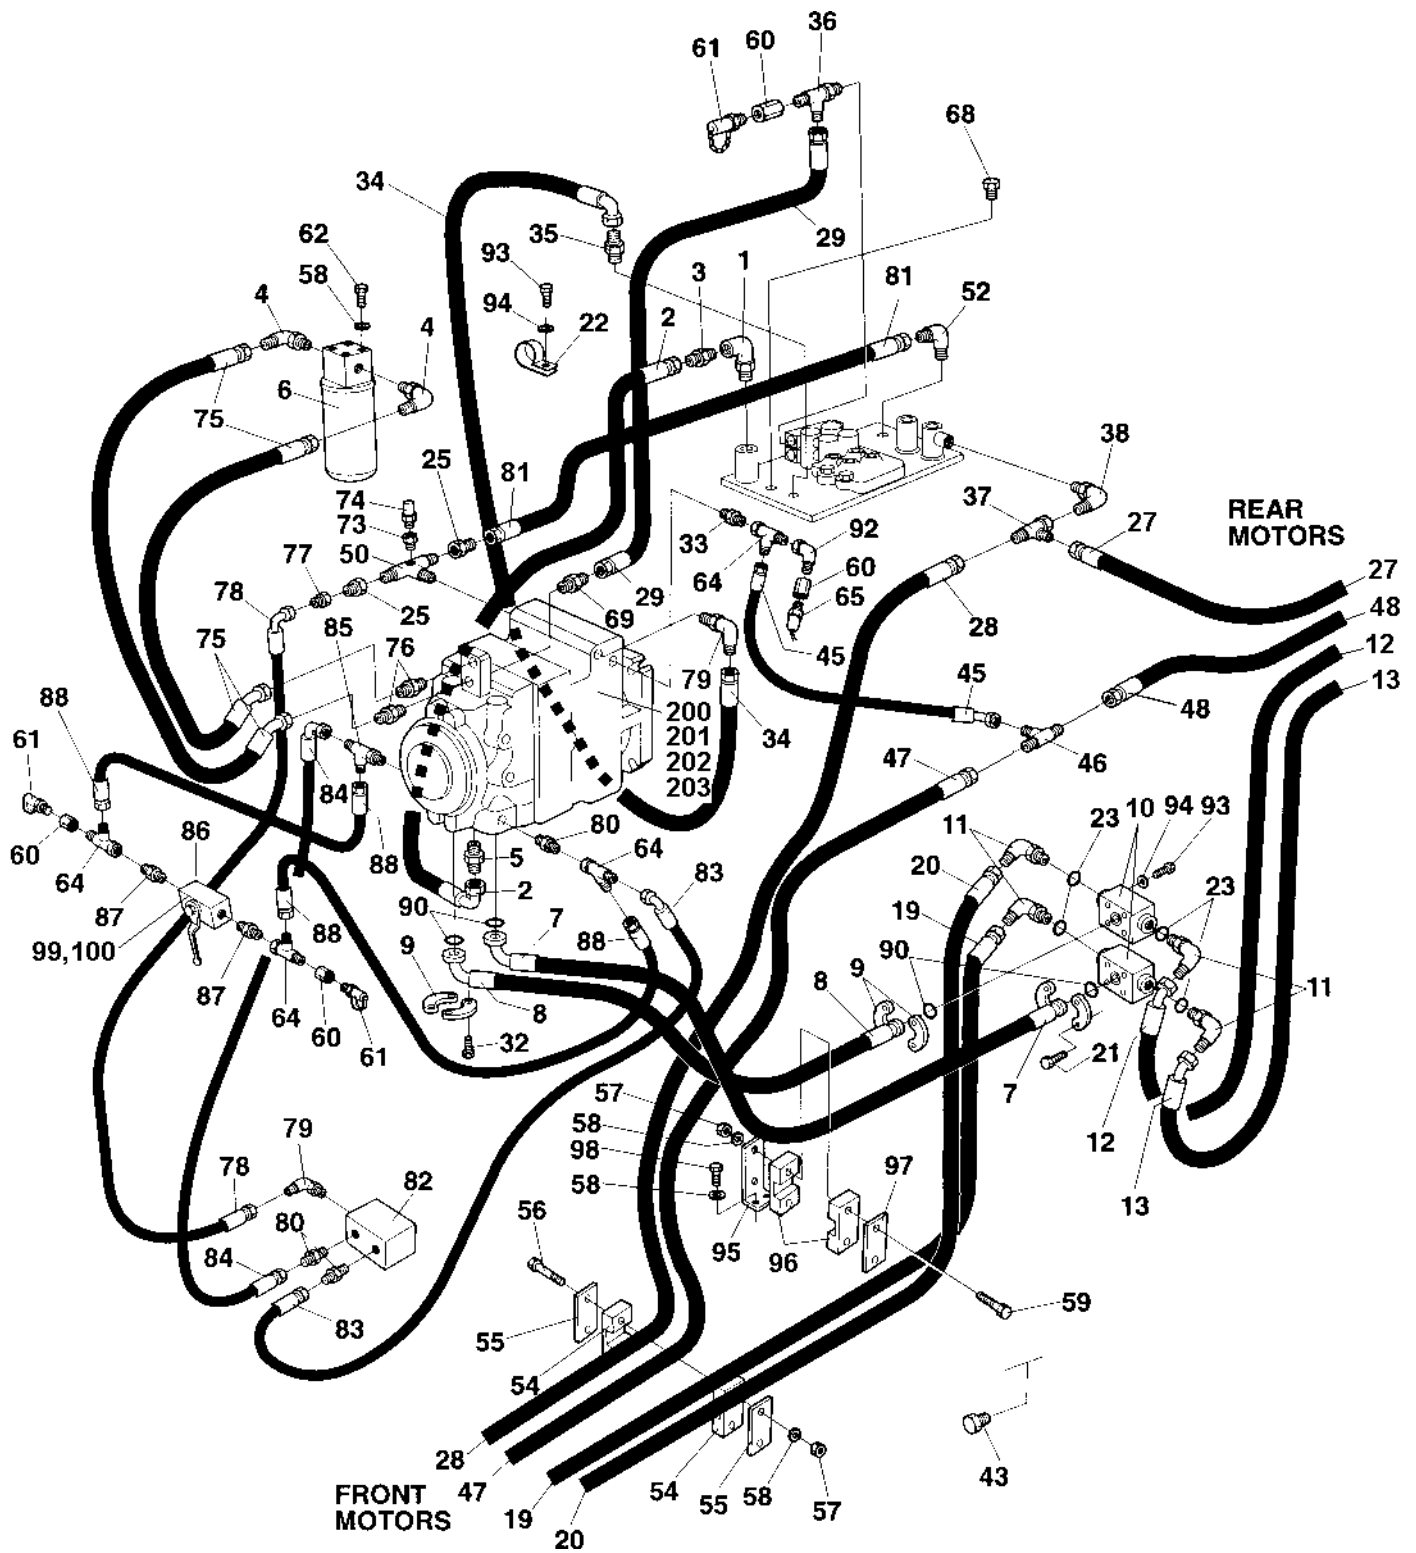


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	334598		1	Connector	
2	483265		1	Hydraulic hose	D
3	334159		1	Connector	
4	234810		2	Connector	
5	334169		1	Connector	
6			1	Hydraulic oil filter, cpl	
	359551		1	.Filter head	
	372229	A	1	.Filter element	A
	359552	B	1	Filter element	
7	483266		1	Hydraulic hose	D
8	483267		1	Hydraulic hose	D
9	900342		8	Split flange	
10	375035		2	Connection block	
11	904495		2	Connector	
12	483268		1	Hydraulic hose	
13	483269		1	Hydraulic hose	
19	483270		1	Hydraulic hose	
20	483271		1	Hydraulic hose	
21	904602		8	Screw	
22	921022		1	Hose clamp	
23	904538		4	O-ring	
25	334141		2	Adapter	
27	483086		1	Hydraulic hose	
28	482769		1	Hydraulic hose	
29	482285		1	Hydraulic hose	
32	502060		8	Screw	
33	234233		1	Adapter	
34	482509		1	Hydraulic hose	D
35	334172		1	Adapter	
36	234746		1	Connector	
37	334135		1	T-connector	
38	334410		1	Adapter	
43	813479	C	1	Plug	
45	483272		1	Hydraulic hose	
46	904485		1	Connector	
47	483273		1	Hydraulic hose	D
48	483274		1	Hydraulic hose	
50	375526		1	Connector	
52	814251		1	Adapter	
54	343732		2	Hose clamp	
55	335914		1	Cover plate	
56	500077		2	Screw	
57	586018		4	Lock nut	
58	904230		10	Washer	
59	500192		2	Screw	
60	433830401		4	Connector	
61	910161		3	Measuring nipple	D
62	500028		2	Screw	
64	334234		3	Tee-connector	
65	900934		1	Pressure sender	D
68	813423		1	Hexagon plug	
69	234233		1	Adapter	
73	814060		1	Reducing	
74	989078		1	Temperature sender	D
75	482354		2	Hydraulic hose	
76	334158		2	Adapter	
77	929122		1	Reducing	
78	482993		1	Hydraulic hose	
79	334389		1	Elbow 90, O-ring	
80	234233		3	Adapter	
81	483275		1	Hydraulic hose	

A) Replacement


B) Cleaning

C) At bottom of tank.

17155

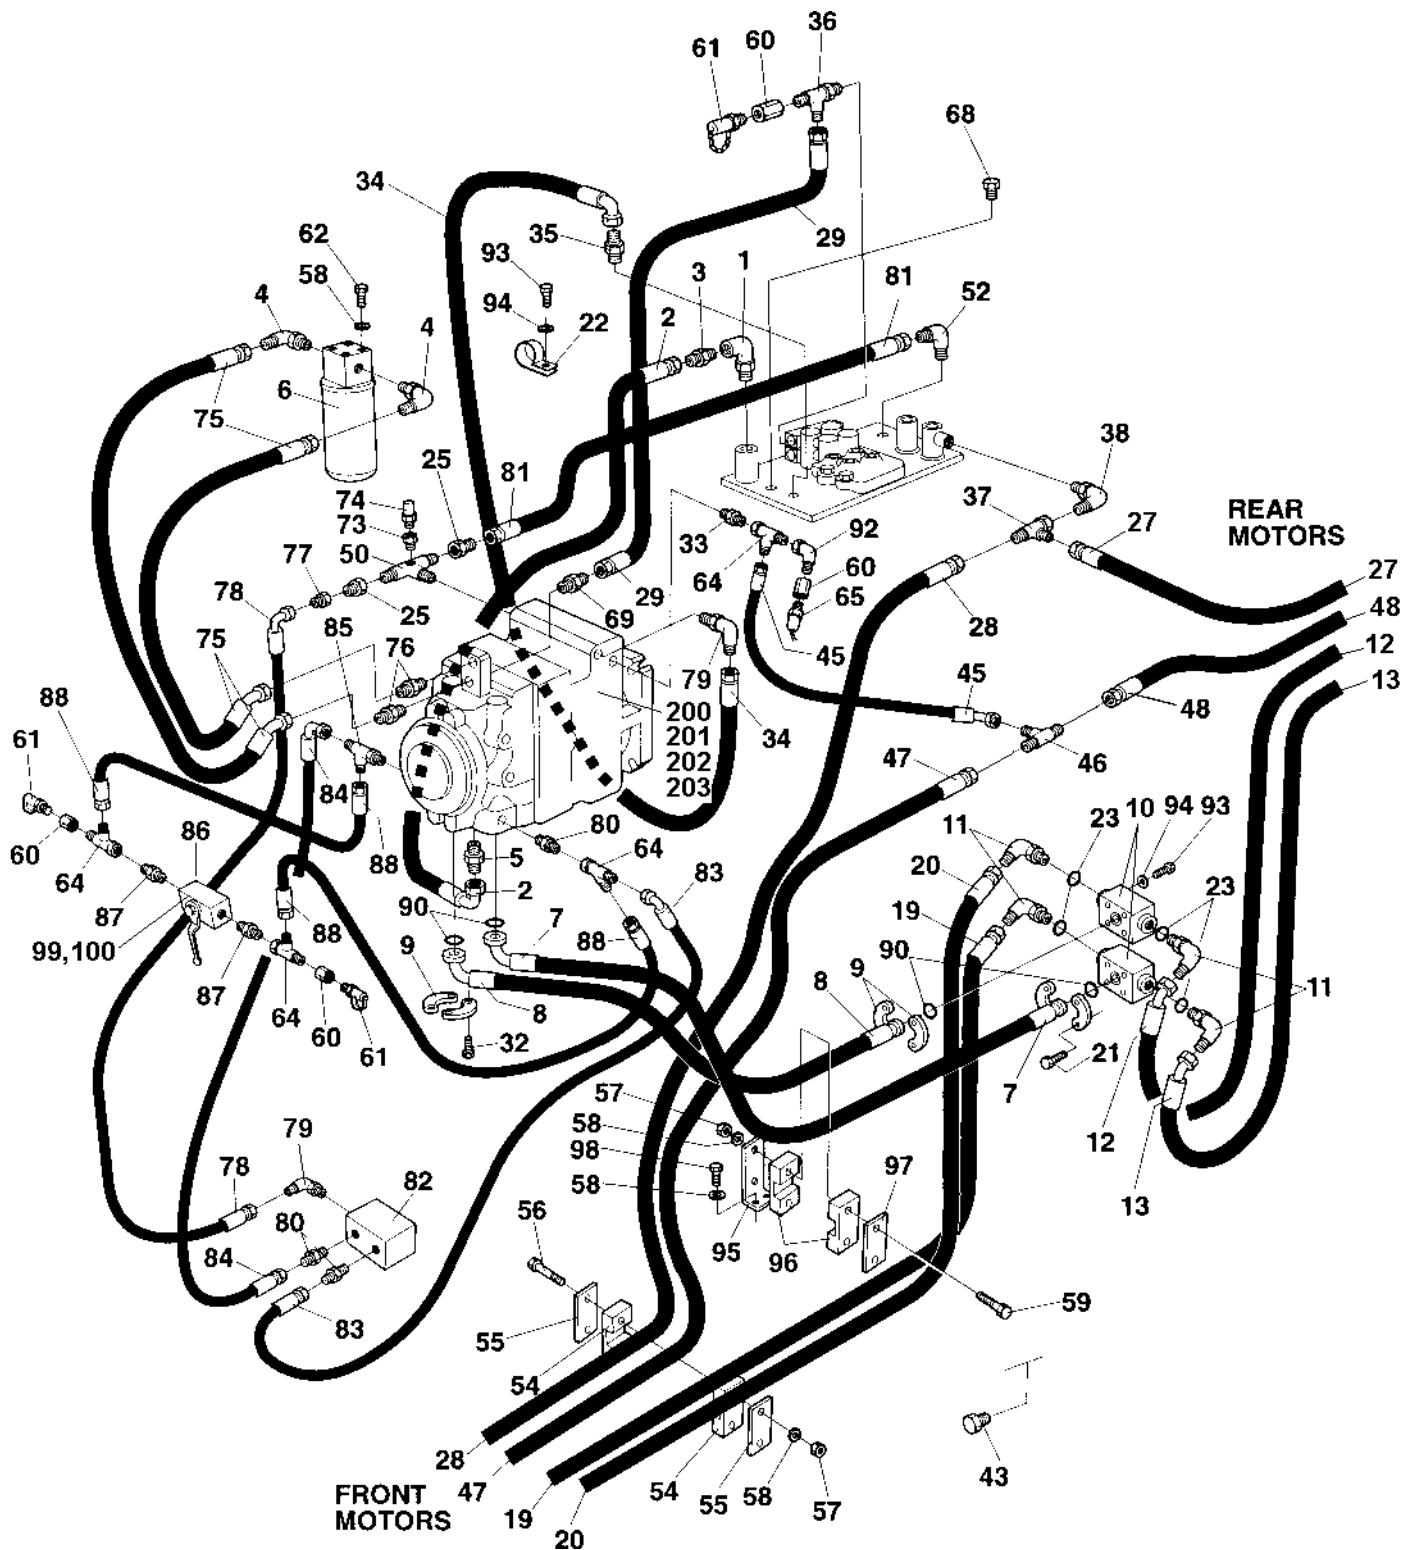


Ref. No.	Part No.	Rem.	Qty	Description	Code
82	370049		1	Flushing valve	
83	483276		1	Hydraulic hose	
84	483277		1	Hydraulic hose	
85	234746		1	Connector	
86	344138		1	Ball valve	
87	234840		2	Connector	
88	483278		2	Hydraulic hose	
90	904171		4	O-ring	
92	334524		1	Elbow 90	
93	500021		5	Screw	
94	904229		5	Washer	
95	375482		1	Bracket	
96	373181		2	Hose clamp	
97	373180		1	Bracket	
98	500030		2	Screw	
99	500006		2	Screw	
100	904281		2	Washer	
200	374736		1	Hydraulic pump Propulsion	
201	603013		4	Washer	
202	571007		4	Nut	
203	604033		4	Washer	

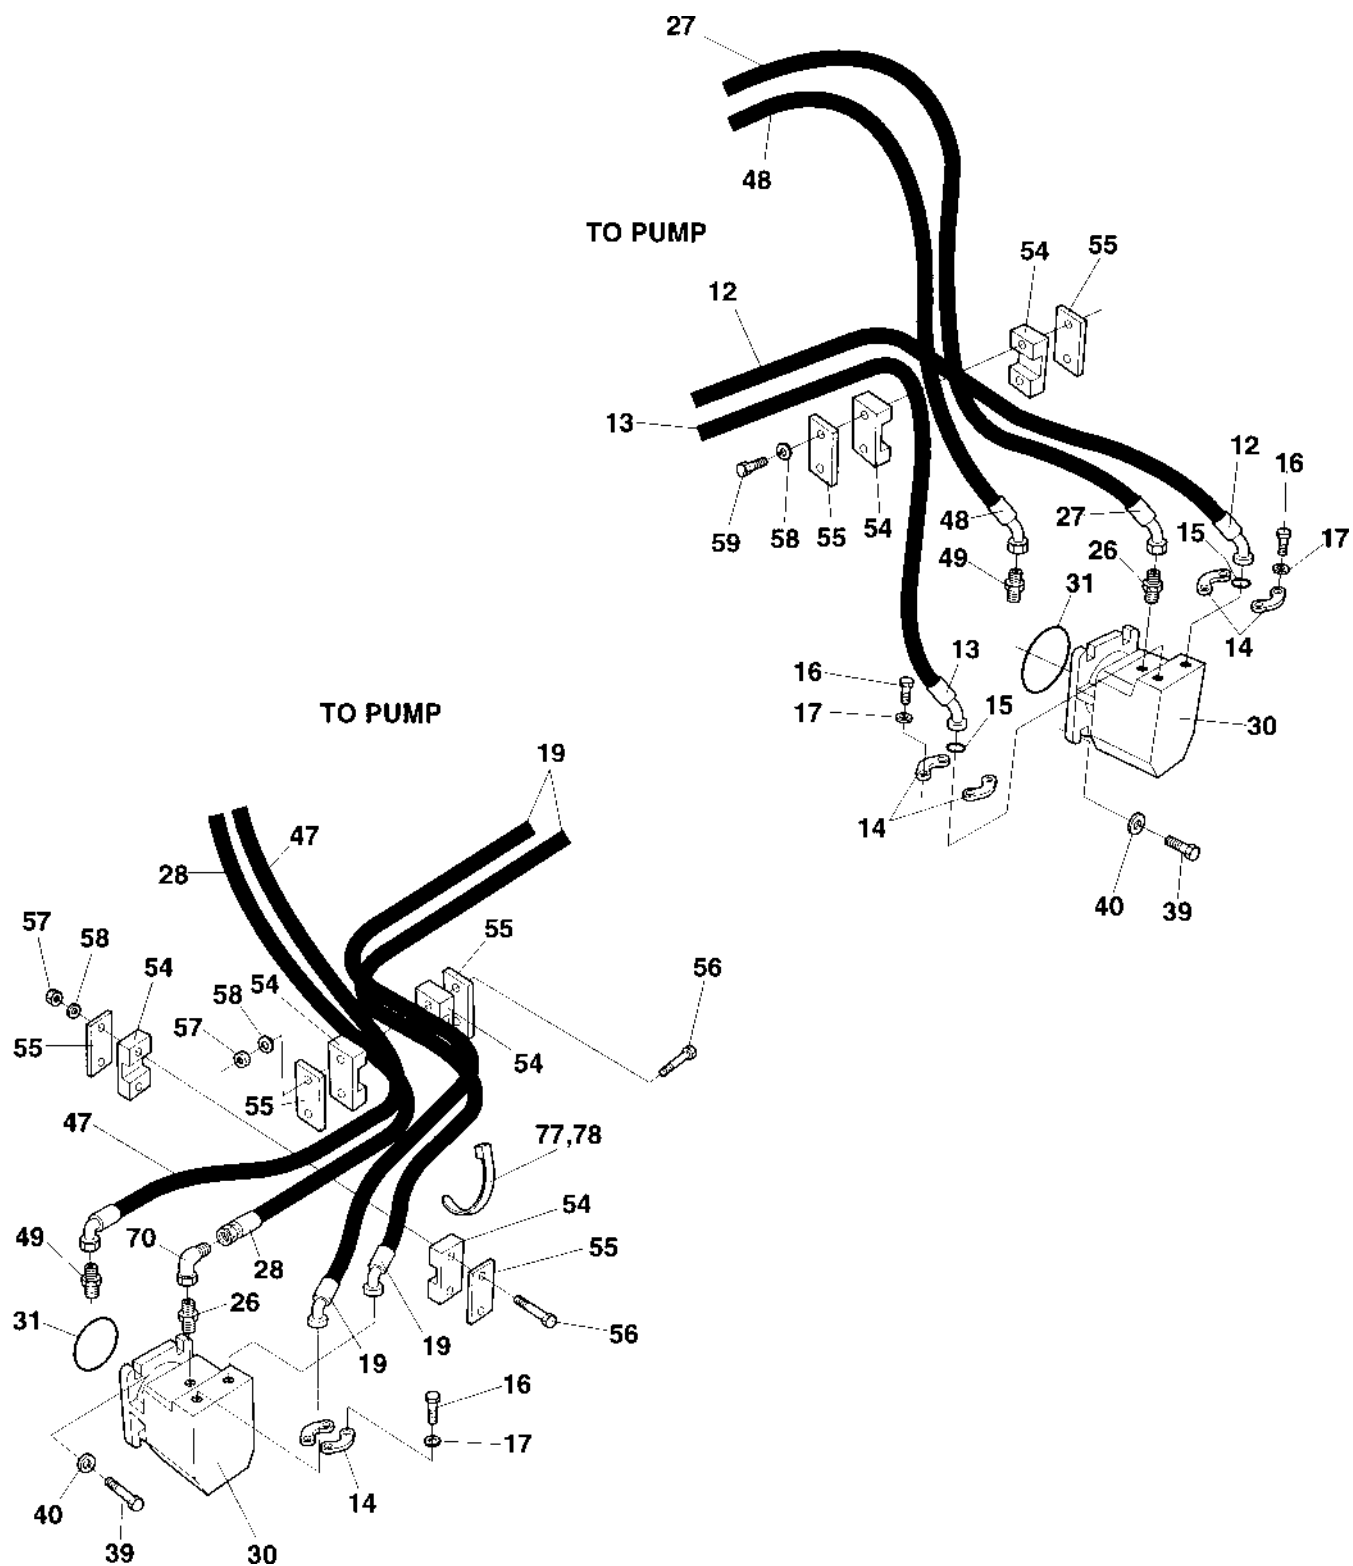

Propulsion system, motors

Ref. No.	Part No.	Rem.	Qty	Description	Code
12		1	1	Hydraulic hose	
13		1	1	Hydraulic hose	
14	923384		8	Flange half	
15	813429		4	O-ring	
16	502113		16	Screw	
17	604008		16	Washer	
19		1	2	Hydraulic hose	
26	334134		2	Connector	
27		1	1	Hydraulic hose	
28		1	1	Hydraulic hose	
30	355637		2	Hydraulic motor Propulsion drum Up to 60910600 (Page 80)	
	358986		2	Hydraulic motor Propulsion drum From 60910601 (Page 82)	
31	160132		2	O-ring	D
39	502058		8	Screw	
40	615045		16	Conical spring washer	
47		1	1	Hydraulic hose	
48		1	1	Hydraulic hose	
49	334143		2	Adapter	
54	343732		6	Hose clamp	
55	335914		3	Cover plate	
56	500077		4	Screw	
57	586018		4	Lock nut	
58	904230		6	Washer	
59	500192		2	Screw	
70	234662		1	Elbow 45	
77	313041		N	Cable ties L=186 mm	
78	313102		N	Cable ties L=388 mm	


1) See section " Hydraulic system, pump ".

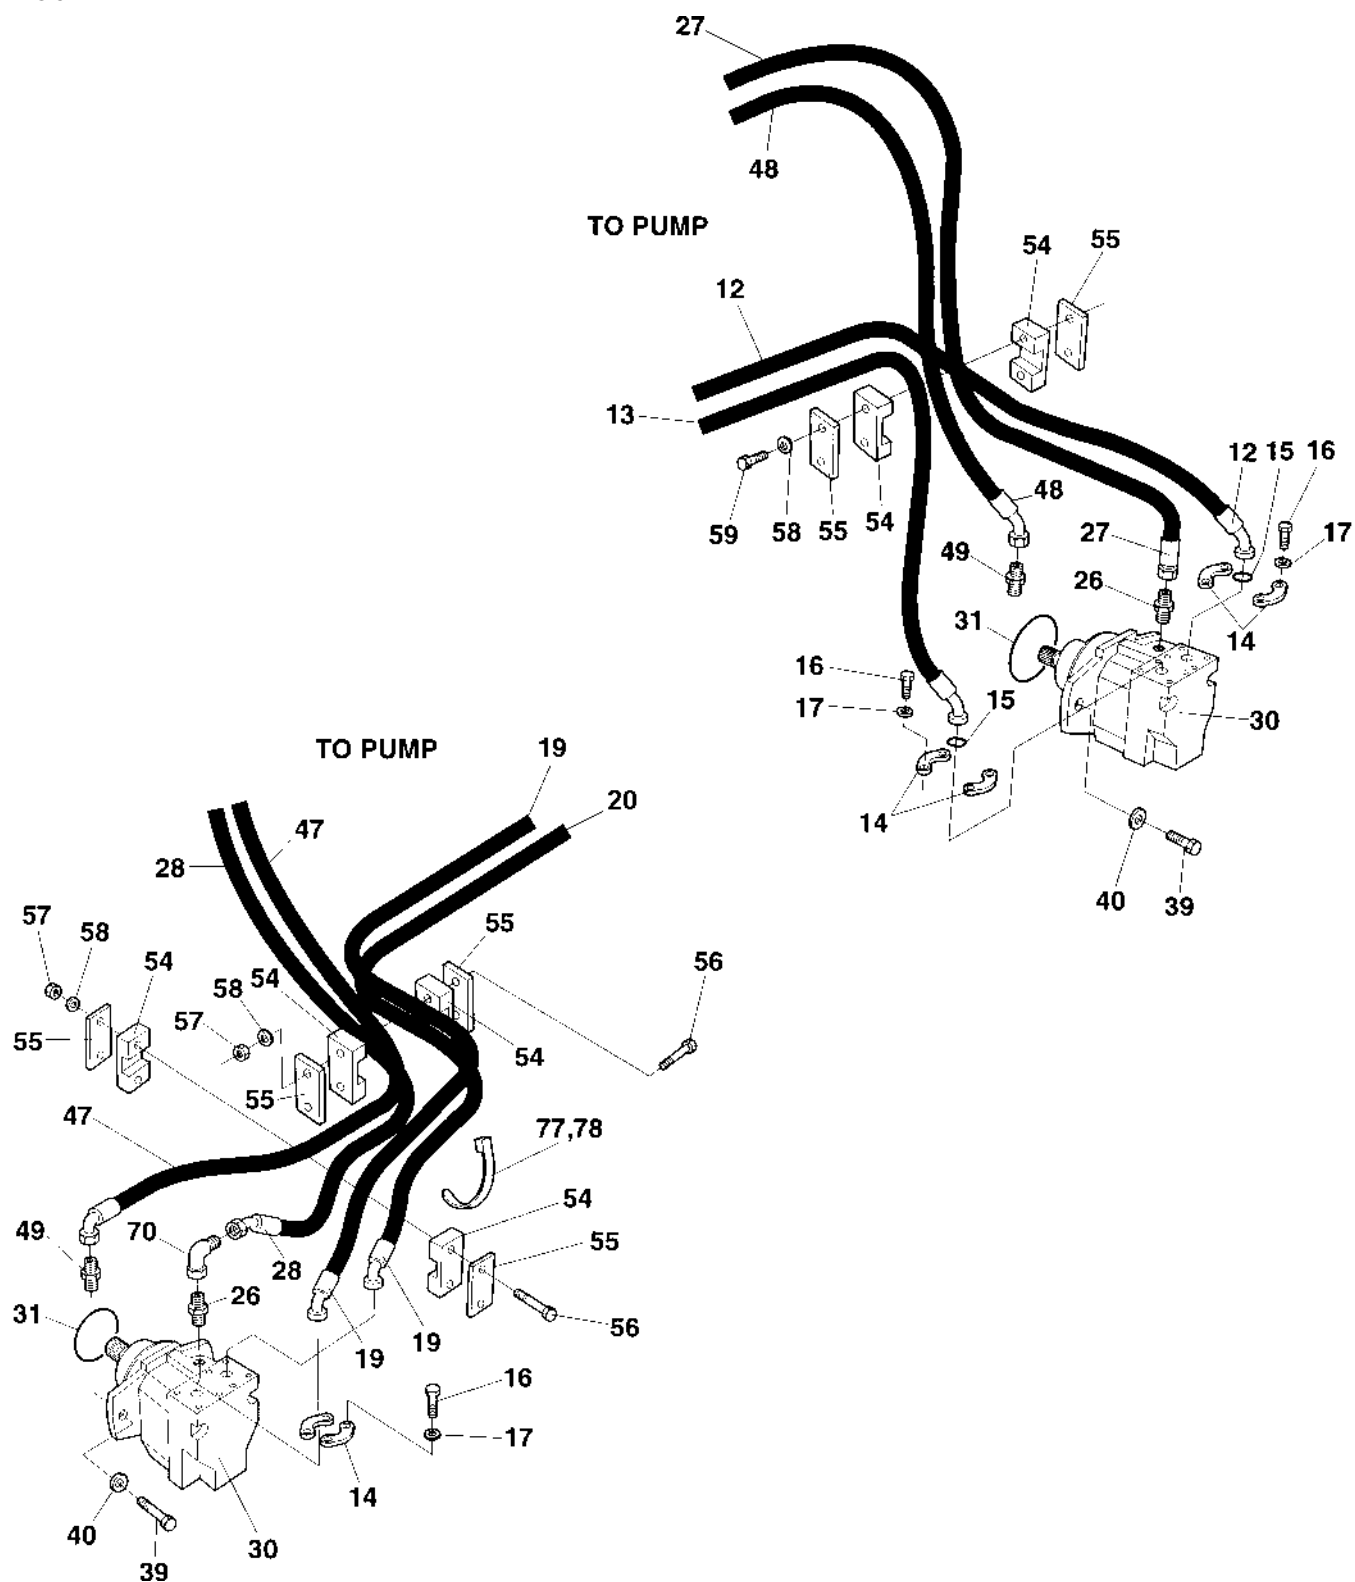

Propulsion system, motors

Ref. No.	Part No.	Rem.	Qty	Description	Code
12		1	1	Hydraulic hose	
13		1	1	Hydraulic hose	
14	923384		8	Flange half	
15	904005		4	O-ring	
16	502132		16	Screw	
17	904638		16	Washer	D
19		1	1	Hydraulic hose	D
20		1	1	Hydraulic hose	D
26	334134		2	Connector	
27		1	1	Hydraulic hose	
28		1	1	Hydraulic hose	
30	372988		2	Hydraulic motor Propulsion drum	
31	904058		2	O-ring	
39	500101		4	Screw	
40	903290		4	Washer	
47		1	1	Hydraulic hose	
48		1	1	Hydraulic hose	
49	925723		2	Connector	
54	343732		6	Hose clamp	
55	335914		3	Cover plate	
56	500077		4	Screw	
57	586018		4	Lock nut	
58	904230		6	Washer	
59	500192		2	Screw	
70	234662		1	Elbow 45	
77	313041		N	Cable ties L=186 mm	
78	313102		N	Cable ties L=388 mm	


1) See section " Hydraulic system, pump ".

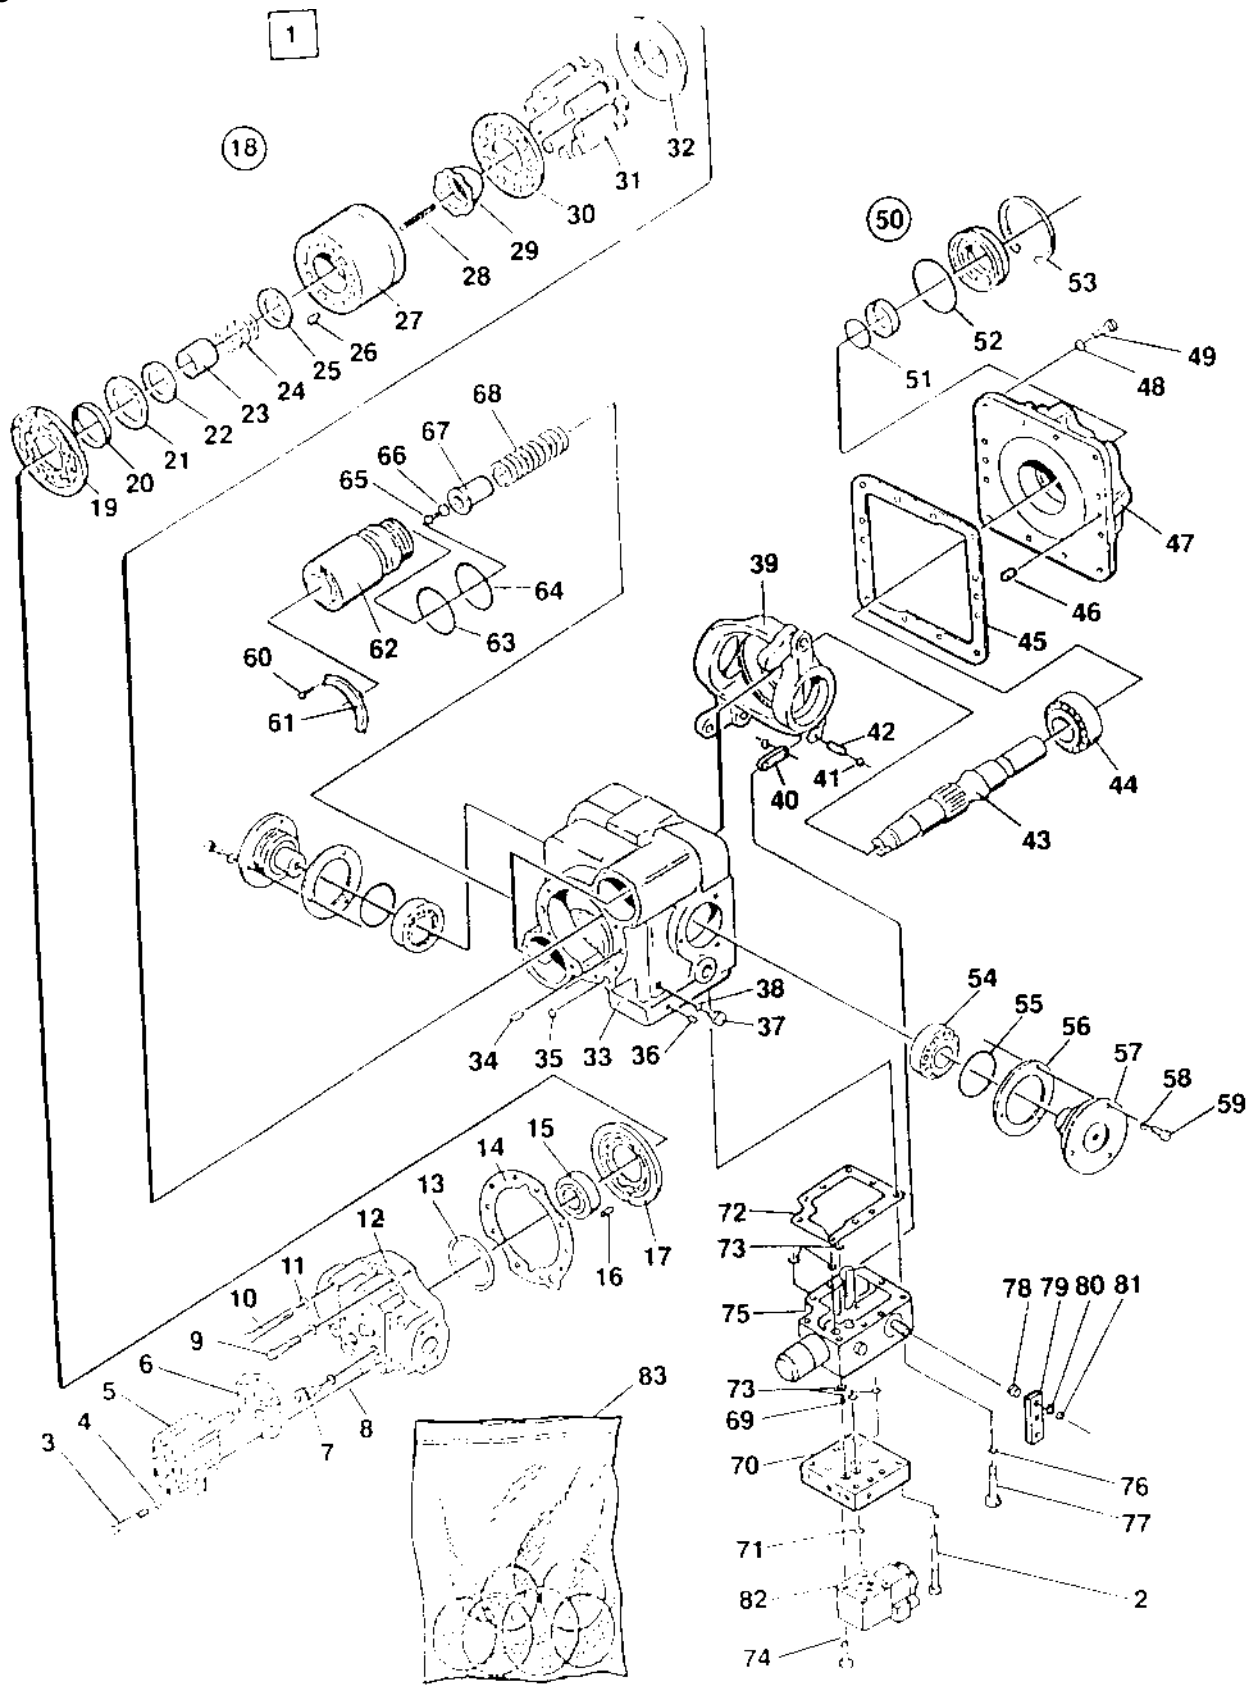

900847 Hydraulic pump Propulsion


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic pump Propulsion	
2	902006		6	.Screw	
3	480639		4	.Screw	
4	813846		4	.Washer	
5	902007		1	.Charge pump	C
6	902008	3	1	.Gasket	D
7	902009		2	.Check valve	D
8			1	..O-ring	D
9	480642		6	.Screw	
10	480643		2	.Screw	
11	480644		7	.Washer	
12	902010		1	.Cover	
13	480669		N	.Shim	
14		3	1	.Gasket	
15	480676		1	.Bearing	D
16	922783		1	.Pin	
17	480671		1	.Valve plate	D
18	902011		1	.Cylinder block kit	
19	902012		1	..Bearing plate	D
20			1	..Guide ring	D
21			1	..Retainer ring	D
22			1	..Spring holder	D
23			1	..Spring guide	D
24			1	..Spring	D
25			1	..Spring holder	D
26			1	..Pin	D
27			1	..Cylinder block	D
28			1	..Spring	D
29			1	..Guide sleeve	D
30			1	..Piston retainer	D
31			9	..Piston	D
32	480660		1	..Pressure plate	
33	480662		1	.Pump housing	
34	813822		2	.Pin	
35		3	1	.O-ring	
36	813825		1	.Plug	
37	480354		1	.Plug and O-ring	
38		3	1	..O-ring	
39	902014		1	.Swash plate	
40	480679		1	.Link	
41	480288		2	.Retainer ring	
42	813823		1	.Stud	
43	480667		1	.Drive shaft	D
44	480675		1	.Bearing	D
45		3	1	.Gasket	D
46	813822		2	.Pin	
47	480653		1	.Cover	
48	480644		13	.Washer	
49	480641		12	.Screw	
50	911665		1	.Seal kit	D
51		3	2	..O-ring	D
52		3	1	..O-ring	D
53	480356		1	..Retainer ring	
54	480677		2	.Bearing	D
55		3	2	.O-ring	D
56	480651		N	.Gasket	D
57	480650		2	.Bearing support	
58	480644		6	.Washer	
59	480640		6	.Screw	
60	480289		4	.Screw	
61	480655		2	.Sleeve retainer	
62	902015		2	.Servo cylinder	
63		3	2	.O-ring	

3) Included in kit, item 83

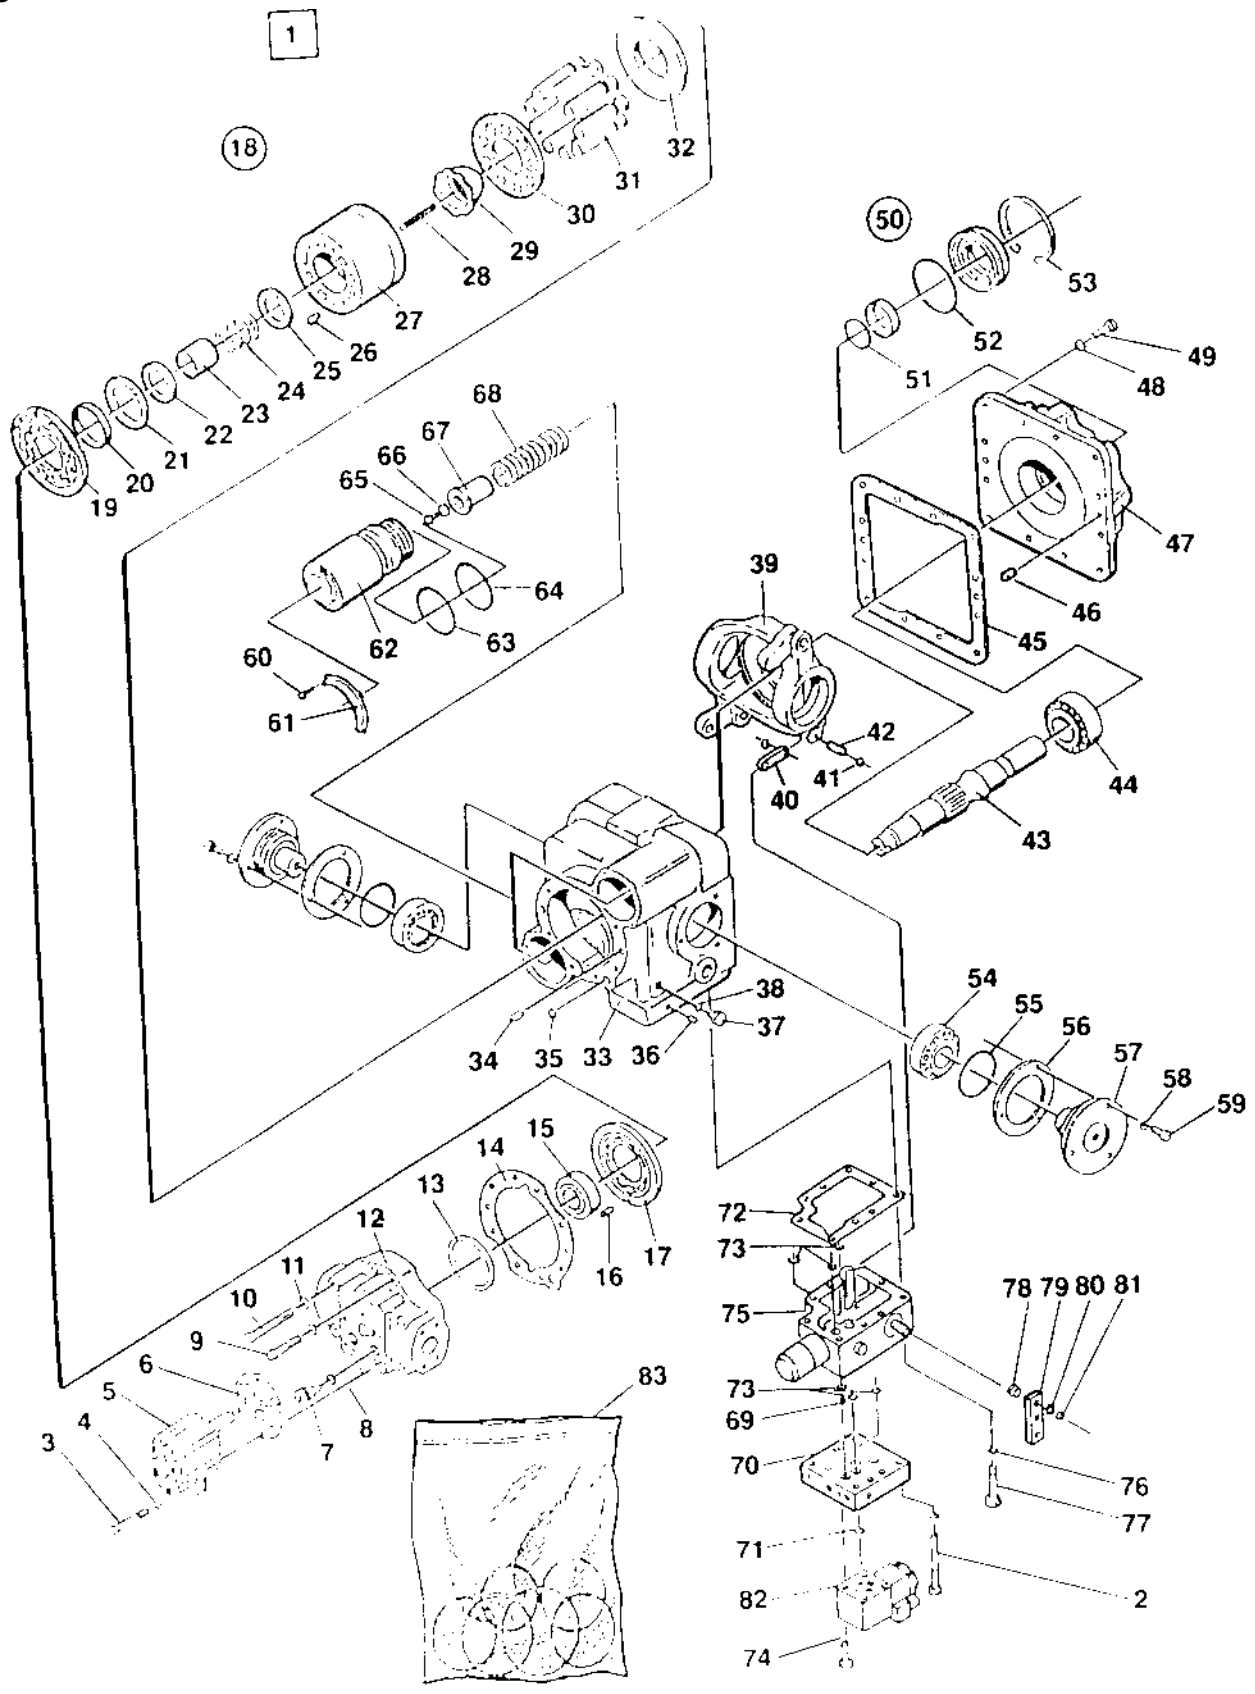


900847 Hydraulic pump Propulsion

Ref. No.	Part No.	Rem.	Qty	Description	Code
64		3	2	.O-ring	
65	902016		2	.Screw	
66	902017		2	.Washer	
67	480658		2	.Spring guide	
68	902018		2	.Spring	
69	813628		1	.Orifice	D
70	902020		1	.Connection plate	
71	927511		4	.O-ring	
72	813634	3	1	.Gasket	
73	813613	3	6	.O-ring	
74	927510		4	.Screw	
75	902021		1	.Servo cpl	
76	813844		9	.Washer	
77	813833		3	.Screw	
78	813888		1	.Spacer	
79			1	.Control lever	
80	813847		1	.Washer	
81	813816		1	.Lock nut	
82	922305		1	.Brake valve	
83	902023		1	Seal kit	D
3) Included in kit, item 83					

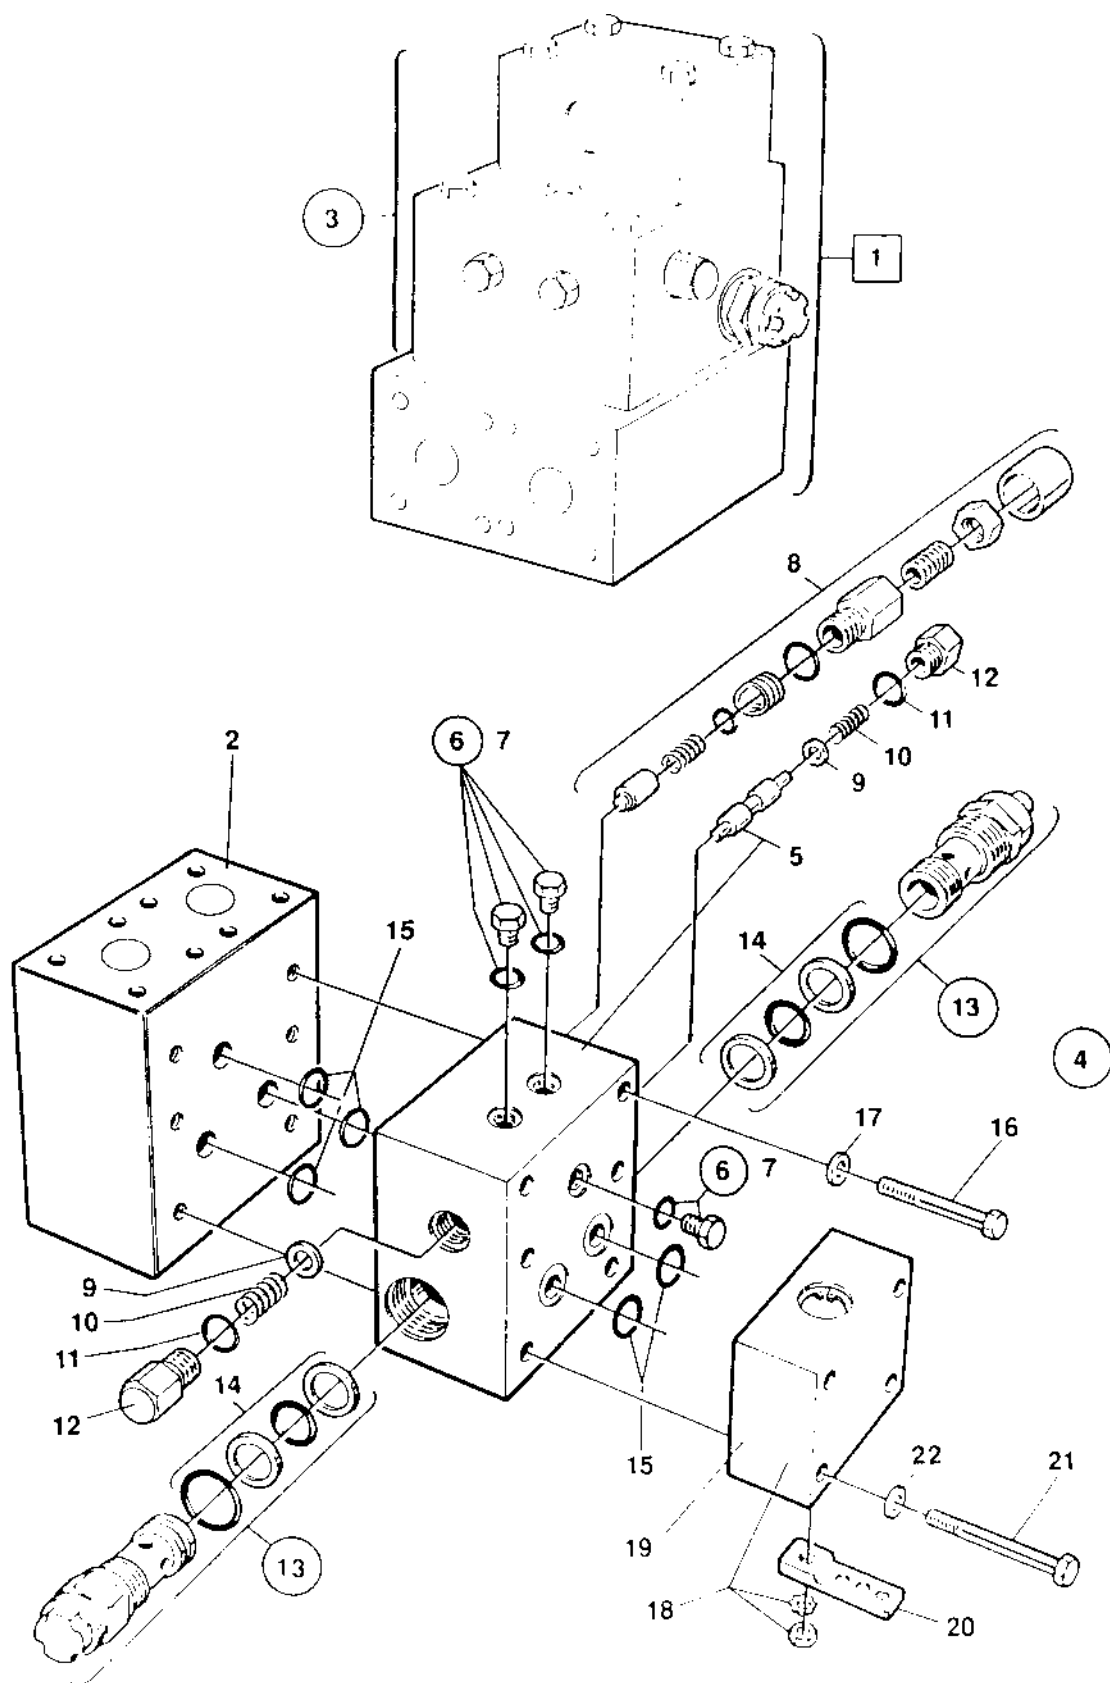


355483 Valve block

Ref. No.	Part No.	Rem.	Qty Description	Code
1			1 Valve block, cpl	D
2	842184		1 .Mounting block	
3	355484		1 .Valve block	D
4	233138		1 ..Valve	D
5			1 ...Housing with shuttle	D
6	480354		3 ...Plug and O-ring	
7	813617		1O-ring	D
8	212162		1 ...Ch. pressure valve	D
9	480367		2 ...Washer	
10	480407		2 ...Spring	
11	813618		2 ...O-ring	D
12	480408		2 ...Plug	
13	813627		2 ...Overflow valve cpl	
14	212163		1Seal kit	D
15	481228		2 ...Seal kit	
16	813836		2 ...Screw	
17	813845		2 ...Washer	
18	333083		1 ..By-pass valve cpl	
19			1 ...Valve	
20	813887		1 ...Control lever	
21	921371		4 ...Screw	
22	813845		4 ...Washer	

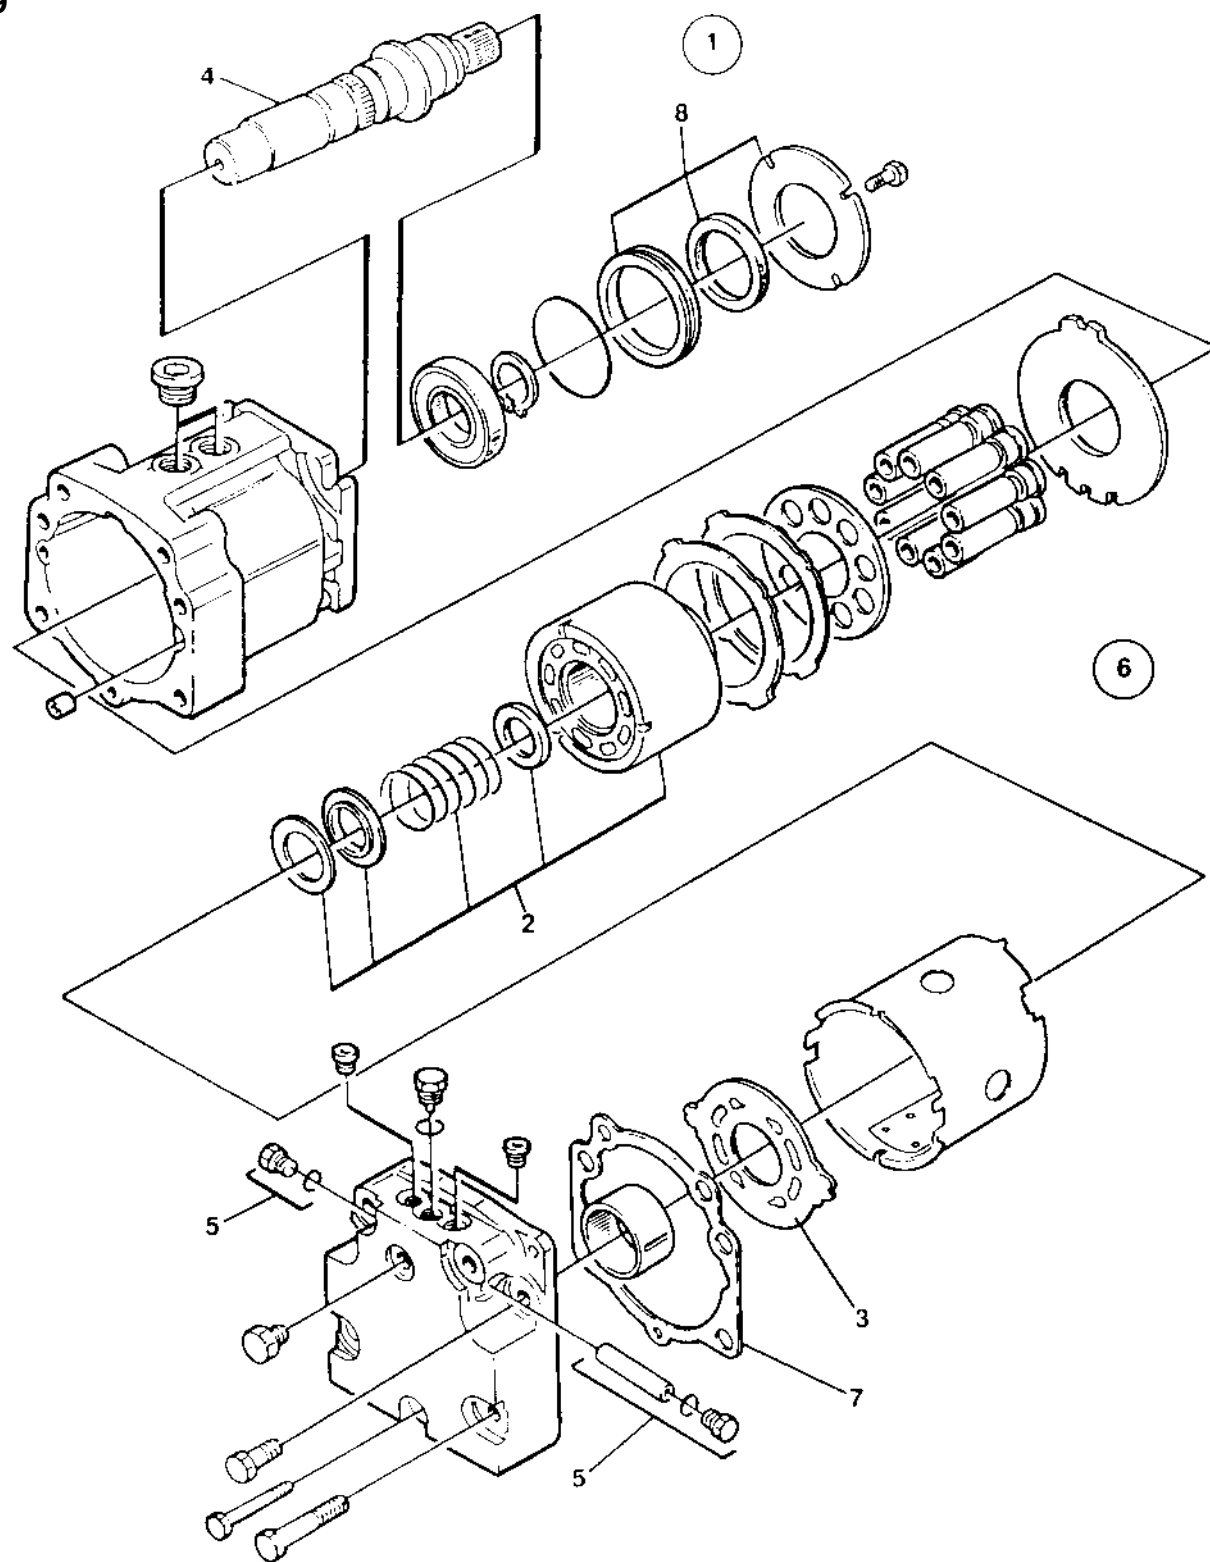


355637 Hydraulic motor Propulsion drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor Propulsion drum	
2	212353		1	.Rotating group, cpl	D
3	212354		1	..Bearing plate	D
4	212355		1	.Shaft	D
5	212356		1	.Valve, cpl	D
6	212357		1	.Seal kit	D
7	212358		1	..Gasket	D
8	212359		1	..Shaft seal	D

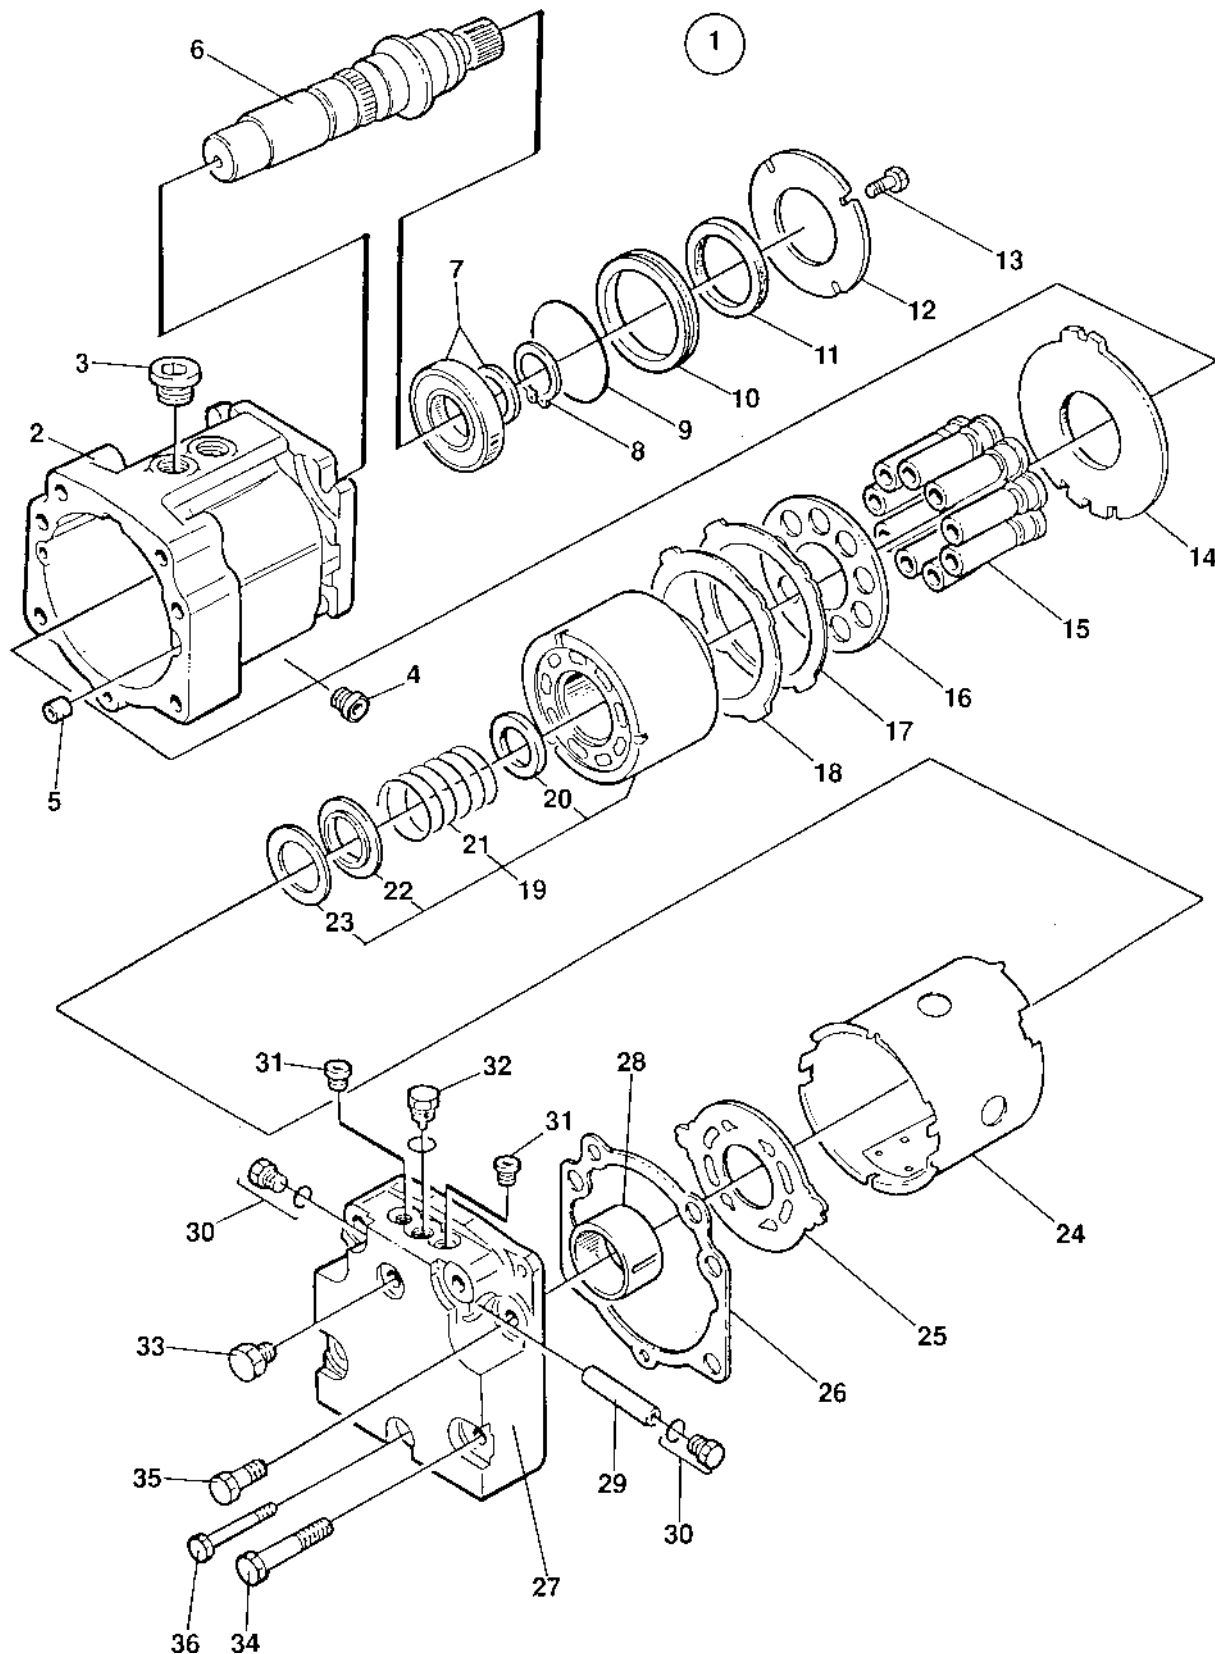


358986 Hydraulic motor Propulsion drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor	D
2	909242		1	.Housing	
3	909243		2	.Plug	
4	909244		1	.Plug	
5	813822		2	.Pin	
6	212355		1	.Shaft	D
7	901725		1	.Bearing	D
8	901727		1	.Snap ring	D
9	909257		1	.O-ring	
10	909256		1	.Seal carrier	
11	212359		1	.Shaft seal	D
12	901728		1	.Carrier seal	D
13	908773		3	.Screw	
14	909249		1	.Thrust plate	
15	909239		9	.Piston, cpl	
16	909246		1	.Retainer plate	
17	903554		1	.Retainer guide	
18	909247		1	.Shim	
19	909245		1	.Cylinder block, cpl	
20			1	..Washer	
21			1	..Spring	
22			1	..Washer	
23			1	..Retaining ring	
24	909248		1	.Tube	
25	212354		1	.Bearing plate	D
26	212358		1	.Gasket	D
27	909250		1	.End cap	
28	909251		1	.Bushing	
29	909255		1	.Spool	
30	902937		2	.Plug	
31	902937		2	.Plug	
32	481132		1	.Plug	
33	908432		1	.Plug	
34	909252		4	.Screw	
35	909253		2	.Screw	
36	909254		1	.Screw	


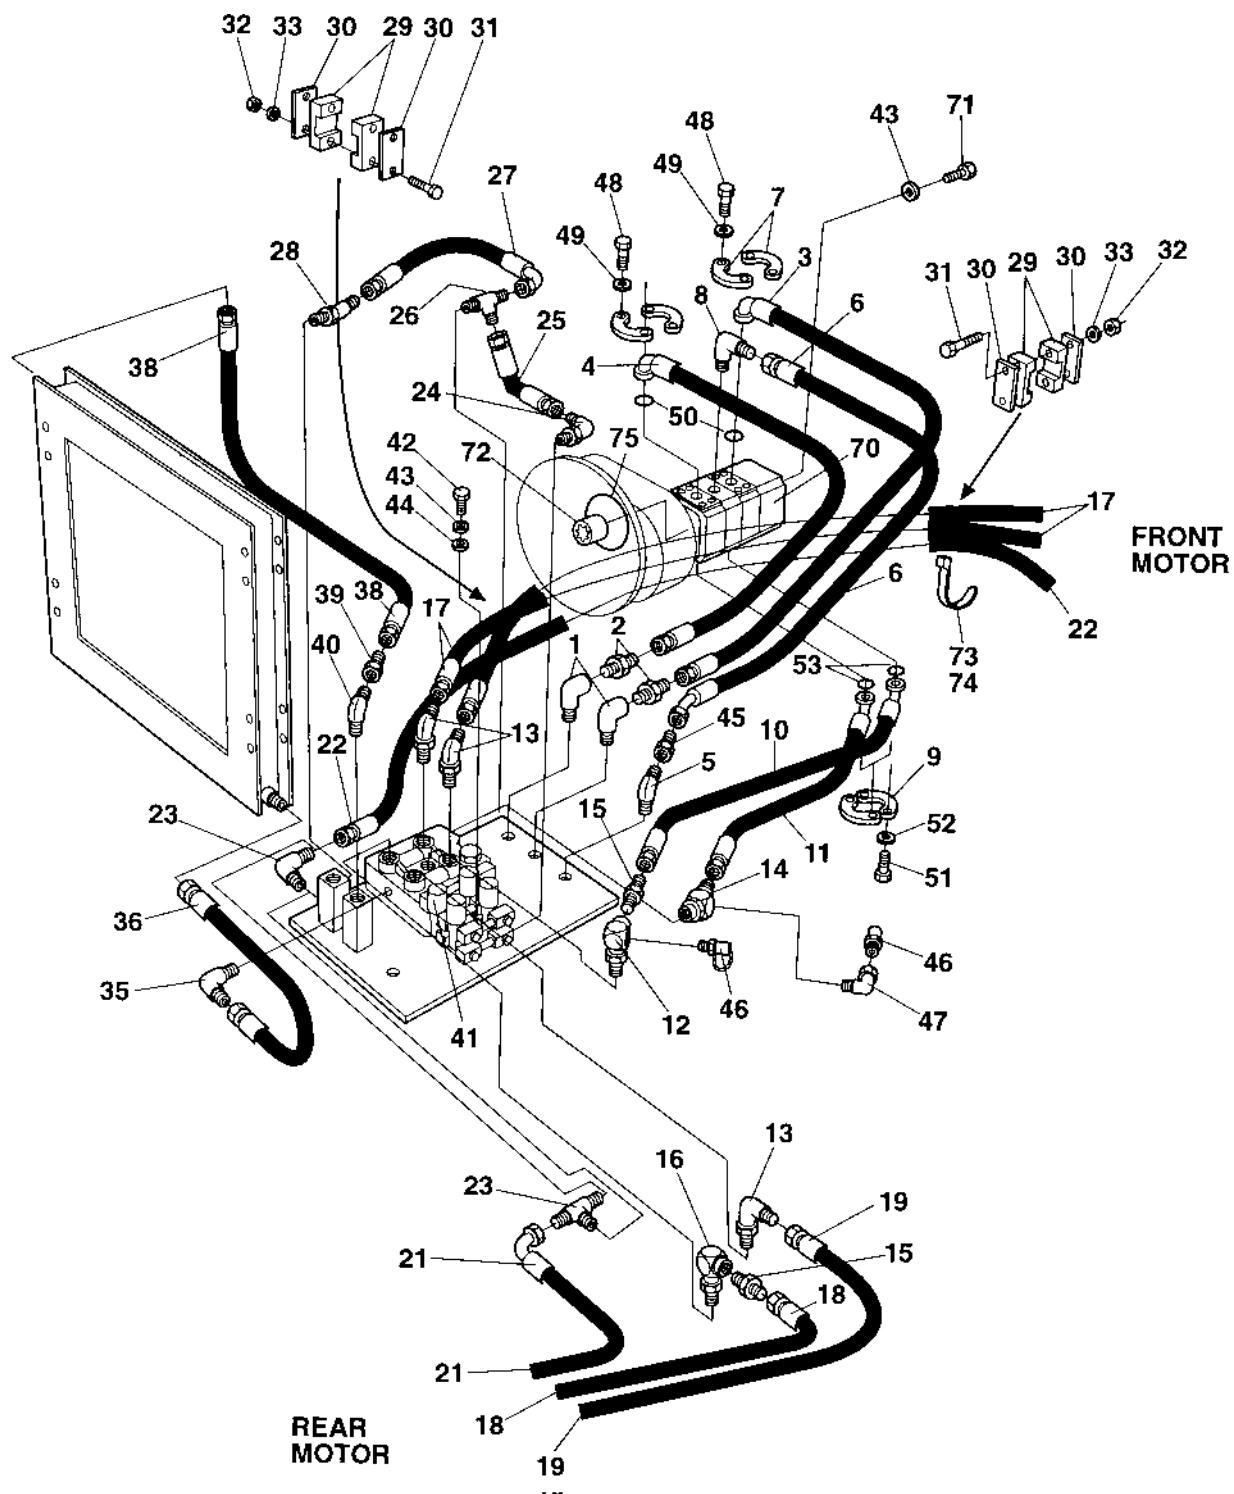


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	900204		2	Connector	
2	334126		2	Adapter	
3	851630		1	Hydraulic hose	D
4	482124		1	Hydraulic hose	D
5	334598		1	Connector	
6	851629		1	Hydraulic hose	D
7	232118		4	Flange half	
8	334153		1	Adapter	
9	232097		4	Flange half	D
10	851632		1	Hydraulic hose	D
11	851633		1	Hydraulic hose	D
12	850802		1	Connector	
13	334163		3	Adapter	
14	850803		1	Adapter	
15	813428		2	Connector	
16	234717		1	Connector	
17	851634		2	Hydraulic hose	D
18	482770		1	Hydraulic hose	
19	482771		1	Hydraulic hose	
21	482398		1	Hydraulic hose	
22	482802		1	Hydraulic hose	
23	235005		1	Connector	
24	334389		1	Elbow 90, O-ring	
25	482282		1	Hydraulic hose	D
26	234746		1	Connector	
27	482358		1	Hydraulic hose	
28	801277		1	Connector	
29	343732		4	Hose clamp	
30	335914		2	Cover plate	
31	500077		2	Screw	
32	586018		2	Lock nut	
33	904230		4	Washer	
35	334153		1	Adapter	
36	851622		1	Hydraulic hose	D
38	842832		1	Hydraulic hose	D
39	234940		1	Connector	
40	900177		1	Connector	
41	801691		1	Vibration valve (Page 94)	
42	500056		3	Screw	
43	615045		7	Conical spring washer	
44	904231		3	Washer	
45	334164		1	Adapter	
46	910161		2	Measuring nipple	D
47	891228		1	Adapter	
48	502058		8	Screw	
49	604009		8	Washer	
50	160191		2	O-ring	D
51	502019		8	Screw	
52	604006		8	Washer	
53	813429		2	O-ring	
70	801755		1	Hydraulic pump Vibration and steering (Page 90)	
71	502059		4	Screw	
72	340863		1	Splined sleeve	D
73	313041		N	Cable ties L=186 mm	
74	313102		N	Cable ties L=388 mm	
75	813647		1	O-ring	D

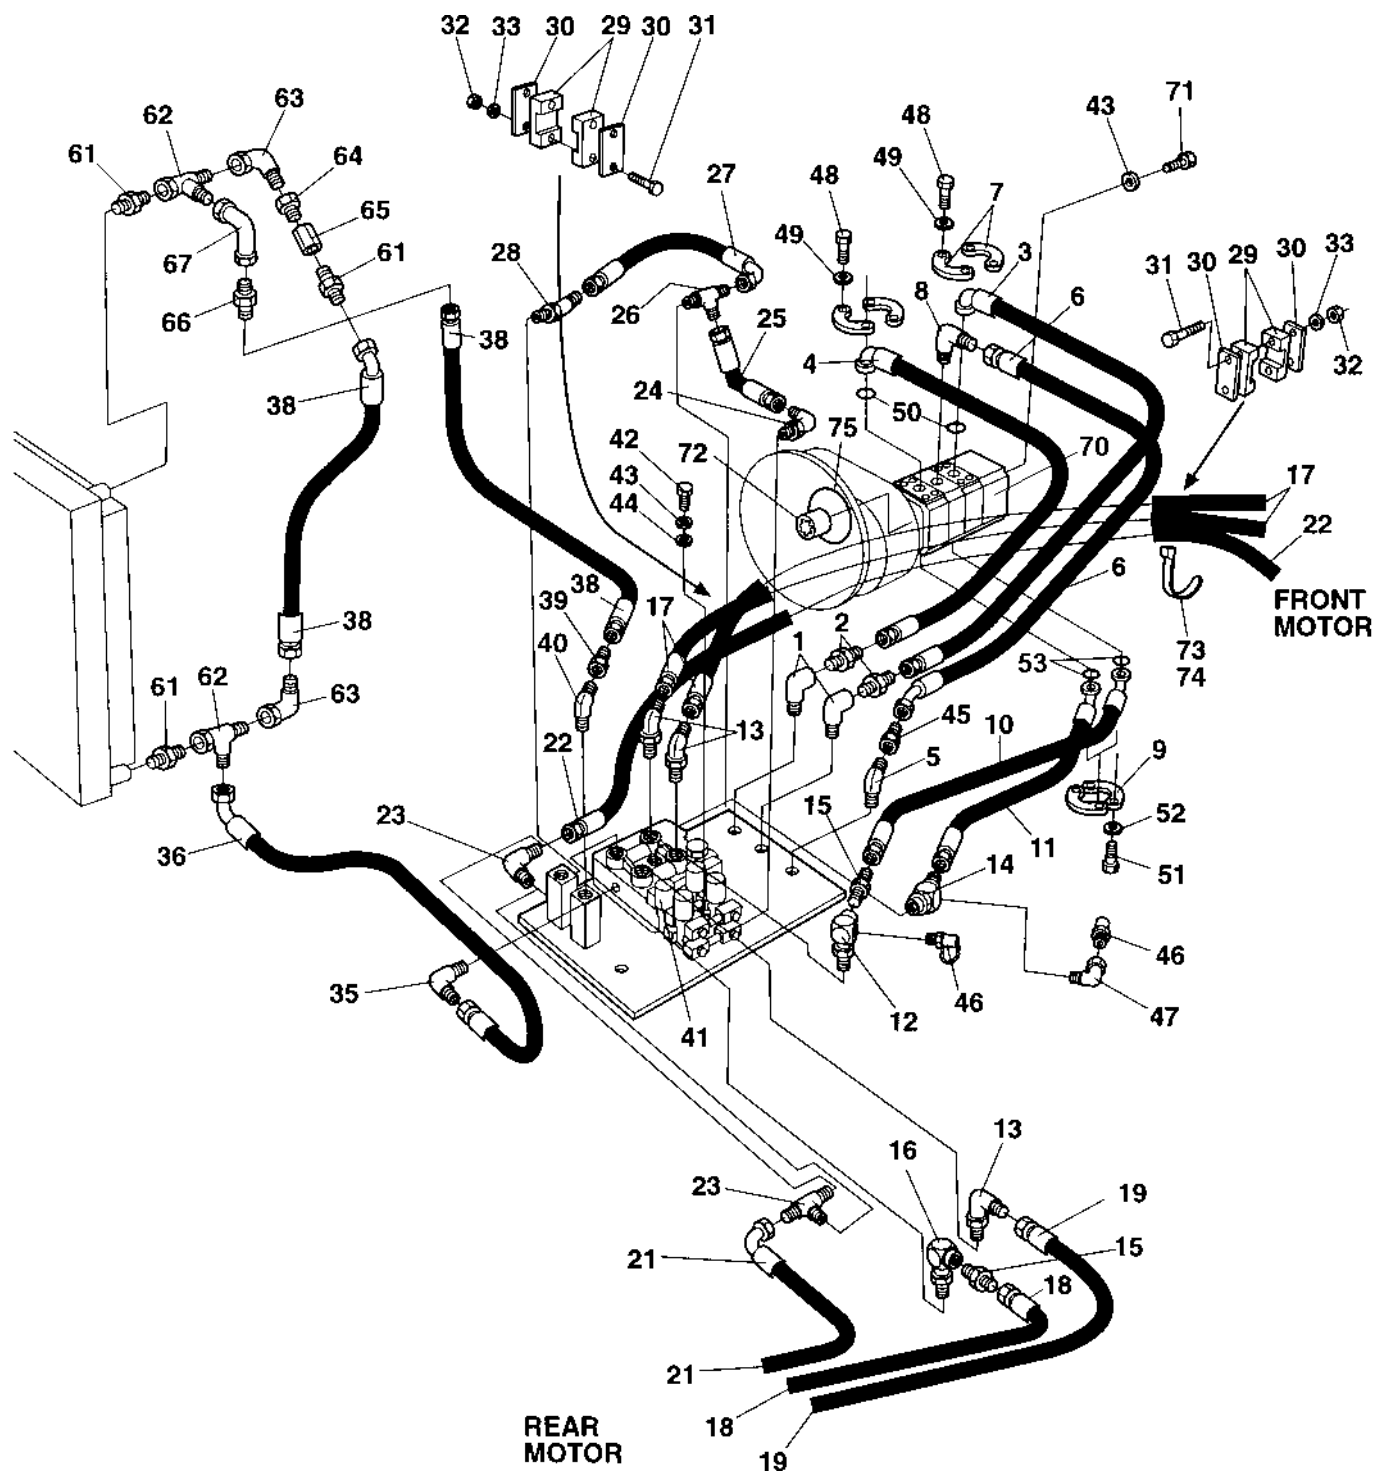


Vibration system, pump

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	900204		2	Connector	
2	334126		2	Adapter	
3	483441		1	Hydraulic hose	D
4	483442		1	Hydraulic hose	D
5	334598		1	Connector	
6	483440		1	Hydraulic hose	D
7	232118		4	Flange half	
8	334153		1	Adapter	
9	232097		4	Flange half	D
10	483376		1	Hydraulic hose	D
11	851633		1	Hydraulic hose	D
12	850802		1	Connector	
13	334163		3	Adapter	
14	850803		1	Adapter	
15	813428		2	Connector	
16	234717		1	Connector	
17	851634		2	Hydraulic hose	D
18	482770		1	Hydraulic hose	
19	482771		1	Hydraulic hose	
21	482398		1	Hydraulic hose	
22	482802		1	Hydraulic hose	
23	235005		1	Connector	
24	334389		1	Elbow 90, O-ring	
25	482282		1	Hydraulic hose	D
26	234746		1	Connector	
27	482358		1	Hydraulic hose	
28	801277		1	Connector	
29	343732		4	Hose clamp	
30	335914		2	Cover plate	
31	500077		2	Screw	
32	586018		2	Lock nut	
33	904230		4	Washer	
35	334153		1	Adapter	
36	483432		1	Hydraulic hose	D
38	483431		1	Hydraulic hose	D
39	234940		1	Connector	
40	900177		1	Connector	
41	801691		1	Vibration valve (Page 94)	
42	500056		3	Screw	
43	615045		7	Conical spring washer	
44	904231		3	Washer	
45	334164		1	Adapter	
46	910161		2	Measuring nipple	D
47	891228		1	Adapter	
48	502058		8	Screw	
49	604009		8	Washer	
50	160191		2	O-ring	D
51	502019		8	Screw	
52	604006		8	Washer	
53	813429		2	O-ring	
61	234629		3	Connector	
62	334189		2	Adapter	
63	234152		2	Adapter	
64	234630		1	Connector	
65	380258		1	Check valve	
66	923889		1	Connector	
67	376124		1	Hydraulic pipe	
70	376115		1	Hydraulic pump Vibration and steering	
71	502059		4	Screw	
72	340863		1	Splined sleeve	D
73	313041	N		Cable ties L=186 mm	
74	313102	N		Cable ties L=388 mm	
75	813647		1	O-ring	D

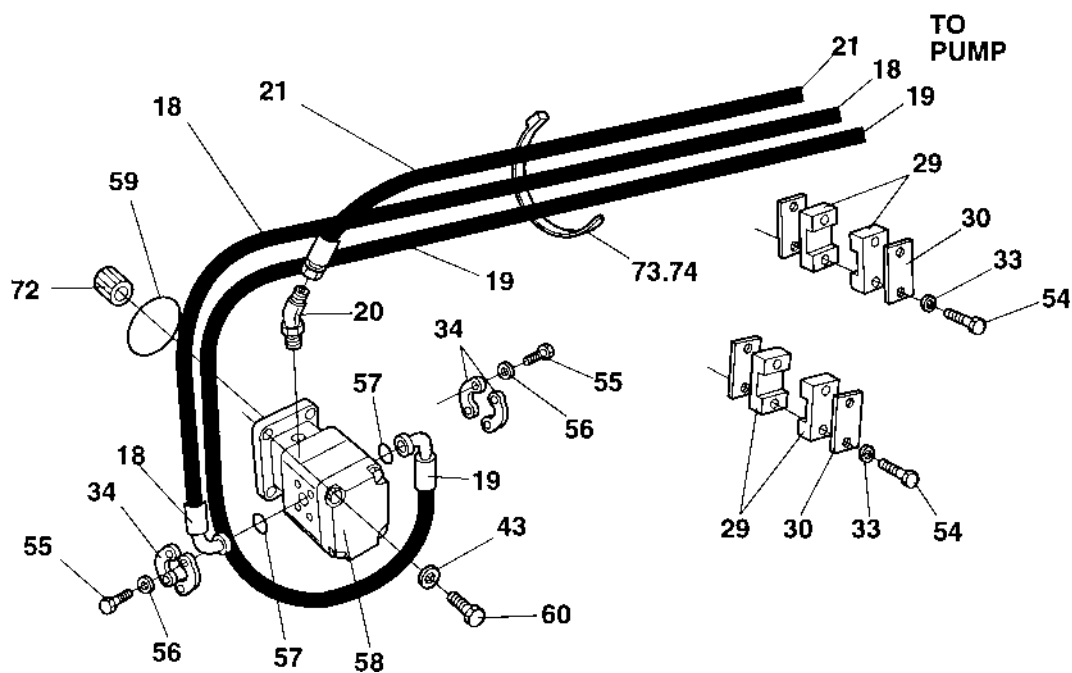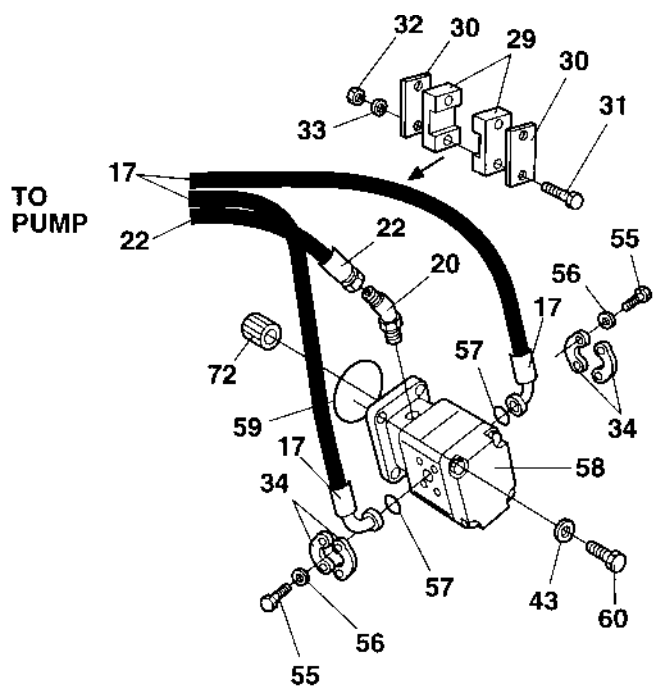


Ref. No.	Part No.	Rem.	Qty	Description	Code
17		1	2	Hydraulic hose	D
18		1	1	Hydraulic hose	D
19		1	1	Hydraulic hose	D
20	234350		2	Adapter	
21		1	1	Hydraulic hose	
22		1	1	Hydraulic hose	
29	343732		6	Hose clamp	
30	335914		3	Cover plate	
31	500077		4	Screw	
32	586018		4	Lock nut	
33	904230		6	Washer	
34	232098		8	Flange	
43	615045		8	Conical spring washer	
54	500192		4	Screw	
55	502157		16	Screw	
56	604008		16	Washer	
57	160186		4	O-ring	
58	335553		2	Hydraulic motor Vibration (Page 92)	C
59	160132		2	O-ring	D
60	500037		8	Screw	
72	340863		2	Splined sleeve	D
73	313041		N	Cable ties L=186 mm	
74	313102		N	Cable ties L=388 mm	

1) See section " Vibration system, pump "

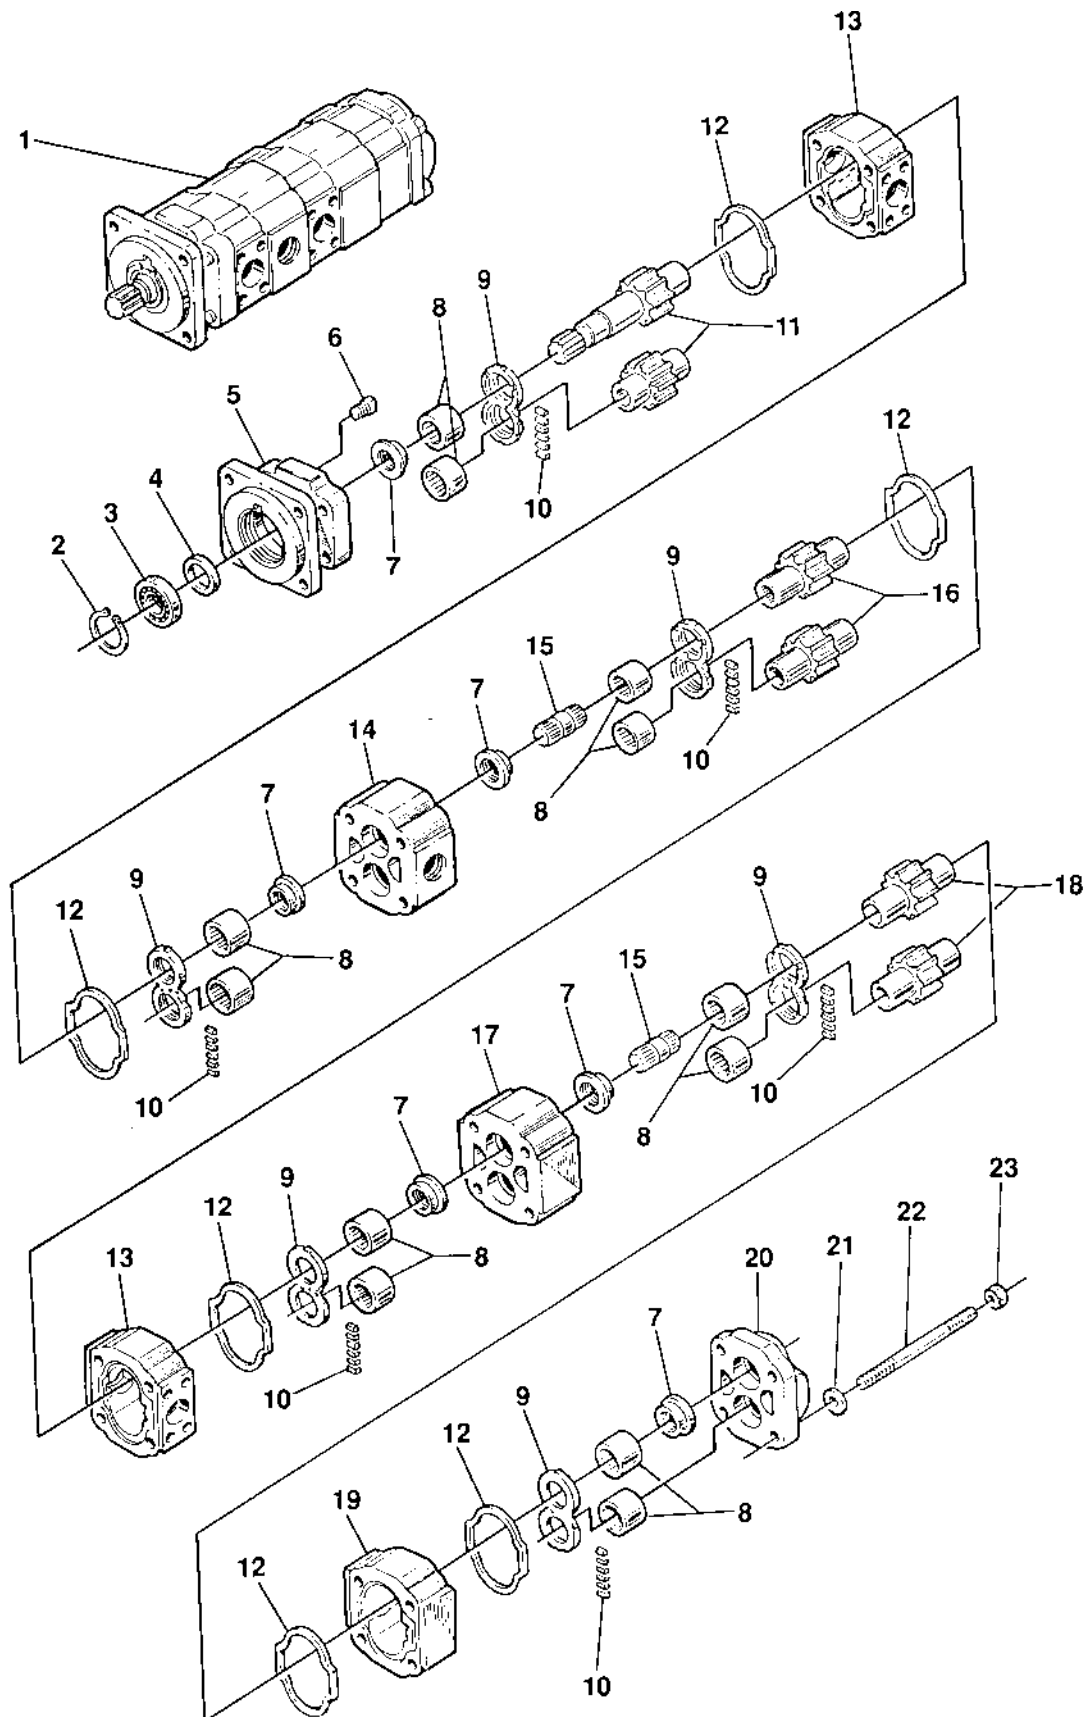


801755 Hydraulic pump Vibration and steering

Ref. No.	Part No.	Rem.	Qty Description	Code
1			1 Hydraulic pump, Cpl	
2	813678		1 .Snap ring	
3	813674		1 .Bearing	D
4	911787		1 .Seal ring	D
5	911780		1 .Cover	
6	911786		1 .Plug	
7	813661		6 .Ring seal	D
8	911783		12 .Bearing	D
9	813683		6 .Thrust plate	D
10	813646		36 .Sealing strip	
11	911775		1 .Shaft and gear	D
12	813669		6 .Gasket	D
13	911777		2 .Housing	
14	911781		1 .Housing	
15	911778		2 .Shaft	D
16	911773		1 .Gears match set	D
17	911782		1 .Housing	
18	911774		1 .Gear set	D
19	911776		1 .Housing	
20	911779		1 .Cover	
21	911788		4 .Washer	
22	911784		4 .Stud	
23	911785		4 .Nut	

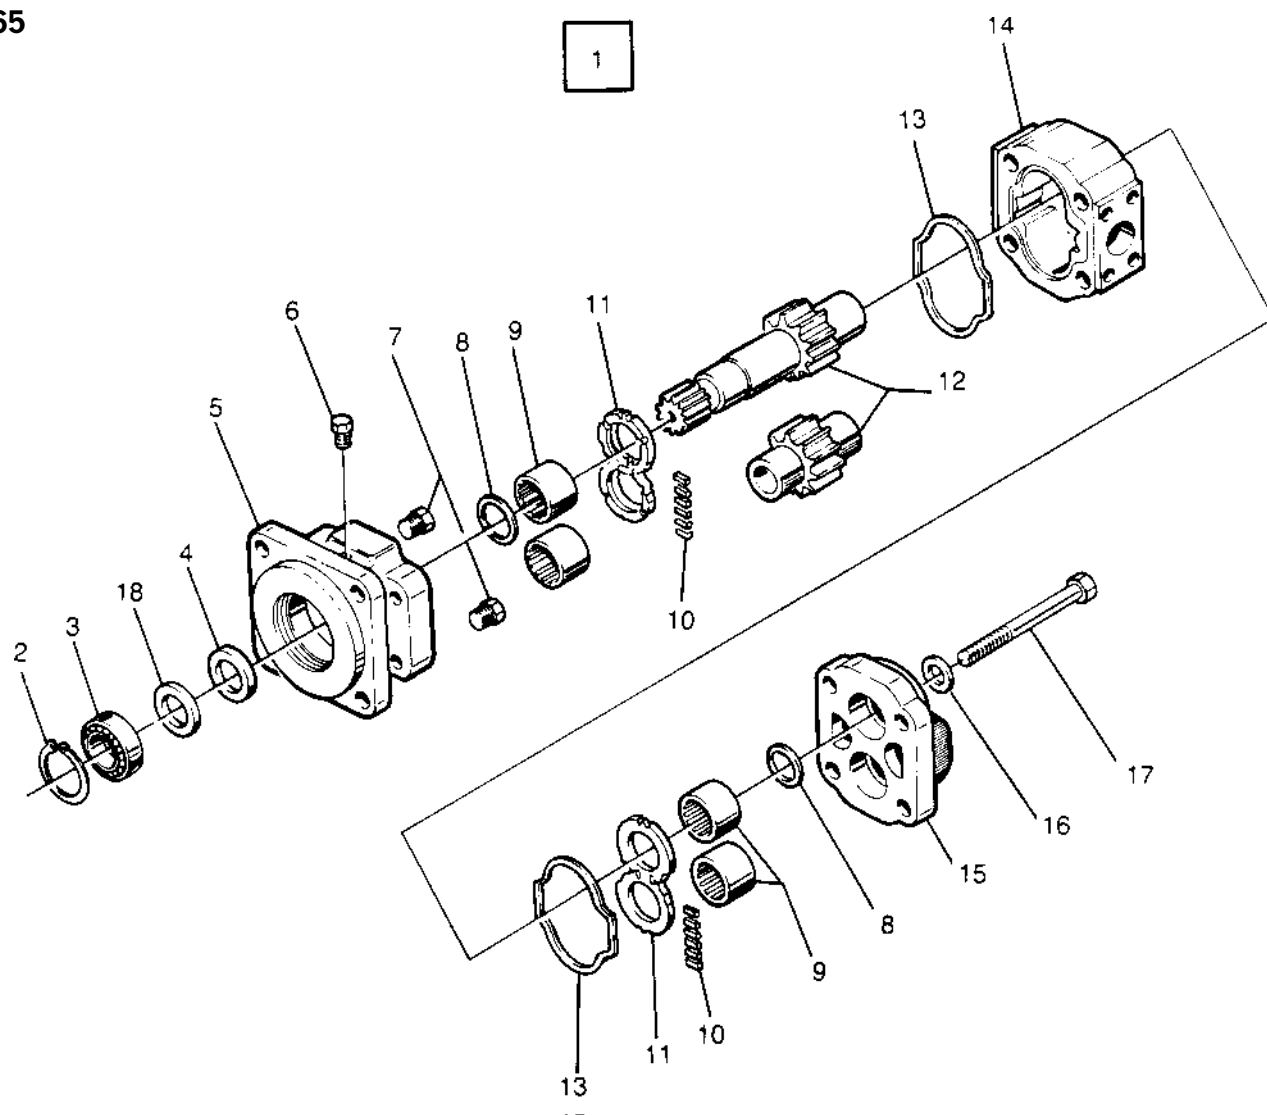


335553 Hydraulic motor Vibration

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic motor	
2	813678		1	.Snap ring	
3	813674		1	.Bearing	D
4	813676		1	.Seal ring	D
5	813902		1	.Cover	
6	813910		1	.Plug	
7	813903		2	.Check valve	
8	813661		2	.Ring seal	D
9	813906		4	.Roller bearing	D
10	480481		1	.Sealing strip	D
11	813683		2	.Thrust plate	D
12	813905		1	.Drive shaft and gear	D
13	813669		2	.Gasket	D
14	813657		1	.Gear housing	
15	813923		1	.Cover	
16	813915		4	.Washer	
17	813916		4	.Screw	
18	813643		1	.Seal retainer	

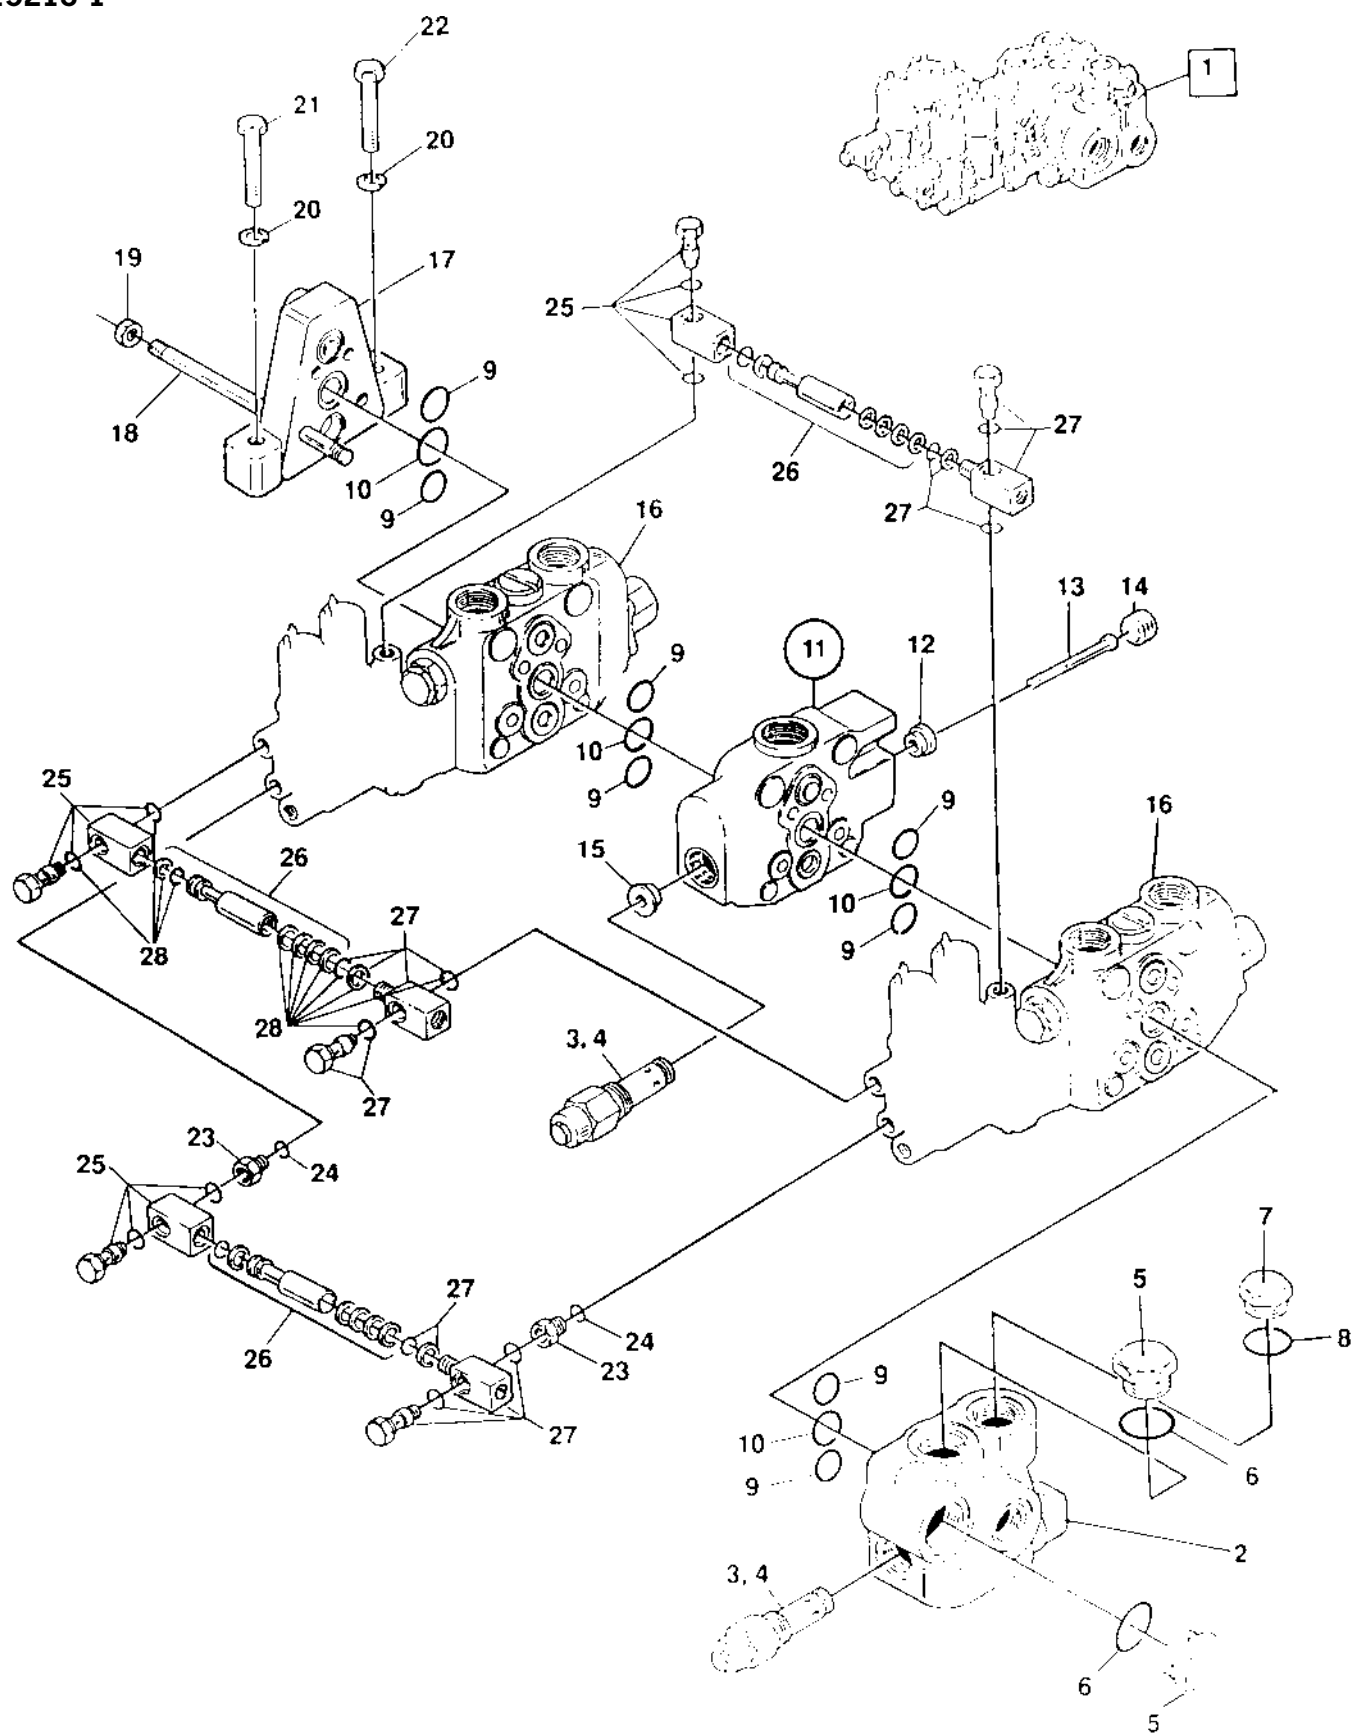


801691 Vibration valve

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Vibration valve	
2	911167		1	.Inlet cover	
3	212425		2	.Relief valve	
4	212426		1	..Seal kit	
5	232120		2	.Plug	
6	160164		2	.O-ring	
7	332063		1	.Plug	
8	160154		1	.O-ring	
9	911166		8	.O-ring	
10	911099		4	.O-ring	
11	233200		1	.Middle section	
12	911738		1	..Adapter	
13	911736		1	..Screw	
14	911726		1	..Plug	
15	911739		1	..Plug	
16			2	.Vibration valve Control section (Page 96)	
17	911740		1	.Outlet cover	
18	911728		4	.Stud	
19	911727		8	.Nut cpl	
20	604030		3	.Washer	
21	509036		1	.Screw	
22	502062		2	.Screw	
23	911741		2	.Reducing nipple cpl	
24	911733		1	..O-ring	
25	911743		3	.Fitting cpl.	
26	911742		3	.Spacer tube cpl	
27	911744		3	.Fitting cpl.	
28	911403		3	.Seal kit	

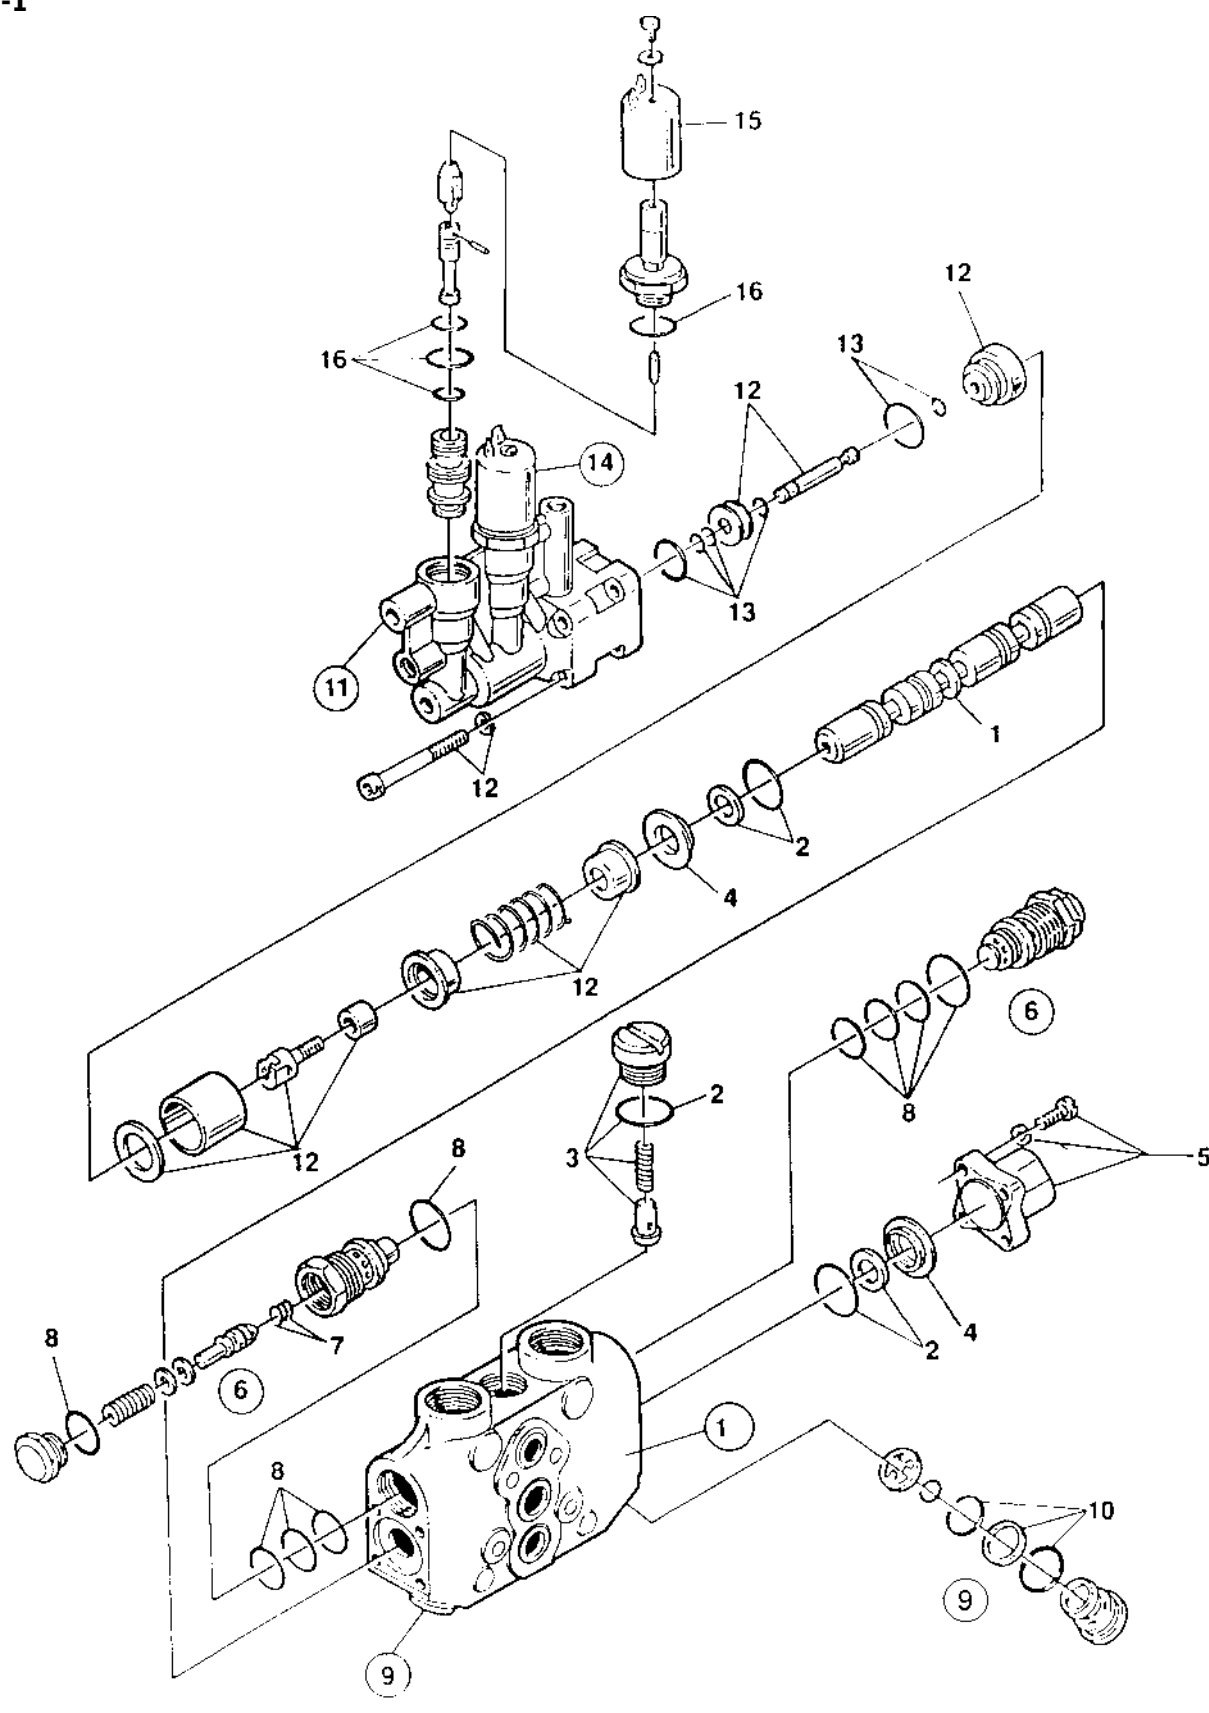

Vibration valve Control section

Ref. No.	Part No.	Rem.	Qty	Description	Code
			1	Valve with solenoid	
1	911098		1	.Housing w. spool	
2	911090		1	..Seal kit	
3	911097		1	..Service kit	
4	911735		4	..Seal plate	
5	911734		1	..Cover	
6	233199		2	..Relief valve	
7	814124		1	..Valve cone compl	
8	921692		1	..Seal kit	
9	233197		2	.Check valve	
10	911091		1	..Seal kit	
11	911737		1	.Solenoid actuator	
12	911092		1	..Replacement kit	
13	911093		1	...Seal kit	
14	233198		2	.Solenoid valve, cpl	
15	911168		1	..Solenoid coil	
16	911094		1	..Seal kit	

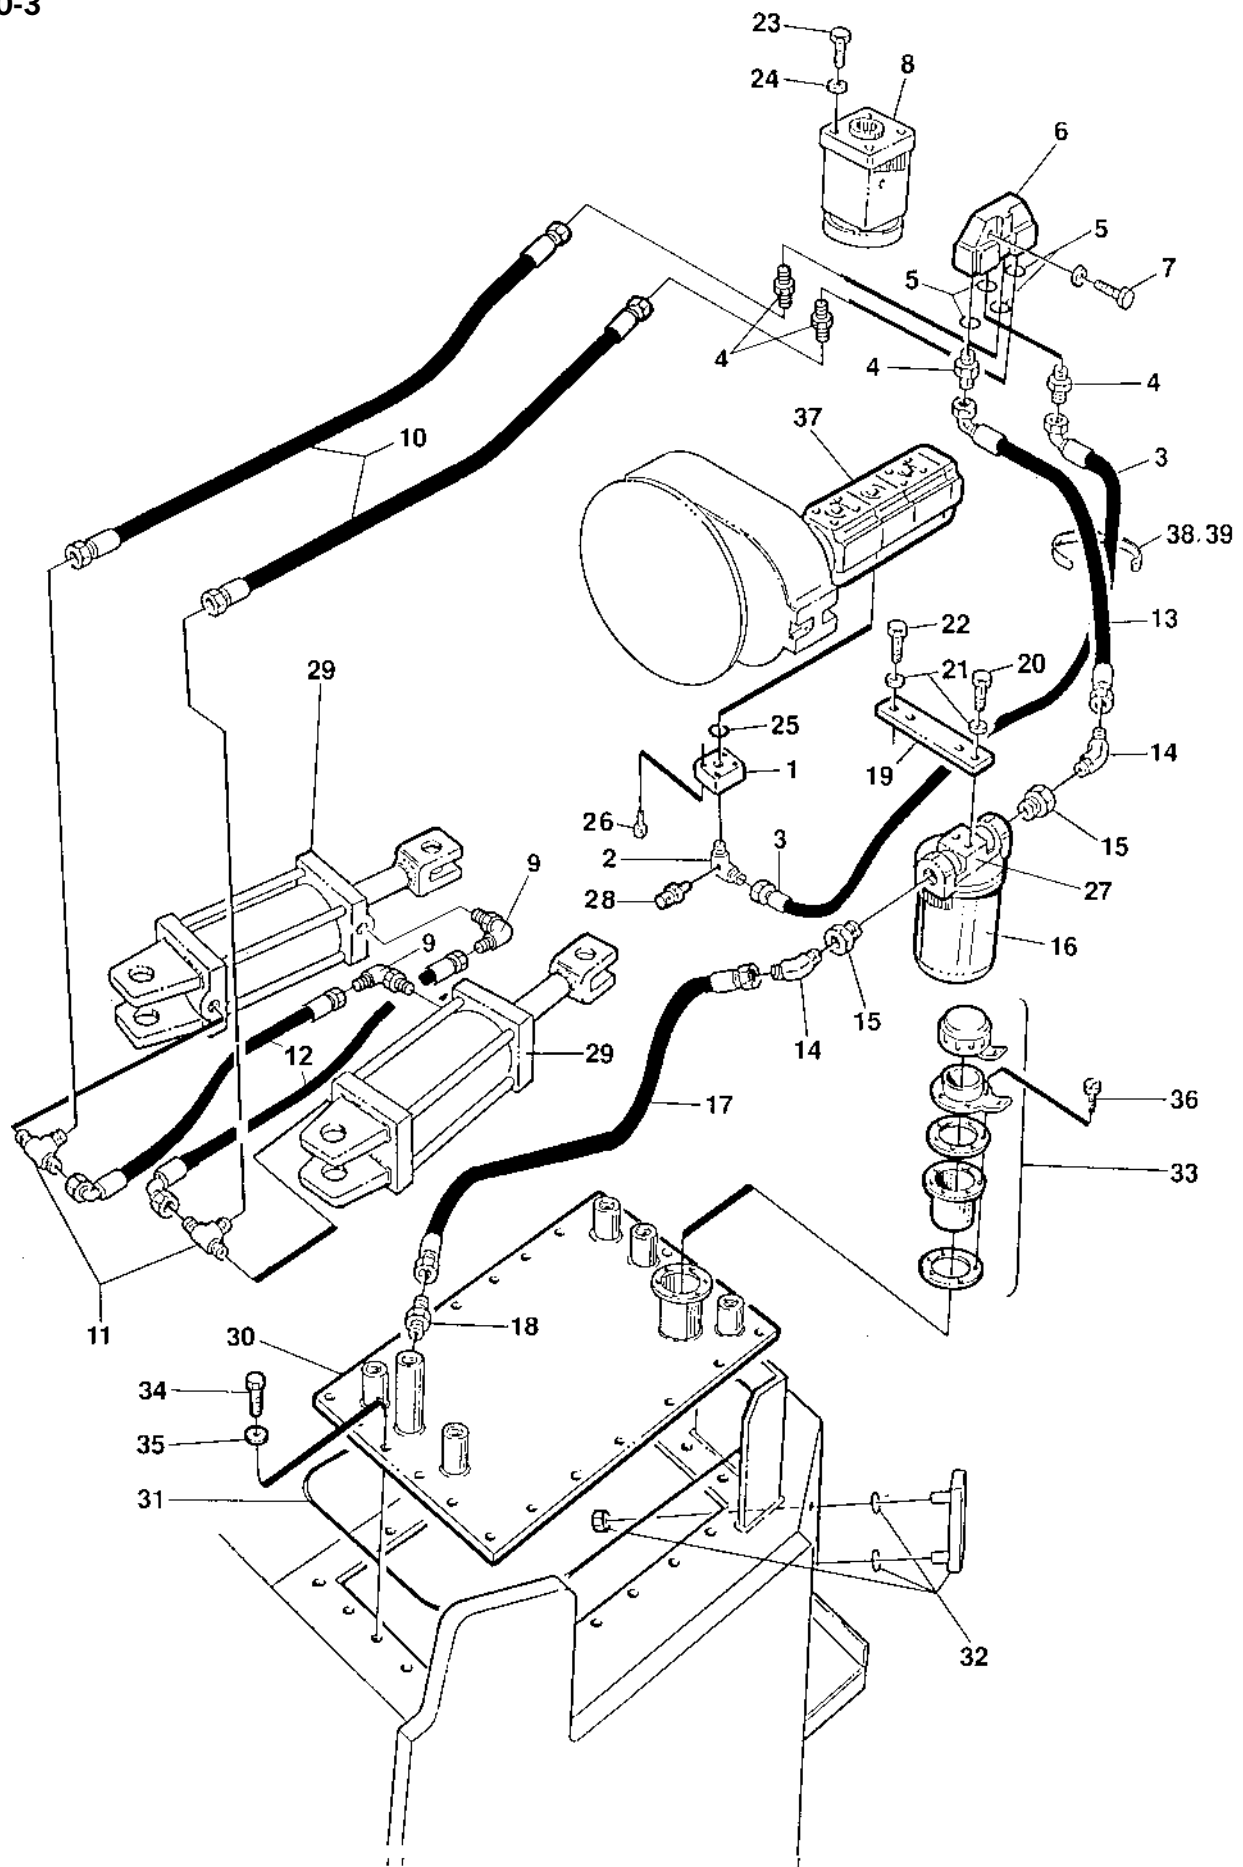


Steering system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	343414		1	Flange	
2	345776		1	Adapter	
3	851648		1	Hydraulic hose	D
4	234941		4	Adapter	
5	162015		4	Seal ring	D
6	911499		1	Relief valve block	
	920363		1	.Gasket kit	
7	480923		2	..Screw	
8	480219		1	Steering valve (Page 100)	
9	813444		2	Connector From 60910815	
10	482954		2	Hydraulic hose	
11	334070		2	Adapter Up to 60910814	
	234218		2	Connector From 60910815	
12	85017232		2	Hydraulic hose Up to 60910814	
	482882		2	Hydraulic hose From 60910815	
13	851649		1	Hydraulic hose	
14	334565		2	Adapter	
15	813449		2	Bushing	
16	337536		1	Hydraulic oil filter Up to 60910556	
	212108		1	.Filter element Up to 60910556	
	903754		1	Hydraulic oil filter From 60910557	
	902900	A	1	.Hydraulic oil filter From 60910557	A
	903005		1	..Gasket From 60910557	
	903588	B	1	Hydraulic oil filter From 60910557	A
17	851650		1	Hydraulic hose	D
18	334117		1	Adapter	
19	850106		1	Bracket	
20	502018		2	Screw Up to 60910556	
	500021		2	Screw From 60910557	
21	904229		4	Washer	
22	500021		2	Screw	
23	500029		4	Screw	
24	904230		4	Washer	
25	813443		1	O-ring	D
26	509025		4	Screw	
27	232124		1	Plug	
28	910161		1	Measuring nipple	D
29	347110		2	Hydraulic cylinder Up to 60910814 (Page 102)	
	375031		2	Hydraulic cylinder From 60910815 (Page 104)	C
30	356315		1	Cover	
31	356233		1	O-ring	
32	989151		1	Oil level gauge	D
33	499432		1	Cap	
34	500053		26	Screw	
35	904556		26	Washer	
36	533026		6	Screw	
37	801755		1	Hydraulic pump Vibration and steering Up to 60910779 (Page 90)	
	376115		1	Hydraulic pump Vibration and steering From 60910780	
38	313041		N	Cable ties L=186 mm	
39	313102		N	Cable ties L=388 mm	


A) Replacement

B) Cleaning

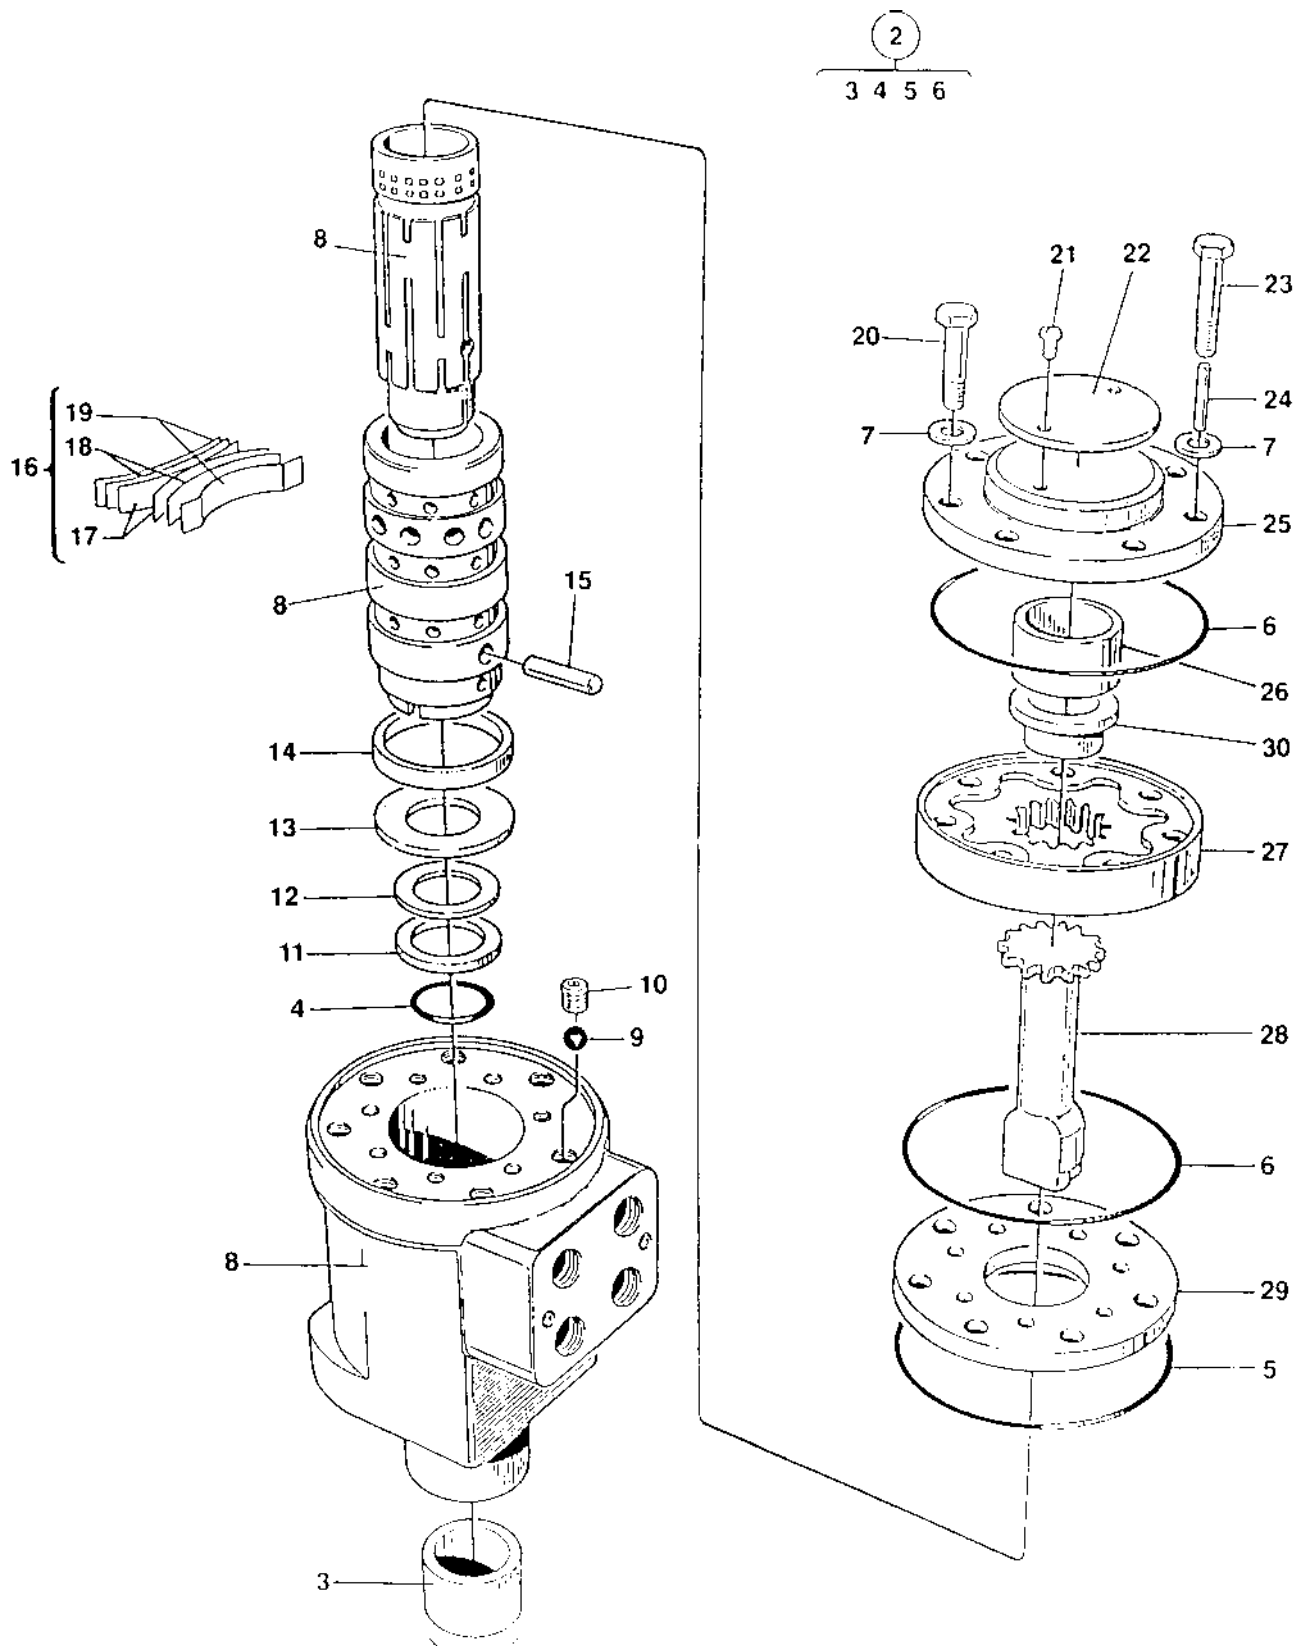


480219 Steering valve

Ref. No.	Part No.	Rem.	Qty	Description	Code
2	480457		1	.Spare parts kit	D
3			1	..Seal ring	D
4			1	..O-ring	D
5			1	..O-ring	D
6			2	..O-ring	D
7			7	..Seal washer	D
8	480458		1	.Housing with sleeves	
9	480468		1	.Ball	
10	480446		1	.Threaded bushing	D
11	480452		1	.Bearing race	
12	480453		1	.Needle bearing	
13	480451		1	.Washer	
14	480449		1	.Ring	
15	480447		1	.Cross pin	
16	481309		1	.Set of springs	
17	481308		2	..Spring, blue	
18	481307		2	..Spring, yellow-brown	
19	480448		2	..Spring, yellow-brown	
20	480465		6	.Screw	
21	480464		2	.Drive screw	
22	480444		1	.Plate, rating	
23	480456		1	.Screw with hole	
24	480466		1	.Rolled pin	
25	480450		1	.End cap	
26	481306		1	.Spacer	
27	480577		1	.Gear set	
28	480454		1	.Drive shaft	
29	480445		1	.Distributor plate	
30	480455		1	.Spacer	

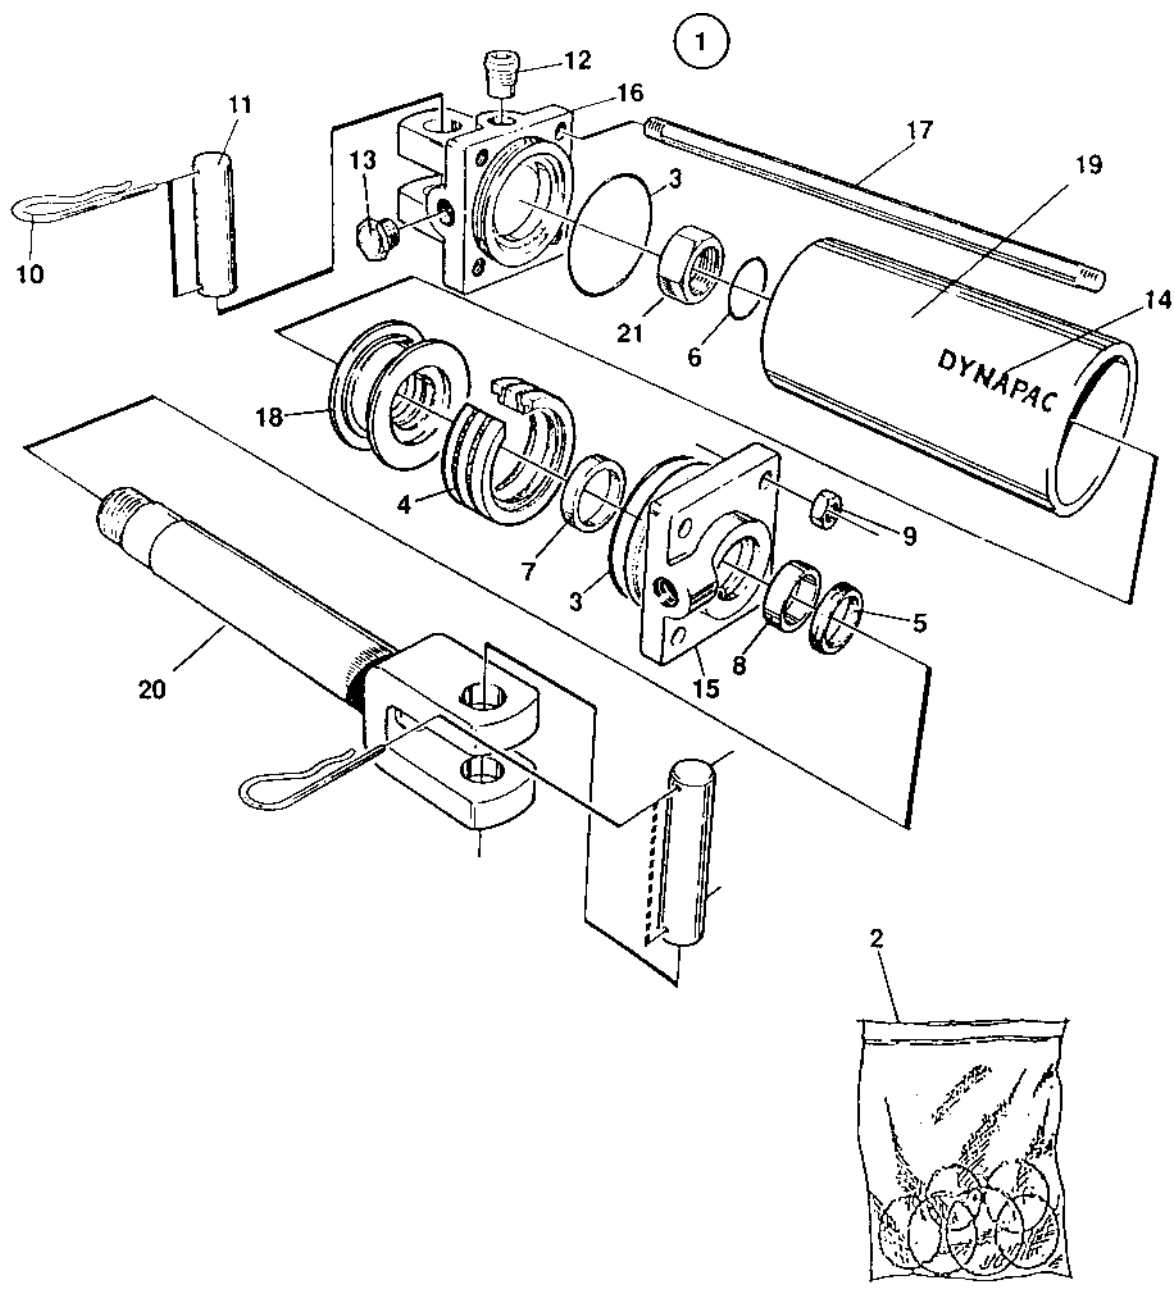

347110 Hydraulic cylinder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Hydraulic cylinder, cpl	
2	927036		1	.Seal kit	
3			2	..O-ring	
4			1	..Piston seal	
5			1	..Scraper ring	
6			1	..O-ring	
7			1	..Piston rod seal	
8			1	..Guide ring	
9	926977		4	.Nut	
10	635061		4	.Hair clip	D
11	347119		2	.Shaft	D
12	813422		1	.Plug	
13	925806		2	.Protection plug	
14	347613		1	.Type decal	
15	347114		1	.Cylinder end	
16	347116		1	.Cylinder cap	
17	347117		4	.Bolt	
18	347118		1	.Piston	
19	347115		1	.Cylinder	
20	347111		1	.Piston rod	
21	926330		1	.Nut	

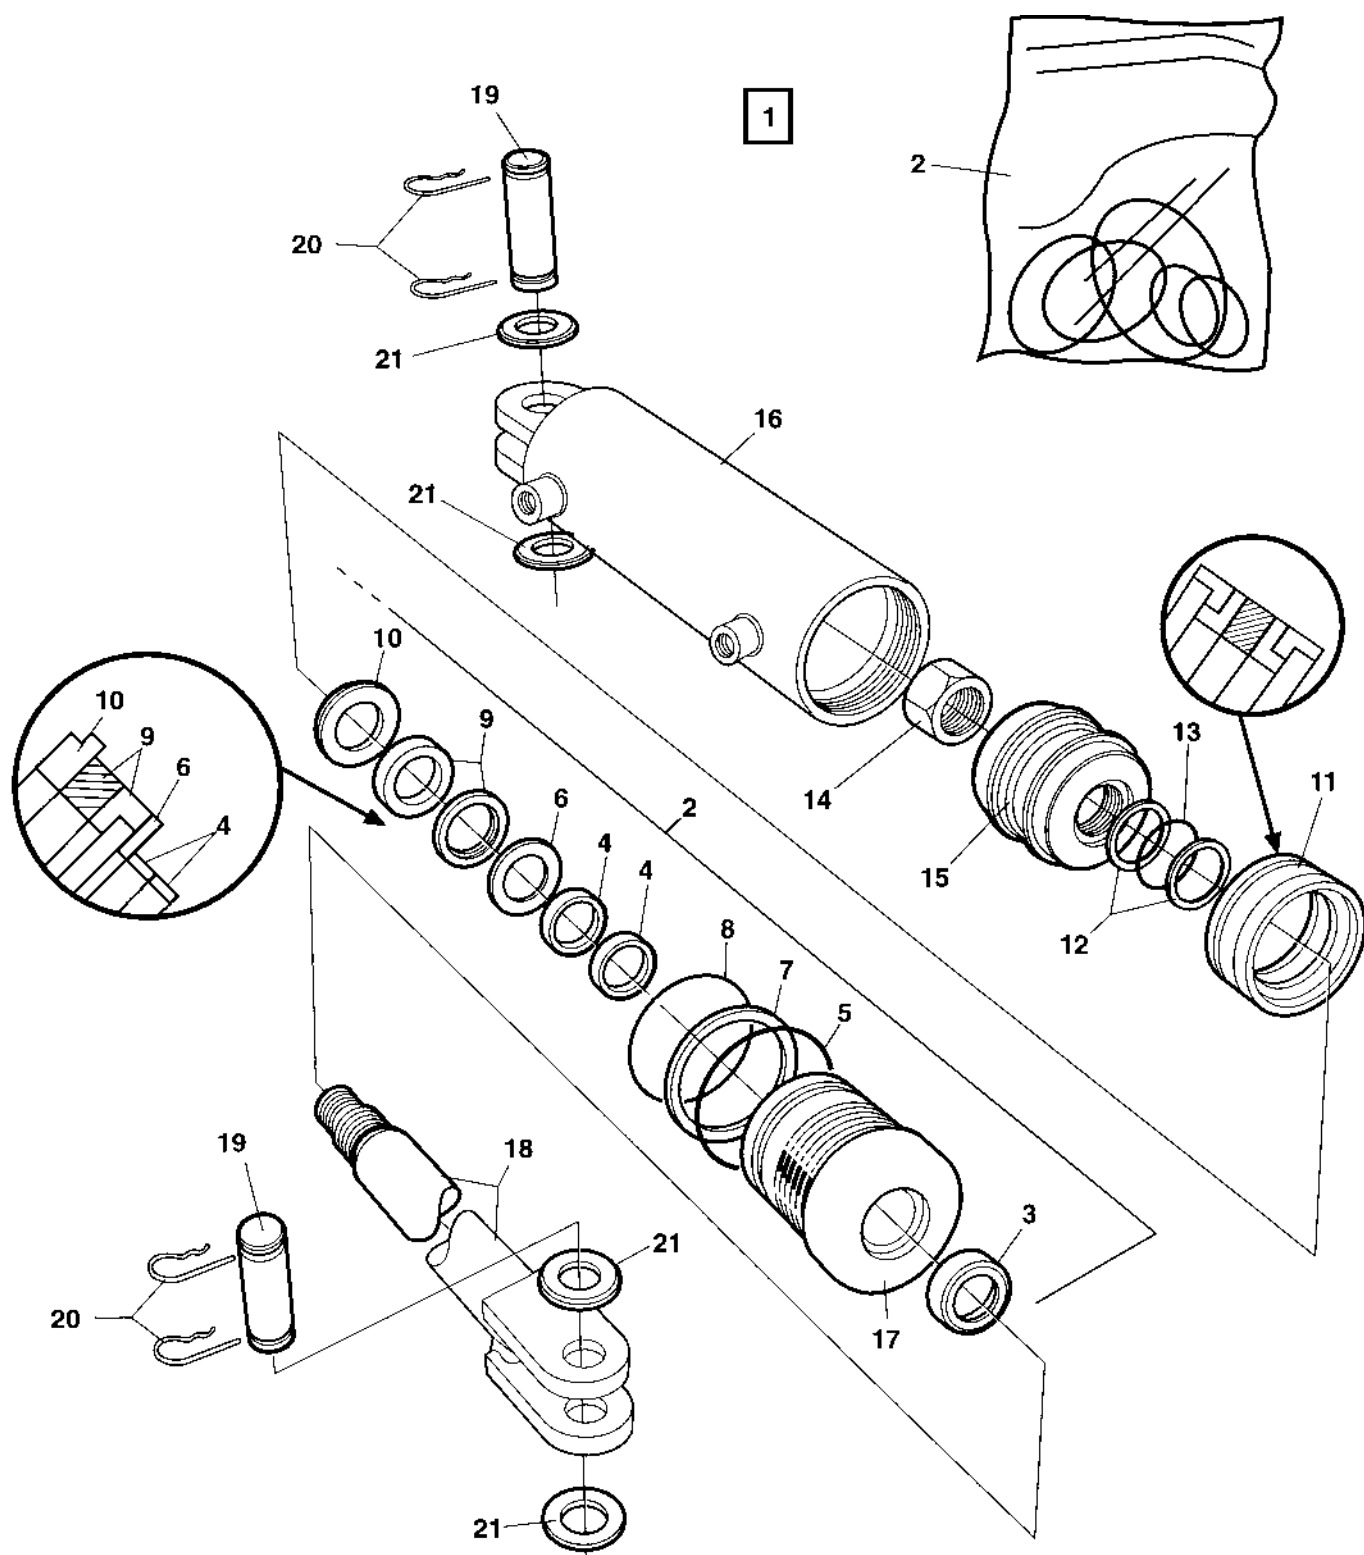


375031 Hydraulic cylinder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Steering cylinder, cpl	
2	904145		1	.Seal kit	D
3			1	..Seal	D
4			2	..Seal	D
5			1	..O-ring	D
6			1	..Back-up ring	D
7			1	..Back-up ring	D
8			1	..O-ring	D
9			1	..Seal	D
10			1	..Retaining ring	D
11			1	..Seal	D
12			2	..Back-up ring	D
13			1	..O-ring	D
14			1	..Lock nut	D
15	904143		1	.Piston block	
16	936267		1	.Cylinder	
17	903619		1	.Steering	
18	936268		1	.Piston rod	
19	347119		2	.Shaft	D
20	635061		4	.Hair clip	D
21	600016		4	.Washer	

Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Electrical equipment (Page 108)	
20				Instrument column (Page 112)	
30				Control panel (Page 114)	
40				Lights (Page 116)	
50				Sensors (Page 118)	
60				Rotating Beacon (Page 120)	
70				Back-up alarm (Page 122)	

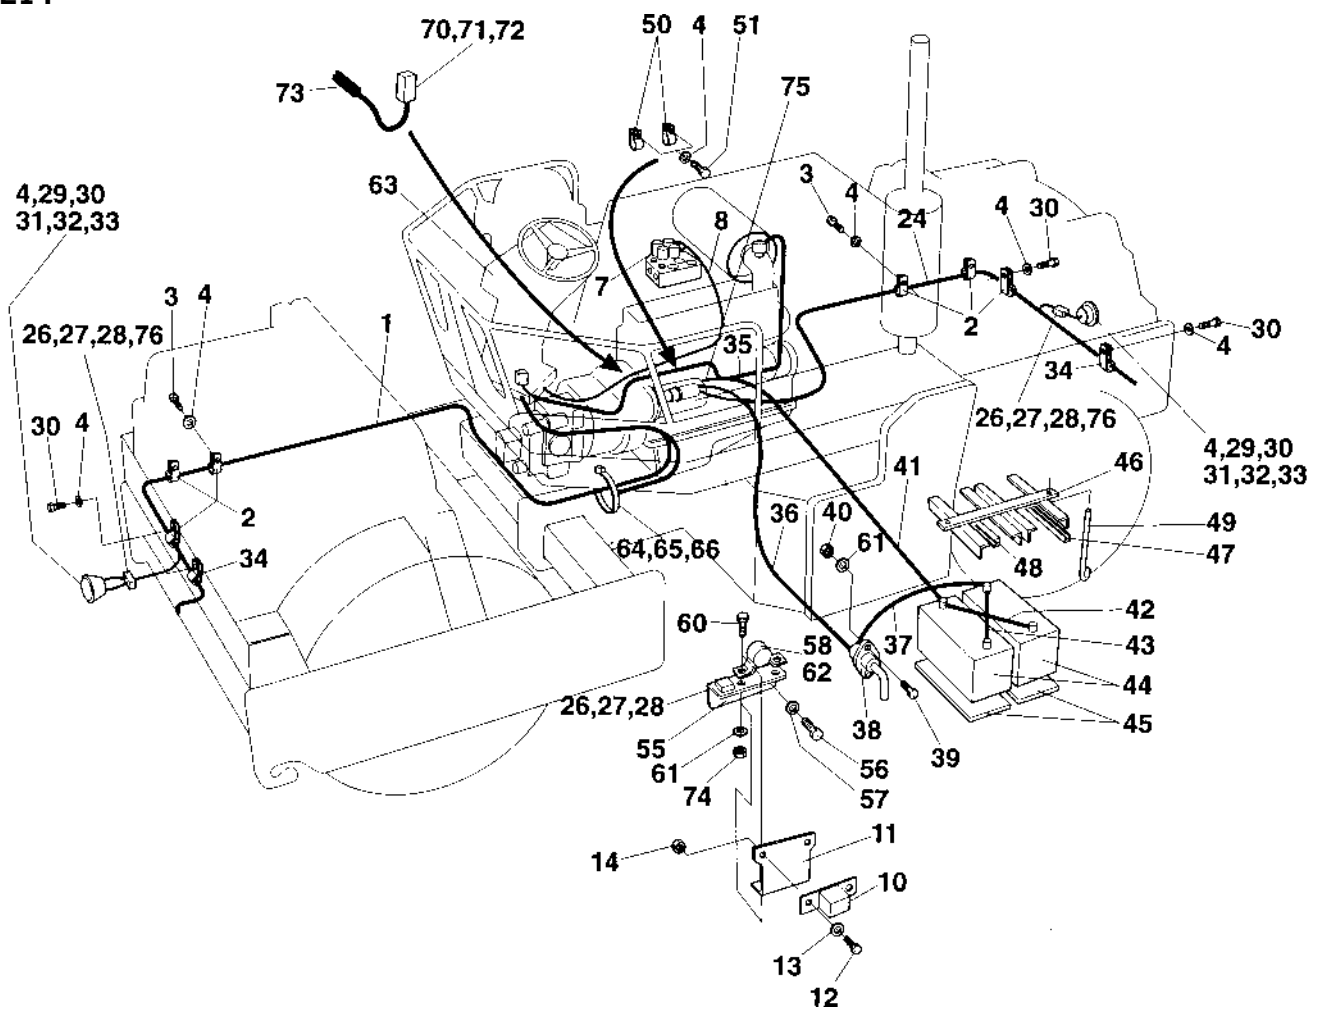


Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	356598		1	Cable harness Up to 60910547	
	357476		1	Cable harness From 60910548 Up to 60910793	
	382136		1	Cable harness From 60910794 Up to 60910826	
	383212		1	Cable harness From 60910827	
2	921104		18	Clamp	
3	541708		12	Screw	
4	615043		19	Conical spring washer	
7	343731		1	Cable harness	
8	356617		1	Cable harness	
10	904448		1	Relay From 60910689	D
11	371591		1	Bracket From 60910689	
12	500013		2	Screw From 60910689	
13	904228		2	Washer From 60910689	
14	586002		2	Lock nut From 60910689	
24	356599		1	Cable harness Up to 60910547	
	357477		1	Cable harness From 60910547 Up to 60910731	
	375106		1	Cable harness From 60910732 Up to 60910793	
	382135		1	Cable harness From 60910794 Up to 60910826	
	383213		1	Cable harness From 60910827	
26	925715		3	Ground terminal Up to 60910793	
	903768		3	Threaded stud From 60910794	
27	533010		3	Screw Up to 60910793	
	570005		3	Nut From 60910794	
28	600002		3	Washer Up to 60910793	
	586003		3	Lock nut From 60910794	
29	999027		2	Horn	D
30	500053		6	Screw	
31	570005		4	Nut	
32	348902		2	Bracket	
33	500022		2	Screw	
34	921077		2	Clamp	
35	356591		1	Cable harness Up to 60910713	
	374514		1	Cable harness From 60910714 Up to 60910793	
	382137		1	Cable harness From 60910794	
	960796		1	.Connector black, MPM 182 09 ND	D
36	901768		1	Connection cable	
37	356618		1	Battery cable	
38	930150		1	Battery switch	D
	928021		1	.Key	D
39	923927		2	Screw	
40	570004		2	Nut	
41	356619		1	Battery cable	
42	851557		1	Battery cable	
43	851554		1	Battery cable	
44	929096		2	Battery	D
45	851362		2	Rubber part	
46	851661		1	Battery holder	
47	202028	D	4XL	Edge trim	
48	202028	E	8XL	Edge trim	
49	813330		3	Hold down screw	
50	921161		3	Clamp	
51	508005		3	Screw	
55	349088		1	Relay bracket	
56	500051		2	Screw	
57	904231		2	Washer	
58	975065		1	Starter relay Up to 60910688	
60	500012		2	Screw	
61	904228		4	Washer	
62	901850		2	Ground cable	
63			1	Instrument column (Page 112)	
64	313068		N	Cable ties L=92 mm	


D) L=152 mm

E) L=63 mm

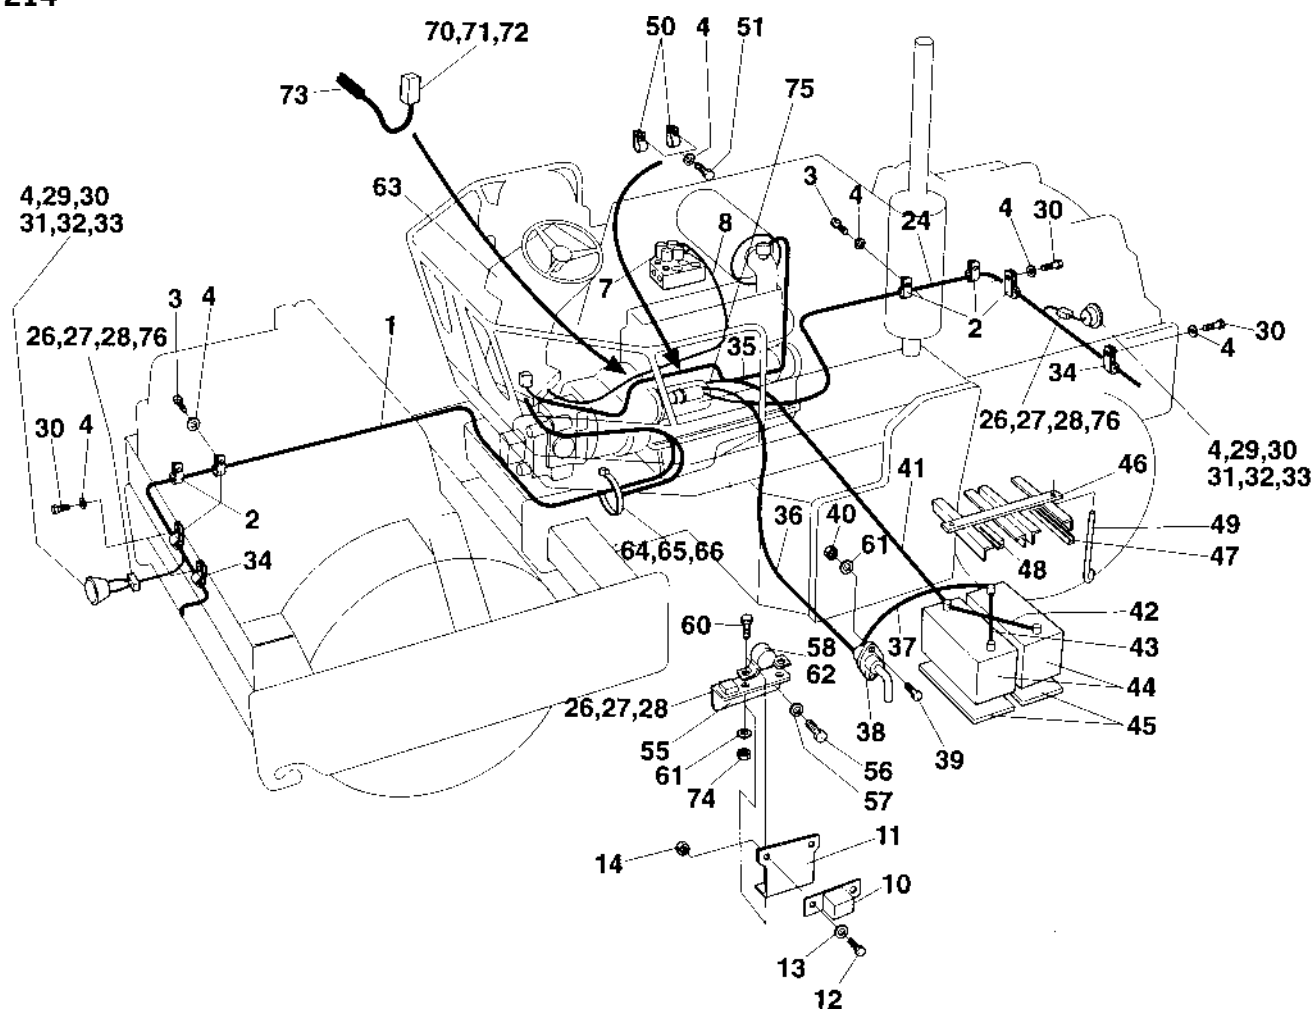

Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
65	313041		N	Cable ties L=186 mm	
66	313102		N	Cable ties L=388 mm	
70	287597		1	Relay From 60910586 Up to 60910586	D
	287597		1	Relay From 60910588	D
71	500004		1	Screw	
72	904281		1	Washer	
73	358973	A	1	Wiring harness Up to 60910793	
	382138	A	1	Wiring harness From 60910794	
74	586002		2	Lock nut	
75	574003		1	Lock nut	
76	904229		4	Washer From 60910794	
A) Fuel-shut off					

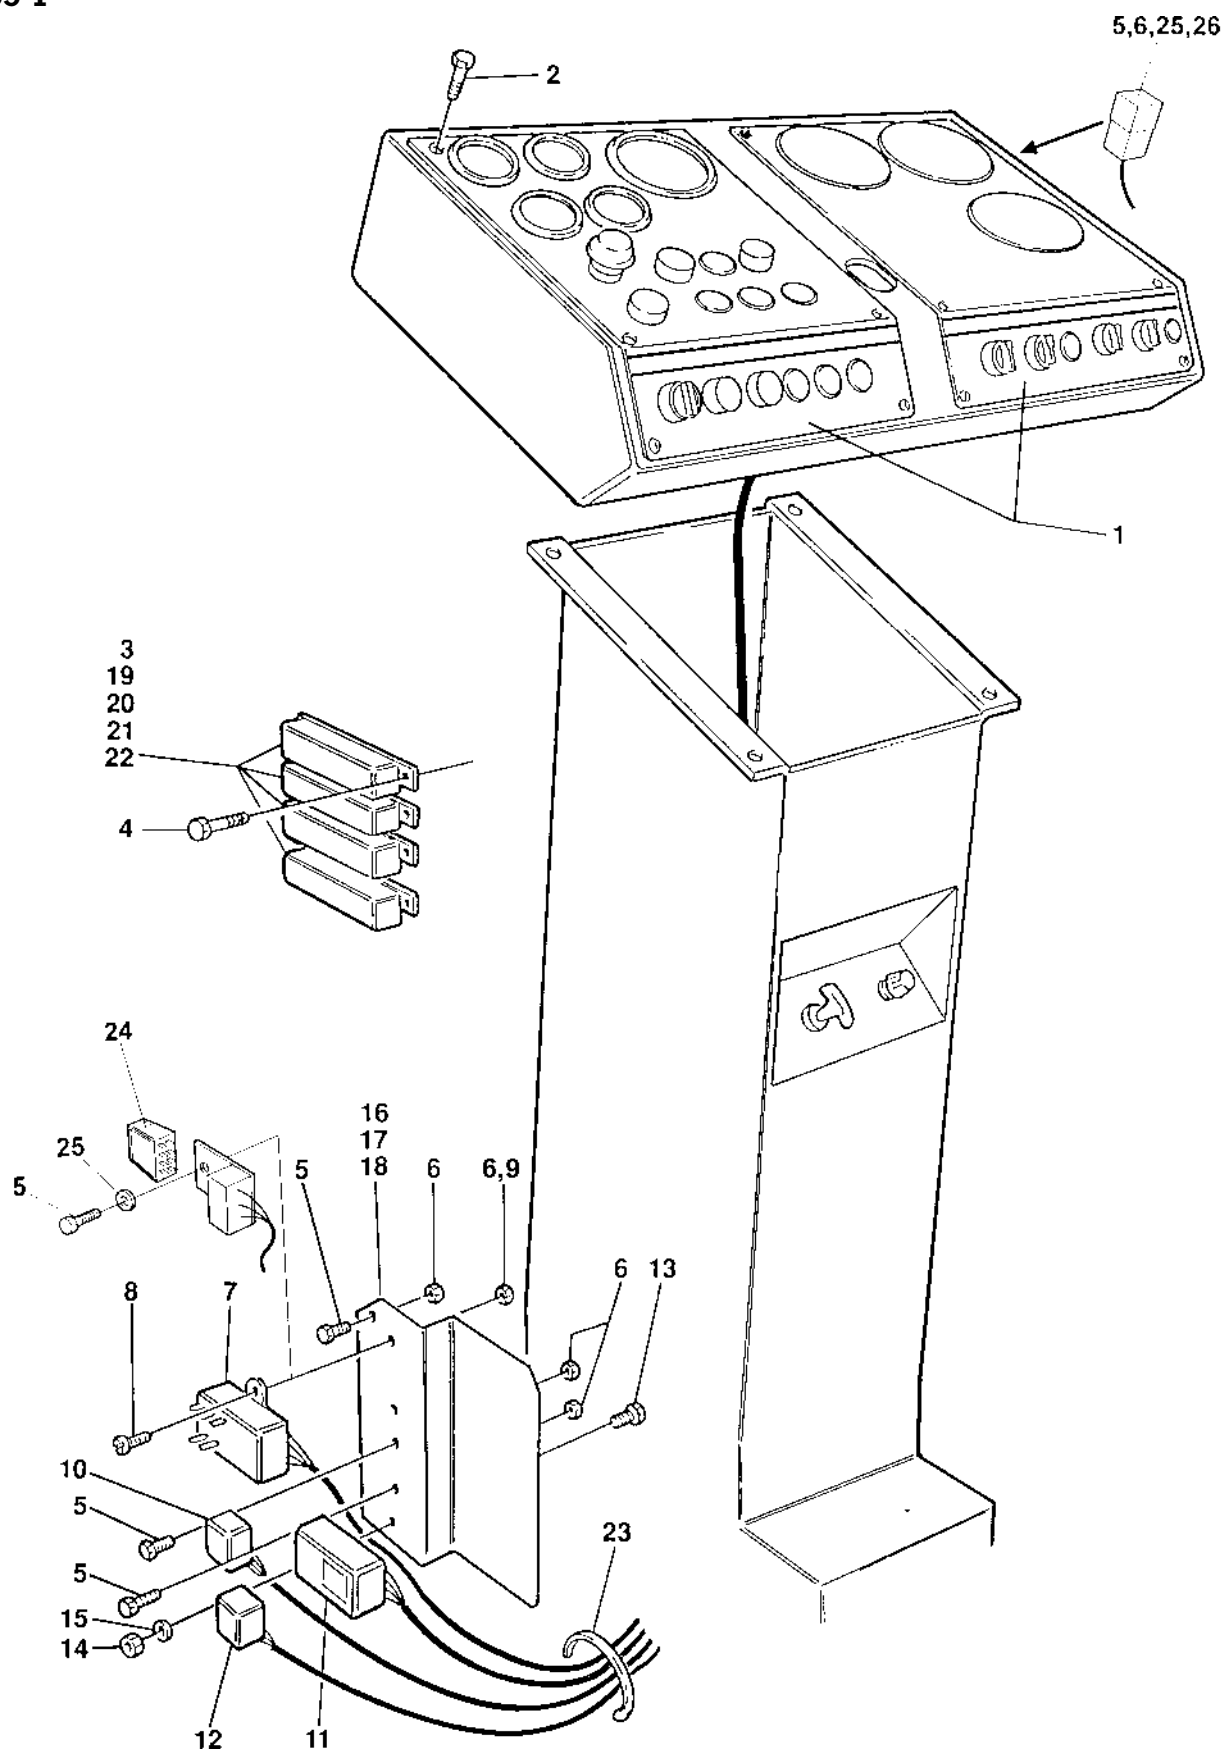



Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel (Page 114)	
2	550131		11	Screw	
3	901256		4	Fuse box	
	908110		1	.Cover	
4	901767		8	Screw	
5	533025		5	Screw	
6	586001		5	Lock nut	
7	927975	1	1	Relay Up to 60910688	
8	533008		2	Screw Up to 60910688	
9	923976		2	Nut Up to 60910688	
10	975077	A	1	Relay Up to 60910688	
	287597		1	Relay From 60910689	D
11	348485	B,1	1	Relay unit Up to 60910688	
12	904989		1	Flash relay	D
13	533026		1	Screw	
14	570003		1	Nut	
15	615041		1	Washer Up to 60910688	
16	348102		1	Relay holder	
17	500040		2	Screw	
18	904639		2	Washer	
19	901240		18	Connector	
20	901225		8	Fuse 5A	D
21	901226		13	Fuse 7,5A	D
22	901227		5	Fuse 10A	D
23	313068		N	Cable ties L=92 mm	
24	382782	2	1	Relay, VBS From 60910689	D
25	904281		5	Washer	
26	287597		1	Relay From 60910732	D

1) Items 7 and 11, is replaced by item 24.

2) Replaces items 7 and 11.


A) Sprinkler

B) Neutral position

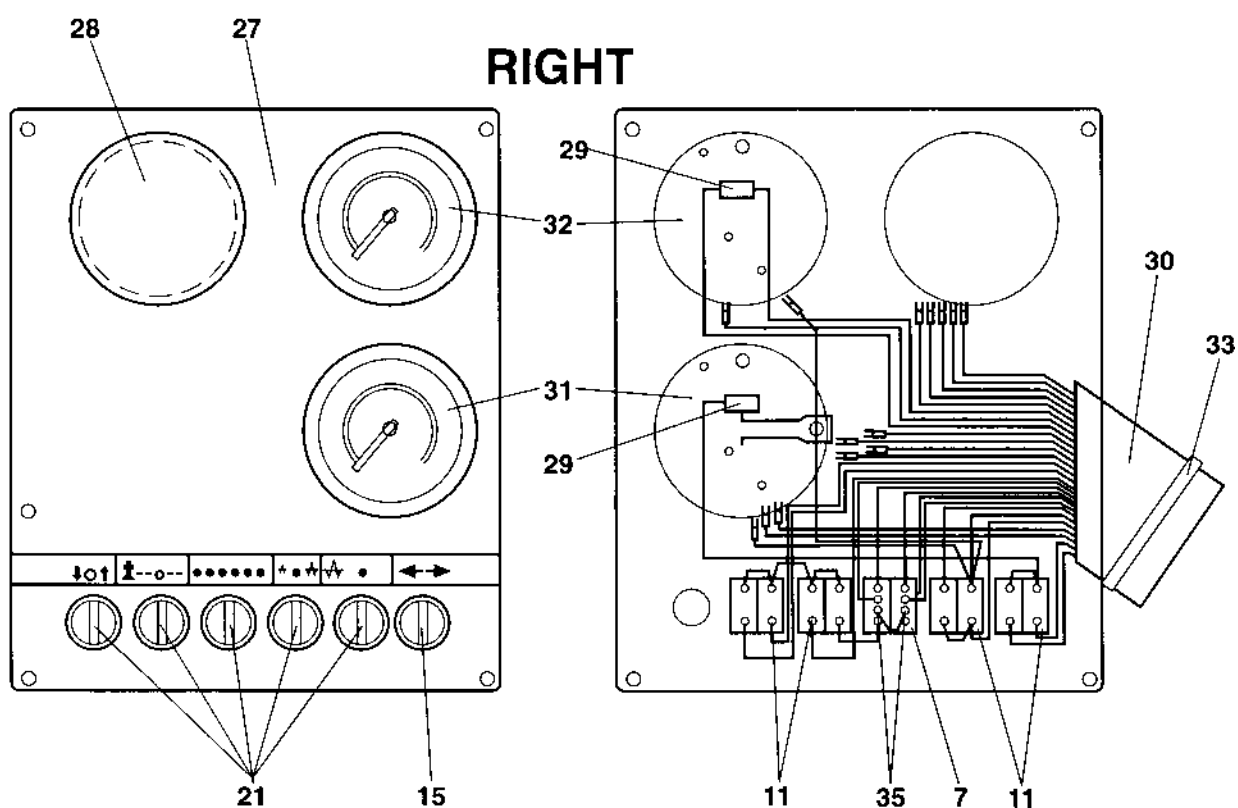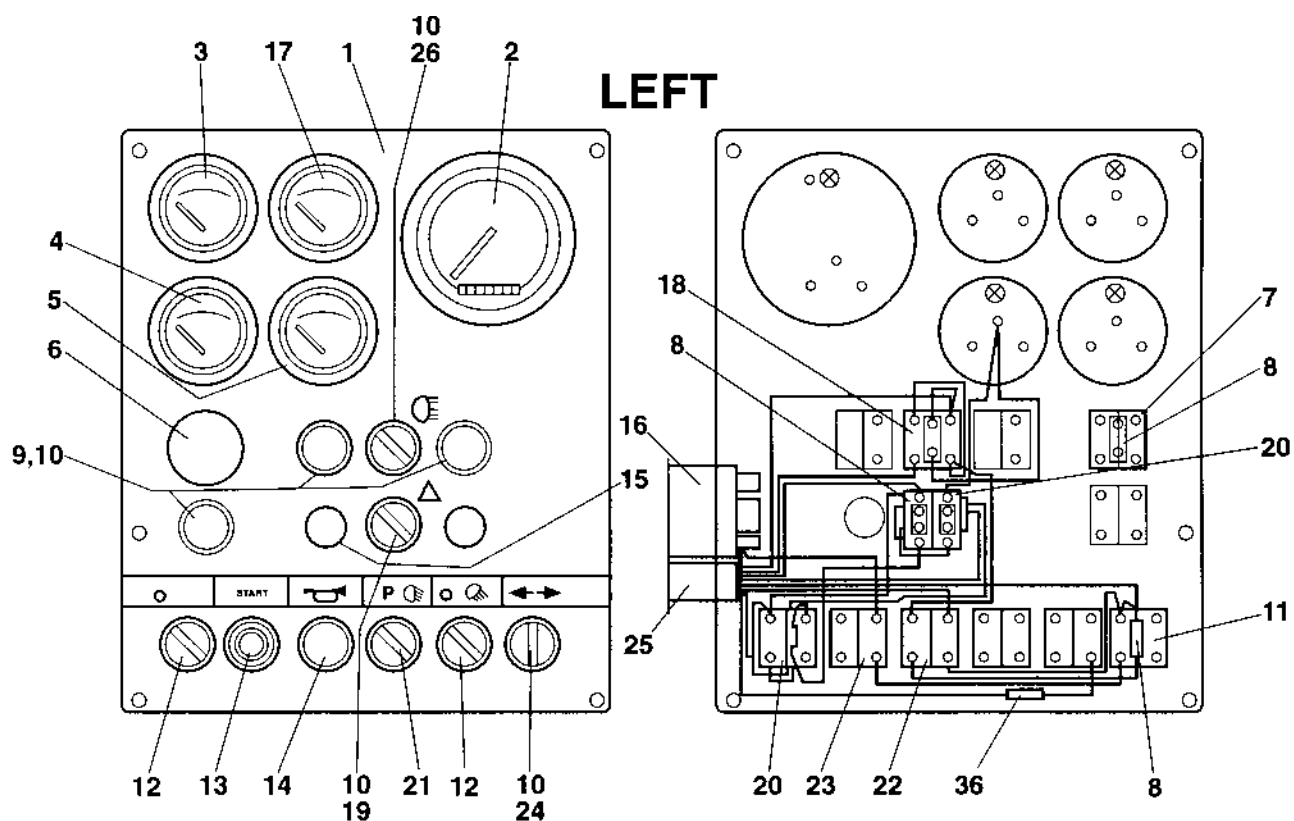

Control panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	348493		1	Instrument plate, LH	
2	355264		1	Tachometer hour meter	
	900871		1	.Bulb holder with bulb	
3	355261		1	Hydraulic oil temperature gauge	
	355258		1	.Lamp holder	
	985012		1	.Bulb	D
4	355262		1	Volt meter	D
	355258		1	.Lamp holder	
	985012		1	.Bulb	D
5	355263		1	Fuel gauge	D
	355258		1	.Lamp holder	
	985012		1	.Bulb	D
6	932036		1	Push-pull button	
7	932060		2	Contact block	
8	930163		3	Contact piece	D
9	985146		3	Lamp, red	D
10	985012		6	Bulb	D
11	930195		5	Contact block	
12	930192	A	2	Head lamp switch	D
13	928928	B	1	Push button	D
14	932032	C	1	Push button	D
15	911456		3	Hole plug	
16	356468		1	Cable harness Up to 60910672	
	370887		1	Cable harness From 60910673 Up to 60910688	
	372870		1	Cable harness From 60910689 Up to 60910731	
	375104		1	Cable harness From 60910732	
17	355259		1	Water temperature gauge	
	355258		1	.Lamp holder	
	985012		1	.Bulb	D
18	930198		1	Contact piece	
19	932056	D	1	Switch	D
20	930162		2	Connector	
21	932058	1	6	Switch	D
22	930182		1	Contact block	D
23	930155		1	Connector	
24	930161	E	1	Switch	D
25	356481	G	1	Cable harness	
26	932057	F	1	Switch	
27	349301		1	Instrument plate, RH	
28	345139		1	Hole plug	
29	357526		2	Resistor From 60910548	
30	356467		1	Cable harness Up to 60910672	
	370888		1	Cable harness From 60910673	
31	355266		1	Frequency meter Up to 60910547	
	357519		1	Frequency meter From 60910548 Up to 60910670	
	371274		1	Tachometer and frequency meter From 60910671	D
	900871		1	.Bulb holder with bulb	
32	355470		1	Speedometer Up to 60910547	D
	357521		1	Speedometer From 60910548 Up to 60910731	
	375629		1	Speedometer From 60910732	
	900871		1	.Bulb holder with bulb	
33	313068		N	Cable ties L=92 mm	
35	930154		2	Connector	
36	345869		1	Resistance	D
1) For lights, drum sprinkler and vibration					
A) Ignition, lights					
B) Starter					
C) Horn					
D) Hazard					
E) Turn signal					
F) Head light					
G) Driving lights.					

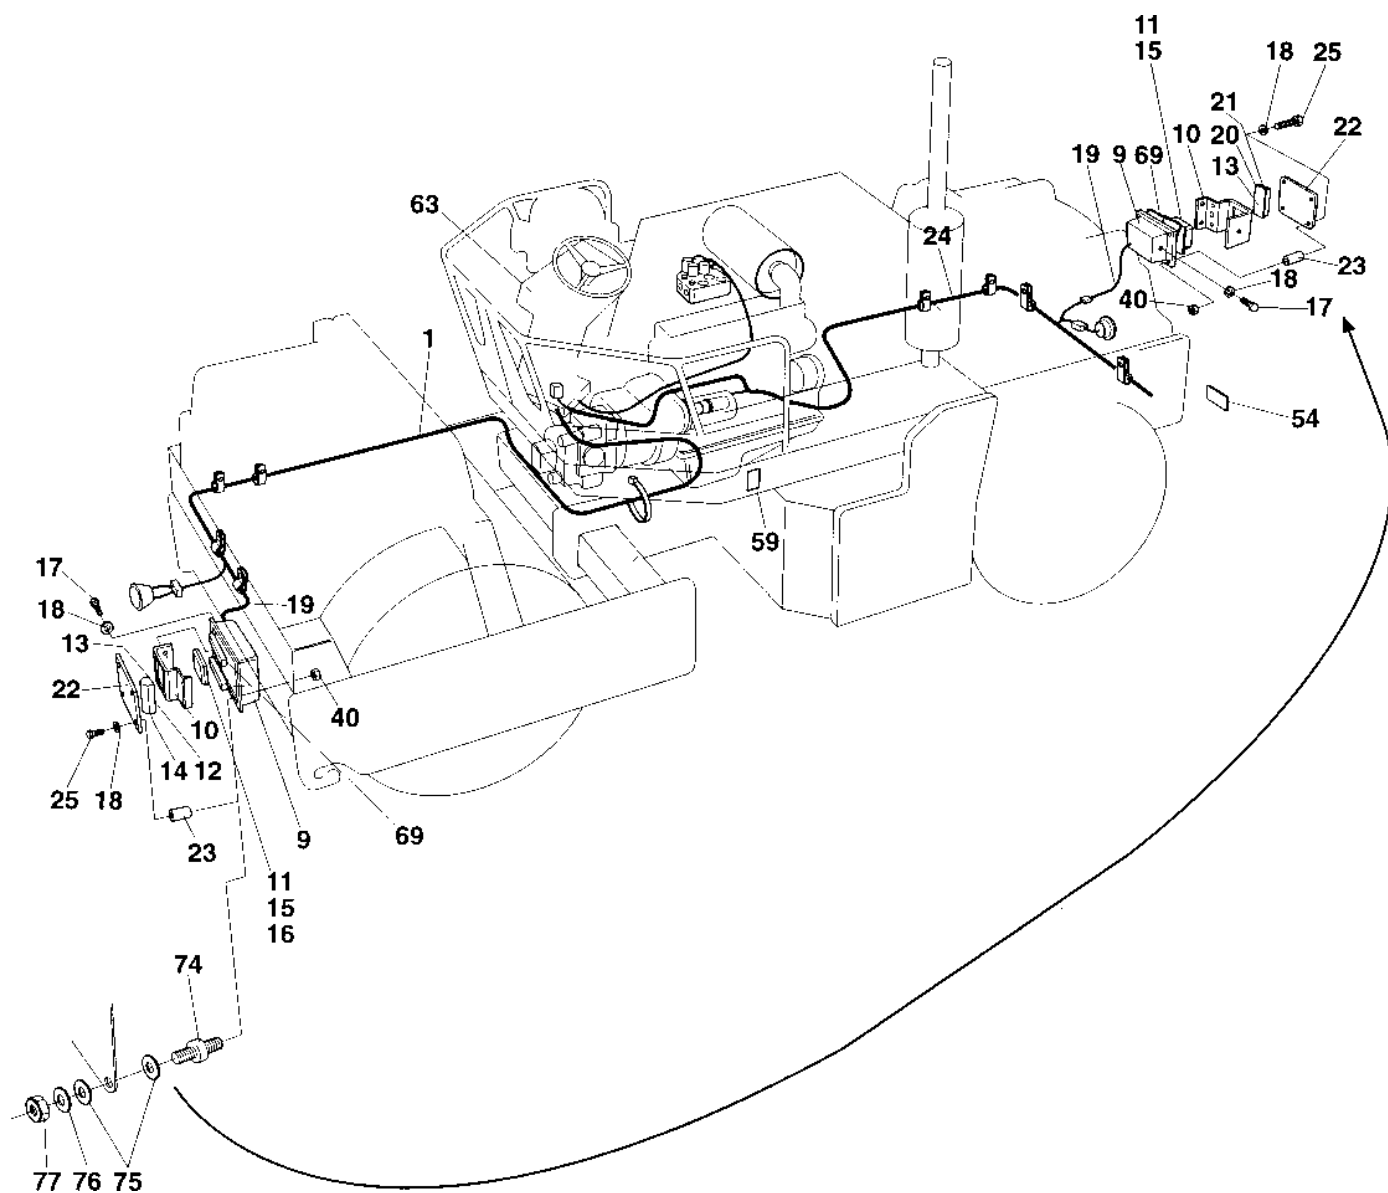

Lights

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1	1	Cable harness	D
9	355999		4	Head lamp shield	
10	355859		4	Lamp holder	
11	900792	3,E	2	Head light	
	901994	4,E	2	Head light	
	901993	5,F	2	Head light	
	586001		16	Lock nut	
12	900794		2	Turn signals	
13	928502	A	4	Bulb 21w	B
14	985014	B	2	Bulb 5w	B
15	900790	6,E	2	Bulb 60/55w H4	B
	901369	5,F	2	Bulb 55w H3	B
16	910992	3,4,E	2	Connector	
17	500040		16	Screw	
18	600004		32	Washer Up to 60910592	
19	356615	3,4,E	2	Cable harness, front	
	356616	5,F	2	Cable harness, rear	
	909107		4	Grommet	
20	900793		2	Tail light	
21	900791	C	2	Bulb	B
22	355987		4	Plastic protection	D
23	603010		32	Washer Up to 60910547	
	358002		16	Spacer sleeve From 60910548 Up to 60910592	
24		1	1	Cable harness	
25	500015		16	Screw Up to 60910592	
40	570004		16	Nut	
54	901182		2	Reflector, red	B
59	901183		2	Reflector, yellow	B
63			1	Instrument column (Page 112)	
69	202046	D	8XL	Rubber strip From 60910548	
74	358943		16	Stud From 60910593	
75	903297		32	Washer Nylon From 60910593	
76	928381		16	Washer From 60910593	
77	586002		16	Lock nut From 60910593	

1) See section "Electrical equipment".

3) For lights asymmetric head lights in countries w RH traffic only

4) For left asymmetric head lights in countries w LH traffic only,option

5) For working lights

6) For right/left asymmetric head lights in countries w RH/LH traffic only,option.

A) Turn signal


B) Position light

C) Rear/brake

D) L= 0.10 m

E) Front

F) Rear

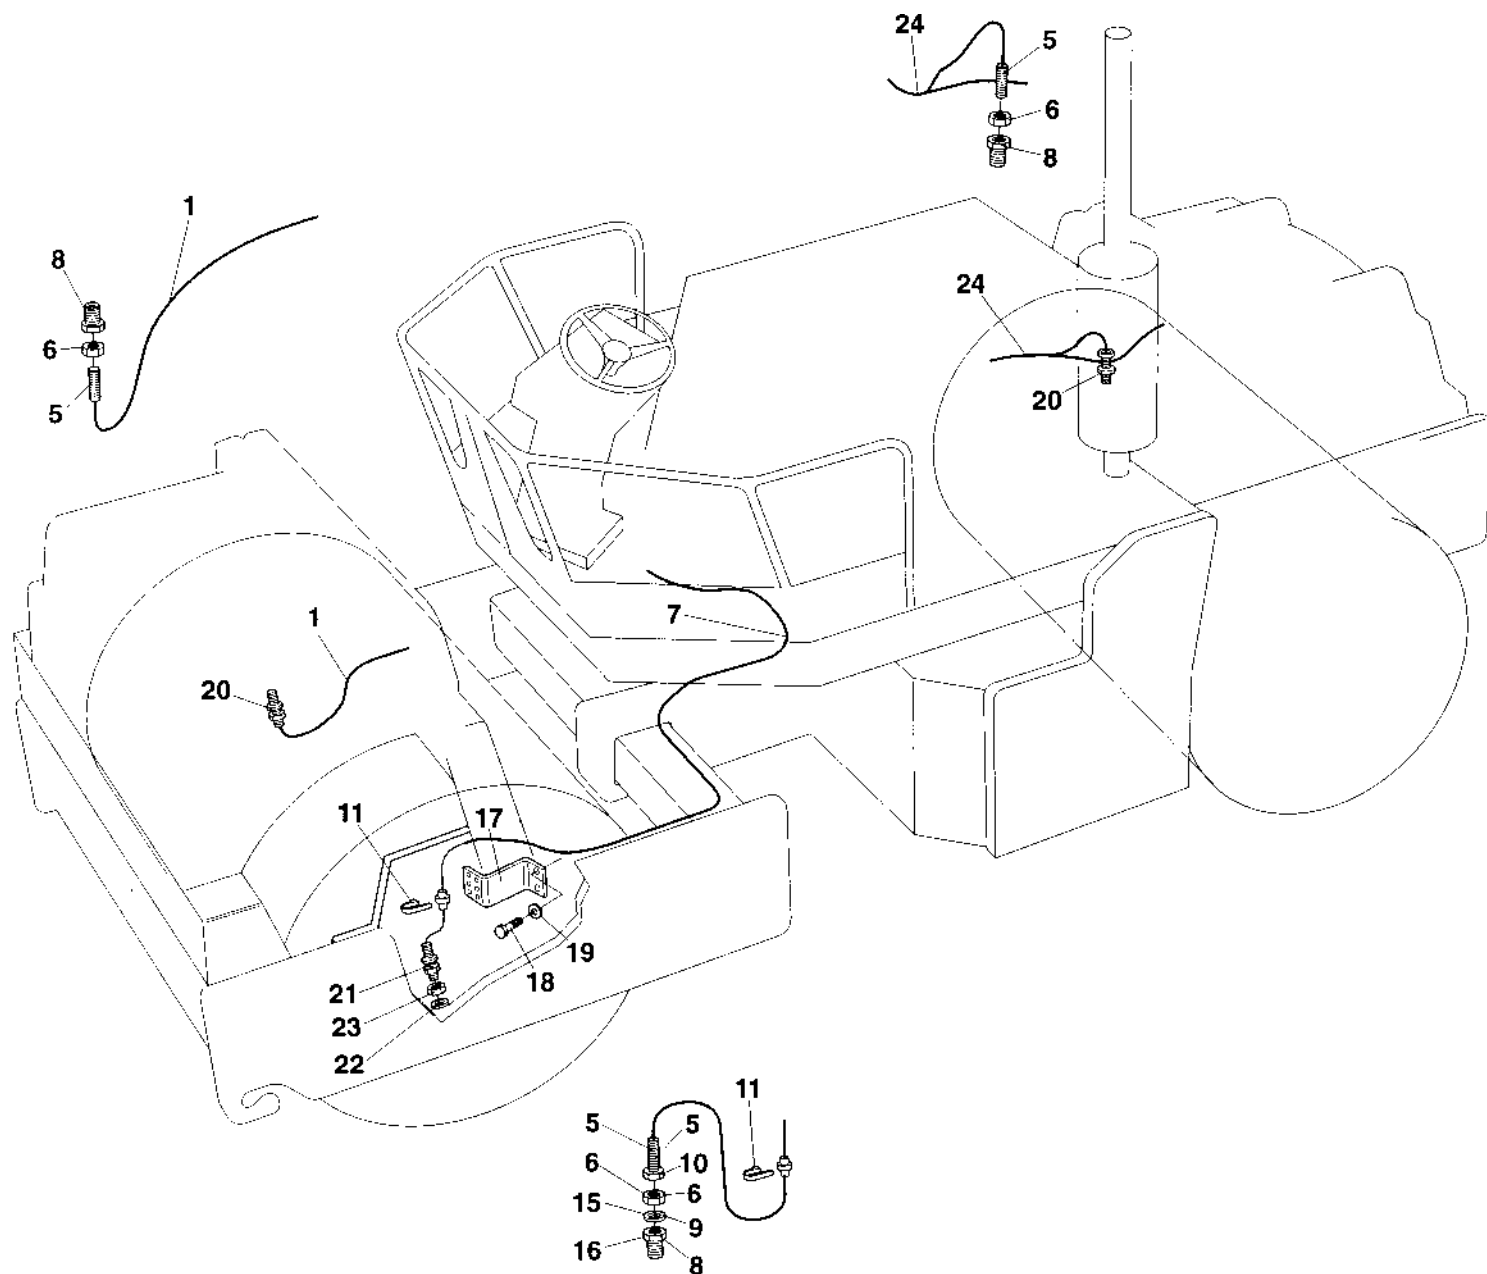


Sensors

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1	1	Cable harness	
5	801705		2	Sensor Up to 60910547	
	902170		3	Sensor From 60910548 Up to 60910660	
6	801669		3	Thru-seal nut Up to 60910600	
	801669		2	Thru-seal nut From 60910601 Up to 60910660	
7	356530		1	Cable harness Up to 60910660	
	370426		1	Cable harness From 60910661	
8	357485		3	Adapter From 60910548 Up to 60910600	
	357485		2	Adapter From 60910601 Up to 60910660	
9	902292		1	Sealing Up to 60910600	D
10	902293		1	Nut Up to 60910600	
11	313041		N	Cable ties L=186 mm	
15	903321		1	Seal washer From 60910601 Up to 60910660	
16	358985		1	Adapter From 60910601 Up to 60910660	
17	358992		1	Bracket From 60910601 Up to 60910660	
18	500047		2	Screw From 60910601 Up to 60910660	
19	615043		2	Conical spring washer From 60910601 Up to 60910660	
20	370307	A	2	Sensor From 60910661 Up to 60910753	D
	372618	B	2	Sensor 3/4-16 From 60910754	
21	376422		1	Sensor, cpl From 60910661	
22	904795		1	Washer, sealing	
23	574013		1	Lock nut	
24		1	1	Cable harness	

1) See section "Electrical equipment".

A) 4-wire

B) 2-wire

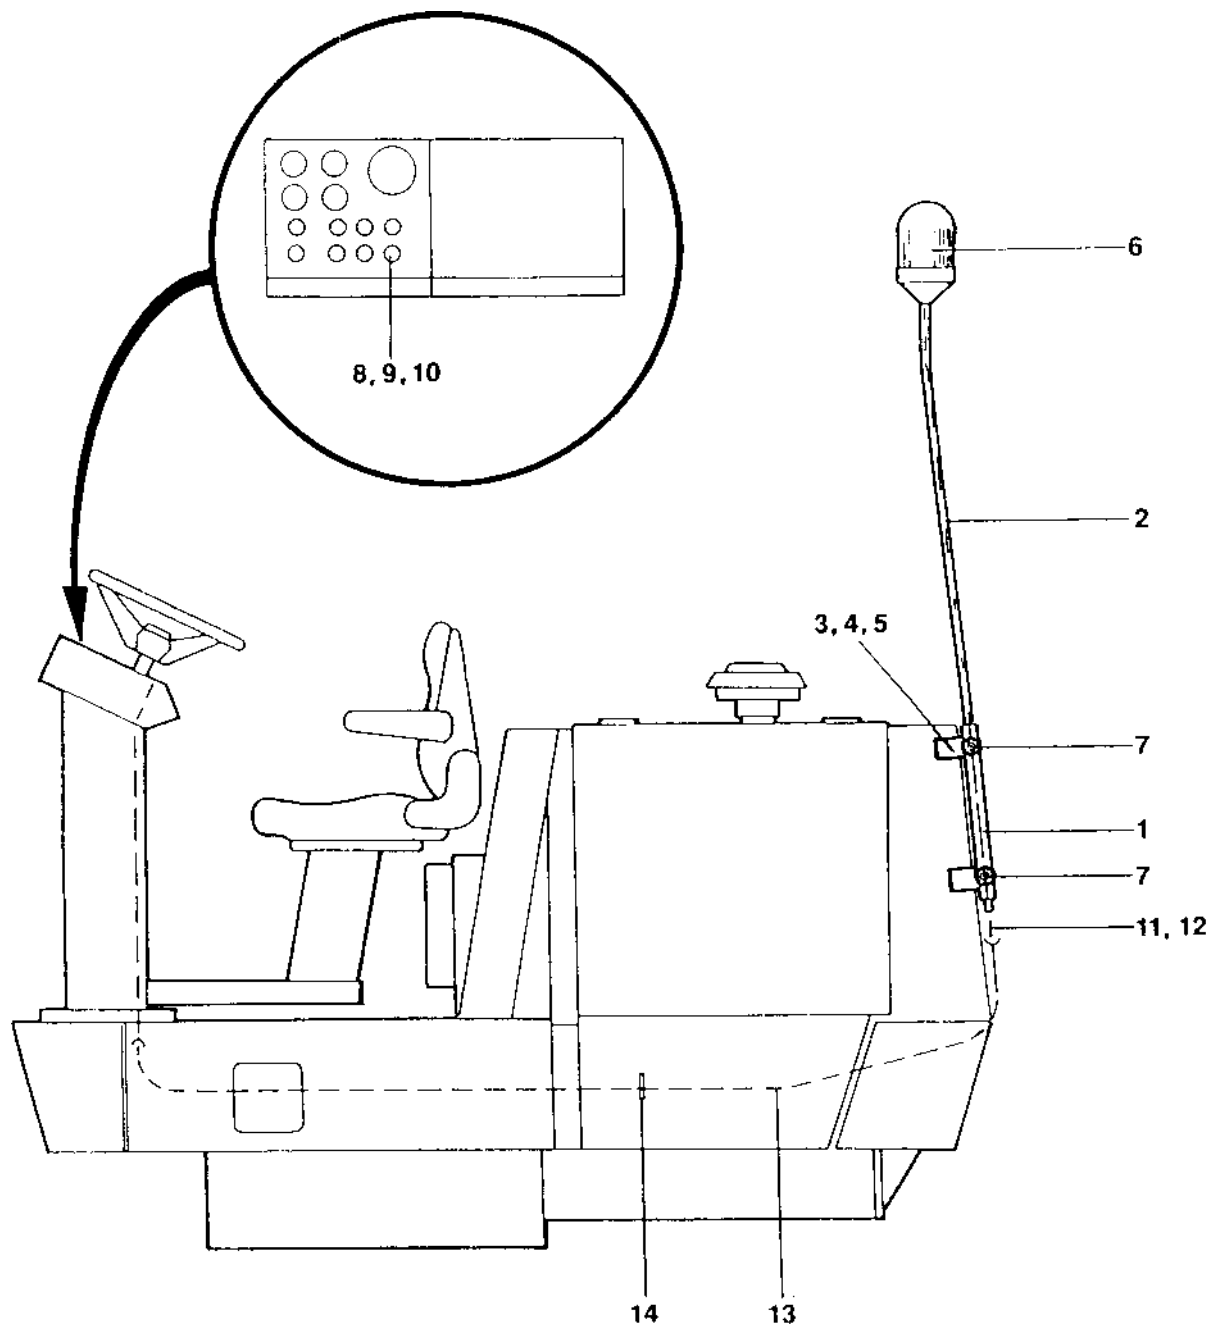

Rotating Beacon

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	343975		1	Lamp holder	
2	347237		1	Lamp holder	
3	500029		2	Screw	
4	586018		2	Lock nut	
5	904230		2	Washer	
6	999011	A	1	Rotating beacon	D
	985126		1	.Bulb	B
	902803		1	.Lens Orange	B
	985126		1	.Bulb	B
7	499162		2	Wing screw	
8	930166		1	Switch	D
9	985012		1	Bulb	D
10	930165		1	Contact block	D
11	900100	D	1XL	Cable	
12	244002	E	1XL	Plastic hose	
13	356478		1	Cable harness	
14	313041		N	Cable ties L=186 mm	



A) Orange

D) L=1.5 m

E) L=1.4 m

Back-up alarm

15267-1

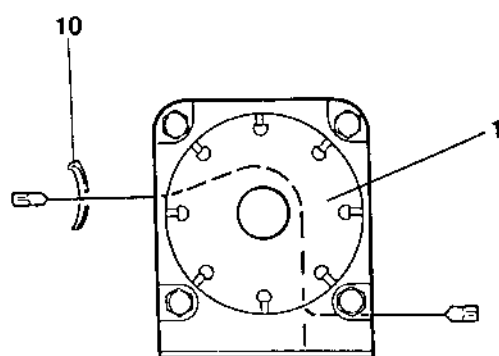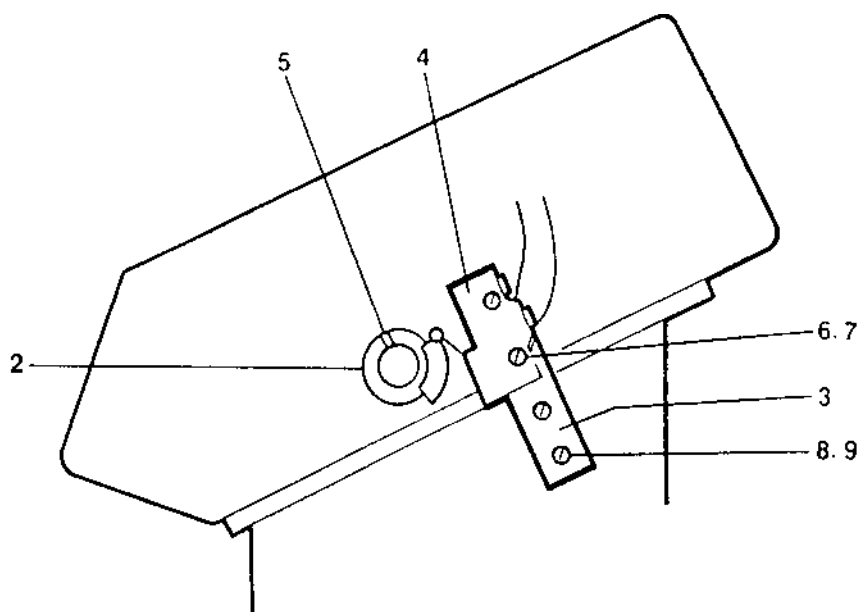


Back-up alarm

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	900798		1	Back-up alarm	
			4	.Screw	
			4	.Washer	
			4	.Nut	
2	346417		1	Cam ring Up to 60910731	D
3	349468		1	Holder plate Up to 60910731	
4	930046		1	Micro switch Up to 60910731	D
5	923988		1	Stop screw Up to 60910731	
6	900243		2	Screw Up to 60910731	
7	928927		2	Lock nut Up to 60910731	
8	500012		2	Screw Up to 60910731	
9	615042		2	Conical spring washer Up to 60910731	
10	313068		N	Cable ties L=92 mm	

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Drivers platform (Page 126)	
20				Swivel panel (Page 128)	
30			2	Drivers seat Up to 60910799 (Page 130)	
			2	Drivers seat From 60910800 (Page 132)	
50				Engine controls Up to 60910731 (Page 134)	
				Engine controls From 60910732 (Page 136)	
60				F/R control (Page 138)	
70				F/R control Dual, left side (Page 140)	
100				Rops and seat belt (Page 142)	

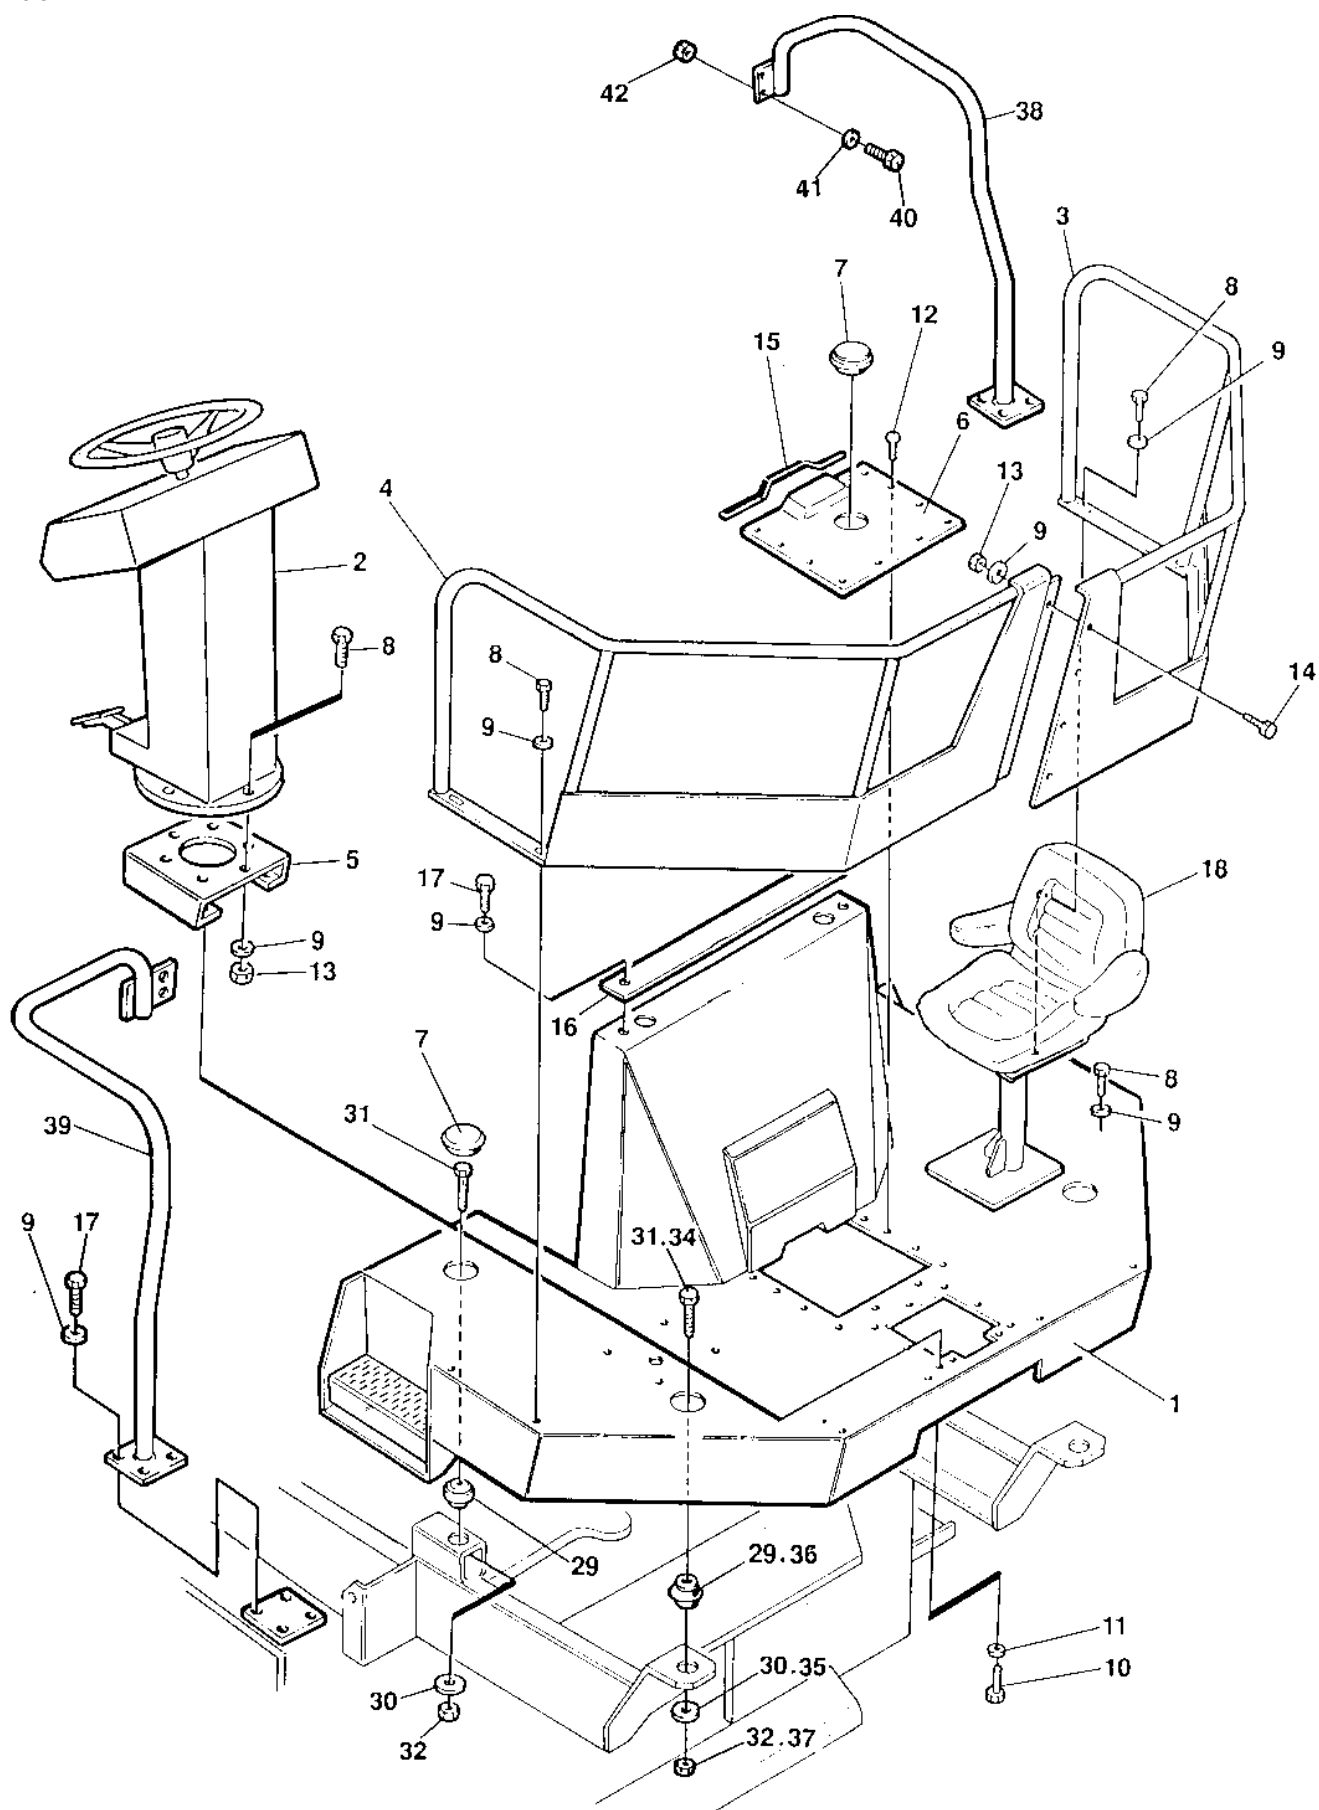

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	851247		1	Platform Up to 60910617	
	359392		1	Platform From 60910618	
2			1	Swivel panel (Page 128)	
3	851223		1	Railing left Up to 60910617	
	359543		1	Railing left From 60910618	
4	851229		1	Railing right Up to 60910617	
	359539		1	Railing right From 60910618	
5	851439		1	Spacer Up to 60910731	
	375160	2	1	Spacer From 60910732	
6	851242		1	Cover	
7	232129		5	Plug	
	903547	E	5	Plug	
8	500029		14	Screw	
9	904230		24	Washer	
10	500046		6	Screw	
11	904703		6	Washer	
12	513025		10	Screw	
13	570006		10	Nut	
14	500048		4	Screw M10x20	
15	927991	A	1XL	Edge trim	
16	355837		1	Cover plate	
17	500028		10	Screw	
18		1	2	Drivers seat Up to 60910799 (Page 130)	
		1	2	Drivers seat From 60910800 (Page 132)	
29	801698	1	4	Shock absorber Up to 60910533	B
	801698	D,1	2	Shock absorber From 60910534	B
30	850789		N	Washer	
31	500199		4	Screw Up to 60910533	
	500107	D	2	Screw From 60910534	
32	586021		4	Nut Up to 60910533	
	586021		2	Nut From 60910534	
34	500146	F	2	Screw From 60910534	
35	842756		N	Washer From 60910534	
36	450144	1,F	2	Shock absorber From 60910534	
37	586023		2	Nut From 60910534	
38	359387		1	Hand rail, left From 60910618	
39	359383		1	Hand rail, right From 60910618	
40	500031		4	Screw From 60910618	
41	902287		4	Nut From 60910618	
42	904230		4	Washer From 60910618	

1) For rollers with cab, see section " Cab Interior "


2) 20 mm higher.

A) L=0.4 m

D) Rear

E) Plastic

F) Front

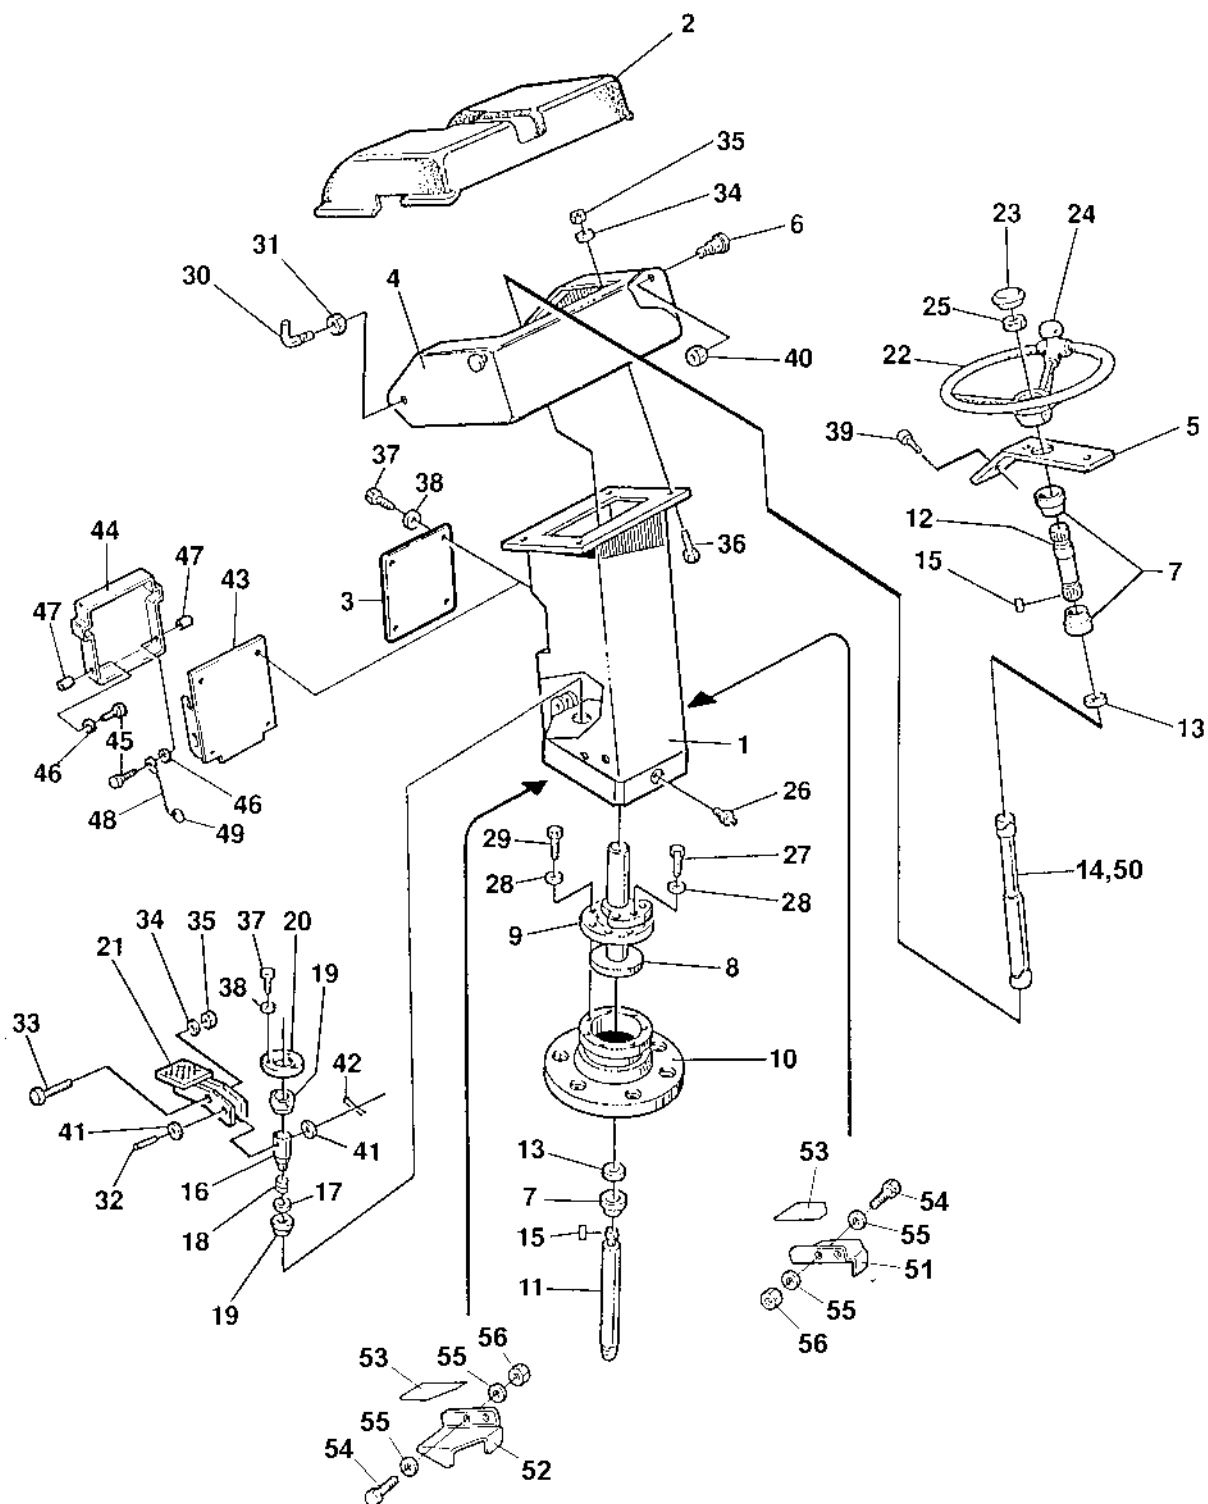


Swivel panel

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	356578		1	Control panel	
2	348336		1	Cover	
3	851333		1	Cover	
4	345452		1	Instrument box	
5	347479		1	Center bracket	
6	348338		2	Stud	
7	926551		3	Plain bushing	
8	851332		1	Bracket Up to 60910731	
	375141		1	Bracket From 60910732	
9	347470		1	Ring	
10	349546		1	Flange	
11	851329		1	Shaft Up to 60910731	
	375153		1	Shaft From 60910732	
12	347466		1	Shaft	
13	904232		2	Washer	
14	347462		1	Cardan shaft	
15	350009		2	Flat key	D
16	851327		1	Locking rod	
17	615025		1	Lock washer	
18	300234		1	Spring	
19	926552		2	Bearing	
20	347669		1	Adapter	
21	349548		1	Pedal	
22	343782		1	Steering wheel	
23	271129		1	Steering mark sign	
24	312082		1	Turning knob	
25	926963		1	Wheel nut	
26	926214		1	Grease fitting	D
27	500031		3	Screw	
28	904230		6	Washer	
29	500028		3	Screw	
30	348337		2	Lock pin	
31	570006		2	Nut	
32	530005		1	Pin	
33	500022		1	Screw	
34	904229		5	Washer	
35	586003		5	Lock nut	
36	500053		4	Screw	
37	500185		7	Screw	
38	615042		7	Conical spring washer	
39	550132		2	Screw	
40	586002		2	Lock nut	
41	904281		2	Washer	
42	630037		1	Split pin	
43	359379		1	Holder plate	
44	357425		1	Instruction book holder	
45	902164		2	Screw	
46	929602		2	Washer	
47	902163		2	Parallel pin	
48	357643		1	Wire	
49	358254		1	Key-ring	
50	904957	A	1XL	Conduit	
51	375456	B	1	Foot rest, left	
52	375457	B	1	Foot rest, right	
53	374675		2	Slip protection	
54	500053		4	Screw	
55	904229		8	Washer	
56	570005		4	Nut	

A) L=0.63 m

B) Option

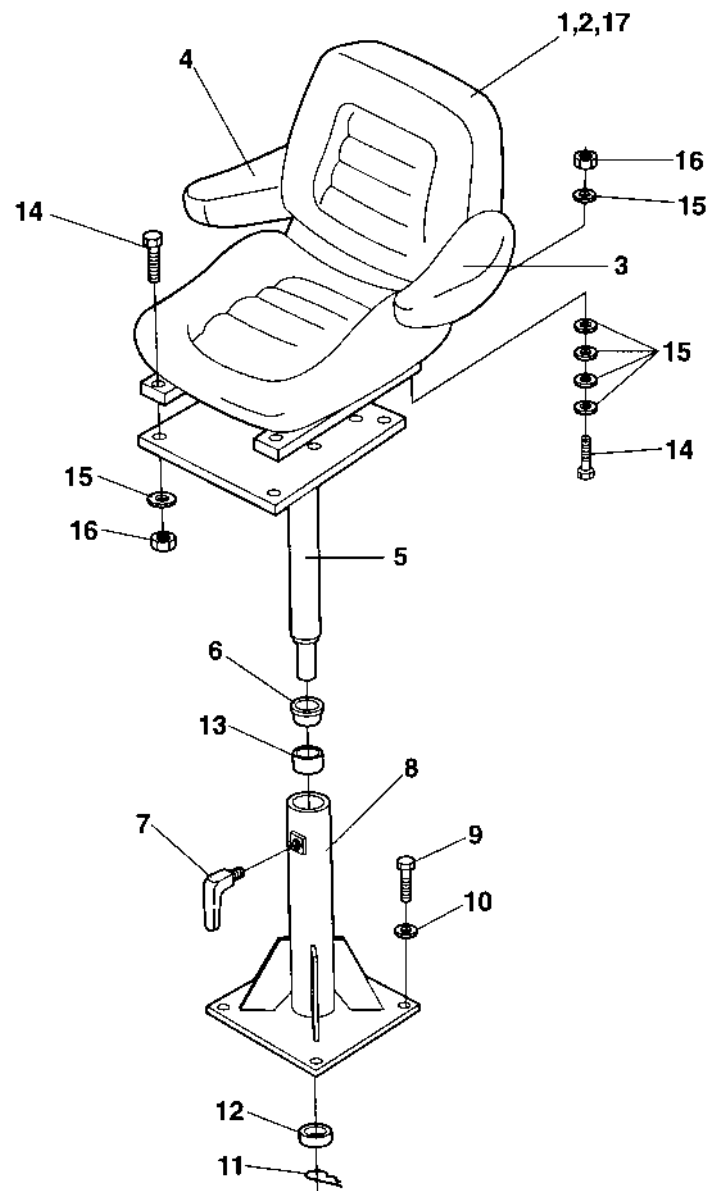


Drivers seat

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	344374	A	1	Seat, black galon	
2	212408	B	1	.Sliding rail	D
3	212115		1	.Arm rest, left	D
4	212114		1	.Arm rest, right	D
5	356116		1	Seat frame	
6	901358		1	Flange bearing	
7	901216		1	Lever	
8	356115		1	Seat frame	
9	500029		4	Screw	
10	615044		4	Conical spring washer	D
11	924984		1	Lock pin	
12	615107		1	Washer	
13	901359		1	Sleeve bearing	
14	500053		5	Screw	
15	904229		9	Washer	
16	586003		5	Lock nut	
17	348331		1	Seat cover	D

A) Cpl w. arm rests.

B) One pair.

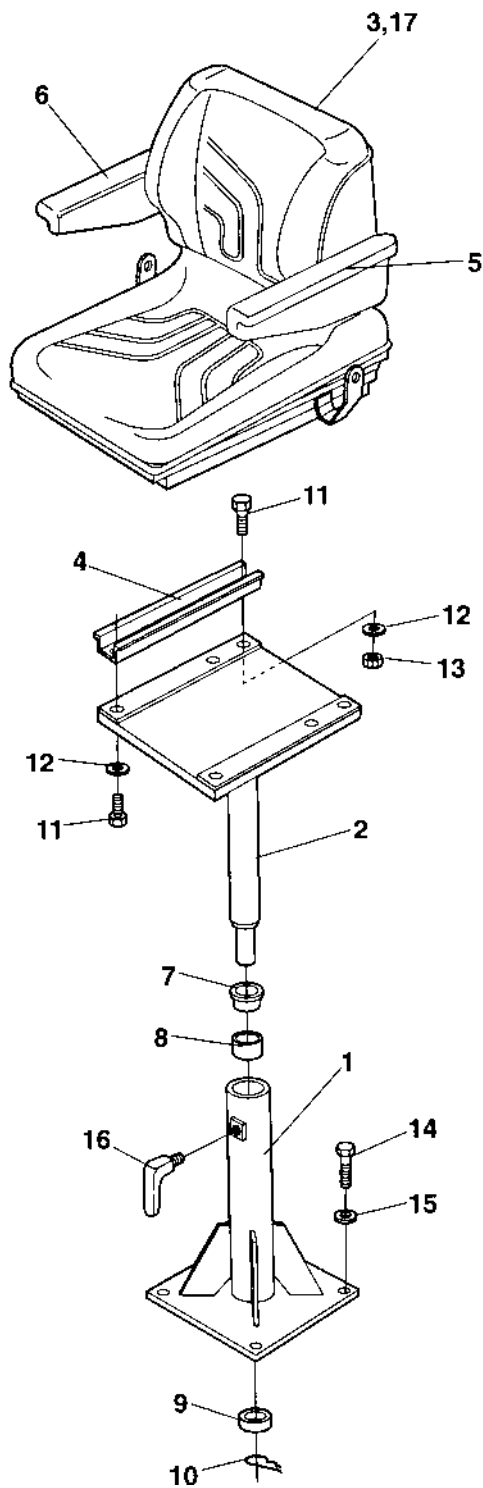

Drivers seat


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	381267		1	Seat frame	
2	380458		1	Seat frame	
3	370234		1	Drivers seat	
	936283		1	.Seat switch	D
4	909535	A,B	1	.Sliding rail	D
	909536	C	1	.Sliding rail	D
5	372696	B	1	.Arm rest	
6	372697	C	1	.Arm rest	
7	901358		1	Flange bearing	
8	904779		1	Sleeve bearing	
9	904805		1	Spacer washer	
10	150014		1	Snap ring	D
11	500053		6	Screw	
12	904229		6	Washer	
13	586003		4	Lock nut	
14	500029		4	Screw	
15	904557		4	Washer	
16	901216		1	Lever	
17	348331	D	1	Seat cover	D

A) With handle.

B) Left


C) Right

D) Option

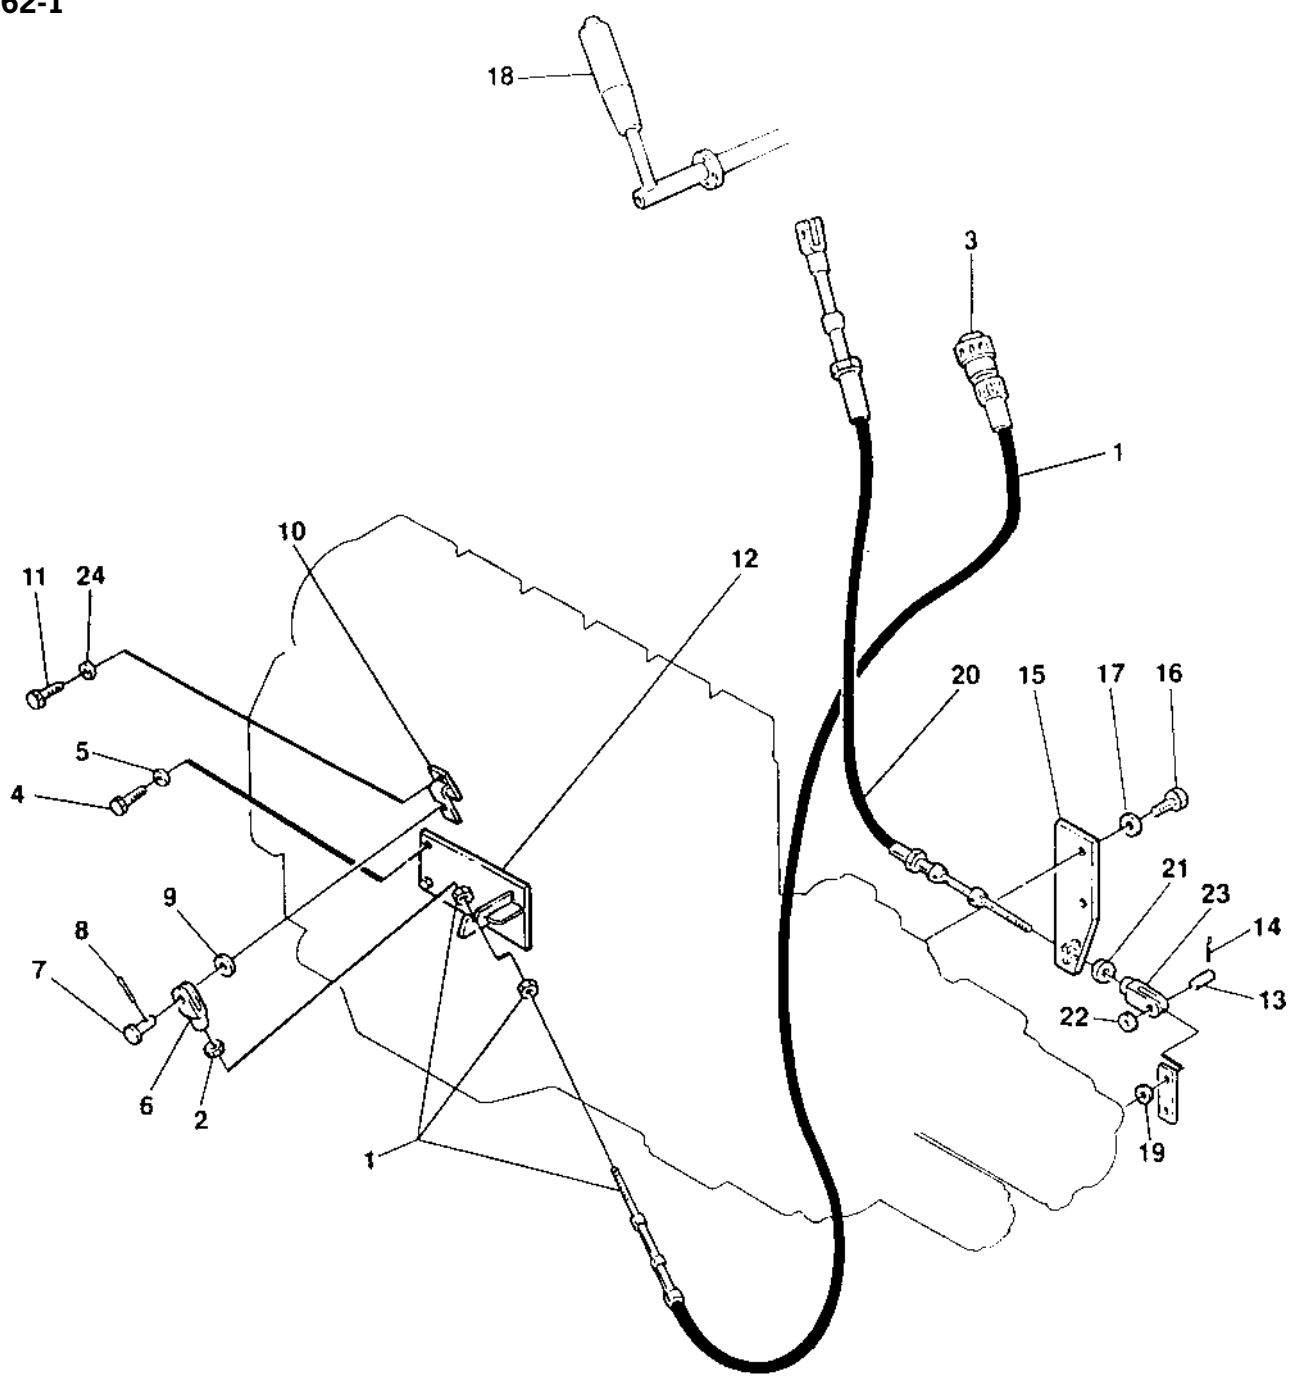


Engine controls

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	456099		1	Throttle control	
2	572009		1	.Nut	
3	926312		1	.Protection cover	
4	500048		2	Screw M10x20	
5	904230		2	Washer	
6	813361		1	Yoke	
7	550047		1	.Pin	
8	630003		1	.Cotter pin	
9	904228		1	.Washer	
10	851491		1	Bracket	
11	533036		2	Screw	
12	851601		1	Bracket	
13	530016		1	Clevis pin	
14	630003		1	Cotter pin	
15	851472		1	Control bracket	
16	502035		2	Screw	
17	904232		2	Washer	
18			1	F/R control (Page 138)	
19	603018		1	Washer	
20	900202		1	Cable forward/reverse	D
21	572002		1	.Nut	
22	904229		1	Washer	
23	813369		1	Fork link	
24	604003		2	Washer	

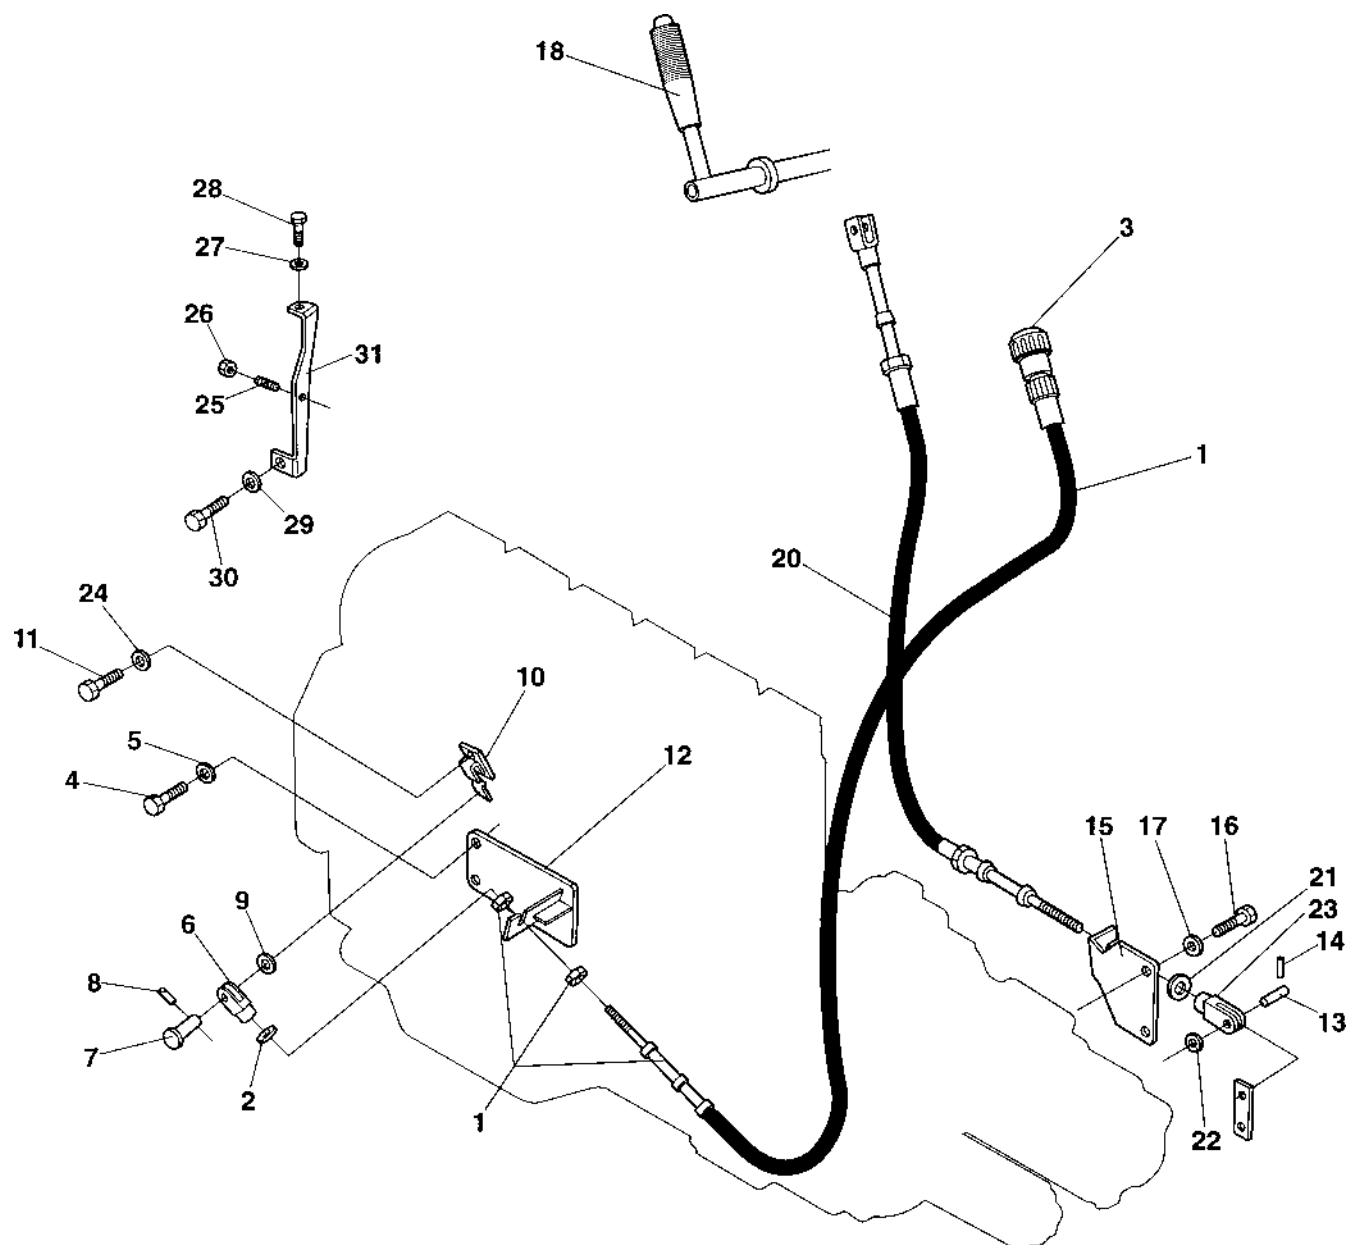


Engine controls

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	456099		1	Throttle control	
2	572009		1	.Nut	
3	926312		1	.Protection cover	
4	500048		2	Screw M10x20	
5	904230		2	Washer	
6	813361		1	Yoke	
7	550047		1	.Pin	
8	630003		1	.Cotter pin	
9	904228		1	.Washer	
10	851491		1	Bracket	
11	533036		2	Screw	
12	851601		1	Bracket	
13	530016		1	Clevis pin	
14	630003		1	Cotter pin	
15	375183		1	Control bracket	
16	502074		2	Screw	
17	904232		2	Washer	
18			1	F/R control (Page 138)	
20	900202		1	Cable forward/reverse	D
21	572002		1	.Nut	
22	904229		1	Washer	
23	813369		1	Fork link	
24	604003		2	Washer	
25	923987		1	Stop screw From 60910800	
26	573003		1	Nut From 60910800	
27	904228		1	Washer From 60910800	
28	500040		1	Screw From 60910800	
29	904229		1	Washer From 60910800	
30	500021		1	Screw From 60910800	
31	375507		1	Bracket From 60910800	

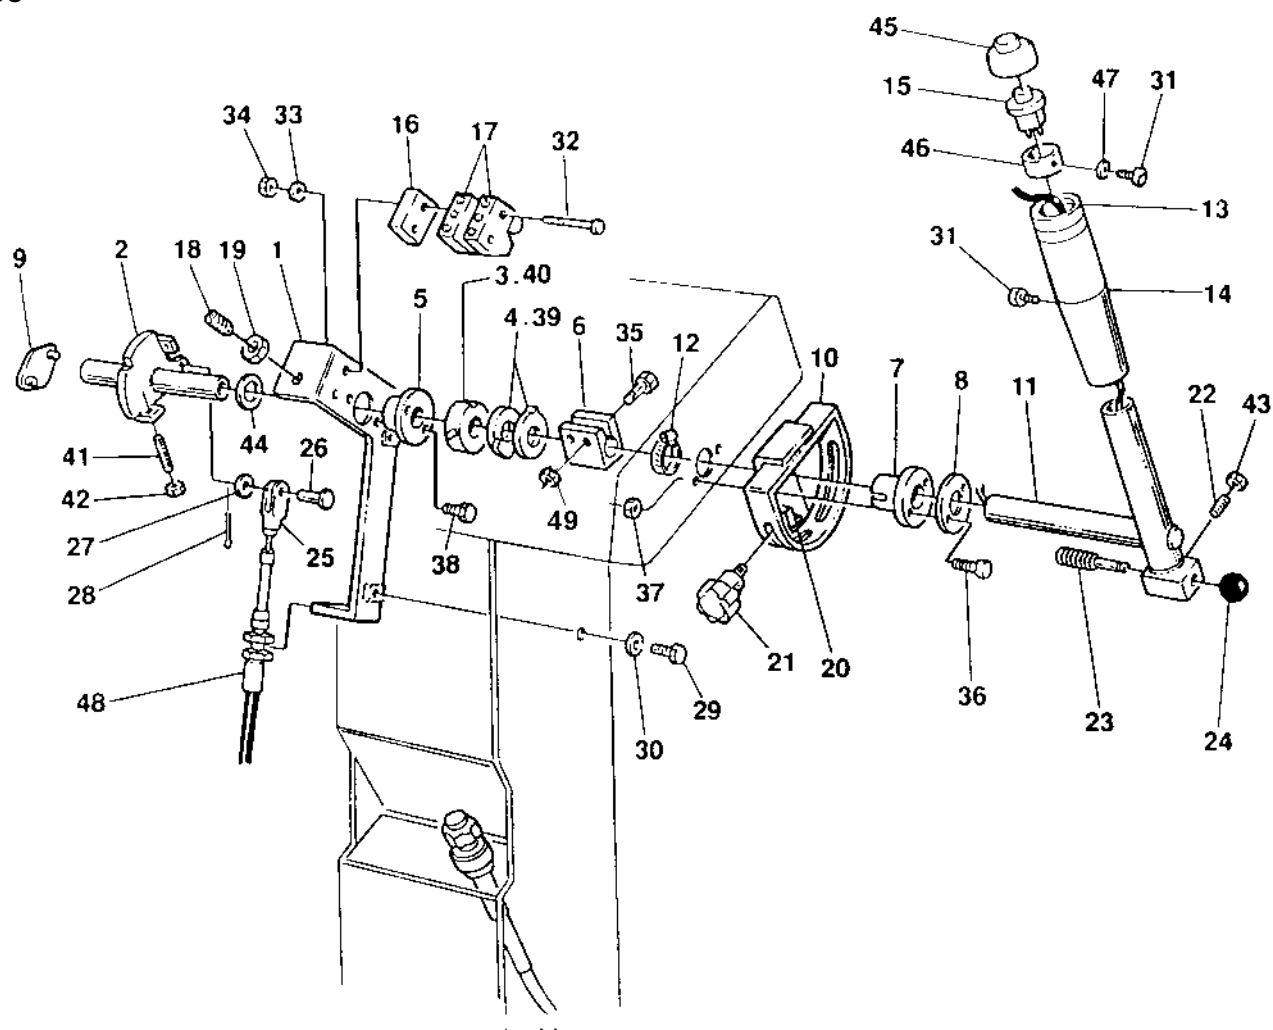


F/R control

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	851609		1	Control bracket	
2	346414		1	Shaft	
3	345904		1	Ring	
4	346417		2	Cam ring	D
5	345640		1	Bushing	
6	346420		1	Coupling	
7	345992		1	Bushing	D
8	346421		1	Washer	D
9	346393		1	Plug	
10	346422		1	Stop curve	
11	346426		1	Grab handle	
12	313147		1	Hose clip	
13	348482		1	Cable harness	
14	285909		1	Grab handle	D
15	928497		1	Push button	D
16	345905		1	Plate Up to 60910731	
	345905		3	Plate From 60910732	
17	930046		2	Micro switch Up to 60910731	D
	930046		1	Micro switch From 60910732	D
18	922325		1	Spring loaded pin	D
19	570008		1	Nut	
20	346429		2	Stop	
21	499162		2	Wing screw	
22	923900		1	Spring loaded pin	
23	346431		1	Bolt	
24	312001		1	Handle grip	
25	813369		1	Fork link	
26	530016		1	Clevis pin	
27	904229		1	Washer	
28	630003		1	Cotter pin	
29	500053		2	Screw	
30	615043		2	Conical spring washer	
31	533001		3	Screw	
32	923901		2	Screw	
33	904698		2	Washer	
34	570001		2	Nut	
35	500047		2	Screw	
36	923927		2	Screw	
37	586002		2	Lock nut	
38	533058		2	Screw	
39	923988		2	Stop screw	
40	516042		1	Stop screw	
41	928005		2	Stop screw	
42	570004		2	Nut	
43	570005		1	Nut	
44	925749		2	Washer	
45	348481		1	Cover	D
46	285911		1	Bushing	D
47	904697		2	Washer	
48	900202		1	Cable forward/reverse	D
49	586003		1	Lock nut	

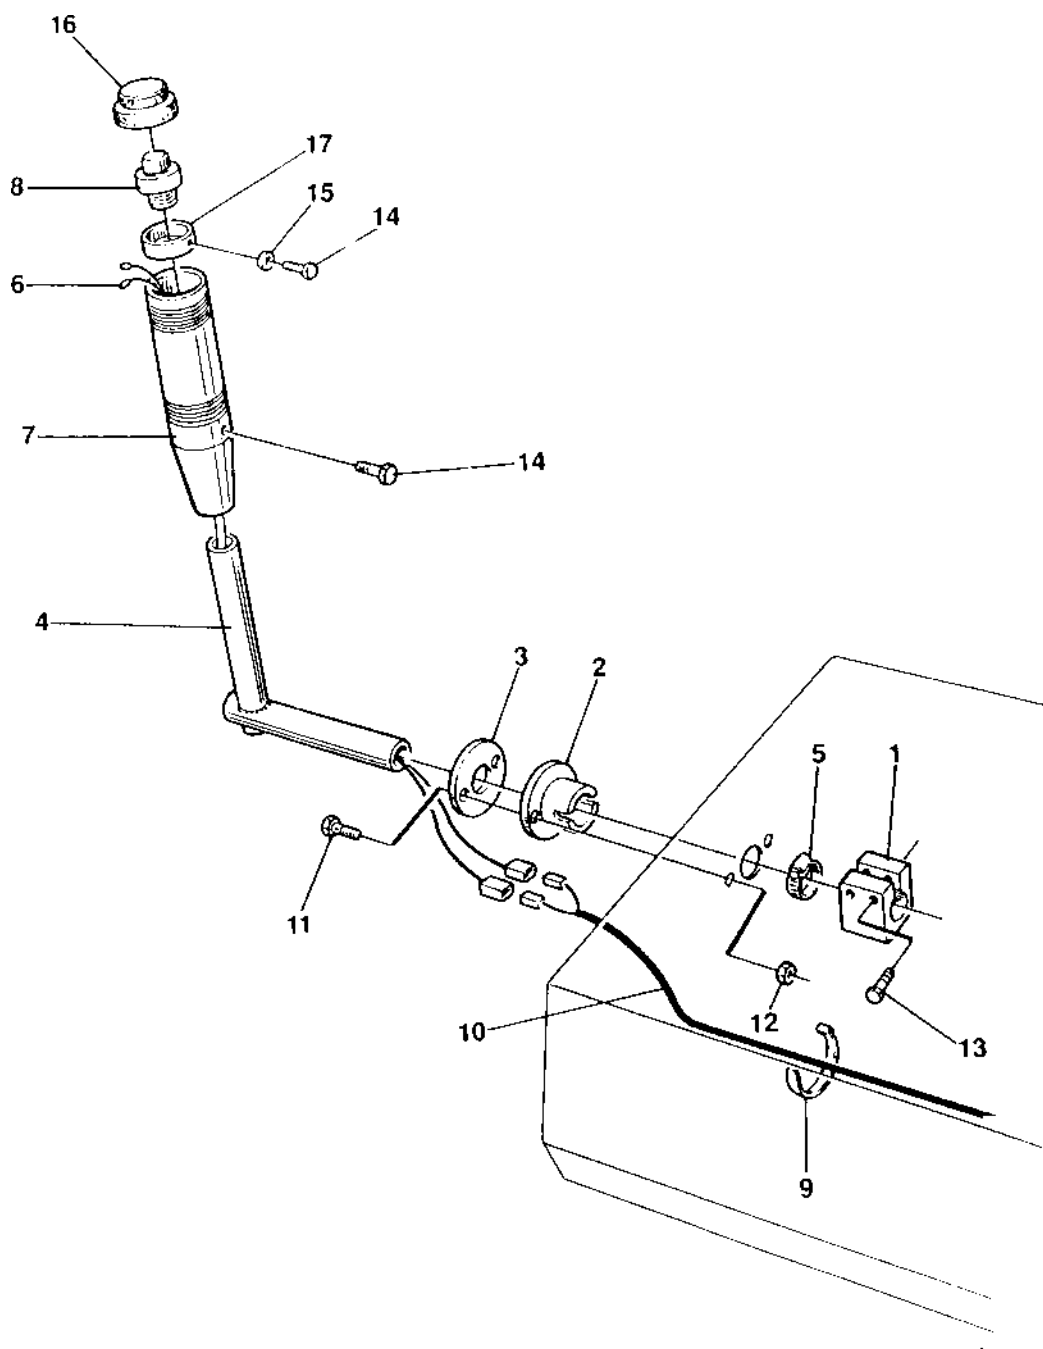

F/R control Dual, left side

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	346420		1	Coupling	
2	345992		1	Bushing	D
3	346421		1	Washer	D
4	345642		1	Control lever	
5	313147		1	Hose clip	
6	348482		1	Cable harness	
7	285909		1	Grab handle	D
8	928497	A	1	Push button	D
9	313041		N	Cable ties L=186 mm	
10	356521		1	Cable harness	
11	923927		2	Screw	
12	586002		2	Lock nut	
13	500022		2	Screw	
14	533001		3	Screw	
15	904697		2	Washer	
16	348481		1	Cover	D
17	285911		1	Bushing	D
A) Vibration					

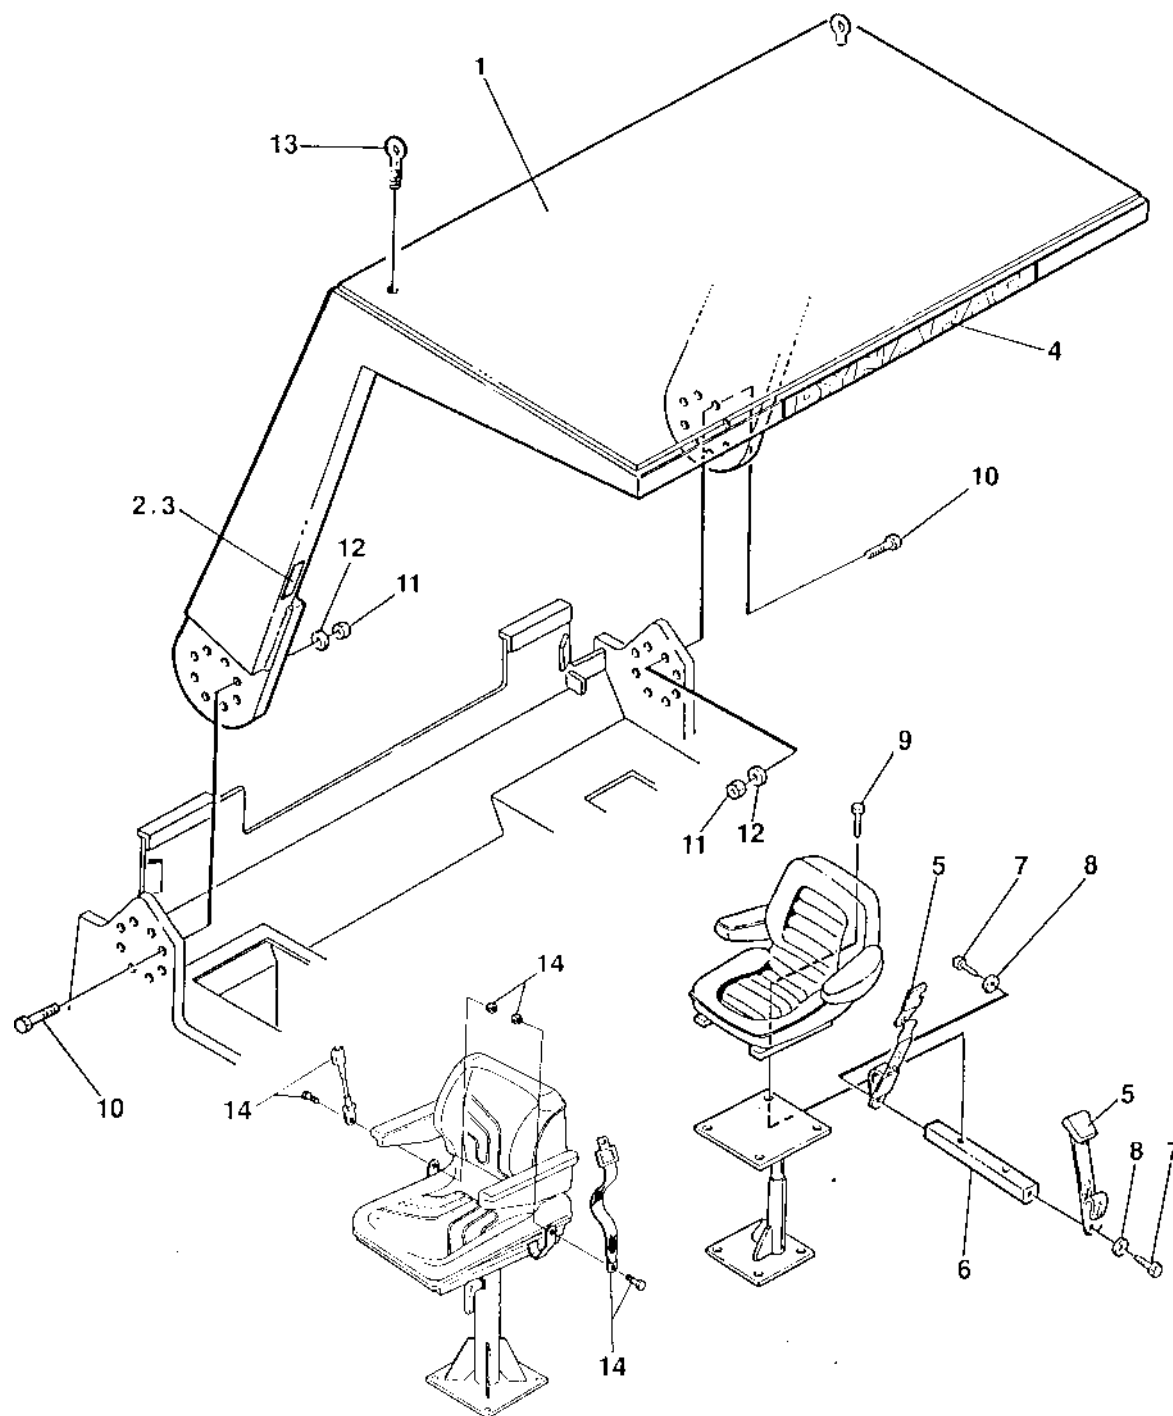

Rops and seat belt

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357340		1	Rops	
2	370803		1	.Sign, rops	
3	902093		4	.Screw	
4	349512	A	1	Decal "DYNAPAC"	
5	801208		2	Seat belt Up to 60910799	
6	349617		2	Bar Up to 60910799	
7	500035		4	Screw Up to 60910799	
8	615045		4	Conical spring washer Up to 60910799	
9		2	4	Screw	
10	901377	B,1	16	Screw	
	904813	C,1	16	Screw	
11	902210	B,1	16	Nut	
	904814	C,1	16	Nut	
12	902211	B,1	16	Washer	
	903786	C,1	16	Washer	
13	353059	B	2	Eye screw	
14	370766		2	Safety belt From 60910800	
	383200	D	2	Safety belt From 60910800	
			2	.Screw	
			2	.Nut	

1) Items 10, 11 and 12, interchangeable together.

2) See section " Drivers platform ".

A) L=840 mm


B) UNF

C) Metric

D) Option. 3"

Decals

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Plates and decals, CE (Page 146)	

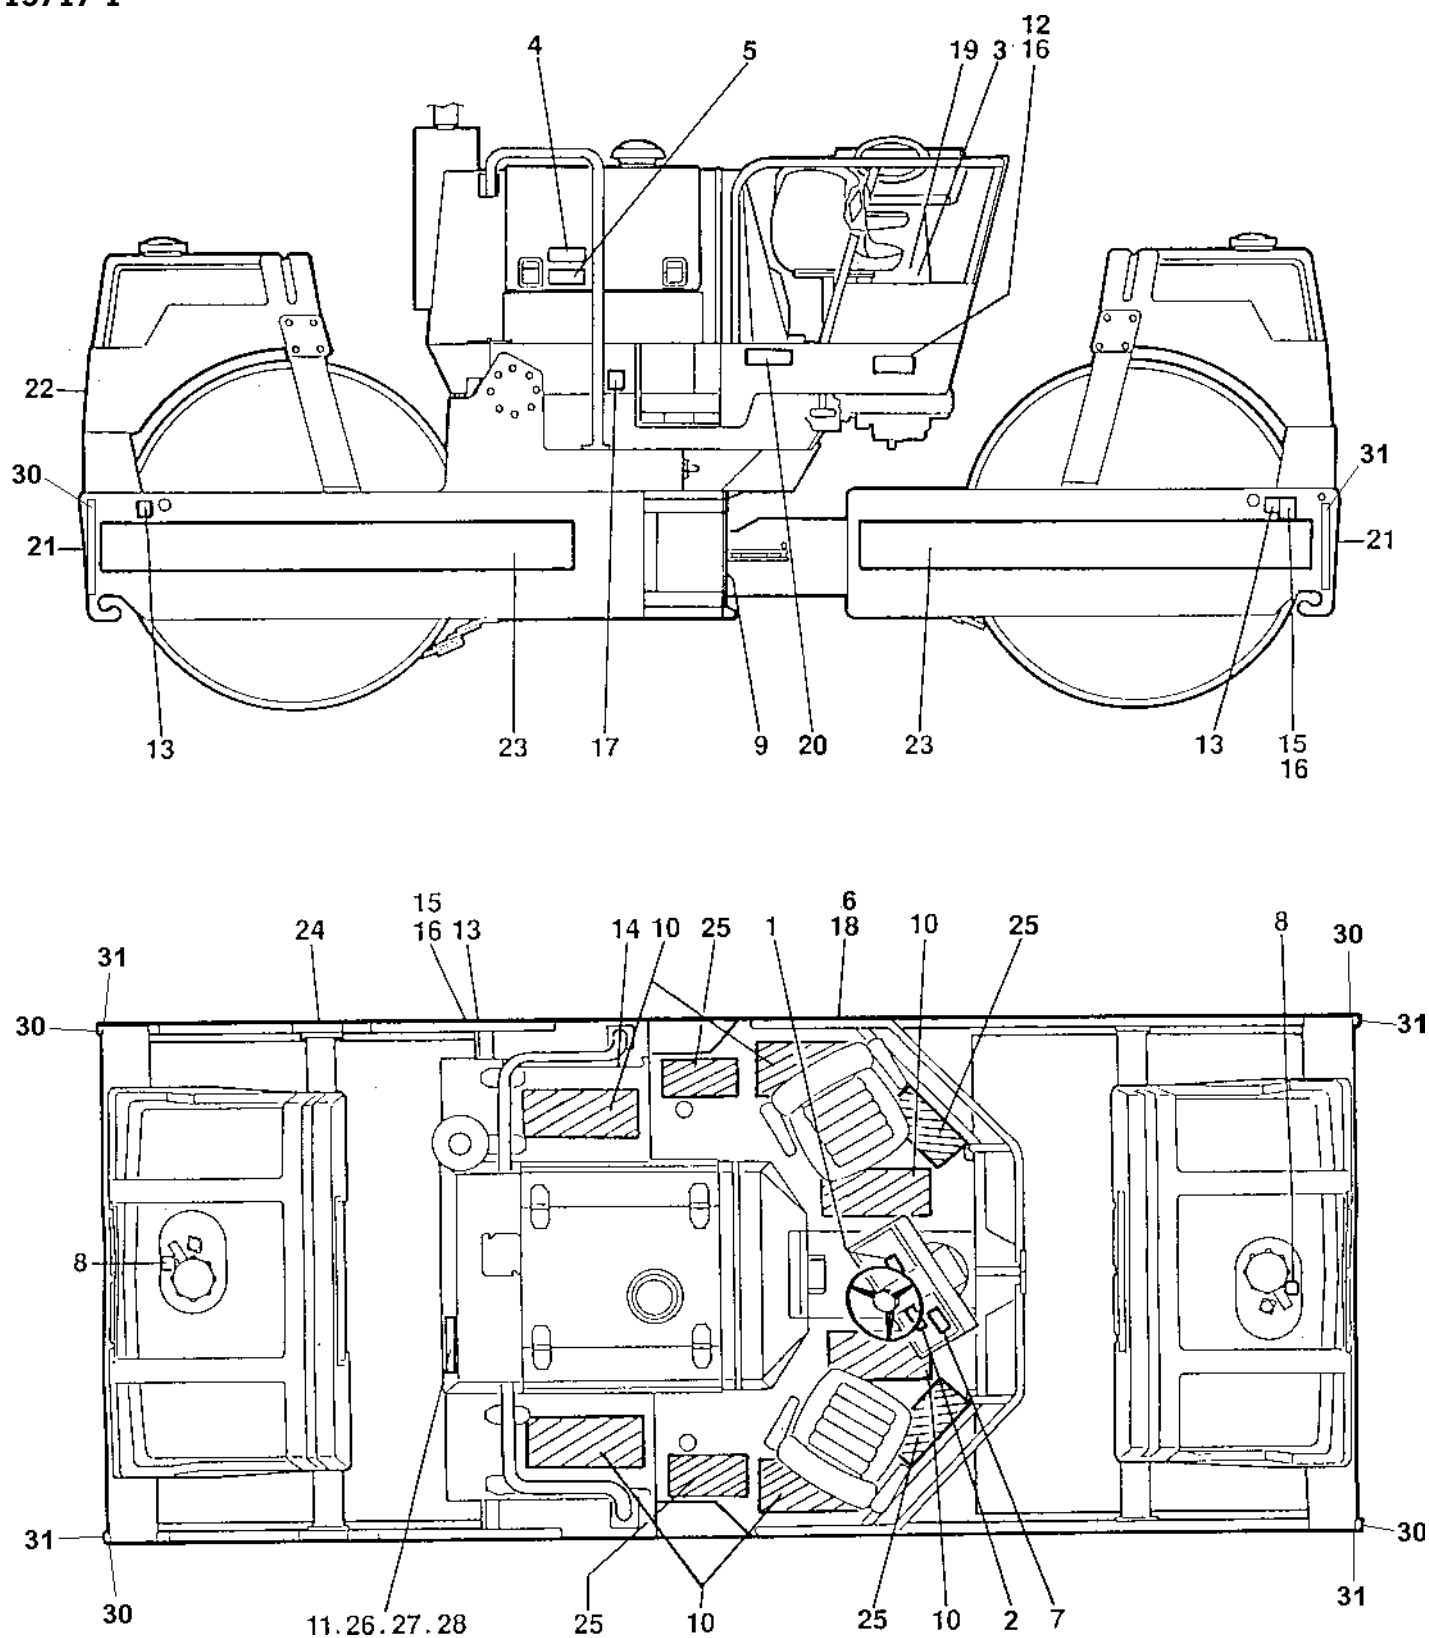


Plates and decals, CE

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	349248		1	Decal "WARNING" Swedish	
	349249		1	Decal "WARNING" English	
	349250		1	Decal "WARNING" German	
	349251		1	Decal "WARNING" Italian	
	349252		1	Decal "WARNING" Spanish	
	349253		1	Decal "WARNING" French	
2	903459		1	Decal "SAFETY"	
3	903425		1	Decal "SAFETY MANUAL"	
4	903423	A	2	Decal "SAFETY"	
5	903424	B	2	Decal "SAFETY"	
6	902915		4	Screw	
7				Not used on this model	
8	991657		2	Decal "WATER"	
9				Not used on this model	
10	333548210		6	Anti-slip decal	
11	900684		1	Name plate "DYNAPAC"	
12	903422	C	2	Decal "SAFETY"	
13	588176		4	Decal "LIFT POINT"	
14	991658		1	Decal "FUEL"	
15	343017		2	Lifting sign	
16	624016		12	Blind rivet	
17	272372		1	Decal "HYDRAULIC OIL"	
18	960787		1	Product identif. decal "Dynapac"	
	900842	G	1	Plate, product identification L=1450 mm	
	358090		1	Product plate ce	
	357130	I	1	Plate cert. appr.	
19	342045		1	Decal "THROTTLE CONTROL"	
20	960711		2	Decal Model CC501	
21	904093		2	Decal "Svedala Dynapac" L=1200 mm	
22				Not used on this model	
23	904068		4	Decal "Svedala Dynapac" L=2100 mm	
24				Not used on this model	
25	355608		4	Slip protection	
26	535007		2	Screw	
27	600003		2	Washer	
28	586001		2	Lock nut	
30	904391		4	Decal "Risk location"	
31	904389		4	Decal "Risk location"	

- A) Engine fan
- B) Hot surface
- C) Hazardous area
- G) France only
- I) Italy only

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Standard equipment (Page 150)	

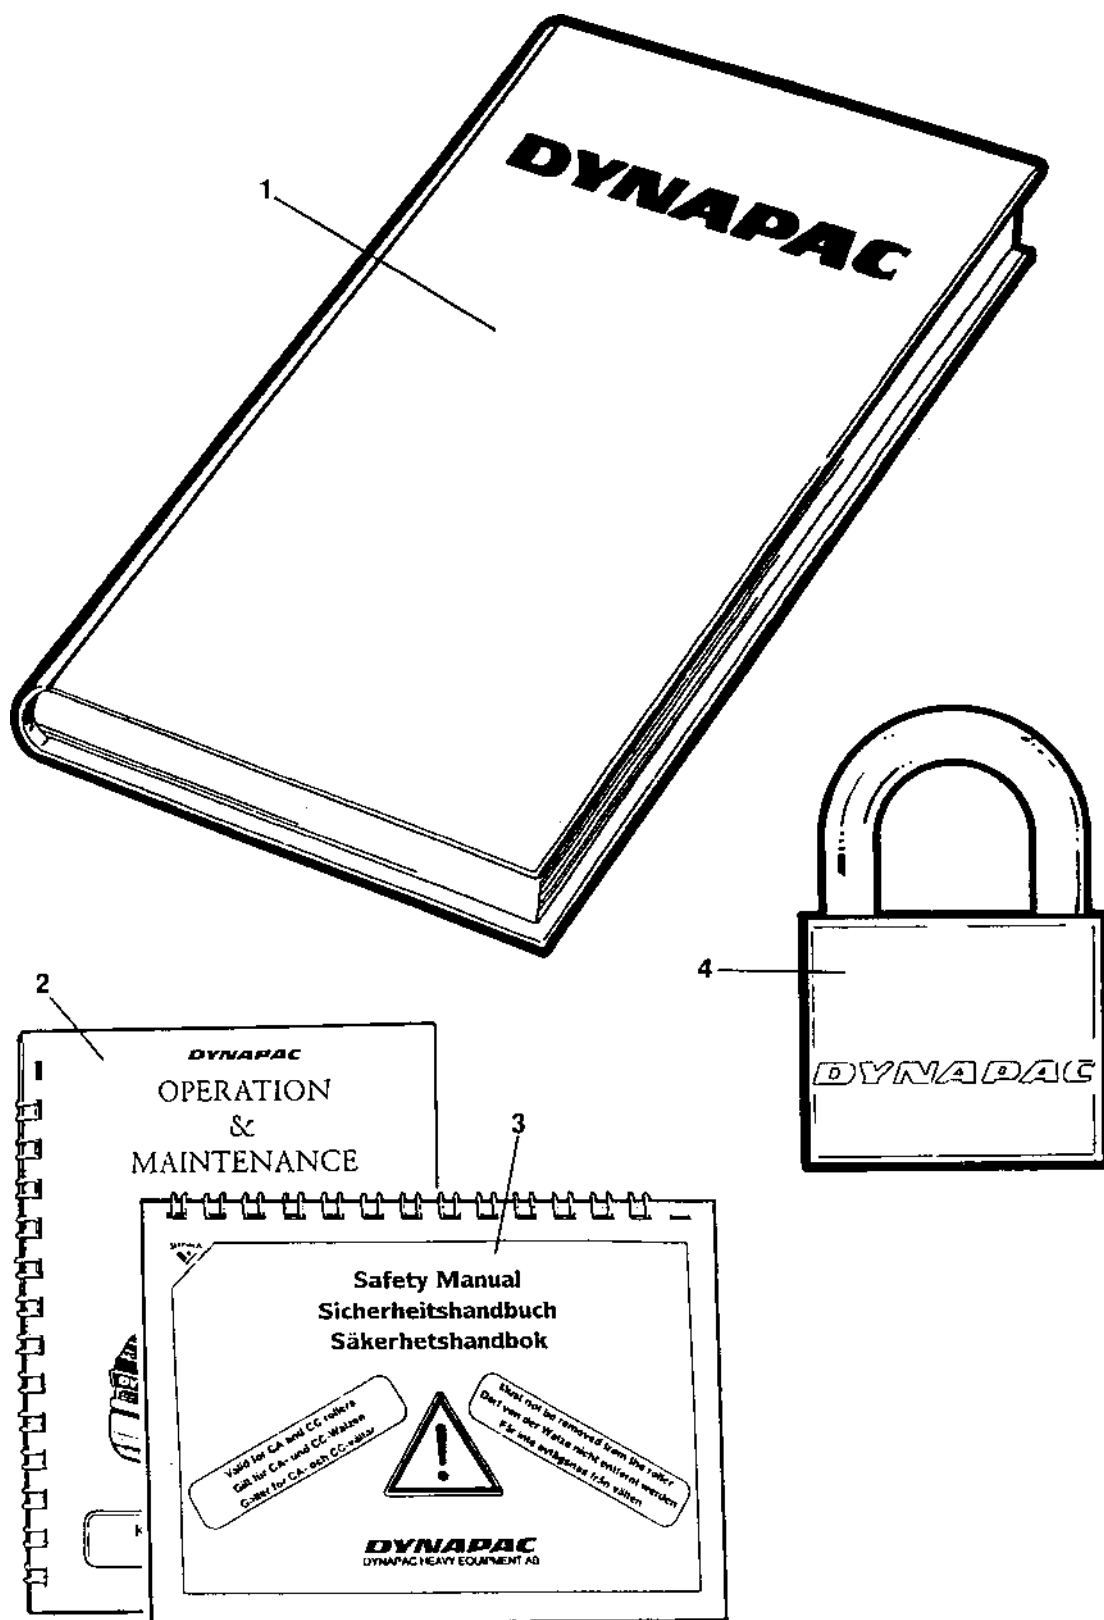


Standard equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Documentation OMSCC501	
			1	.Warranty registration card	
			1	.Operating instruction O501	
			1	.Maintenance instruction M501	
			1	.Spare parts catalogue SCC501	
			1	.Instruction manual Cummins 6CT 8.3/C	
2			1	.Operating/maintenance instruction OM501	
3			1	.Safety manual RSAFE	
4	358881		3	Pad lock	

Optional equipment


Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Cab Exterior (Page 154)	
20				Cab Interior (Page 160)	
30				Cab Heather (Page 164)	
70				Compaction meter (Page 166)	
80				Sign smv First aid box (Page 168)	
90				Tool equipment (Page 170)	
100				Noise suppression (Page 172)	
130				Trip recorder Up to 60910660 (Page 174)	
				Trip recorder From 60910661 (Page 176)	
150				Frequency meter (Page 178)	
160				Roller multimeter (Page 180)	
180				Emergency water Supply (Page 182)	
190				Brake release (Page 184)	
200				Cassette receiver (Page 186)	
280				Air conditioning Up to 60910826 (Page 188)	
				Air conditioning From 60910827 (Page 190)	
420				Umbrella (Page 192)	
440		1		Interlock (Page 194)	
1) Only for seat PN 370234					

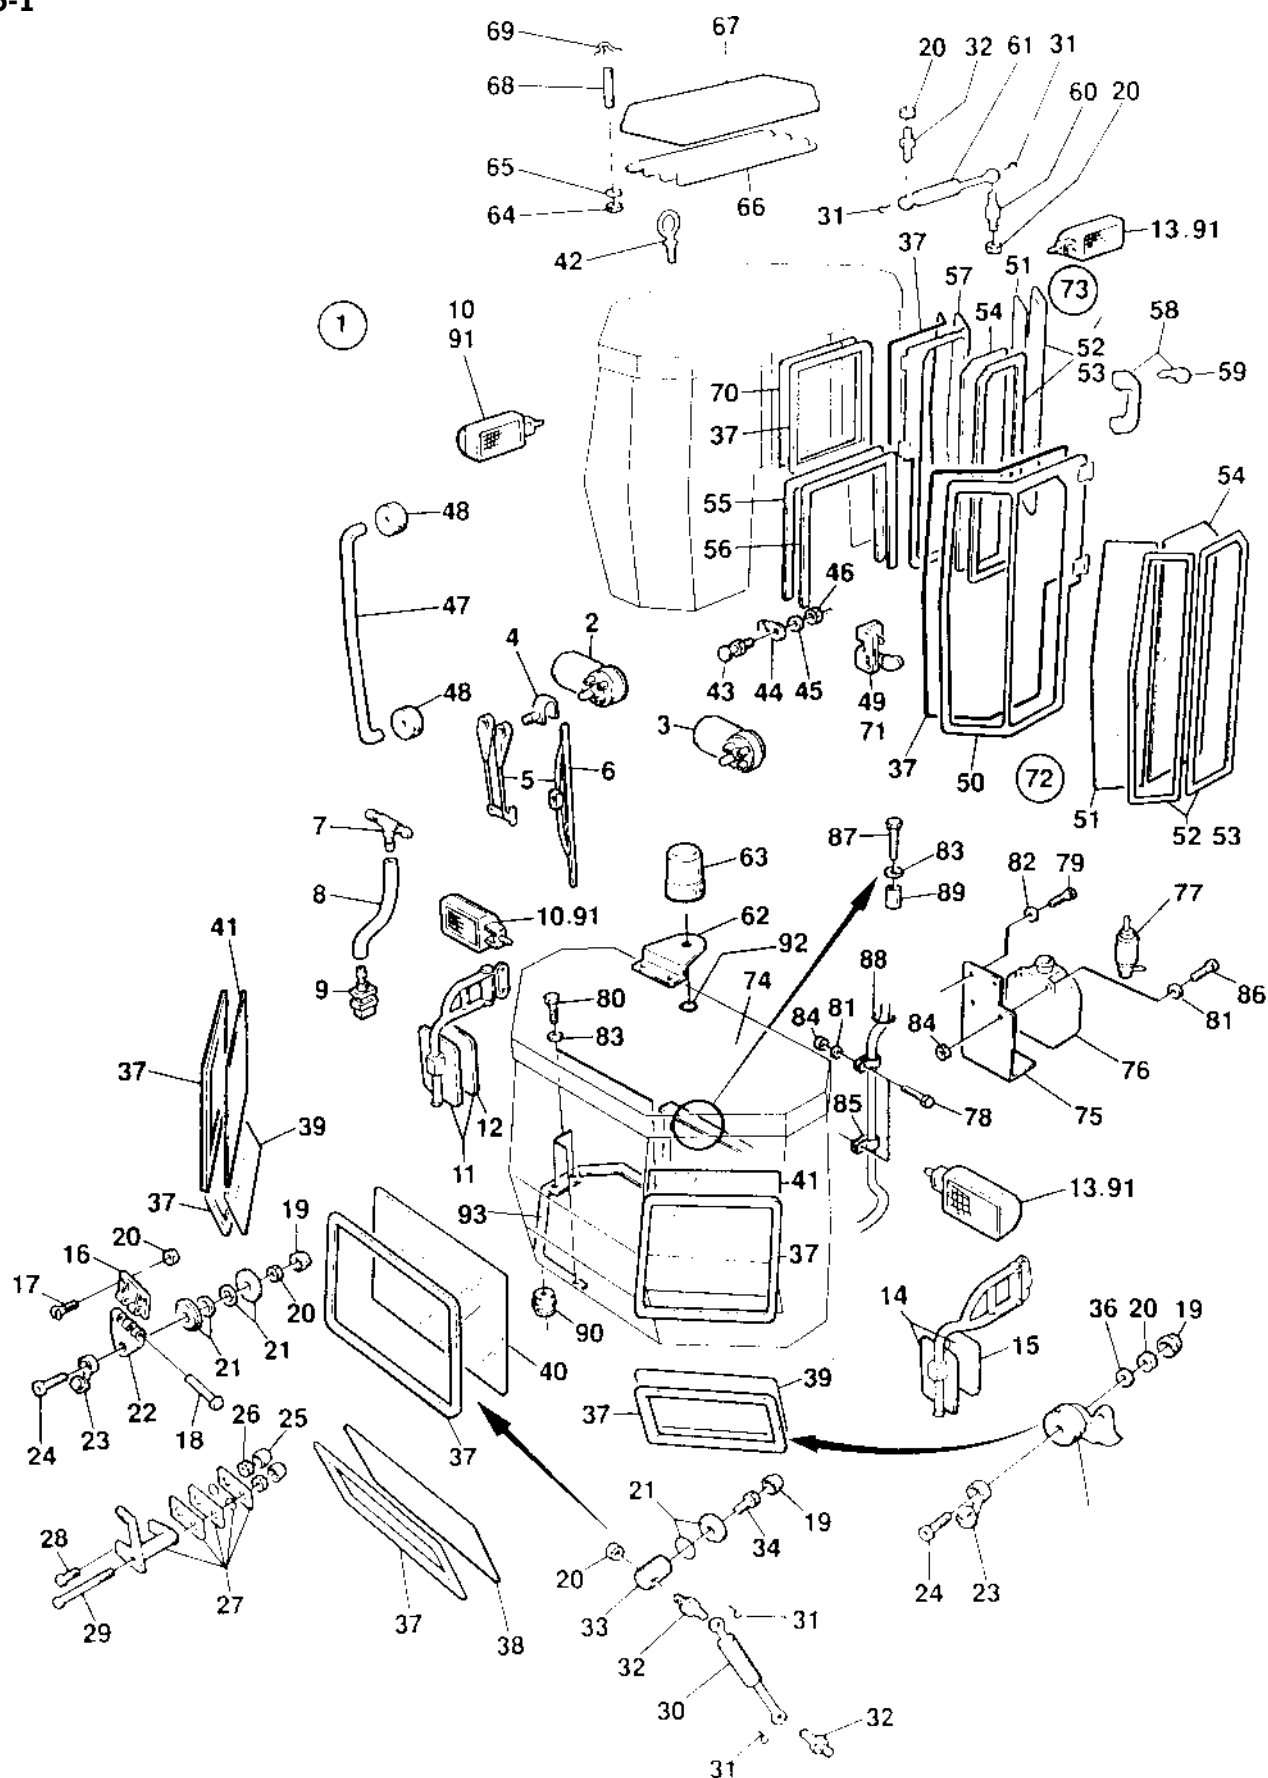

Cab Exterior

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355711	A	1	Cab, cpl	
	355380		1	Cab, cpl	
2	901304		2	.Side wiper motor Model Cab SN ***500001-24	D
	901285		2	.Side wiper motor Model Cab SN ***500025	D
	901304		2	.Side wiper motor Model Cab SN ***500026-29	D
	901285		2	.Side wiper motor Model Cab SN ***500030-34	D
	902306		2	.Wiper motor Model Cab SN ***500035-82	D
	908389		2	.Wiper motor Model Cab SN ***500083-	D
3	901303		1	.Wiper motor Model Cab SN ***500001-24	D
	901282		1	.Wiper motor Model Cab SN ***500025	D
	901303		1	.Wiper motor Model Cab SN ***500026-29	D
	901282		1	.Wiper motor Model Cab SN ***500030-34	D
	902305		1	.Wiper motor Model Cab SN ***500035-82	D
	908101		1	.Wiper motor Model Cab SN ***500083-	D
4	901422		3	.Crank shaft wipermotor Model Cab SN ***500025	
	901422		3	.Crank shaft wipermotor Model Cab SN ***500030-	
5	901305		3	.Wiper arm Model Cab SN ***500001-24	
	901281		3	.Wiper arm with blade Model Cab SN ***500025	
	901305		3	.Wiper arm Model Cab SN ***500026-29	
	901281		3	.Wiper arm with blade Model Cab SN ***500030-	
6	901306		1	..Wiper blade Model Cab SN ***500001-24	B
	901287		1	..Wiper blade Model Cab SN ***500025	B
	901306		1	..Wiper blade Model Cab SN ***500026-29	B
	901287		1	..Wiper blade Model Cab SN ***500030-	B
7	902307		2	.Adapter	
8	902308	1	4XL	.Washer hose	
9	902309		4	.Washer nozzle	D
10	901257	2,3	2	.Working lights	
11	901266		1	.Rear mirror r.h.	
12	902310		1	..Rear mirror	B
13	901258	2,4	2	.Work light	
14	901267		1	.Rear mirror l.h.	
15	902310		1	..Rear mirror	B
16	901860		2	.Hinge on cab	
17	902311		4	.Screw	
18	901862		2	.Hinge	
19	901341		22	.Nut cup	
20	902312		36	.Nut	
21	901423		6	.Sealing	
22	901861		2	.Hinge on window	
23	901340		16	.Screw cap	
24	902313		20	.Screw torx	
25	902314		3	.Nut	
26	902315		2	.Nut	
27	902316		1	.Handle	
28	902317		1	.Screw	
29	902318		1	.Screw	
30	929952		2	.Gas spring front screen	D
31	901343		8	.Clip	
32	901368		6	.Attachment	
33	902319		2	.Gas spring bracket	
34	902320		2	.Screw	
35	901339		18	.Rubber washer	

- 1) Length as required
- 2) See item 91
- 3) Front right/rear left
- 4) Front left/rear right
- A) For air condition

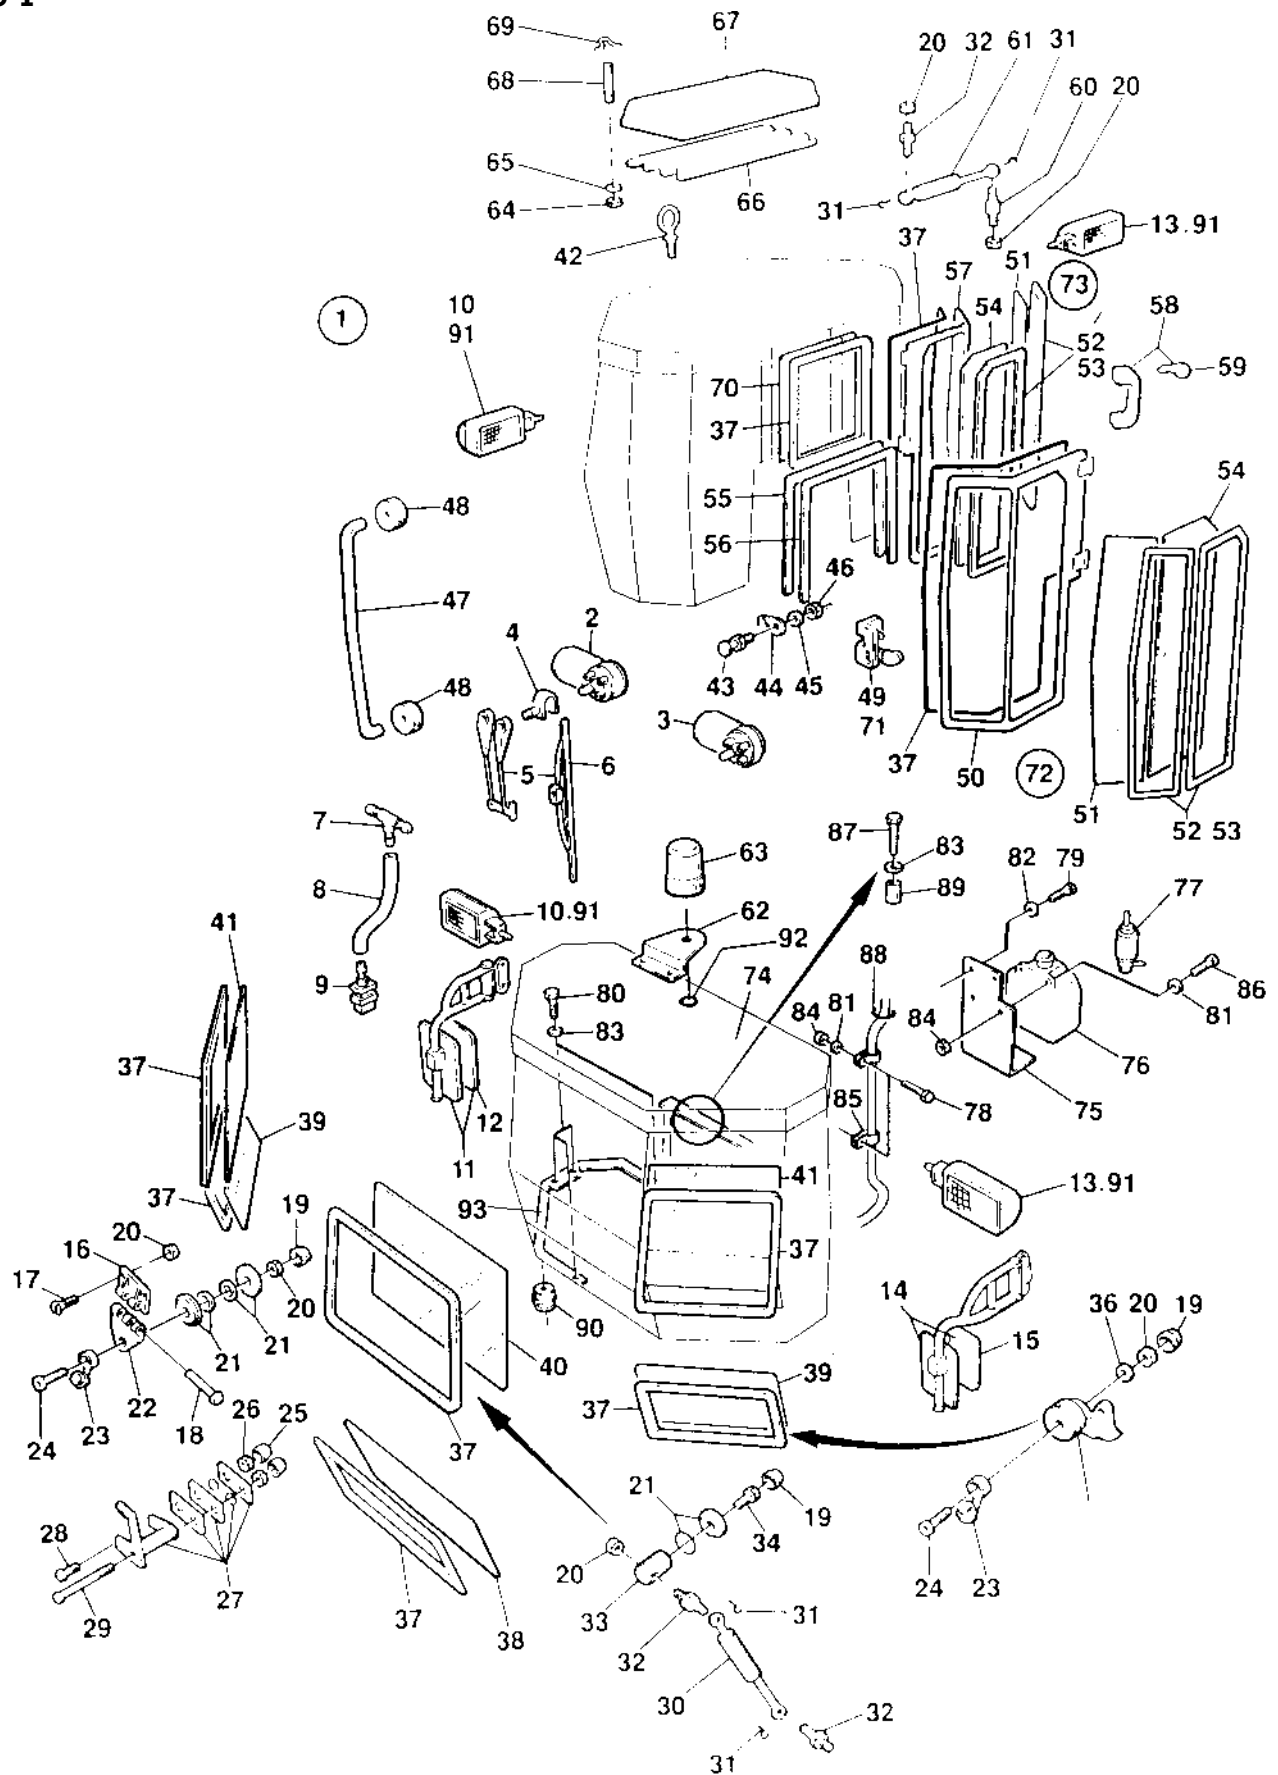

Cab Exterior


Ref. No.	Part No.	Rem.	Qty	Description	Code
36	902321		8	.Lock washer	
37	901275	1	9XL	.Sealing strip	
38	902322		1	.Screen	D
39	902323		2	.Screen	D
40	903013		1	.Screen Model Cab SN ***500001-24	D
	902324		1	.Screen Model Cab SN ***500025	D
	903013		1	.Screen Model Cab SN ***500026-29	D
	902324		1	.Screen Model Cab SN ***500030-	D
41	903014		2	.Screen Model Cab SN ***500001-24	D
	902325		2	.Screen Model Cab SN ***500025	D
	903014		2	.Screen Model Cab SN ***500026-29	D
	902325		2	.Screen Model Cab SN ***500030-	D
42	902326		2	.Lifting eye	
43	902327		2	.Lock pin	
44	901242		2	.Hook	
45	902328		2	.Washer	
46	902329		2	.Nut	
47	909232		1	.Handle left	
	909233		1	.Handle right	
48	902331		18	.Rubber washer	
49	901273	5	1	.Lock	
50	902332	5	1	.Door frame, left	
51	901847	5,6	2	.Door screen outer	D
52	901849	1,5,6	4XL	.Rubber seal	
53	901848	1,5,6	4XL	.Rubber seal	
54	901846	5,6	2	.Door screen inner	D
55	902335	1	1XL	.Rubber strip	
56	901294	1	1XL	.Rubber list	
57	902336	6	1	.Door frame	
58	901367		2	.Door handle	
59	928672		2	..Key Marked "1001"	
60	901342	D	2	.Ball gudgeon	
61	901570	D	2	.Gas spring	
62	902339		1	.Bracket	
63	902340		1	.Rotating beacon	D
64	902341		2	.Nut	
65	902342		2	.Lock washer	
66	901416		1	.Air filter cover	
67	901296		1	.Air filter	B
68	902343		2	.Quick fastener clips	
69	902344		2	.Quick fastener pin	
70	901999		1	.Rear window	D
71	901249	6	1	.Lock	
72	902345		1	.Door cpl, left	
73	902346		1	.Door cpl, right	
74	903015		1	.Cab frame Model Cab SN ***500001-34	
	902347		1	.Cab frame Model Cab SN ***500035-	
75	355577		1	Can holder	
76	900998		1	Water reservoir	
77	900999		1	Pump	
78	500075		2	Screw	
79	500053		2	Screw	
80	500029		8	Screw	

1) Length as required

5) Included in complete left hand door, item 72

6) Included in complete right hand door, item 73

D) On door

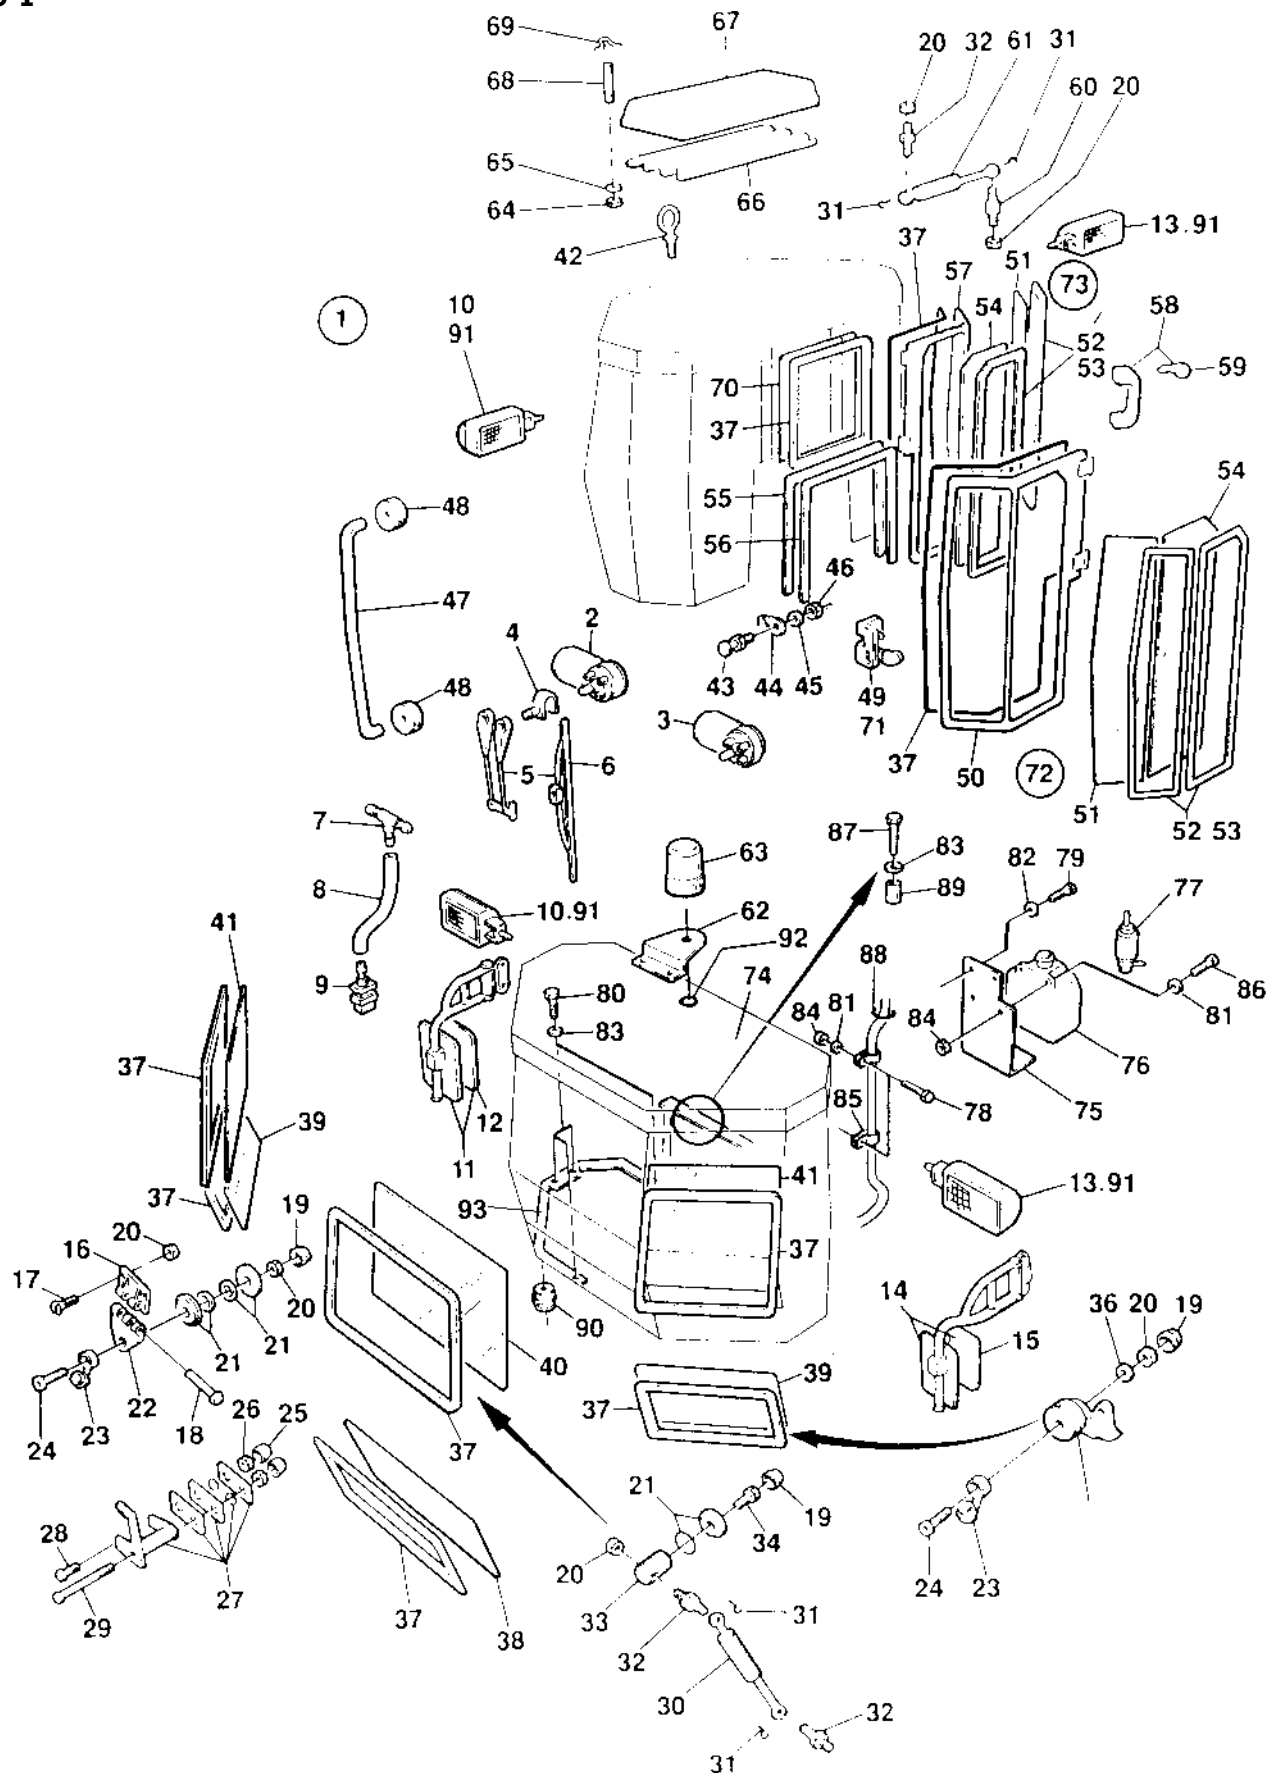

Cab Exterior


Ref. No.	Part No.	Rem.	Qty	Description	Code
81	904639		4	Washer	
82	904229		2	Washer	
83	904230		10	Washer	
84	570004		4	Nut	
85	921047		2	Clamp	
86	500013		2	Screw	
87	500091		2	Screw	
88	909085	E	1XL	Grommet	
89	901956		2	Spacer	
90	902118		2	Shock absorber, front	D
91	901369	7	4	Bulb 55w H3	B
92	909152	F	1	Rubber grommet	
93	926911	1	1XL	Rubber strip	

1) Length as required

7) Included in work lights, item 10 and 13

E) L=0.157 m


F) With rops only

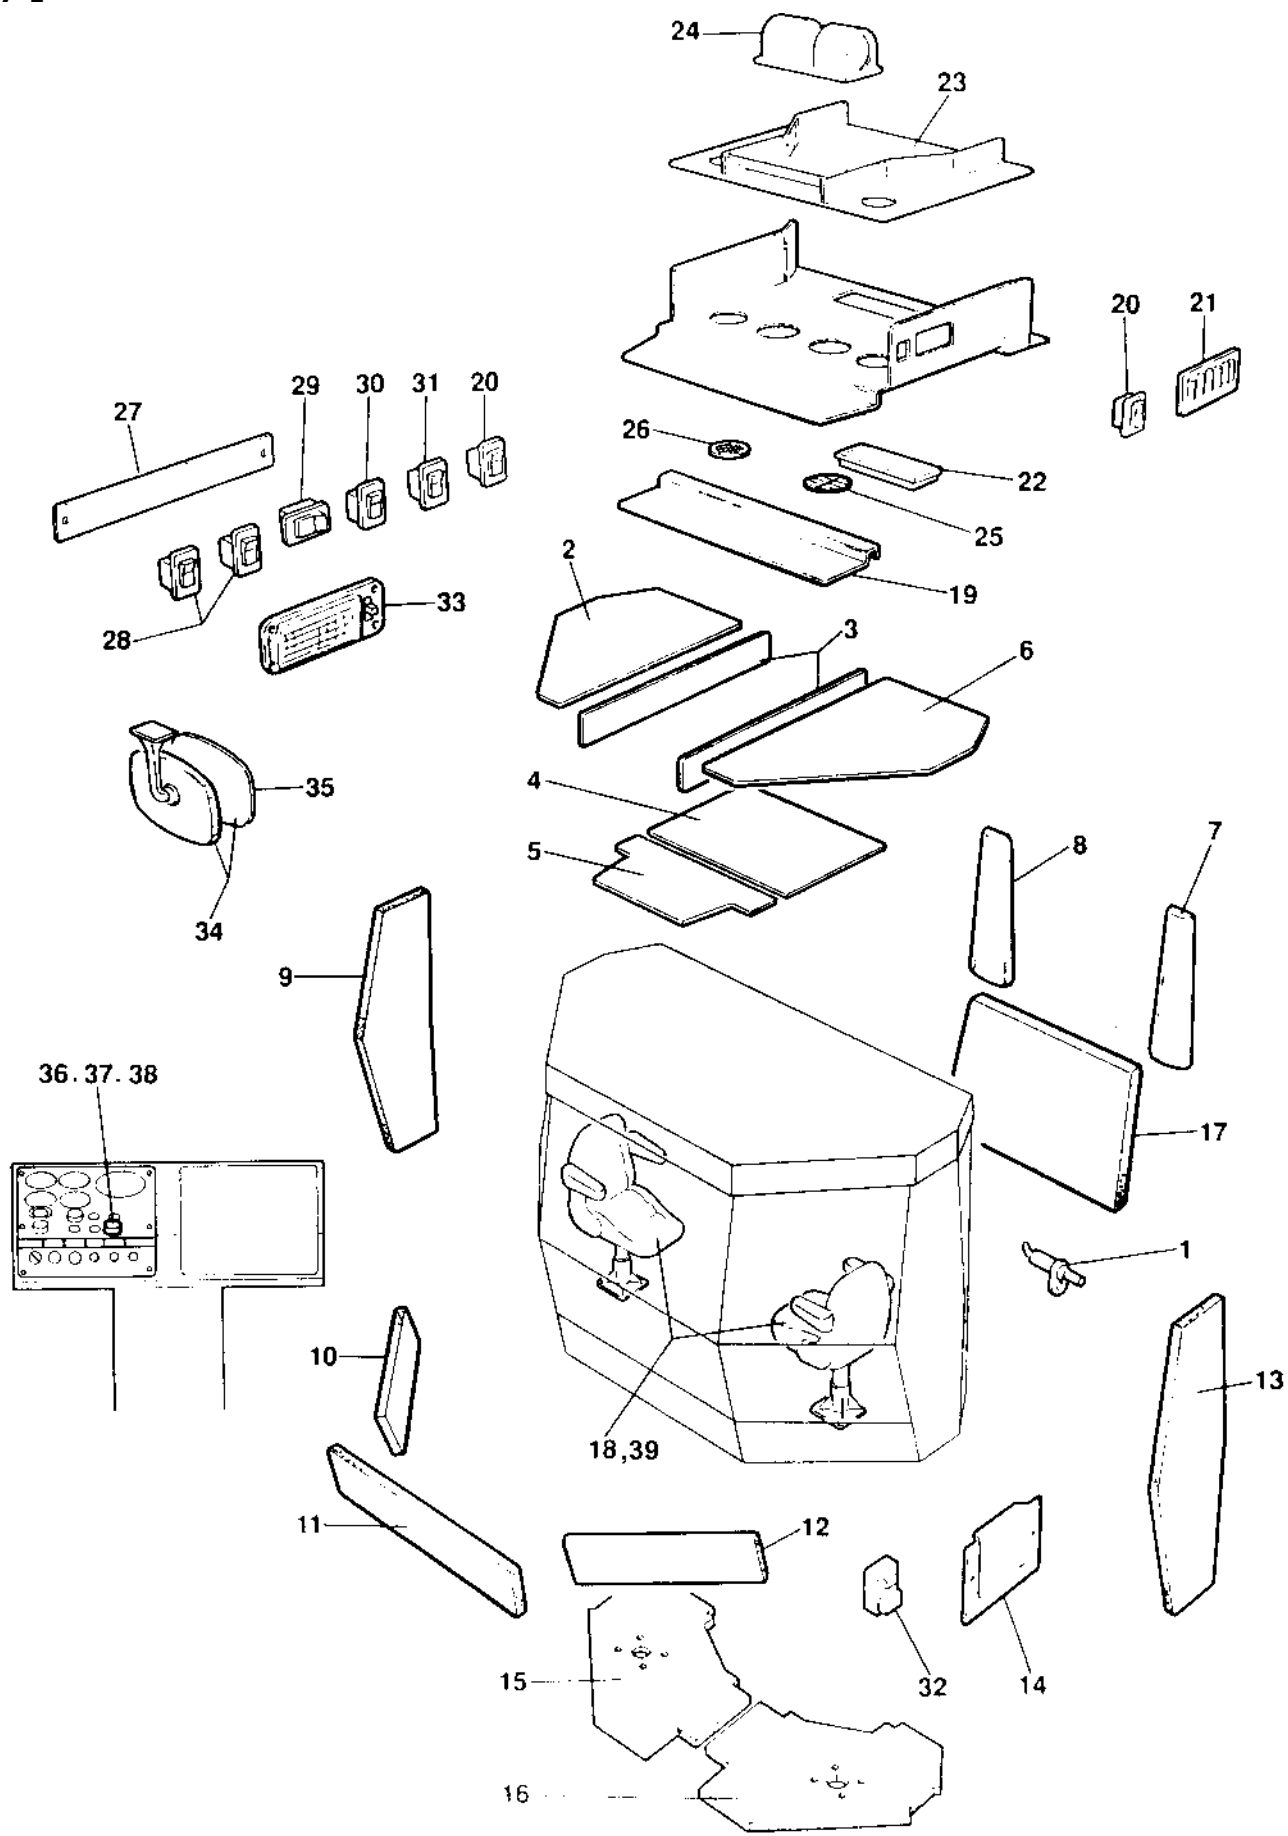

Cab Interior

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901238		2	Switch	
2	902348	A	1	Lining	
3	902349	B	2	Lining	
4	903016	C	1	Lining Model Cab SN ***500001-34	
	902350	C	1	Lining Model Cab SN ***500035-	
5	902351	D	1	Lining	
6	902352	E	1	Lining	
7	903017	F	1	Pillar lining Model Cab SN ***500001-34	
	902353	F	1	Pillar lining Model Cab SN ***500035-	
8	903018	G	1	Pillar lining Model Cab SN ***500001-34	
	902354	G	1	Pillar lining Model Cab SN ***500035-	
9	902355	H	1	Lining	
10	902356	I	1	Lining	
11	902357	J	1	Lining	
12	902358	K	1	Lining	
13	902359	L	1	Lining	
14	901417		2	Cover	
15	902361		1	Floor mat, right	
16	902362		1	Floor mat, left	
17	902363		1	Back insulation	
18	356415		2	Drivers seat Up to 60910799	
	212115		1	.Arm rest, left Up to 60910799	D
	212114		1	.Arm rest, right Up to 60910799	D
	212408	N	1	.Sliding rail Up to 60910799	D
19	902367		1	Roof panel, rear	
20	901236		3	Switch wiper Model Cab SN ***500029	D
	901286		3	Switch wiper Model Cab SN ***500030-	
21	901256		2	Fuse box	
	908110		1	.Cover	
	901226		3	Fuse 7,5A	D
	901227		5	Fuse 10A	D
	901228		2	Fuse 15A	B
	901229		1	Fuse 25A	B
22	902373		2	Recirculation air inlet Model Cab SN ***500025	
	902373		2	Recirculation air inlet Model Cab SN ***500030-	
23	902374		1	Roof panel, front Model Cab SN ***500025	
	902374		2	Roof panel, front Model Cab SN ***500030-	
24	901143		1	Fan	
25	901685		2	Nozzle	
26	901366		2	Air inlet Model Cab SN ***500025	
	901366		2	Air inlet Model Cab SN ***500030-	
27	901250		1	Sign cab functions	
28	901159		2	Switch working light	
29	901234		1	Washer switch	
30	901235		1	Switch air condition	D
31	901680		1	Switch fan	D
32	908104		4	Electric box, wipers Model Cab SN ***500001-82	D

- A) Top right side
- B) Top cent. LH & RH
- C) Top cent. rear
- D) Top cent. front
- E) Top left side
- F) Left rear
- G) Right rear
- H) Right side
- I) Bottom right
- J) Bottom central
- K) Bottom left
- L) Left side
- N) One pair.

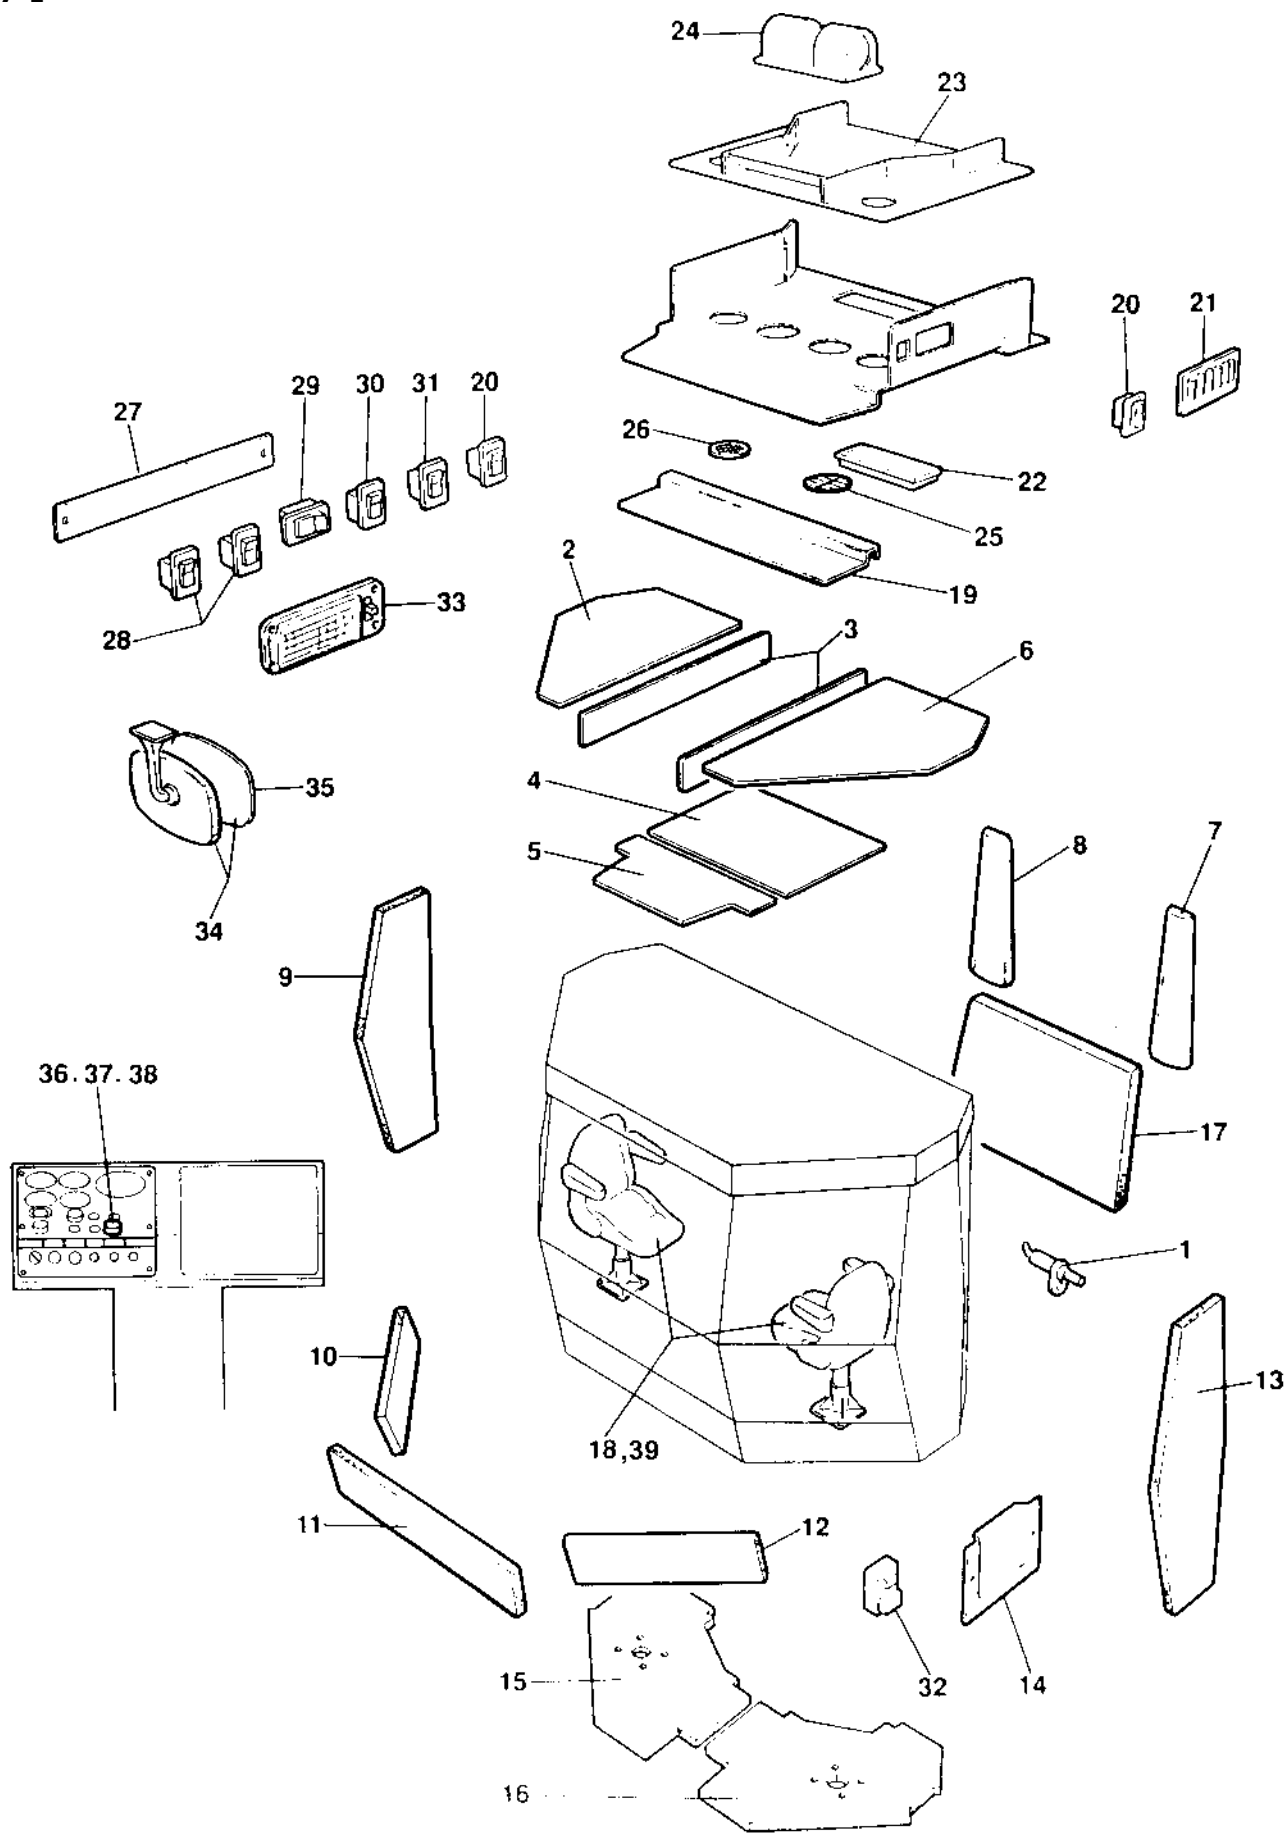

Cab Interior


Ref. No.	Part No.	Rem.	Qty	Description	Code
32	908105		4	Electric box, wipers Model Cab SN ***500083-	D
	935227		2	.Relay	
33	929966		1	Cab light	
34	901572	M	1	Rear mirror	
35	902375		1	.Mirror glass	D
36	930166		1	Switch	D
37	985012		1	Bulb	D
38	930165		1	Contact block	D
39	381598		2	Seat black fabric From 60910800	
	909535	O	1	.Sliding rail	D
	909536	P	1	.Sliding rail	D
	372696	Q	1	.Arm rest	
	372697	P	1	.Arm rest	
	936283		1	.Seat switch	D

M) Internal cpl

O) Left w. handle

P) Right


Q) Left

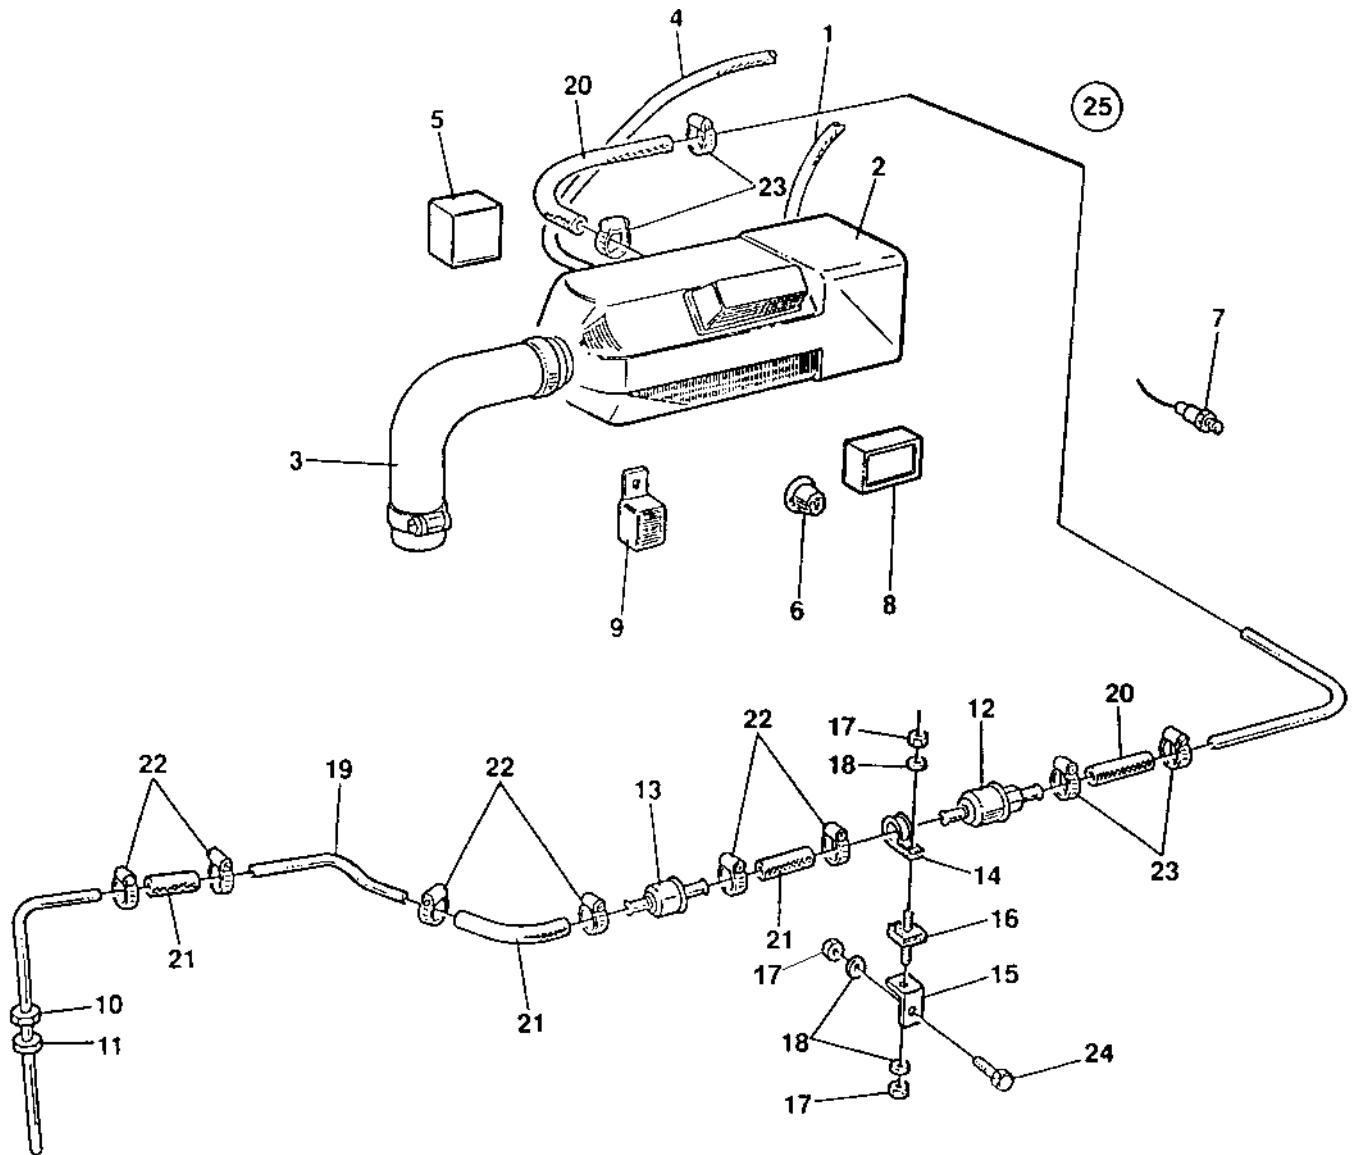

Cab Heather


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902364	8	1XL	Air inlet hose	
2	902365		1	Heater unit	C
	901562		1	.Heater plug M24	
	903006		1	.Glow plug M14	
3	902366	8	1XL	Hose	
4	902368	8	1XL	Exhaust hose	
5	902369		1	Heater electronic box	D
6	902370		1	Switch heather	D
7	902371		1	Temperature sensor	D
8	902372		1	Timer	D
9	901885		1	Relay	D
10	356269		1	Fuel pipe	
11	570011		1	Nut	
12	901550		1	Fuel pump	
13	901551		1	Fuel filter	
14	901552		1	Clamp	
15	901553		1	Bracket	
16	901554		1	Shock absorber	
17	570004		3	Nut	
18	615042		3	Conical spring washer	
19	901555	8	1XL	Fuel pipe	
20	901556	8	2XL	Fuel hose	
21	901557	8	3XL	Fuel hose	
22	901558		6	Hose clamp	
23	901559		4	Hose clamp	
24	500075		1	Screw	
25			1	Air conditioning Up to 60910826 (Page 188)	
			1	Air conditioning From 60910827 (Page 190)	

8) Length as required

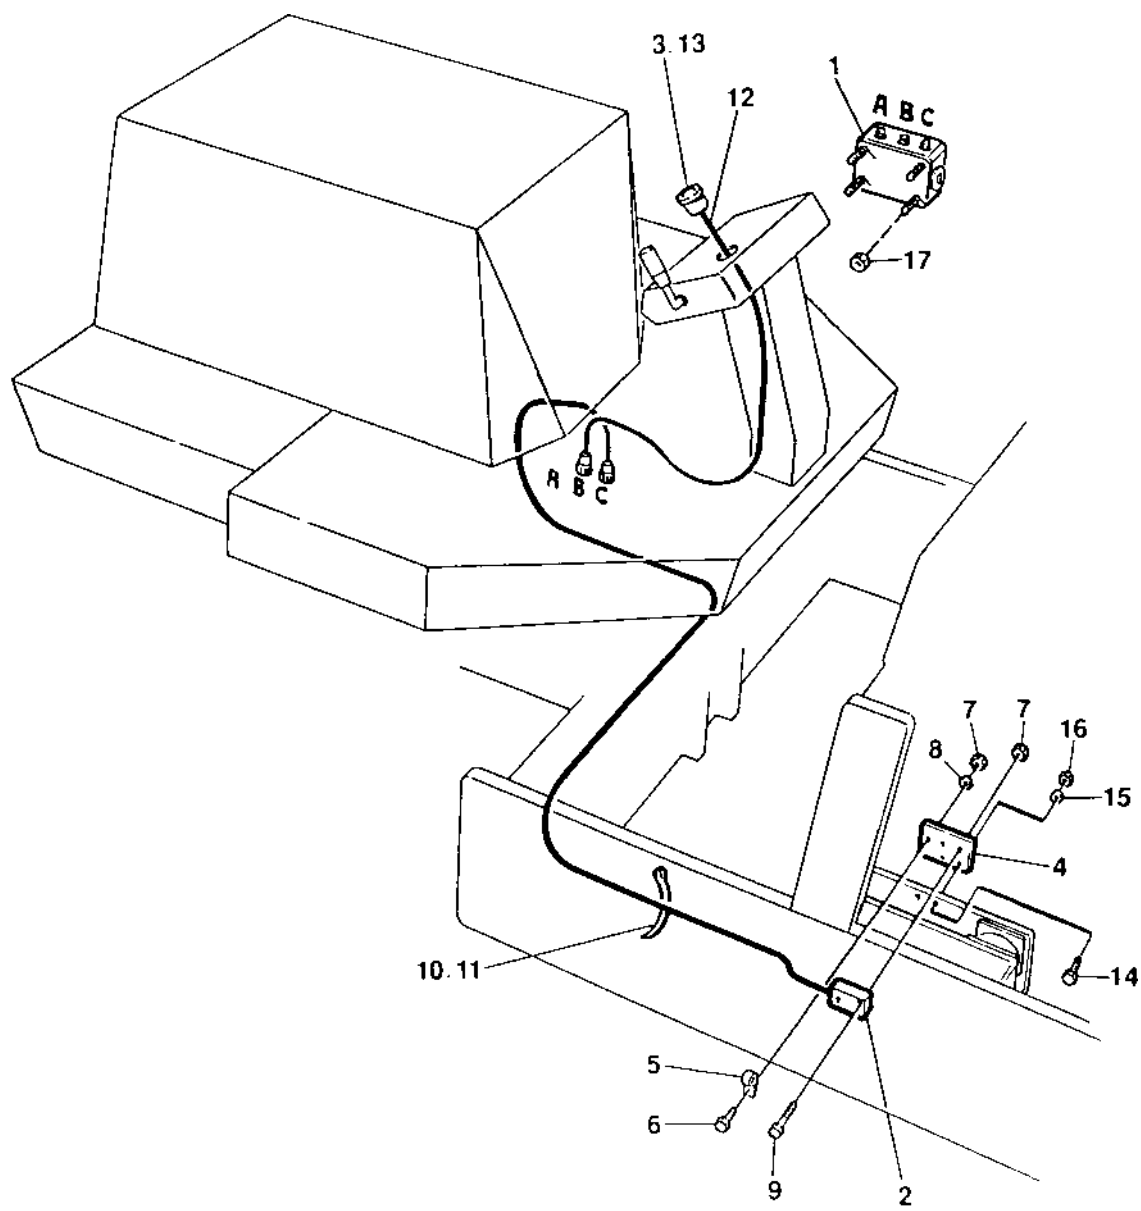


Compaction meter


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	372008		1	Processor comp.meter	
2	348213		1	Sensor, cpl	
3	348428		1	Pointer instrument	
4	343256		1	Bracket	
5	921047		1	Clamp	
6	500013		1	Screw	
7	586002		3	Lock nut	
8	904228		3	Washer	
9	500079		2	Screw M6x50	
10	313041		N	Cable ties L=186 mm	
11	313102		N	Cable ties L=388 mm	
12	348249		1	Cable	
13	747583		1	Bulb	
14	500194		2	Screw	
15	904231		2	Washer	
16	586019		2	Lock nut	
17	570004		4	Nut	

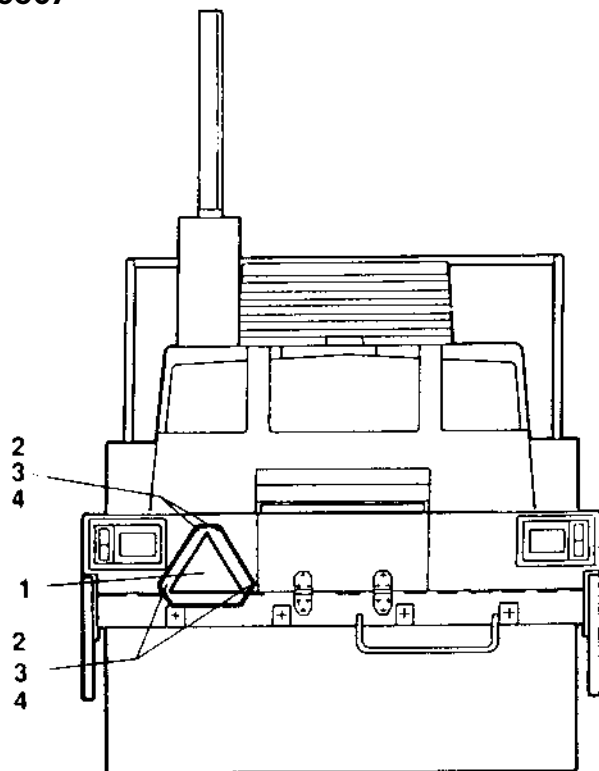

STANDARD

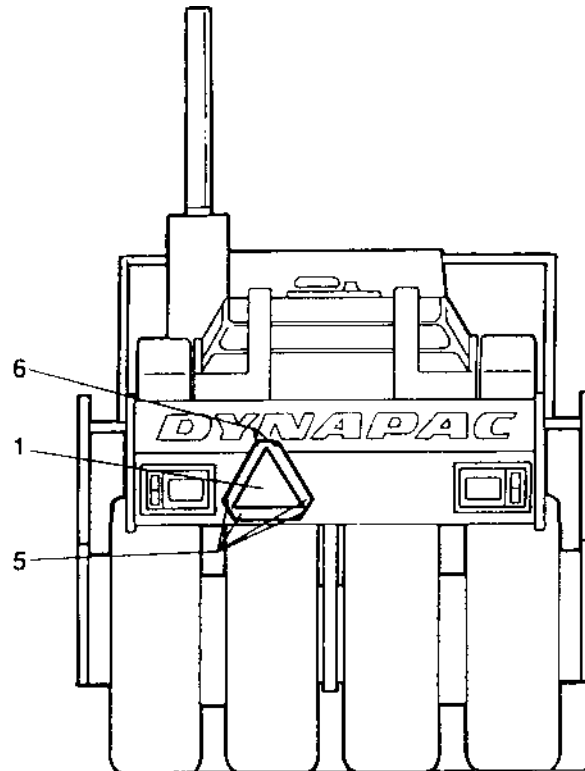


COMBI

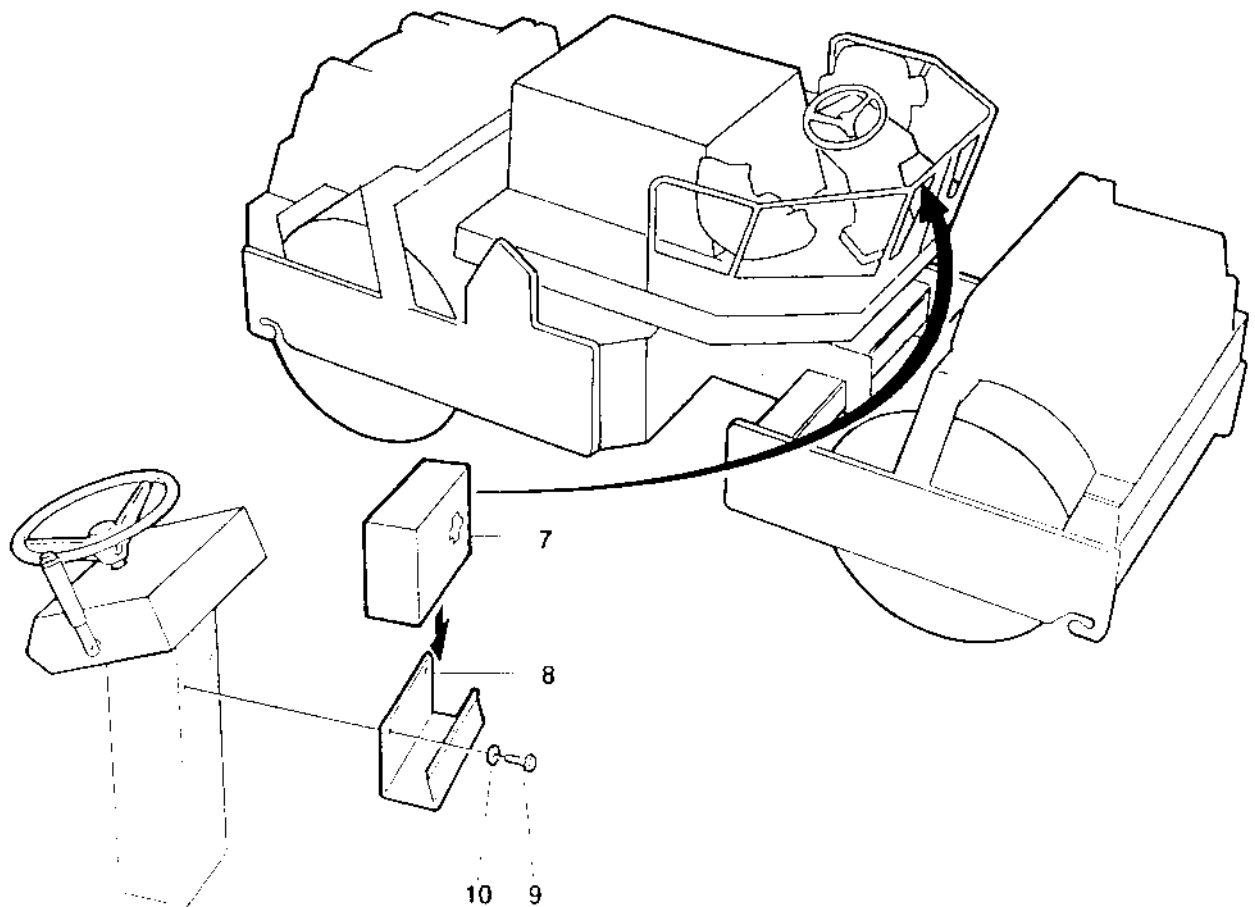


Sign smv First aid box

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	476019		1	Sign smv	D
2	343748		4	Spacer sleeve	
3	500040		4	Screw	
4	615042		4	Conical spring washer	
5				Not used on this model	
6				Not used on this model	
7	902508		1	First aid kit	
8	358098		1	Box holder	
9	901315		2	Screw	
10	904698		2	Washer	

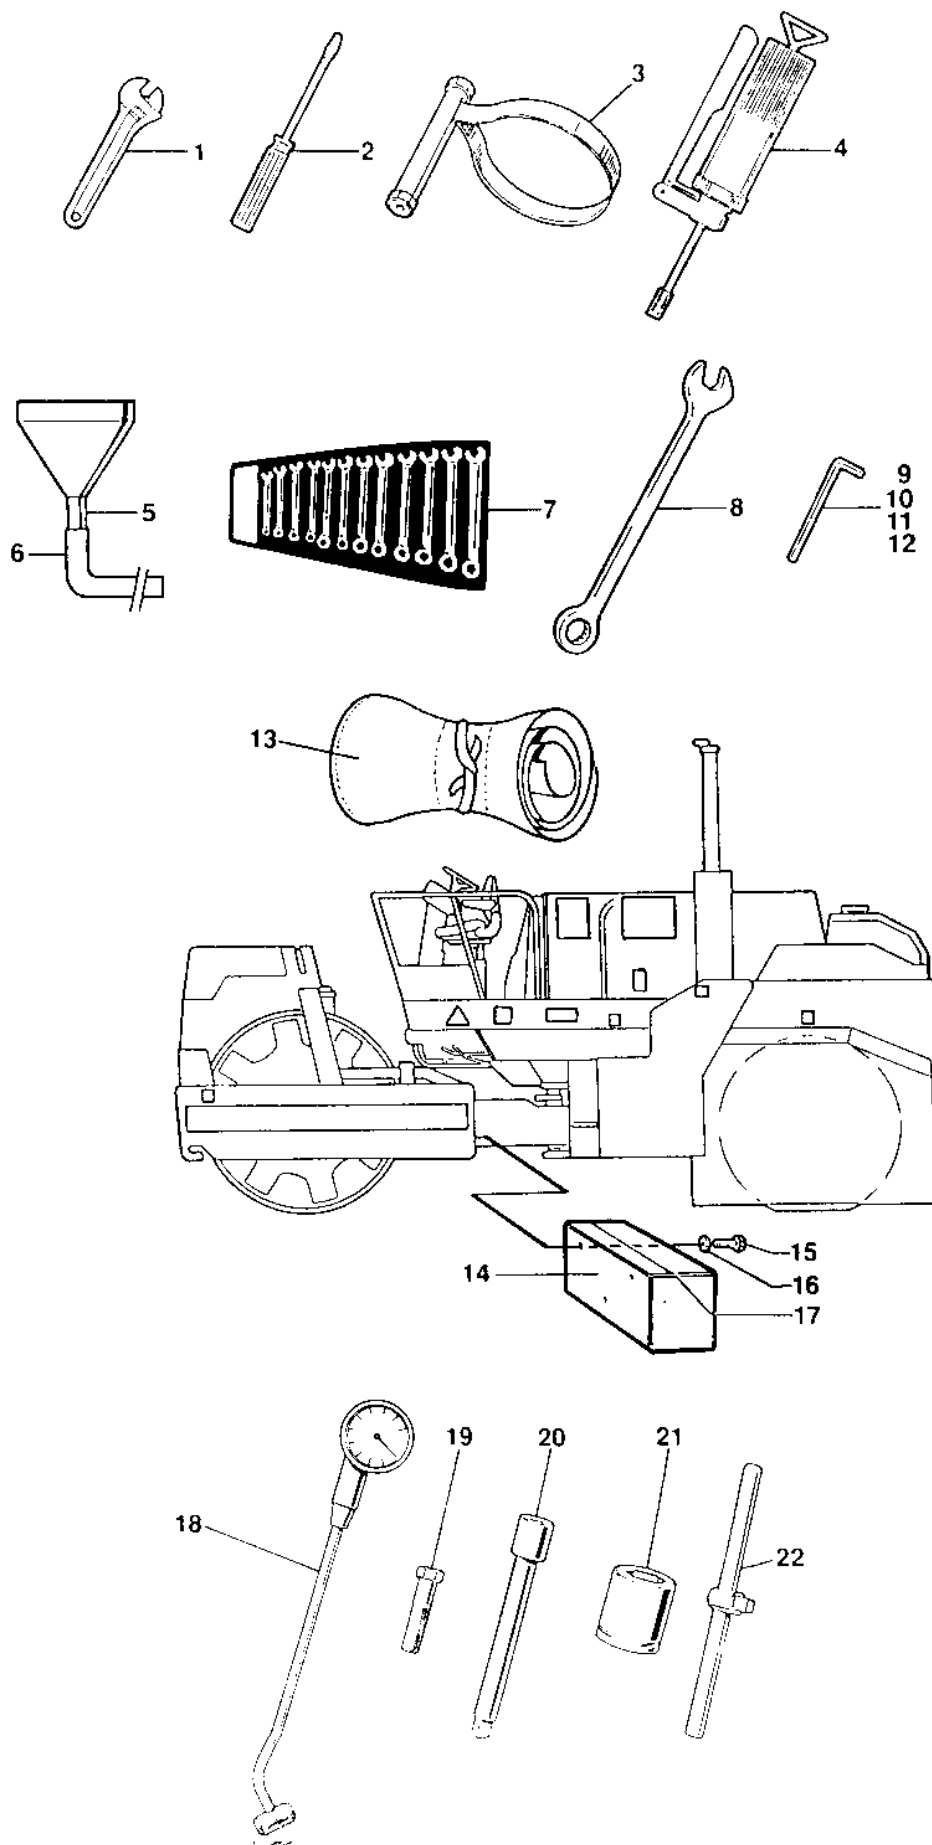


Tool equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	485011		1	Adjustable wrench	
2	485019		1	Screw driver	
3	902610		1	Belt pliers	
4	311016		1	Grease gun	
5	485040		1	Filling funnel	
6	244026	A	1XL	Plastic hose	
7	901212	B	1	Open end spanner	
8	901213		1	Open end spanner 24 mm	
	902578		1	Open end spanner 22 mm	
9	485005		1	Allen wrench 1/4"	
10	485037		1	Allen wrench 3/8"	
11	485388		1	Allen wrench 6 mm	
12	485006		1	Allen wrench 8 mm	
13	277992		1	Tool bag	
14	347410		1	Tool box cpl	
15	500021		3	Screw	
16	615043		3	Conical spring washer	
17	358881		1	Pad lock	
18				Not used on this model	
19				Not used on this model	
20				Not used on this model	
21				Not used on this model	
22				Not used on this model	
A) L=0.4 m					
B) Kit					

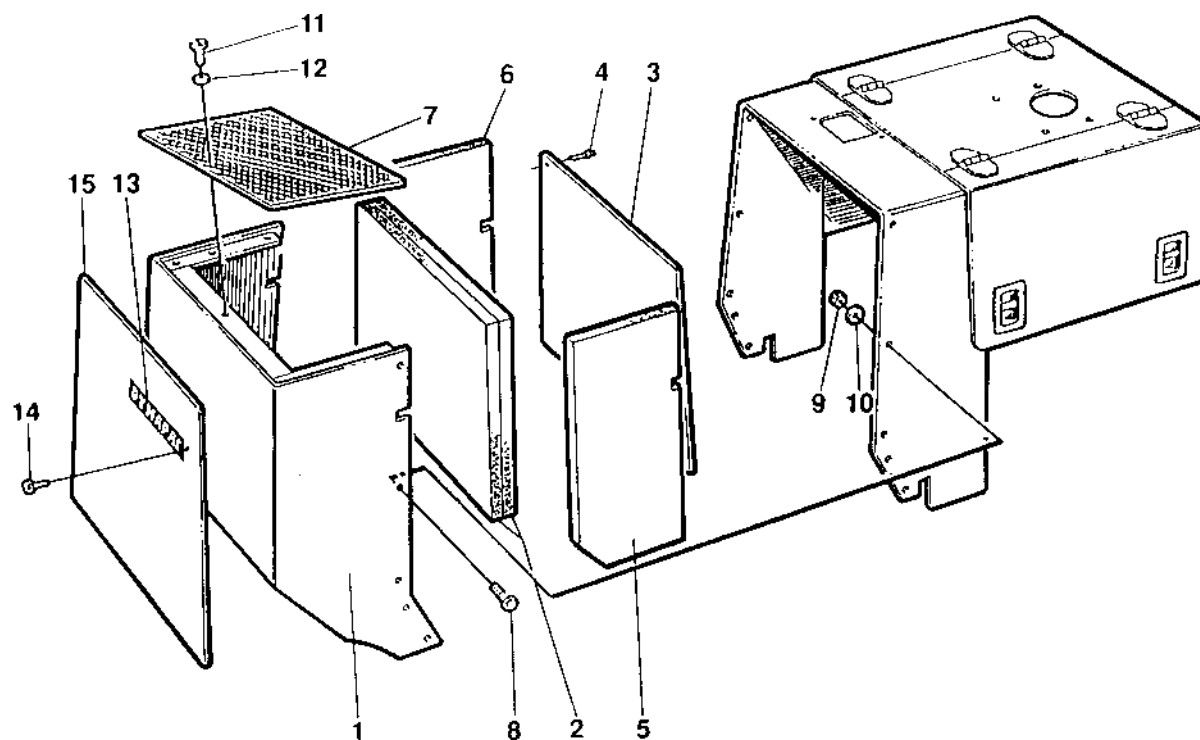

Noise suppression


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355109		1	Cover	
2	355114		2	Insulating material	
3	355113		1	Cover plate	
4	624015		6	Blind rivet	
5	355116		1	Insulating material	
6	355115		1	Insulating material	
7	355117		1	Grid	
8	500028		10	Screw	
9	586018		10	Lock nut	
10	904230		10	Washer	
11	541703		7	Screw	
12	928467		7	Washer	
13		1	1	Plate	
14	541508		2	Screw	
15		2	1	Grid	
1) See section " Plates and decals "					
2) See engine section " Cooler "					

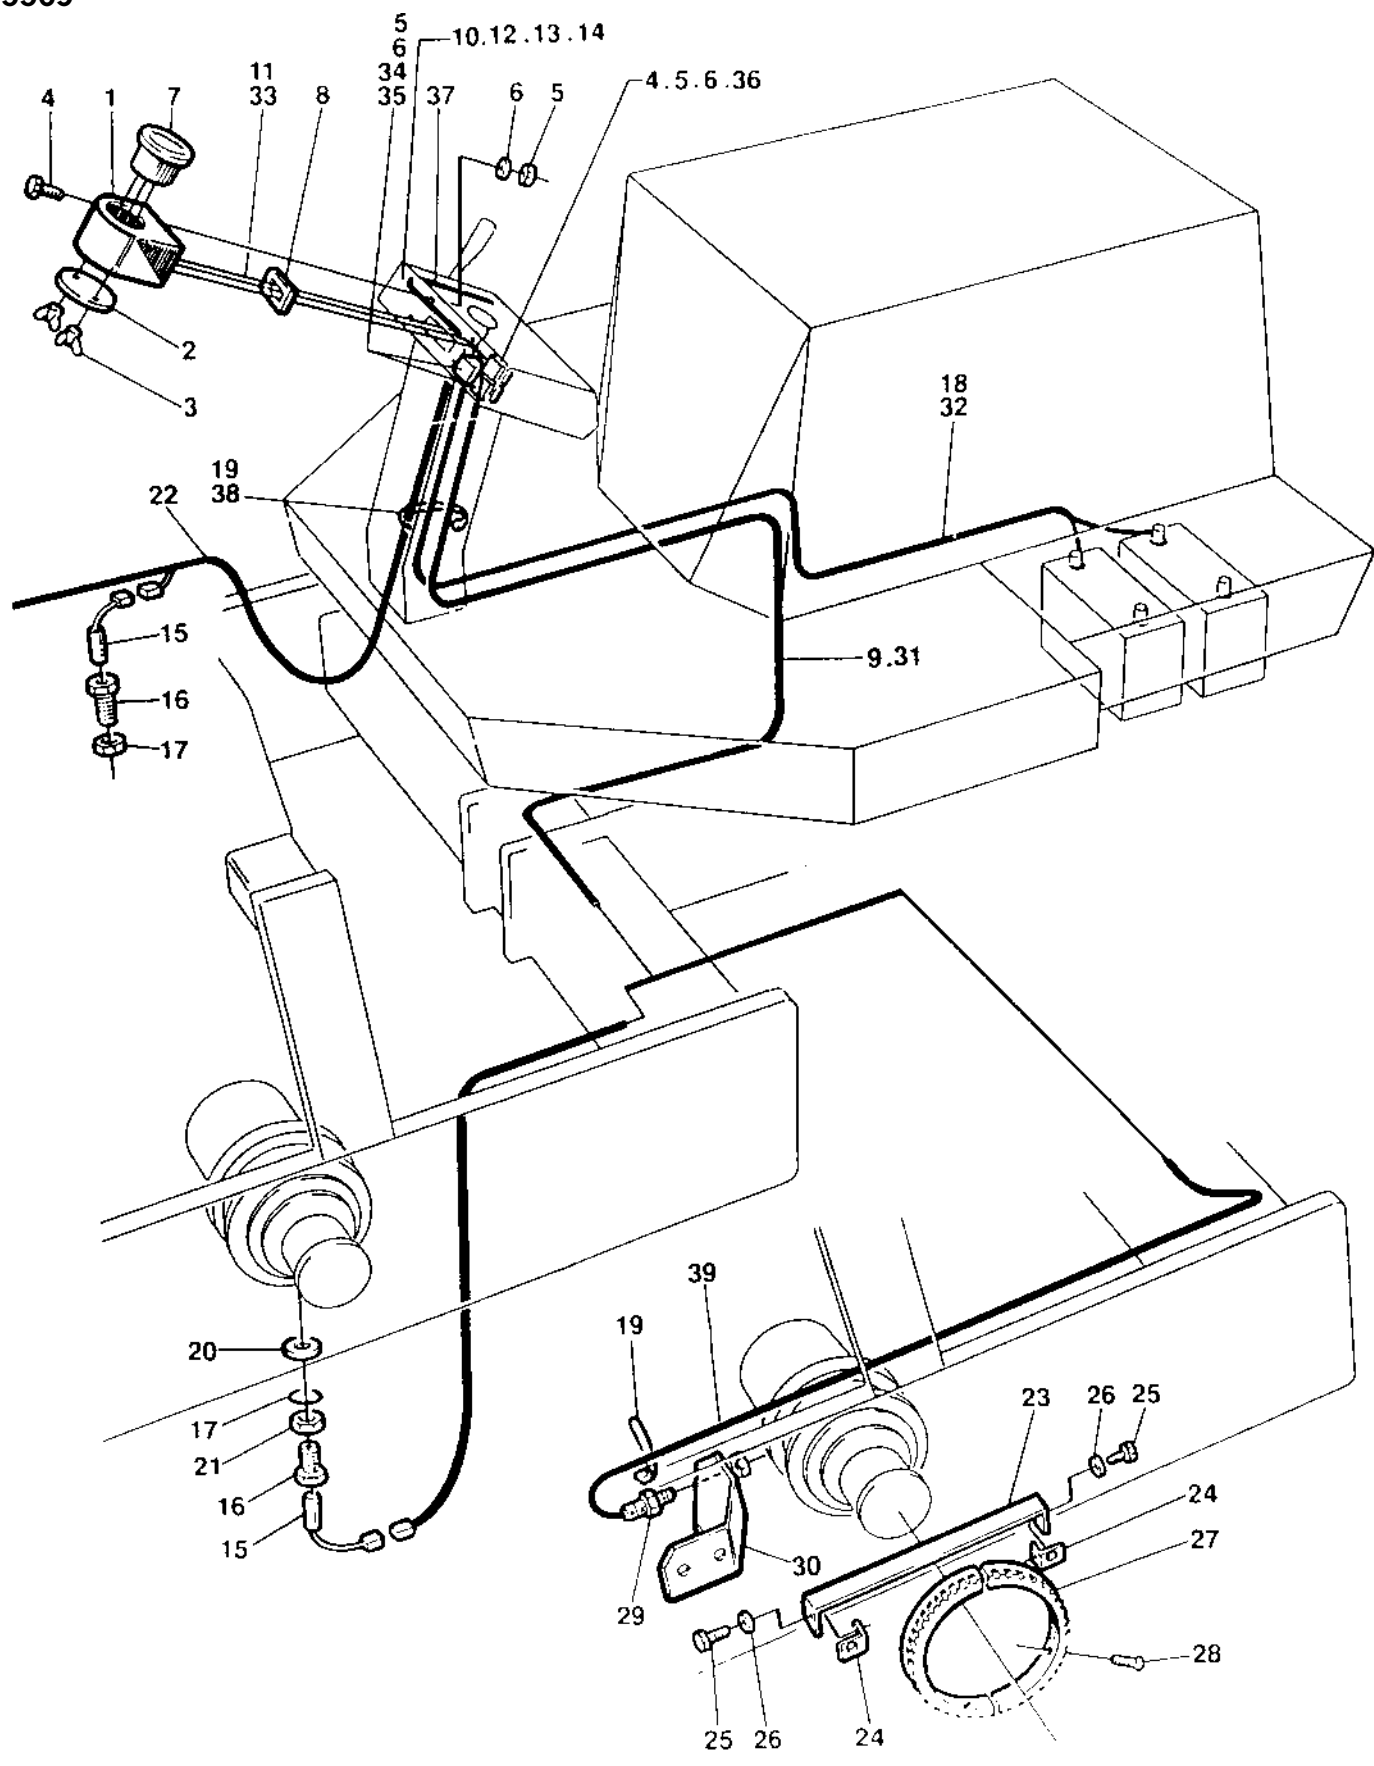

Trip recorder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355132		1	Tachograph box	
2	355135		1	Tachograph cover	
3	582006		2	Wing nut	
4	500004	1	5	Screw	
5	570003	1	6	Nut	
	570003	2	7	Nut	
6	615041	1	6	Washer	
	615041	2	7	Washer	
7	901209		1	Tachograph	
8	900904		1XL	Grommet	
9		1,3	1	Cable harness	
10	600002	1	2	Washer	
11	357533	1	1	Cable harness To trip recorder	
12	923976	1	2	Nut	
13	533010	1	2	Screw	
14	922916	1	1	Terminal block	
15		1,3	2	Sensor	
16		1,3	2	Adapter	
17		1,3	2	Nut	
18	357532	1	1	Cable harness To battery	
	950063	1	1	.Fuse holder	
	80154602	1	1	.Fuse 7.5A	
19	313041		N	Cable ties L=186 mm	
20		1,3	1	Sealing	
21		1,3	1	Nut	
22		1,3	1	Cable harness	
23	355807	2	1	Protection cover	
24	355808	2	2	Bracket	
25	500018	2	4	Screw	
26	615043	2	4	Conical spring washer	
27	355316	2	2	Indicator	
28	535007	2	6	Screw	
29	355136	2	1	Pick up	
30	355317	2	1	Bracket	
31	355129	2	1	Cable harness	
32	355130	2	1	Cable harness To battery	
	950063	2	1	.Fuse holder	
	80154602	2	1	..Fuse 7.5A	
33	355131	2	1	Cable harness To trip recorder	
34	928516	1	1	Diode	D
	928516	2	2	Diode	D
35	500060	1	1	Screw	
	500060	2	2	Screw	
36	975077		1	Relay	
37	355152	2	2	Connection wire	
38	313068	2	N	Cable ties L=92 mm	
39	924756	2	1	Clip clamp	

- 1) Valid for rollers with sensor inside hydr motor
- 2) Valid for rollers with sensor and indicator outside hydr motor
- 3) See Electrical equipment, section " Sensors ".

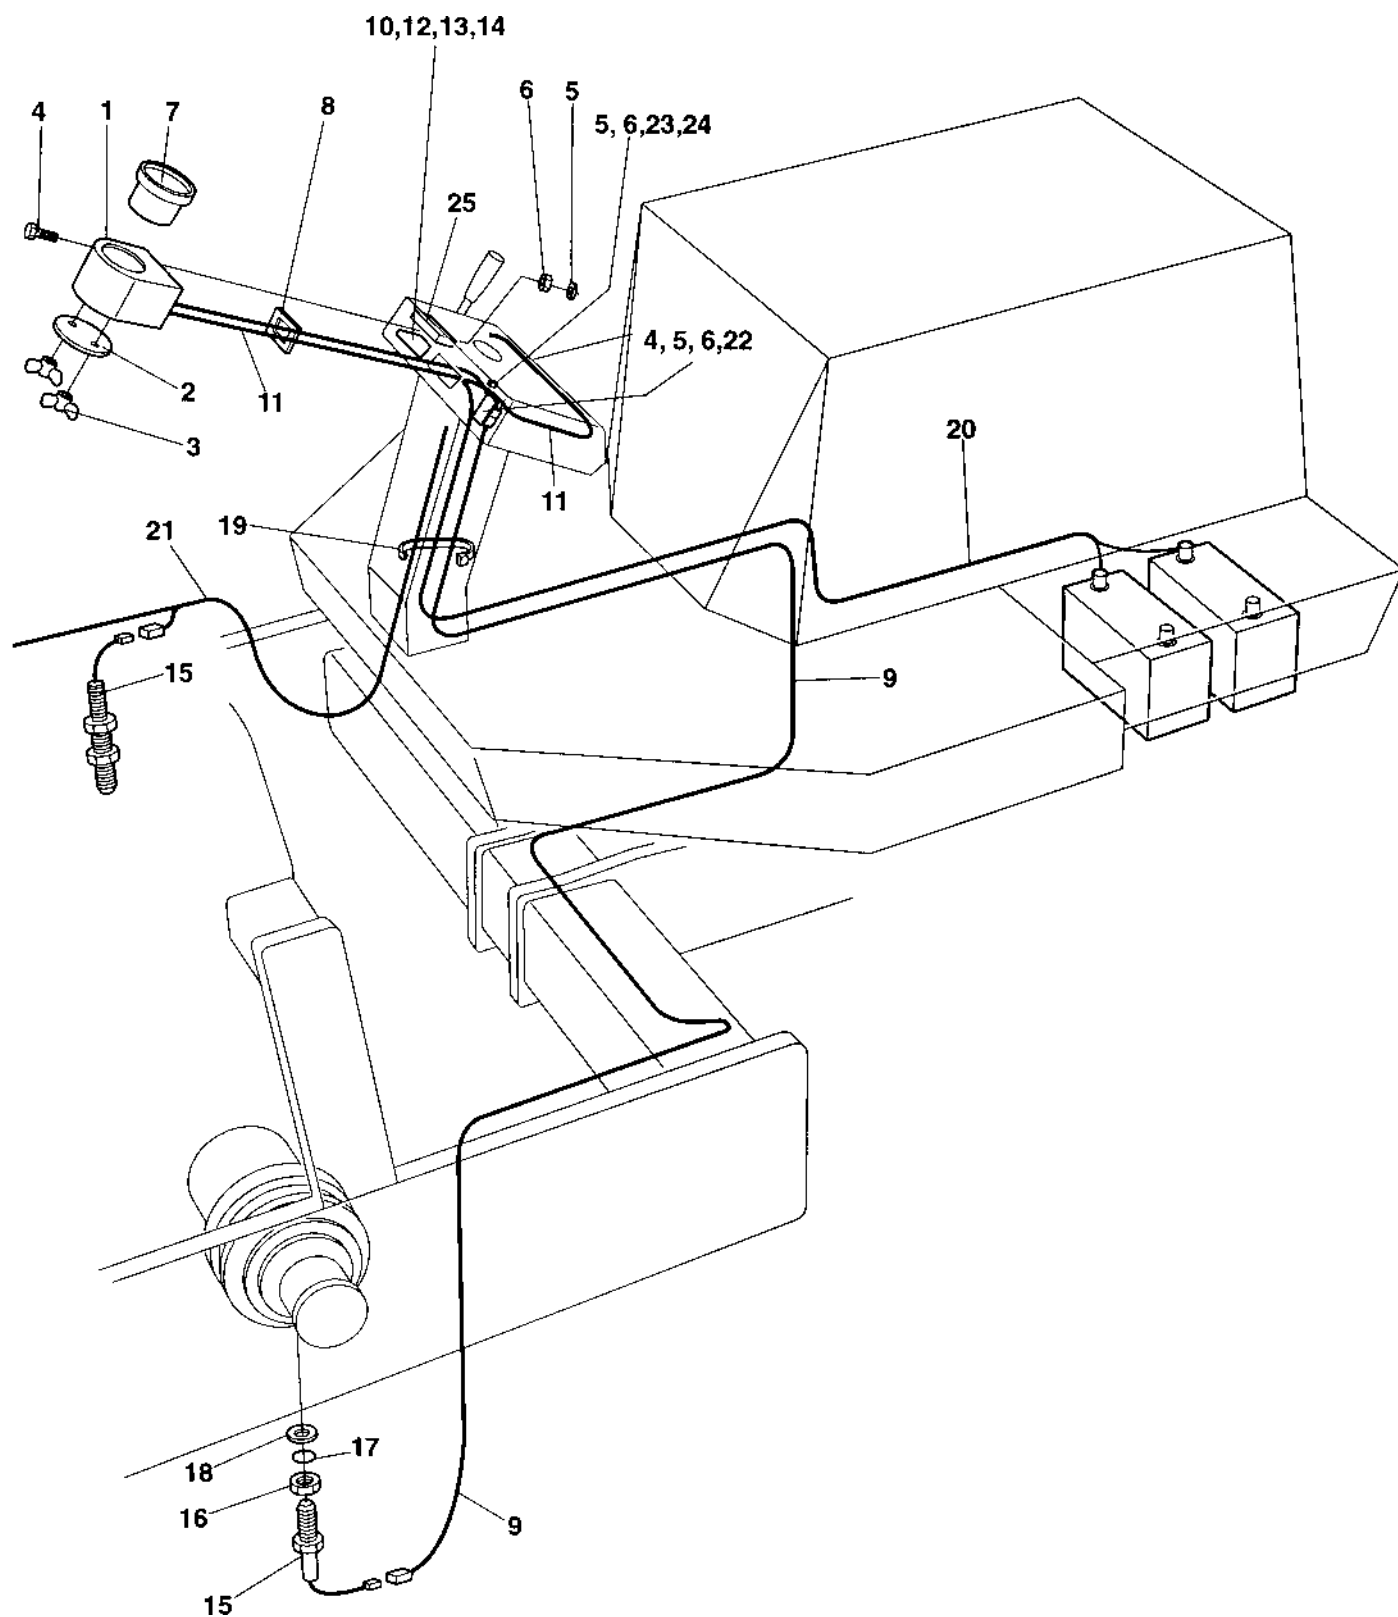


Trip recorder

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355132		1	Tachograph box	
2	355135		1	Tachograph cover	
3	582006		2	Wing nut	
4	500004		5	Screw Up to 60910731	
	500004		4	Screw From 60910732	
5	570003		6	Nut Up to 60910731	
	570003		4	Nut From 60910732	
6	615041		6	Washer Up to 60910731	
	615041		4	Washer From 60910732	
7	901209		1	Tachograph	
8	900904	A	1XL	Grommet	
9		1	1	Wiring harness	
10	600002		2	Washer	
11	370883		1	Cable harness To trip recorder Up to 60910731	
	376047		1	Cable harness To trip recorder From 60910732	
12	923976		2	Nut	
13	533010		2	Screw	
14	922916		1	Terminal block	
15		1	2	Sensor	
16	574013		1	Lock nut	
17	904253		1	O-ring	
18	747282		2	Copper washer	
19	313041		N	Cable ties L=186 mm	
20	357532		1	Cable harness To battery	
	950063		1	.Fuse holder	
	80154602		1	.Fuse 7.5A	
21		1	1	Wiring harness	
22	975077		1	Relay Up to 60910731	
23	500060		1	Screw Up to 60910731	
24	928516		1	Diode Up to 60910731	D
25	371889		1	Frequency doubler From 60910732	

1) See Electrical equipment section " Sensors ".

A) Length as required.

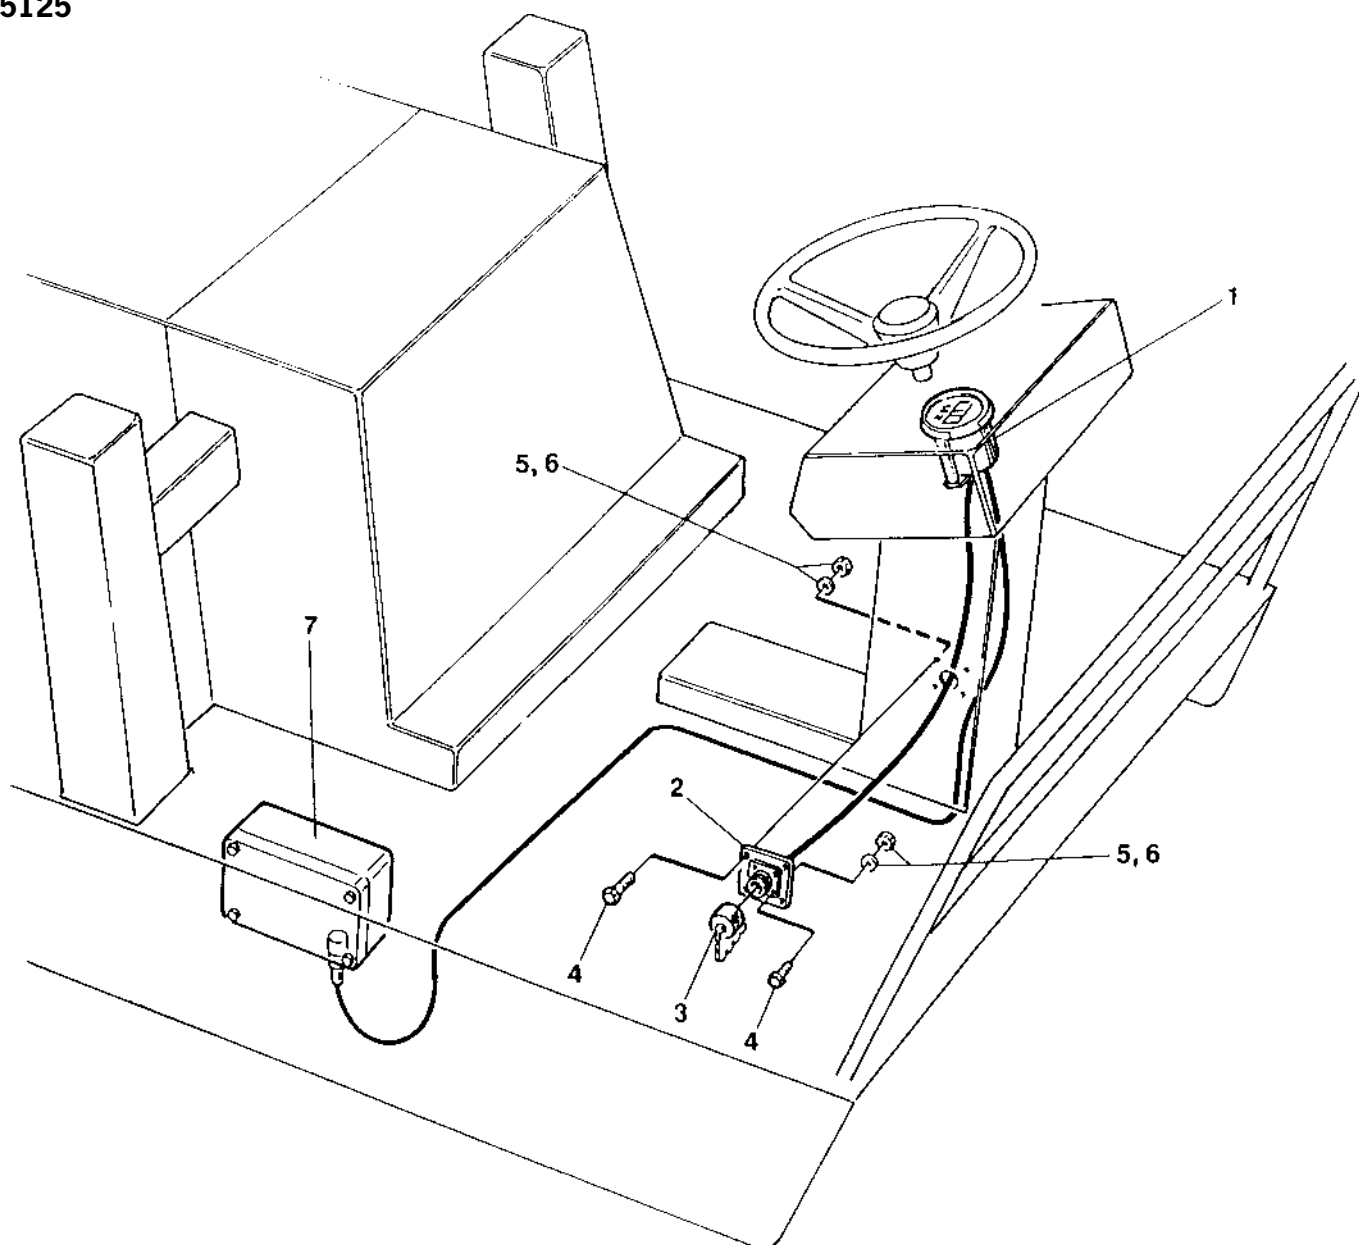


Frequency meter

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	349093	A	1	Digital frequency meter	
2	348448		1	Mounting plate	
3	928859		1	Dust protection	
4	533002		8	Screw	
5	570001		8	Nut	
6	904697		8	Washer	
7		1	1	Processor	

1) See section " Compaction meter "

A) Incl. cables

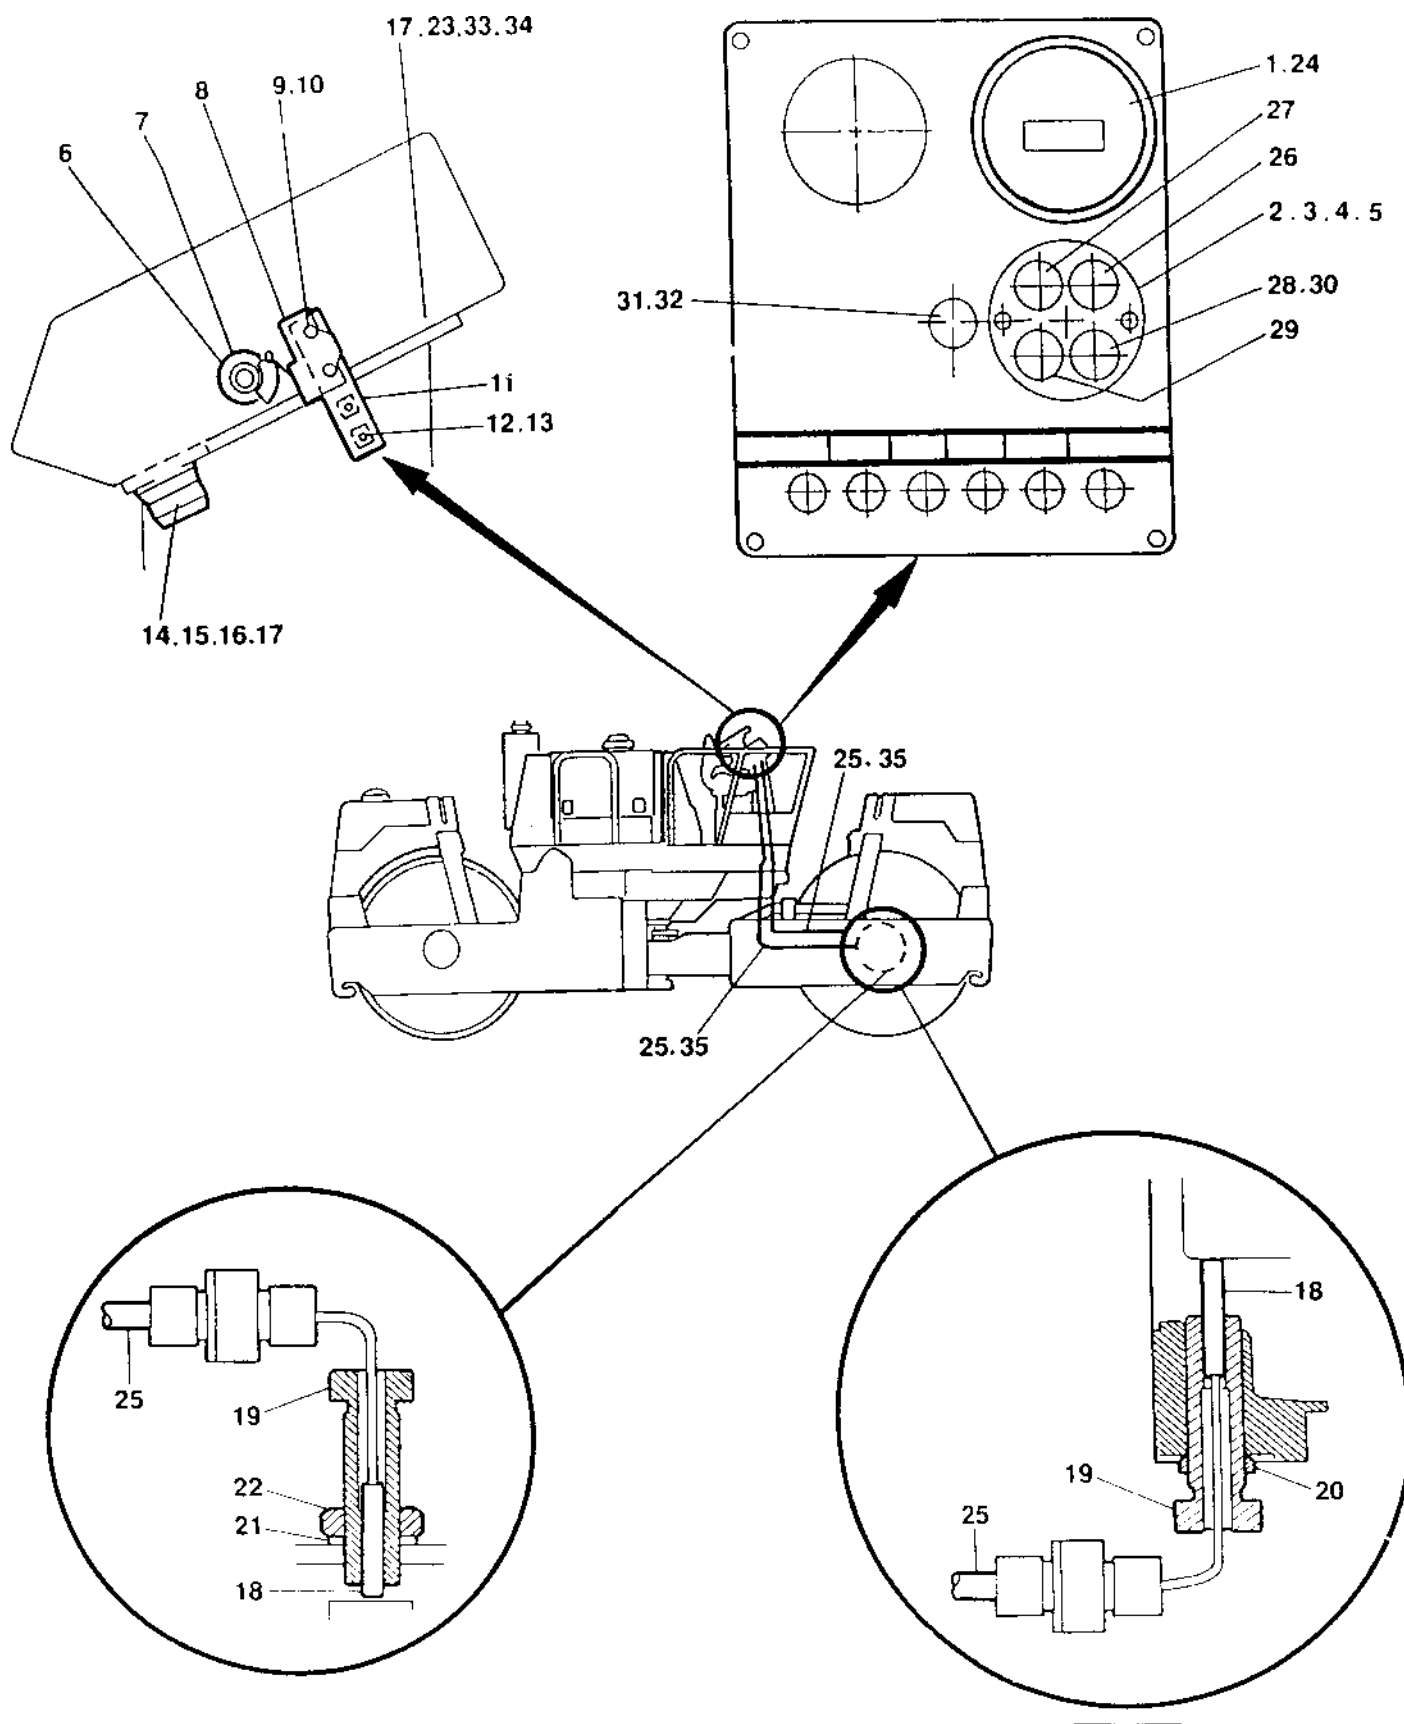

Roller multimeter

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357552		1	Roller multimeter	
2	349423		1	Cover	
3	349460		2	Washer	
4	533062		2	Screw	
5	586002		2	Lock nut	
6	346417		1	Cam ring	D
7	923988		1	Stop screw	
8	930046		1	Micro switch	D
9	900243		2	Screw	
10	928927		2	Lock nut	
11	349468		1	Holder plate	
12	500012		2	Screw	
13	615042		2	Conical spring washer	
14	355301		1	Buzzer	D
15	533014		1	Screw	
16	904698		2	Washer	
17	923976		4	Nut	
18		1	2	Sensor	
19		1	2	Adapter	
20		1	1	Nut	
21		1	1	Sealing	
22		1	1	Nut	
23	357551	A	1	Cable harness	
24	355304	B	1	Cable harness	
25		1	2	Cable harness	
26	928928	C	1	Push button	D
27	900890	D	1	Switch, divider	
28	900891	E	1	Switch	
29	900892	F	1	Switch	
30	930155		1	Connector	
31	985012		1	Bulb	D
32	985146		1	Lamp, red	D
33	922916		1	Terminal block	
34	533010		2	Screw	
35	313041		N	Cable ties L=186 mm	

1) See section " Electrical equipment "

A) To multimeter


B) To switches

C) Black (start)

D) Green (clear)

E) Red (stop)

F) Yellow (next)

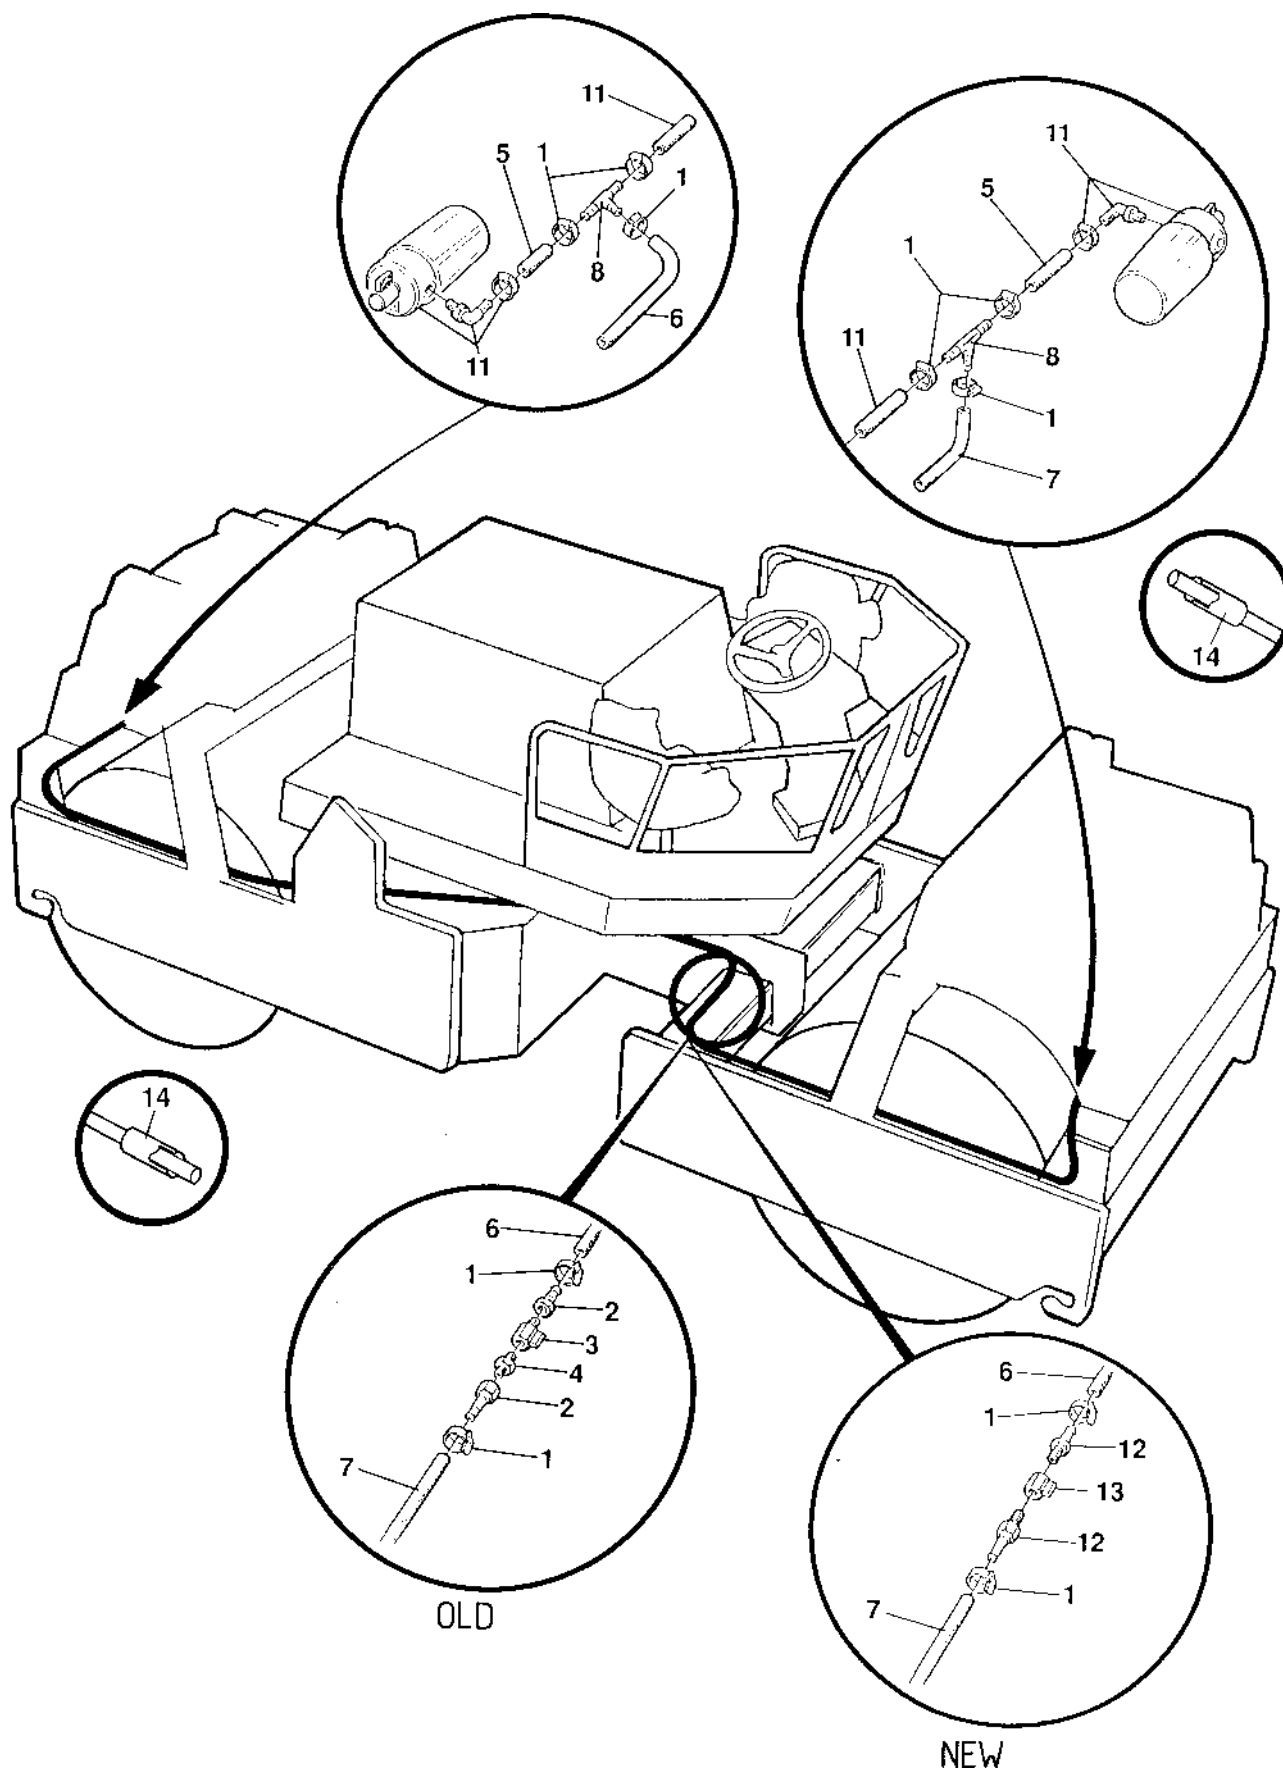


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	313002		8	Hose clamp	
2	901300		2	Hose connection	
3	924986		1	Valve	
4	901299		1	Adapter	
5	244054	A	2XL	Hose reinforced	
6	244054	B	1XL	Hose reinforced	
7	244054	C	1XL	Hose reinforced	
8	923735		2	Hose connection	
9	925802		N	Cable ties L=142 mm	
10	313102		N	Cable ties L=388 mm	
11			1	Existing parts	
12	924544		2	Hose connection	
13	903248		1	Valve	
14	359183		5	Tube	

A) L=0.10 m


B) L=3.55 m

C) L=5.80 m

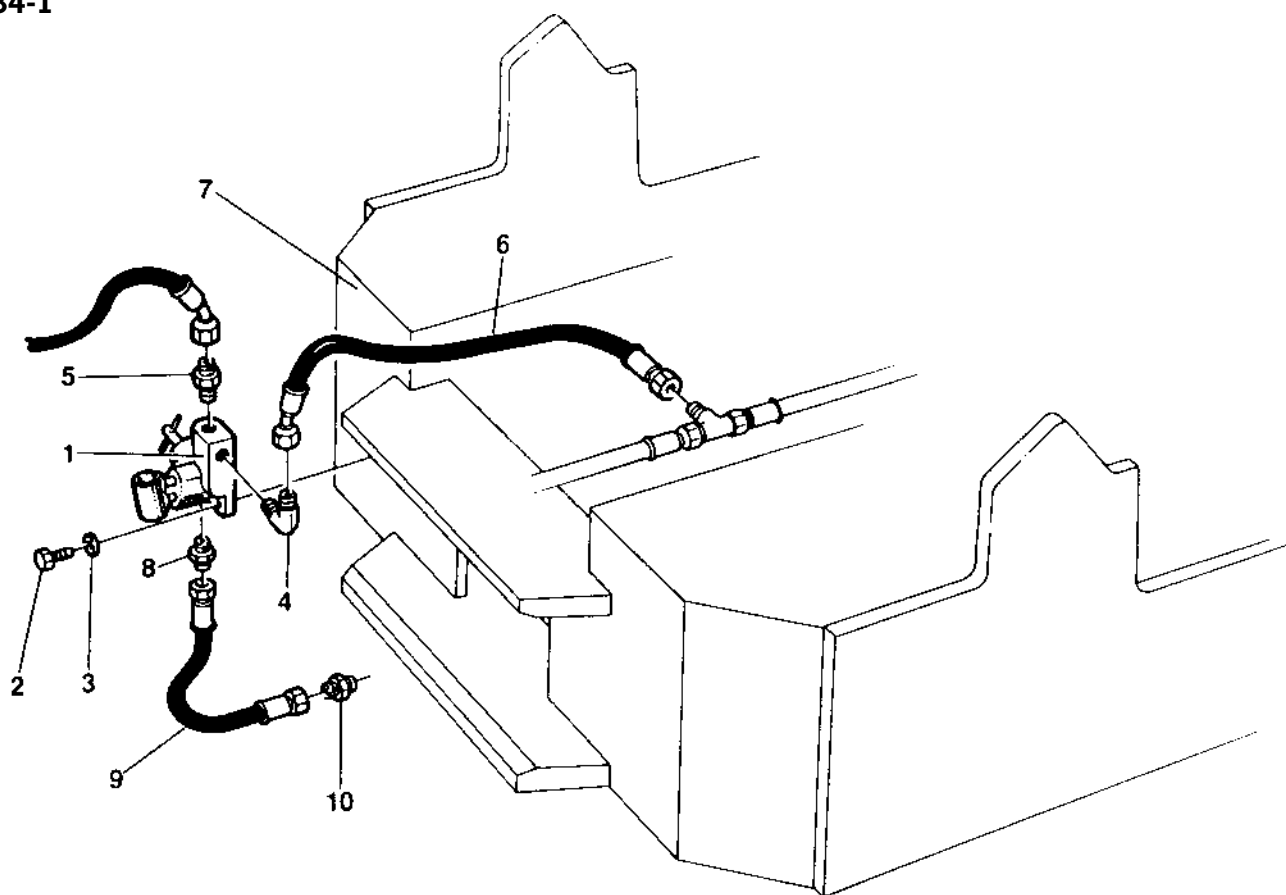


Brake release

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	415329		1	Hand pump	D
	922060		1	.Seal kit	
	922061		1	.Shuttle valve kit	
2	508028		3	Screw	
3	604007		3	Spring washer	
4	334389		1	Elbow 90, O-ring	
5	234233		1	Adapter	
6	482444		1	Hydraulic hose	
7	843317		1	Decal "HAND PUMP" English	
8	334232		1	Adapter	
9	851639		1	Hydraulic hose	
10	234349		1	Connector	

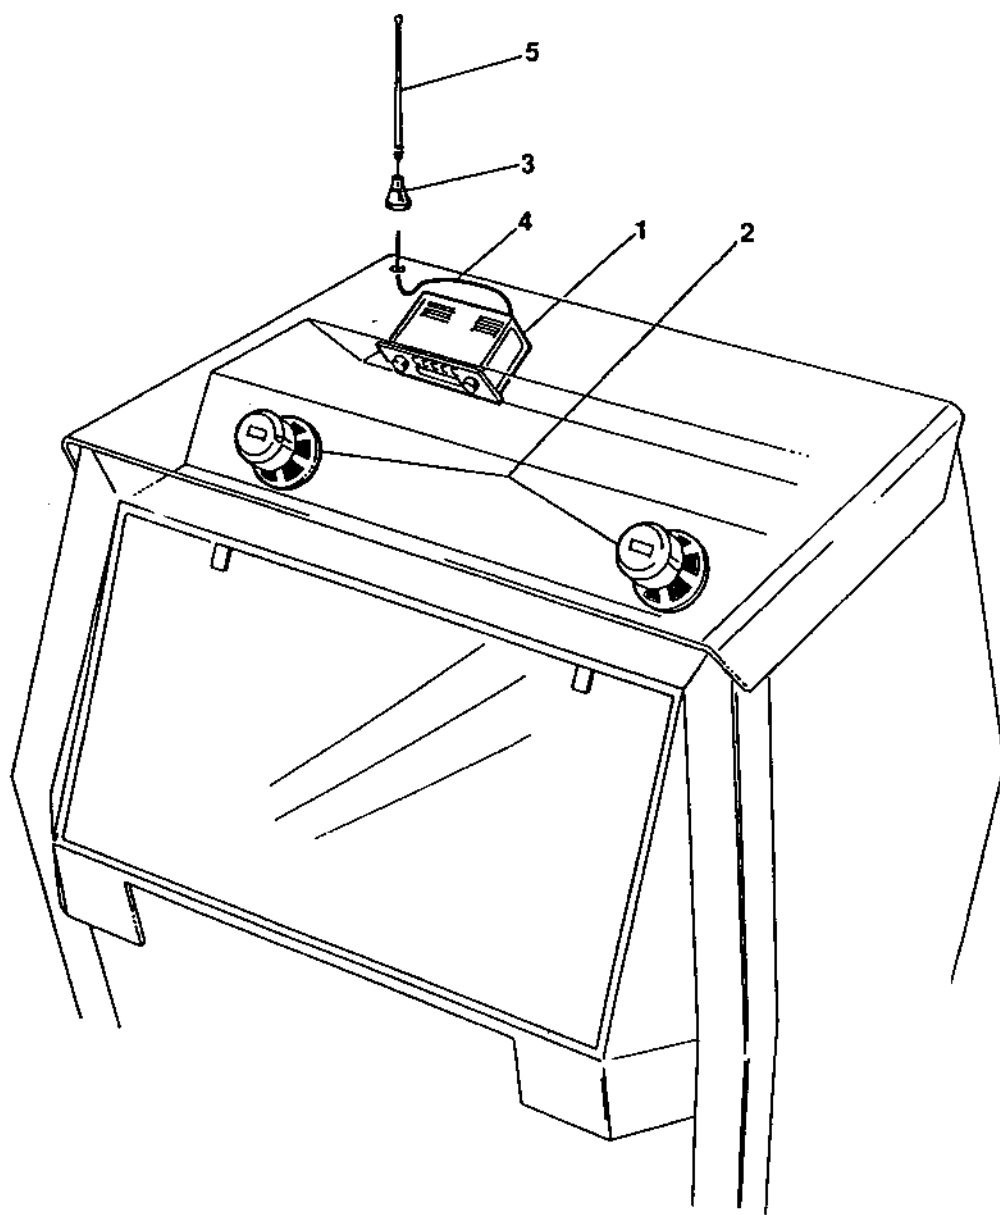

Cassette receiver

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	901165		1	Cassette receiver	
2	901166	A	1	Loud speakers	
3	901168		1	Antenna holder	
4	901169		1	Antenna cable	
5	901167		1	Antenna	
A) 2 pcs					

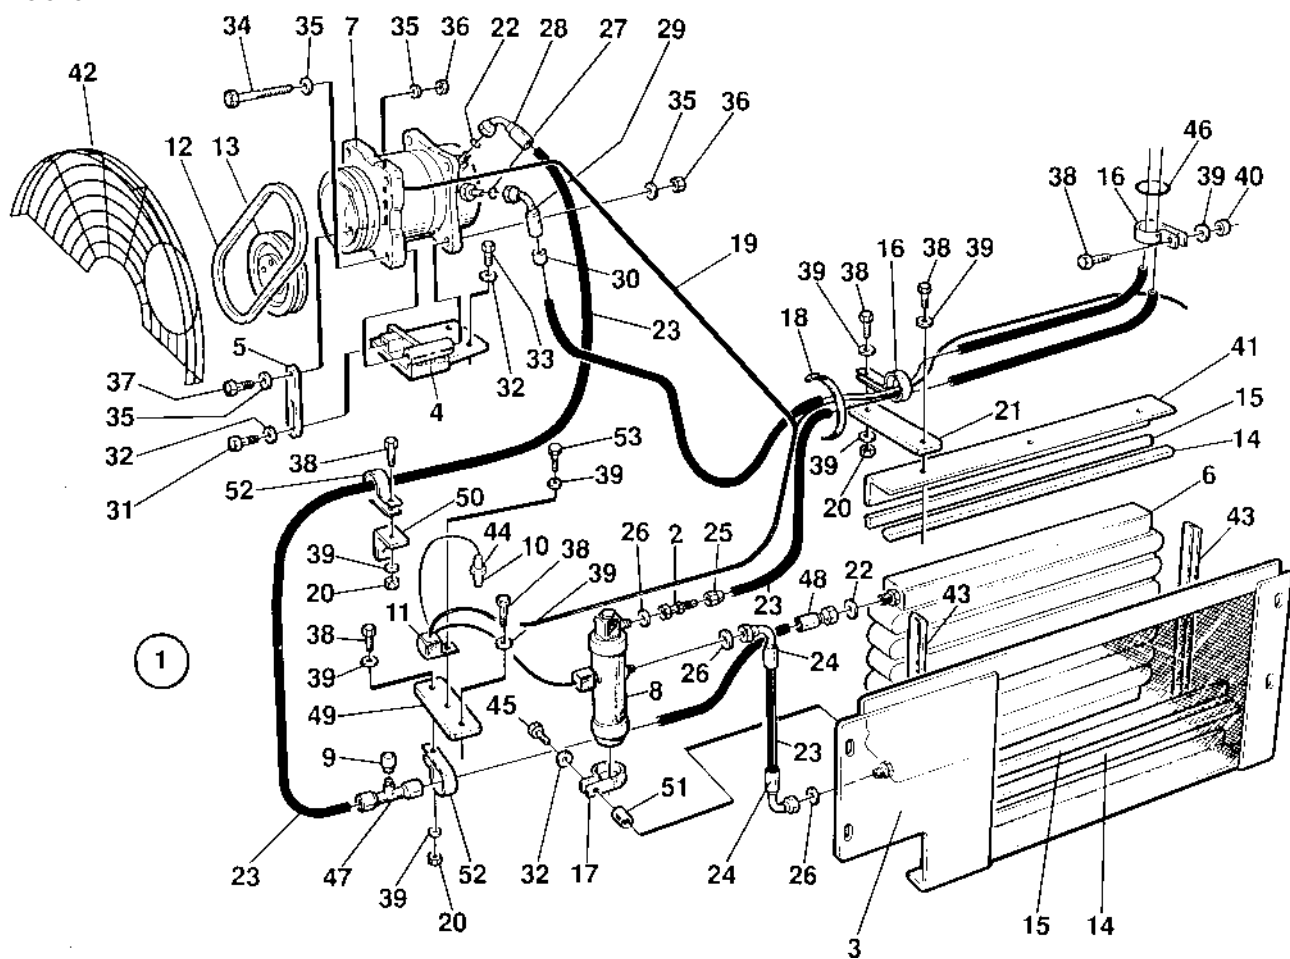

Air conditioning


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Cab Prep. for air condition	
2	901147		1	Hose connection	
3	355708		1	Condensor bracket	
4	355706		1	Compressor bracket	
5	355565		1	Holder plate	
6	901103		1	Condensor	C
7	902422		1	Compressor	C
8	901101		1	Freon dryer	D
9	901981		1	Pressure control	D
10	355567		1	Diode	D
11	975077		1	Relay	
12	413049		1	V-belt	B
13	901158		1	V-belt pulley	
14	926911	A	2XL	Rubber strip	
15	901173	A	2XL	Edge trim	
16	921108		4	Clamp	
17	921022		1	Hose clamp	
18	313041		N	Cable ties L=186 mm	
19	355768		1	Connection wire	
20	586002		3	Lock nut	
21	358157		1	Bracket	
22	901113		2	O-ring	D
23	902595	B	3XL	Rubber hose	
24	902592		2	Hose connection	
25	901109		1	Hose connection socket	
26	901112		3	O-ring	D
27	902442		1	O-ring	D
28	902593		1	Hose connection	
29	902423		1	Hose connection	
30	901111		1	Hose connection socket	
31	500043		1	Screw	
32	615044		5	Conical spring washer	D
33	500028		3	Screw	
34	928664		1	Screw	
35	600008		4	Washer	
36	570006		2	Nut	
37	500030		1	Screw	
38	500040		8	Screw	
39	600004		9	Washer	
40	570004		1	Nut	
41	356347		1	Cover plate	
42	356035		1	Fan guard Up to 60910675	
	371843		1	Fan guard From 60910676 Up to 60910711	
	374602		1	Fan guard From 60910712	
43	202056	C	2XL	Edge trim	
44	600003		1	Washer	
45	500161		1	Screw	
46	909085	D	1XL	Grommet	
47	901982		1	Hose connection	
48	902594		1	Hose connection	
49	358156		1	Bracket	
50	358158		1	Bracket	
51	346593		1	Sleeve	
52	921036		2	Clamp	
53	500185		1	Screw	

A) L=0.550 m

B) Length as required

C) L=0.336 m

D) L=190 mm

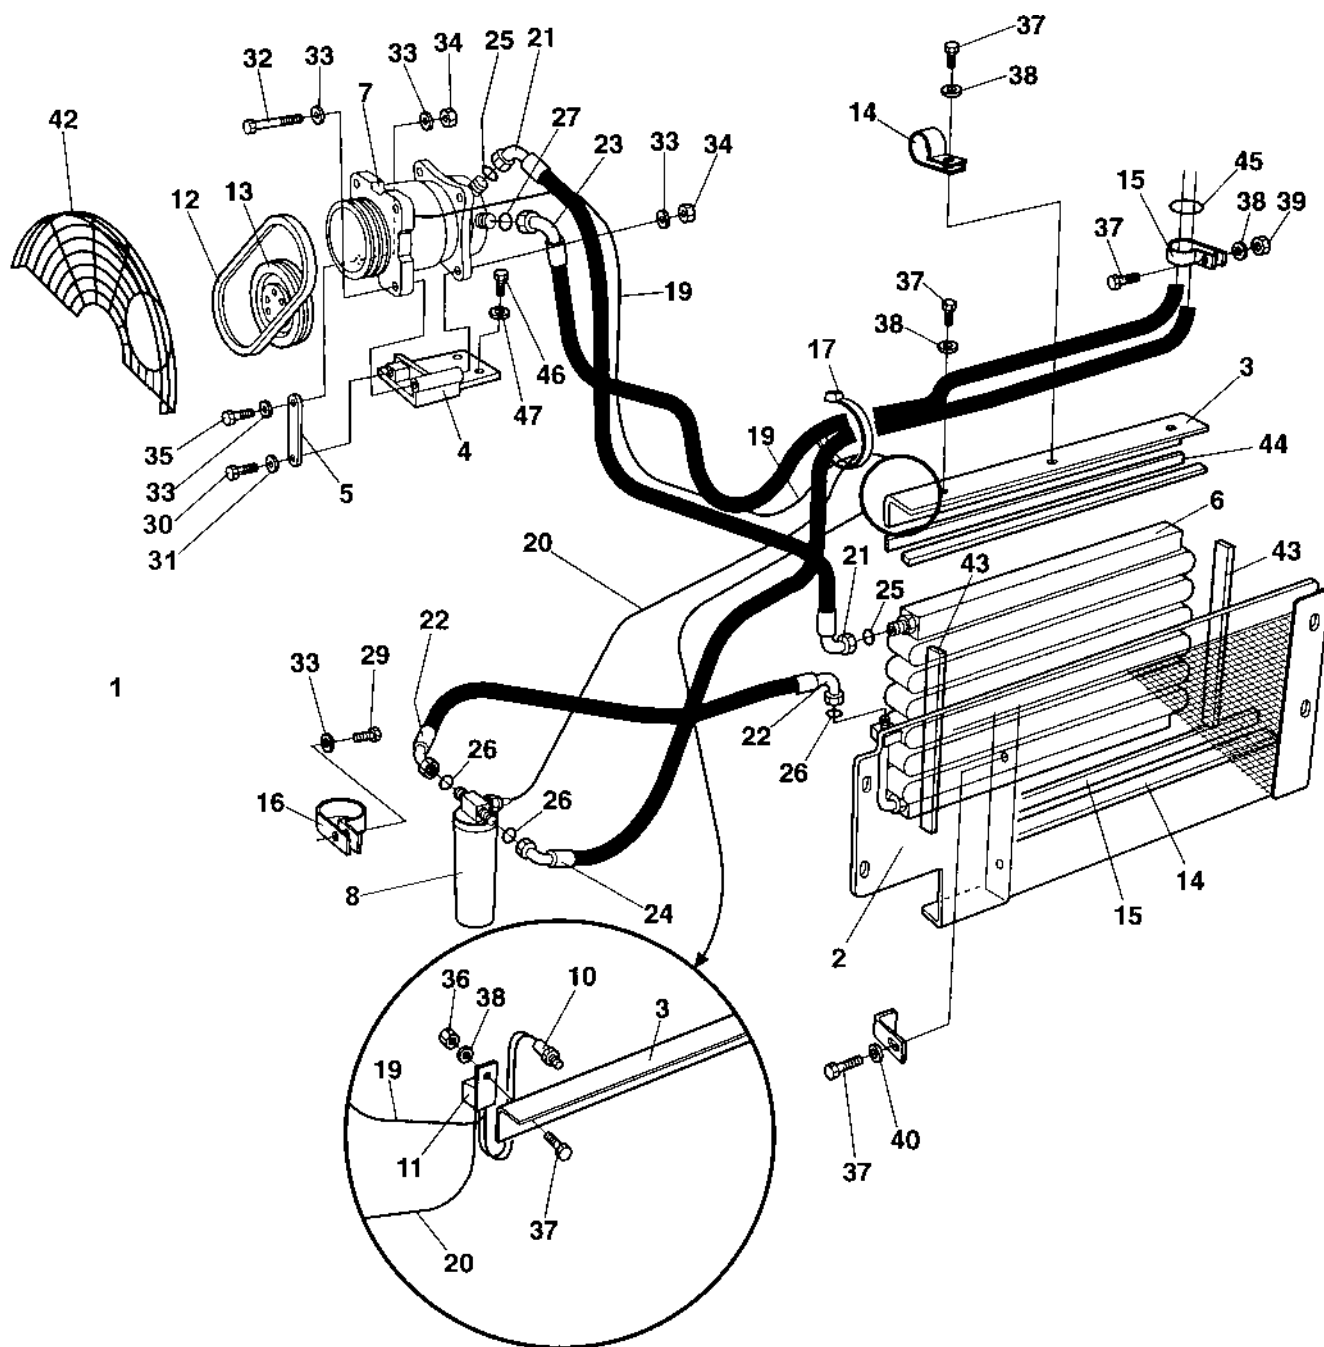


Air conditioning

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Cab Prepared for air condition	
2	380641		1	Condensor bracket	
3	356347		1	Cover plate	
4	355706		1	Compressor bracket	
5	355565		1	Holder plate	
6	380586		1	Condensor	
7	903612		1	Compressor	
8	380688		1	Dryer cpl.	
	937680		1	.Pressure switch	
9	380946		4	Bracket	
10	355567		1	Diode	D
11	975077		1	Relay	
12	413049		1	V-belt	B
13	901158		1	V-belt pulley	
14	921047		2	Clamp	
15	921108		1	Clamp	
16	903703		1	Clamp	
17	313041		N	Cable ties L=186 mm	
19	356718		1	Connection wire	
20	355768		1	Connection wire	
21	380988		1	Refrigerant hose	
22	380987		1	Refrigerant hose	
23	903674		1	Hose connection	
24	903674		1	Hose connection	
25	901113		2	O-ring	D
26	901112		3	O-ring	D
27	902442		1	O-ring	D
29	500161		1	Screw	
30	500043		1	Screw	
31	904567		1	Washer	
32	928664		1	Screw	
33	904230		5	Washer	
34	570006		2	Nut	
35	500030		1	Screw	
36	586002		1	Lock nut	
37	500040		9	Screw	
38	904228		5	Washer	
39	570004		1	Nut	
40	603010		12	Washer	
41	904281		1	Washer	
42	374602		1	Fan guard	
43	902166	A	2XL	Edge trim	
44	926911	B	2XL	Rubber strip	
45	909085	C	1XL	Grommet	
46	500028		3	Screw	
47	615044		3	Conical spring washer	D

A) L=0.36 m


B) L=0.60 m

C) L=0.19 m

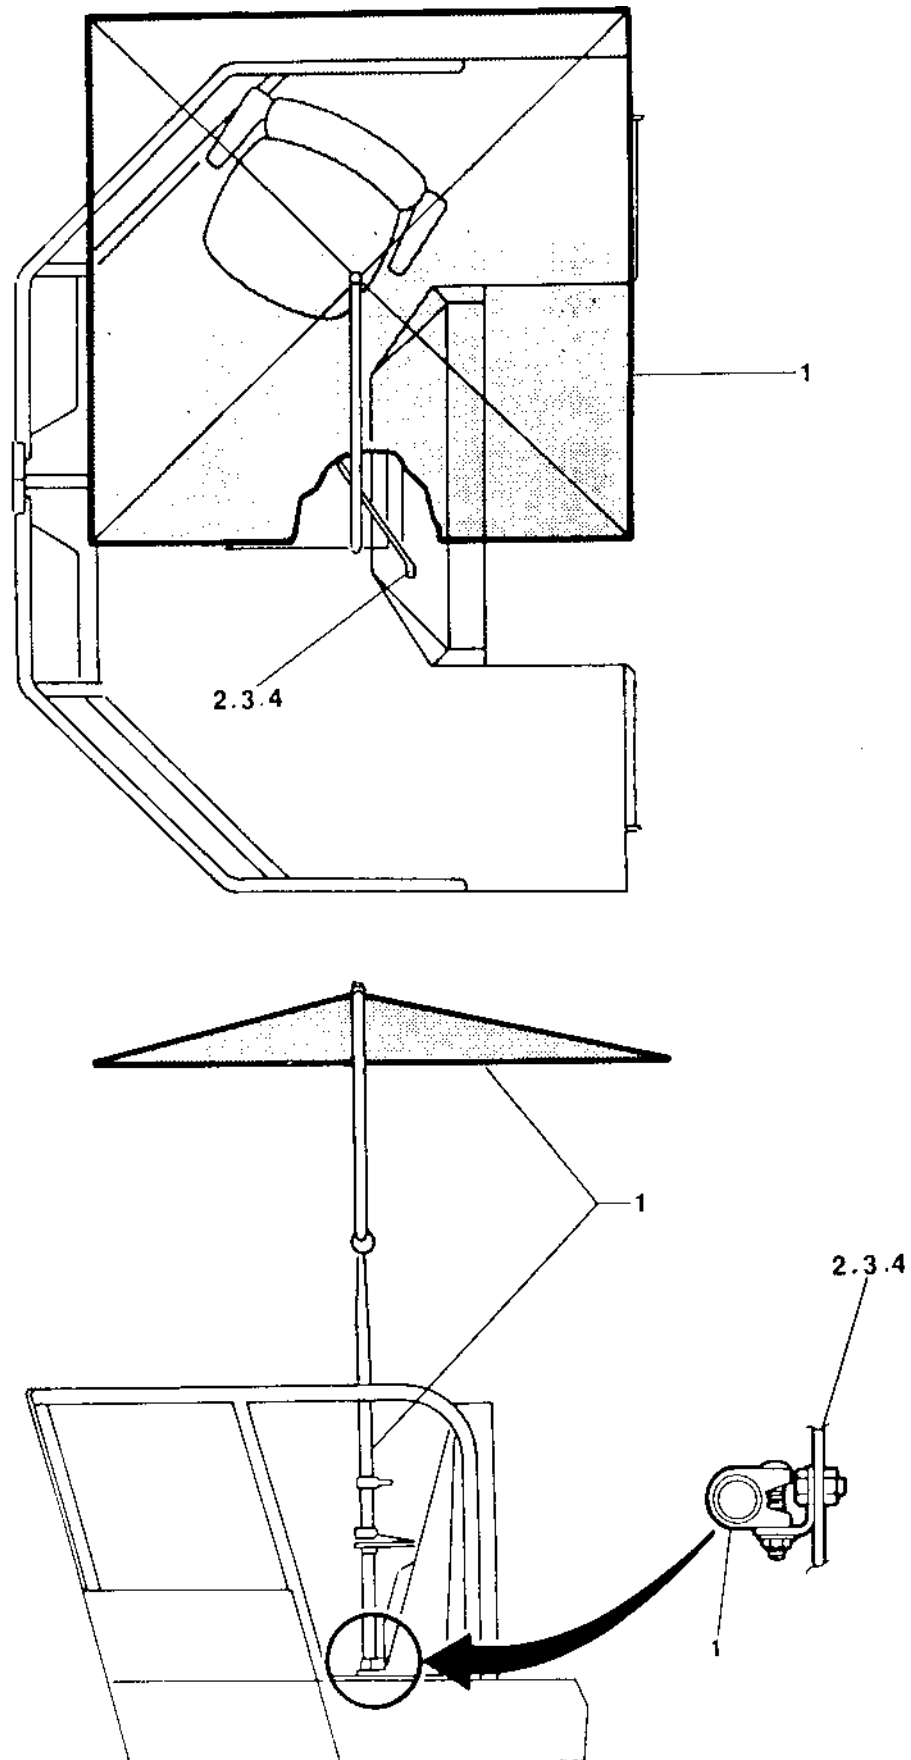

Umbrella

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	499421		1	Umbrella	
2	500051		3	Screw	
3	570007		3	Nut	
4	615045		3	Conical spring washer	

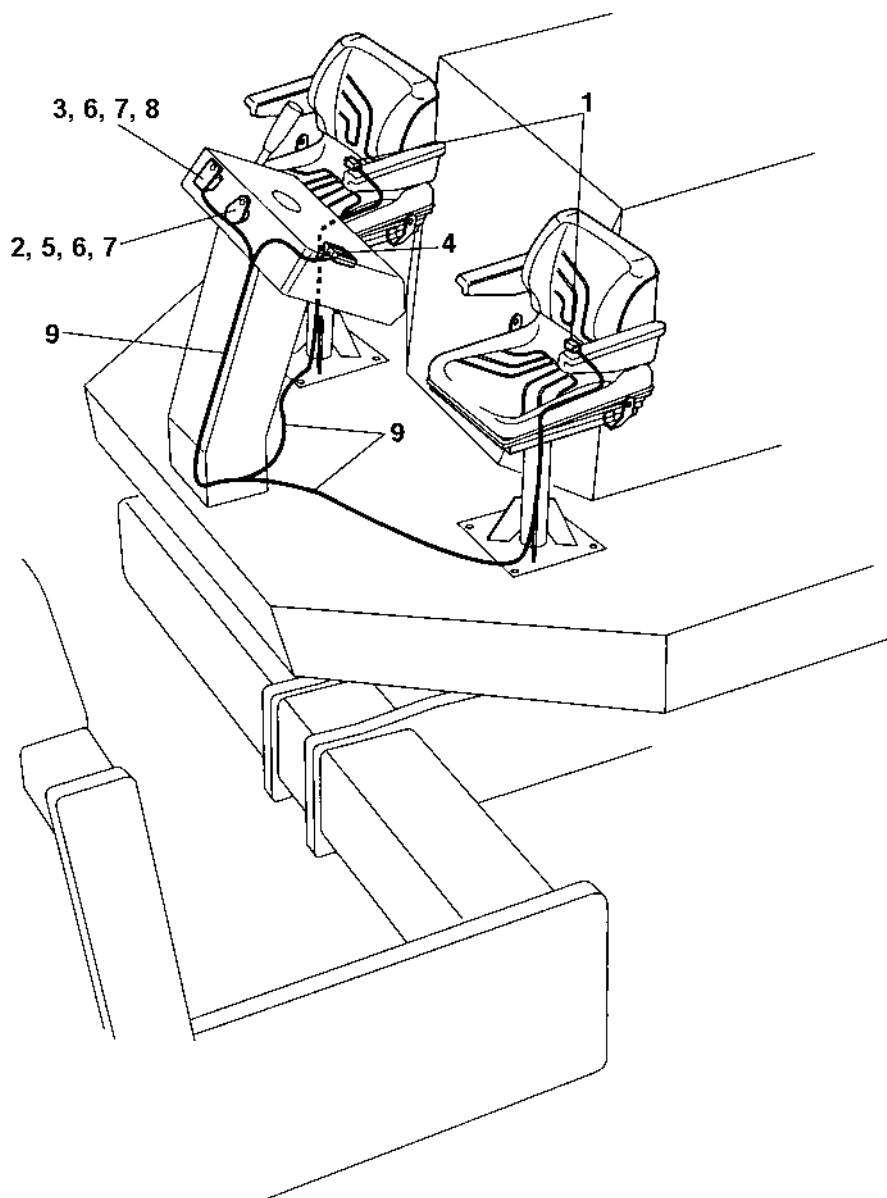

Interlock

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		1	1	Drivers seat	
2	355301		1	Buzzer	D
3	904704		1	Relay	
4	930154		1	Connector	
5	500060		1	Screw	
6	904281		2	Washer	
7	586001		2	Lock nut	
8	500004		1	Screw	
9	381621		1	Cable harness	
1) Only for seat PN 370234.					

Part Number	Page	Part Number	Page	Part Number	Page
100040	11	244026	171	337221	11
114036	29,33	244054	17,183	33722101	11
116041	29,33	271129	129	33722102	11
150014	133	272372	147	337528	63
151014	45	277992	171	337536	99
160021	17	285909	139,141	338895	63
160105	29,33	285911	139,141	340855	45
160132	71,89	287597	109,113	340863	85,87
160154	95	300234	129		,89
160164	95	310008	11	340864	45,51
160186	89	310022	7,9	342045	147
160191	85,87	311016	171	343017	147
162015	99	312001	139	343159	11
162017	7,9,29	312082	129	343256	167
	,33,55	313002	17,183	343318	29,33
162027	29,33	313023	47,49	343414	99
167023	29,33	313033	57	343458	29,33
167032	11	313041	71,73	343462	29,33
167033	11		,85,87	343470	29,33
202028	109		,89,99	343475	29,33
202046	117		,109,119	343561	29,33
202056	189		,121,141	343597	11
212108	63,99		,167,175	343731	109
212114	131,161		,177,181	343732	63,67
212115	131,161		,189,191		,71,73
212162	79	313068	55,109		,85,87
212163	79		,113,115		,89
212353	81		,123,175	343744	29,33
212354	81,83	313102	71,73	343748	169
212355	81,83		,85,87	343775	7,9
212356	81		,89,99	343782	129
212357	81		,109,167	343801	29,33
212358	81,83		,183		,47
212359	81,83	313105	53	343975	121
212408	131,161	313147	139,141	344138	67
212425	95	330171	55	344196	29,33
212426	95	332063	95	344374	131
212534	45	333083	79	345139	115
212535	45	333228	17	345381	13
232070	29,33	333548210	147	345452	129
232097	63,85	334070	99	345640	139
	,87	334117	99	345642	141
232098	89	334118	63	345666	45
232118	85,87	334126	85,87	345776	99
232120	95	334134	71,73	345853	11
232124	63,99	334135	63,67	345869	115
232129	127	334141	67	345871	11
232210	7,9	334143	71	345872	11
233138	79	334153	85,87	345873	11
233197	97	334155	63	345874	11
233198	97	334158	67	345875	11
233199	97	334159	67	345904	139
233200	95	334163	85,87	345905	139
234119	63	334164	63,85	345992	139,141
234152	87		,87	346393	139
234218	99	334169	67	346414	139
234233	63,67	334172	63,67	346417	123,139
	,185	334189	87		,181
234243	63	334232	63,185	346420	139,141
234340	55	334234	63,67	346421	139,141
234349	185	334389	67,85	346422	139
234350	89		,87,185	346426	139
234358	7,9	334410	63,67	346429	139
234619	55	334523	63	346431	139
234629	87	334524	67	346593	189
234630	87	334565	99	347110	59,99
234662	71,73	334598	63,67		,103
234717	85,87		,85,87	347111	103
234746	63,67	335553	59,89	347114	103
	,85,87		,93	347115	103
234804	63	335661	29,33	347116	103
234810	67	335914	63,67	347117	103
234840	67		,71,73	347118	103
234940	85,87		,85,87	347119	103,105
234941	99		,89	347237	121
235005	85,87	337042	11	347410	171
244002	121	337045	11	347462	129

Part Number	Page	Part Number	Page	Part Number	Page
347466	129	355565	189,191	357532	175,177
347470	129	355567	189,191	357533	175
347479	129	355577	155	357551	181
347613	103	355608	147	357552	181
347669	129	355618	27,29	357643	129
348102	113		,37,39	357733	17
348213	167	355629	7,9	357946	9
348249	167	355630	7,9	357947	9
348331	131,133	355637	59,71	357948	9
348336	129		,81	358002	117
348337	129	355669	29	358006	29,33
348338	129	355678	29	358007	29,33
348428	167	355701	29	358008	29,33
348448	179	355706	189,191	358009	7
348481	139,141	355708	189	358033	9
348482	139,141	355711	155	358034	9
348483	17	355768	189,191	358083	7,9
348485	113	355807	175	358087	17,19
348493	115	355808	175	358090	147
348496	11	355837	127	358098	169
348901	11	355859	117	358156	189
348902	109	355964	29	358157	189
349088	109	355987	117	358158	189
349093	179	355988	17	358254	129
349248	147	355989	17	358407	9
349249	147	355999	117	358733	25
349250	147	356010	29	358814	25
349251	147	356035	189	358818	25
349252	147	356037	17	358819	25
349253	147	356043	17	358820	25
349301	115	356044	17	358822	25
349373	57	356050	17	358825	25
349401	29,33	356065	17	358846	17
349423	181	356106	29,33	358881	151,171
349460	181	356115	131	358922	29
349468	123,181	356116	131	358927	9
349512	143	356146	29,33	358933	29,33
349546	129	356233	55,99	358939	9
349548	129	356269	165	358942	29
349617	143	356315	99	358943	117
349715	29,33	356317	55	358973	109
350009	129	356321	55	358985	119
353059	143	356347	189,191	358986	59,71
355109	173	356415	161		,83
355113	173	356467	115	358992	119
355114	173	356468	115	359183	183
355115	173	356478	121	359379	129
355116	173	356481	115	359383	127
355117	173	356521	141	359387	127
355129	175	356530	119	359392	127
355130	175	356578	129	359426	13
355131	175	356591	109	359427	13
355132	175,177	356598	109	359434	13
355135	175,177	356599	109	359539	127
355136	175	356603	17	359543	127
355152	175	356606	17	359551	67
355258	115	356607	17	359552	67
355259	115	356608	17	370049	67
355261	115	356611	17	370158	17
355262	115	356615	117	370234	133
355263	115	356616	117	370307	119
355264	115	356617	109	370365	29,33
355266	115	356618	109	370426	119
355301	181,195	356619	109	370766	143
355304	181	356718	191	370790	29
355316	175	357130	147	370791	29
355317	175	357340	143	370803	143
355380	155	357397	13	370850	57
355444	55	357425	129	370883	177
355445	55	357445	29,33	370887	115
355446	55	357446	29,33	370888	115
355470	115	357476	109	371274	115
355483	59,63	357477	109	371367	45
	,79	357485	119	371591	109
355484	79	357519	115	371842	47
355557	47	357521	115	371843	189
355558	47	357526	115	371889	177

Part Number	Page	Part Number	Page	Part Number	Page
372008	167	433830401	63,67	482761	63
372229	67	450122	29,33	482762	63
372230	33	450144	127	482769	63,67
372618	119	456099	135,137	482770	85,87
372696	133,161	475064	17	482771	85,87
372697	133,161	476019	169	482789	63
372870	115	480219	59,99	482802	85,87
372987	27,33		,101	482882	99
	,41	480288	75	482954	99
372988	73	480289	75	482993	67
373022	33	480354	75,79	483086	67
373024	33	480356	75	483265	67
373180	67	480367	79	483266	67
373181	67	480407	79	483267	67
373442	33	480408	79	483268	67
373443	33	480444	101	483269	67
373570	17	480445	101	483270	67
373571	17	480446	101	483271	67
374514	109	480447	101	483272	67
374601	47,49	480448	101	483273	67
374602	189,191	480449	101	483274	67
374675	129	480450	101	483275	67
374736	67	480451	101	483276	67
374794	9	480452	101	483277	67
374807	9	480453	101	483278	67
375031	59,99	480454	101	483376	87
	,105	480455	101	483431	87
375035	67	480456	101	483432	87
375104	115	480457	101	483440	87
375106	109	480458	101	483441	87
375141	129	480464	101	483442	87
375153	129	480465	101	485005	171
375160	127	480466	101	485006	171
375183	137	480468	101	485011	171
375456	129	480481	93	485019	171
375457	129	480577	101	485037	171
375482	67	480622	51,63	485040	171
375507	137	480625	51	485388	171
375526	67	480639	75	499042	7
375554	45	480640	75	499097	55
375629	115	480641	75	499162	121,139
376036	33	480642	75	499421	193
376037	33	480643	75	499432	99
376047	177	480644	75	499444	17
376111	49	480650	75	499503	53
376112	49	480651	75	500004	55,109
376115	87,99	480653	75		,175,177
376124	87	480655	75		,195
376214	49	480658	75	500006	67
376422	119	480660	75	500012	47,49
380258	87	480662	75		,55,57
380268	49	480667	75		,109,123
380458	133	480669	75		,181
380586	191	480671	75	500013	109,155
380641	191	480675	75		,167
380688	191	480676	75	500015	117
380946	191	480677	75	500018	11,47
380987	191	480679	75		,49,175
380988	191	480923	99	500021	13,17
381267	133	481132	83		,25,29
381598	161	481228	79		,63,67
381621	195	481306	101		,99,137
382026	13,15	481307	101		,171
382135	109	481308	101	500022	109,129
382136	109	481309	101		,141
382137	109	482124	85	500028	13,17
382138	109	482219	63		,29,33
382782	113	482257	7,9		,47,67
383200	143	482282	85,87		,127,129
383212	109	482285	67		,173,189
383213	109	482354	67		,191
413049	189,191	482358	85,87	500029	13,45
415329	185	482398	85,87		,47,49
423107	37	482444	63,185		,99,121
423138	37	482509	67		,127,131
423343	37	482514	63		,133,155
423350	37	482760	63	500030	13,57

Part Number	Page	Part Number	Page	Part Number	Page
500030	67,189	502058	87	586003	13,17
	,191	502059	85,87		,29,109
500031	127,129	502060	67		,129,131
500034	45	502062	95		,133,139
500035	29,33	502074	137	586018	13,47
	,143	502113	71		,57,63
500037	11,89	502132	73		,67,71
500040	113,117	502157	89		,73,85
	,137,169	502286	63		,87,89
	,189,191	508005	109		,121,173
500043	49,189	508019	29,33	586019	7,9,17
	,191	508028	185		,29,33
500046	29,33	508029	47,49		,45,167
	,45,127	509025	99	586021	7,17,45
500047	13,29	509036	95		,127
	,119,139	513025	127	586022	7,9,17
500048	13,17	516042	139		,25
	,47,53	527002	29,33	586023	127
	,127,135	528041	47,49	588176	147
	,137	530005	129	600002	109,175
500049	7	530016	135,137		,177
500051	33,109		,139	600003	147,189
	,193	533001	139,141	600004	117,189
500053	13,17	533002	179	600008	189
	,47,55	533008	113	600009	7
	,99,109	533010	109,175	600011	7
	,129,131		,177,181	600014	25
	,133,139	533014	181	600016	105
	,155	533025	113	600017	55
500056	29,33	533026	99,113	601003	17
	,85,87	533036	135,137	603010	117,191
500060	175,177	533038	17	603013	63,67
	,195	533058	139	603018	135
500070	7,9,45	533062	181	604002	55
500073	17	535007	147,175	604003	135,137
500075	17,63	535014	17	604006	57,63
	,155,165	535036	17		,85,87
500076	17,29	541508	173	604007	185
	,33	541703	173	604008	71,89
500077	63,67	541708	109	604009	85,87
	,71,73	550047	135,137	604028	45
	,85,87	550131	113	604030	95
	,89	550132	129	604033	63,65
500079	17,167	570001	139,179		,67,69
500091	13,155	570003	113,175	605001	13
500093	17,29		,177	605008	45
	,33,45	570004	17,109	615025	129
500099	55		,117,139	615041	113,175
500101	73		,155,165		,177
500107	127		,167,189	615042	55,123
500111	9		,191		,129,165
500117	25	570005	25,109		,169,181
500130	33		,129,139	615043	13,47
500142	45	570006	13,53		,63,109
500146	127		,127,129		,119,139
500152	33		,189,191		,171,175
500161	13,189	570007	17,25	615044	13,29
	,191		,193		,33,45
500185	129,189	570008	45,139		,47,53
500192	67,71	570011	165		,131,189
	,73,89	571003	57		,191
500194	9,29,33	571007	51,63	615045	29,33
	,45,167		,67		,71,85
500195	7,45	572002	135,137		,87,89
500199	127	572009	135,137		,143,193
500207	7,9	573003	137	615046	7,9,29
500208	17	574003	109		,33,45
500282	25	574013	119,177	615047	29
500287	11	582006	175,177	615107	131
502018	99	586001	113,117	624015	173
502019	85,87		,147,195	624016	147
502031	7,9	586002	17,63	630003	135,137
502032	47		,109,117		,139
502033	45		,129,139	630037	129
502035	63,135		,141,167	635019	7,9
502036	63		,181,189	635061	103,105
502058	71,85		,191	747282	55,177

Part Number	Page	Part Number	Page	Part Number	Page
747583	167	813906	93	851686	13
801208	143	813910	93	851687	13
801228	45	813915	93	851688	13
801277	85,87	813916	93	851689	13
80154602	175,177	813923	93	851690	47,49
801669	119	814060	63,67	851695	57
801688	53	814124	97	851696	57
801691	59,85	814251	63,67	851774	13
	,87,95	815215	7,9	851776	13
801698	127	815243	63	851779	13
801705	119	842184	79	851781	13
801755	59,85	842664	17	851783	13
	,91,99	842756	127	851785	13
801998	17	842832	85	851787	13
802548	53	843317	185	851789	13
802550	53	850106	99	891228	85,87
802587	45	850148	55	892227	37
802590	43,45	85017232	99	892401	51
	,51	850342	7	892402	51
813315	55	850347	7	900100	121
813316	7,9	850348	7	900170	53
813330	109	850357	7	900174	57
813361	135,137	850623	53	900177	85,87
813369	135,137	850789	127	900184	45
	,139	850802	85,87	900195	57
813422	103	850803	85,87	900196	57
813423	63,67	851040	7	900198	13
813428	85,87	851199	45	900199	47,49
813429	63,71	851202	45	900201	57
	,85,87	851204	45	900202	135,137
813443	99	851223	127		,139
813444	99	851229	127	900204	85,87
813449	99	851242	127	900205	63
813462	45	851247	127	900243	123,181
813479	63,67	851271	47,49	900247	55
813599	51	851287	13	900249	55
813600	51	851289	13	900342	67
813613	75	851291	13	900541	13
813617	79	851302	13	900561	13
813618	79	851306	47	900562	13
813627	79	851327	129	900579	13
813628	75	851329	129	900623	57
813634	75	851332	129	900633	29,33
813643	93	851333	129	900684	147
813646	91	851362	109	900775	29,33
813647	85,87	851439	127	900790	117
813648	51	851441	53	900791	117
813649	51	851444	47	900792	117
813650	51	851445	47	900793	117
813657	93	851449	17	900794	117
813661	91,93	851472	135	900798	123
813669	91,93	851491	135,137	900827	45
813674	91,93	851541	47	900828	45
813676	93	851554	109	900829	45
813678	91,93	851557	109	900842	147
813683	91,93	851601	135,137	900847	59,63
813697	29,33	851609	139		,75,77
813809	51	851622	63,85	900871	115
813816	75	851623	63	900890	181
813822	75,83	851624	63	900891	181
813823	75	851625	63	900892	181
813825	75	851629	85	900904	175,177
813833	75	851630	85	900934	63,67
813836	79	851632	85	900998	155
813844	75	851633	85,87	900999	155
813845	79	851634	85,87	901101	189
813846	75	851635	63	901103	189
813847	75	851639	185	901109	189
813887	79	851640	63	901111	189
813888	75	851642	63	901112	189,191
813898	51	851648	99	901113	189,191
813899	51	851649	99	901129	29
813900	51	851650	99	901130	29
813901	51	851651	63	901143	161
813902	93	851661	109	901145	7,9,29
813903	93	851684	13		,33
813905	93	851685	13	901147	189

Part Number	Page	Part Number	Page	Part Number	Page
901158	189,191	901381	35	902028	37
901159	161	901416	155	902029	37
901165	187	901417	161	902030	37
901166	187	901422	155	902033	37
901167	187	901423	155	902034	37
901168	187	901492	37	902035	37
901169	187	901493	37	902039	45
901173	189	901494	37	902093	143
901182	117	901495	37	902118	155
901183	117	901496	37	902163	129
901209	175,177	901498	37	902164	129
901212	171	901499	37	902166	191
901213	171	901500	37	902170	119
901216	131,133	901501	37	902210	143
901225	113	901502	37	902211	143
901226	113,161	901503	37	902256	13
901227	113,161	901504	37	902287	127
901228	161	901505	37	902292	119
901229	161	901524	45	902293	119
901234	161	901550	165	902303	21
901235	161	901551	165	902305	155
901236	161	901552	165	902306	155
901238	161	901553	165	902307	155
901240	113	901554	165	902308	155
901242	155	901555	165	902309	155
901249	155	901556	165	902310	155
901250	161	901557	165	902311	155
901256	113,161	901558	165	902312	155
901257	155	901559	165	902313	155
901258	155	901562	165	902314	155
901266	155	901570	155	902315	155
901267	155	901572	161	902316	155
901273	155	901680	161	902317	155
901275	155	901685	161	902318	155
901281	155	901725	83	902319	155
901282	155	901727	83	902320	155
901285	155	901728	83	902321	155
901286	161	901767	113	902322	155
901287	155	901768	109	902323	155
901294	155	901811	37	902324	155
901295	47	901812	37	902325	155
901296	155	901837	17	902326	155
901299	183	901841	17	902327	155
901300	183	901846	155	902328	155
901301	29	901847	155	902329	155
901303	155	901848	155	902331	155
901304	155	901849	155	902332	155
901305	155	901850	109	902335	155
901306	155	901860	155	902336	155
901309	17	901861	155	902339	155
901315	169	901862	155	902340	155
901339	155	901885	165	902341	155
901340	155	901956	155	902342	155
901341	155	901970	37	902343	155
901342	155	901981	189	902344	155
901343	155	901982	189	902345	155
901345	47	901993	117	902346	155
901346	47	901994	117	902347	155
901347	47	901999	155	902348	161
901348	47	902006	75	902349	161
901349	47	902007	75	902350	161
901350	45	902008	75	902351	161
901351	47	902009	75	902352	161
901352	47	902010	75	902353	161
901353	47	902011	75	902354	161
901354	47	902012	75	902355	161
901358	131,133	902014	75	902356	161
901359	131	902015	75	902357	161
901360	45	902016	75	902358	161
901361	45	902017	75	902359	161
901366	161	902018	75	902361	161
901367	155	902020	75	902362	161
901368	155	902021	75	902363	161
901369	117,155	902023	75,77	902364	165
901373	45	902025	37	902365	165
901377	143	902026	37	902366	165
901381	29,33	902027	37	902367	161

Part Number	Page	Part Number	Page	Part Number	Page
902368	165	904068	147	908203	47
902369	165	904093	147	908347	37
902370	165	904143	105	908351	37
902371	165	904145	105	908389	155
902372	165	904171	67	908432	83
902373	161	904228	17,47	908635	45
902374	161		,57,63	908642	37
902375	161		,109,135	908773	83
902379	13		,137,167	909085	17,155
902422	189		,191		,189,191
902423	189	904229	13,17	909107	117
902442	189,191		,25,29	909152	155
902508	169		,47,49	909232	155
902546	63		,67,99	909233	155
902547	63		,109,111	909239	83
902578	171		,129,131	909240	37,39
902592	189		,133,135	909241	37
902593	189		,137,139	909242	83
902594	189		,155	909243	83
902595	189	904230	13,17	909244	83
902610	171		,47,49	909245	83
902803	121		,57,63	909246	83
902868	17		,67,71	909247	83
902869	17		,73,85	909248	83
902874	17		,87,89	909249	83
902900	99		,99,121	909250	83
902910	17		,127,129	909251	83
902911	17		,135,137	909252	83
902915	147		,155,173	909253	83
902937	83		,191	909254	83
903005	63,99	904231	9,11,17	909255	83
903006	165		,25,29	909256	83
903010	17		,33,45	909257	83
903013	155		,85,87	909363	45
903014	155		,109,167	909533	23
903015	155	904232	17,129	909535	133,161
903016	161		,135,137	909536	133,161
903017	161	904233	9,17,29	910161	63,67
903018	161		,33		,85,87
903184	25	904234	33		,99
903186	25	904253	177	910162	63
903230	45	904281	67,109	910992	117
903231	45		,113,129	910995	11
903232	45		,191,195	911090	97
903248	183	904389	147	911091	97
903252	37	904391	147	911092	97
903253	17	904448	109	911093	97
903258	37	904479	11	911094	97
903281	29,31	904485	67	911097	97
	,33	904495	67	911098	97
903290	9,73	904538	67	911099	95
903297	117	904556	55,99	911166	95
903321	119	904557	13,133	911167	95
903422	147	904567	191	911168	97
903423	147	904602	67	911403	95
903424	147	904637	7,9	911421	51
903425	147	904638	73	911456	115
903459	147	904639	49,113	911499	99
903547	127		,155	911504	51
903554	83	904697	139,141	911665	75
903564	47		,179	911726	95
903588	99	904698	139,169	911727	95
903595	29		,181	911728	95
903612	191	904703	127	911733	95
903619	105	904704	195	911734	97
903660	47	904779	133	911735	97
903674	191	904795	119	911736	95
903703	191	904805	133	911737	97
903724	47	904808	17	911738	95
903754	99	904813	143	911739	95
903768	109	904814	143	911740	95
903786	143	904957	129	911741	95
903818	33	904989	113	911742	95
903919	33	908101	155	911743	95
903987	5,17,23	908104	161	911744	95
904005	73	908105	161	911773	91
904058	73	908110	113,161	911774	91

Part Number	Page	Part Number	Page	Part Number	Page
911775	91	926214	129	936268	105
911776	91	926312	135,137	936283	133,161
911777	91	926330	103		,163
911778	91	926551	129	936923	37
911779	91	926552	129	937680	191
911780	91	926736	29,33	938202	49
911781	91	926911	17,155	938203	49
911782	91		,157,159	938204	49
911783	91		,189,191	950063	175,177
911784	91	926963	129	960711	147
911785	91	926977	103	960787	147
911786	91	927036	103	960796	109
911787	91	927117	7,9	975065	109
911788	91	927409	29,33	975077	113,175
912385	53	927510	75		,177,189
920363	99	927511	75		,191
920775	17	927975	113	985012	115,121
920926	51	927991	127		,161,181
920927	51	928005	139	985014	117
921022	67,189	928012	17	985126	121
921036	189	928021	109	985146	115,181
921047	155,167	928041	17	989078	45,63
	,191	928381	117		,67
921077	109	928466	7	989151	99
921104	109	928467	173	991657	147
921108	189,191	928497	139,141	991658	147
921161	109	928502	117	999011	121
921170	57	928516	175,177	999027	109
921371	79	928539	45		
921423	17	928664	189,191		
921427	17	928672	155		
921524	51	928781	17		
921692	97	928850	29,33		
922060	185	928859	179		
922061	185	928914	53		
922305	75	928915	53		
922325	139	928916	53		
922783	75	928917	53		
922916	175,177	928918	53		
	,181	928919	53		
923384	71,73	928921	53		
923679	17	928922	55		
923680	17	928927	123,181		
923681	17	928928	115,181		
923682	17	929023	53		
923683	17	929096	109		
923684	17	929122	67		
923690	5,17,21	929447	29,33		
923734	17	929602	129		
923735	183	929881	21		
923859	17	929952	155		
923876	17	929966	161		
923889	87	930046	123,139		
923900	139		,181		
923901	139	930150	109		
923927	109,139	930154	115,195		
	,141	930155	115,181		
923962	17	930161	115		
923976	113,175	930162	115		
	,177,181	930163	115		
923984	17	930165	121,161		
923987	137	930166	121,161		
923988	123,139	930182	115		
	,181	930192	115		
924544	17,183	930195	115		
924620	11	930198	115		
924756	175	932032	115		
924984	131	932036	115		
924986	17,183	932056	115		
924996	17	932057	115		
925099	63	932058	115		
925227	17	932060	115		
925715	109	935227	161		
925723	73	935380	41		
925749	139	935400	41		
925802	183	935950	45		
925806	103	936267	105		

