


DYNAPAC CC900S

SPARE PARTS CATALOGUE

SCC900S-1EN3

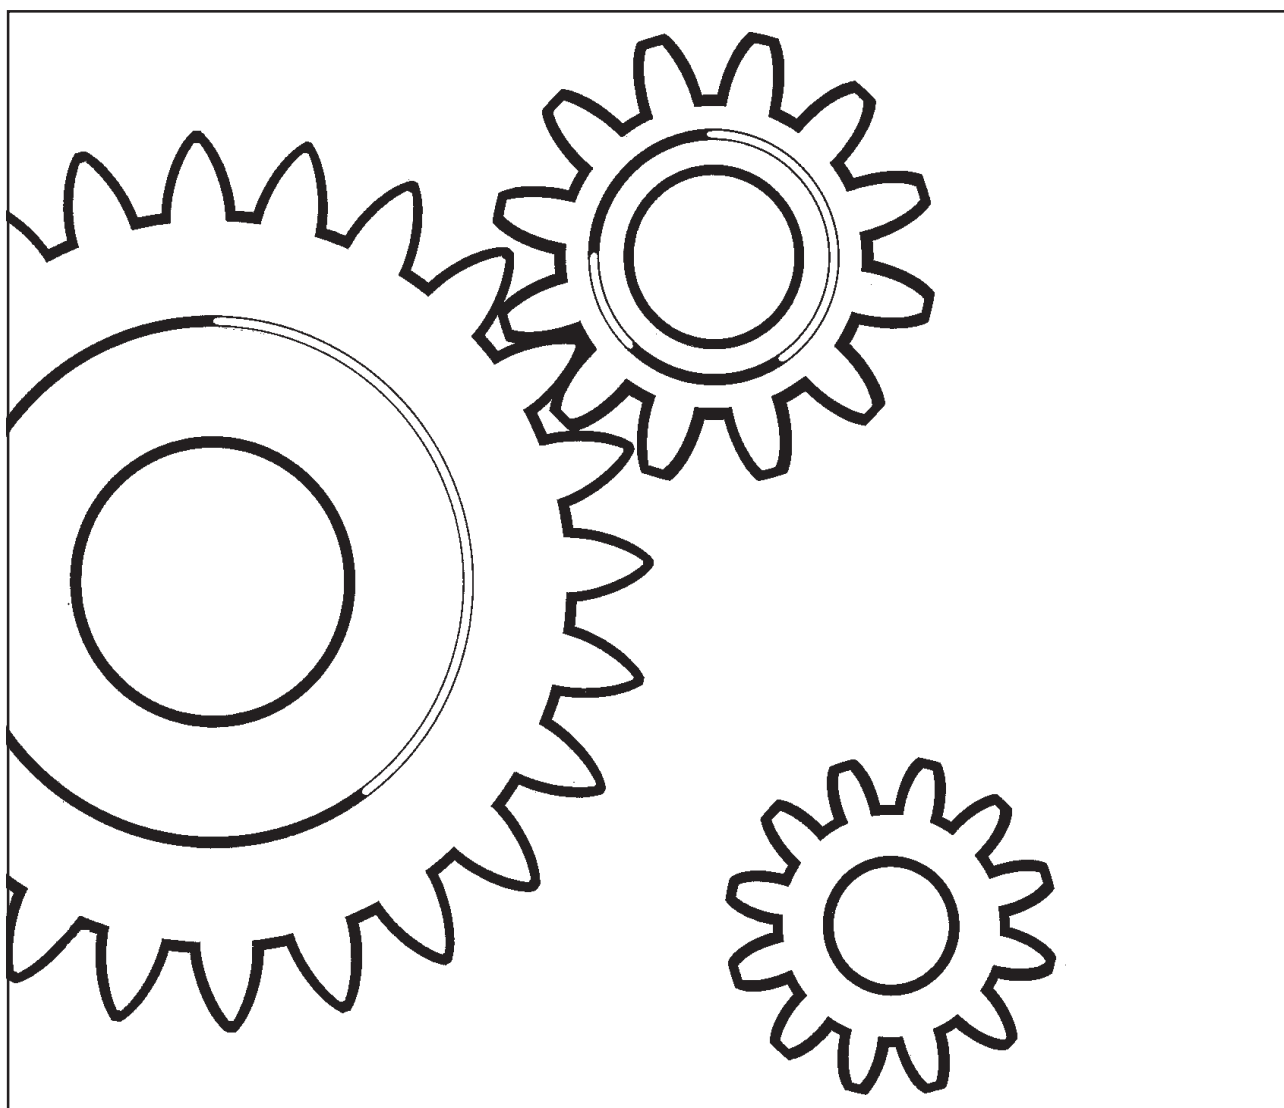

DYNAPAC

Part of the Atlas Copco Group

Box 504, SE-371 23 Karlskrona, Sweden
Phone: +46 455 30 60 00, Fax: +46 455 30 60 10
www.dynapac.com

Vibratory Roller CC900S

Spare Parts Catalogue SCC900S-1EN3

Valid from roller serial number:

89530191* - *89532699

Diesel engines:

Perkins 403C-11

Published catalogue issues valid for these rollers:

<i>Catalogue</i>	<i>Issue date</i>	<i>Valid for serial numbers</i>
SCC900S-1EN1	2005-03	Replaced by SCC900S-1EN2
SCC900S-1EN2	2006-05	Replaced by SCC900S-1EN3
SCC900S-1EN3	2008-03	See above



RESERVDELSBESTÄLLNING

Följande uppgifter ska lämnas vid beställning av reservdelar för att undvika leveransfel:

1. Maskintyp.
2. Vältens serienummer.
3. Antal av önskad reservdel.
4. Reserdelens artikelnummer.
5. Reservdelens benämning.
6. Måttuppgifter vid beställning av metervara.

ORDERING SPARE PARTS

To avoid errors in delivery, please give the following information when ordering spare parts:

1. Type of machine.
2. Roller serial number.
3. Quantity required.
4. Part number.
5. Parts denomination.
6. Dimensions when ordering per length.

ERSATZTEILBESTELLUNG

Zur Vermeidung von Fehllieferungen sind bei der Bestellung von Ersatzteilen folgende Angaben zu machen:

1. Maschinentyp.
2. Herstellungsnummer.
3. Bestellmenge. (Quantity)
4. Ersatzteilnummer. (Part N°)
5. Ersatzteilbenennung. (Denomination)
6. Massangaben bei Bestellung von Meterware.

ORDINI DI RICAMBI

Per evitare errori nelle consegne di ricambi, Vi preghiamo di comunicarci le seguenti informazioni al momento dell'ordinazione:

1. Tipo di macchina.
2. Numero di serie della macchina.
3. Quantità dei pezzi desiderati. (Quantity)
4. Numero di codice del pezzo. (Part N°)
5. Descrizione del pezzo di ricambio. (Denomination)
6. Misura, in caso di ordine per metro.

PEDIDO DE RECAMBIOS

Para evitar errores en las entregas, deberán indicarse los siguientes datos al hacer un pedido de recambios:

1. Tipo de máquina.
2. Número de serie.
3. Cantidad de piezas deseadas. (Quantity)
4. Número de artículo de la pieza de recambio. (Part N°)
5. Denominación de la pieza. (Denomination)
6. Indíquese la medida al solicitar un artículo que se expide por metros.

COMMANDE DE PIECES DE RECHANGE

Les indications suivantes doivent être fournies lors de la commande de pièces de rechange, afin d'éviter toute erreur de livraison:

1. Type de machine.
2. Numéro de série.
3. Quantité désirée de pièce de rechange. (Quantity)
4. Numéro de la pièce de rechange. (Part N°)
5. Dénomination de la pièce de rechange. (Denomination)
6. Longueur en cas de commande au mètre.

YOUR AGENT/DEALER:

Text pages

The text pages is structured as the picture on the right.

1. This is the remarks for specific items and the descriptions of the remarks is at the bottom of the parts list.
2. Parts indicated by a dot and moved to the right are included when buying the assembled unit above.
3. Spare parts and service code for a specific part, mainly for internal use at Dynapac. "A" = Service part, "B" = Fast moving part, "C" = Suggested exchanged part and "D" = Regular spare part.

DYNAPAC					Metso Dynapac AB	
Cooling system						
Ref. No.	Part No.	Rem.	Qty	Description	Code	
1	223047		1	Water cooler	③	C
2	935852		1	Radiator cap		D
3	935851	①	1	Cock	②	
4	373263	A	1	Radiator hose		D
5	313009		6	Clamp		
6	205058	B	1XL	Rubber clutch		
7	373261	C	1	Radiator hose		D
8			1	Oil cooler		D
9	223289		1	Plate		
10	902166	D	1XL	Edge trim		
11	223287	E	1	Holder		
12	223288	F	1	Holder		
13	908168		1	Fan guard		
14	908170		1	Fan shroud		
15	908171		2	Mounting bar		
16	908169		1	Fan guard		
17	500021		14	Screw		
18	902286		14	Nut		
19	600006		14	Washer		
20	313102		2	Cable strap		

① A) Upper
 B) L=060MM
 C) Lower
 D) L=2280MM
 E) Left
 F) Right

Changes

PARTS INFO	SERVICE INFO	GROUP	PAGE	NOTES

Notes

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins or other markings on the paper.

PÄRMETIKETT

För att undvika fel vid reservdelsbeställning finns här nedan två etiketter som passar i fickorna på pärmarnas ryggar. På dessa kan man se från vilket vältnummer av aktuell maskin reservdelskatalogen gäller. Gör så här:

1. Tag denna sida ur pärm.
2. Klipp ut etiketten till **VÄNSTER** (1) och sätt in den i fickan på **DENNA** pärmens rygg.
3. Finns det en etikett till **HÖGER** (2), kan denna användas på pärmerna för **FÖREGÅENDE** utgåva av denna katalog.
4. Kasta detta papper.

KATALOG-BESCHRIFTUNG

Zur Vermeidung von Fehlern bei der Ersatzteilbestellung benutzen Sie bitte die unteren Beschriftungen, um die Kataloge auf der Rückseite zu kennzeichnen. Auf der Beschriftung ist angegeben, für welche Maschinennummern der jeweilige Katalog gültig ist. Ablauf:

1. Nehmen Sie dieses Blatt aus dem Katalog.
2. Schneiden Sie die **LINKE** Beschriftung (1) aus. Schieben Sie die Beschriftung in die tasche auf **DEM** Katalogrücke.
3. Sollte die Beschriftung unten **RECHTS** (2) mitgeliefert werden, kennzeichnen Sie damit bitte die **ÄLTERE** Ausführung dieses Kataloges.
4. Den Rest dieses Blattes bitte vernichten.

ETIQUETA PARA LA CARPETA

Para evitar errores al pedir repuestos utilicen las etiquetas abajo descritas para identificar los catálogos en la parte trasera de la carpeta. En la etiqueta se ven los números de referencia de la serie para la cual es válido el catálogo. Instrucciones:

1. Quitar esta página de la carpeta.
2. Corta la etiqueta **IZQUIERDA** (1) y ponerla en **ESTA** carpeta en la parte trasera.
3. Si hay una etiqueta en la parte **DERECHA** (2) se puede utilizar en la carpeta para el catálogo que **PRECEDE** a esta.
4. Tirar esta hoja.

BINDER LABEL

To avoid errors when ordering spare parts use the labels below to identify the catalogues on the back of the binder. The label contain the serial number range for which the catalogue is valid. Do like this:

1. Remove this page from the binder.
2. Cut out the **LEFT** label (1) and put it on **THIS** binders back.
3. If there is a label to the **RIGHT** (2), it can be used on the binder for **PRECEDING** issue of this catalogue.
4. Throw away this paper.

ETICHETTA POSTA SUL RACCOGLITORE

Per evitare errori quando ordinate pezzi di ricambio, usate le etichette in calce che servono ad identificare i cataloghi sul retro del raccoglitore. L'etichetta indica il numero di matricola delle macchine prese in considerazione nel catalogo.

1. Rimuovete questa pagina dal raccoglitore.
2. Ritagliate l'etichetta posta a **SINISTRA** (1) e ponetela sul retro **DEL** raccoglitore.
3. Se trovate anche un'etichetta sulla **DESTRA** (2), ritagliatela e ponetela sul raccoglitore relativo alla **PRECEDENTE** edizione del catalogo.
4. Distruggete questo foglio.

ETIQUETAGE DU CATALOGUE

Afin d'éviter des erreurs lors de commandes de pièces de rechange, nous vous conseillons d'apposer les marquages ci-dessous à l'arrière du classeur, pour identifier les catalogues. Ce marquage indique les numéros de série pour lesquels le catalogue est adapté. Il convient de procéder de la façon suivante:

1. Retirez cette page du classeur.
2. Découpez l'étiquette de **GAUCHE** (1), et apposez-la à l'arrière de **CE** catalogue.
3. Si il y a une étiquette à **DROITE** (2), vous pourrez l'apposer sur le classeur de l'édition **PRECEDENTE** du catalogue.
4. Détruire cette feuille.

1.



TABLE OF CONTENTS

Page

CC900S SN 89530191 - 89532699	2
Service kits	4
Service kits	6
940208 Service kit, Perkins 50h	8
940209 Service kit, Perkins 500h	10
940210 Service kit, Perkins 1000h	12
Repair kits	14
Repair kits	16
940668 Shock absorber kit, front drum Up to 89531973	18
945850 Shock absorber kit, front drum From 89531974	20
940664 Shock absorber kit, drum Up to 89531475	22
945552 Shock absorber kit, drum From 89531476	24
940671 Scraper kit CC900/900G/900S	26
945928 Repair kit, Steering hitch	28
945710 Eccentric shaft kit	30
945711 Drum rotation kit	32
950150 Eccentric shaft kit Single arm drum	34
Frames	36
Frames	38
377621 Hitch	40
Scrapers	42
Spring loaded Scrapers Option	44
Engine hood	46
Sprinkler system	48
Drum	50
Drum Single arm	52
Drum Rear	54
Engine	56
Engine Perkins 403C-11	58
Cooling system	60
Exhaust system	62
Fuel system	64
Air intake system	66
Hydraulic system	68
Hydraulic propulsion and brake system	70
Hydraulic vibration	74
Hydraulic steering	78
Electrical equipment	80
Electrical equipment	82
Control panel, relays	84
Driving lights Option	86
Working lights Option	88
Rotating beacon with Rops Option	90
Back-up alarm Option	92
Drivers platform	94
Drivers seat Up to 89531040	96
Drivers seat From 89531041 Up to 89531898	98

TABLE OF CONTENTS

Page

Drivers seat From 89531899	100
F/R- and throttle control	102
Forward and reverse control handle Up to 89531081	104
Forward and reverse control handle From 89531082	106
Rops Option	108
Decals and documentation	110
Decals and documentation	112
Standard equipment	114
Standard equipment	116
Optional equipment	118
Battery disconnecter	120
Watertank, option From 89531041	122
Dual forward/reverse control	124
SMV sign	126
SMV sign Mounting on watertank	128
Registrations - plate with light	130
Hydraulic vibration, shut off front/rear drum	132
Rear view mirror	134
Tool equipment	136



CC900S SN 89530191 - 89532699


Ref. No.	Part No.	Rem.	Qty	Description	Code
5				Service kits (Page 4)	
6				Repair kits (Page 14)	
10				Frames (Page 36)	
20				Drum (Page 50)	
30				Engine (Page 56)	
50				Hydraulic system (Page 68)	
60				Electrical equipment (Page 80)	
70				Drivers platform (Page 94)	
80				Decals and documentation (Page 110)	
90				Standard equipment (Page 114)	
91				Optional equipment (Page 118)	

Service kits

Ref. No.	Part No.	Rem.	Qty	Description	Code
-1				Service kits (Page 6)	


Service kits

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	940208			Service kit, Perkins (Page 8)	50h
2	940209			Service kit, Perkins (Page 10)	500h
3	940210			Service kit, Perkins (Page 12)	1000h

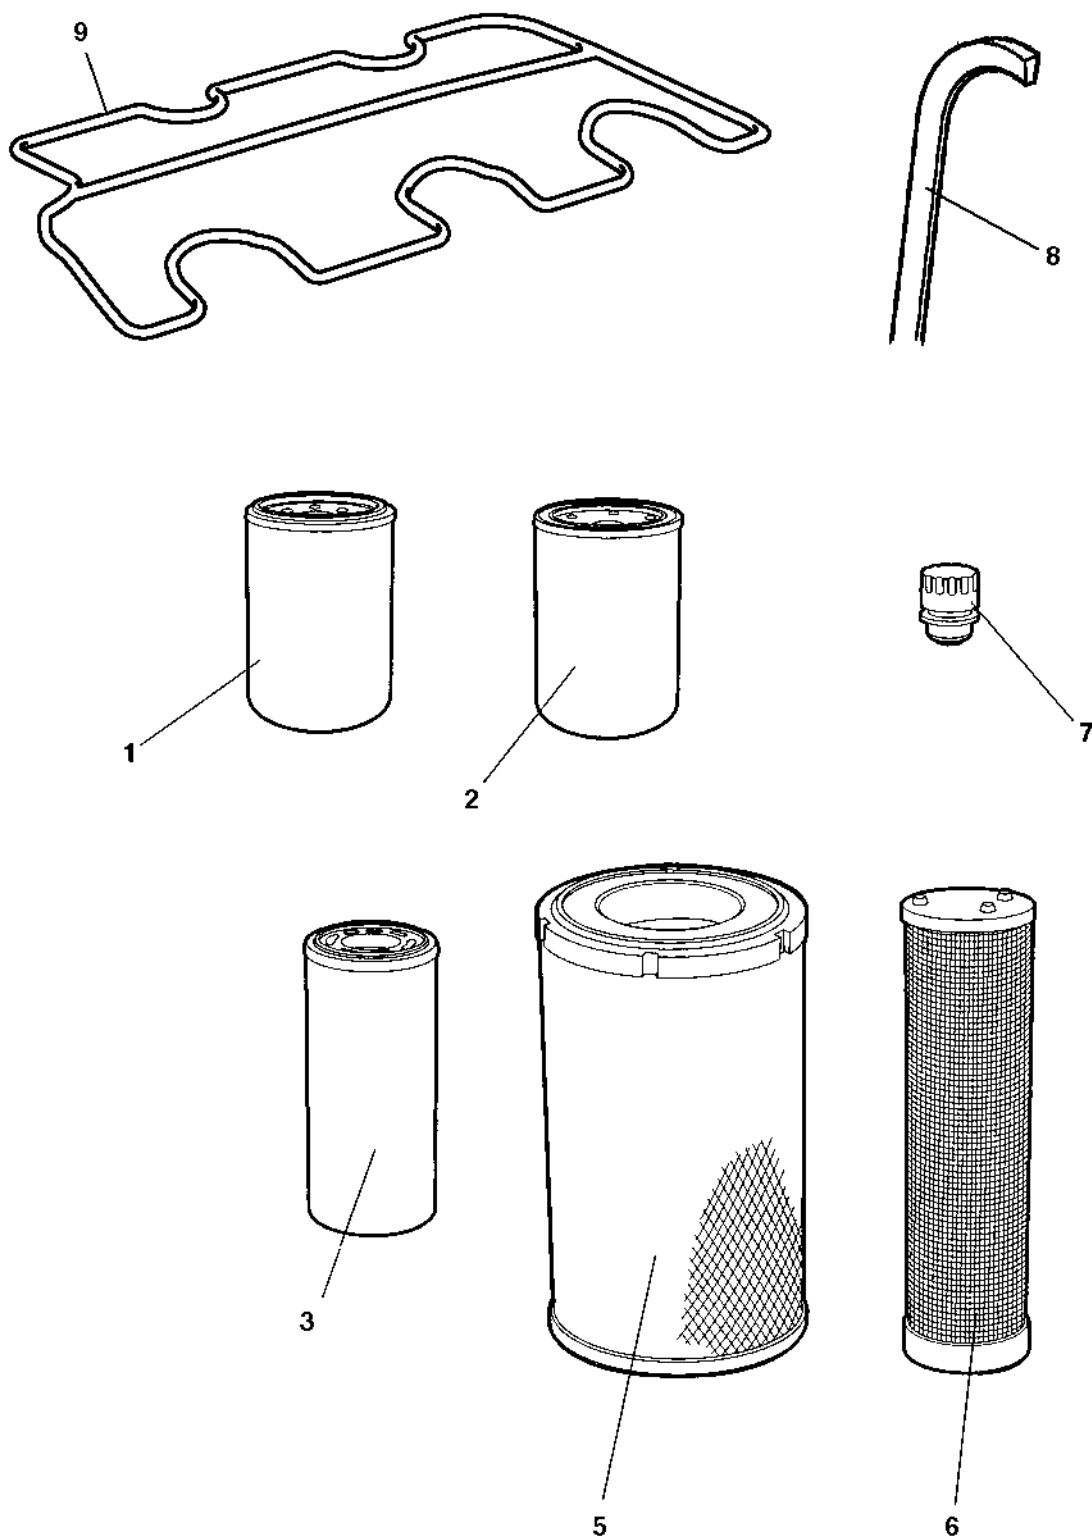


940208 Service kit, Perkins 50h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376554		1	Oil filter	A
2	376555		1	Fuel filter	A
3	376637		1	Filter element	A

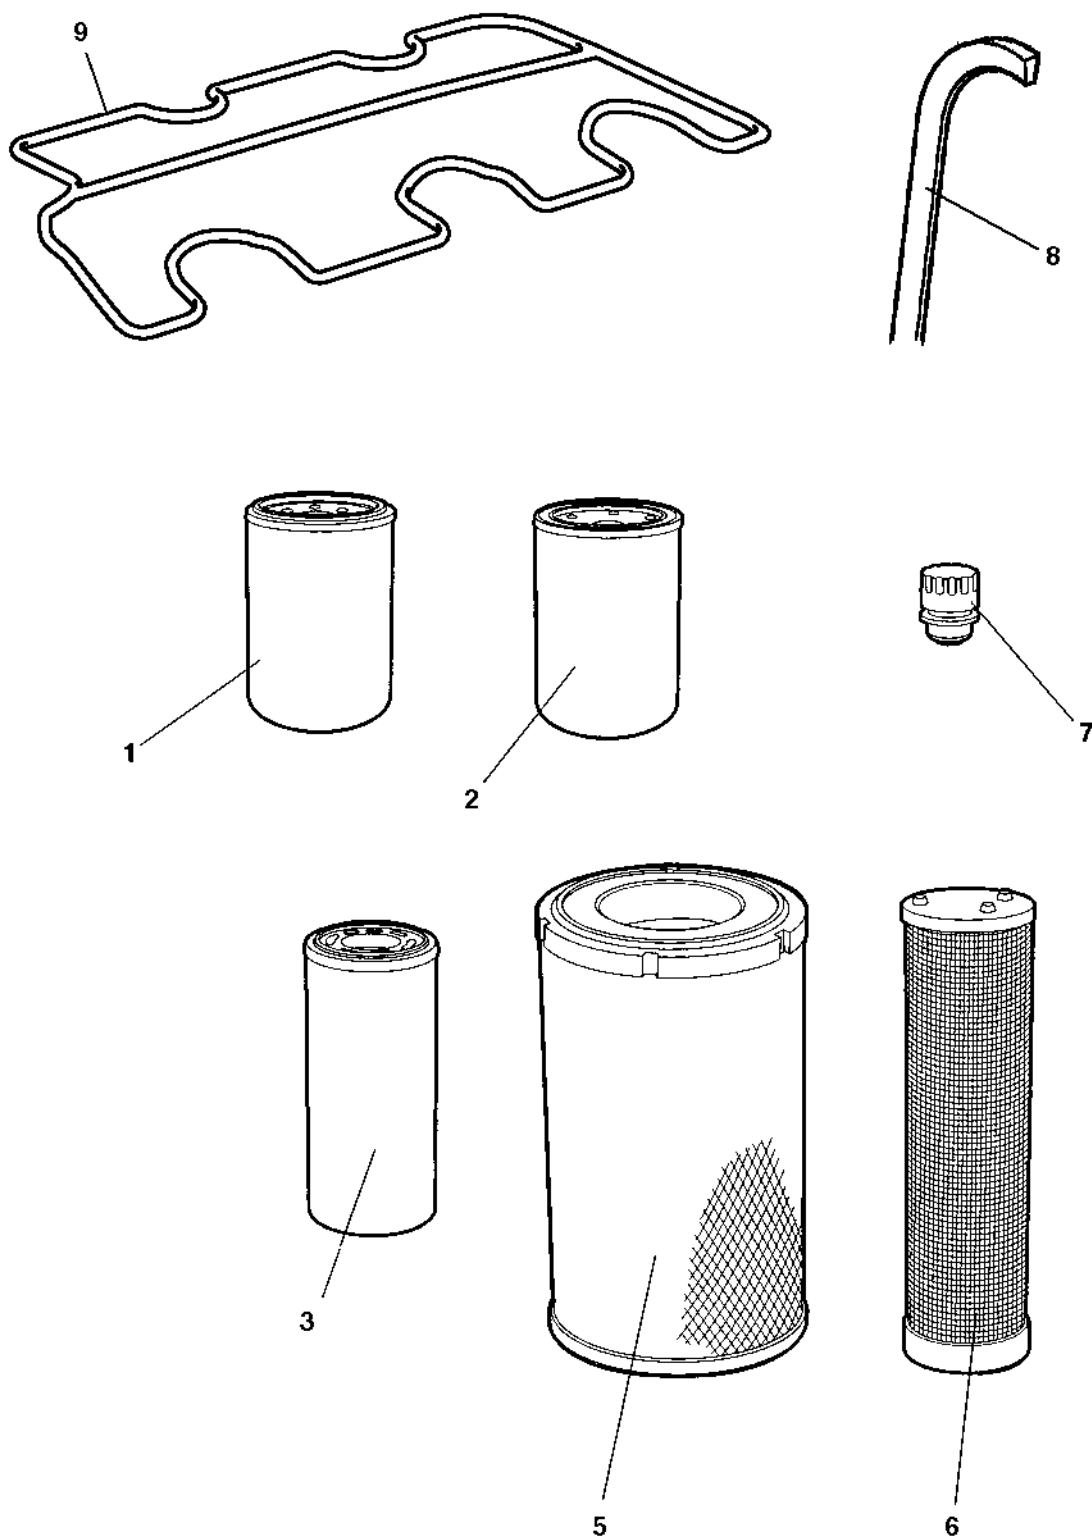

940209 Service kit, Perkins 500h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376554		1	Oil filter	A
2	376555		1	Fuel filter	A
5	939802		1	Air filter element	Main A
6	939803		1	Air filter element	Safety A
7	357138		1	Ventilating filter	A

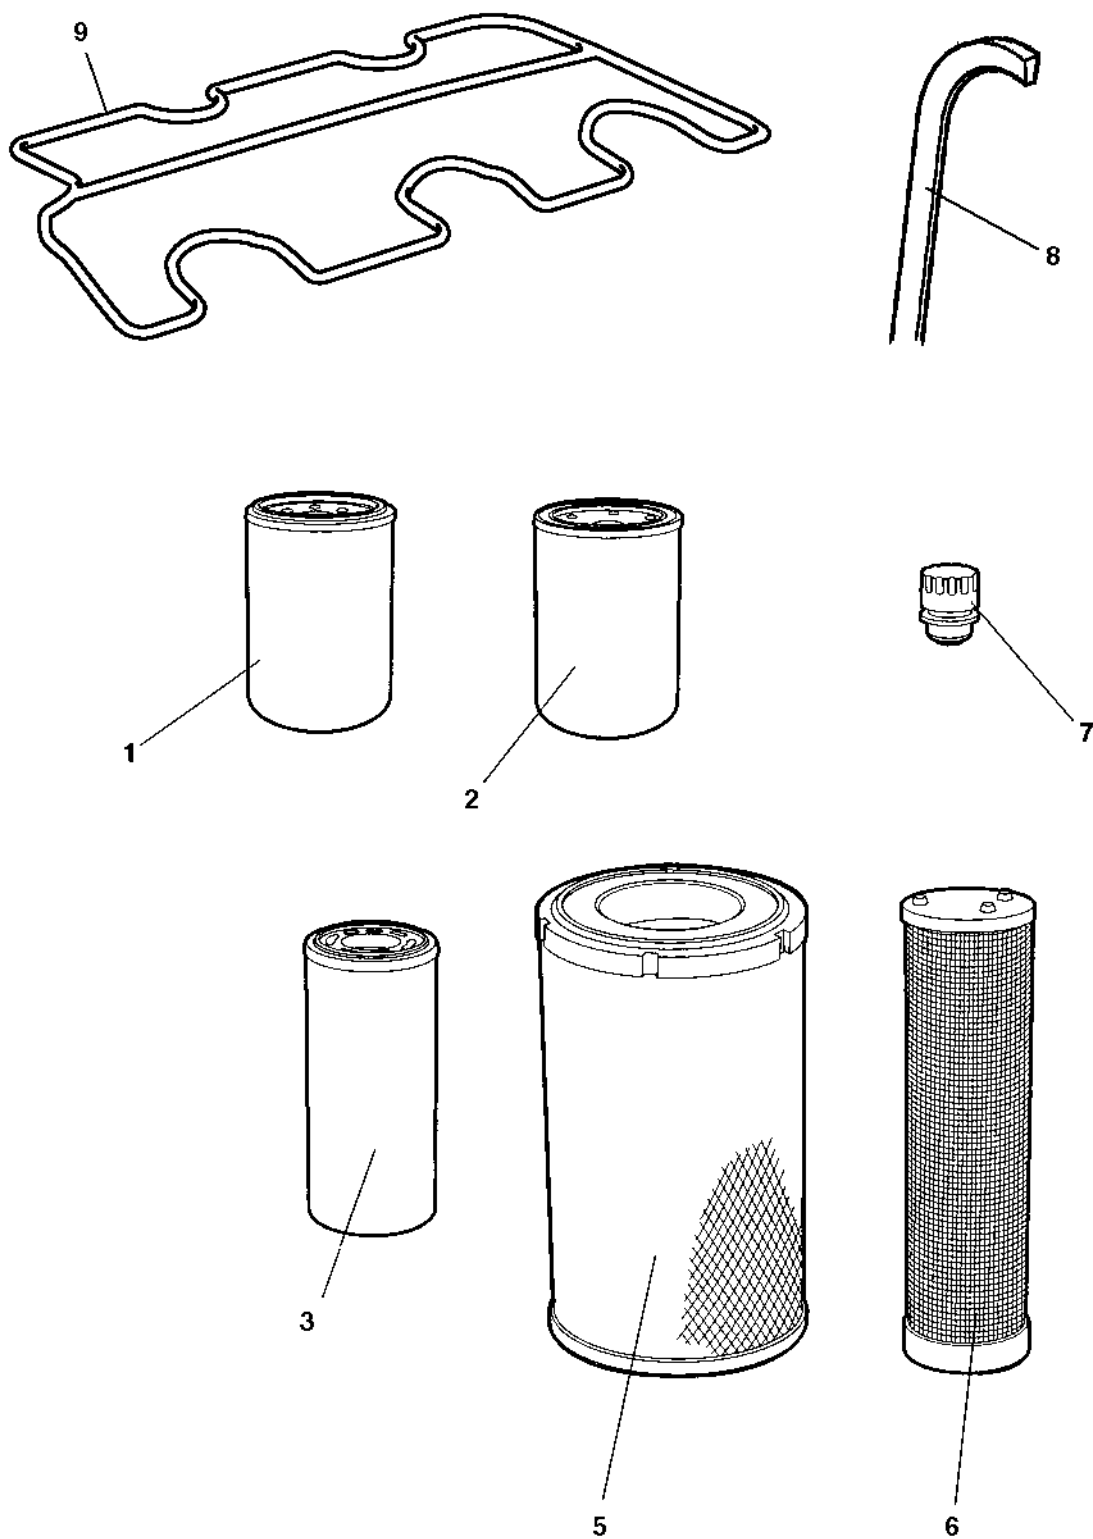

940210 Service kit, Perkins 1000h

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376554		1	Oil filter	A
2	376555		1	Fuel filter	A
3	376637		1	Filter element	A
5	939802		1	Air filter element	A
6	939803		1	Air filter element	A
7	357138		1	Ventilating filter	A
8	939932		1	V-belt	A
9	940212		1	Valve gasket	

Main
Safety

Repair kits


Ref. No.	Part No.	Rem.	Qty	Description	Code
-1				Repair kits (Page 16)	

Repair kits

Ref. No.	Part No.	Rem.	Qty	Description	Code
10	940668		1	Shock absorber kit, front drum Up to 89531973 (Page 18)	
	945850		1	Shock absorber kit, front drum From 89531974 (Page 20)	
11	940664	B	1	Shock absorber kit, drum Up to 89531475 (Page 22)	
	945552	B	1	Shock absorber kit, drum From 89531476 (Page 24)	
12	940671		1	Scraper kit (Page 26)	CC900/900G/900S
13	945928		1	Repair kit, Steering hitch (Page 28)	
14	945710		1	Eccentric shaft kit (Page 30)	
15	945711		1	Drum rotation kit (Page 32)	
16	950150		1	Eccentric shaft kit (Page 34)	Single arm drum
B)	Rear drum				

940668 Shock absorber kit, front drum

940668

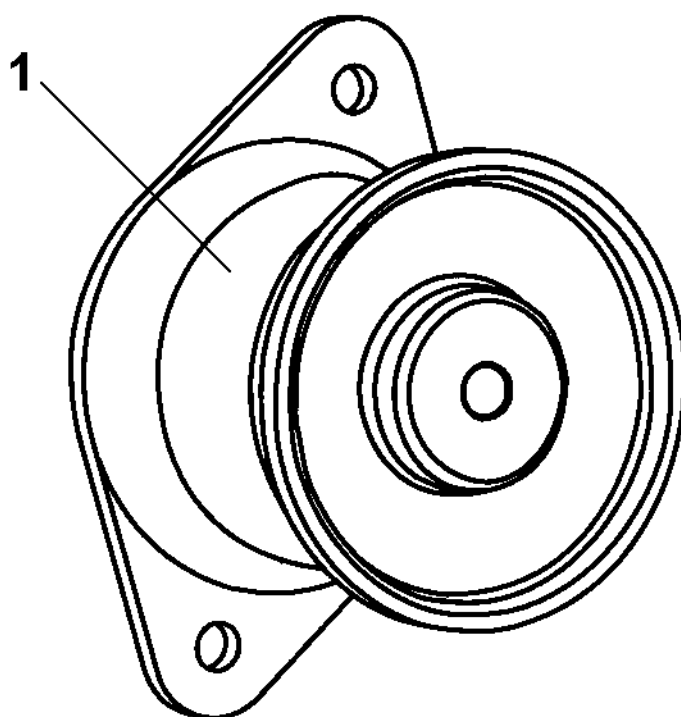


940668 Shock absorber kit, front drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	378145		8	Shock absorber	

945850 Shock absorber kit, front drum

940668

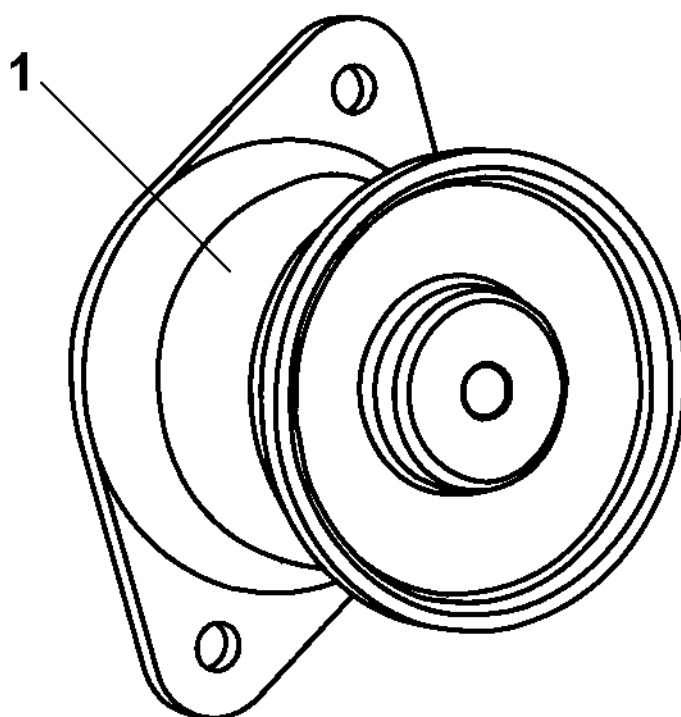


945850 Shock absorber kit, front drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	394242		8	Shock absorber	

940664 Shock absorber kit, drum

940668

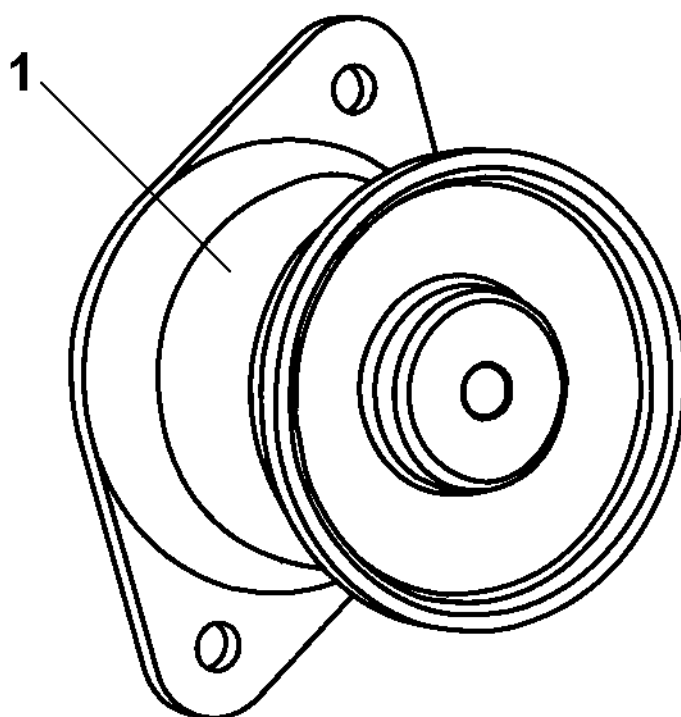


940664 Shock absorber kit, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	376783		7	Shock absorber	

945552 Shock absorber kit, drum

940668

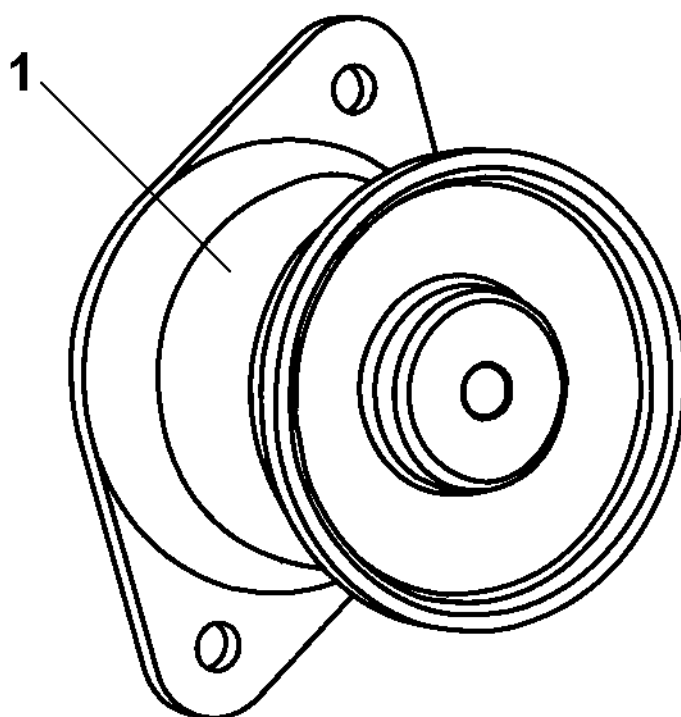


945552 Shock absorber kit, drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	391984		7	Shock absorber	

940671 Scraper kit CC900/900G/900S

18187

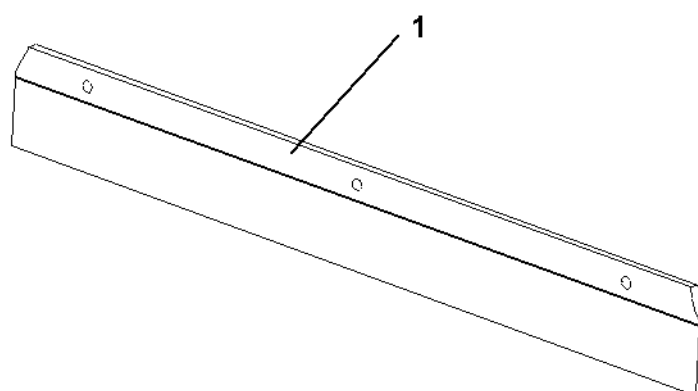


940671 Scraper kit CC900/900G/900S

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387346		4	Scraper blade	Polyurethan

945928 Repair kit, Steering hitch

18651

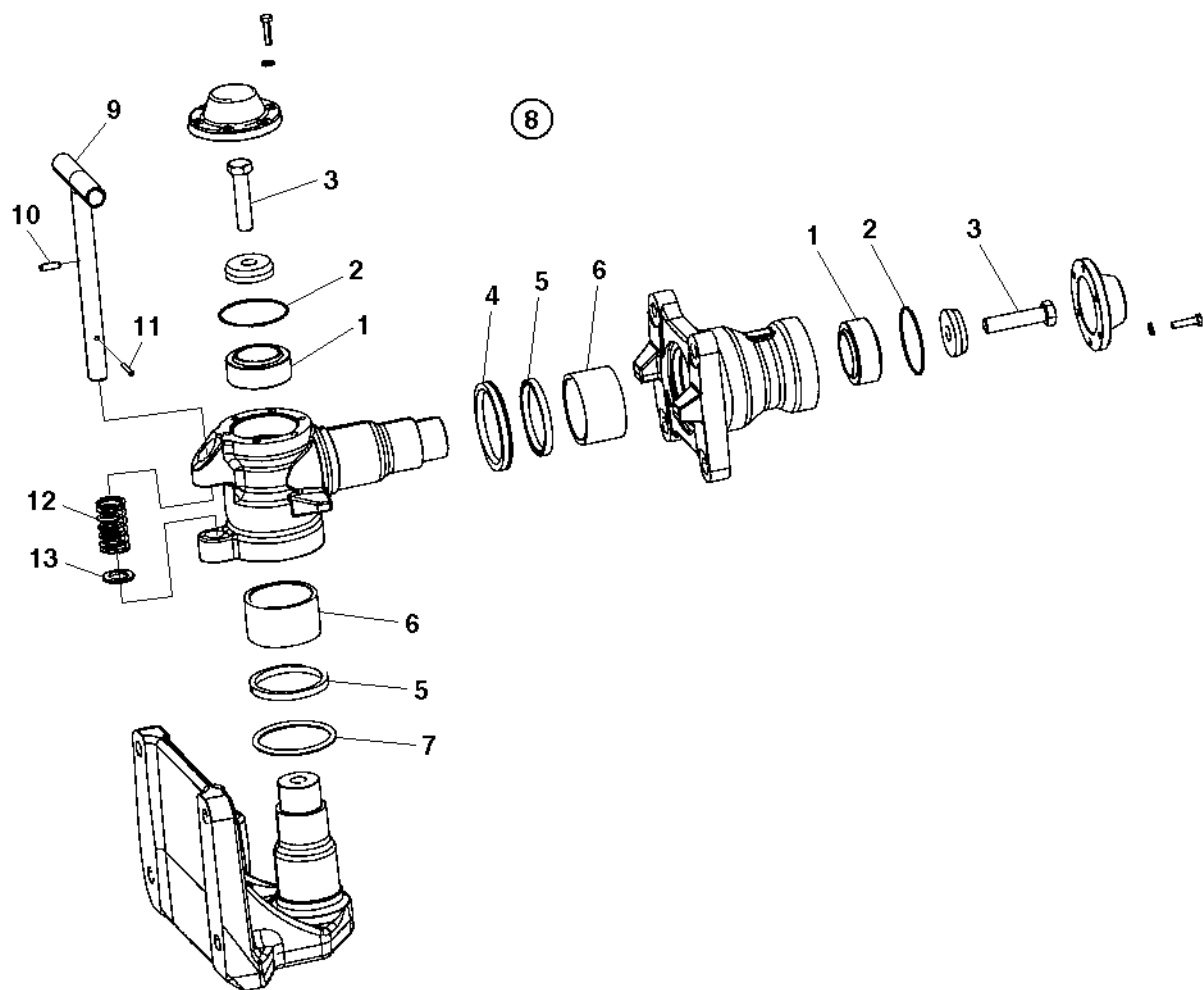


945928 Repair kit, Steering hitch

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	792611		2	Radial spherical plain bearing	
2	791962		2	O-ring	
3	500050		2	Screw	
4	388171		1	Sealing, v-ring	
5	388173		2	Shear wiper	
6	388172		2	Bushing	
7	160058		1	O-ring	D

945710 Eccentric shaft kit

18701

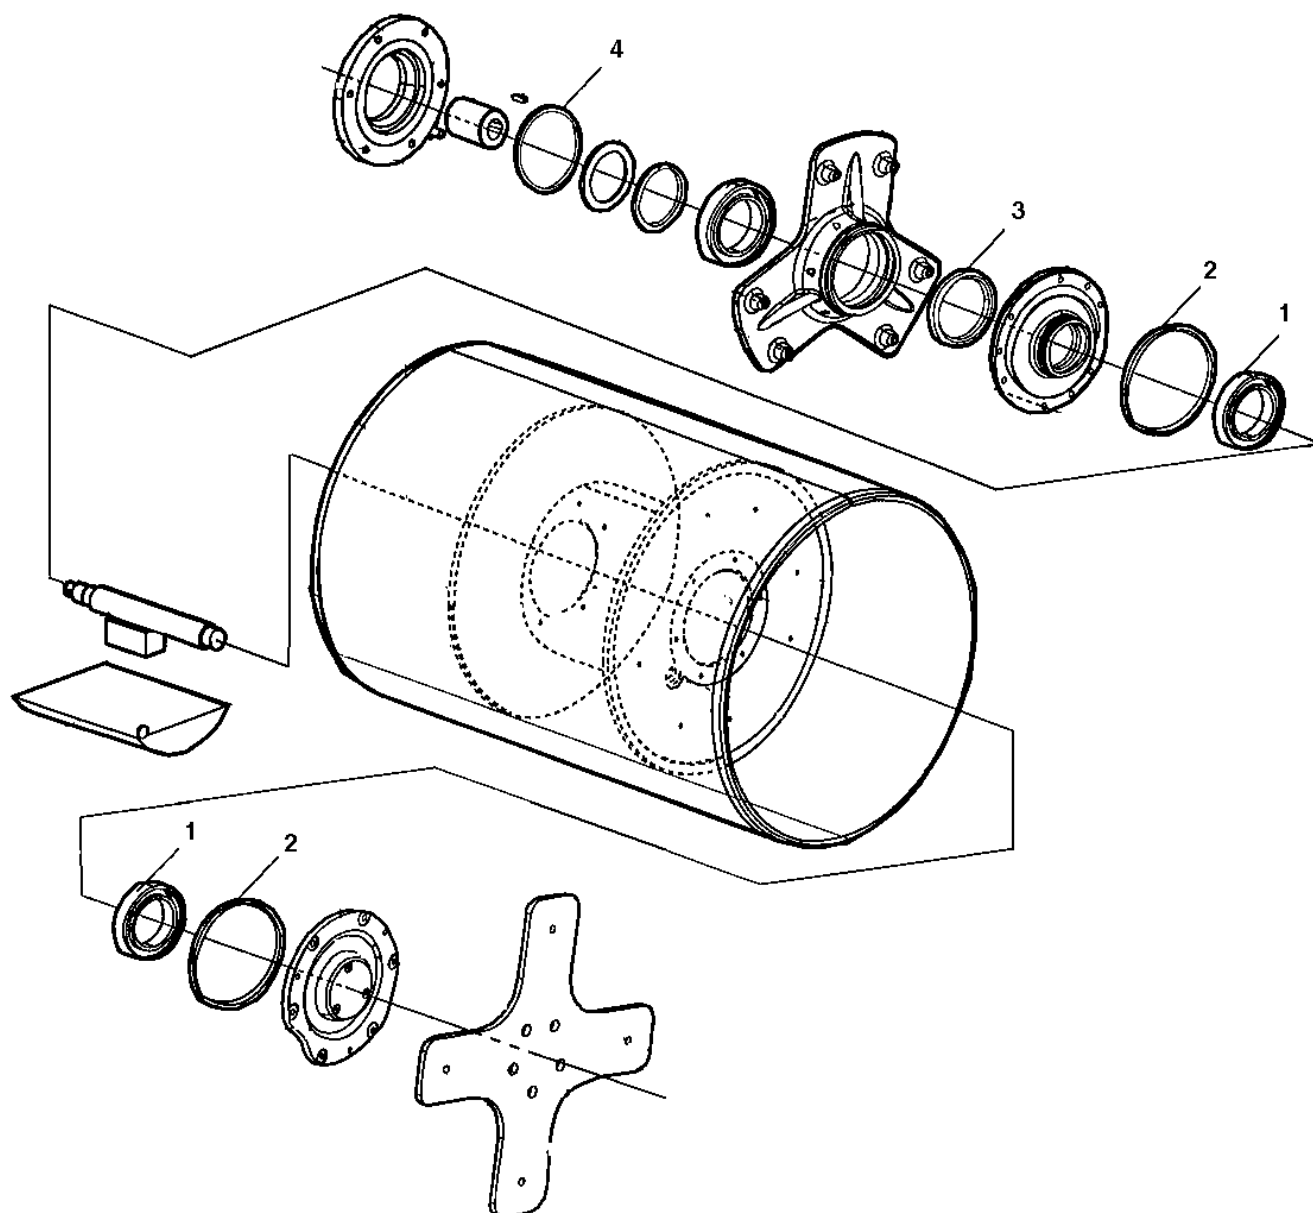


945710 Eccentric shaft kit

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	791433		2	Spherical roller bearing	
2	791425		2	O-ring	174, 20x5, 70
3	791426		1	Radial lip seal	
4	160132		1	O-ring	124, 50x3, 00 D

945711 Drum rotation kit

945711

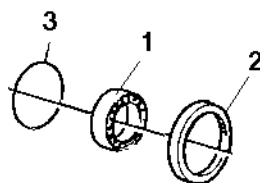


945711 Drum rotation kit

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	111018		1	Ball bearing	D
2	791426		1	Radial lip seal	
3	160132		1	O-ring	D
				124, 50x3, 00	

950150 Eccentric shaft kit Single arm drum

950150

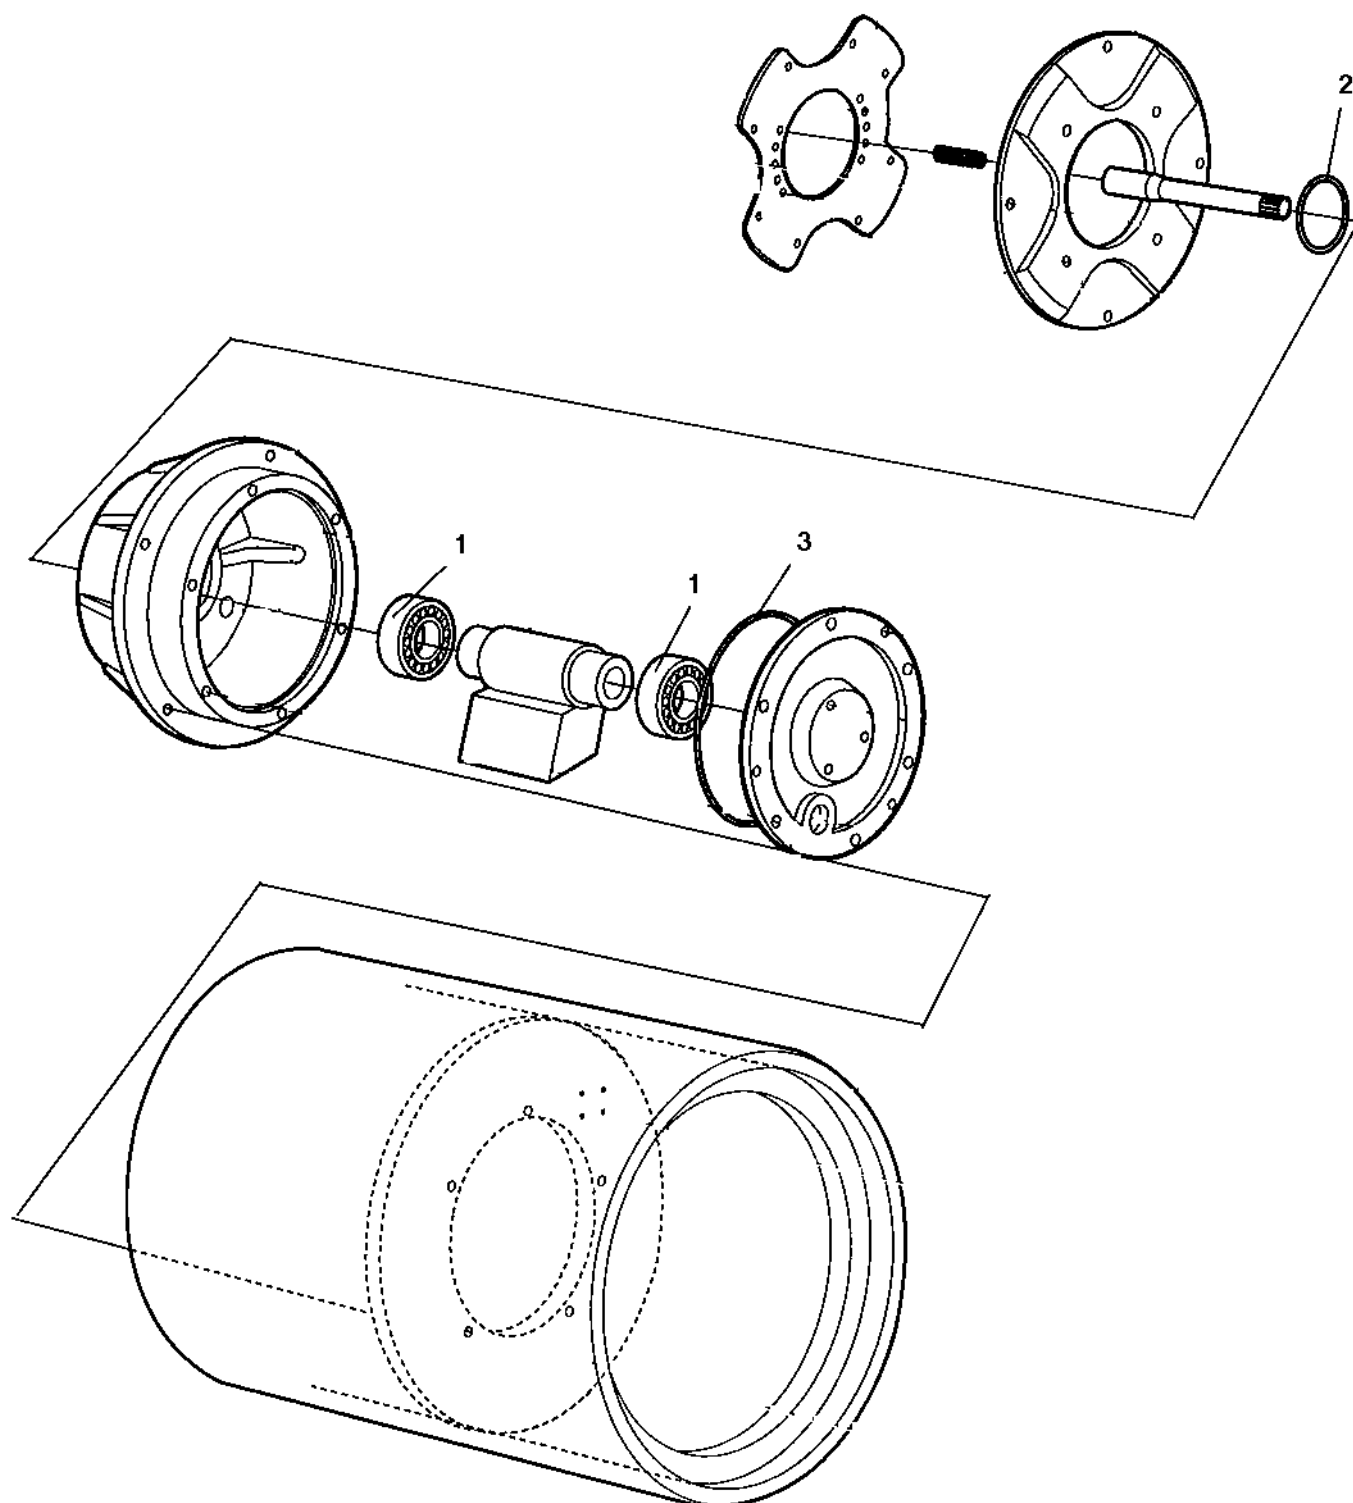

950150 Eccentric shaft kit Single arm drum


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	791750		2	Cylinder roller bearing	
2	160111		1	O-ring	
3	791923		1	O-ring	

Frames

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Frames (Page 38)	
30				Scrapers (Page 42)	
35				Spring loaded Scrapers (Page 44)	Option
40				Engine hood (Page 46)	
50				Sprinkler system (Page 48)	

Frames

18139

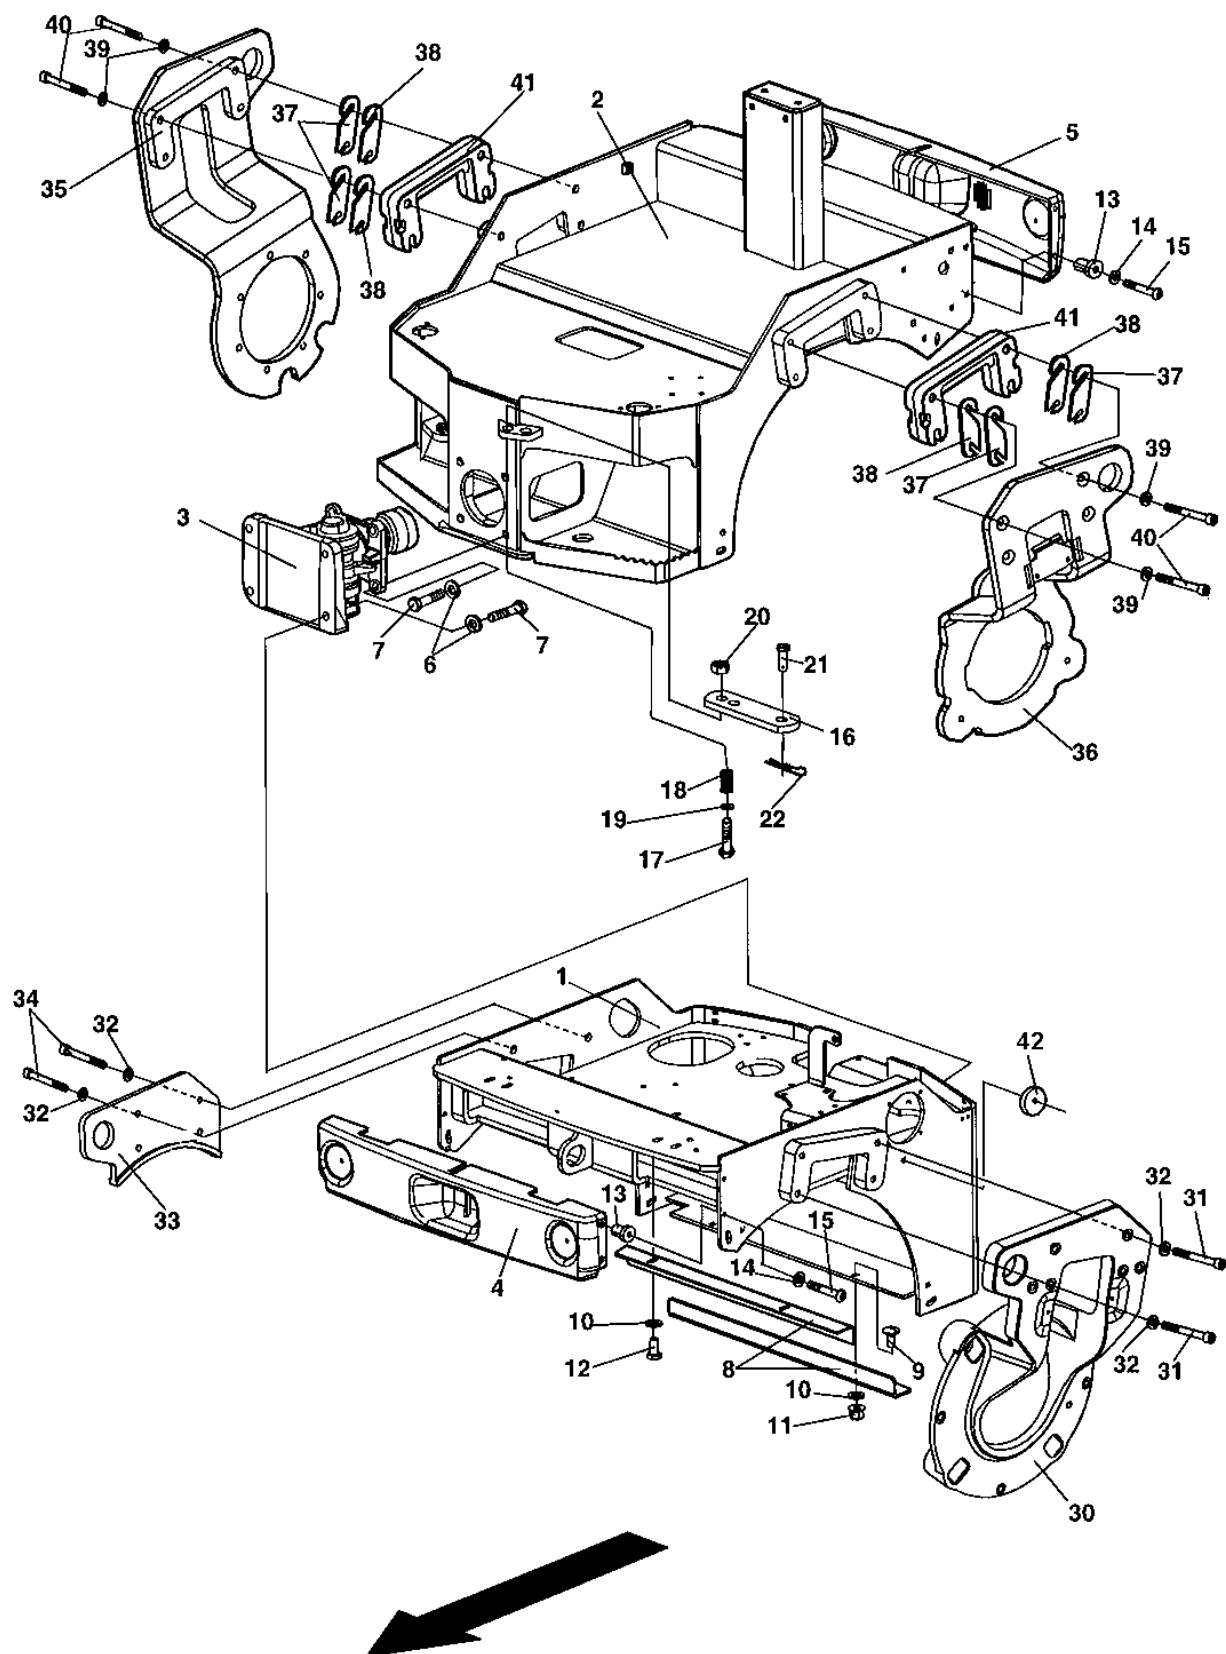

Frames


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	389602		1	Front frame	
2	387056		1	Frame, rear Up to 89531097	
	387056	B	1	Frame, rear From 89531098	
3	377621		1	Hitch (Page 40)	
4	387376		1	Cover, frame	
5	387886		1	Cover, frame	
6	904214		8	Washer	15x30x4
7	500176		8	Screw	M14x060
8	387779		2	Press plate	
9	929191		2	Bolt	
10	904640		4	Washer	8,4x22x3
11	586003		2	Lock nut	M8
12	500053		2	Screw	M8-1,25x20 8.8
13	387949		8	Rubber nut	
14	904228		8	Washer	
15	792149		8	Screw	M6x35 8.8
16	377610		1	Lock link	
17	500208		1	Screw	M20x80
18	349332		1	Pressure spring	
19	904233		1	Washer	21x36x3
20	586022		1	Lock nut	M20-8
21	530027		1	Clevis pin	
22	635061		1	Hair clip	D
30	377806		1	Fork	
31	500175		6	Screw	M12x60 10,9
32	904231		10	Washer	13x24x2
33	389459		1	Lifting lug	
34	500269		4	Screw	M12-1,75x50 10,9
35	387582		1	Fork	
36	388850		1	Fork, vibration side	
37	387425		N	Shim	
38	387424		N	Shim	
39	904231		8	Washer	13x24x2
40	500122		8	Screw	
41	388153		2	Spacer	
42		A	2	Reflector	

A) See section " Decals and documentation"

B) Serialnumber depends on the new bracket to the water strainer

377621 Hitch

18651

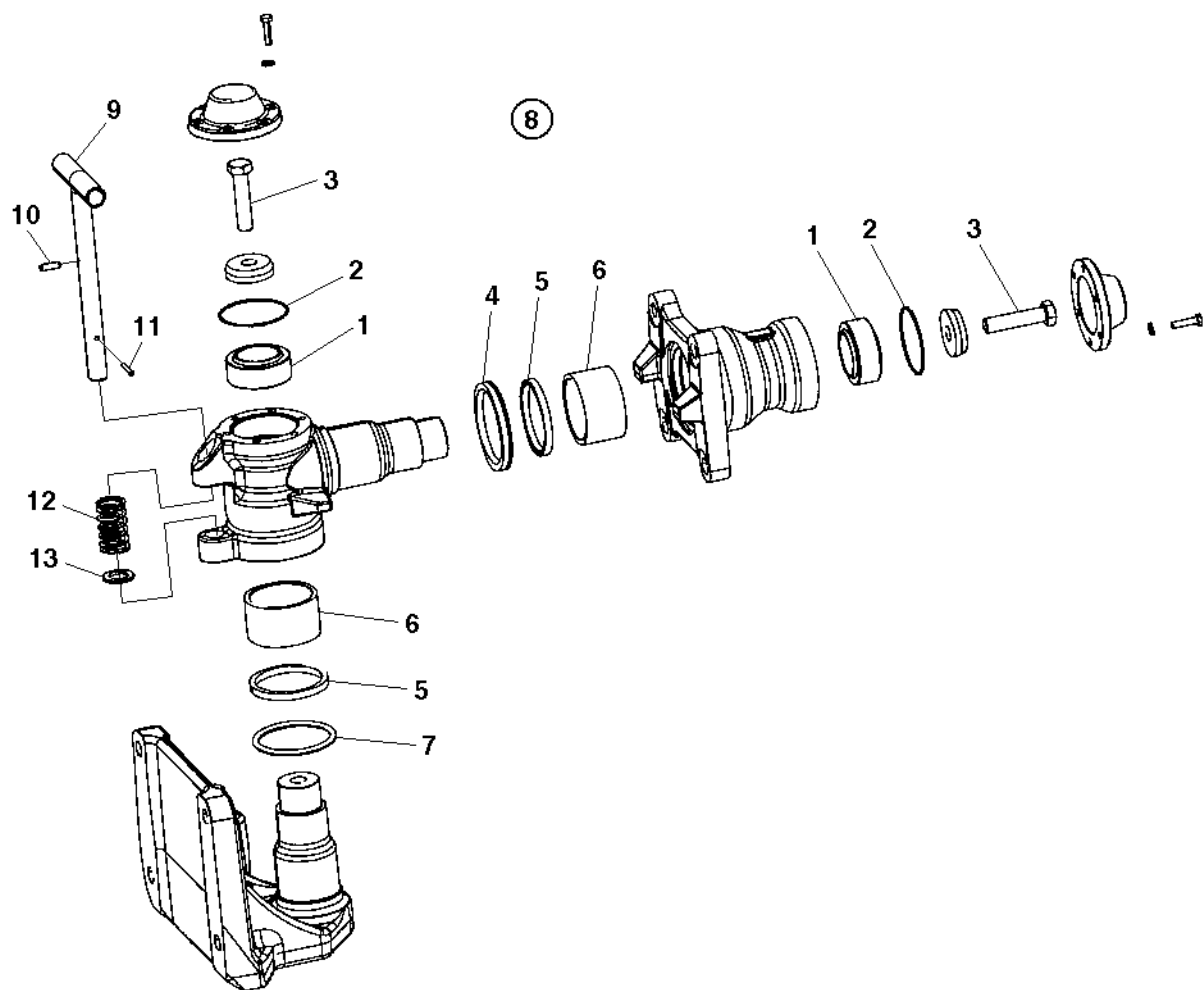


377621 Hitch

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	792611		2	Radial spherical plain bearing	
2	791962		2	O-ring	
3	500050		2	Screw	
4	388171		1	Sealing, v-ring	
5	388173		2	Shear wiper	
6	388172		2	Bushing	
7	160058		1	O-ring	D
8	945928		1	Repair kit, Steering hitch (Page 28)	
9				Not used on this model	
10				Not used on this model	
11				Not used on this model	
12				Not used on this model	
13				Not used on this model	

Scrapers

18183

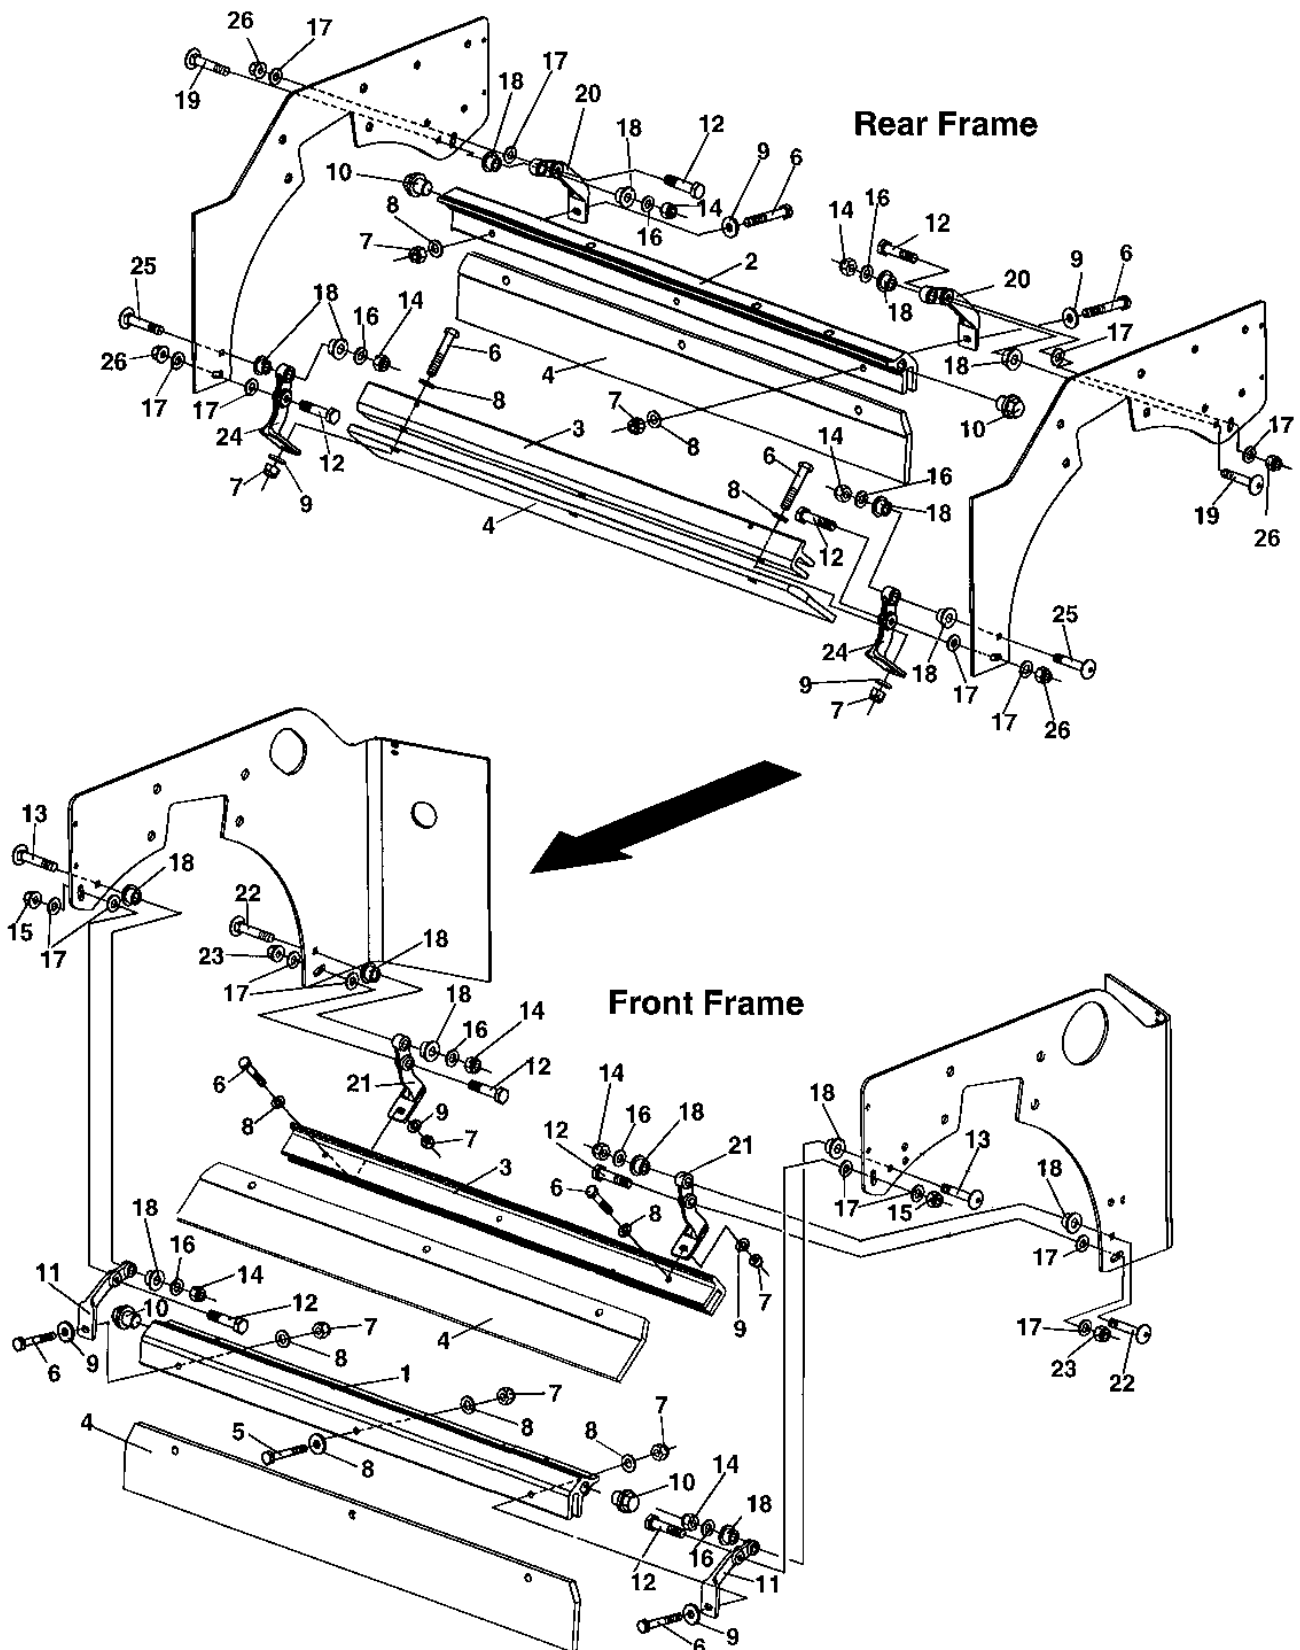


Scrapers

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	377817		1	Sprinkler pipe	
2	387344		1	Sprinkler pipe	
3	387345		2	Scraper bracket	
4	387346		4	Scraper blade	Polyurethan
5	500024	B	4	Screw	M8x45
6	500067		12	Screw	M8-1,25x55 8,8
7	586003		12	Lock nut	M8
8	904229		16	Washer	
9	904640		8	Washer	8,4x22x3
10	792072		4	End plug	
			1	.Gasket	
11	377745		1	Upper hold	
12	500105		16	Hexagon screw	
13	791775		4	Bolt	
14	586003		8	Lock nut	M8
15	586018		2	Lock nut	M10
16	904229		8	Washer	
17	791938		16	Washer	
18	791939		16	Bushing	
19	792134		2	Bolt	
20	387039		2	Upper hold	
21	377746		2	Lower hold	
22	791775		2	Bolt	
23	586018		2	Lock nut	M10
24	387043		1	Lower hold	
25	792134		2	Bolt	
26	902287		2	Nut	

B) Valid for all scrapers

Spring loaded Scrapers Option

18292

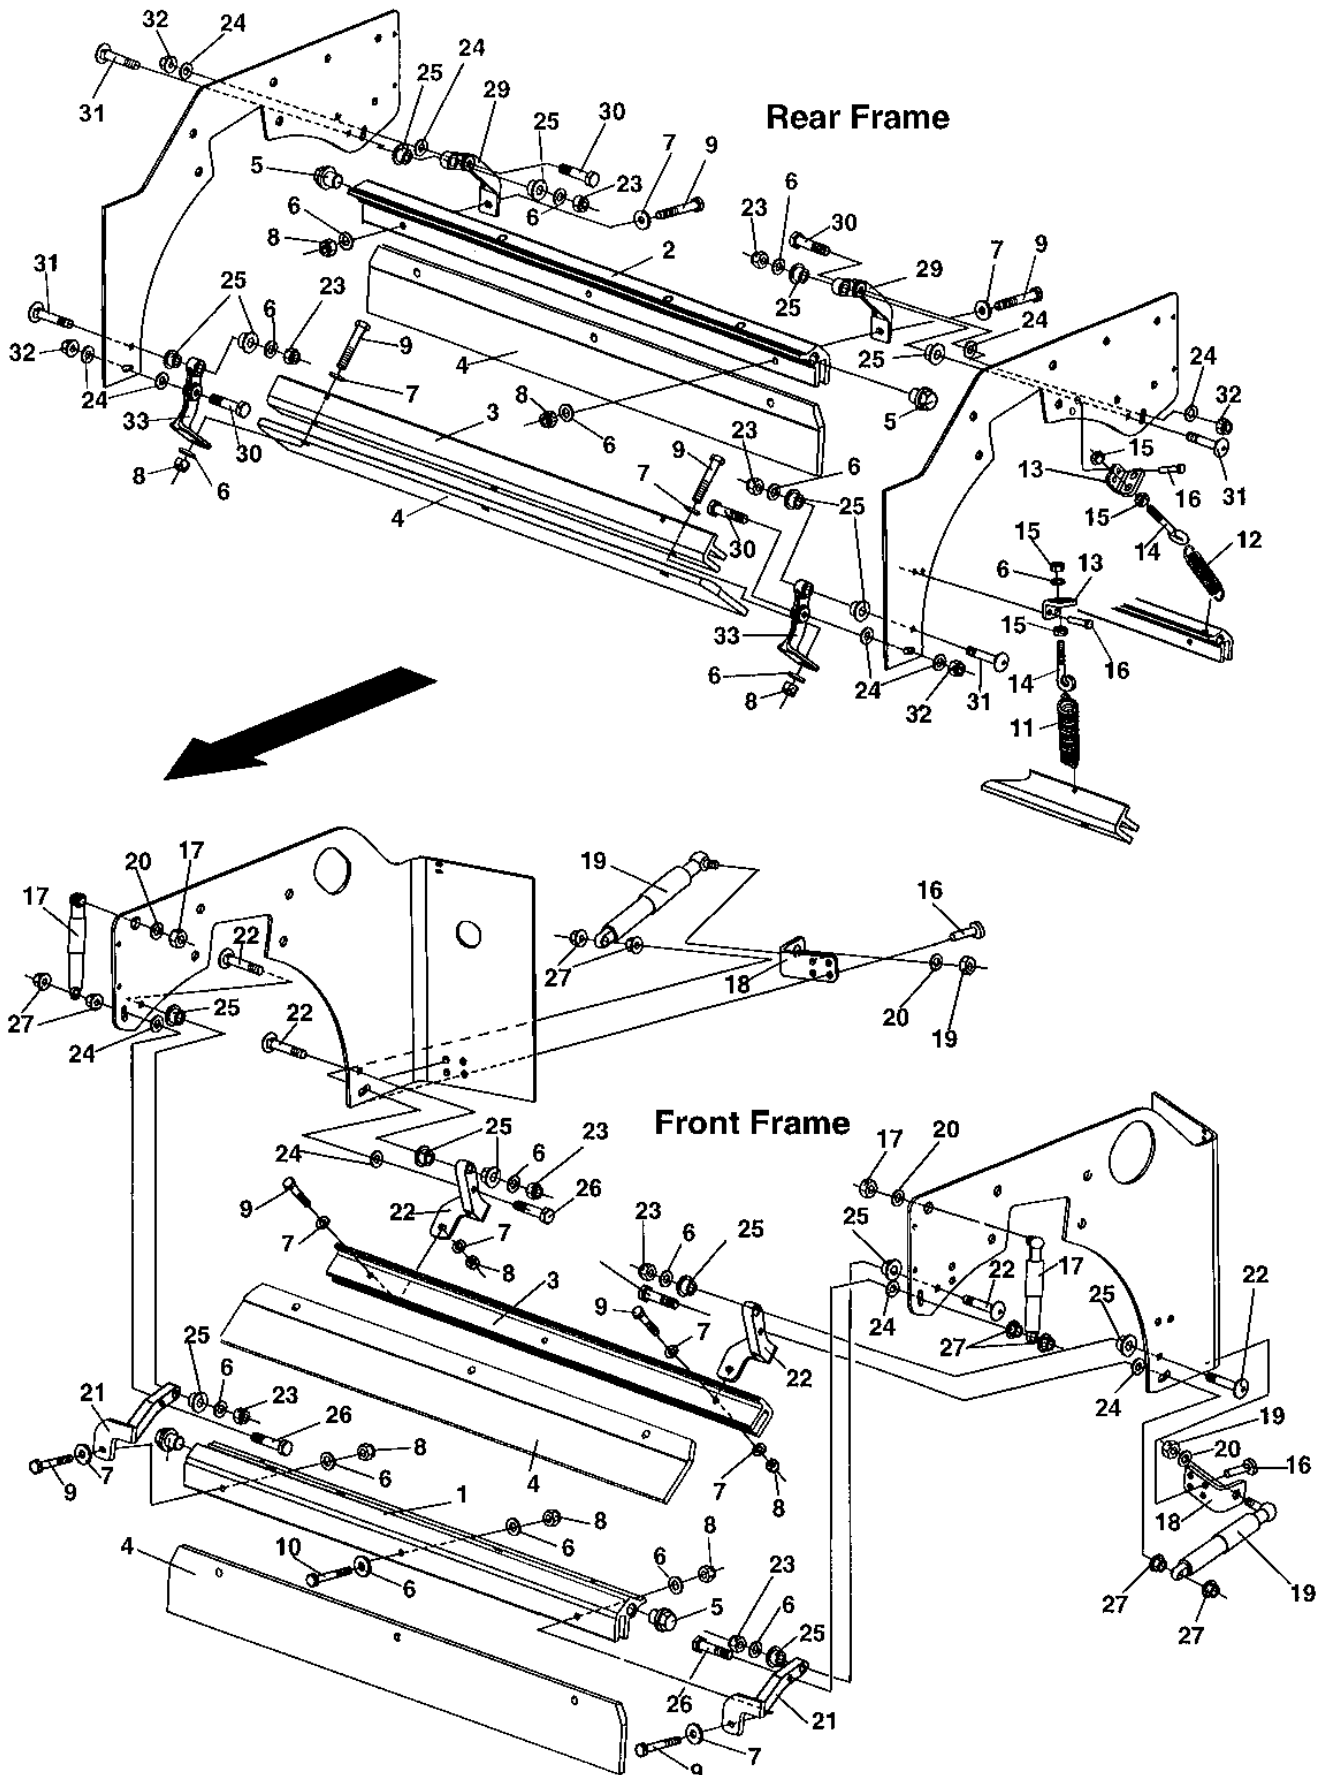


Spring loaded Scrapers Option

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	377817		1	Sprinkler pipe	
2	387344		1	Sprinkler pipe	
3	387345		2	Scraper bracket	
4	387346		4	Scraper blade	Polyurethan
5	792072		4	End plug	
			1	.Gasket	
6	904229		24	Washer	
7	904640		8	Washer	8,4x22x3
8	586003		8	Lock nut	M8
9	500067		8	Screw	M8-1,25x55 8,8
10	500024	B	4	Screw	M8x45
11	792188		2	Extension spring	D
12	359043		2	Spring	D
13	378178		4	Bracket	
14	792189		4	Eye bolt	
15	570005		8	Nut	M8
16	792190		16	Blind rivet	
17	792286		2	Gas spring	
18	379656		2	Bracket	
19	792287		2	Gas spring	
20	904230		4	Washer	10,5X22X2
21	377745		2	Upper hold	
22	791775		4	Bolt	
23	586003		2	Lock nut	M8
24	791938		12	Washer	
25	791939		16	Bushing	
26	500241		4	Screw	
27	902287		8	Nut	
28	377746		2	Lower hold	
29	387039		2	Upper hold	
30	500105		4	Hexagon screw	
31	792134		4	Bolt	
32	902287		4	Nut	
33	387043		2	Lower hold	

B) Valid for all scrapers

Engine hood

17977-1

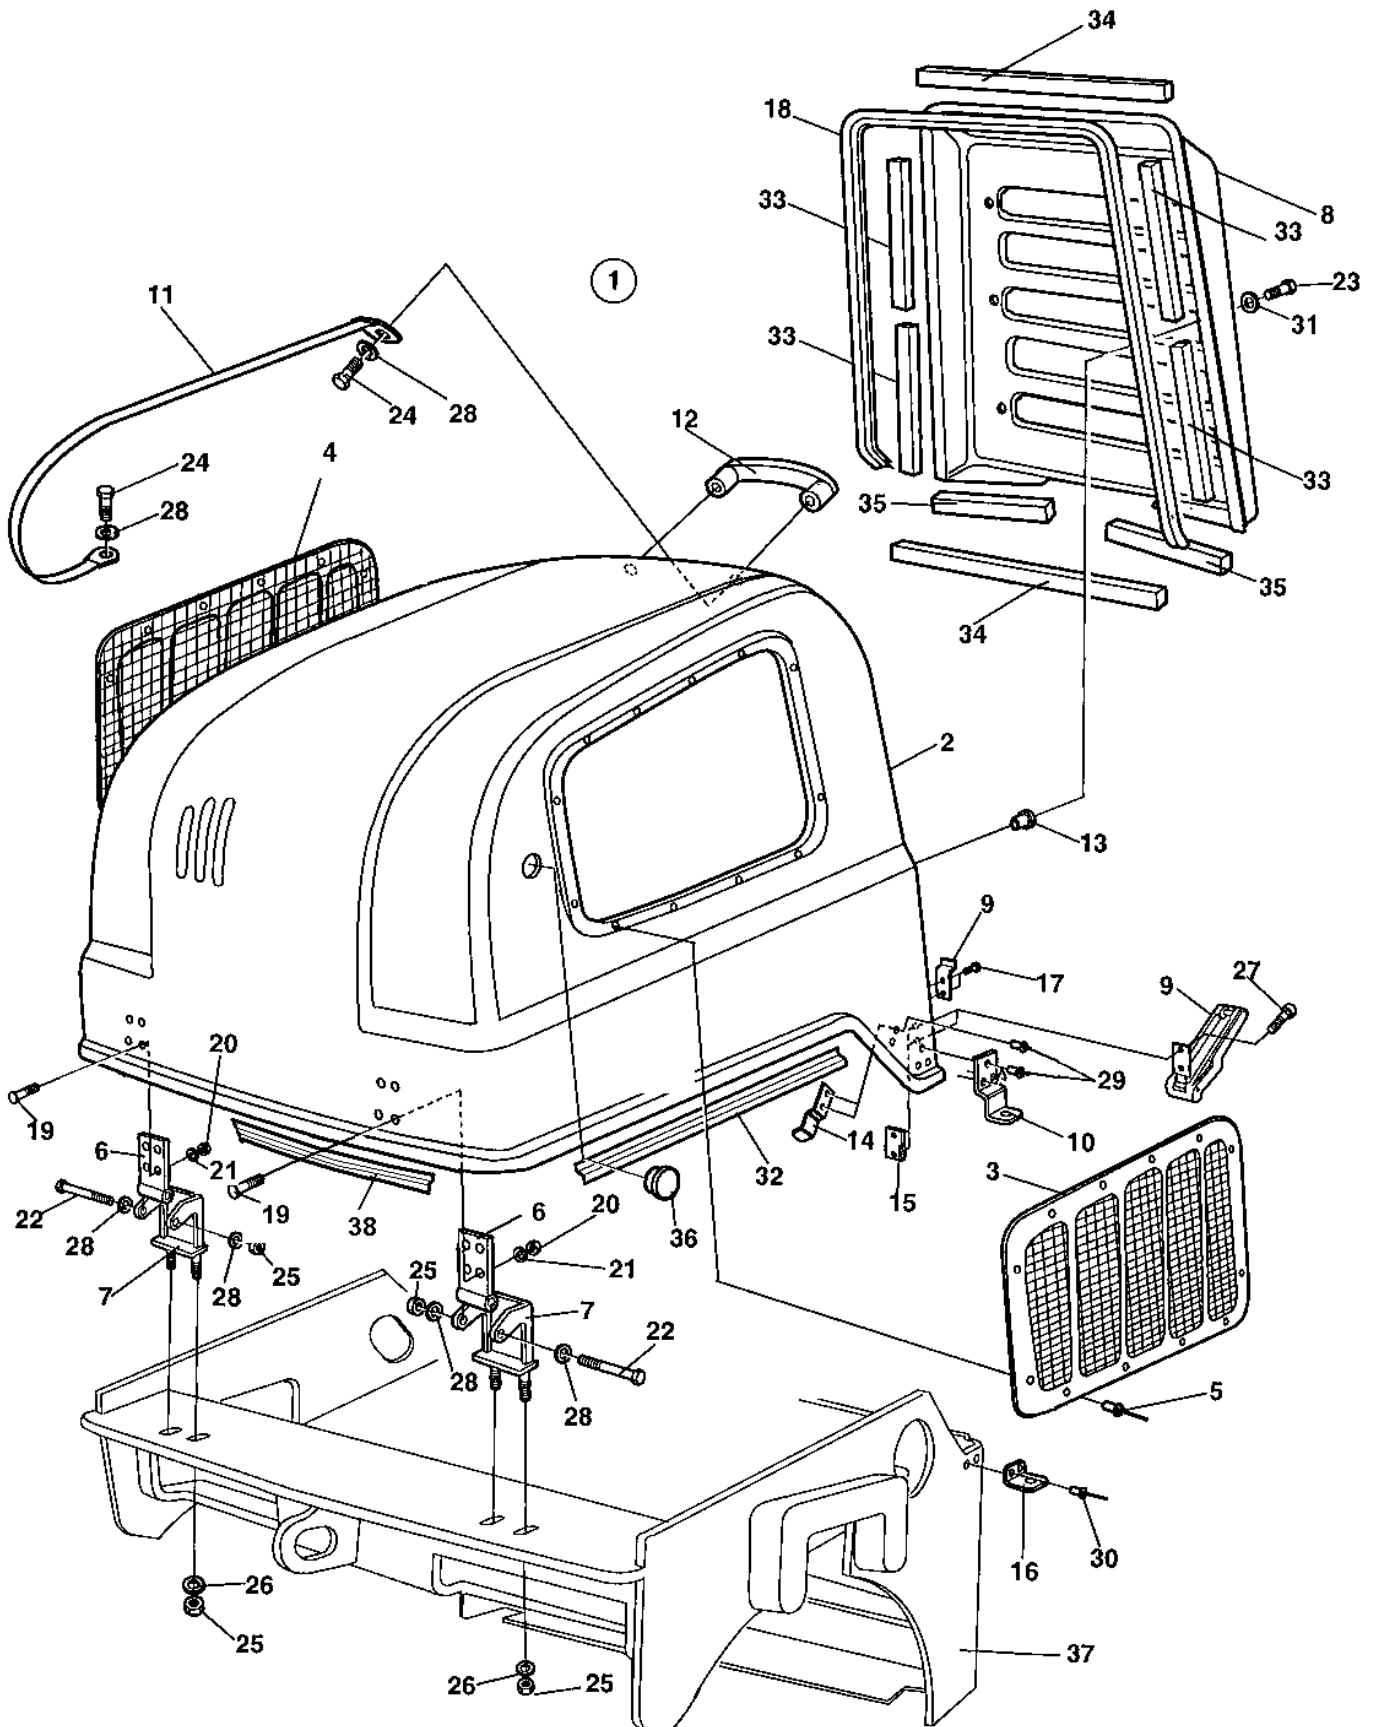

Engine hood

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	377042		1	Engine hood	
2			1	.Engine hood	
3	377043		1	.Grid, left	
4	377044		1	.Grid, right	
5	904012		24	.Rivet	
6	387148		2	Hinge	
7	387151		2	Hinge	
8	387154		1	Cover, radiator	
9	388846		2	Latch	
10	377061		1	Lock plate	
11	387947		1	Metal strapping	
12	387948		1	Handle	
13	387949		6	Rubber nut	
14	388733		2	Controlling plate	
15	387956		1	Stop plate	
16	388852		1	Lock plate	
17	791643		4	Screw	
18	902166	A	1	Edge trim	3-5
19	903856		8	Bolt	M06x30
20	586002		8	Lock nut	M6
21	904228		8	Washer	
22	500068		2	Screw	M08x65
23	791559		6	Screw	M06x35
24	500053		3	Screw	M8-1,25x20 8.8
25	586003		6	Lock nut	M8
26	904556		4	Washer	8,4x16x3,0
27	508022		4	Screw	M4x16
28	904229		7	Washer	
29	791754		7	Blind rivet	
30	791754		2	Blind rivet	
31	928381		6	Washer	6,4x18x1,6
32	297018	B	2	Rubber strip	
33	791597	C	4	Rubber strip	
34	791597	D	2	Rubber strip	
35	791597	E	2	Rubber strip	
36	923270		2	Protective plug	
37			1	See sections "Frames"	
38	791228	F	1	Edge trim	

A) L = 1620 mm


B) L = 450 mm

C) L = 125 mm

D) L = 420 mm

E) L = 170 mm

F) Old version, L = 700 mm

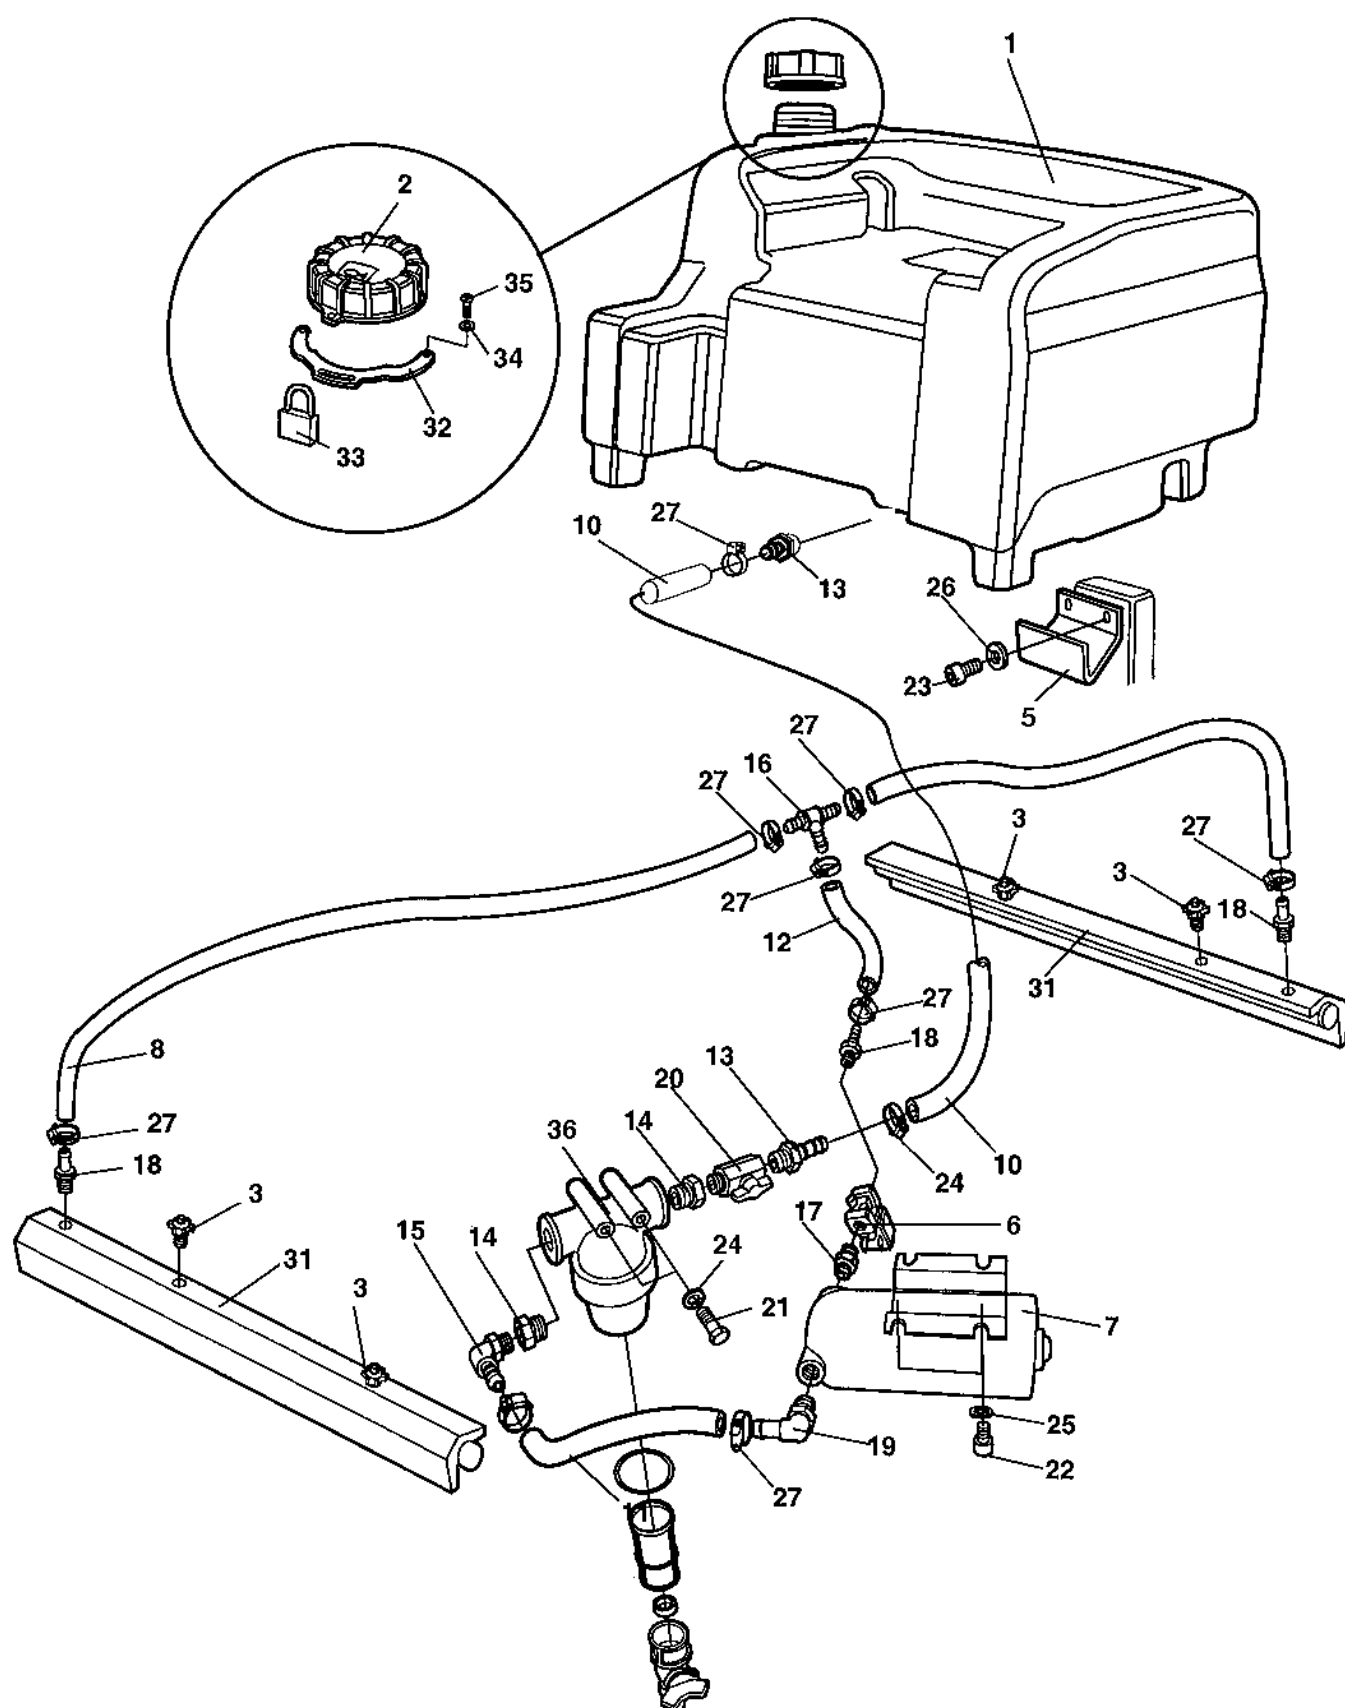

Sprinkler system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	389218		1	Water tank, cpl	
2	388087		1	Tank cap	
3	376873	H	4	Spraying nozzle, cpl	
	376874	H	1	.Housing	
	376875	H	1	.Retainer	
	376876	H	1	.Gasket	
	392011	J	4	Spraying nozzle, cpl	
	392508	J	1	.Housing	
	392509	J	1	.Retainer, nozzle, strainer, yellow	0.8
	376876	J	1	.Gasket	
5	387935		1	Bracket	
6	287713		1	Solenoid valve	
7	383697		1	Water pump	
8	904878	A	1	Hose reinforced	
9	904878	B	1	Hose reinforced	
10	904878	C	1	Hose reinforced	
11	904878	D	1	Hose reinforced	
12	904878	E	1	Hose reinforced	
13	924544		2	Hose connection	
14	903886		2	Adapter	
15	924996		1	Hose connection	D
16	923735		1	Hose connection	
17	377611		1	Straight connector	
18	901432		1	Hose connection	
19	923734		1	Hose connection	
20	924986		1	Valve	
21	500292		2	Screw Up to XXX31097	M6x75
	500090		2	Screw From XXX31098	M8x75
22	508004		4	Socket head cap screw	M8-1,25x12H 8.8
23	500029		2	Screw	M10-1,5x30 8.8
24	904735		2	Washer Up to XXX31097	
	904640		2	Washer From XXX31098	8,4x22x3
25	904229		4	Washer	
26	904567		2	Washer	10,5x28x6 HB305
27	313002		10	Hose clamp	13-20 mm
29	791977		2	Hose connection	
31		F	2	Sprinkler pipe	
32	389155	G	1	Lock bracket	
33	358881	G	1	Pad lock	
34	904281	G	2	Washer	5,3x10x1
35	903658	G	2	Screw	M5x10
36	791950		1	Water strainer, cpl	
37	791959		1	.O-ring	
38	791949		1	.Filter element	B
39	791568		1	.Gasket	
40	379009		1	.Valve	

A) L = 1565 mm

B) L = 835 mm

C) L = 520 mm

D) L = 160 mm

E) L = 130 mm

F) See section "Scraper"

G) Option

H) Recommendation: Replace with improved design; interchangeable as cpl. unit


J) Improved design

Drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Drum Single arm (Page 52)	
20				Drum (Page 54)	Rear

Drum Single arm

18118-2

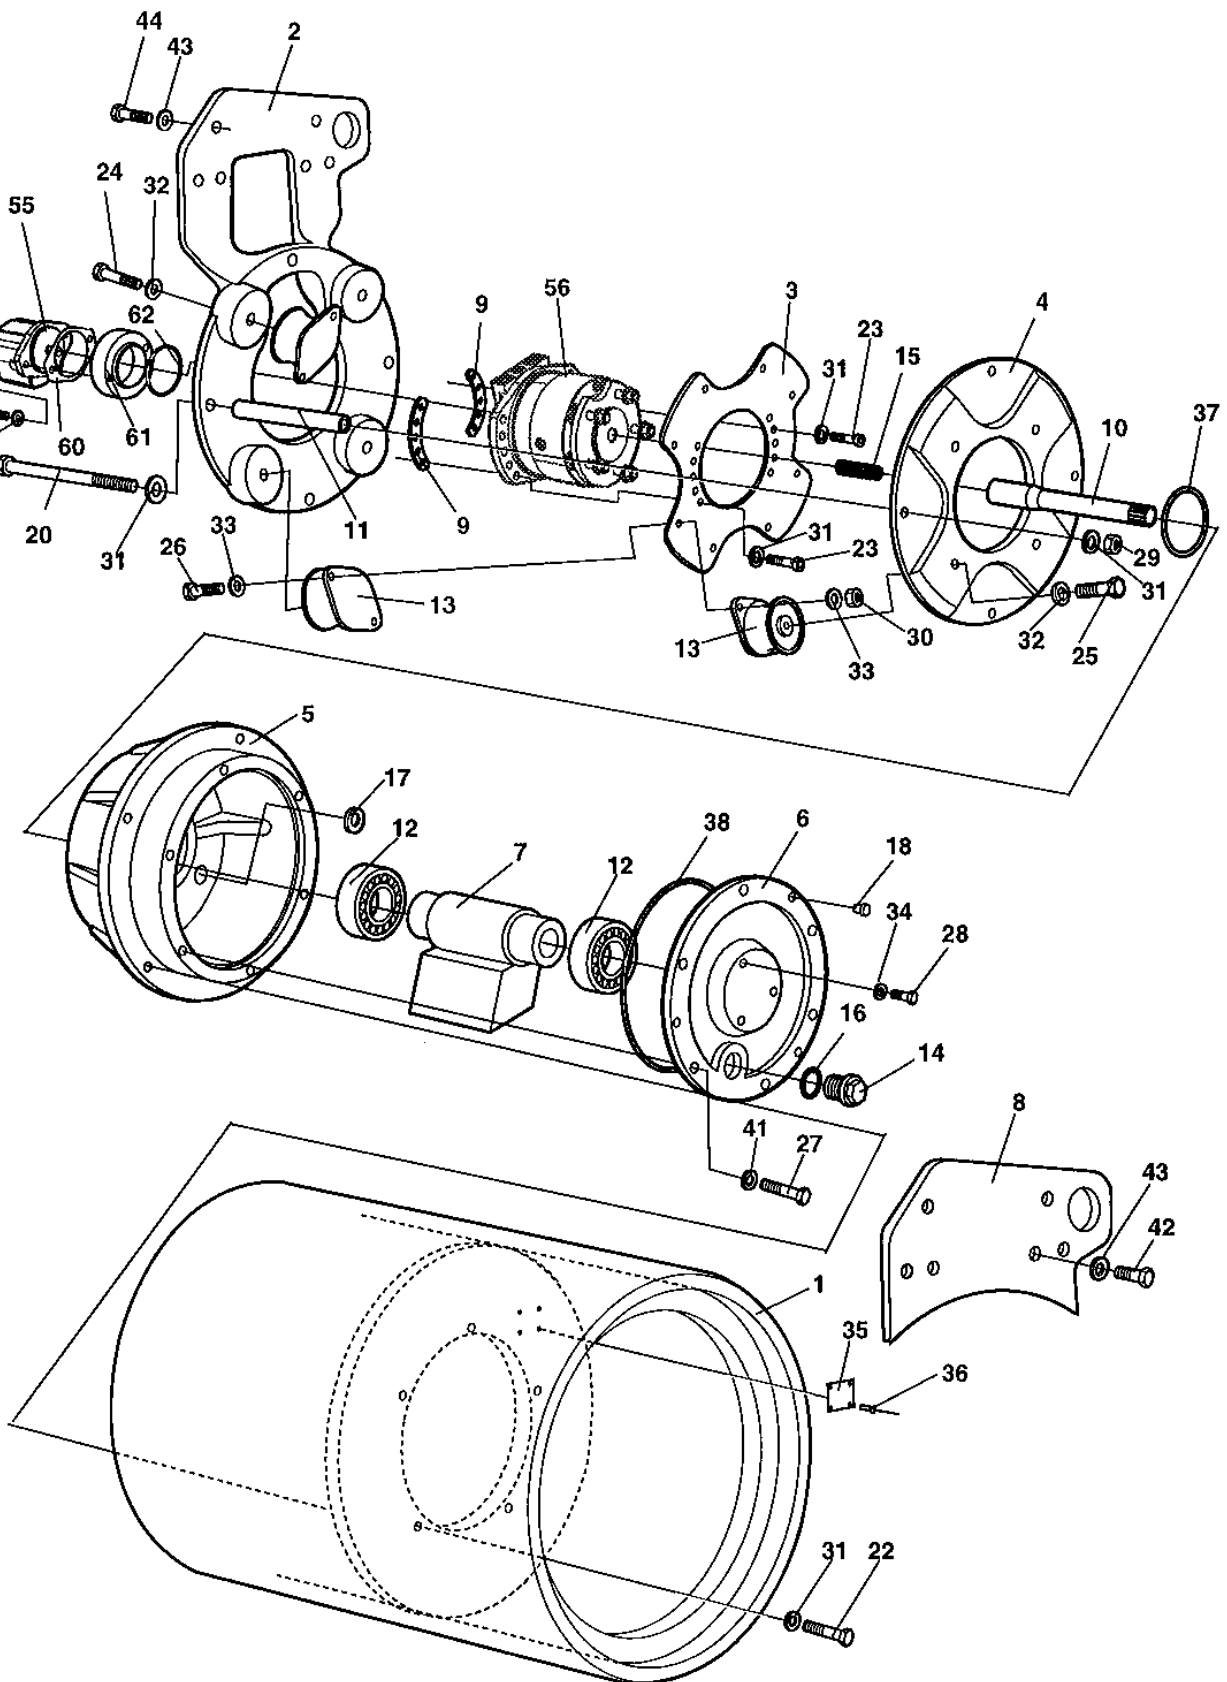

Drum Single arm

Ref. No.	Part No.	Rem.	Qty	Description			Code
1	388975		1	Drum, front			
2		A	1	Fork			
3	389455		1	Motor bracket			
4	389456		1	Drive disc			
5	389132		1	Bearing housing			
6	389134		1	Bearing housing			
7	389136		1	Eccentric shaft			
8		A	1	Lifting lug			
9	389462		2	Holder			
10	389213		1	Splined shaft Up to 89530799			
	390554		1	Splined shaft, kit From 89530800			
	390175	B	1	Splined shaft From 89530800			
		B	1	Instruction From 89530800			
11	389457		4	Spacer			
12	791750		2	Cylinder roller bearing			
13	378145		8	Shock absorber Up to 89531973			
	394242		8	Shock absorber From 89531974			
14	343744		1	Magnetic plug	M30		D
15	791922		1	Compression spring			
16	162017		1	Seal ring	M30		D
17	162024		5	Washer, sealing			
18	903374		3	Protective plug			
20	791929		4	Screw	M12x260		
21	500175		6	Screw	M12x60 10,9		
22	500195		5	Screw	M12-1,75x50 8,8		
23	508032		10	Screw	M12-1,75x50H 8,8		
24	947688		4	Screw	M12x35H		
25	947687		4	Screw	M12-1,75x30 10,9		
26	900329		8	Screw	M10x50		
27	500022		6	Screw	M8-1,25x30 8,8		
28	500012		3	Screw	M6x12		
29	570007		4	Hexagon nut	M12		
30	928847		8	Nut			
31	904231		23	Washer	13x24x2		
32	904703		8	Washer	13x24x4		
33	904557		16	Washer	10,5x22x4		
34	904228		3	Washer			
35	343801		1	Sign plate			
36	527002		4	Drive screw			
37	160111		1	O-ring			
38	791923		1	O-ring			
41	904556		6	Washer	8,4x16x3,0		
42		A	4	Screw			
43		A	10	Washer			
44		A	6	Screw			
55	388725		1	Hydraulic motor Up to 89531931			
	390854		1	Hydraulic motor From 89531932			
			1	Seal kit From 89531932			
56		C	1	Hydraulic motor			
57	508029		2	Screw Up to 89530799	M10-1,5x30H 8,8		
	508014	B	2	Screw From 89530800	M10x60		
58	904557	B	2	Washer	10,5x22x4		
60	379458	B	1	Gasket			
61	390176	B	1	Adapter From 89530800			
62	160032	B	2	O-ring From 89503800			D


A) See section "Frames"

B) Included in Splined shaft, kit

C) See section "Hydraulic propulsion and brake"

Drum Rear

18119

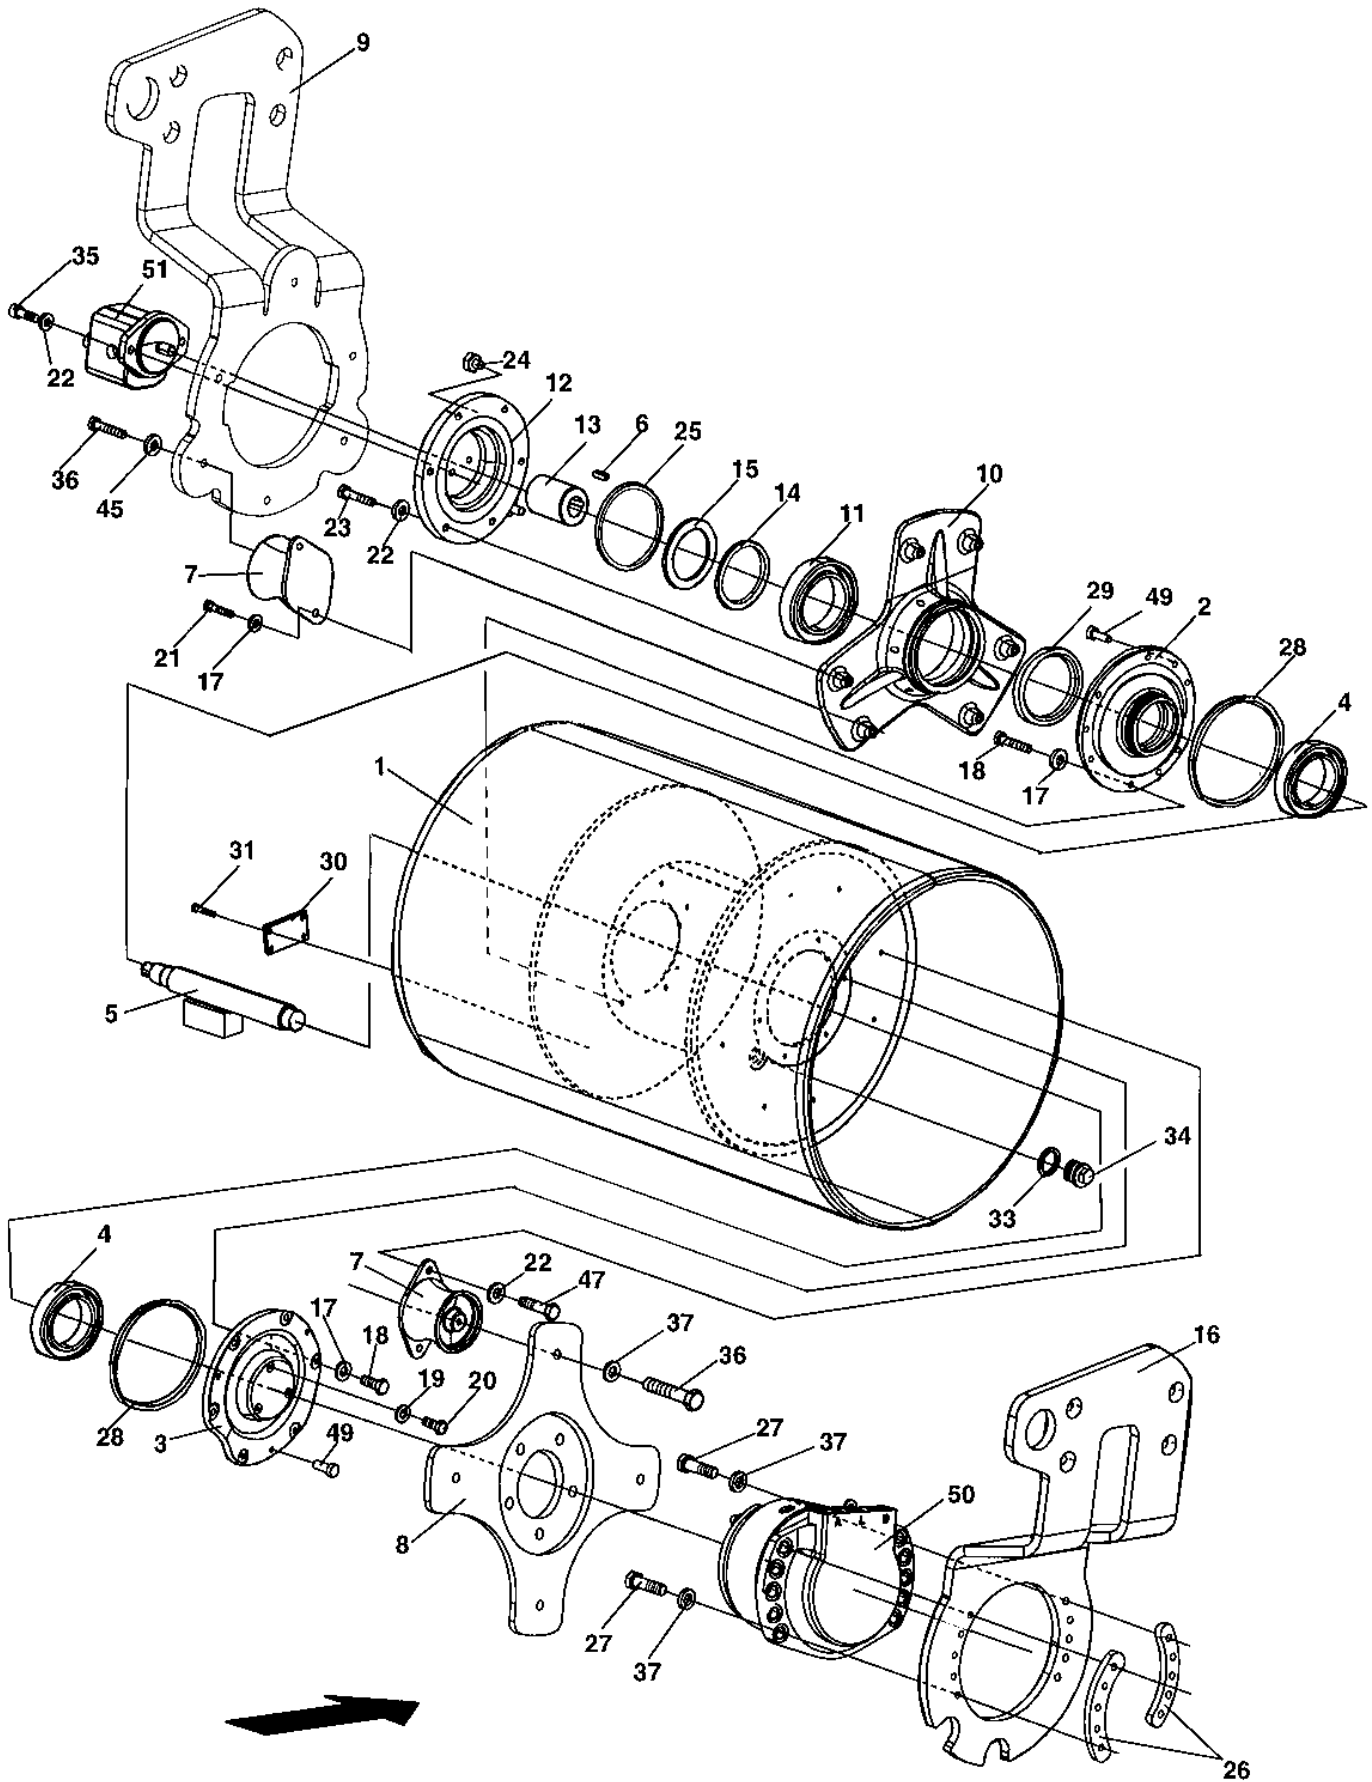

Drum Rear

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	386628		1	Drum	
2	386619		1	Bearing housing	
3	386620		1	Bearing housing	
4	791433		2	Spherical roller bearing	
5	386624		1	Eccentric shaft	
6	350029		1	Key	
7	376783		7	Shock absorber Up to 89531475	
	391984		7	Shock absorber From 89531476	
8	387583		1	Drive disc	
9		A	1	Fork, vibration side	
10	386241		1	Bearing housing	
11	111018		1	Ball bearing	D
12	358666		1	Adapter	
13	349202		1	Coupling	D
14	358689		1	Spacer ring	
15	903154		1	Retaining ring	
16		A	1	Fork, drive side	
17	904640		12	Washer	8,4x22x3
18	500022		12	Screw	M8-1,25x30 8,8
19	904228		3	Washer	
20	500012		3	Screw	M6x12
21	500212		6	Screw	M10-1,5x40
22	904557		22	Washer	10,5x22x4
23	500029		6	Screw	M10-1,5x30 8.8
24	343490		1	Air breather	D
25	160132		1	O-ring	124, 50x3, 00 D
26	389462		2	Holder	
27	508032		10	Screw	M12-1,75x50H 8,8
28	791425		2	O-ring	174, 20x5, 70
29	791426		1	Radial lip seal	
30	343801		1	Sign plate	
31	527002		4	Drive screw	
33	162017		1	Seal ring	M30 D
34	343744		1	Magnetic plug	M30 D
35	508029		2	Screw	M10-1,5x30H 8,8
36	947687		7	Screw	M12-1,75x30 10,9
37	904703		14	Washer	13x24x4
45	904231		3	Washer	13x24x2
47	500280		8	Screw	M10x1,5x25
49	903374		6	Protective plug	
50		B	1	Hydraulic motor	
51		C	1	Hydraulic motor	


- A) See section "Frames"
 B) See section "Hydraulic propulsion and brake"
 C) See section "Hydraulic vibration"

Engine

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Engine (Page 58)	Perkins 403C-11
20				Cooling system (Page 60)	
30				Exhaust system (Page 62)	
40				Fuel system (Page 64)	
50				Air intake system (Page 66)	

Engine Perkins 403C-11

17872

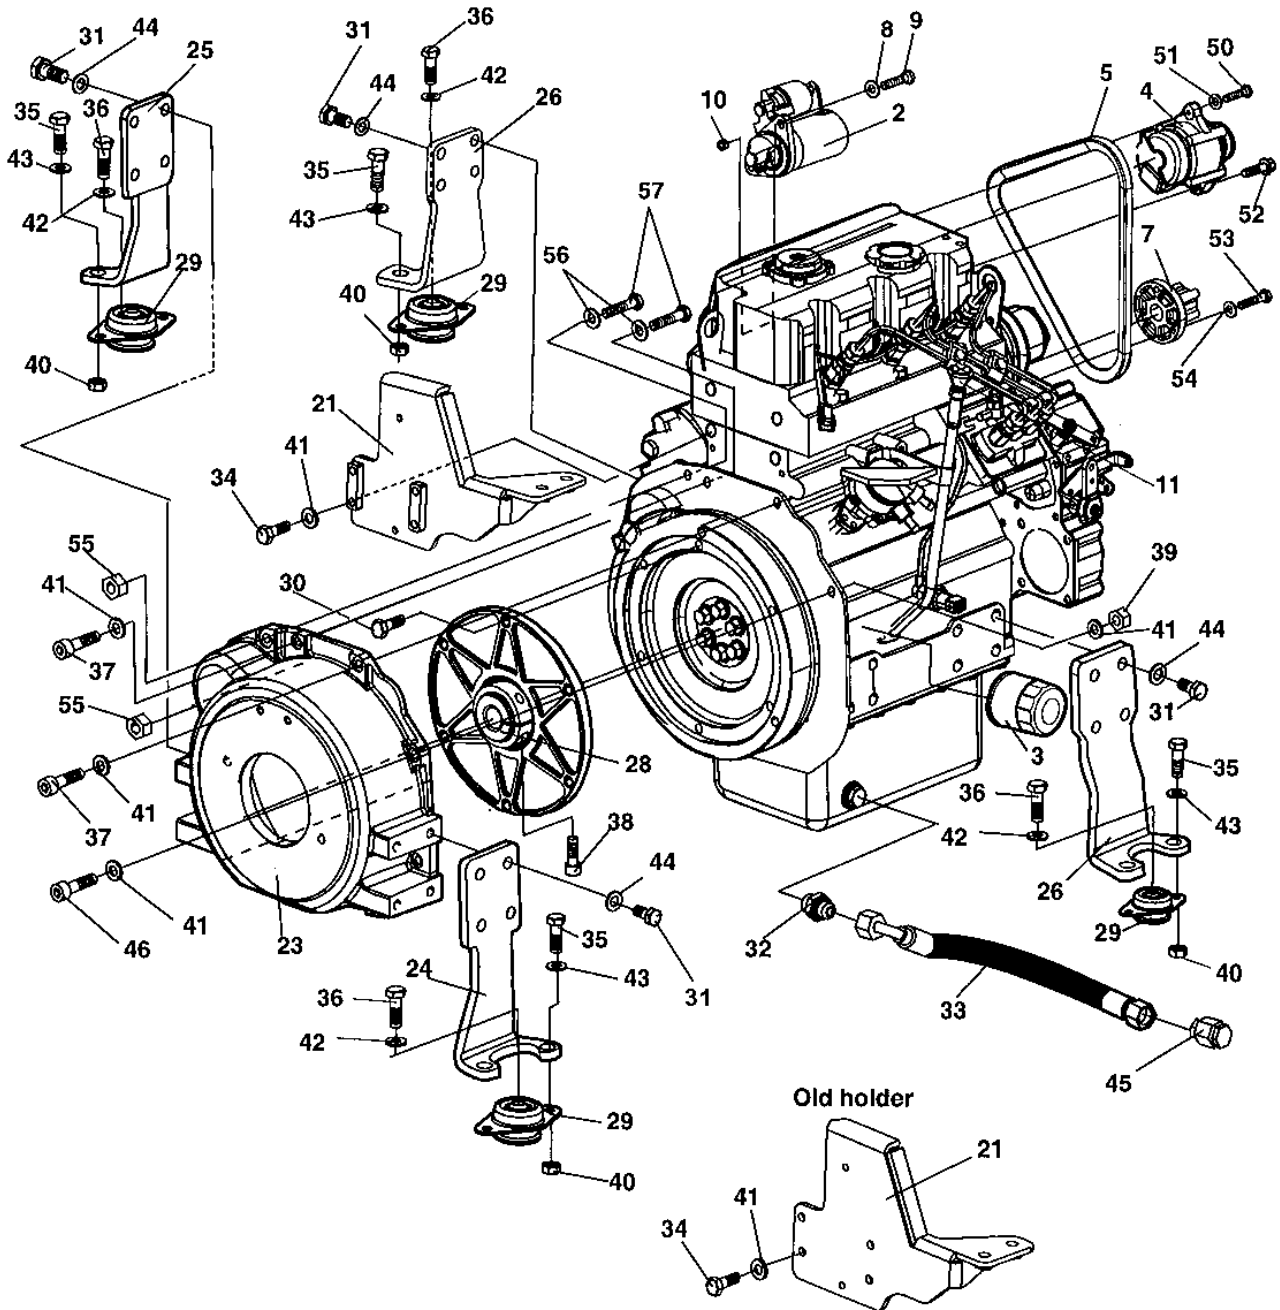

Engine Perkins 403C-11

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	386948		1	Engine, Perkins 403C-11	
	940227		1	.Water pump	C
	945123		1	..Gasket	C
	945284		1	.Watertemperature sensor	
	940228		1	.Thermostat	
	940976		1	.Gasket, oil sump	
2	940231		1	.Starter	C
3	376554		1	.Oil filter	A
4	939977		1	.Alternator	C
5	939932		1	.V-belt	A
7			1	.Fan coupling	A
8	904230		2	.Washer	
9	500161		2	.Screw	
10	570006		2	.Nut	
11	940229		1	.Oil dipstick	
12	940447		1	.Fuel solenoid	
13	945286		1	.Washer	
14	945473		1	.Lift pump	
	945629		1	.O-ring, lift pump	
21	389003		1	Holder, air cleaner	
	389003	C	1	Holder, air cleaner	
23	386949		1	Bell housing	
24	376770		1	Engine foot	
25	376771		1	Engine foot	
26	376772		2	Engine foot	
28	357002		1	Coupling	D
29	792026		4	Rubber mounts	D
30	502019		6	Screw	
31	792250		16	Screw	
32	791535		1	Connector	
33	483684		1	Hydraulic hose	
34	500053		4	Screw	
	500022		4	Screw	
35	500029	D	8	Screw	
36	500033		4	Screw	
37	508048		2	Screw	
38	508029		1	Screw	
39	570005		5	Nut	
40	586018		8	Lock nut	
41	904229		16	Washer	
42	904230		4	Washer	
43	904557		8	Washer	
44	904231		16	Washer	
45	791493		1	Steel plug threaded	
46	508048		5	Screw	
50	500047		1	Screw	
51	904640		1	Washer	
52	500506		1	Screw	
53	508019		3	Screw	
54	904229		3	Washer	
55	570006		2	Nut	
56	904230		2	Washer	
57		B	2	Screw	


B) Exist on engine

C) New design, spacer has been added. Interchangeable together with screw (pos. 34) PN 500022

D) Intended for new bracket with spacer

Cooling system

17871

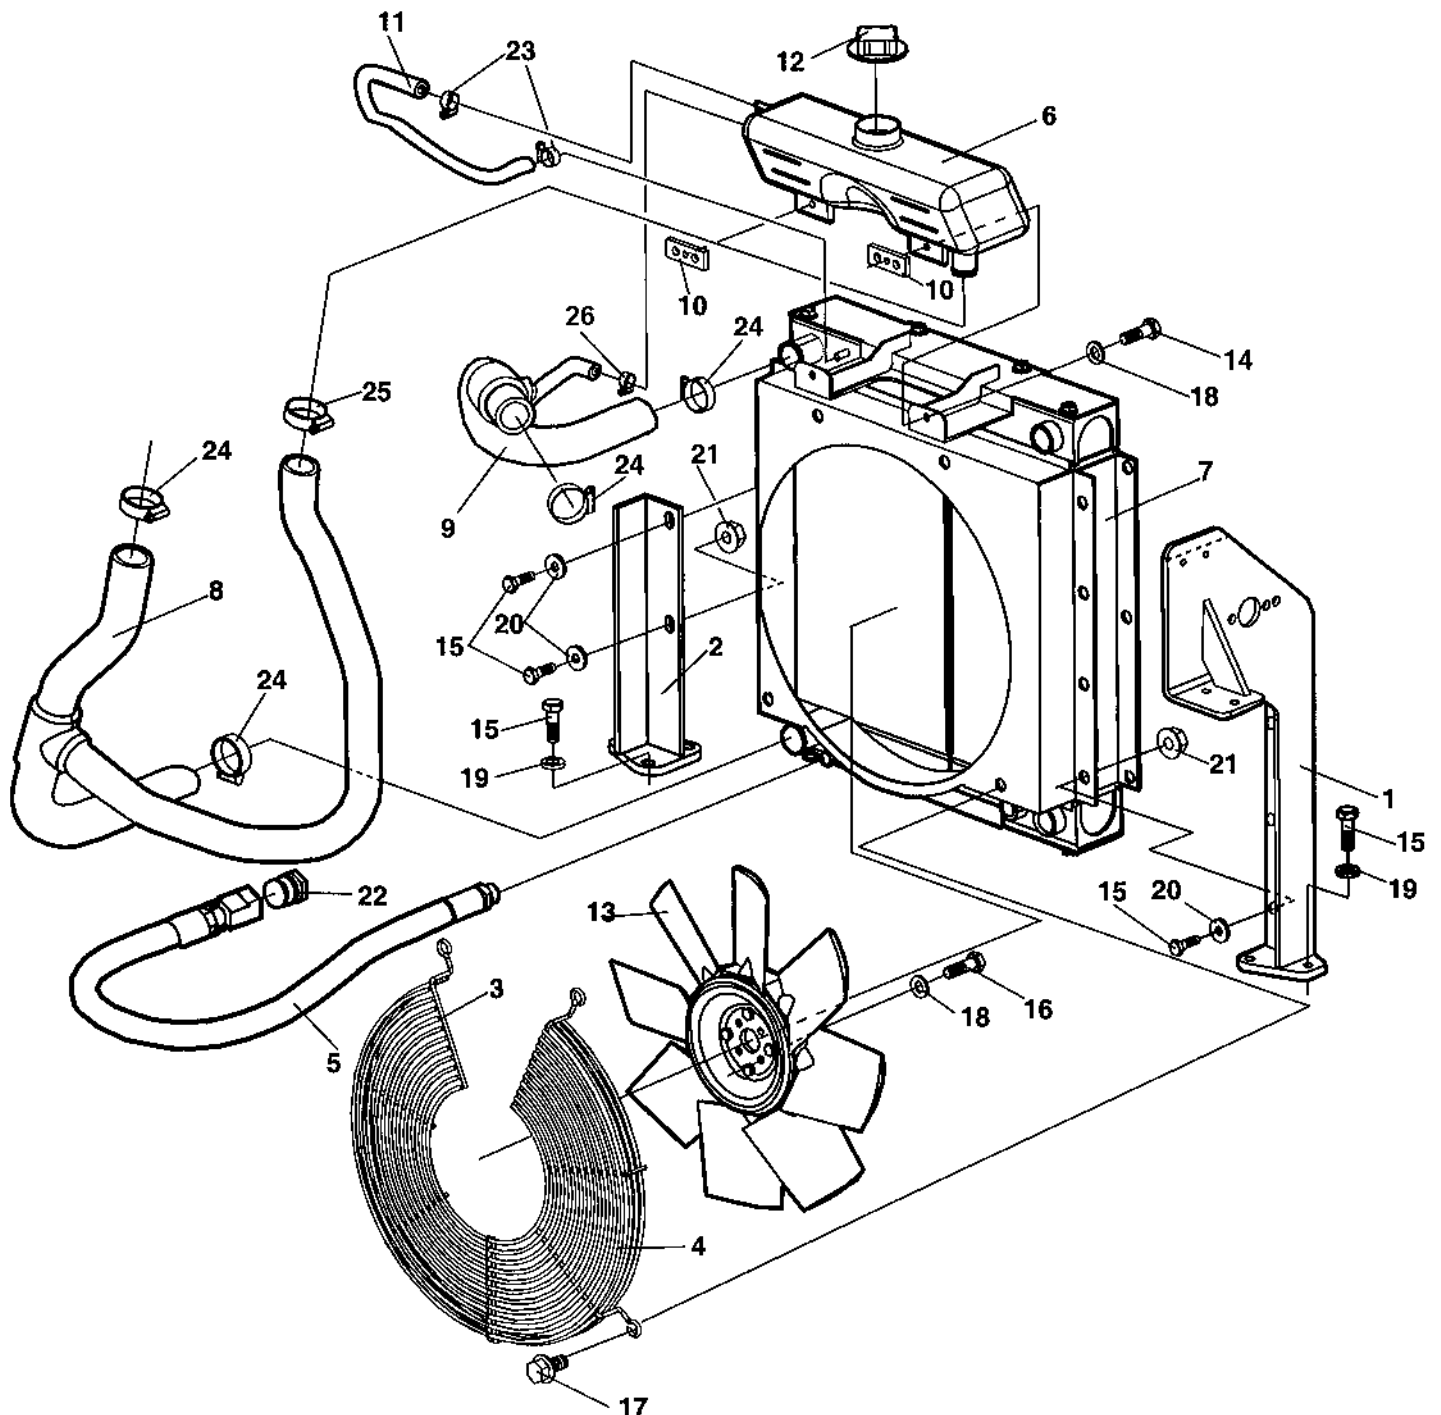

Cooling system


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387101		1	Cooler bracket	
2	387287		1	Cooler bracket	
3	386963		1	Fan guard	
4	387205		1	Fan guard	
5	791780		1	Drainage hose	
6	386893		1	Expansion reservoir	
7	395227	B	1	Radiator	
8	387099		1	Coolant hose	
9	387100		1	Coolant hose	
10	387428		2	Plate	
11	371785	A	1	Rubber hose	
12	903714		1	Cap	
13	389142		1	Fan	
14	500040		2	Screw	M6-1x20 8,8
15	500021		11	Screw	M8-1,25x25 8.8
16	500040		4	Screw	M6-1x20 8,8
17	901832		4	Screw	M8x16
18	904228		6	Washer	
19	904556		6	Washer	8,4x16x3,0
20	904640		5	Washer	8,4x22x3
21	902286		5	Lock nut	
22	791493		1	Steel plug threaded	
23	313108		2	Hose clamp	
24	313035		4	Hose clamp	
25	313035		1	Hose clamp	
26	313001		1	Hose clamp	

A) L = 240 mm

B) Replaces earlier used 386950

Exhaust system

17873

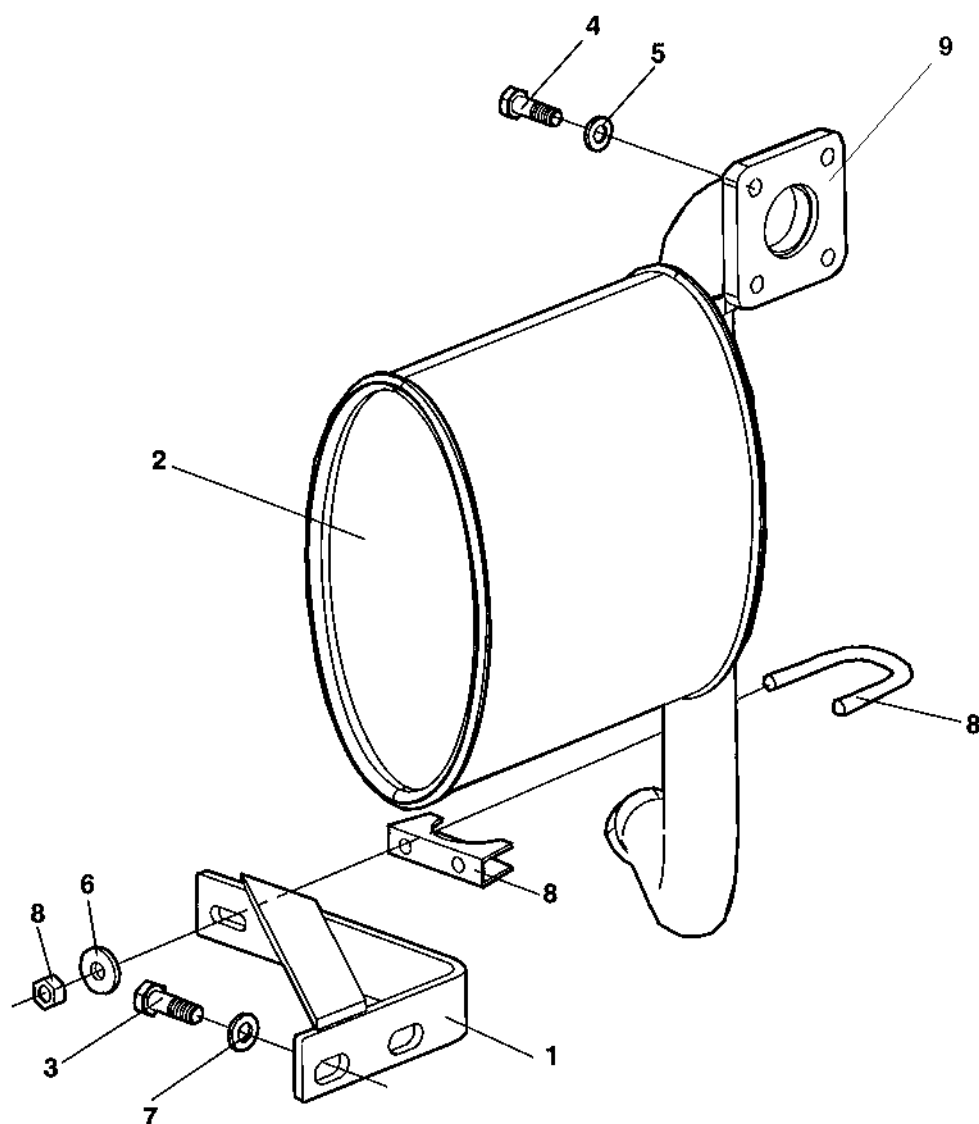


Exhaust system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387201		1	Bracket	
2	387097		1	Muffler	
3	791483		2	Screw	M12-1,25x25H 8.8
4	500021		4	Screw	M8-1,25x25 8.8
5	904229		4	Washer	
6	904640		2	Washer	8,4x22x3
7	904703		2	Washer	13x24x4
8	927568		1	Clamp	
9	945878	1	1	Gasket	

1) Delivered with engine.

Fuel system

17875

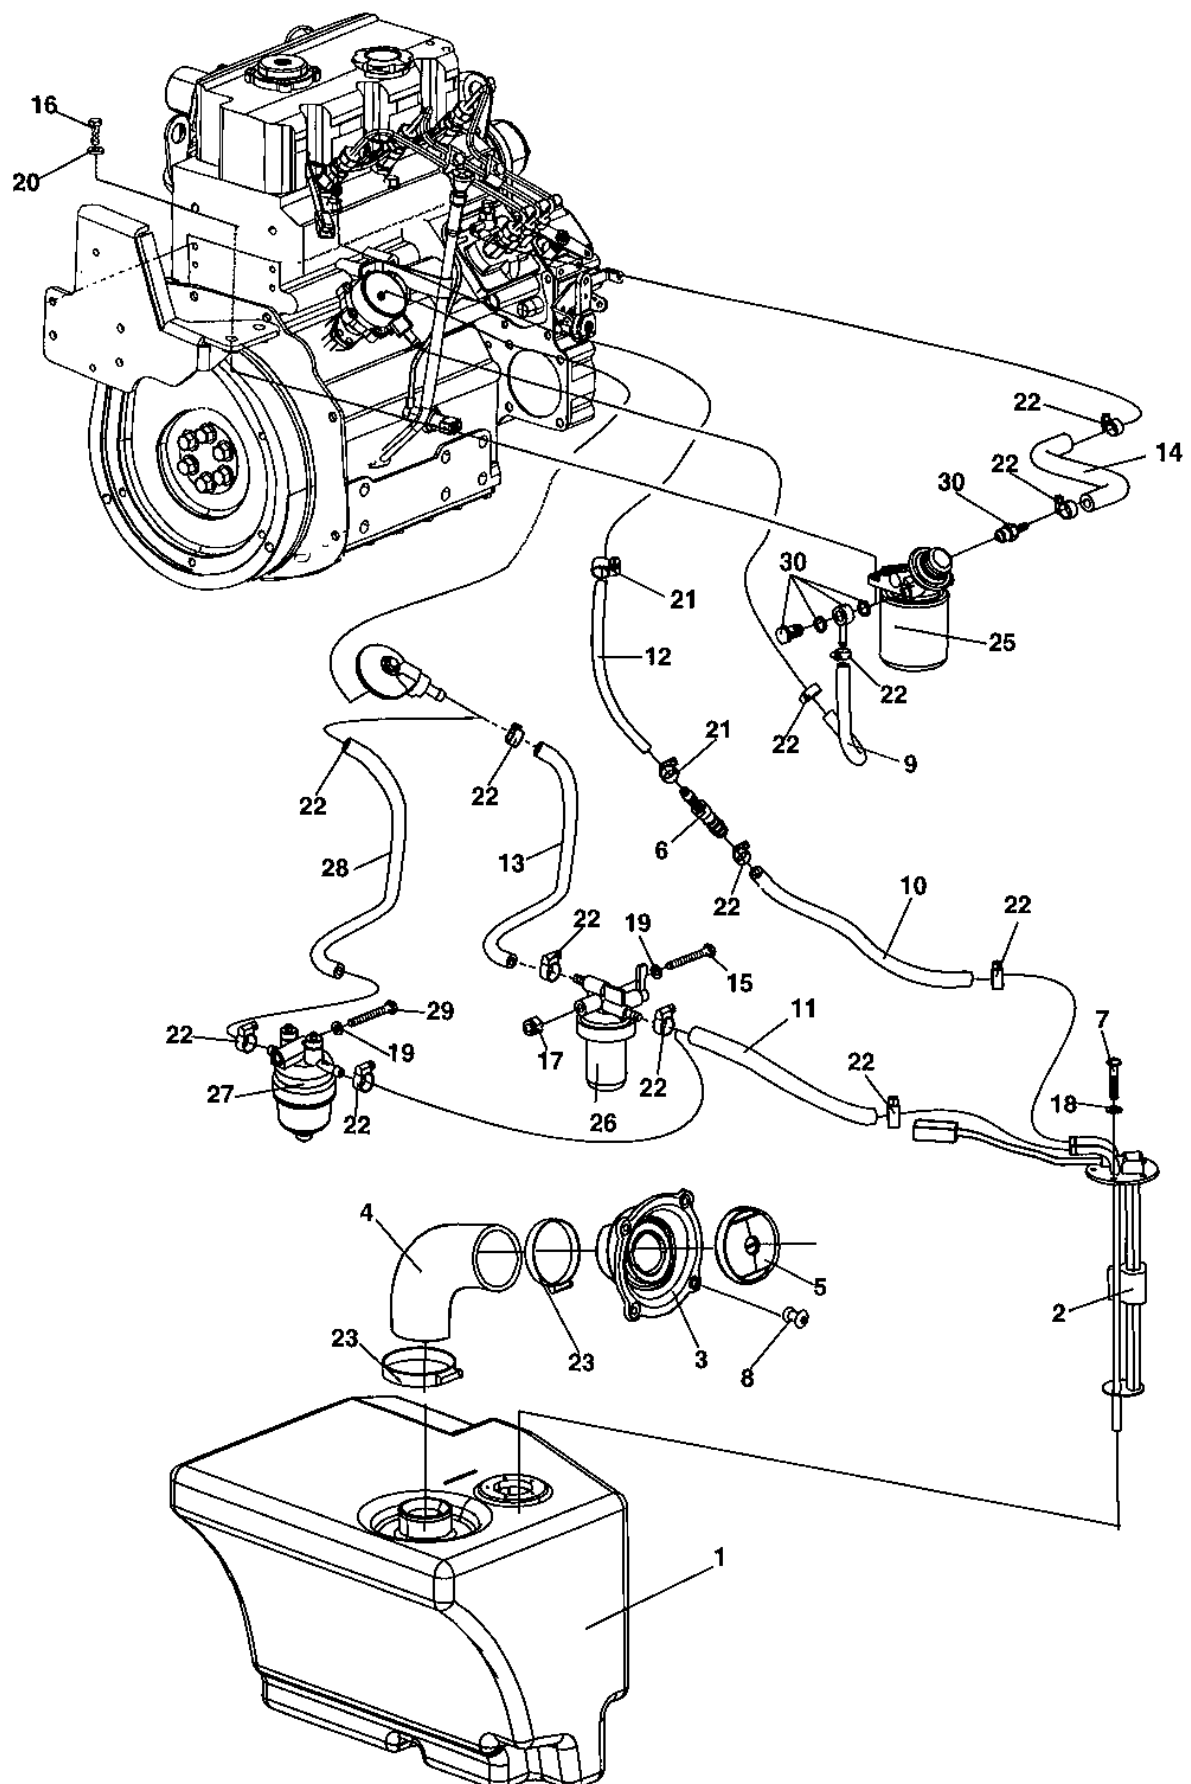


Fuel system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387279		1	Fuel tank	
2	387552		1	Level gauge	
	945777		1	.Gasket	
3	387682		1	Filler neck	
4	387695		1	Fuel hose	
5	394253		1	Fuel cap	D
	945753		1	.Key	2pcs "921"
6	791774		1	Hose connection	
7	903236		5	Screw, Thread rolling	K40x20
8	791754		4	Blind rivet	
9	904984	A	1	Fuel hose	D
10	904984	B	1	Fuel hose	D
11	904984	B	1	Fuel hose	D
12	791422	C	1	Hose	
13	904984	D	1	Fuel hose	D
14	904984	E	1	Fuel hose	D
15	500090	F	1	Screw	M8x75
16	500029		2	Screw	M10-1,5x30 8.8
17	586003		1	Lock nut	M8
18	904698		5	Washer	
19	904229		1	Washer	
20	904557		2	Washer	10,5x22x4
21	313108		2	Hose clamp	
22	313108		10	Hose clamp	
23	313023		2	Hose clamp	
25	376555		1	Fuel filter	A
26	940201	F	1	Water separator	
	940202		1	.Filter element	
	940203		1	.O-ring	
27	940894	N	1	Water separator, cpl	
	940922		1	.Filter element	
	940203		1	.O-ring	
28	904984	K	1	Fuel hose	D
29	500068	P	1	Screw	M08x65
30		N		Existing on engine	

- A) L = 465 mm
- B) L = 395 mm
- C) L = 350 mm
- D) L = 260 mm in old version of engine
- E) L = 200 mm
- F) With shut-off valve. Exist on old version of engine
- K) L = 290 mm in new version of engine
- N) In new version of engine, interchangeable together with posison 28 and 29
- P) Exist on new version of engine

Air intake system

17967

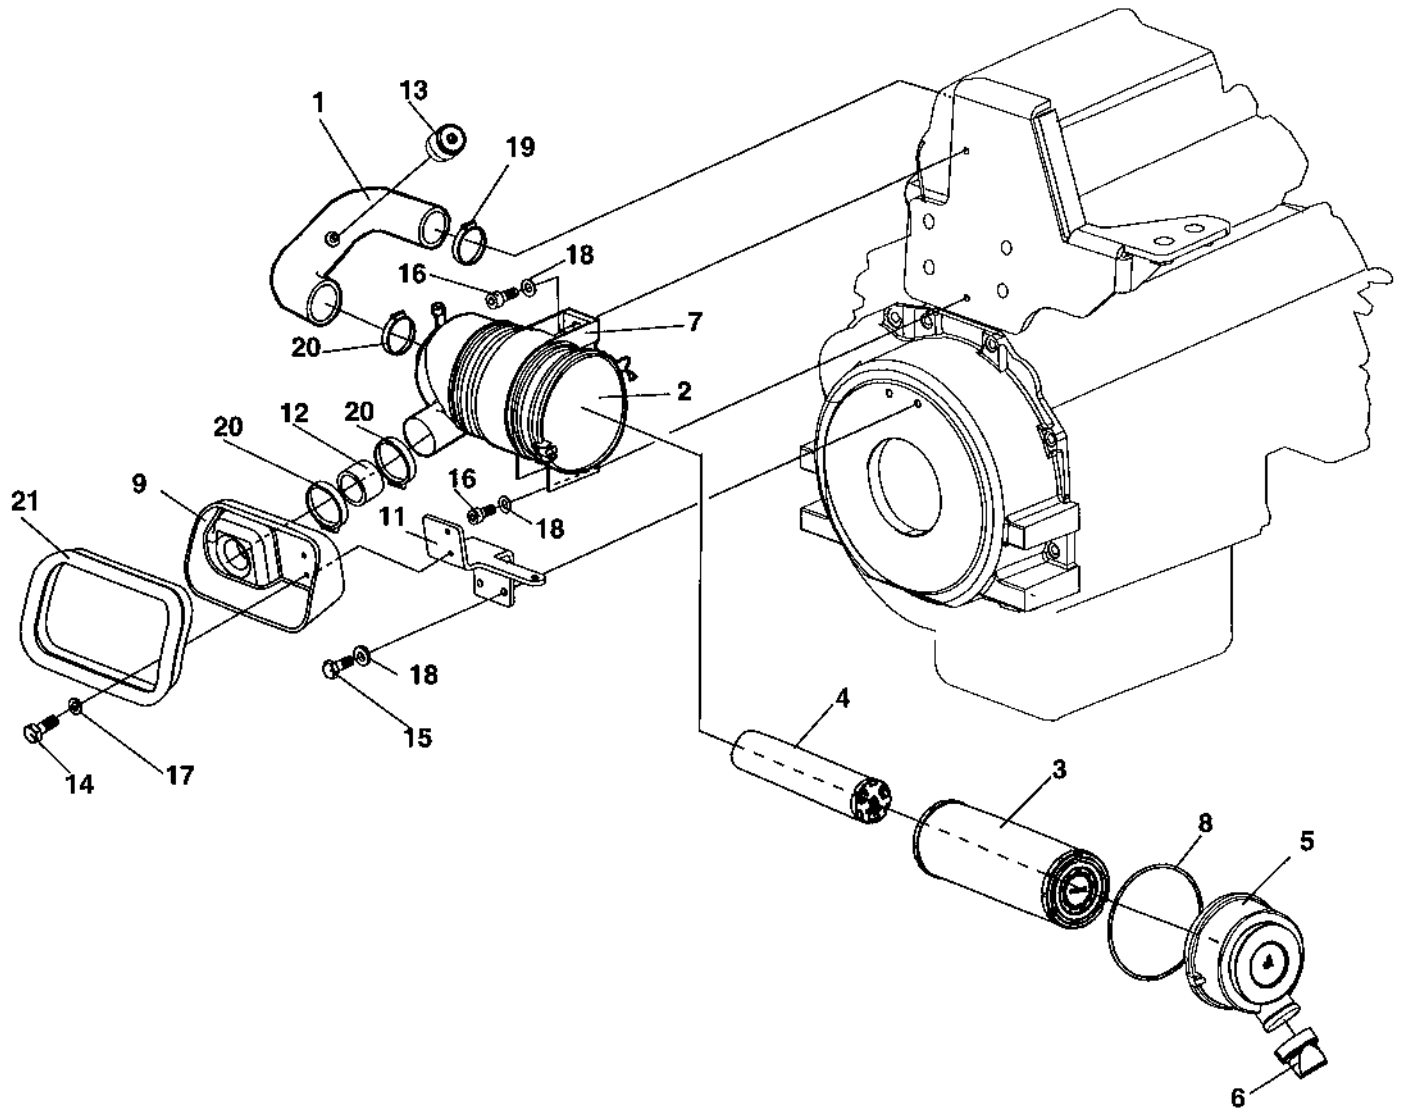

Air intake system

Ref. No.	Part No.	Rem.	Qty	Description		Code
1	389019		1	Air inlet hose		
2	386951		1	Air filter		
3	939802		1	.Air filter element	Main	A
4	939803		1	.Air filter element	Safety	A
5	939804		1	.Dust cap		
6	939805		1	.Vacuator cap		
7	939806		1	.Plastic mounting band		
8	939807		1	.O-ring		
9	387118		1	Box		
11	389005		1	Bracket		
12	387200		1	Hose		
13	389036		1	Mechanical indicator		
14	500013		2	Screw	M6-1x16 8,8	
15	500053		2	Screw	M8-1,25x20 8.8	
16	508092		2	Screw	M8-1,25x20H 8,8	
17	904228		2	Washer		
18	904229		4	Washer		
19	313010		1	Hose clamp		
20	313010		3	Hose clamp		
21	288129	A	N	Edge trim		


A) L = 0,66 m

Hydraulic system

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Hydraulic propulsion and brake system (Page 70)	
20				Hydraulic vibration (Page 74)	
30				Hydraulic steering (Page 78)	

Hydraulic propulsion and brake system

18117

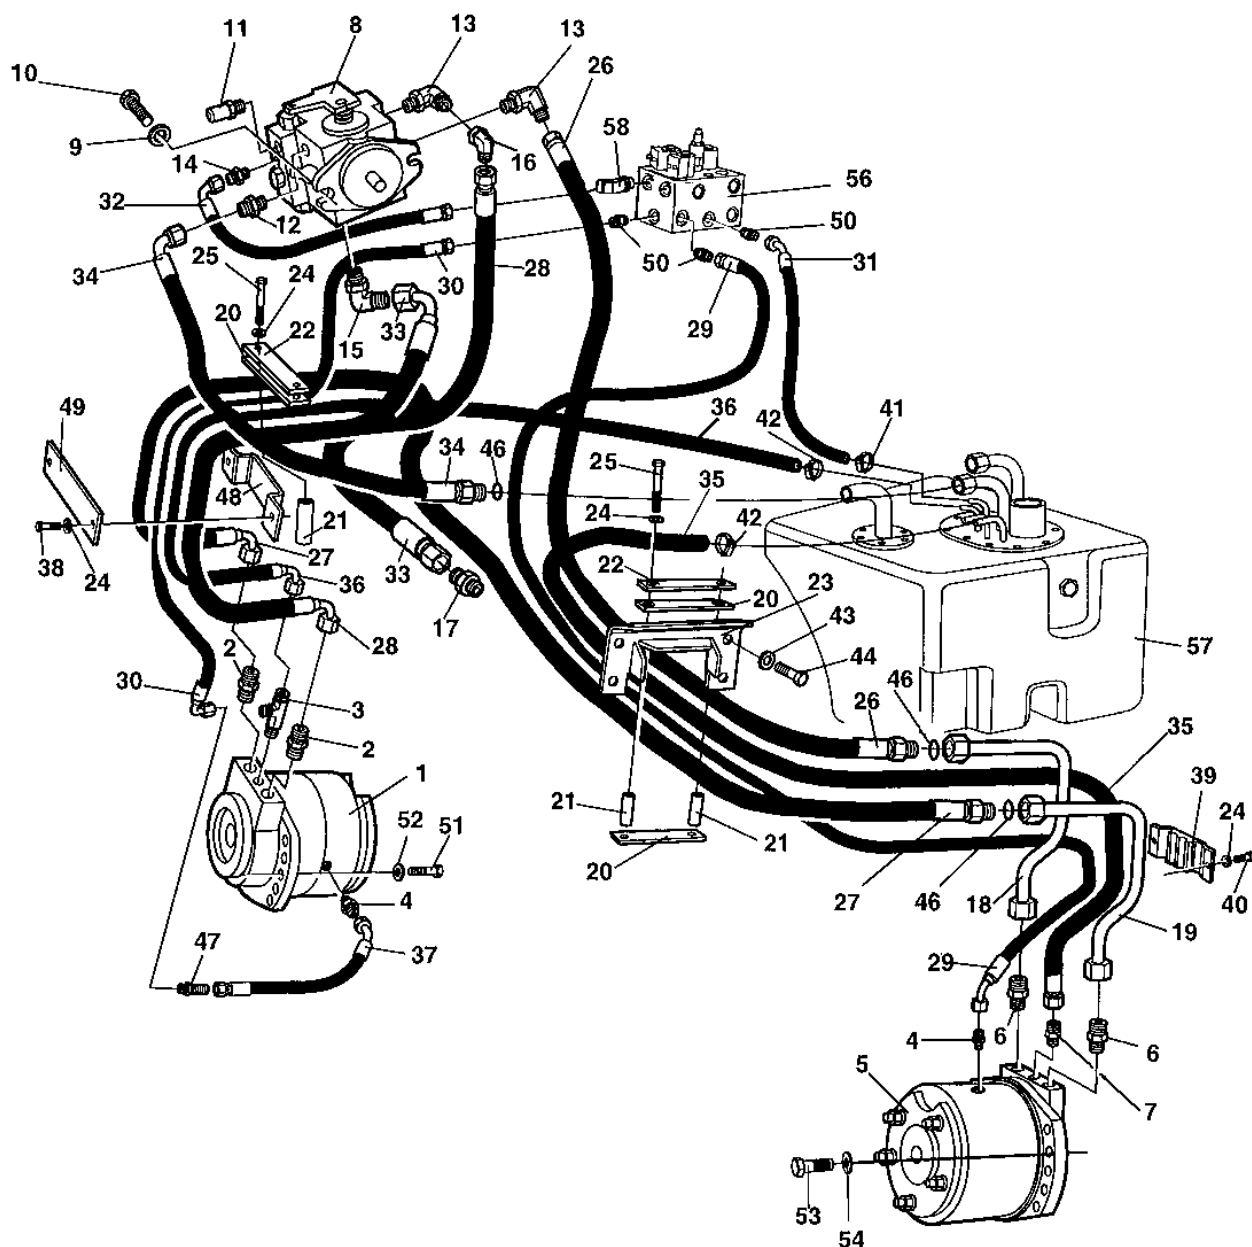

Hydraulic propulsion and brake system

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	389017		1	Hydraulic motor front	
2	791410		2	Straight o-ring connector	
3	791746		1	Tee-connector	
4	791744		2	Straight connector	
5	387890		1	Hydraulic motor rear	
6	791743		2	Straight connector orfs	
7	791409		1	Straight connector orfs	
8	387269		1	Hydraulic pump	
	940613		1	.Seal kit	
9	904703		2	Washer	13x24x4
10	500037		2	Screw	M12-1,75x35 8,8
11	901157		1	Measuring nipple	D
12	791412		1	Straight o-ring connector	
13	791599		2	Elbow 90	
14	791537		1	Straight connector	
15	791549		1	Elbow adapter 90	
16	791745		1	Elbow 90, O-ring with swivel	
17	791539		1	Straight connector	
18	387914		1	Pipe	
19	387915		1	Pipe	
20	387678		2	Rubber part	
21	387677		4	Spacer sleeve	
22	387676		1	Hose bracket	
23	389556		1	Rubber part	
24	904229		6	Washer	
25	500068		2	Screw	M08x65
26	483665		1	Hydraulic hose	
27	483852		1	Hydraulic hose	
28	483853		1	Hydraulic hose	
29	483689		1	Hydraulic hose	
30	483654		1	Hydraulic hose	
31	389400		1	Hydraulic hose	
32	483652		1	Hydraulic hose	
33	483879		1	Hydraulic hose	
34	483661		1	Hydraulic hose	
35	389409		1	Hydraulic hose	
36	389410		1	Hydraulic hose	
37	483652		1	Hydraulic hose	
38	500022		2	Screw	M8-1,25x30 8,8
39	388960		1	Hose clamp	
40	500053		2	Screw	M8-1,25x20 8.8
41	313108		1	Hose clamp	
42	313001		2	Hose clamp	
43	904640		4	Washer	8,4x22x3
44	500019		4	Screw	
46	904009		3	O-ring	D
47	792170		1	Bulkhead union	
48	378024		1	Hose clamp	
49	378025		1	Hose clamp	
50	791538		3	Straight connector	
51		B	10	Screw	
52		B	10	Washer	
53		C	10	Screw	
54		C	10	Washer	
56		A	1	Combination valve	
57		A	1	Hydraulic oil tank	


A) See section "Hydraulic vibration"

B) See section "Drum single arm"

C) See section "Drum"

Hydraulic propulsion and brake system


18117

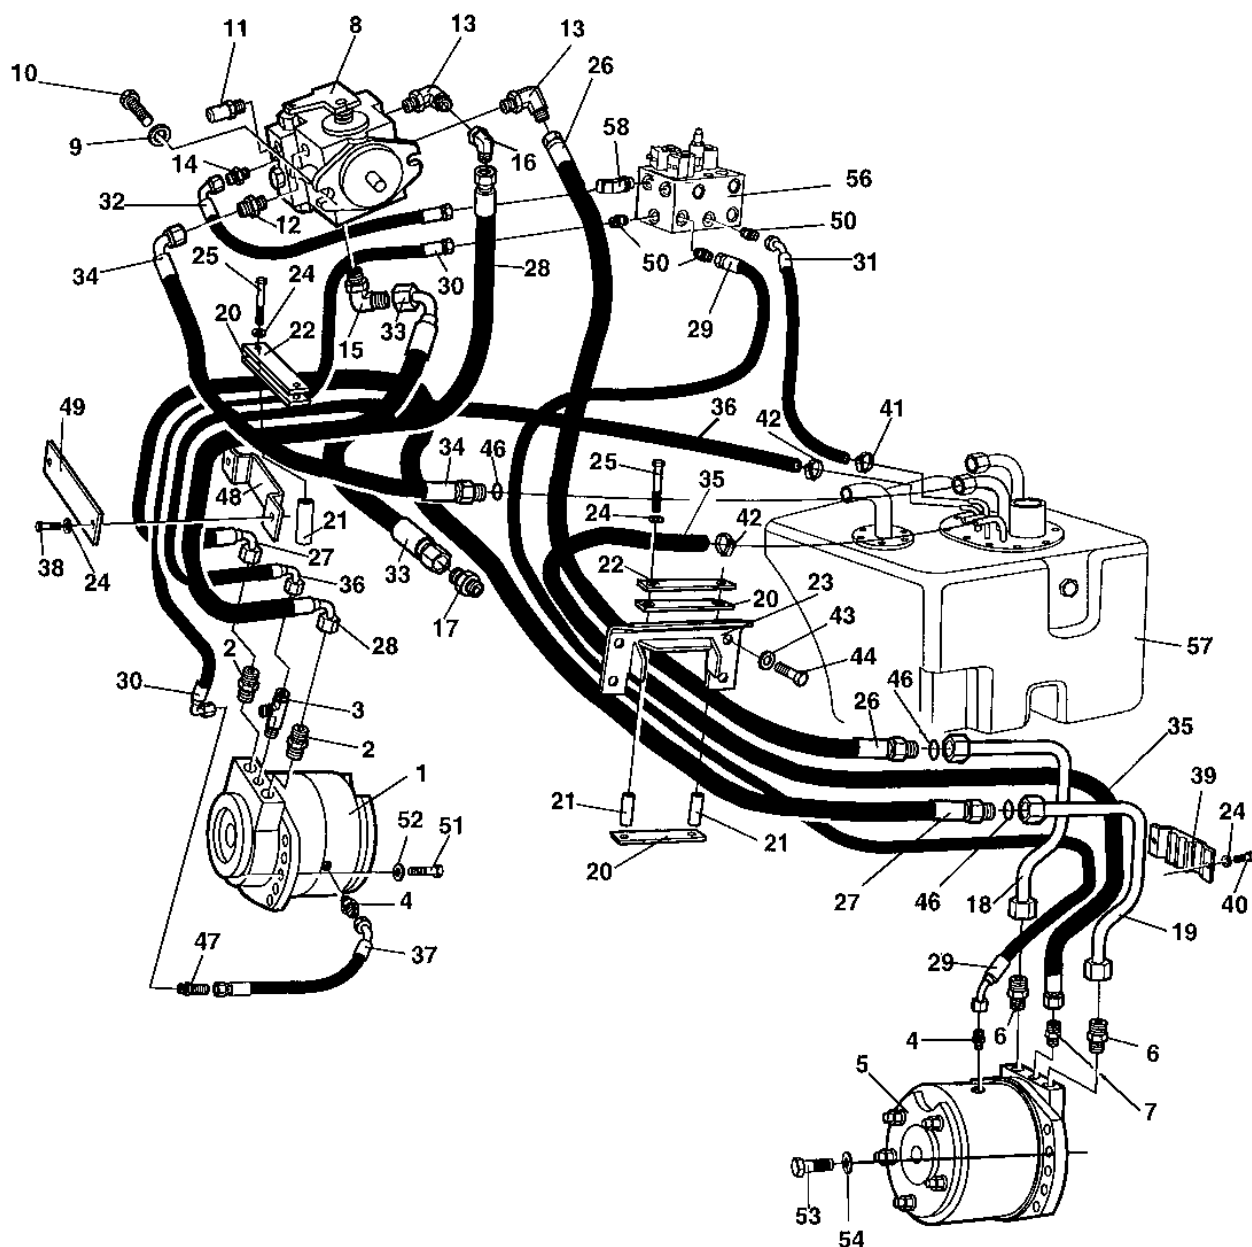

Hydraulic propulsion and brake system

Ref. No.	Part No.	Rem.	Qty	Description	Code
58	791543	E	1	Elbow 45 From 89530758	
59	390176		1	Adapter	


E) Replace one adapter PN 791538

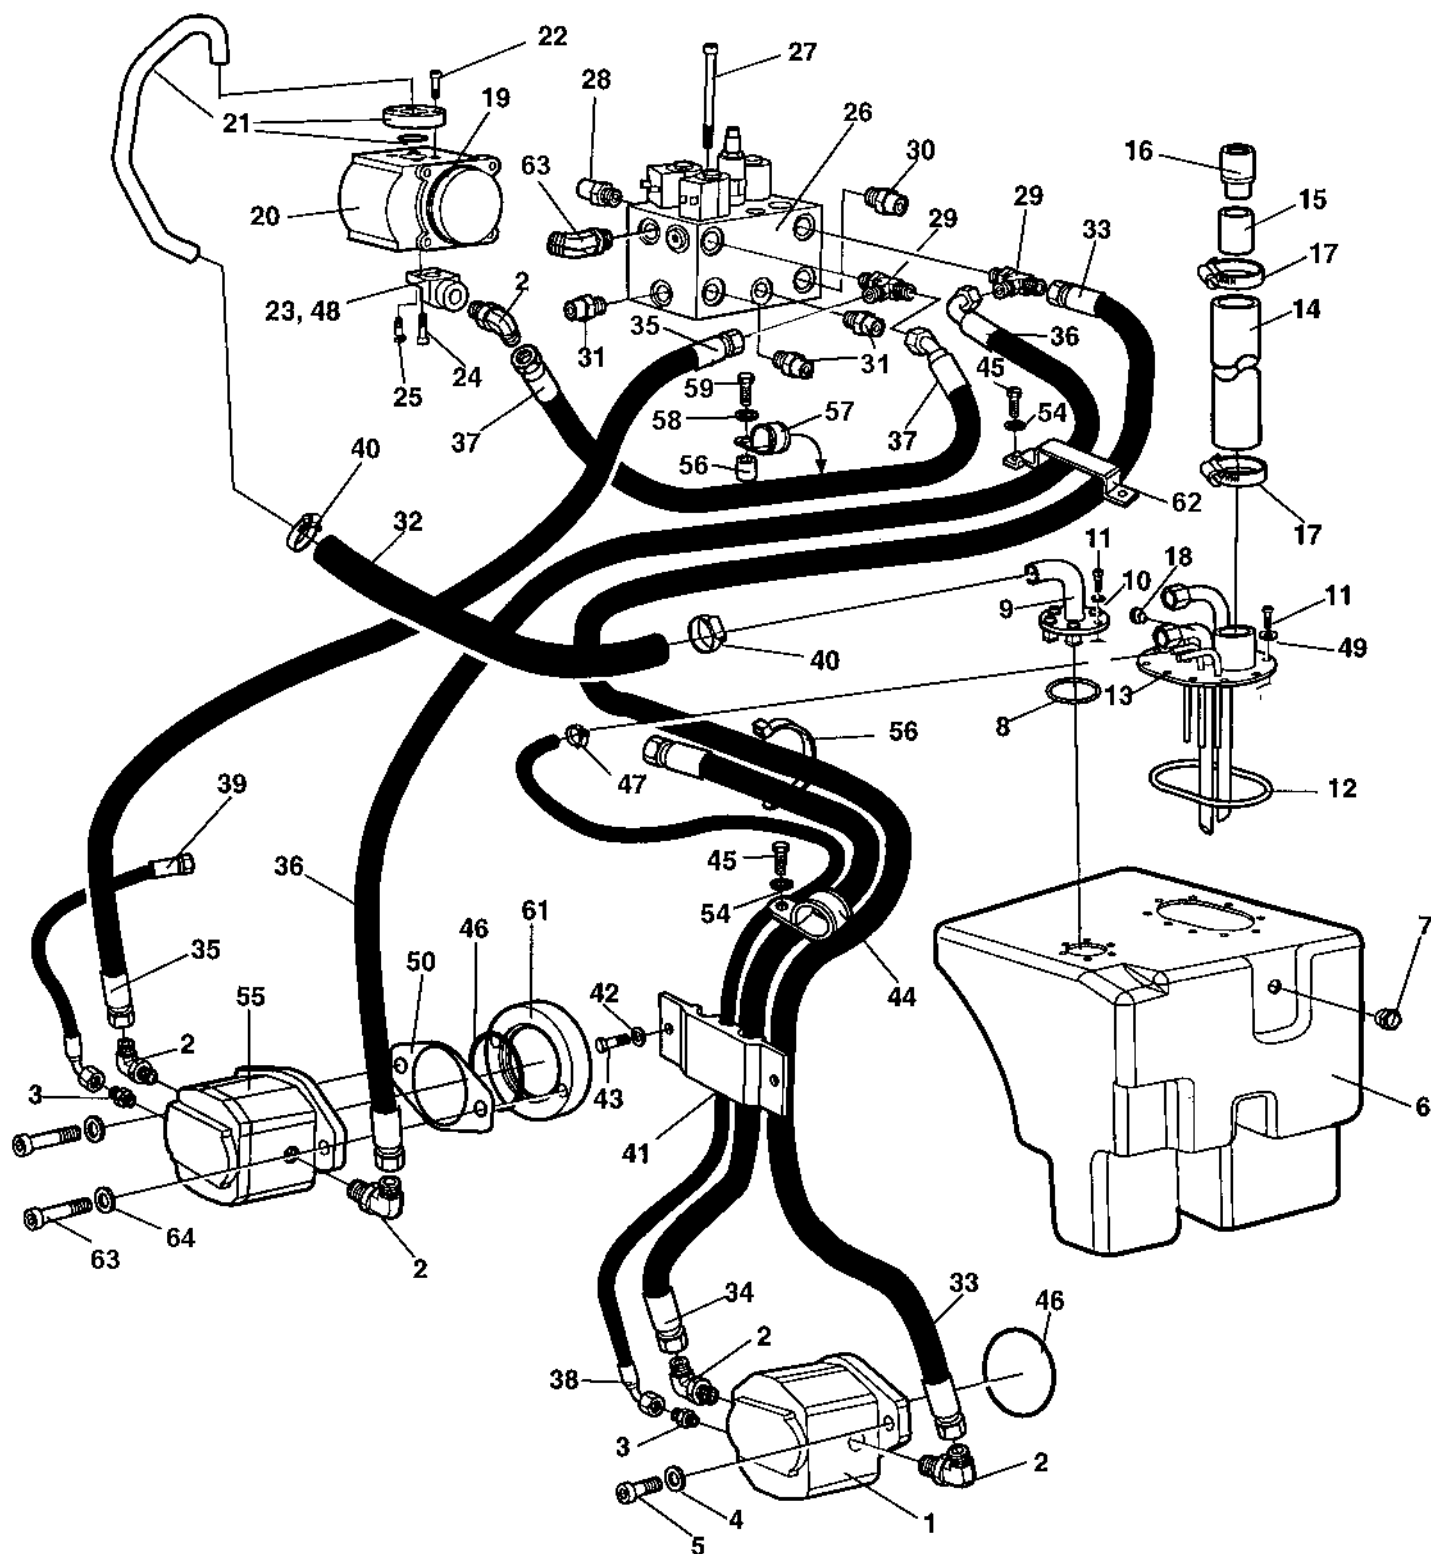

Hydraulic vibration


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387272		1	Hydraulic motor Up to 89531931	
	945312		1	Seal kit Up to 89531931	
	390316		1	Hydraulic motor From 89531932	
	945340		2	Seal kit From 89531932	
2	791699		5	Elbow 90	
3	791541		2	Straight connector	
4	904557		2	Washer	10,5x22x4
5	508029		2	Screw	M10-1,5x30H 8,8
6	387278		1	Hydraulic oil tank	
7	791395		1	Sight plug	
8	791794		1	O-ring	
9	387758		1	Suction pipe	
10	904228		6	Washer	
11	508002		16	Screw	
12	792070		1	O-ring	
13	387713		1	Return filler pipe	
14	205067		1	Rubber hose	
15	357139		1	Connector	
16	357138		1	Ventilating filter	A
17	313008		2	Hose clamp	D
18	389196		1	Protective plug	
19	160101		1	O-ring	
20	387271		1	Hydraulic pump	
21	387704		1	Suction pipe	
			1	.Pipe	
			1	.Flange	
			1	.O-ring	
22	508012		4	Screw	
23	791417		1	Flange fitting	
24	791322		2	Screw	
25	508025		2	Screw	M6x20
26	387276		1	Combination valve	
27	508094		2	Screw	
28	901157		1	Measuring nipple	D
29	791700		2	Tee-connector	
30	791412		1	Straight o-ring connector	
31			4	Straight connector	
32	791941		1	Hydraulic hose	
33	483668		1	Hydraulic hose	
34	483649		1	Hydraulic hose	
35	483854		1	Hydraulic hose	
36	483878		1	Hydraulic hose	
37	483651		1	Hydraulic hose	
38	389401		1	Hydraulic hose	
39	483855		1	Hydraulic hose	
40	313035		2	Hose clamp	
41	388653		1	Hose clamp	
42	904229		2	Washer	
43	500053		2	Screw	M8-1,25x20 8.8
44	283711		2	Hose clamp	
45	508092		2	Screw	M8-1,25x20H 8,8
46		A	1	O-ring From 89530800	
47	313108		1	Hose clamp	
48	791778		1	O-ring	
49	904735		10	Washer	
50		A	1	Gasket	
54	904556		2	Washer	8,4x16x3,0
55		A	1	Hydraulic motor	

A) See section "drum, single arm"

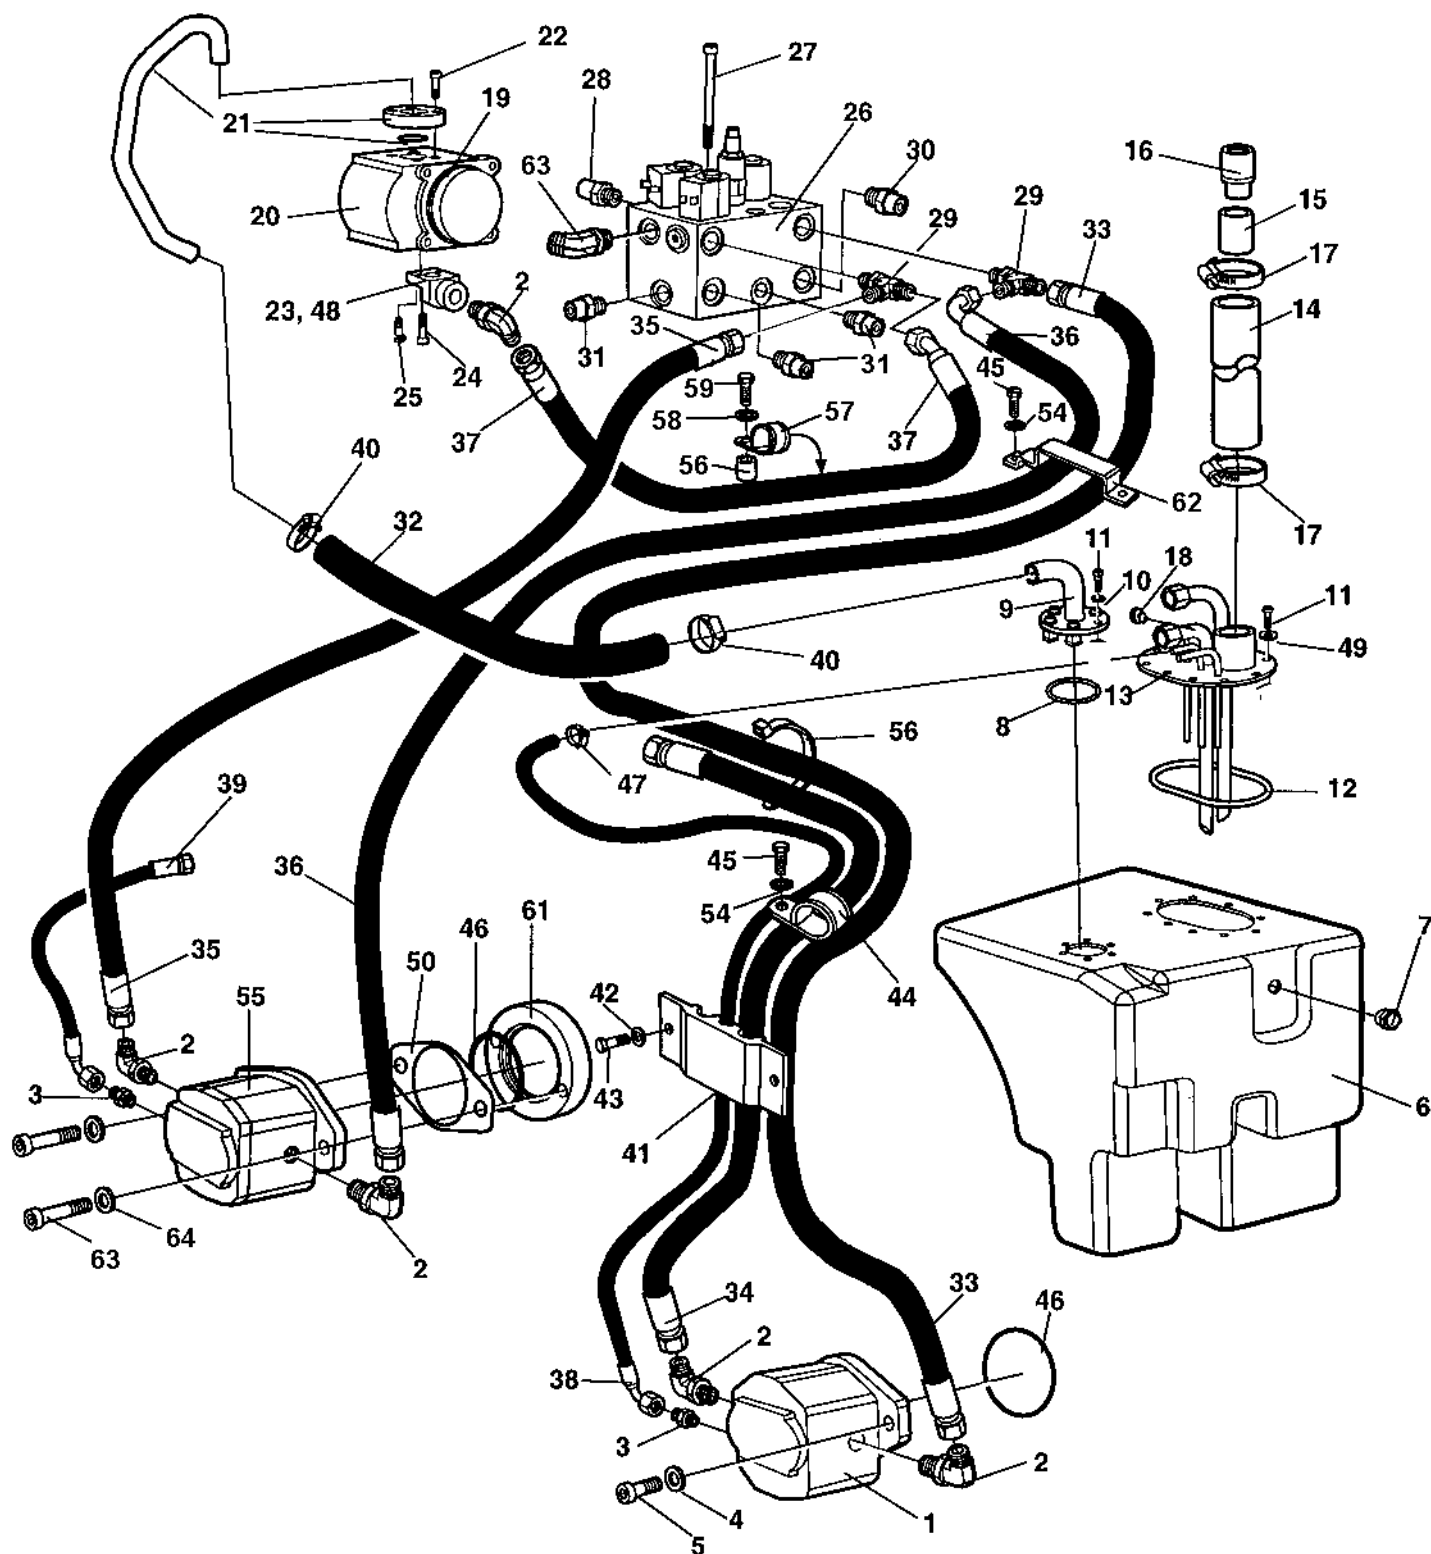

Hydraulic vibration

Ref. No.	Part No.	Rem.	Qty	Description	Code
56	359434		1	Spacer sleeve	
57	921104		1	Clamp	
58	904230		1	Washer	10,5X22X2
59	500192		1	Screw	M10x80
60			1	Strap	
61		A	1	Adapter From 89530800	
62	379668		1	Hose clamp	
	359606	B	1	Rubber protection	
63	508029		2	Screw Up to 8953879	M10-1,5x30H 8,8
		A	2	Screw From 89530800	
64		A	2	Washer	
A)	See section "drum, single arm"				
B)	Not illustrated				

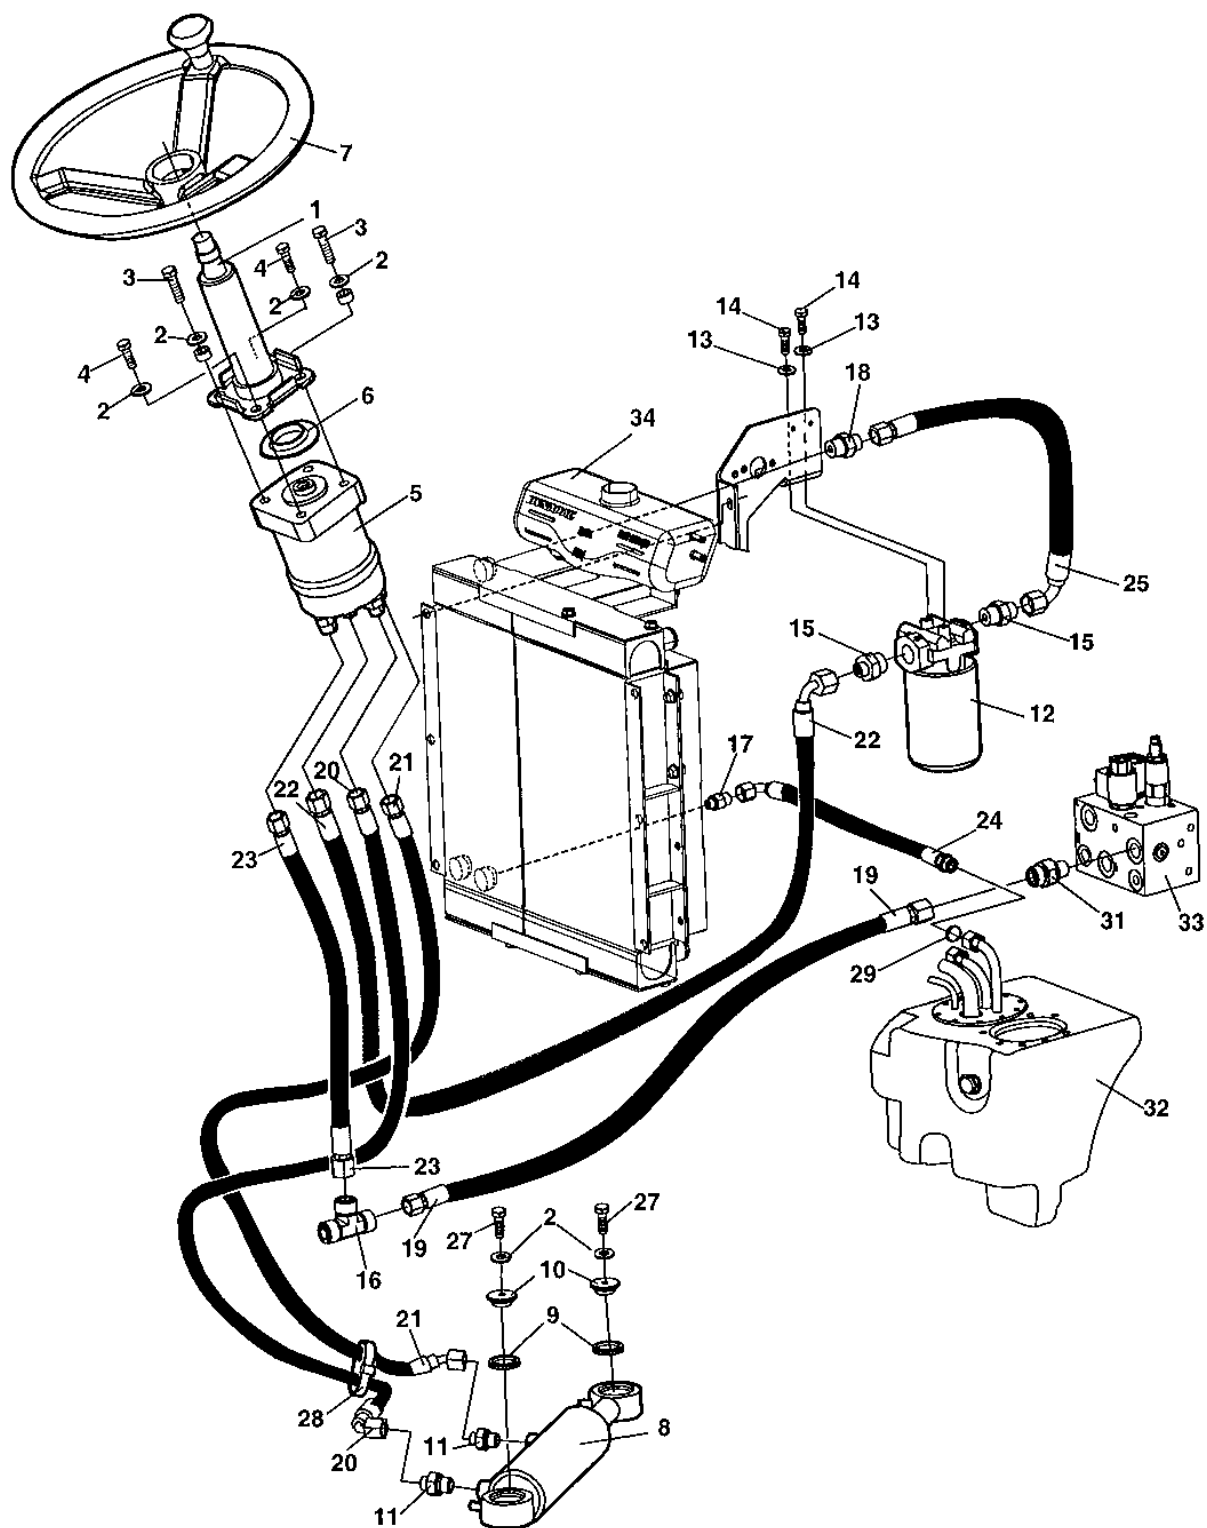

Hydraulic steering

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902123		1	Steering column	
2	904230		6	Washer	10,5X22X2
3	500031		2	Screw	M10-1,5x40 8,8
4	500048		2	Screw	M10-1,5x20 8.8
5	387274		1	Steering valve	
6	928830		1	Rubber washer	
7	372964		1	Steering wheel, cpl	
	935614		1	.Turning knob	D
	935613		1	.Cover	
8	387275		1	Hydraulic cylinder	
	945526		2	.Bearing	
9	791565		2	Sealing	
10	376861		2	Washer	
11	791542		2	Straight connector	
12	387277		1	Hydraulic oil filter, cpl	
	376636		1	.Cleaning filter element	Maximum 50 hours use
	376637	C	1	Filter element	A
13	904229		2	Washer	
14	500053		2	Screw	M8-1,25x20 8.8
15	791408		2	Straight o-ring connector	
16	791701		1	Tee-connector	
17	791540		1	Straight connector	
18	791410		1	Straight o-ring connector	
19	483653		1	Hydraulic hose	
20	483654		1	Hydraulic hose	
21	483655		1	Hydraulic hose	
22	483656		1	Hydraulic hose	
23	483657		1	Hydraulic hose	
24	483696		1	Hydraulic hose	
25	483662		1	Hydraulic hose	
26	355869		2	Spacer sleeve	
27	947684		2	Screw	
28	313102		1	Cable ties	
29	904009		1	O-ring	D
31	791412		1	Straight o-ring connector	
32		A	1	Hydraulic tank	
33		A	1	Combination valve	
34		B	1	Radiator	


A) See section " Hydraulic vibration"

B) See section " Cooling system "

C) Spare part for ordinary service

Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Electrical equipment (Page 82)	
20				Control panel, relays (Page 84)	
50				Driving lights (Page 86)	Option
60				Working lights (Page 88)	Option
70				Rotating beacon with Rops (Page 90)	Option
80				Back-up alarm (Page 92)	Option

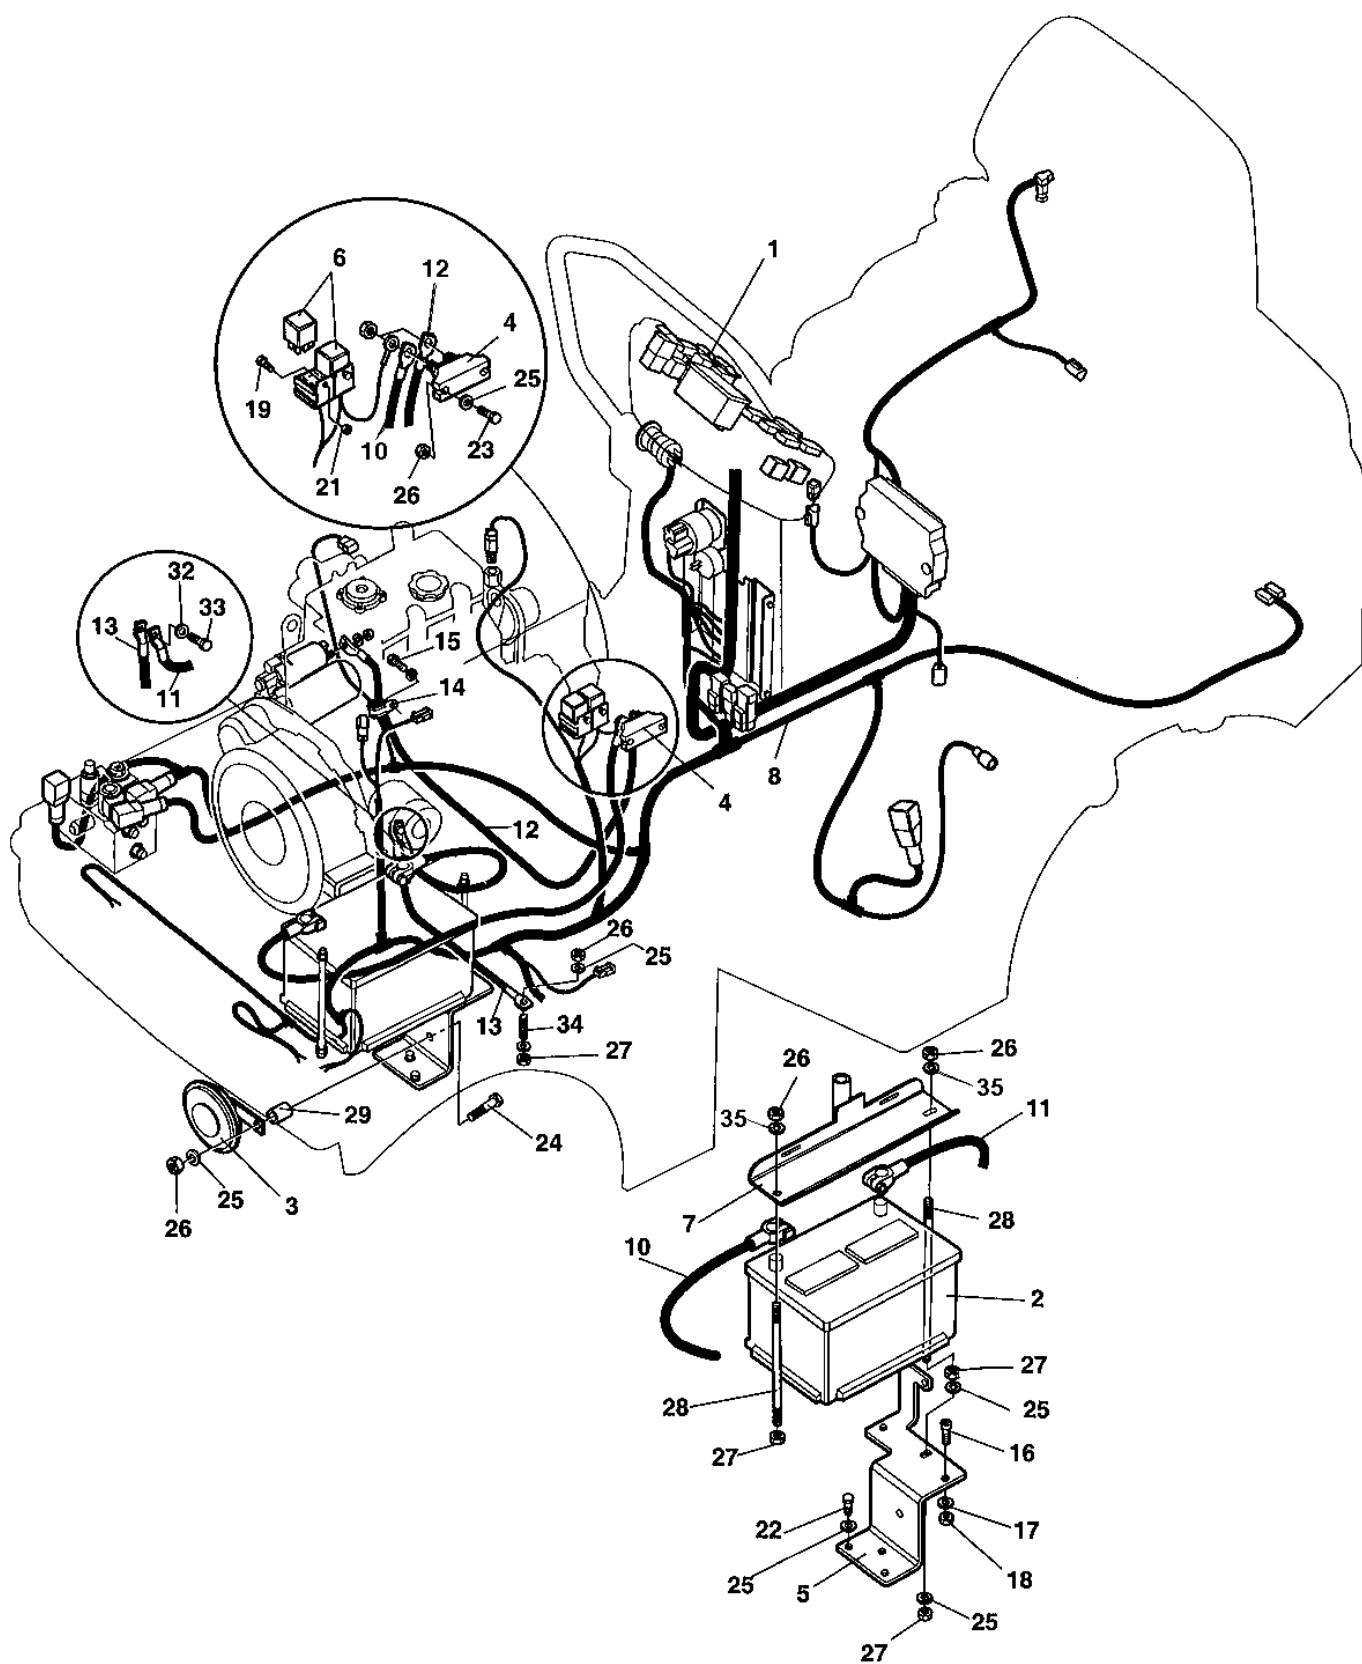


Electrical equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Control panel	
2	791502		1	Battery	
3	999027		1	Horn	D
4	377058	A	1	Connection block	
5	387284		1	Battery shelf	
6	903956		2	Relay	D
7	388721		1	Battery holder	
8	388009		1	Cable harness	
10	792019		1	Battery cable	
11	792020		1	Battery cable	
12	377063		1	Connection cable, coarse	
13	791639		1	Connection cable, coarse	
14	921050		1	Clamp	
15	508092		1	Screw	M8-1,25x20H 8,8
16	508041		2	Screw	M4x12H
17	904698		2	Washer	
18	923976		2	Nut	
19	500006		2	Screw	M5x16
21	586001		2	Lock nut	M5
22	500053		3	Screw	M8-1,25x20 8.8
23	500021		2	Screw	M8-1,25x25 8.8
24	500024		1	Screw	M8x45
25	904229		11	Washer	
26	586003		6	Lock nut	M8
27	570005		4	Nut	M8
28	791550		2	Threaded stud	
29	355704		1	Spacer sleeve	
30	904228		1	Washer	
31	570004		1	Nut	M6
32	904231		1	Washer	13x24x2
33	791483		1	Screw	M12-1,25x25H 8.8
34	903768		1	Threaded stud	
35	904556		2	Washer	8,4x16x3,0

A) Exist in machines without battery disconnecter.

Control panel, relays


17978-1

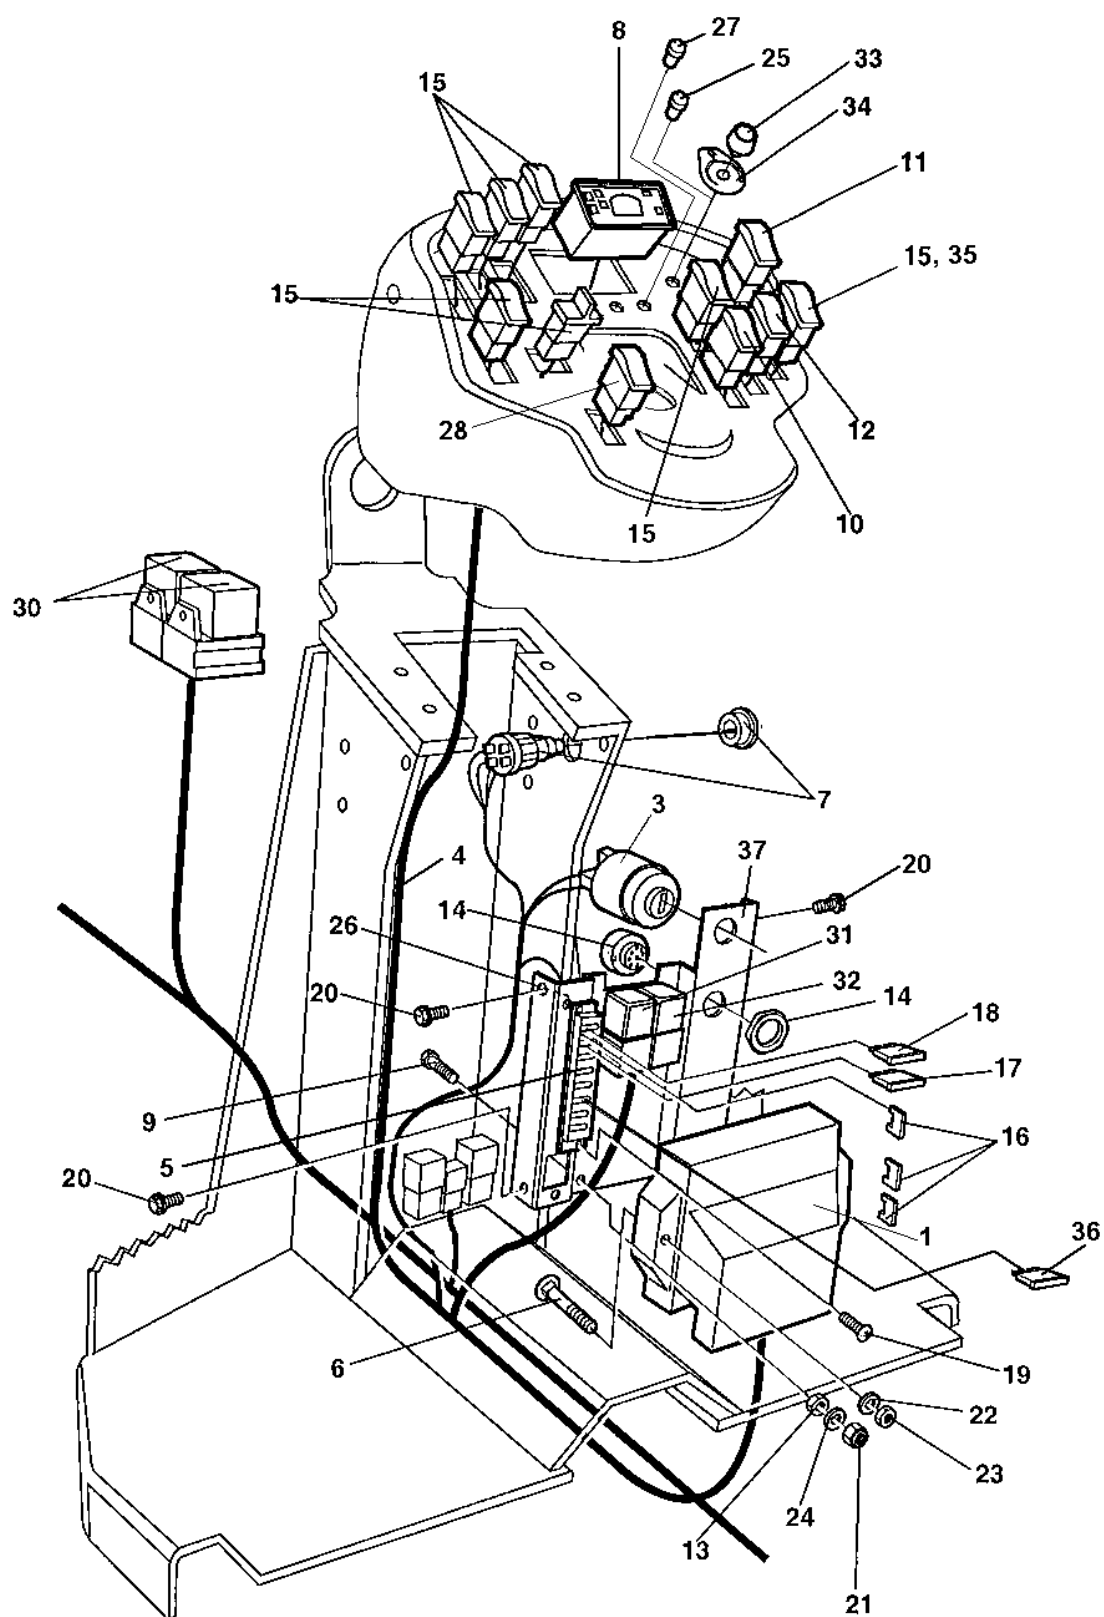

Control panel, relays

Ref. No.	Part No.	Rem.	Qty	Description	Code
1		J	1	Control unit with software	
			1	.Decal	
		J	1	.Software	
	378932		1	.Instruction	D
3	238158		1	Ignition switch	
	940451		1	.Key	
4	378710		1	Cable harness Up to 89531938	
	791060		3	.Diode	
	393956		1	Cable harness From 89531939	
5	791185		1	Fuse box	
6	791775		2	Bolt	
7	791647		1	Emergency stop	
8	388008		1	Control panel	
9	500075		1	Screw	M6-1,0x25 8.8
10	791578		1	Switch, horn	
11	791579		1	Switch, sprinkler	
12	791580		1	Switch, vibration	
13	570004		1	Nut	M6
14	385599		1	Buzzer	
15	791588	D	7	Panel plug	
16	791211		3	Contact bridge Up to 89532138	
	791211		2	Contact bridge From 89532139	
17	901228		1	Fuse	15A
18	903741		1	Fuse	20A Yellow Medium
19	901767		2	Screw	ST3,5x9,5 Black
20	903782		4	Screw	M5x12
21	586002		1	Lock nut	M6
22	904556		2	Washer	8,4x16x3,0
23	586003		2	Lock nut	M8
24	904228		1	Washer	
25	792083	E	1	Plug	
26	202042	A	1	Rubber strip	
27	792320		4	Plug	
28	791582		1	Switch, parking brake From 89531939	
30		C	2	Relay	
31		B	1	Relay	
32		B	1	Relay	
33	388737	F	1	Potentiometer	
34	377139	F	1	Decal	
35	791581	F,G	1	Switch	
36	901227	H	1	Fuse	10A
37	387683		1	Distribution control plate	B

- A) L = 70 mm
 B) See section "driving lights"
 C) See section "Electric equipment"
 D) For Option switch, see another section of Electrical system or Optional equipment
 E) Interchangeable to timer pos. 33, 34
 F) Option
 G) See section "Vibration shot-off one drum"
 H) Option, Rotating beacon
 J) Machine SN required when placing order

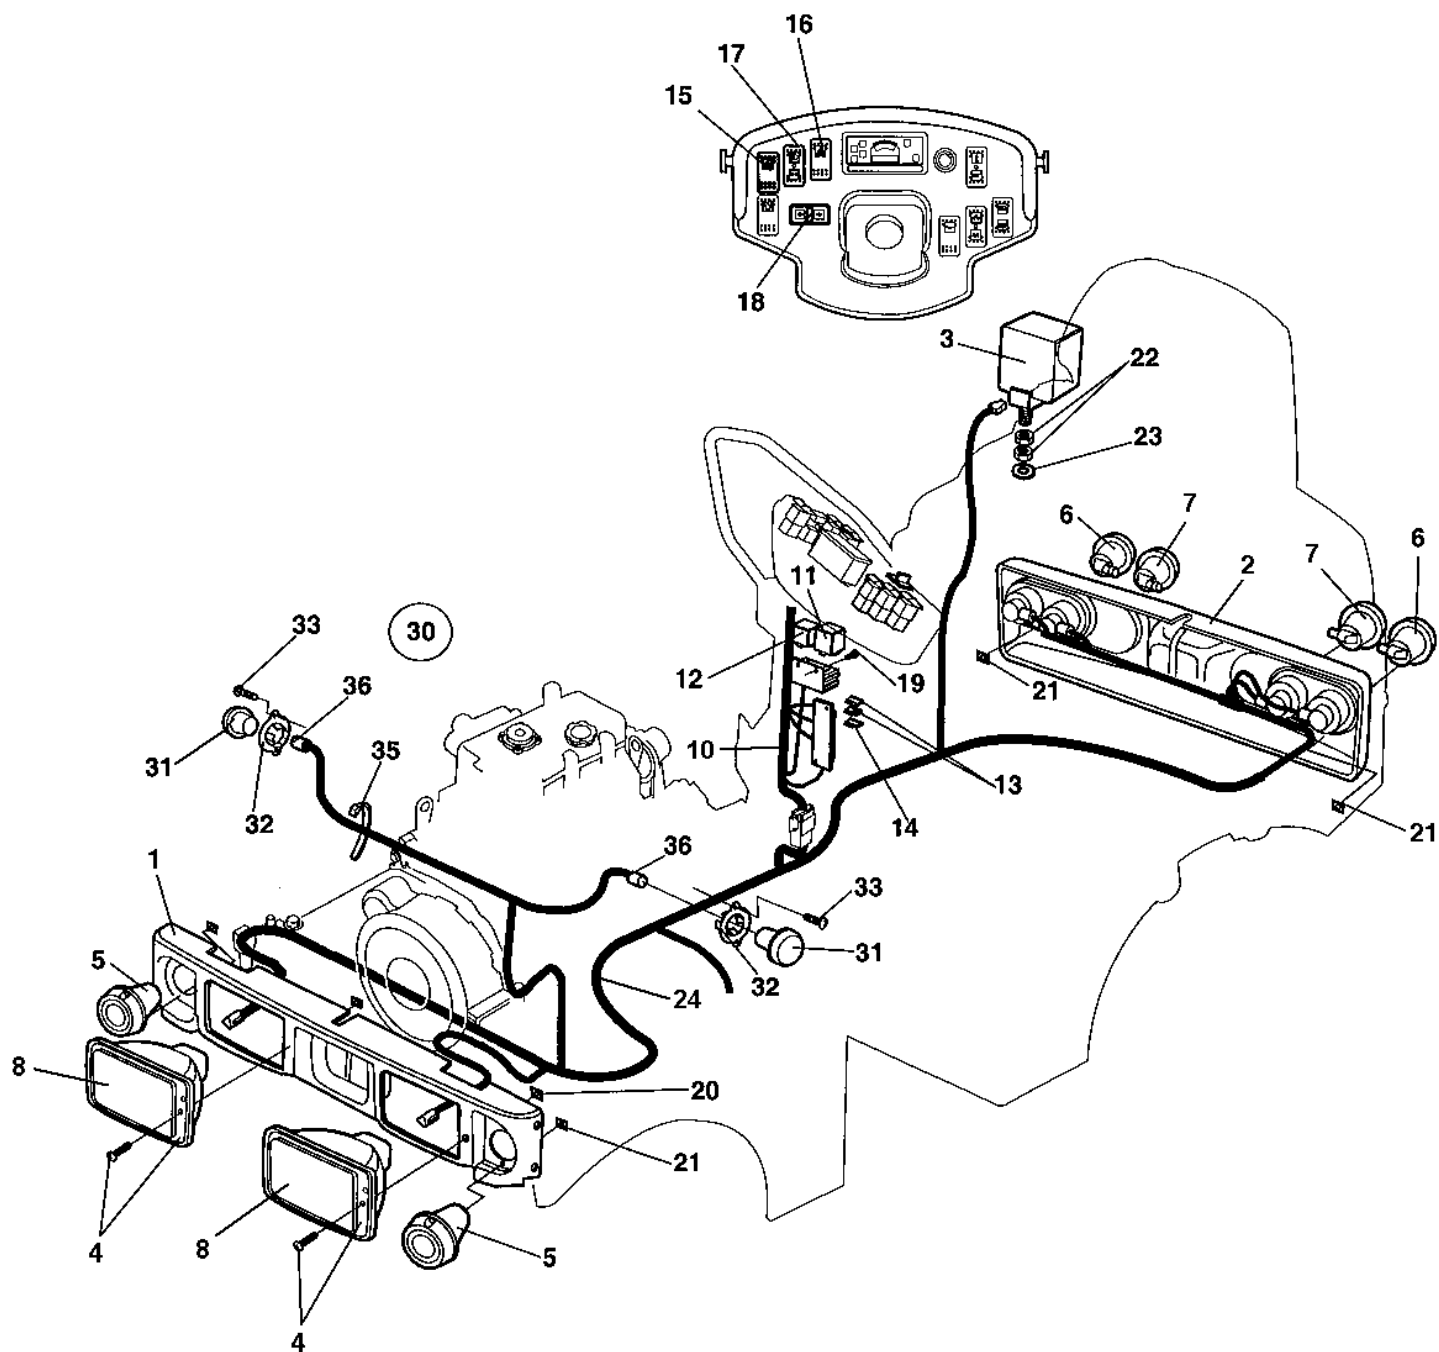


Driving lights Option

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387377		1	Frame cover	
2	387378		1	Frame cover	
3	904314		1	Work lamp	
4	791951	A	2	Headlight	
	792059	B	2	Headlight	
5	791953		2	Direction indicator	
6	791954		2	Direction indicator	
7	791955		2	Brake/position light	
8	900790	C	2	Bulb	60/55w H4 B
	985125	D	2	Bulb	12V B
10	388636		1	Cable harness	
11	904989		1	Flash relay	Option D
12	903956		1	Relay	D
13	901225		2	Fuse	5A B
14	901227		1	Fuse	10A B
15	791587		1	Switch, working light	
16	791584		1	Switch, hazard flashers	
17	791583		1	Switch, driving light	
18	791586		1	Switch, drive direction	
19	791916		2	Screw	
20	791970		4	Speed nut	
21	791971		12	Quick nut	
22	573005		2	Nut	
23	904230		1	Washer	10,5X22X2
24	377140		1	Cable harness	
30			1	Side direction lights	
31	791704		2	.Side direction light	
	904889		2	.Bulb	
32	388382		2	.Holder side light	
33	791643		4	.Screw	
35	903810		4	.Cable tie holder	
36	960079		4	.Cable clip	
A)	Right asym				
B)	Left asym.				
C)	Head light				
D)	Parking light				

Working lights Option

17992

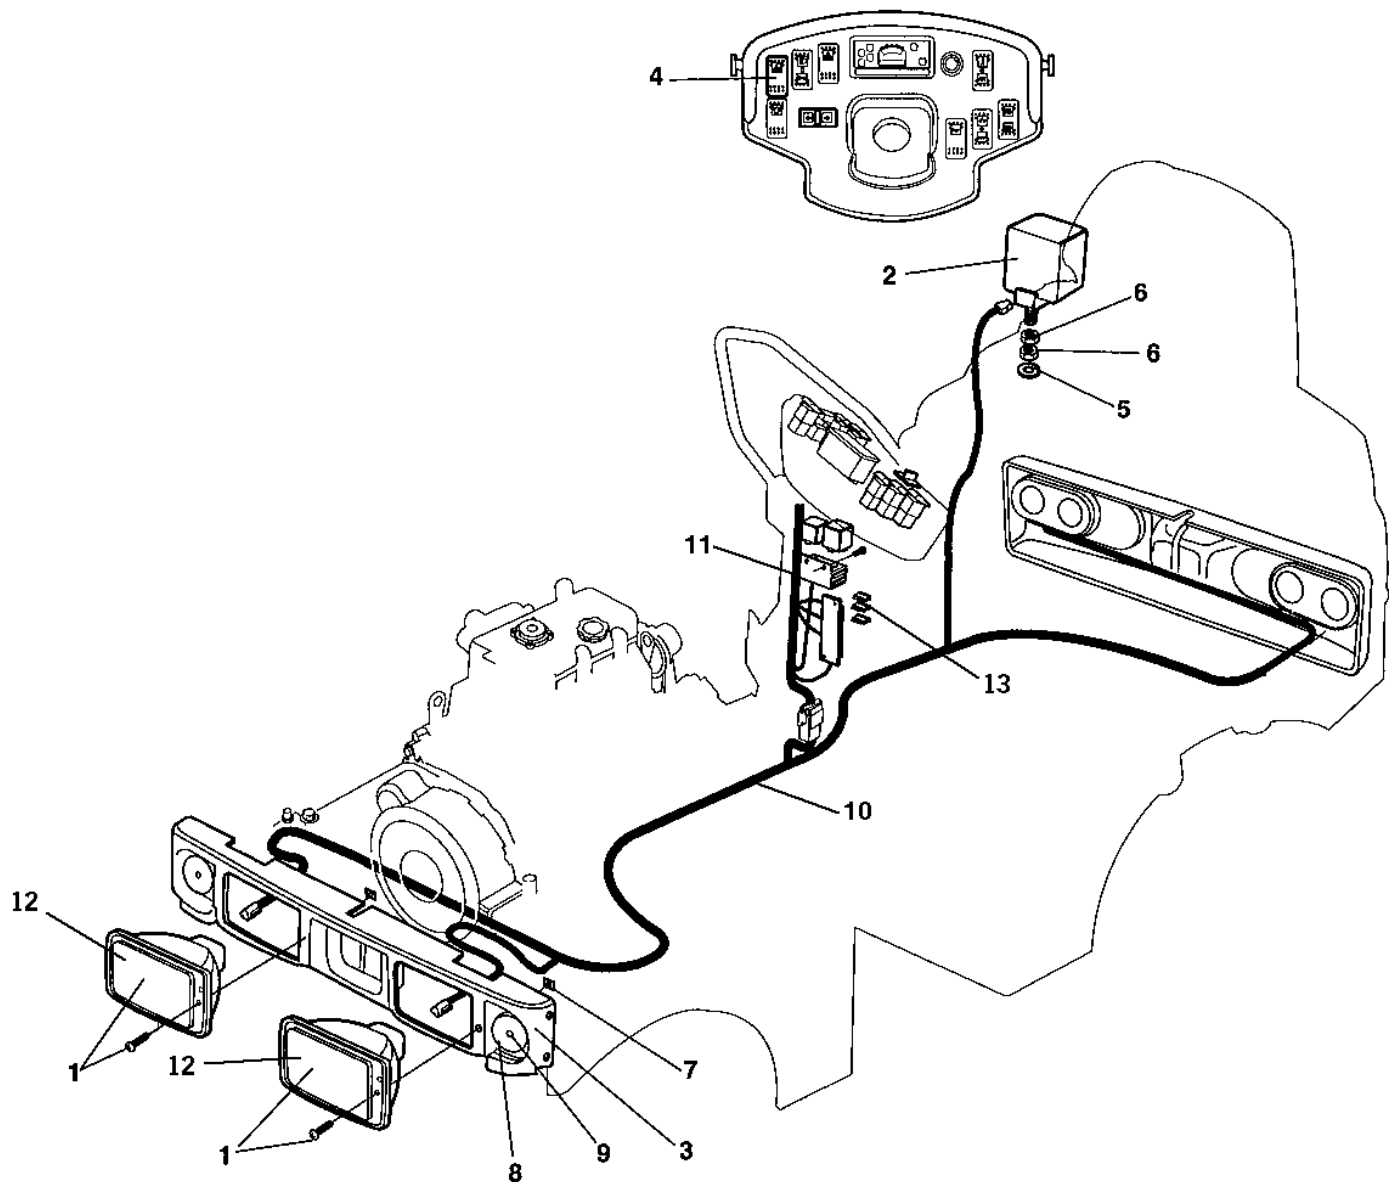


Working lights Option

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	902227		2	Work light	
			2	.Screw	
2	904314		1	Work lamp	
3	387377		1	Frame cover	
4	791587		1	Switch, working light	
5	904230		1	Washer	10,5X22X2
6	573005		2	Nut	
7	791970		4	Speed nut	
8	791754		N	Blind rivet	
9	791957		N	Reflector, white	
10		A	1	Cable harness	
11		A	1	Cable harness	
12	901369		2	Bulb	55w H3
13	901228		2	Fuse	15A
A)	See section "Driving lights"				

Rotating beacon with Rops Option

17993

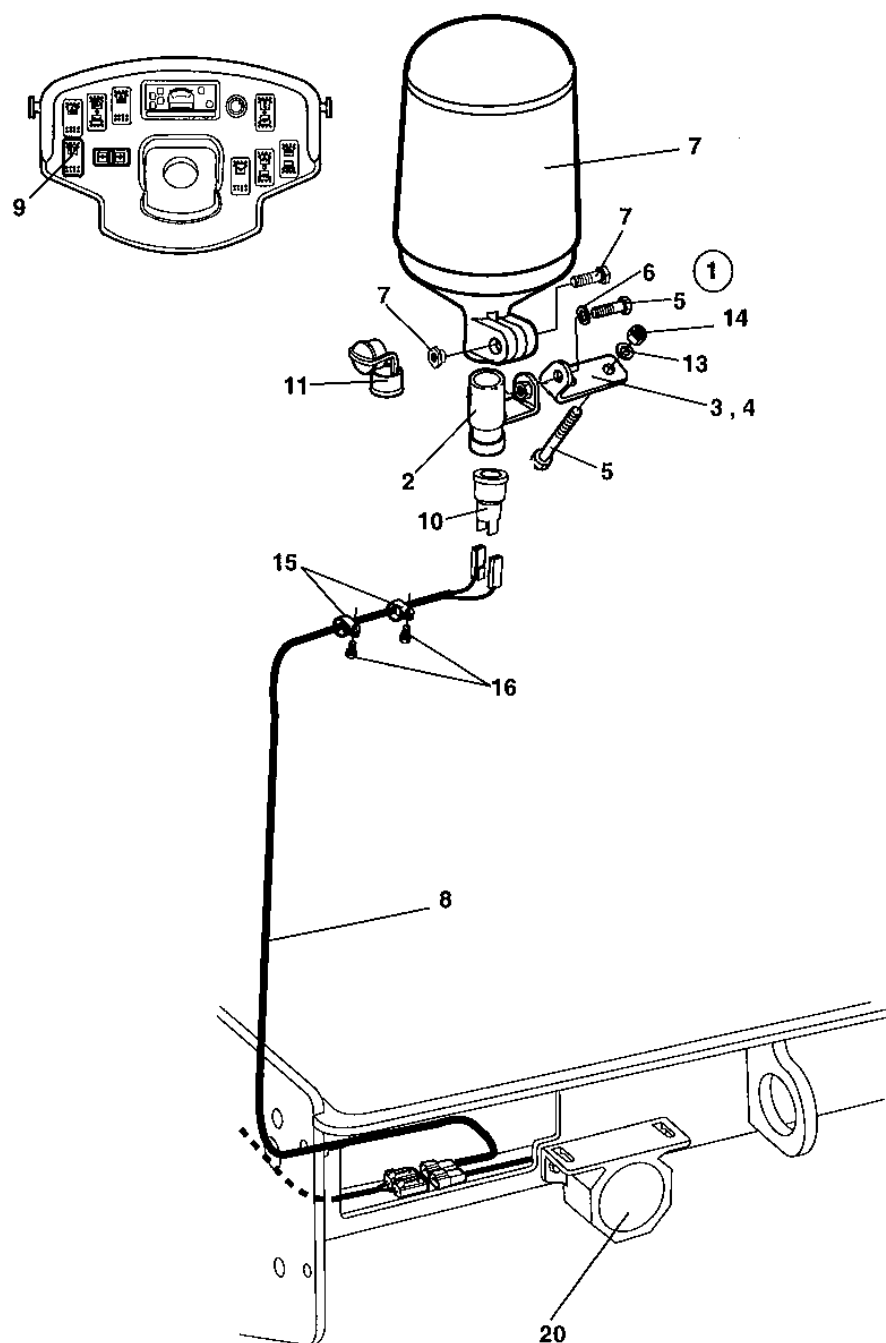

Rotating beacon with Rops Option


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	389561		1	Bracket	
2	388772		1	.Bracket	
3	388773		1	.Bracket	D
4	629101		1	.Spirol pin	
5	500021		1	.Screw	M8-1,25x25 8.8
6	904229		1	.Washer	
7	389577		1	Rotating beacon	D
			1	.Screw	D
			1	.Nut	D
8	389763		1	Cable harness	
9	791585		1	Switch, rotating beacon	
10	791981		1	Connector plug	
11	791980		1	Rubber protection	
12	500180		2	Screw	M8X110 8,8
13	904229		4	Washer	
14	586003		2	Lock nut	M8
15	921039		2	Pipe clamp	
16	541702		2	Screw	M6x12
17		B	1	Fuse	
20		A	1	Back-up alarm	

A) See section "Back up alarm"

B) See section "Control panel, relay"

Back-up alarm Option

17963

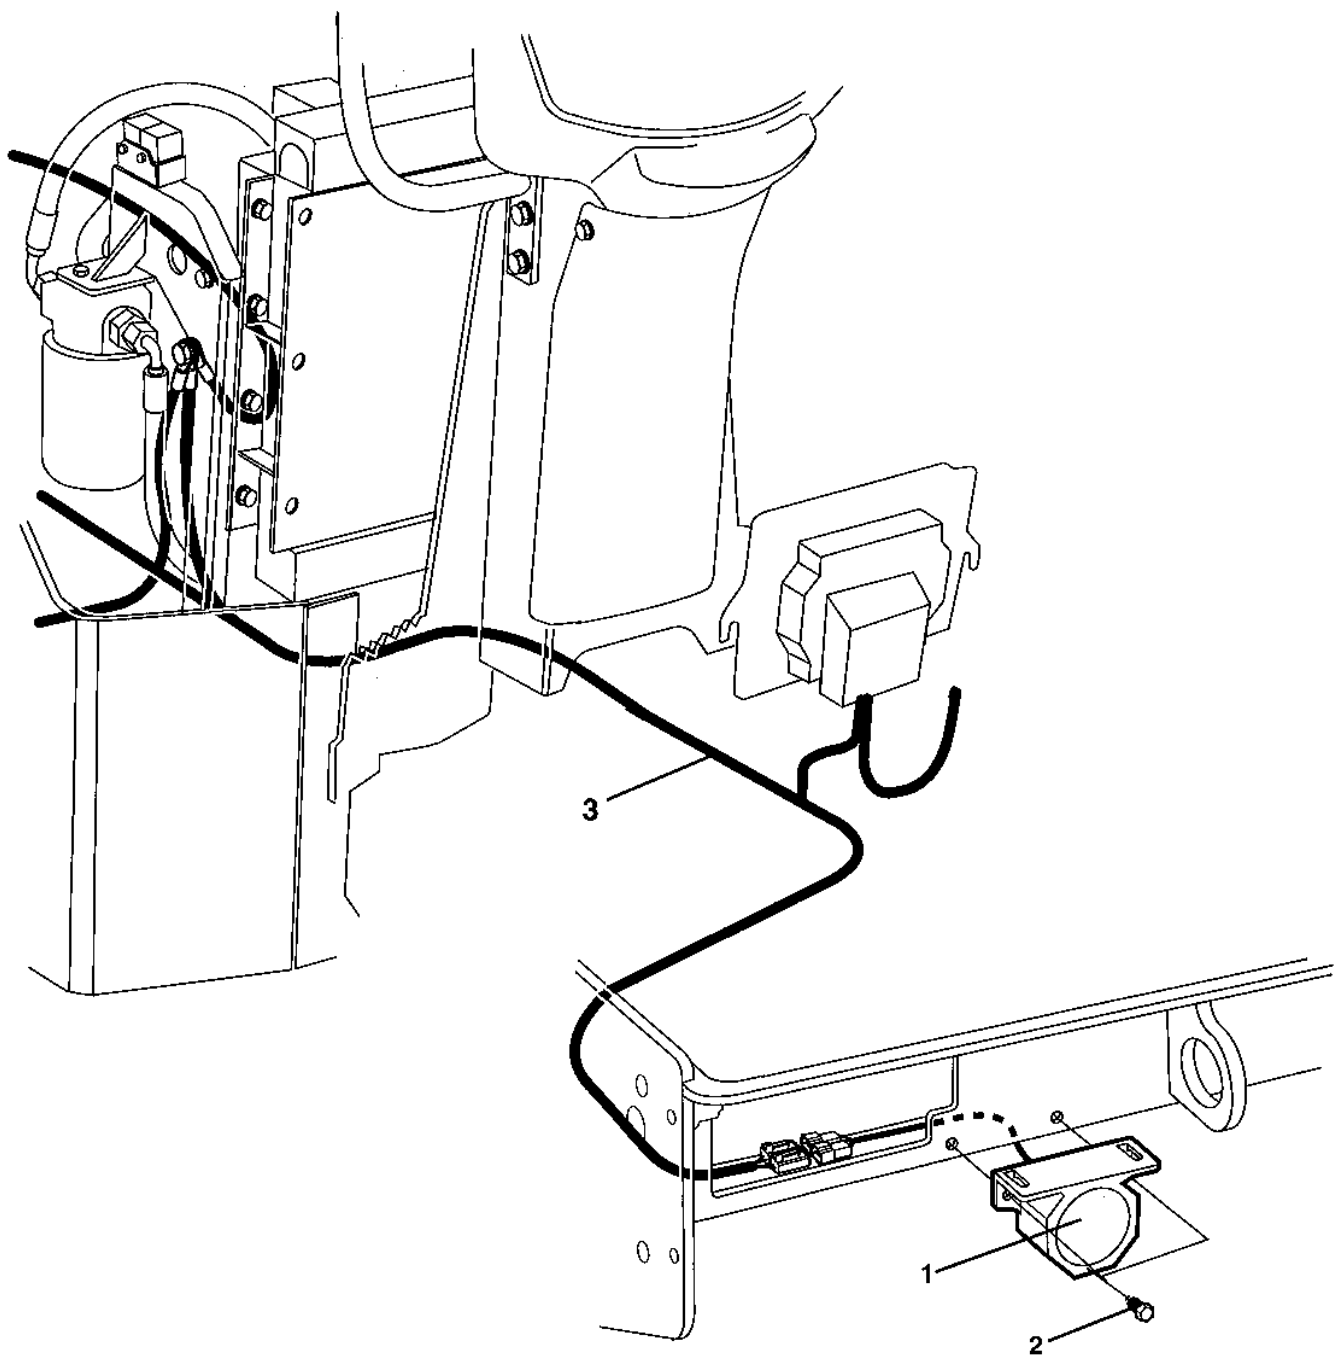

Back-up alarm Option


Ref. No.	Part No.	Rem.	Qty	Description	Code
1	792098		1	Back-up alarm	
2	541702		2	Screw	M6x12
3	388009		1	Cable harness	

Drivers platform

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Drivers seat Up to 89531040 (Page 96)	
12				Drivers seat From 89531041 Up to 89531898 (Page 98)	
15				Drivers seat From 89531899 (Page 100)	
20				F/R- and throttle control (Page 102)	
25				Forward and reverse control handle Up to 89531081 (Page 104)	
27				Forward and reverse control handle From 89531082 (Page 106)	
30				Rops (Page 108)	Option

Drivers seat

17976

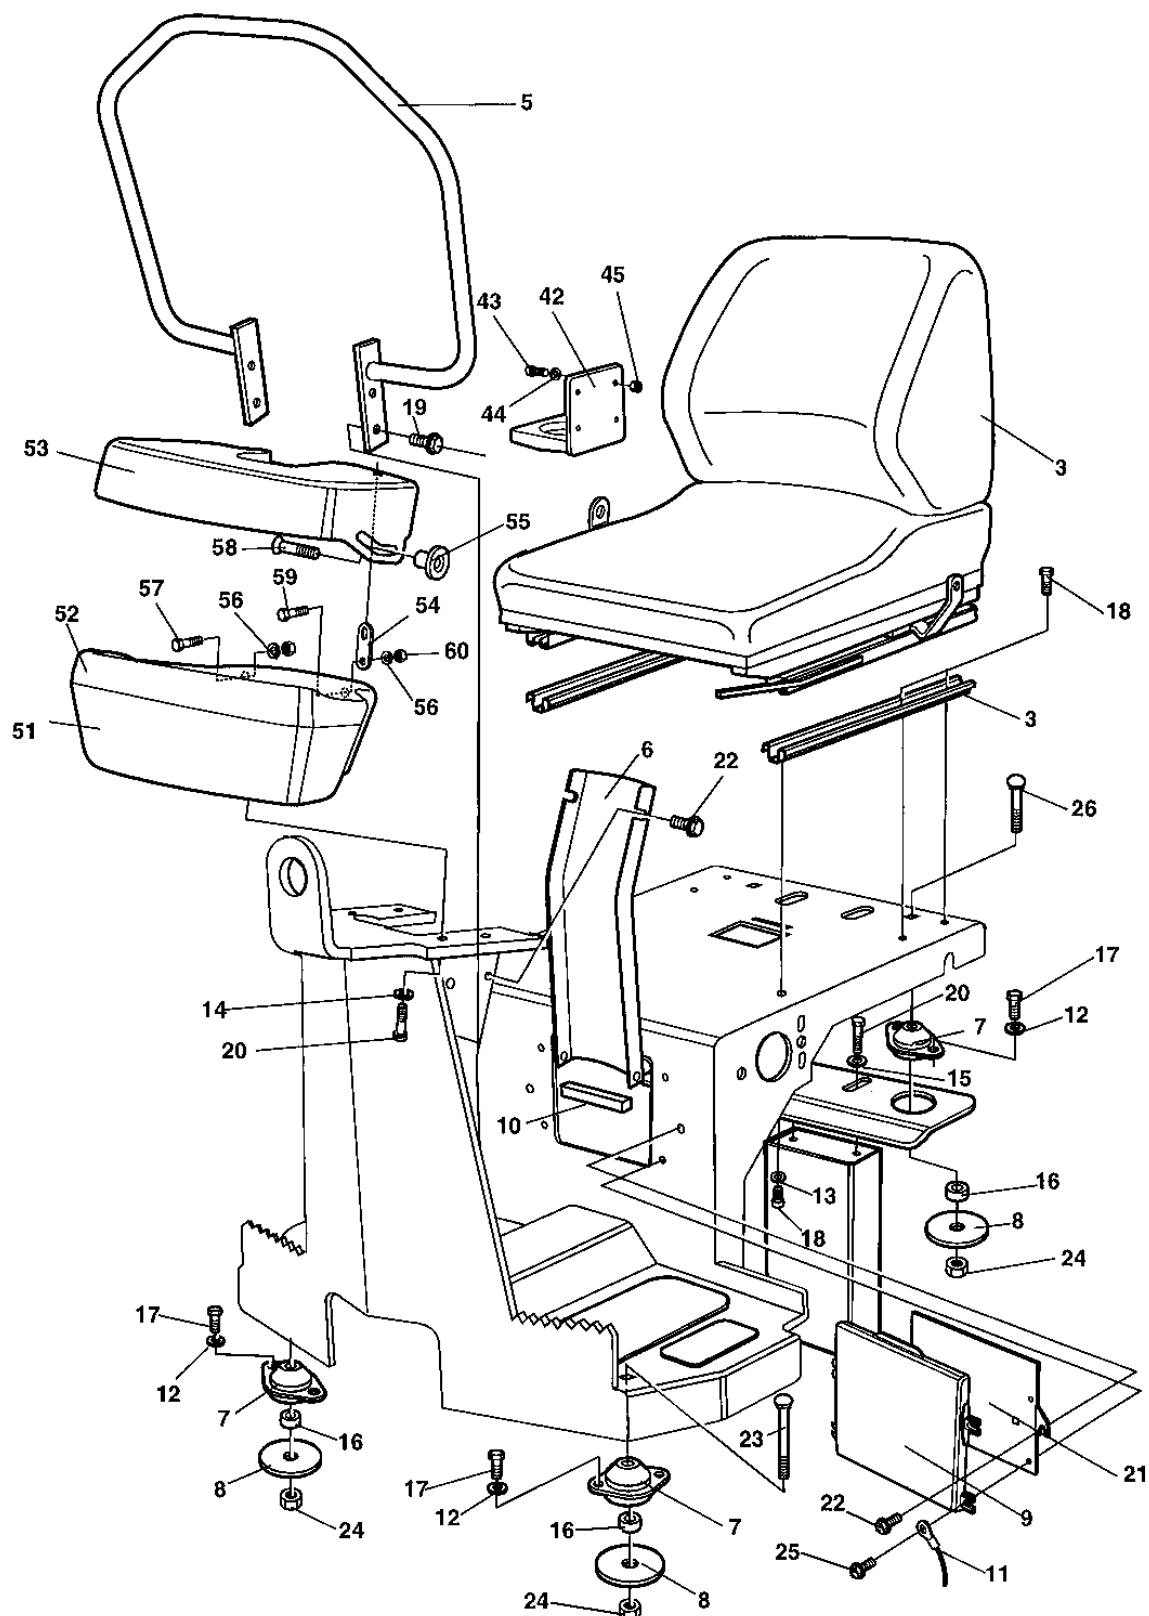

Drivers seat


Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Platform	
3	372570		1	Seat	
	936283		1	.Seat switch	D
4	387236		1	Platform bracket	
5	387453		1	Hand rail	
6	387226		1	Column cover	
7	387685		4	Conical rubber mount	
8	358232		4	Washer	
9	383705		1	Instruction book holder	
10	902166	A	1	Edge trim	3-5
11	357643		1	Wire	
12	904556		8	Washer	8,4x16x3,0
13	904229		2	Washer	
14	904230		4	Washer	10,5X22X2
15	904557		10	Washer	10,5x22x4
16	904557		4	Washer	10,5x22x4
17	500018		8	Screw	M8-1,25x12 8,8
18	508092		6	Screw	M8-1,25x20H 8,8
19	500509		2	Screw	
20	500030		6	Screw	M10-1,5x35H 8,8
21	388447		1	Cover	
22	500505		4	Screw	M8x20 8.8
23	792236		2	Screw	M10x100
24	586018		4	Lock nut	M10
25	791226		4	Screw	
26	791616		2	Bolt	
28	357855		2	Bushing	
42	377255	B	1	Cup holder	
43	513027	B	4	Screw	M4x16H 10,9
44	904698	B	4	Washer	
45	923976	B	4	Nut	
51	387720		1	Control panel holder	
52	387766		1	Control panel	
53	387227		1	Control panel cover	
54	387545		1	Latch	
55	357855		2	Bushing	
56	904281		4	Washer	5,3x10x1
57	903658		3	Screw	M5x10
58	513017		2	Screw	M6x30H 10,9
59	500007		1	Screw	M5-0,8x22H 8,8
60	791476		1	Nut	M5 -8

A) L = 185 mm

B) Option

Drivers seat

18296-1

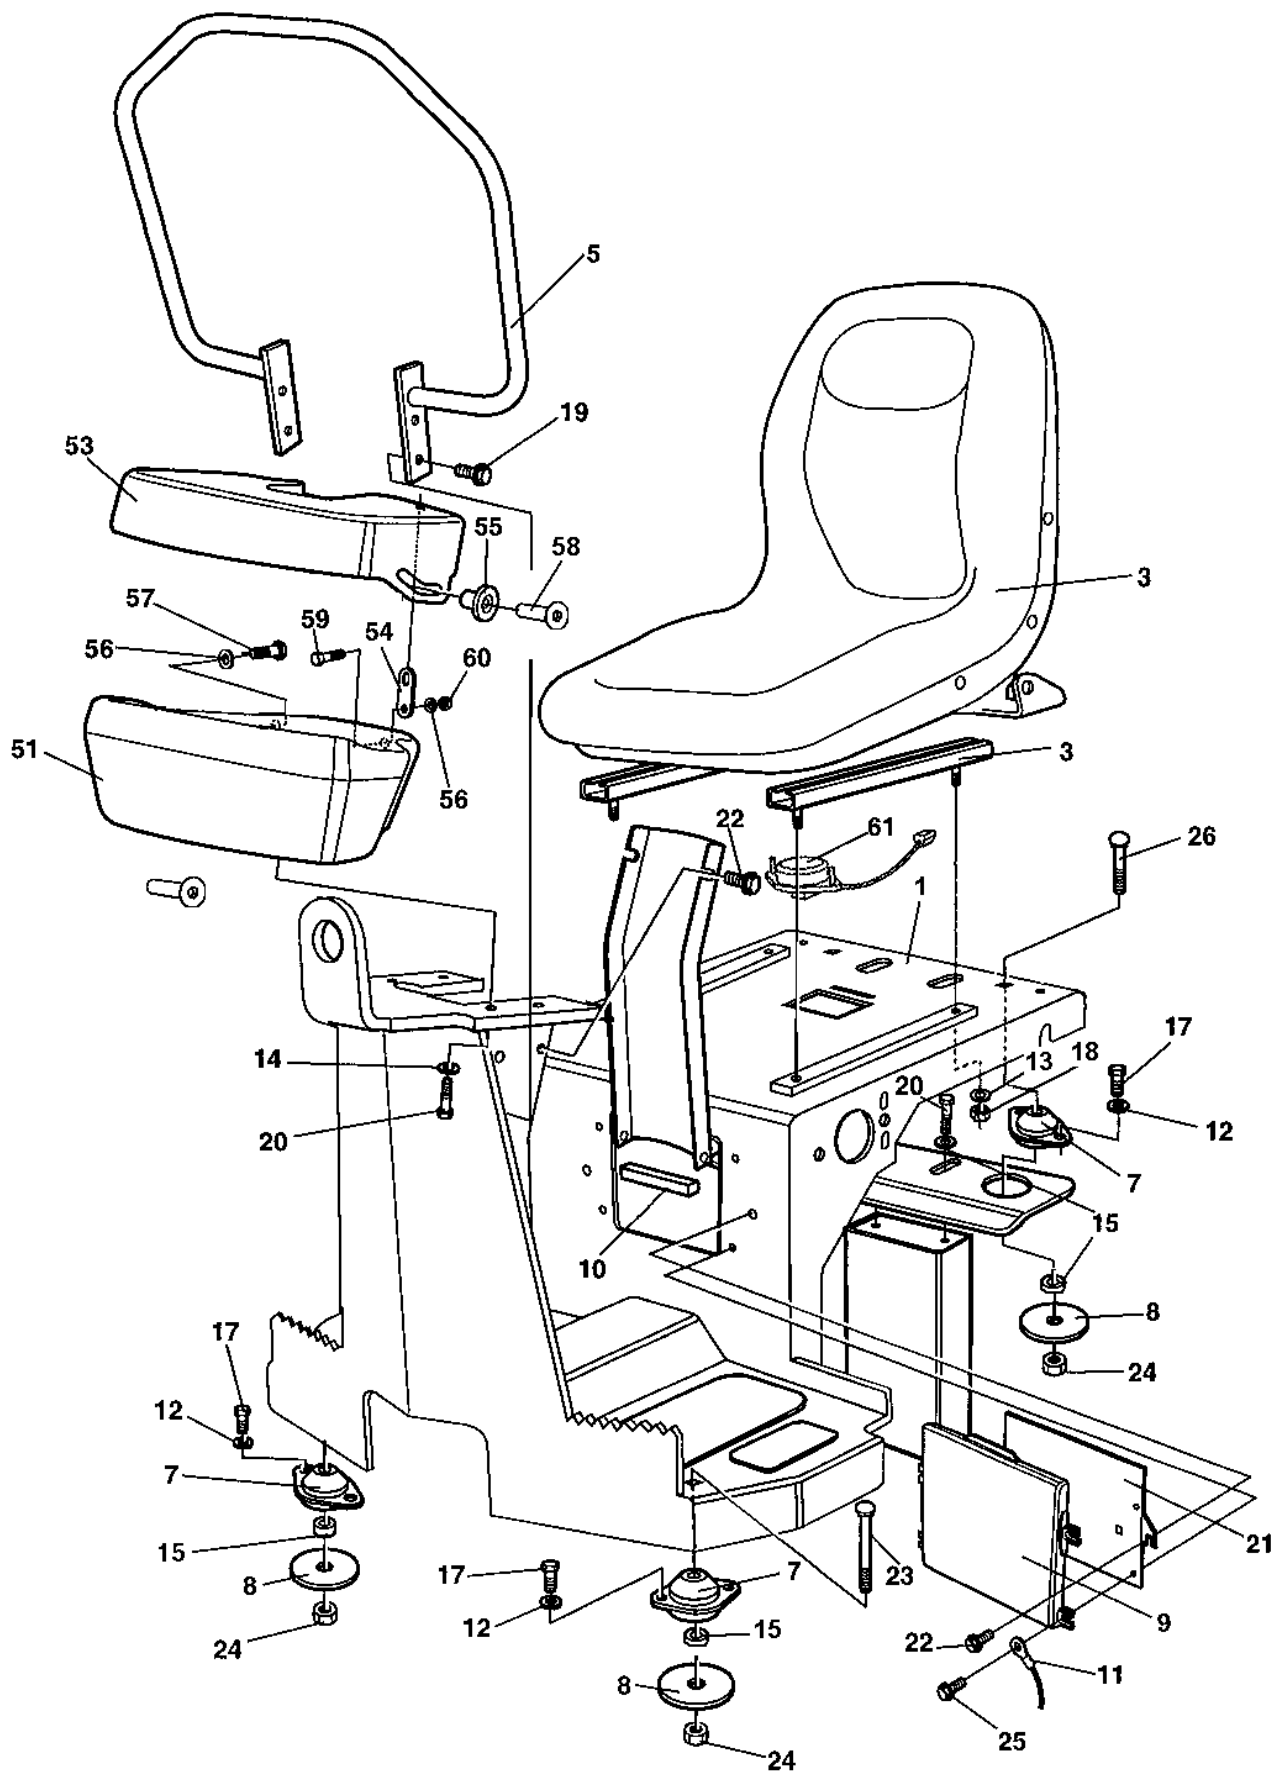


Drivers seat

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	390586		1	Platform	
3	377556		1	Seat	
	348331		1	Seat cover	D
4	387236		1	Platform bracket	
5	387453		1	Hand rail	
6	387226		1	Column cover	
7	387685		4	Conical rubber mount	
8	358232		4	Washer	
9	383705		1	Instruction book holder	
10	902166	A	1	Edge trim	3-5
11	357643		1	Wire	
12	904556		8	Washer	8,4x16x3,0
13	904229		4	Washer	
14	904230		4	Washer	10,5X22X2
15	904557		10	Washer	10,5x22x4
17	500018		8	Screw	M8-1,25x12 8,8
18	586003		4	Lock nut	M8
19	500509		4	Screw	
20	500030		6	Screw	M10-1,5x35H 8,8
21	388447		1	Cover	
22	500505		4	Screw	M8x20 8.8
23	792236		2	Screw	M10x100
24	586018		4	Lock nut	M10
25	791226		4	Screw	
26	791616		2	Bolt	
28	357855		2	Bushing	
51	387720		1	Control panel holder	
52	387766		1	Control panel	
53	387227		1	Control panel cover	
54	387545		1	Latch	
55	357855		2	Bushing	
56	904281		4	Washer	5,3x10x1
57	903658		3	Screw	M5x10
58	513017		2	Screw	M6x30H 10,9
59	500007		1	Screw	M5-0,8x22H 8,8
60	791476		1	Nut	M5 -8
61	379636		1	Seat switch	

A) L = 185 mm

Drivers seat

18591

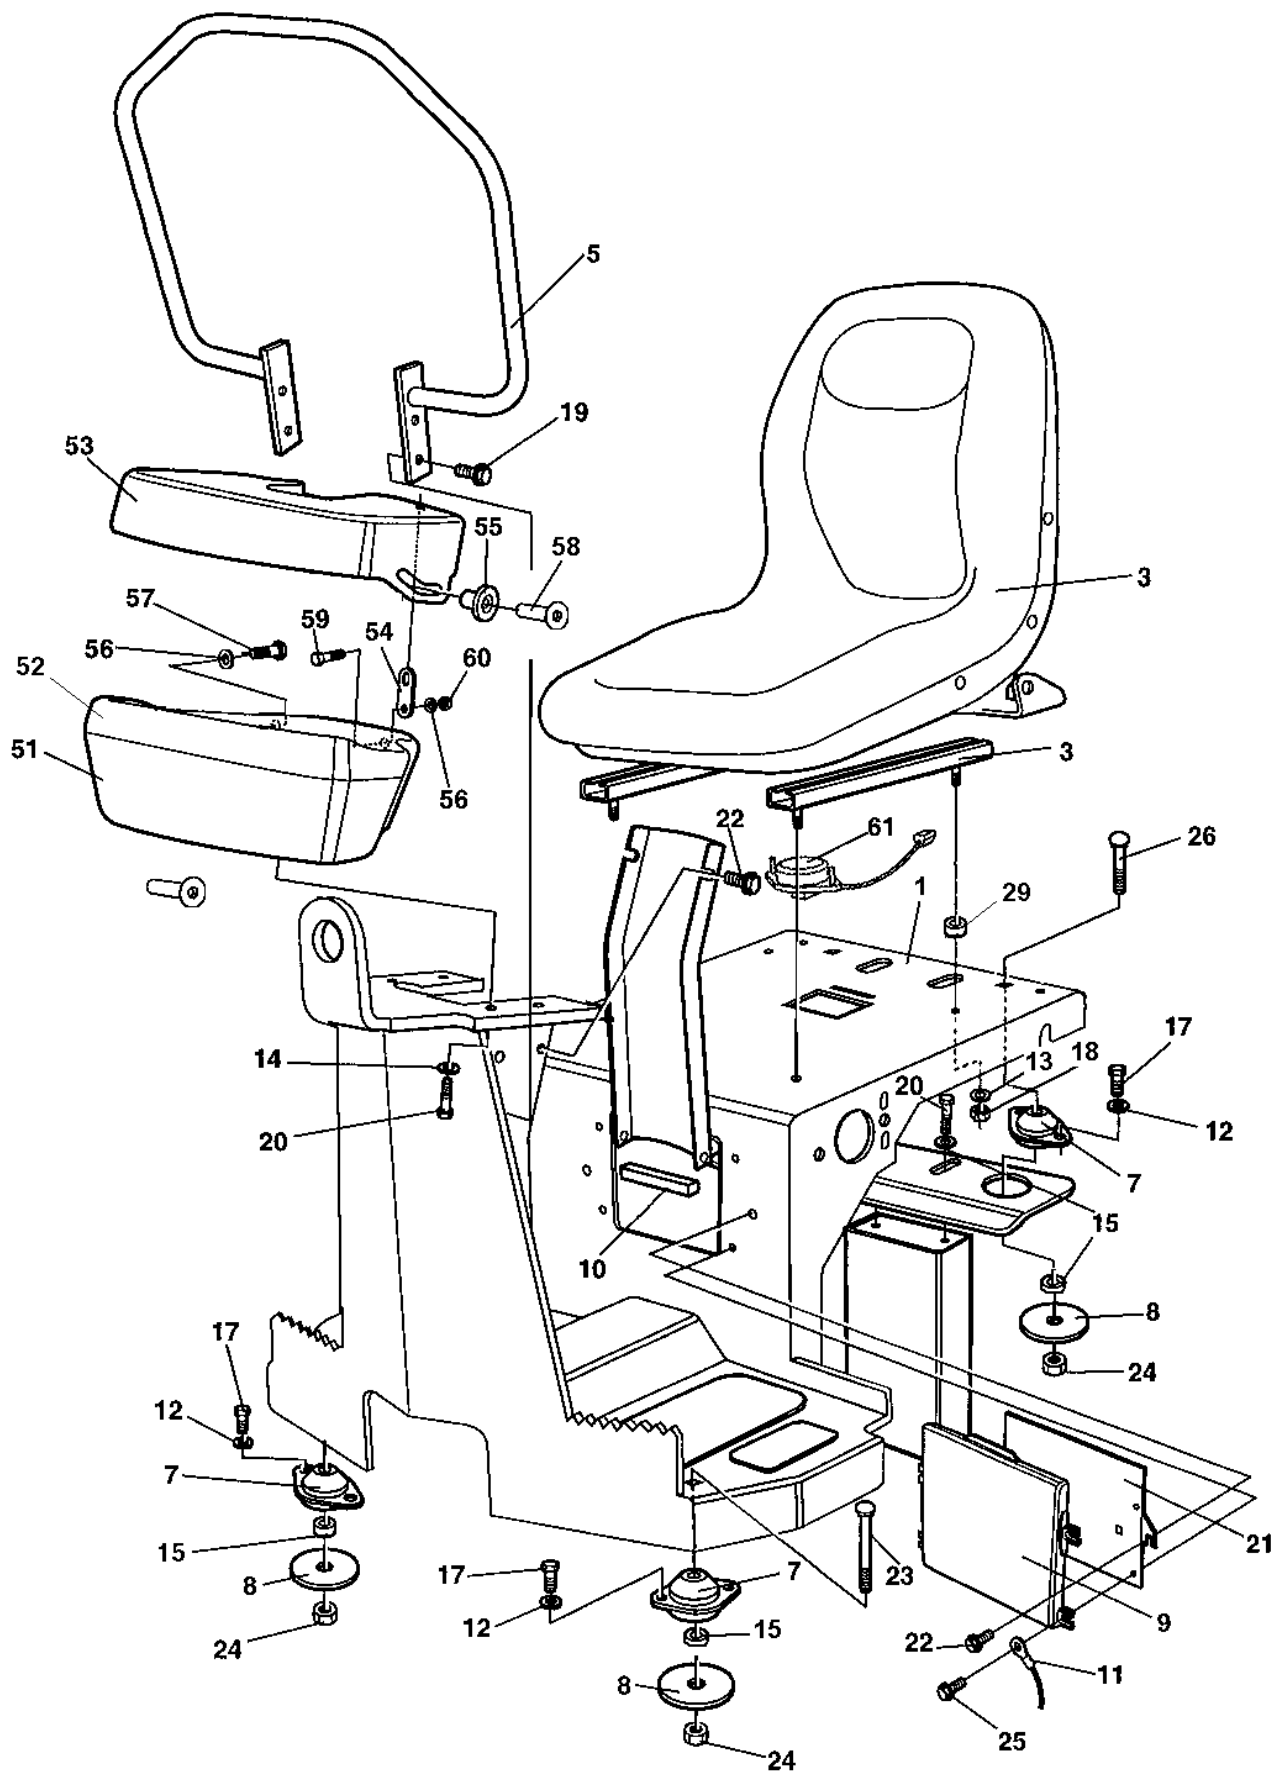


Drivers seat

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	390586		1	Platform	
3	377556		1	Seat	
	348331		1	Seat cover	D
4	387236		1	Platform bracket	
5	387453		1	Hand rail	
6	387226		1	Column cover	
7	387685		4	Conical rubber mount	
8	358232		4	Washer	
9	383705		1	Instruction book holder	
10	902166	A	1	Edge trim	3-5
11	357643		1	Wire	
12	904556		8	Washer	8,4x16x3,0
13	904229		4	Washer	
14	904230		4	Washer	10,5X22X2
15	904557		10	Washer	10,5x22x4
17	500018		8	Screw	M8-1,25x12 8,8
18	586003		4	Lock nut	M8
19	500509		4	Screw	
20	500030		6	Screw	M10-1,5x35H 8,8
21	388447		1	Cover	
22	500505		4	Screw	M8x20 8.8
23	792236		2	Screw	M10x100
24	586018		4	Lock nut	M10
25	791226		4	Screw	
26	791616		2	Bolt	
28	357855		2	Bushing	
29	394301		4	Spacer sleeve	
51	387720		1	Control panel holder	
52	387766		1	Control panel Up to 89531938	
	391784		1	Control panel From 89531939	
53	387227		1	Control panel cover	
54	387545		1	Latch	
55	357855		2	Bushing	
56	904281		4	Washer	5,3x10x1
57	903658		3	Screw	M5x10
58	513017		2	Screw	M6x30H 10,9
59	500007		1	Screw	M5-0,8x22H 8,8
60	791476		1	Nut	M5 -8
61	379636		1	Seat switch	

A) L = 185 mm

F/R- and throttle control

17971

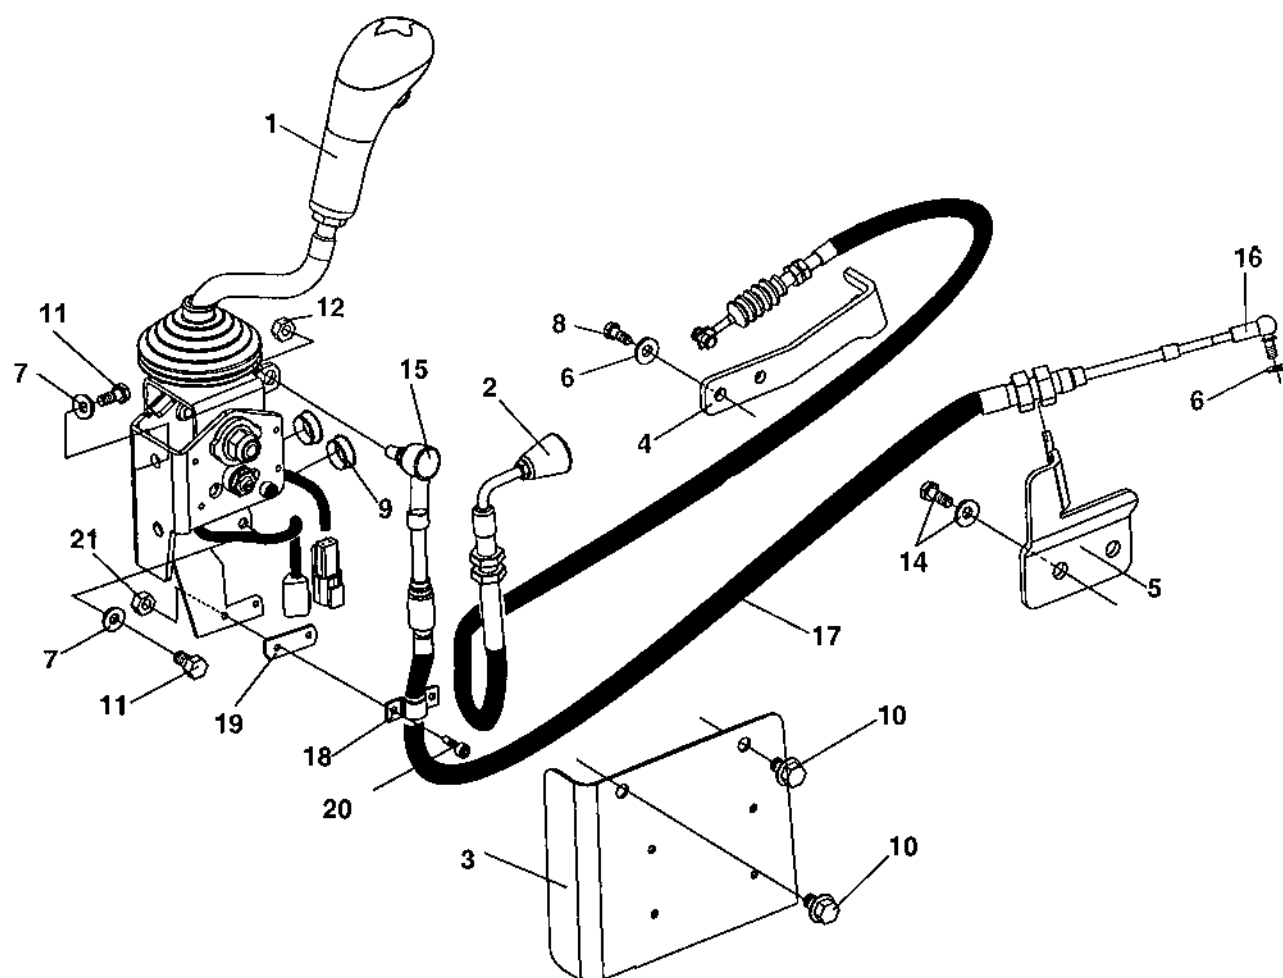


F/R- and throttle control

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1		
2	387229		1	Throttle control	
	940960		1	.Knob	
3	388476		1	Control cover	
4	387297		1	Control bracket	
5	387298		1	Control bracket	
6	904228		3	Washer	
7	904229		2	Washer	
8	500013		2	Screw	M6-1x16 8,8
9	923270		2	Protective plug	
10	904755		2	Screw	M8x12 8,8 FZB
11	508092		3	Screw	M8-1,25x20H 8,8
12	586003		1	Lock nut	M8
13	904556		1	Washer	8,4x16x3,0
14		B	2	Screw	
		B	2	Washer	
15	377019		1	Ball joint	
16	416034		1	Ball joint	D
17	377024		1	Cable	Forward/Reverse
18	377020		1	Clamp	
19	377021		1	Spacer	
20	926537		2	Screw	M5-0,8x16H 8,8
21	586001		2	Lock nut	M5

B) See section " Engine "

Forward and reverse control handle

CC900S100700025

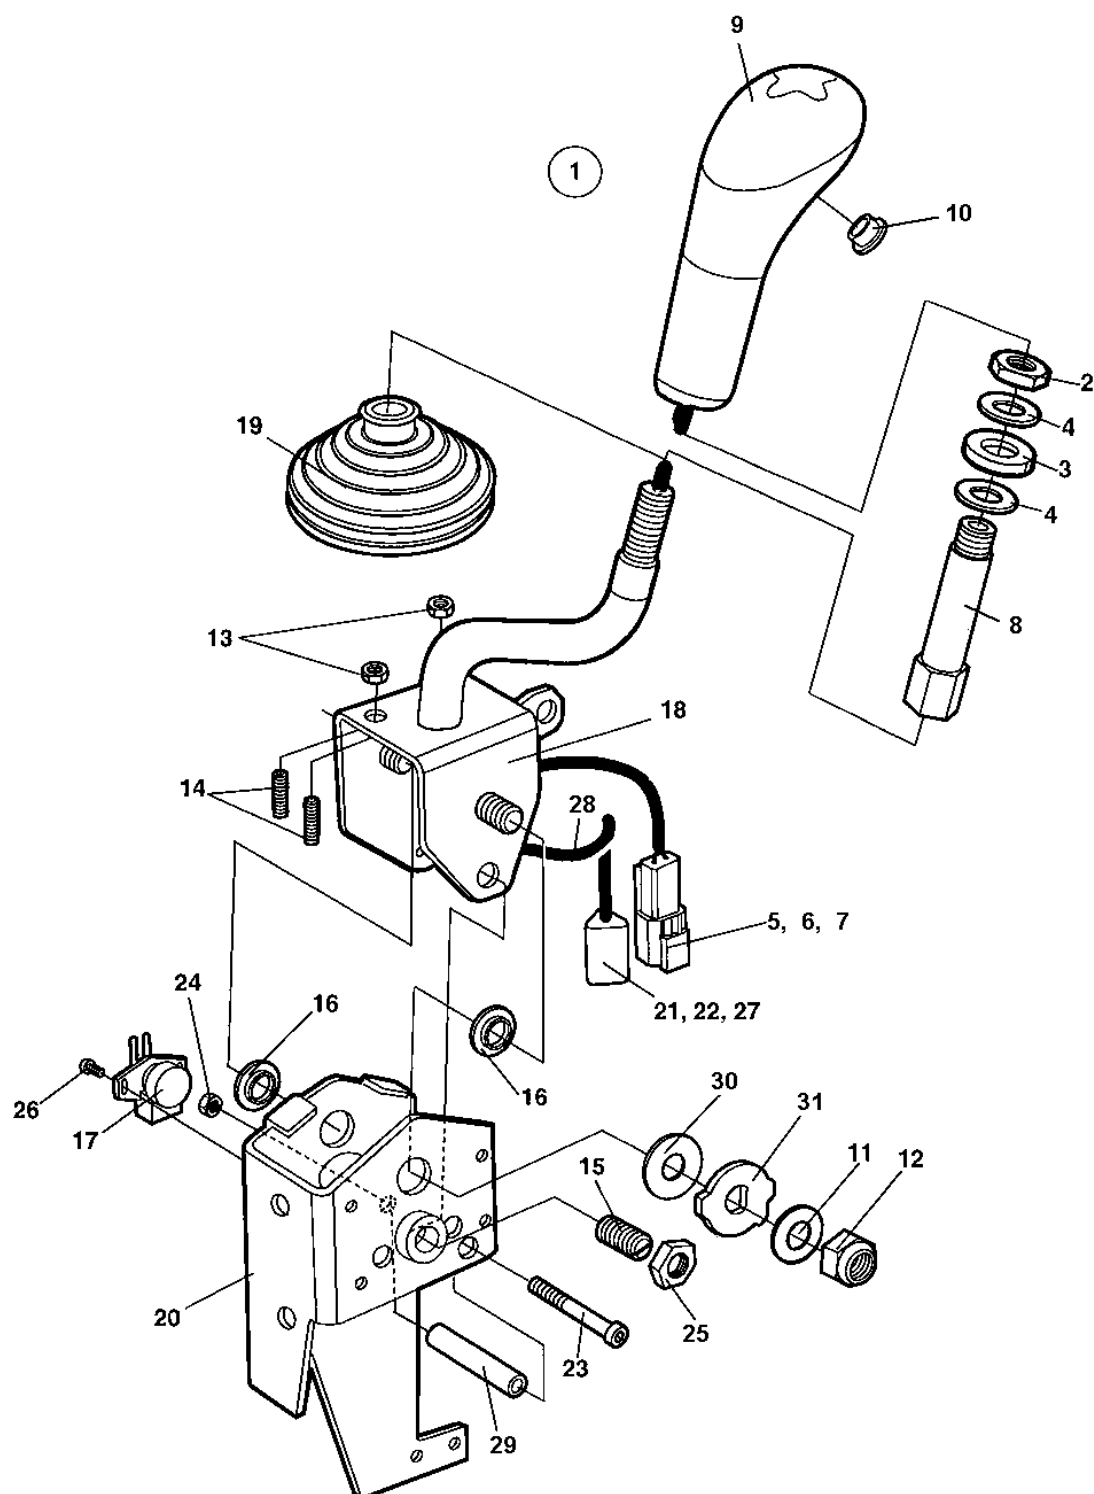


Forward and reverse control handle

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	940374		1	Handle kit, cpl	
			1	.Handle	
	945729		1	..Push-button switch	
			1	.Lockfluid	
			1	.Service information	
2			1	.Nut	
3			1	.Washer	
4			2	.Washer	
5			1	.Connector, receptable	
6			1	.Lock wedge	
7			2	.Pin	
8			1	.Rod	
9	378759		1	.Handle top	
10	377018		1	.Protection plug	
11	377014		1	Spring washer	
12	586019		1	Lock nut	M12
13	570004		2	Nut	M6
14	377015		2	Set screw	
15	377016		1	Spring loaded pin	
16	377017		2	Bushing	
17	377022		1	Potentiometer with cable	
18	377008		1	Holder	
19	377009		1	Bellows	
20	377010		2	Bracket	
21	903945		1	Connector, plug	
22	903946		1	Lock wedge	
23	508068		1	Screw	
24	904563		1	Lock nut	M6
25	927233		1	Nut	
26	377023		1	Screw	
27	903947		3	Pin	
28		B	1	Cable	
29	377011		1	Spacer	
30	377012		1	Friction washer	
31	377013		1	Cam washer	

B) Included in potentiometer Pos 17

Forward and reverse control handle

18071-2

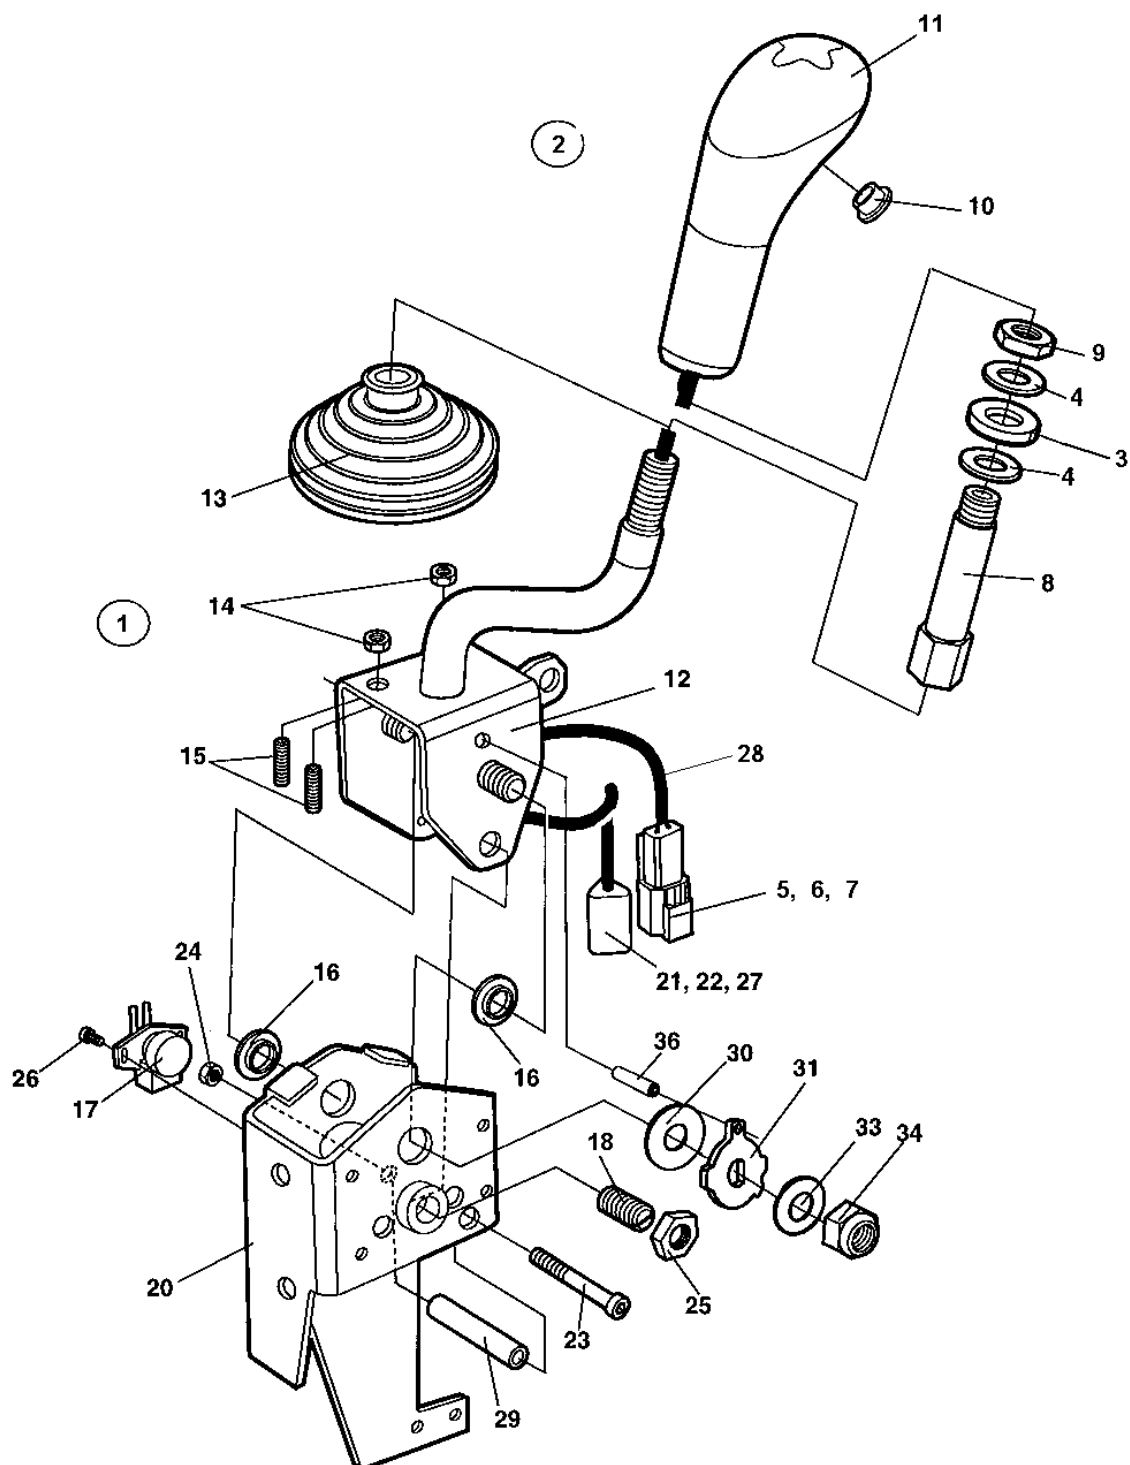


Forward and reverse control handle

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	945407		1	Lever, cpl	
2	940374		1	.Handle kit, cpl	
			1	..Handle	
	945729		1	...Push-button switch	
			1	...Cable	
			1	..Lockfluid	
			1	..Service information	
3			1	..Washer	
4			2	..Washer	
5			1	..Connector, receptable	
6			1	..Lock wedge	
7			2	..Pin	
8			1	..Rod	
9			1	..Nut	
10	377018		1	..Protection plug	
11	378759		1	..Handle top	
12	391379		1	.Lever	
13	377009		1	.Bellows	
14	570004		2	.Nut	M6
15	377015		2	.Set screw	
16	391381		1	Bushing	
17	391382		1	Potentiometer with cable	
18	377016		1	Spring loaded pin	
20	377010		1	Bracket	
21	903945		1	Connector, plug	
22	903946		1	Lock wedge	
23	508068		1	Screw	
24	904563		1	Lock nut	M6
25	927233		1	Nut	
26	391383		1	Screw	
27	903947		3	Pin	
28		B	1	Cable	
29	377011		1	Spacer	
30	377012		1	Friction washer	
31	391380		1	Cam washer	
33	377014		1	Spring washer	
34	586019		1	Lock nut	M12
36	391386		1	Spirol pin	

B) Included in potentiometer Pos 17

Rops Option

17962

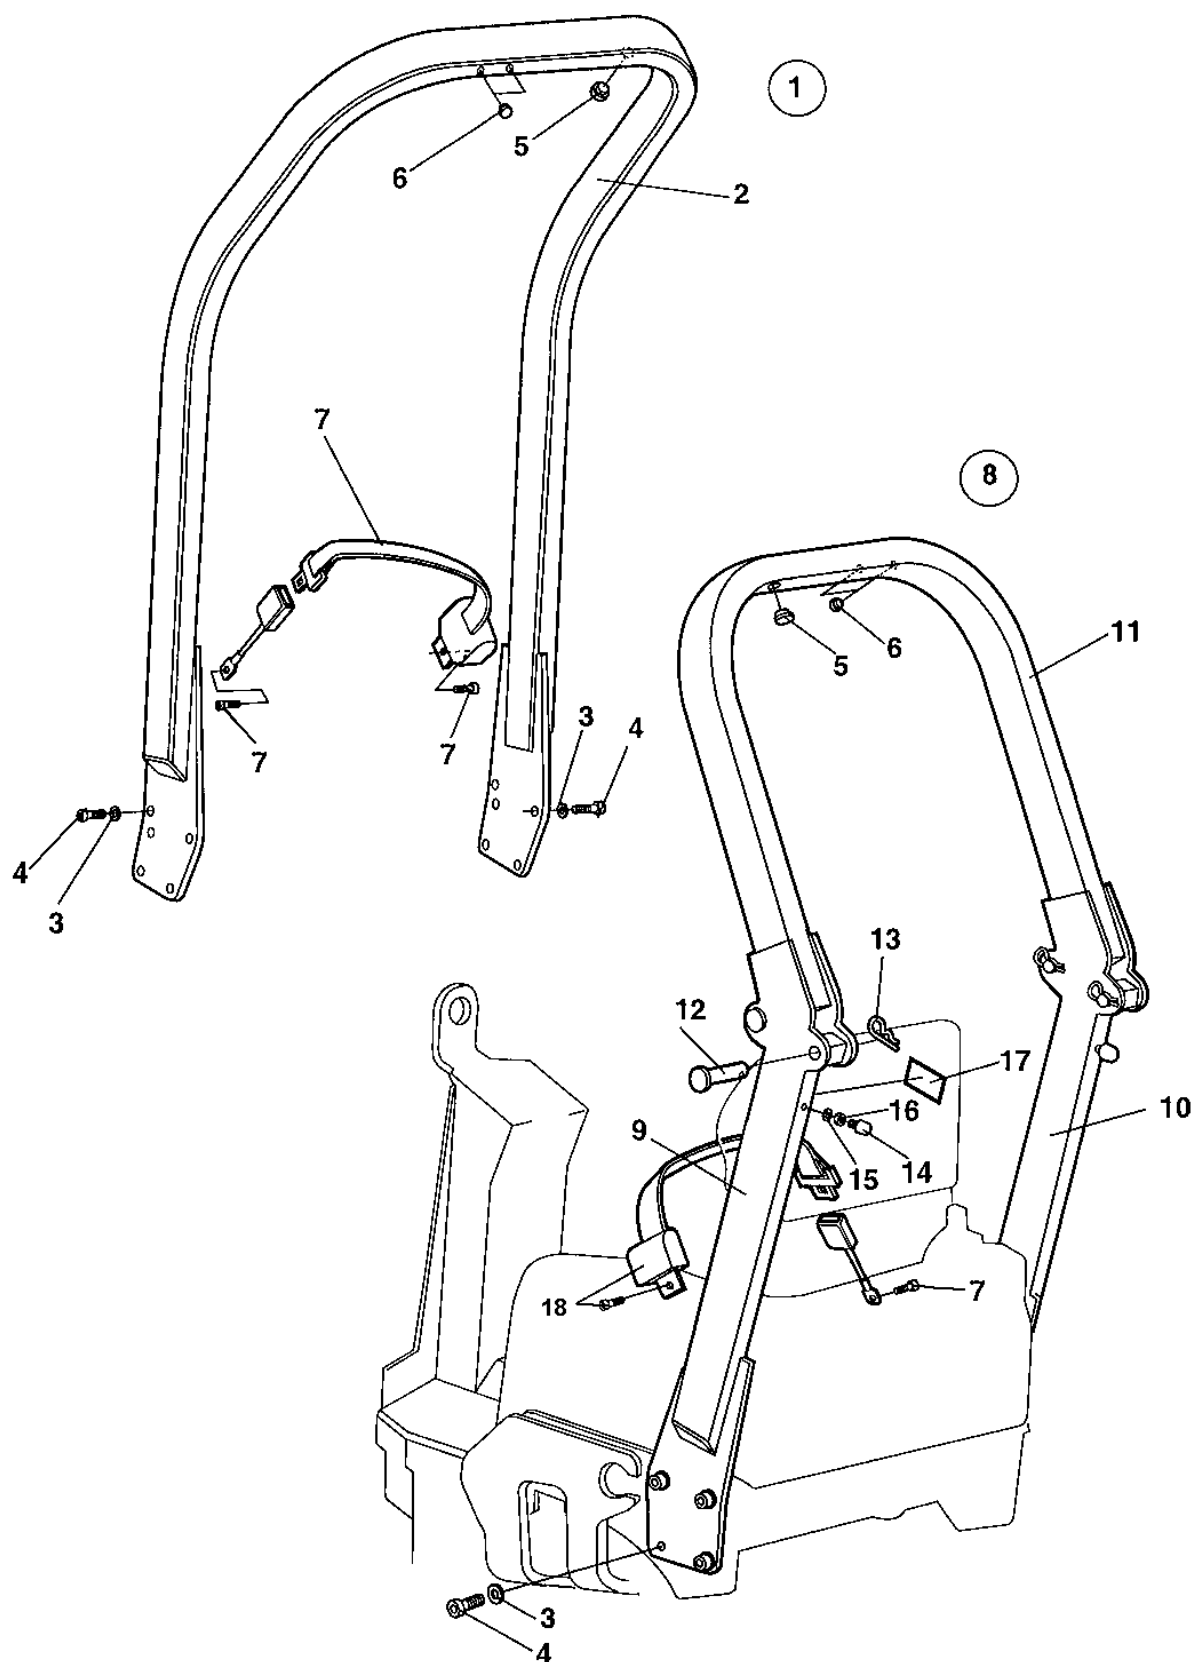

Rops Option

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Rops, cpl	
2	387142		1	Rops	
3	904231		8	.Washer	13x24x2
4	508063		8	.Screw	
5	282603		1	.Plastic plug	
6	900986		1	.Plug	
7	372659	A	1	.Seat belt Up to 89X31040	
	377677	A	1	.Seat belt From 89X31041	2"
8			1	Rops foldable, cpl	
9		C,D	1	.Rops beam	
10		C,D	1	.Rops beam	
11		C,D	1	.Rops beam	
12	389798		4	.Threaded spike	
13	635061		4	.Hair clip	D
14	280101		2	.Shock absorber	
15	904229		2	.Washer	
16	573008		2	.Nut	M8
17	908229		1	.Safety decal	
18	372659	A	1	.Seat belt Up to 89X31040	
	377677	A	1	.Seat belt From 89X31041	2"




- A) Hardware supplied
 C) Not sold separately due to safety regulations
 D) Only available as a complete ROPS kit ; please check the machine SN and contact Dynapac for valid PN

Decals and documentation

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Decals and documentation (Page 112)	

Decals and documentation

18180

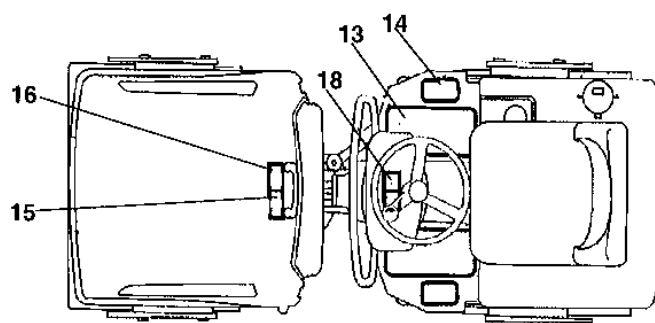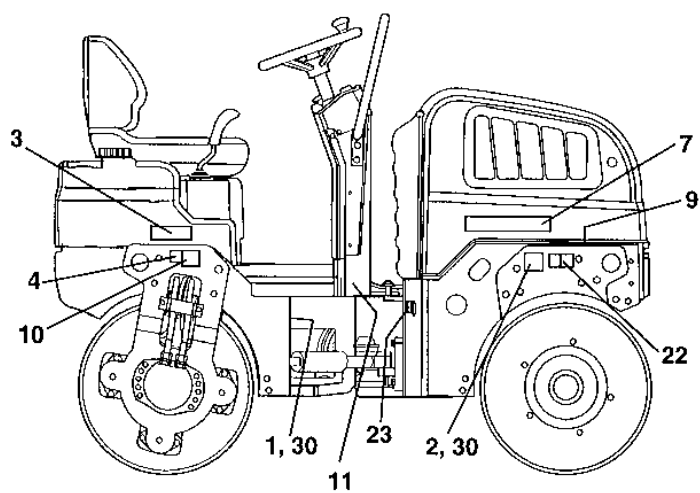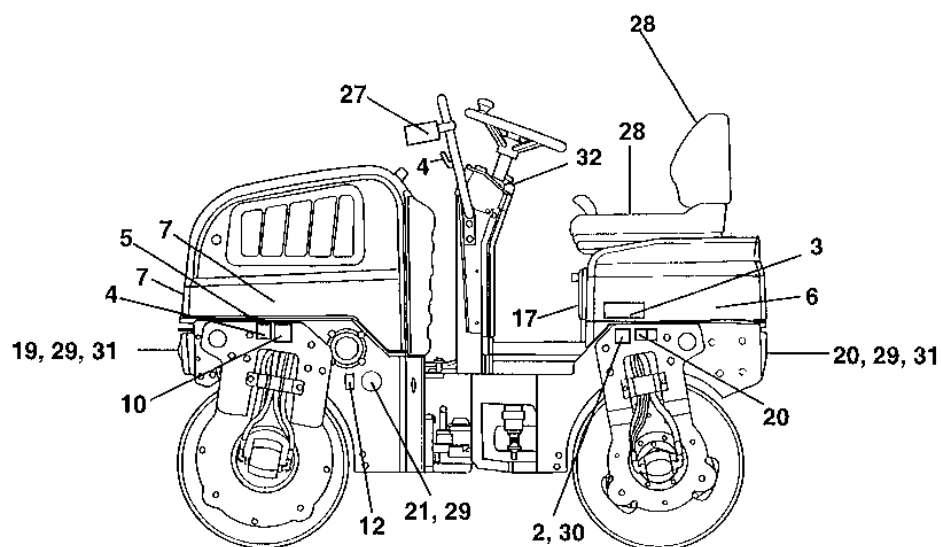


Decals and documentation

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Product identification plate	
2	904870		2	Lifting sign	
3	792155		1	Decal "MODEL CODE"	
4	357587		3	Decal "LIFT POINT"	
5	389919		1	Engine hood decal	
6	389920		1	Decal	
7	904097		3	Decal "DYNAPAC"	L=290 mm
8	904092		1	Decal "DYNAPAC"	L=590 mm
9			1	Product identif. decal "Dynapac"	
10	382751		2	Decal "TIE DOWN POINT"	
11	903422		2	Decal "SAFETY"	
12	991658		1	Decal "FUEL"	
13	373363		2	Slip protection	
14	372123		2	Protection	
15	903423		1	Decal "SAFETY"	
16	903424		1	Decal "HOT SURFACE"	
17	903425		1	Decal "SAFETY MANUAL"	
18	903459		1	Decal "SAFETY"	
19	791957		2	Reflector, white	
20	791956		2	Reflector, red	
21	791958		2	Reflector, light	
22	908229		2	Safety decal	
23	272373		1	Decal "HYDRAULIC OIL"	
27	377066		1	Loading/Unloading instruction	
28	348331		1	Seat cover	D
29	791754		6	Blind rivet	
30	624015		12	Blind rivet	4,0x8,5
31	904228		4	Washer	
32	379012		1	Decal "Start instruction"	

Standard equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
10				Standard equipment (Page 116)	

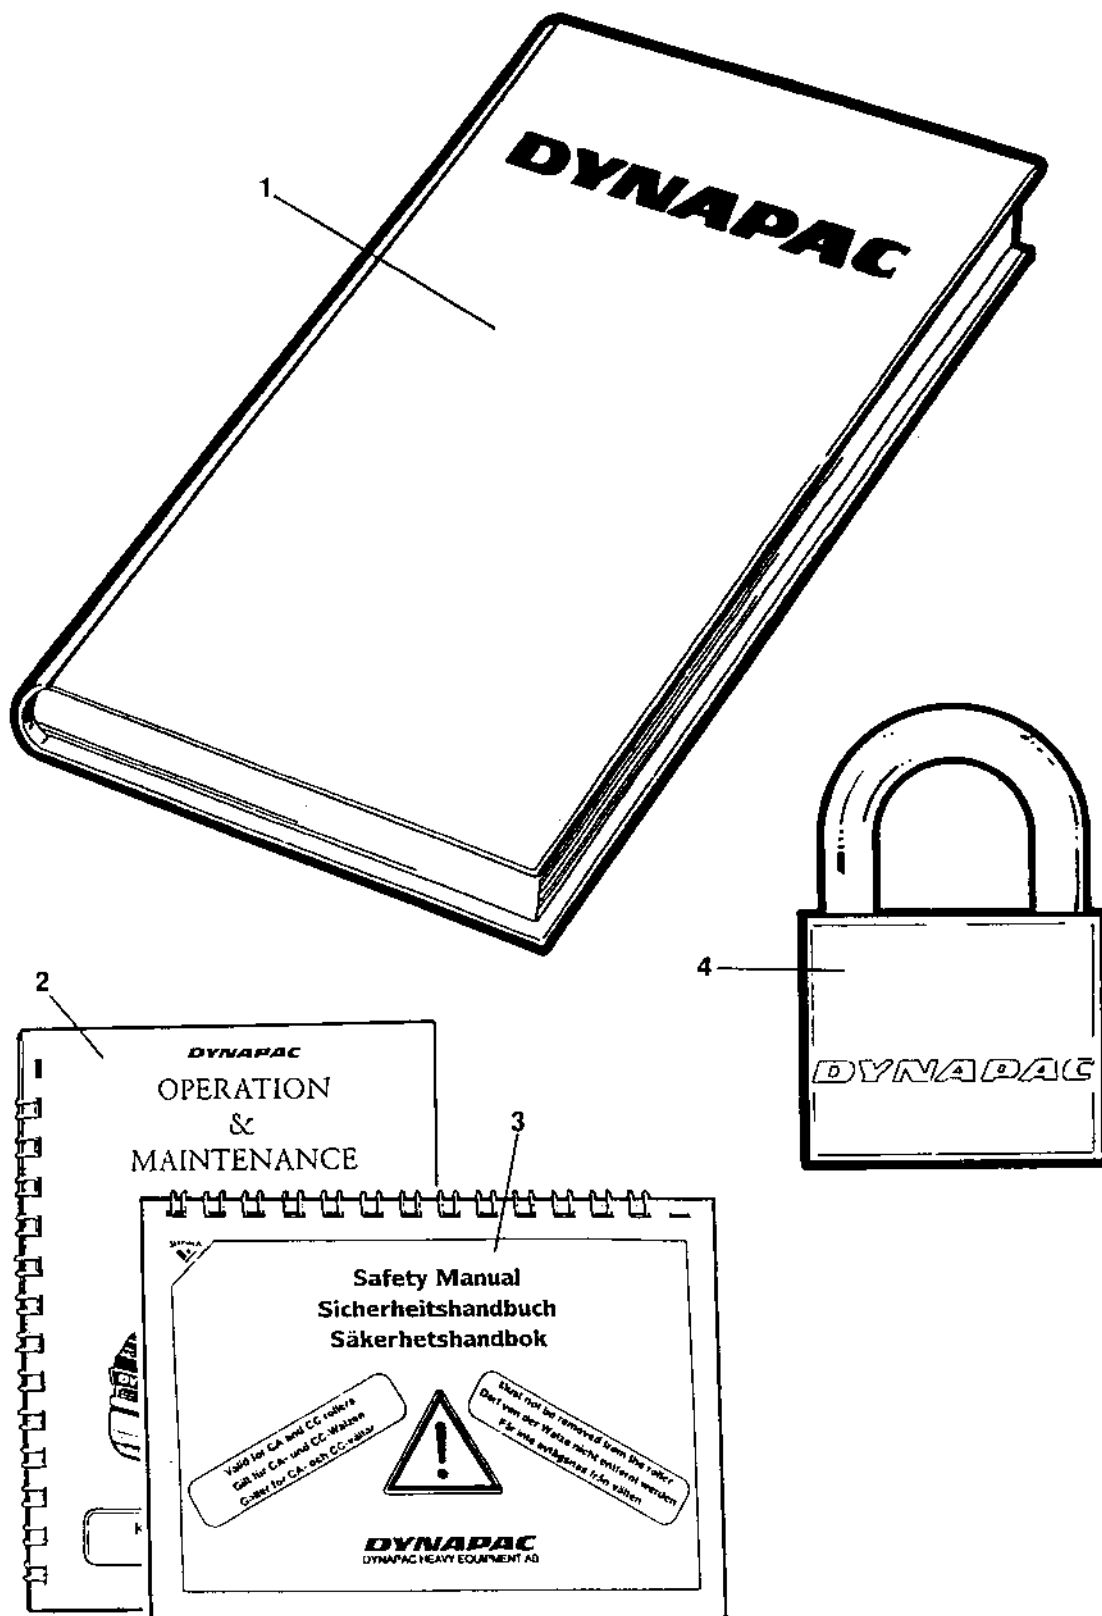


Standard equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Documentation	ISCC900S
			1	.Warranty conditions	
			1	.Warranty registration certificate	
			1	.Spare parts catalogue	SCC900S
			1	.Warranty registration card	
			1	.Instruction manual	Perkins 403C-11
2			1	.Operating / maintenance instruction	ICC900S
3			1	.Safety manual	RSAFE
4	358881		2	Pad lock	

Optional equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1				Battery disconnecter (Page 120)	
20				Watertank, option From 89531041 (Page 122)	
50				Dual forward/reverse control (Page 124)	
60				SMV sign (Page 126)	
63				SMV sign (Page 128)	Mounting on watertank
65				Registrations - plate with light (Page 130)	
70				Hydraulic vibration, shut off front/rear drum (Page 132)	
80				Rear view mirror (Page 134)	
90				Tool equipment (Page 136)	

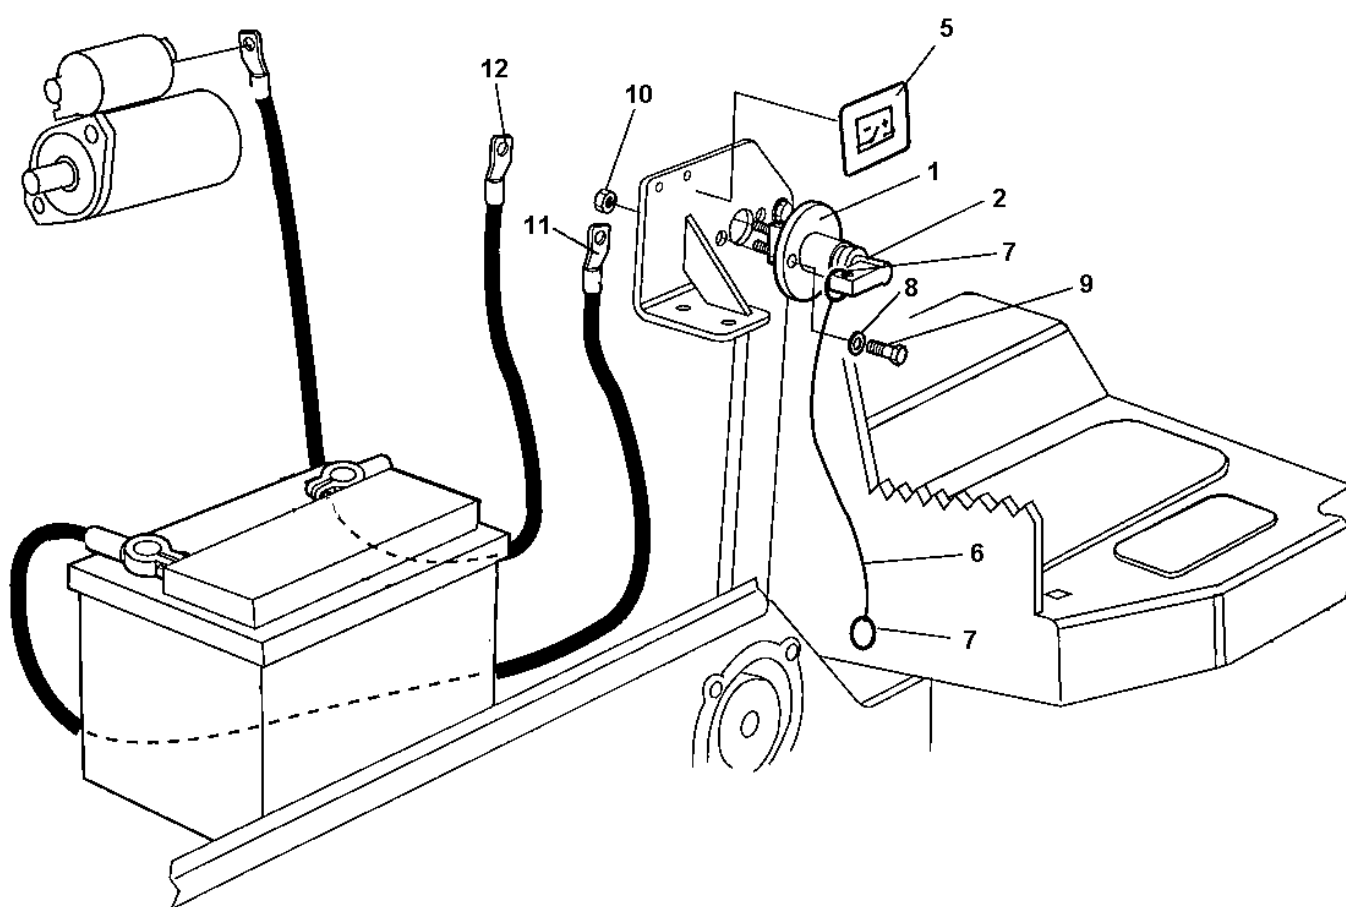


Battery disconnecter

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	357567		1	Battery switch, cpl	D
2	902560		1	.Handle	D
5	904835		2	Decal "BATTERY POWER"	
6	377253		1	Wire	
7	358254		2	Key-ring	
8		B	1	Washer	
9		B	1	Screw	
10		B	1	Nut	
11		C	1	Battery cable	
12		D	1	Cable	
B)	Use existing				
C)	Cable from positive pole of the battery.				
D)	Cable from starter motor.				

Watertank, option

18309

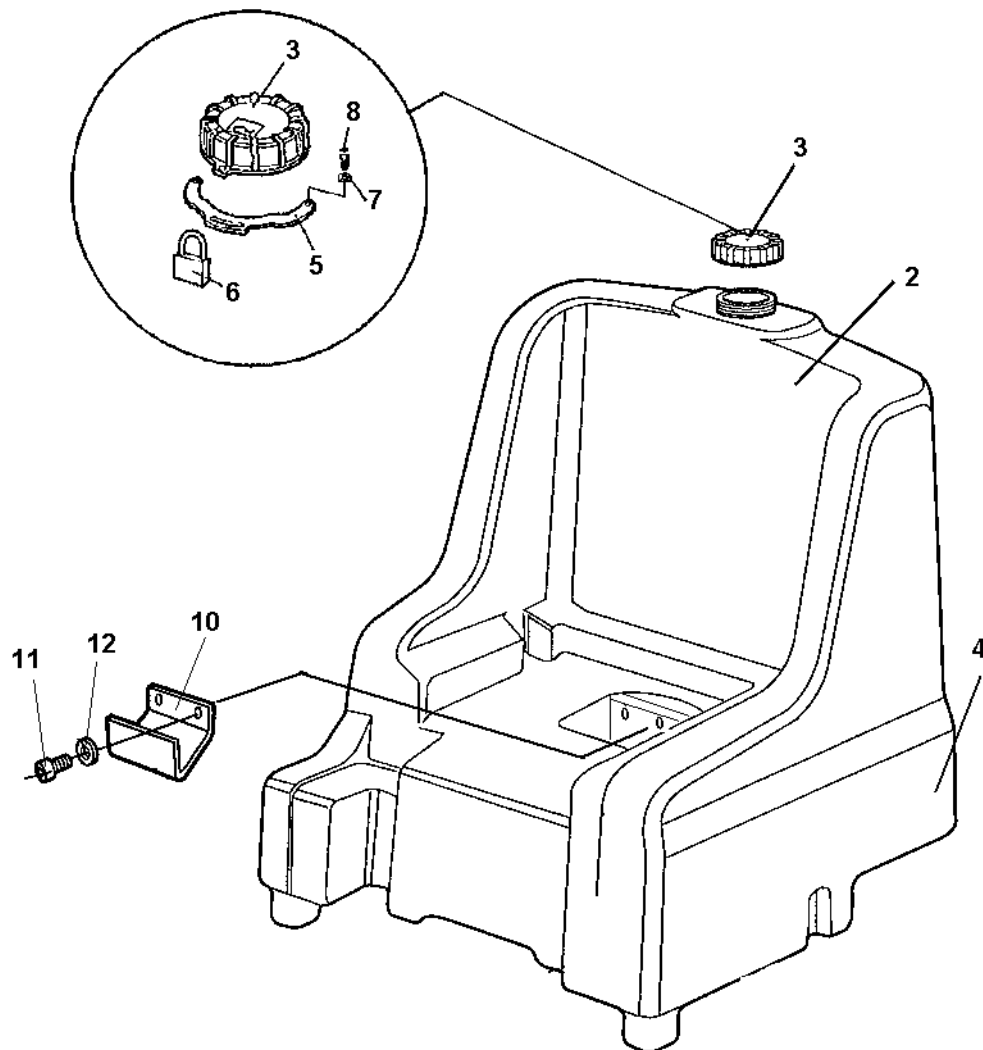


Watertank, option

Ref. No.	Part No.	Rem.	Qty	Description	Code
1				Watertank, cpl	
2	388017		1	.Watertank	
3	388087		1	.Tank cap	
4	377343			Decal	
5	389155	A	1	Lock bracket	
6	358881	A	1	Pad lock	
7	904281	A	2	Washer	5,3x10x1
8	903658	A	2	Screw	M5x10
10	387935		1	Bracket	
11	500029		2	Screw	M10-1,5x30 8.8
12	904557		2	Washer	10,5x22x4

A) Option,


Dual forward/reverse control

18068-1

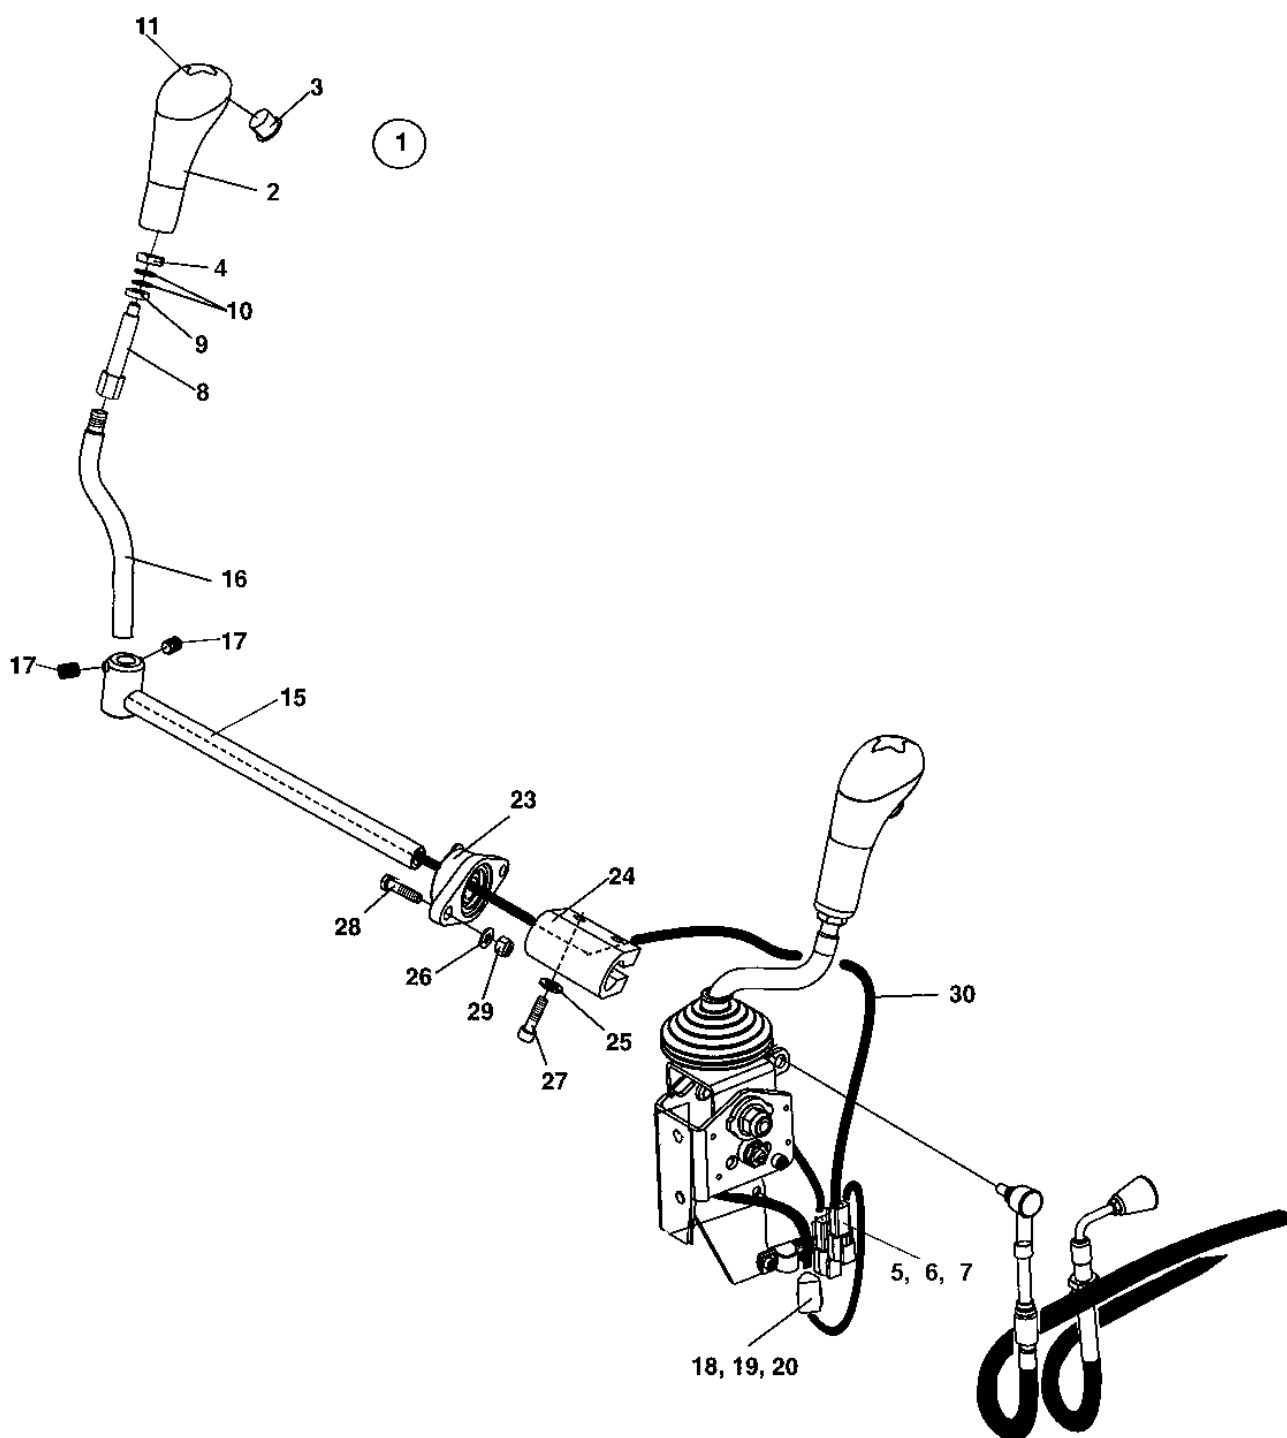

Dual forward/reverse control

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	940374		1	Handle kit, cpl	
2			1	.Handle	
	945729		1	..Push-button switch	
			1	.Service information	
			1	.Lock fluid	
3	377018		1	.Protection plug	
4			1	.Nut	
5			1	.Connector, receptable	
6			1	.Lock wedge	
7			2	.Pin	
8			1	.Rod	
9			1	.Washer	
10			2	.Washer	
11	378759		1	.Handle top	
15	377053		1	Control shaft	
16	377055		1	Lever	
17	377056		2	Socket set screw	
18	791668		1	Connector plug	
19	791669		1	Lock wedge	
20	903948		2	Socket	
23	791926		1	Y-bearing unit	
24	346420		1	Coupling	
25	904229		2	Washer	
26	904230		4	Washer	10,5X22X2
27	508048		2	Screw	M08x030H 8.8
28	500031		2	Screw	M10-1,5x40 8,8
29	586018		2	Lock nut	M10
30			1	Cable	

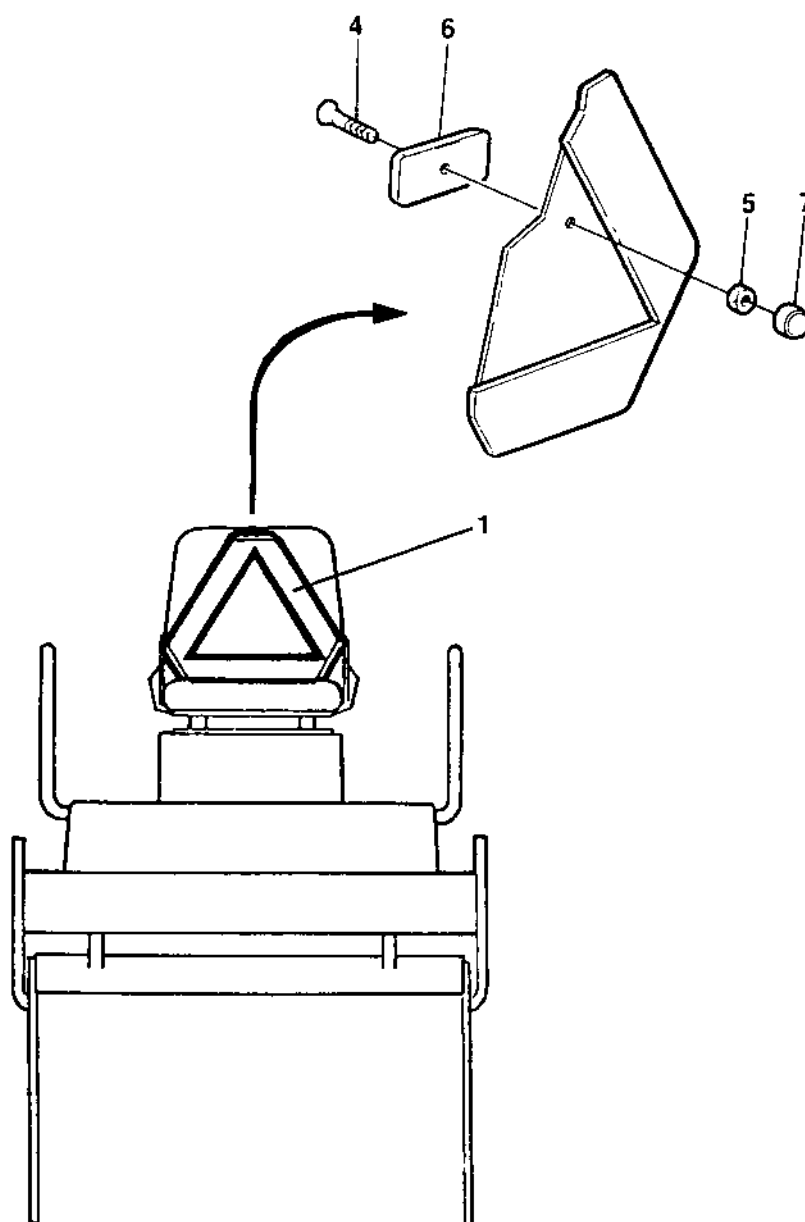


SMV sign

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	476019		1	SMV sign	D
4	513013	A	2	Screw	
5	570005	A	2	Nut	M8
6	374460	A	2	Spacer	
7	904203	A	2	Nut protection	

A) On seats with armrests use existing

SMV sign Mounting on watertank

18382

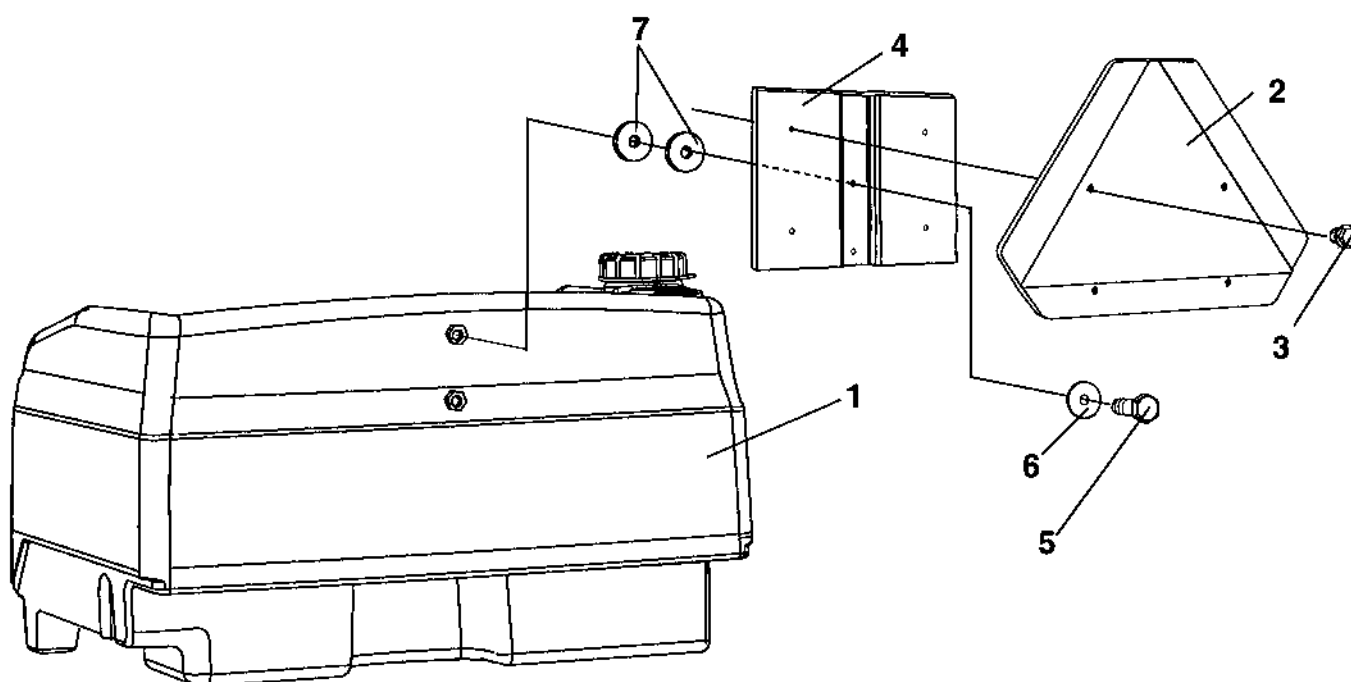


SMV sign Mounting on watertank

Ref. No.	Part No.	Rem.	Qty	Description	Code
1			1	Watertank	
2	476019		1	SMV sign	D
3	903782		4	Screw	M5x12
4	391920		1	Holder	
5	500006		2	Screw	M5x16
6	927974		2	Washer	5x19x1
7	904735		4	Washer	

Registrations - plate with light

18067

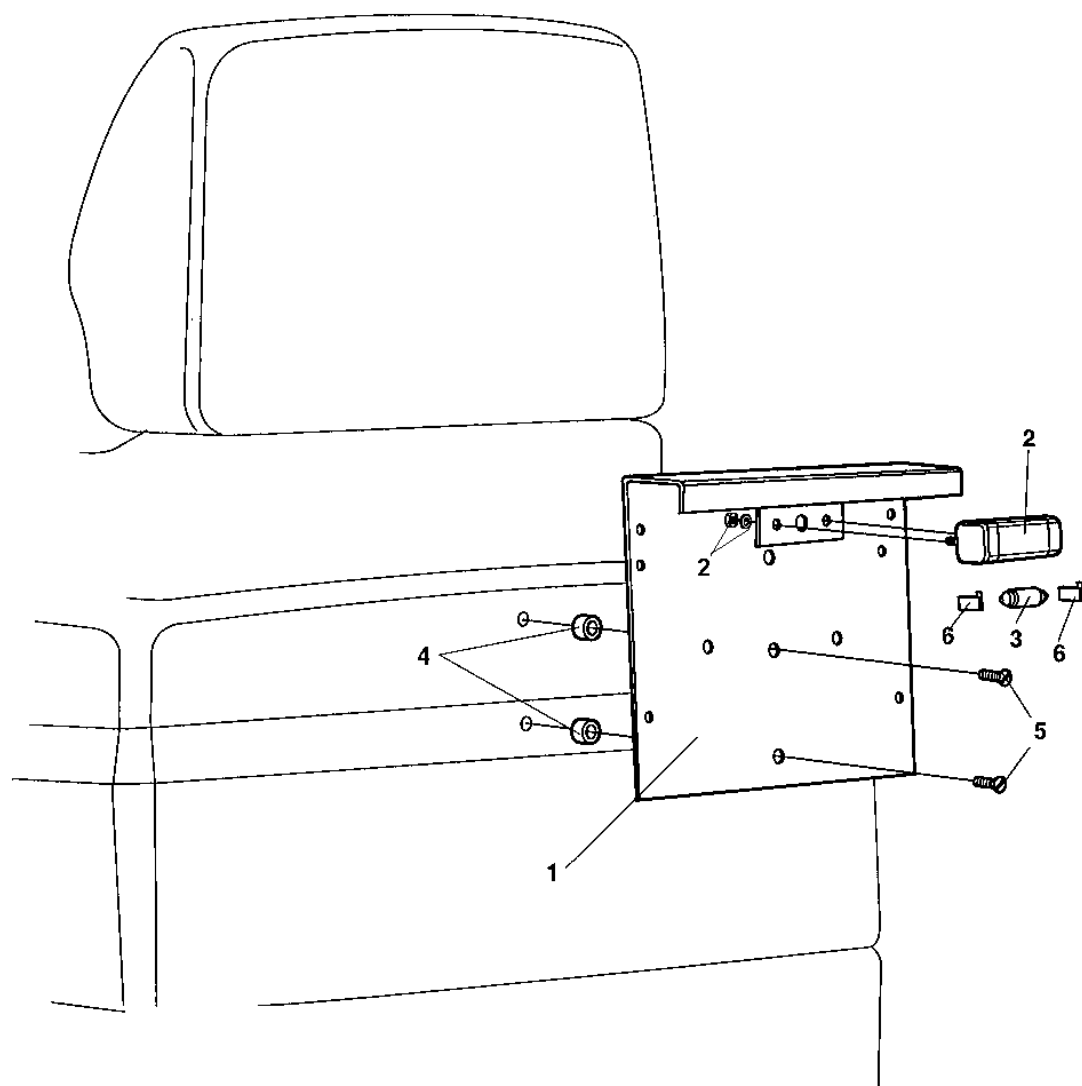


Registrations - plate with light

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355797		1	Licence plate holder	
2	929455		1	Licence plate light	
			2	.Washer	
			2	.Nut	
3	985013		1	Bulb	12V,5W B
4	371728		2	Spacer sleeve	
5	535008		2	Screw	M5x20
6	792035		2	Push-on terminal	

Hydraulic vibration, shut off front/rear drum

18062

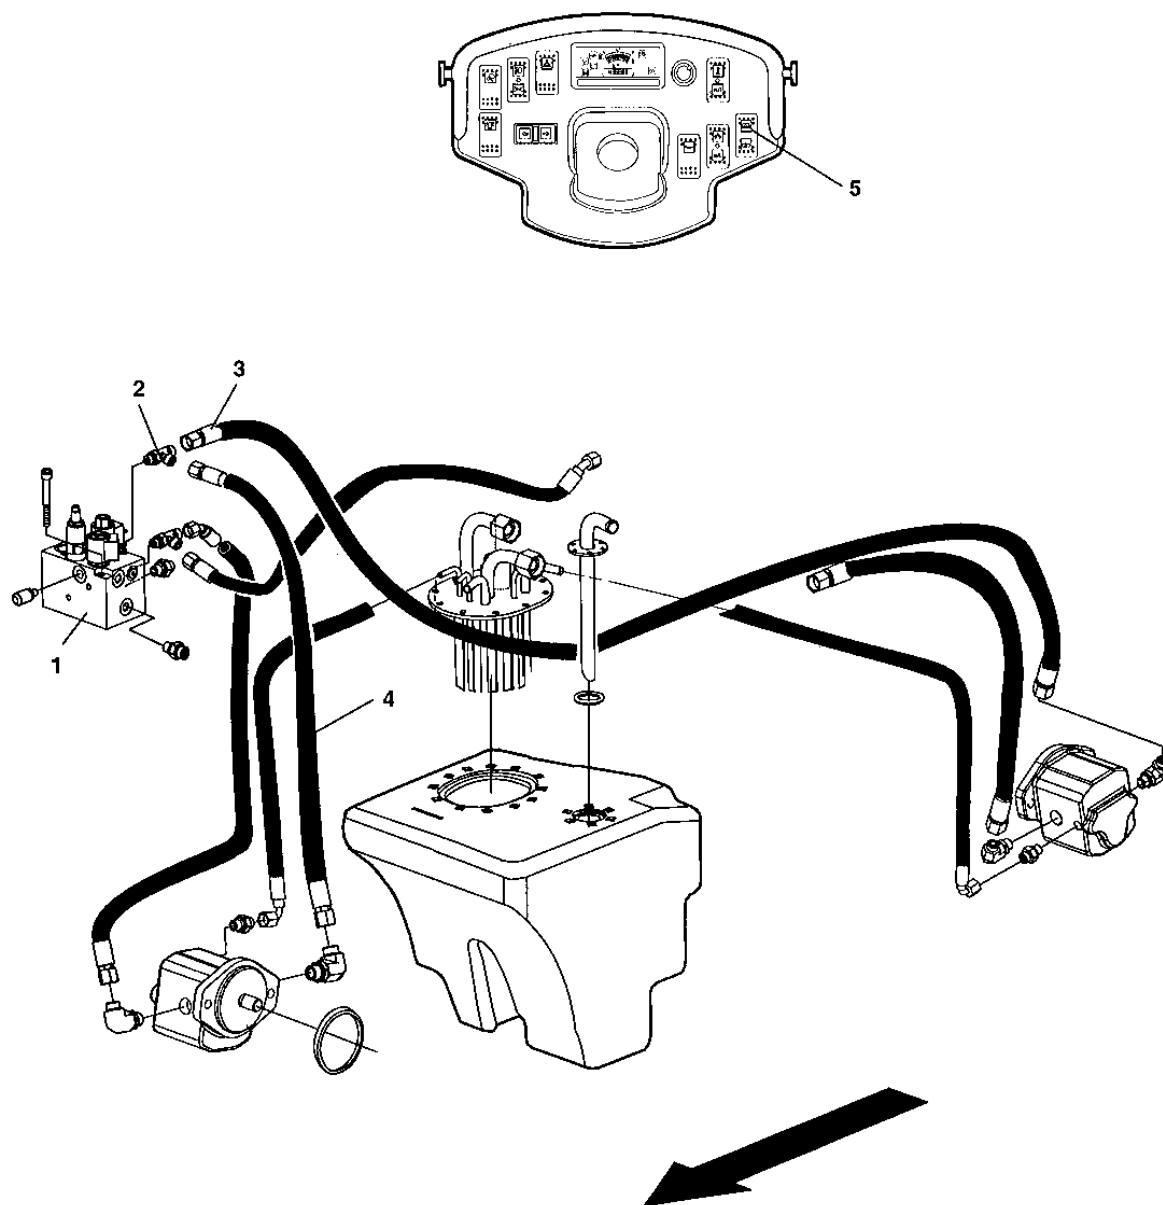


Hydraulic vibration, shut off front/rear drum

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	387276		1	Combination valve	
2	791700		1	Tee-connector	
3	483668		1	Hydraulic hose	
4	483664		1	Hydraulic hose	
5	791581		1	Switch	

Rear view mirror

18061

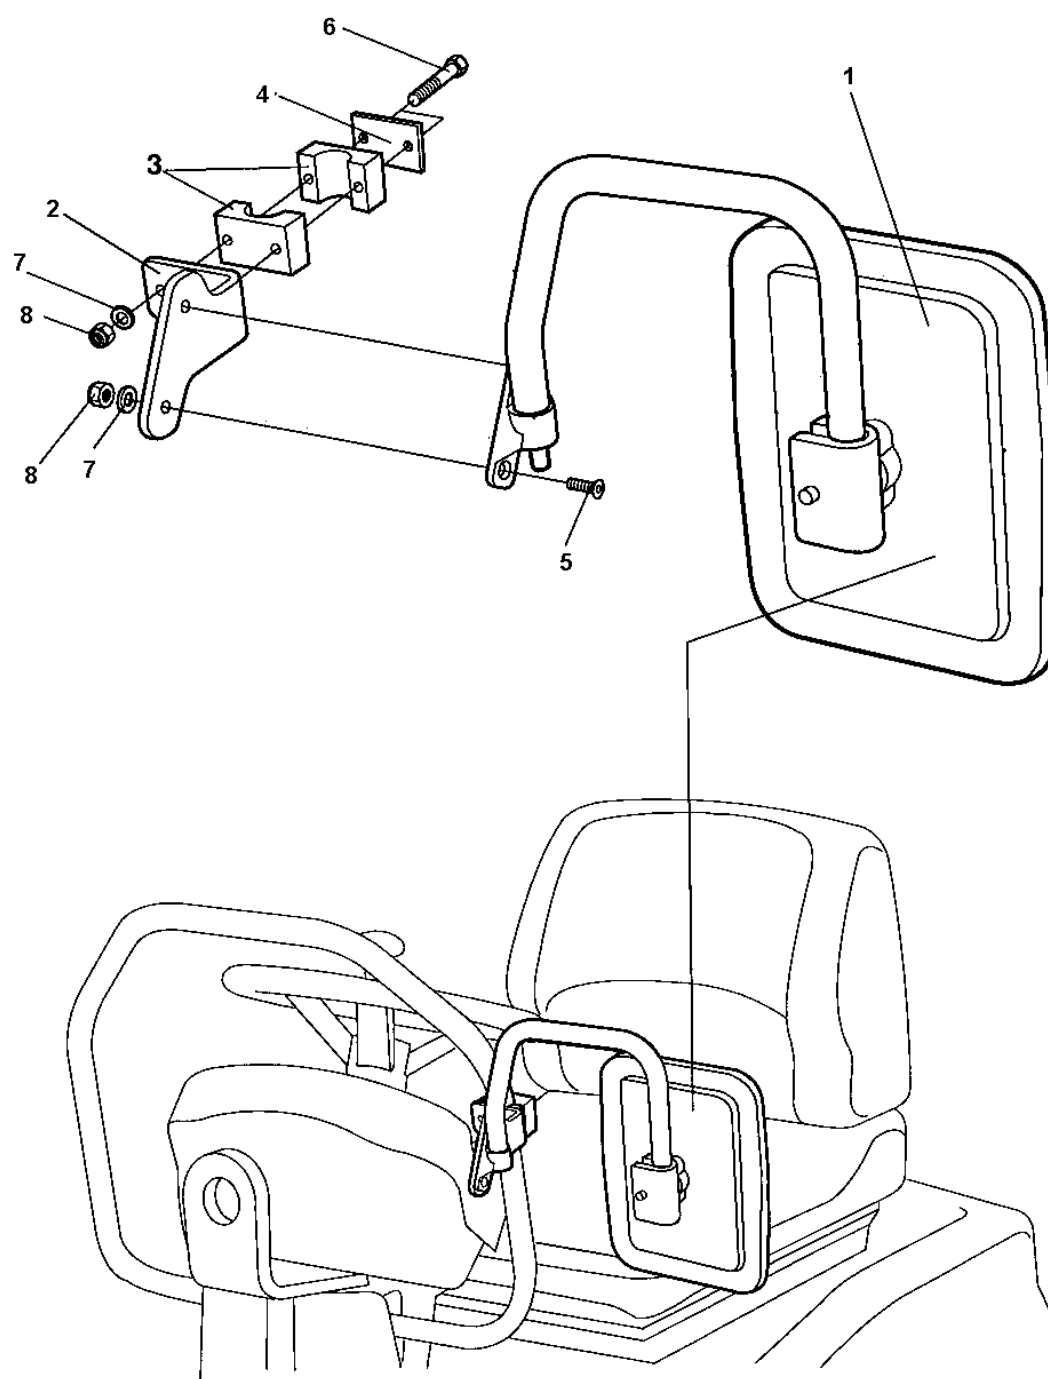


Rear view mirror

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	355705		1	Rear mirror	D
2	357939		1	Holder plate	
3	902496		1	Clamp	
4	923859		1	Cover plate	
5	902845		2	Screw	
6	500016		2	Screw	M6-1,0x55 8,8
7	904228		4	Washer	
8	586002		4	Lock nut	M6

Tool equipment

18060

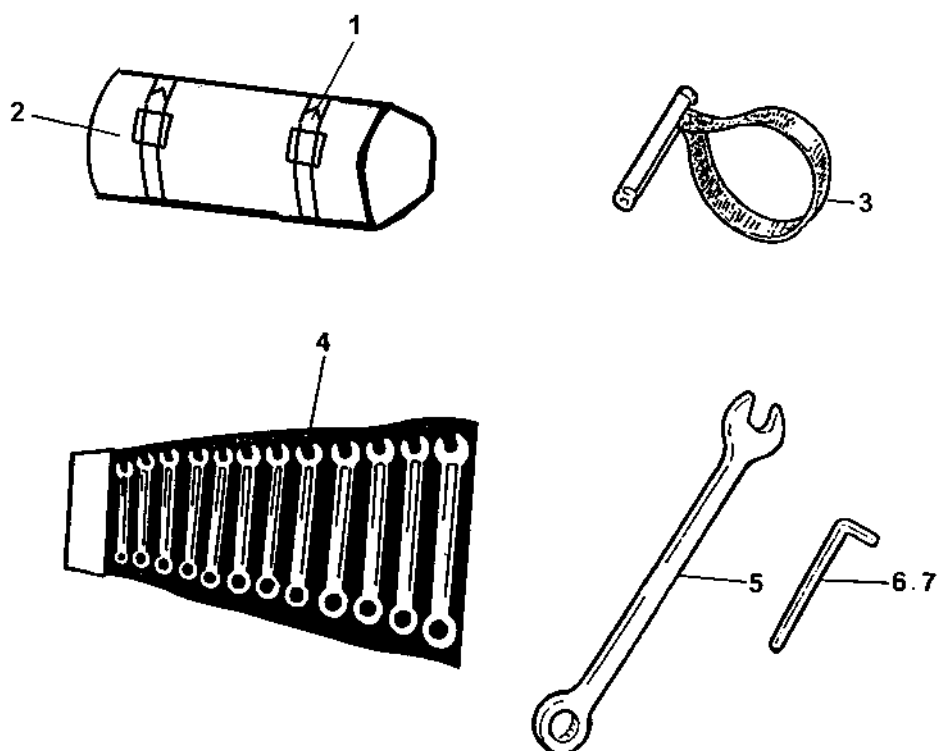

Tool equipment

Ref. No.	Part No.	Rem.	Qty	Description	Code
1	792061		2	Strap	
2	277992		1	Tool bag	
3	902610		1	Belt pliers	
4	901212	A	1	Open end spanner	
5	485177		1	Wrench	6"
6	485034		1	Allen wrench	4 mm
7	792060		1	Allen wrench	3 mm
A)	Kit				

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
111018	33,55	374460	127	379009	49
160032	53	376554	9,11,13,59	379012	113
160058	29,41	376555	9,11,13,65	379458	53
160101	75	376636	79	379636	99,101
160111	35,53	376637	9,13,79	379656	45
160132	31,33,55	376770	59	379668	77
162017	53,55	376771	59	382751	113
162024	53	376772	59	383697	49
202042	85	376783	23,55	383705	97,99,101
205067	75	376861	79	385599	85
238158	85	376873	49	386241	55
272373	113	376874	49	386619	55
277992	137	376875	49	386620	55
280101	109	376876	49	386624	55
282603	109	377008	105	386628	55
283711	75	377009	105,107	386893	61
287713	49	377010	105,107	386948	59
288129	67	377011	105,107	386949	59
297018	47	377012	105,107	386951	67
313001	61,71	377013	105	386963	61
313002	49	377014	105,107	387039	43,45
313008	75	377015	105,107	387043	43,45
313010	67	377016	105,107	387056	39
313023	65	377017	105	387097	63
313035	61,75	377018	105,107,125	387099	61
313102	79	377019	103	387100	61
313108	61,65,71,75	377020	103	387101	61
343490	55	377021	103	387118	67
343744	53,55	377022	105	387142	109
343801	53,55	377023	105	387148	47
346420	125	377024	103	387151	47
348331	99,101,113	377042	47	387154	47
349202	55	377043	47	387200	67
349332	39	377044	47	387201	63
350029	55	377053	125	387205	61
355704	83	377055	125	387226	97,99,101
355705	135	377056	125	387227	97,99,101
355797	131	377058	83	387229	103
355869	79	377061	47	387236	97,99,101
357002	59	377063	83	387269	71
357138	11,13,75	377066	113	387271	75
357139	75	377139	85	387272	75
357567	121	377140	87	387274	79
357587	113	377253	121	387275	79
357643	97,99,101	377255	97	387276	75,133
357855	97,99,101	377343	123	387277	79
357939	135	377556	99,101	387278	75
358232	97,99,101	377610	39	387279	65
358254	121	377611	49	387284	83
358666	55	377621	39,41	387287	61
358689	55	377677	109	387297	103
358881	49,117,123	377745	43,45	387298	103
359043	45	377746	43,45	387344	43,45
359434	75	377806	39	387345	43,45
359606	77	377817	43,45	387346	27,43,45
371728	131	378024	71	387376	39
371785	61	378025	71	387377	87,89
372123	113	378145	19,53	387378	87
372570	97	378178	45	387424	39
372659	109	378710	85	387425	39
372964	79	378759	105,107,125	387428	61
373363	113	378932	85	387453	97,99,101

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
387545	97,99,101	389218	49	483855	75
387552	65	389400	71	483878	75
387582	39	389401	75	483879	71
387583	55	389409	71	485034	137
387676	71	389410	71	485177	137
387677	71	389455	53	500006	83,129
387678	71	389456	53	500007	97,99,101
387682	65	389457	53	500012	53,55
387683	85	389459	39	500013	67,103
387685	97,99,101	389462	53,55	500016	135
387695	65	389556	71	500018	97,99,101
387704	75	389561	91	500019	71
387713	75	389577	91	500021	61,63,83,91
387720	97,99,101	389602	39	500022	53,55,59,71
387758	75	389763	91	500024	43,45,83
387766	97,99,101	389798	109	500029	49,55,59,65,123
387779	39	389919	113	500030	97,99,101
387886	39	389920	113	500031	79,125
387890	71	390175	53	500033	59
387914	71	390176	53,73	500037	71
387915	71	390316	75	500040	61
387935	49,123	390554	53	500047	59
387947	47	390586	99,101	500048	79
387948	47	390854	53	500050	29,41
387949	39,47	391379	107	500053	39,47,59,67,71
387956	47	391380	107		75,79,83
388008	85	391381	107	500067	43,45
388009	83,93	391382	107	500068	47,65,71
388017	123	391383	107	500075	85
388087	49,123	391386	107	500090	49,65
388153	39	391784	101	500105	43,45
388171	29,41	391920	129	500122	39
388172	29,41	391984	25,55	500161	59
388173	29,41	392011	49	500175	39,53
388382	87	392508	49	500176	39
388447	97,99,101	392509	49	500180	91
388476	103	393956	85	500192	77
388636	87	394242	21,53	500195	53
388653	75	394253	65	500208	39
388721	83	394301	101	500212	55
388725	53	395227	61	500241	45
388733	47	416034	103	500269	39
388737	85	476019	127,129	500280	55
388772	91	483649	75	500292	49
388773	91	483651	75	500505	97,99,101
388846	47	483652	71	500506	59
388850	39	483653	79	500509	97,99,101
388852	47	483654	71,79	502019	59
388960	71	483655	79	508002	75
388975	53	483656	79	508004	49
389003	59	483657	79	508012	75
389005	67	483661	71	508014	53
389017	71	483662	79	508019	59
389019	67	483664	133	508022	47
389036	67	483665	71	508025	75
389132	53	483668	75,133	508029	53,55,59,75,77
389134	53	483684	59	508032	53,55
389136	53	483689	71	508041	83
389142	61	483696	79	508048	59,125
389155	49,123	483852	71	508063	109
389196	75	483853	71	508068	105,107
389213	53	483854	75	508092	67,75,83,97,103

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
508094	75	791581	85,133	792070	75
513013	127	791582	85	792072	43,45
513017	97,99,101	791583	87	792083	85
513027	97	791584	87	792098	93
527002	53,55	791585	91	792134	43,45
530027	39	791586	87	792149	39
535008	131	791587	87,89	792155	113
541702	91,93	791588	85	792170	71
570004	83,85,105,107	791597	47	792188	45
570005	45,59,83,127	791599	71	792189	45
570006	59	791616	97,99,101	792190	45
570007	53	791639	83	792236	97,99,101
573005	87,89	791643	47,87	792250	59
573008	109	791647	85	792286	45
586001	83,103	791668	125	792287	45
586002	47,85,135	791669	125	792320	85
586003	39,43,45,47,65	791699	75	792611	29,41
	83,85,91,99,101	791700	75,133	900329	53
	103	791701	79	900790	87
586018	43,59,97,99,101	791704	87	900986	109
	125	791743	71	901157	71,75
586019	105,107	791744	71	901212	137
586022	39	791745	71	901225	87
624015	113	791746	71	901227	85,87
629101	91	791750	35,53	901228	85,89
635061	39,109	791754	47,65,89,113	901369	89
791060	85	791774	65	901432	49
791185	85	791775	43,45,85	901767	85
791211	85	791778	75	901832	61
791226	97,99,101	791780	61	902123	79
791228	47	791794	75	902166	47,97,99,101
791322	75	791916	87	902227	89
791395	75	791922	53	902286	61
791408	79	791923	35,53	902287	43,45
791409	71	791926	125	902496	135
791410	71,79	791929	53	902560	121
791412	71,75,79	791938	43,45	902610	137
791417	75	791939	43,45	902845	135
791422	65	791941	75	903154	55
791425	31,55	791949	49	903236	65
791426	31,33,55	791950	49	903374	53,55
791433	31,55	791951	87	903422	113
791476	97,99,101	791953	87	903423	113
791483	63,83	791954	87	903424	113
791493	59,61	791955	87	903425	113
791502	83	791956	113	903459	113
791535	59	791957	89,113	903658	49,97,99,101,123
791537	71	791958	113	903714	61
791538	71	791959	49	903741	85
791539	71	791962	29,41	903768	83
791540	79	791970	87,89	903782	85,129
791541	75	791971	87	903810	87
791542	79	791977	49	903856	47
791543	71	791980	91	903886	49
791549	71	791981	91	903945	105,107
791550	83	792019	83	903946	105,107
791559	47	792020	83	903947	105,107
791565	79	792026	59	903948	125
791568	49	792035	131	903956	83,87
791578	85	792059	87	904009	71,79
791579	85	792060	137	904012	47
791580	85	792061	137	904092	113

NUMERICAL INDEX

Part Number	Page	Part Number	Page	Part Number	Page
904097	113	939805	67		
904203	127	939806	67		
904214	39	939807	67		
904228	39,47,53,55,61	939932	13,59		
	67,75,83,85,103	939977	59		
	113,135	940201	65		
904229	43,45,47,49,59	940202	65		
	63,65,67,71,75	940203	65		
	79,83,91,97,99	940208	7,9		
	101,103,109,125	940209	7,11		
904230	45,59,77,79,87	940210	7,13		
	89,97,99,101,125	940212	13		
904231	39,53,55,59,83	940227	59		
	109	940228	59		
904233	39	940229	59		
904281	49,97,99,101,123	940231	59		
904314	87,89	940374	105,107,125		
904556	47,53,61,75,83	940447	59		
	85,97,99,101,103	940451	85		
904557	53,55,59,65,75	940613	71		
	97,99,101,123	940664	17,23		
904563	105,107	940668	17,19		
904567	49	940671	17,27		
904640	39,43,45,49,55	940894	65		
	59,61,63,71	940922	65		
904698	65,83,97	940960	103		
904703	53,55,63,71	940976	59		
904735	49,75,129	945123	59		
904755	103	945284	59		
904835	121	945286	59		
904870	113	945312	75		
904878	49	945340	75		
904889	87	945407	107		
904984	65	945473	59		
904989	87	945526	79		
908229	109,113	945552	17,25		
921039	91	945629	59		
921050	83	945710	17,31		
921104	77	945711	17,33		
923270	47,103	945729	105,107,125		
923734	49	945753	65		
923735	49	945777	65		
923859	135	945850	17,21		
923976	83,97	945878	63		
924544	49	945928	17,29,41		
924986	49	947684	79		
924996	49	947687	53,55		
926537	103	947688	53		
927233	105,107	950150	17,35		
927568	63	960079	87		
927974	129	985013	131		
928381	47	985125	87		
928830	79	991658	113		
928847	53	999027	83		
929191	39				
929455	131				
935613	79				
935614	79				
936283	97				
939802	11,13,67				
939803	11,13,67				
939804	67				

